






# Barber Chair Instruction



**Step 1:** Check all parts you received.

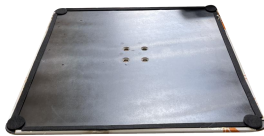Part List			
			
A.1PC	B.2PCS	C.1PC	D.4PCS
			
E.1PC	F.1PC	G.1PC	

**Step2:** Insert threaded bolts on bottom of pump into holes on top of base. Tighten and locking 4 nuts onto threaded bolts.




**Step 3:**Assembled foot bar and hydraulic pump,tighten the set screws to firmly hold the foot bar in place.(pay attention to the direction of foot bar)



**Step 4:**Unscrew 8 screws previously assembled on the part “A”,assemble part “B”(2pcs) onto part “A” by those screws, tighten.,as picture.



**Step 5:** Unscrew 4 screws previously assembled on the part “A”, assemble part “E”(1pc) onto part “A” by those screws, tighten.,as picture.

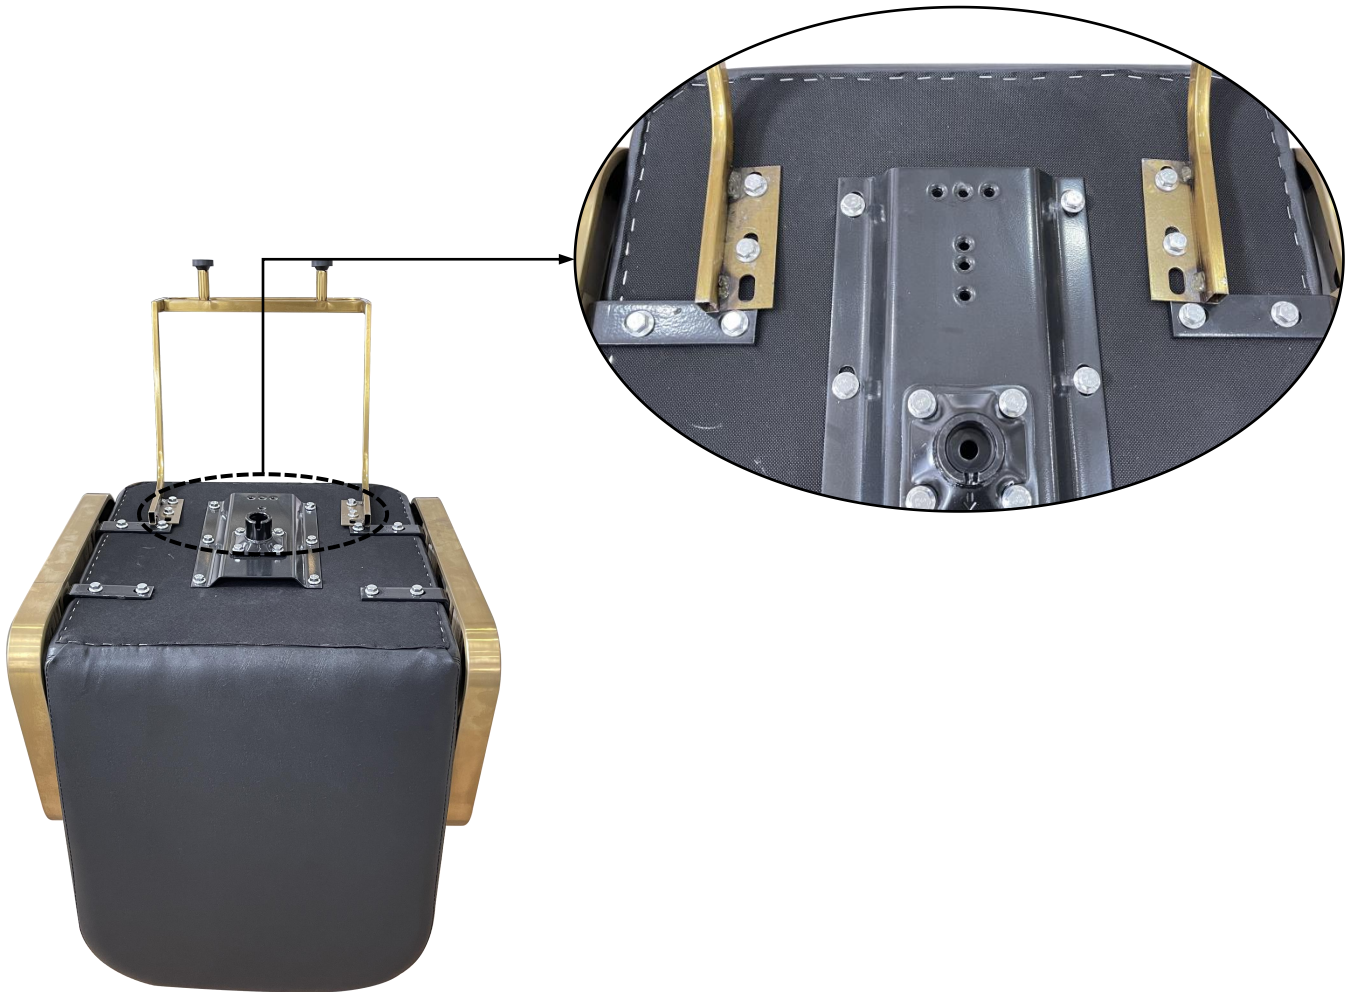

**Step6:** Put the assembled part“A” on the top of Part“G”.



Noted:the tray on the set plate must be aligned with the black pin of hydraulic.