






















N729P195052









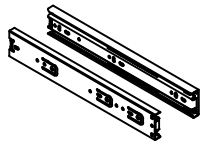







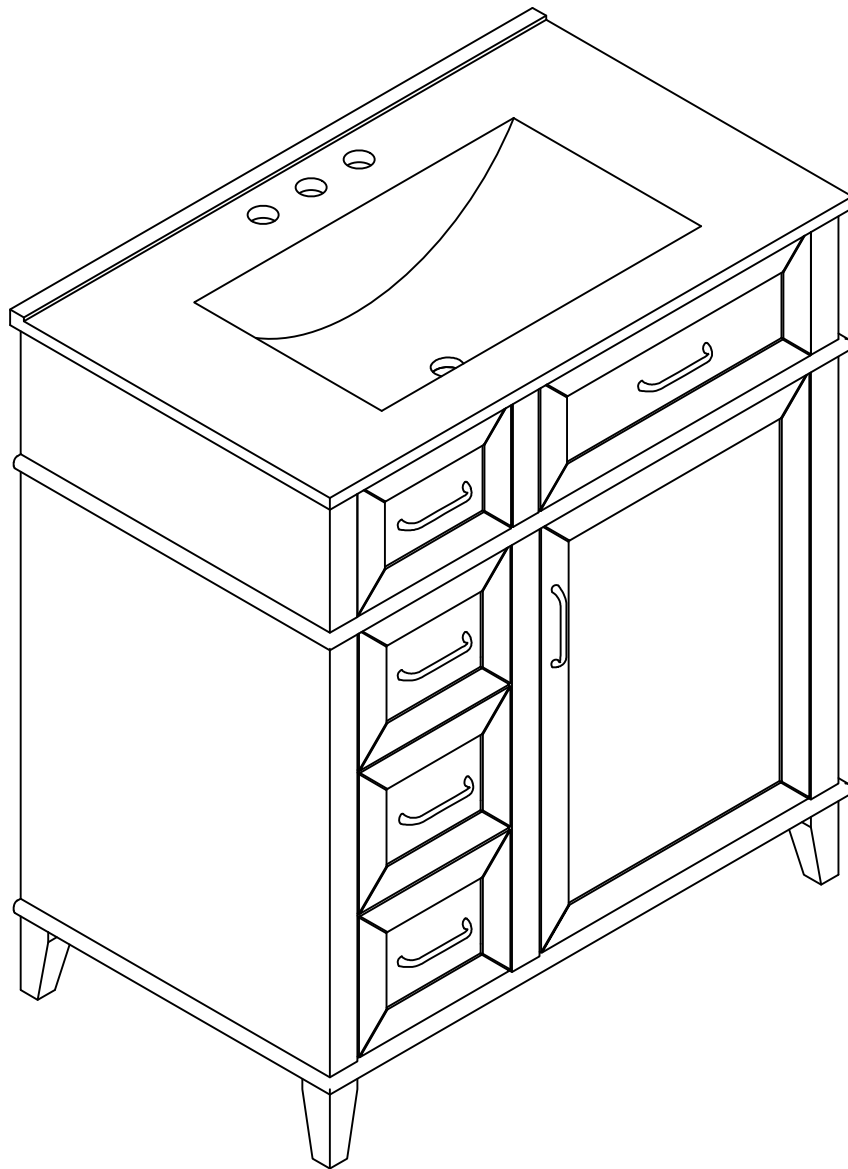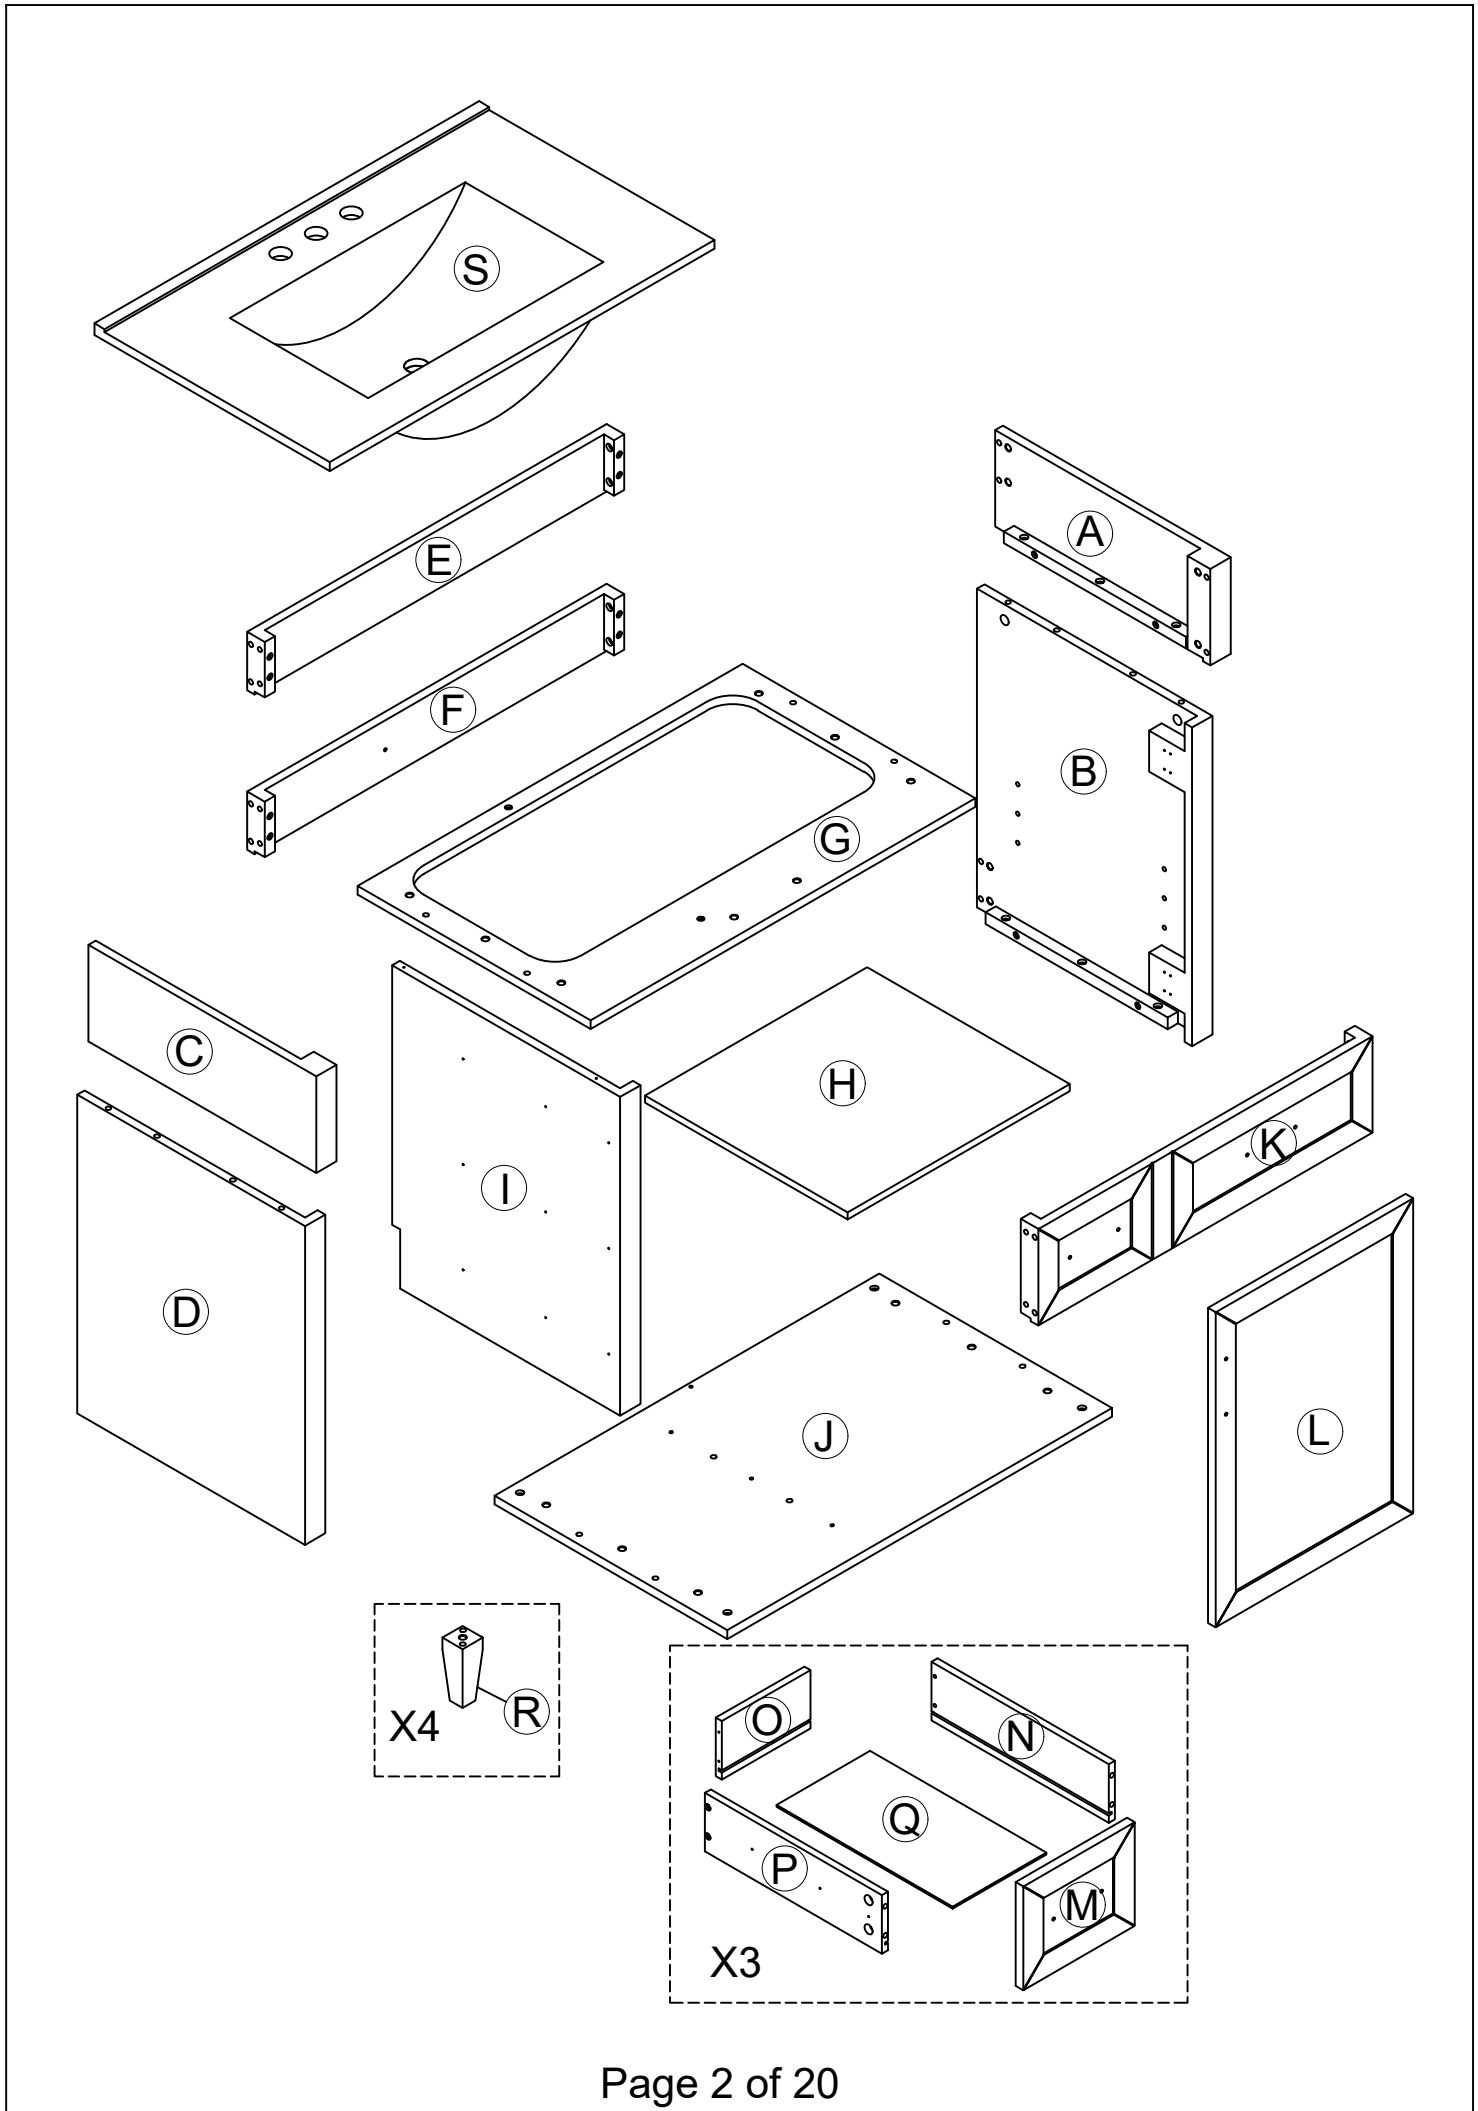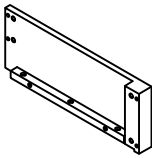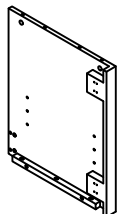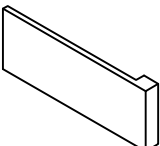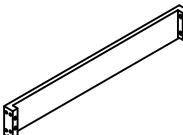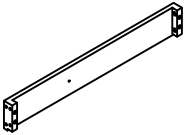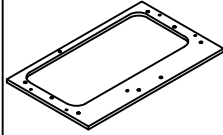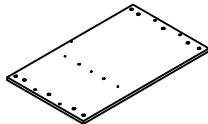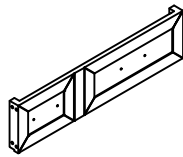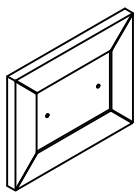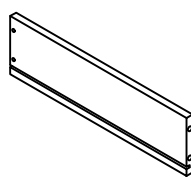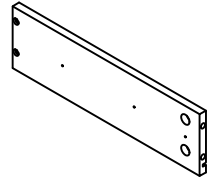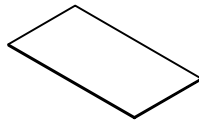


PRODUCT PARTS:


<p style="text-align: center;">A</p> 	<p style="text-align: center;">B</p> 	<p style="text-align: center;">C</p> 	<p style="text-align: center;">D</p> 	<p style="text-align: center;">E</p> 	<p style="text-align: center;">F</p> 
<p style="text-align: center;">1PC</p>	<p style="text-align: center;">1PC</p>	<p style="text-align: center;">1PC</p>	<p style="text-align: center;">1PC</p>	<p style="text-align: center;">1PC</p>	<p style="text-align: center;">1PC</p>
<p style="text-align: center;">G</p>	<p style="text-align: center;">H</p>	<p style="text-align: center;">I</p>	<p style="text-align: center;">J</p>	<p style="text-align: center;">K</p>	<p style="text-align: center;">L</p>
					
<p style="text-align: center;">1PC</p>	<p style="text-align: center;">1PC</p>	<p style="text-align: center;">1PC</p>	<p style="text-align: center;">1PC</p>	<p style="text-align: center;">1PC</p>	<p style="text-align: center;">1PC</p>
<p style="text-align: center;">M</p>	<p style="text-align: center;">N</p>	<p style="text-align: center;">O</p>	<p style="text-align: center;">P</p>	<p style="text-align: center;">Q</p>	<p style="text-align: center;">R</p>
					
<p style="text-align: center;">3PCS</p>	<p style="text-align: center;">3PCS</p>	<p style="text-align: center;">3PCS</p>	<p style="text-align: center;">3PCS</p>	<p style="text-align: center;">3PCS</p>	<p style="text-align: center;">4PCS</p>
<p style="text-align: center;">S</p>					
					
<p style="text-align: center;">1PC</p>					

# HARDWARE:

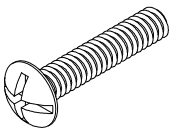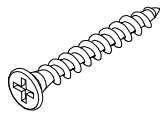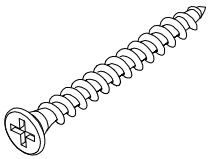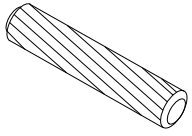
①	②	③	④	⑤	⑥
					
1/4"x25mm	Ø4x25mm	Ø4x35mm	Ø8x30mm		
<b>24+2 PCS</b>	<b>12+1 PCS</b>	<b>7 PCS</b>	<b>34+2 PCS</b>	<b>6 PCS</b>	<b>2 PCS</b>
⑦	⑧	⑨	⑩	⑪	⑫
					
Ø4x12mm		12"x45mm	Ø3x10mm	Ø6x33mm	Ø15x9mm
<b>12+1 PCS</b>	<b>4 PCS</b>	<b>3 SET</b>	<b>36+2 PCS</b>	<b>16+1 PCS</b>	<b>16+1 PCS</b>
⑬	⑭				
					
5/32"x15mm	1/4"x25mm				
<b>12 PCS</b>	<b>6 PCS</b>				


STEP 1

④  8pcs  
Ø8x30mm

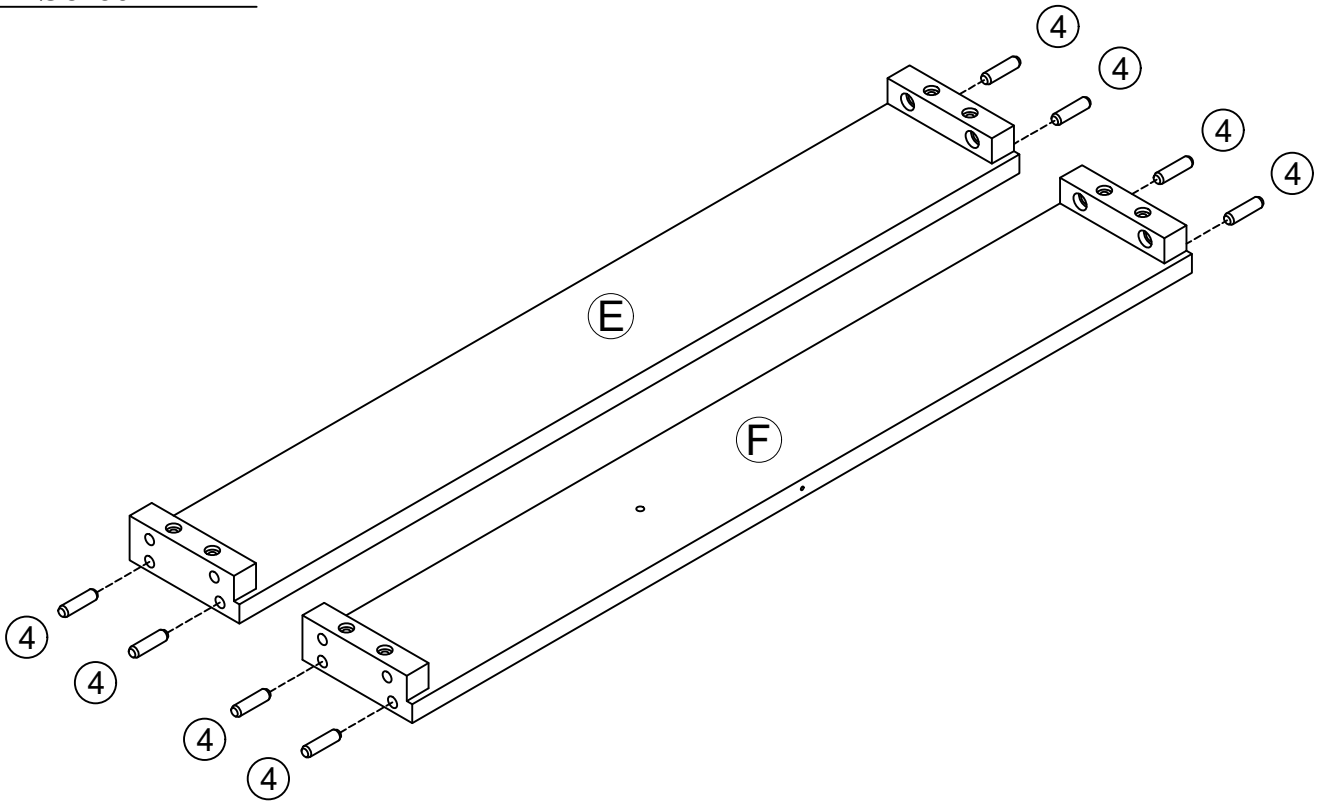



STEP 2

④  4pcs  
Ø8x30mm

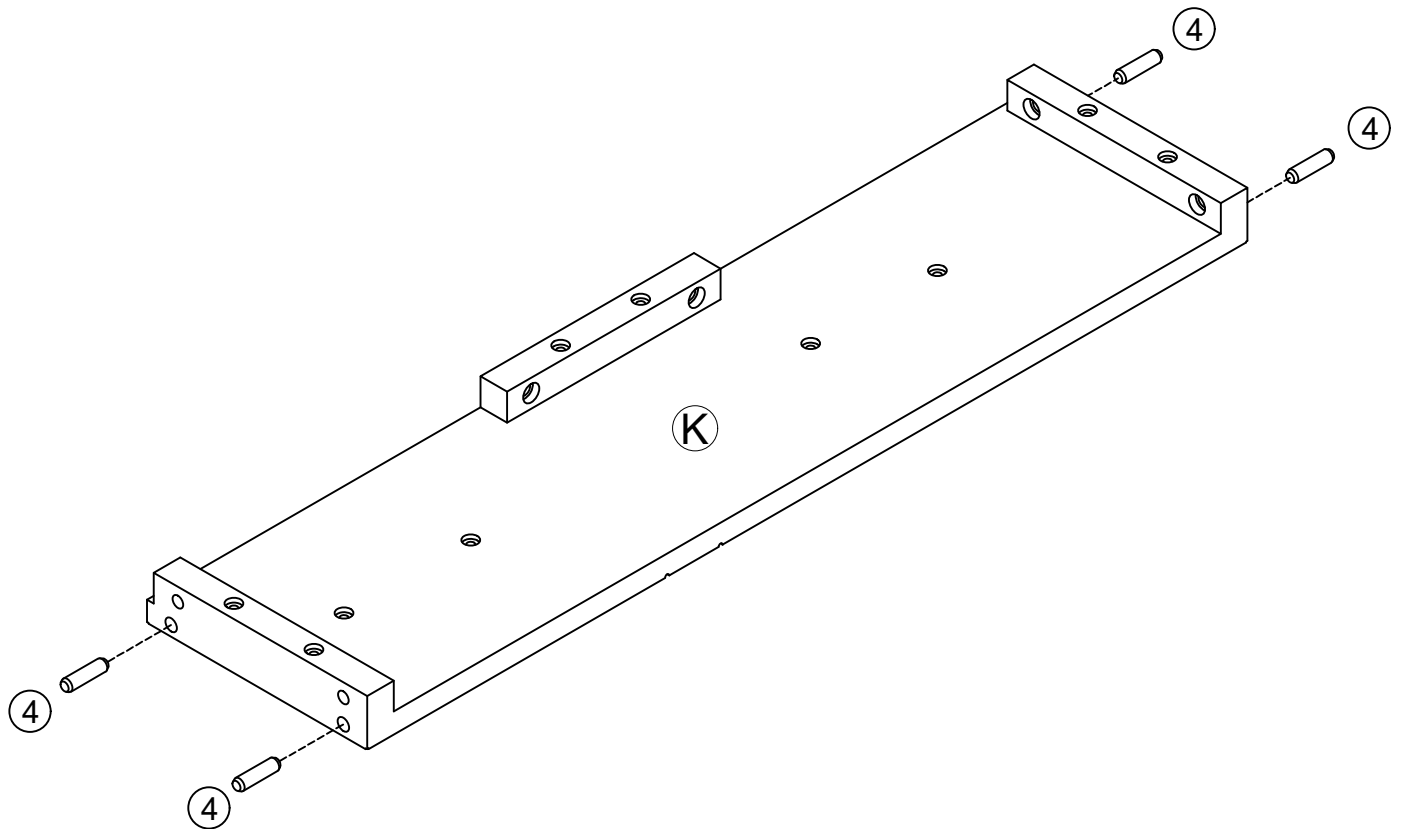


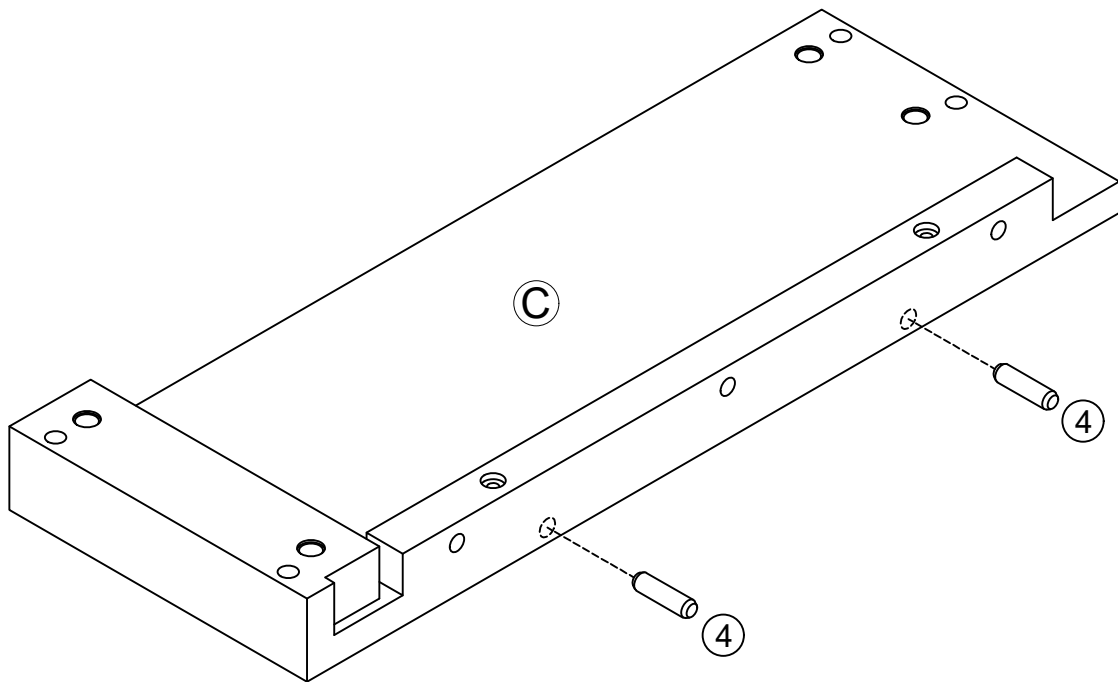
STEP 3

④  2pcs  
Ø8x30mm

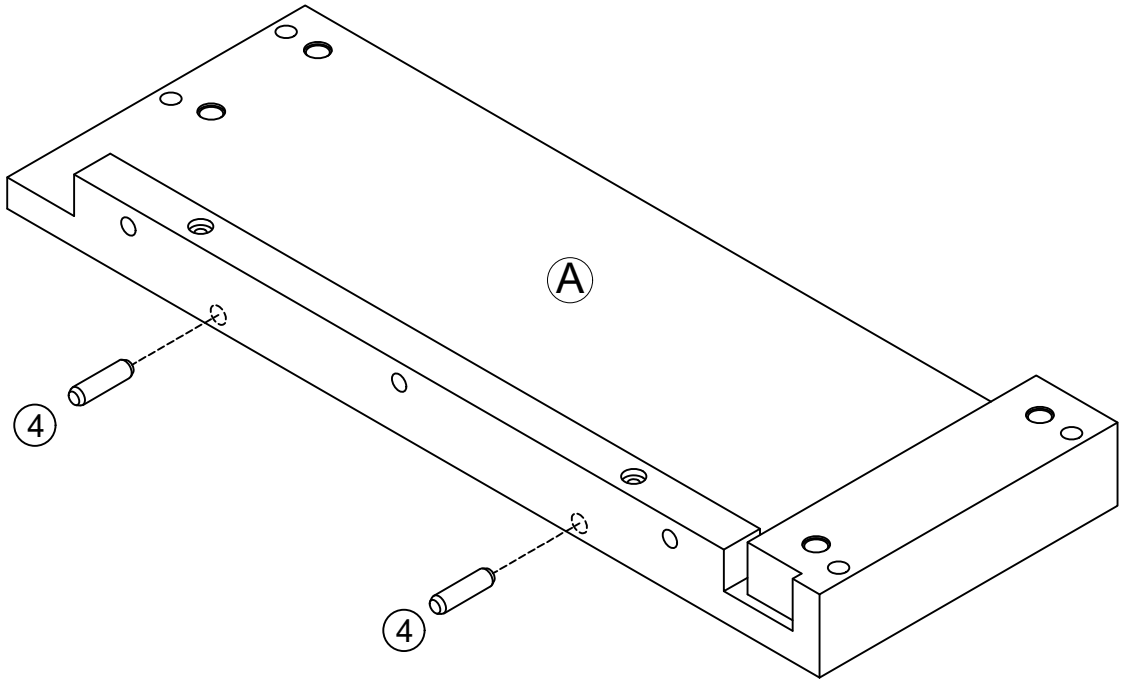



STEP 4

④  2pcs  
Ø8x30mm







STEP 5

- ④  4pcs  
Ø8x30mm

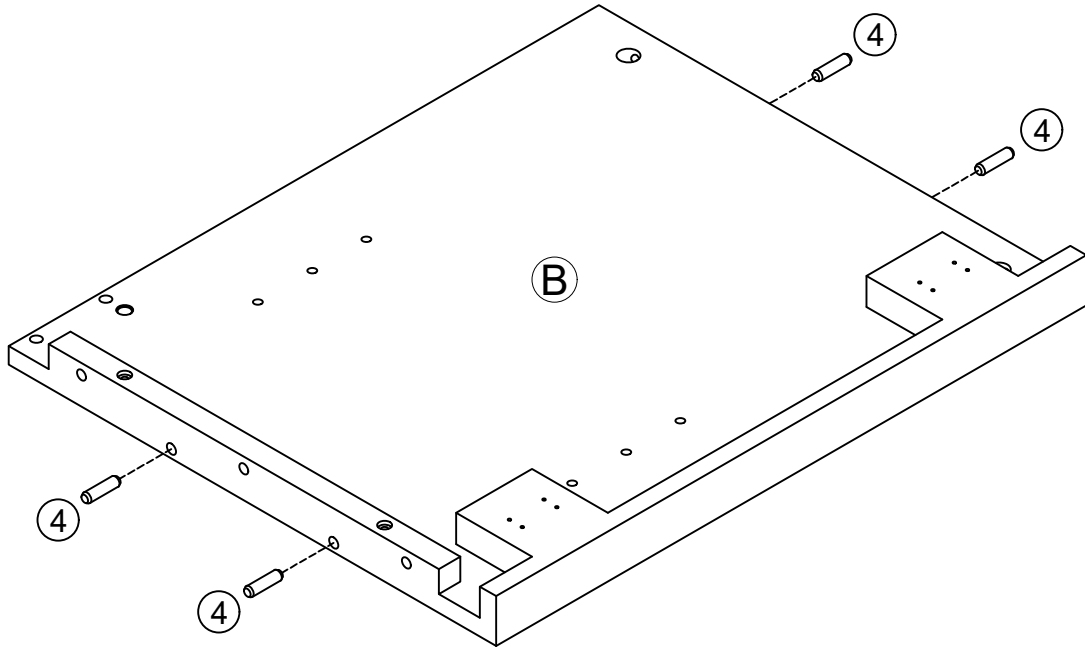



STEP 6

- ⑪  4pcs  
Ø6x33mm

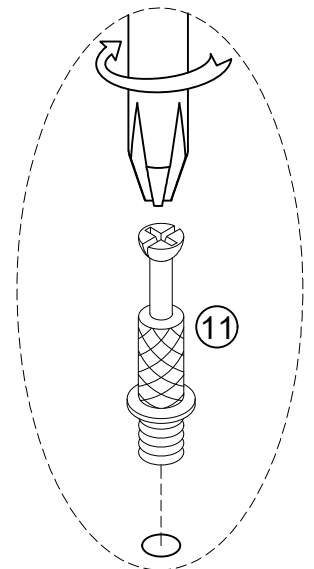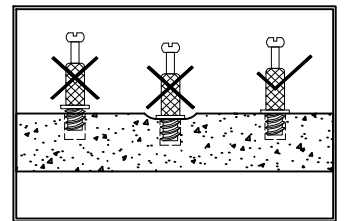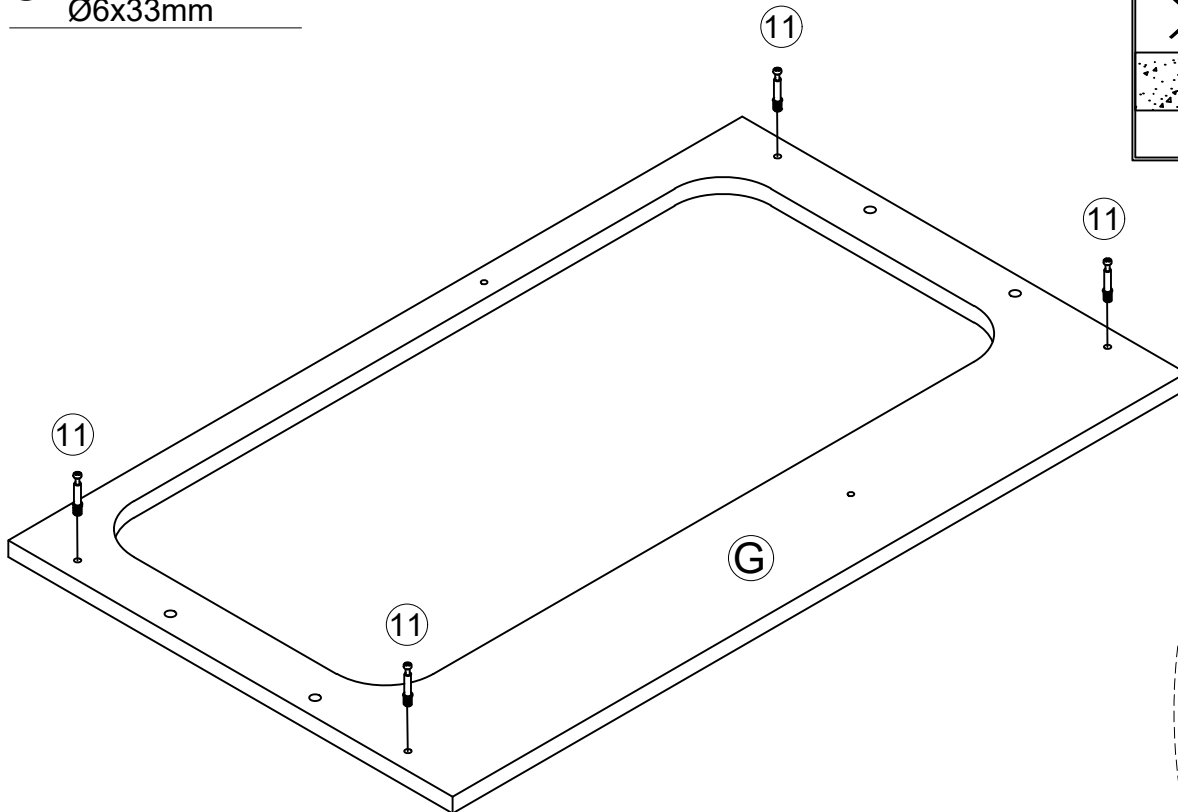




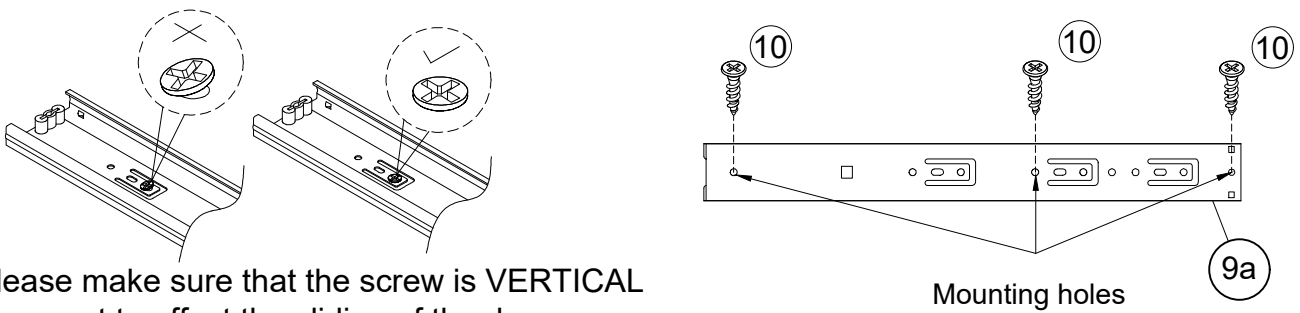
### STEP 7

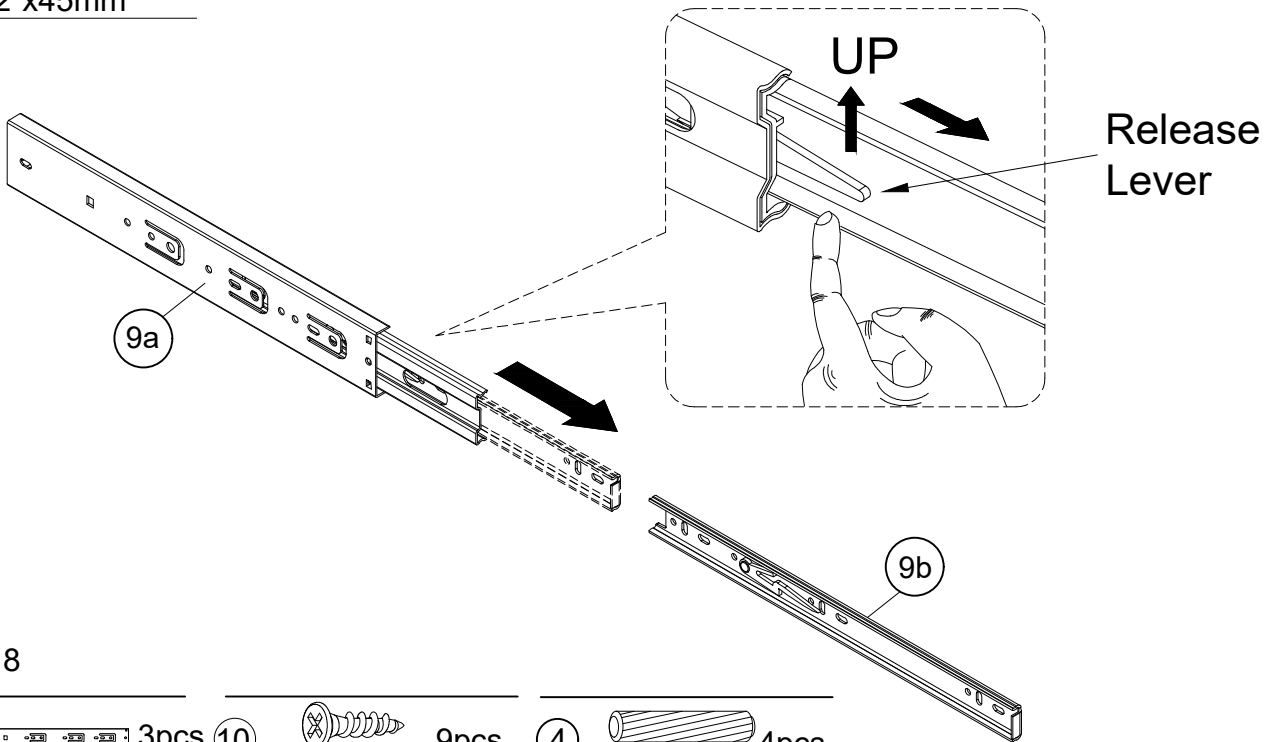9  3SET  
12"x45mm




### STEP 8


9a  3pcs 10  9pcs Ø3x10mm 4  4pcs Ø8x30mm




Please make sure that the screw is VERTICAL so as not to affect the sliding of the drawer.

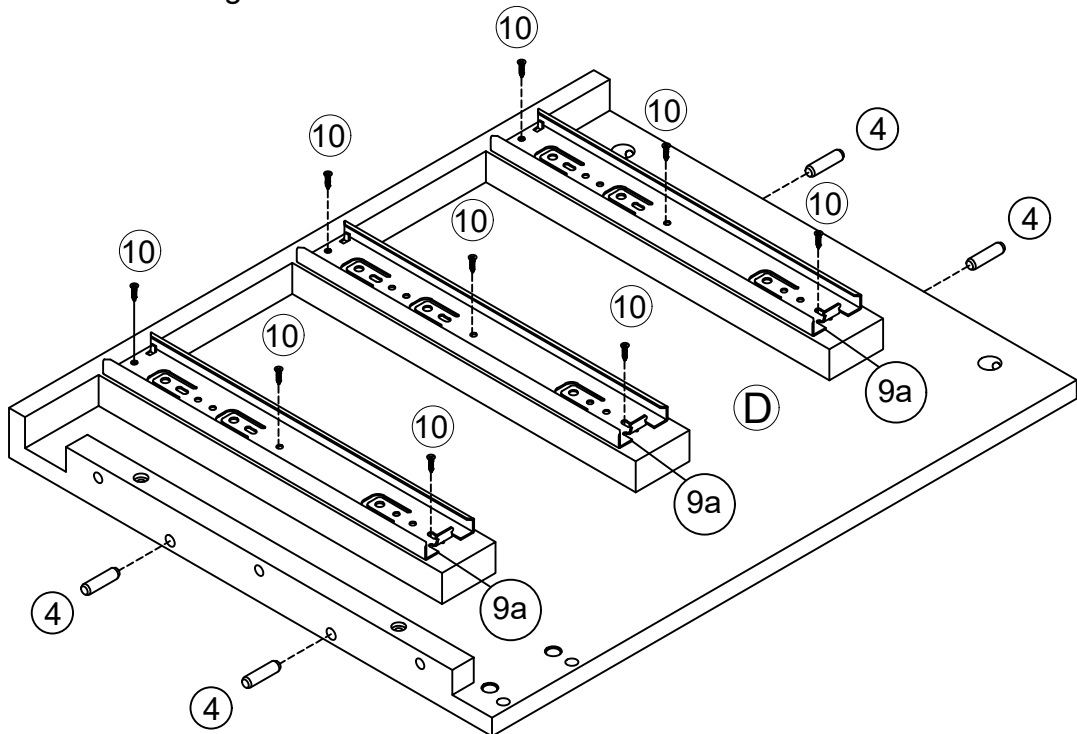


STEP 9

9  3SET  
12"x45mm

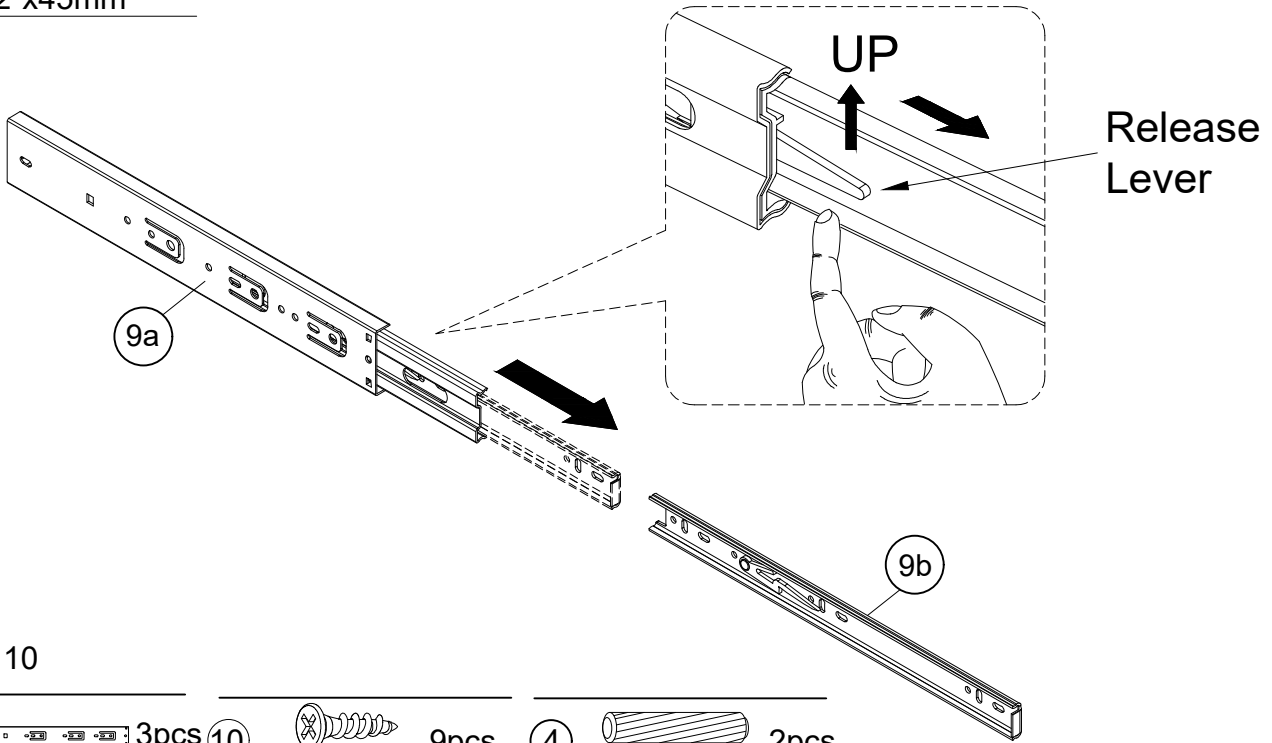


STEP 10

9a  3pcs 10  9pcs 4  2pcs  
12"x45mm Ø3x10mm Ø8x30mm

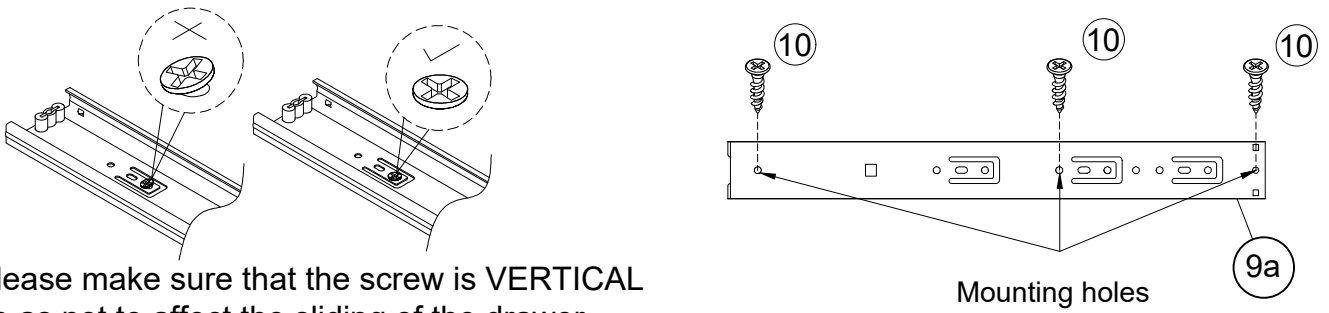


Please make sure that the screw is VERTICAL so as not to affect the sliding of the drawer.

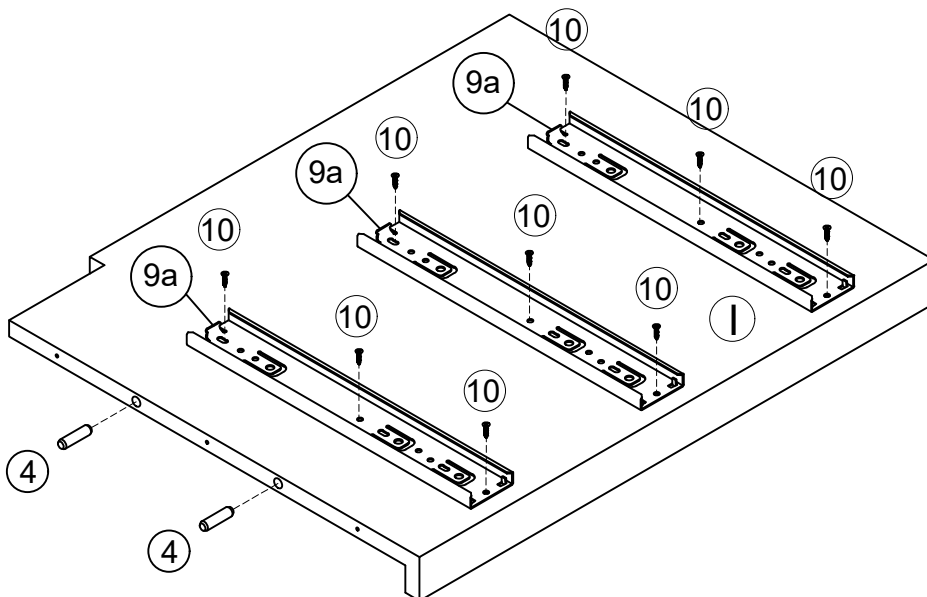


### STEP 11

- ① 1/4"x25mm 4pcs    ④ Ø8x30mm 8pcs

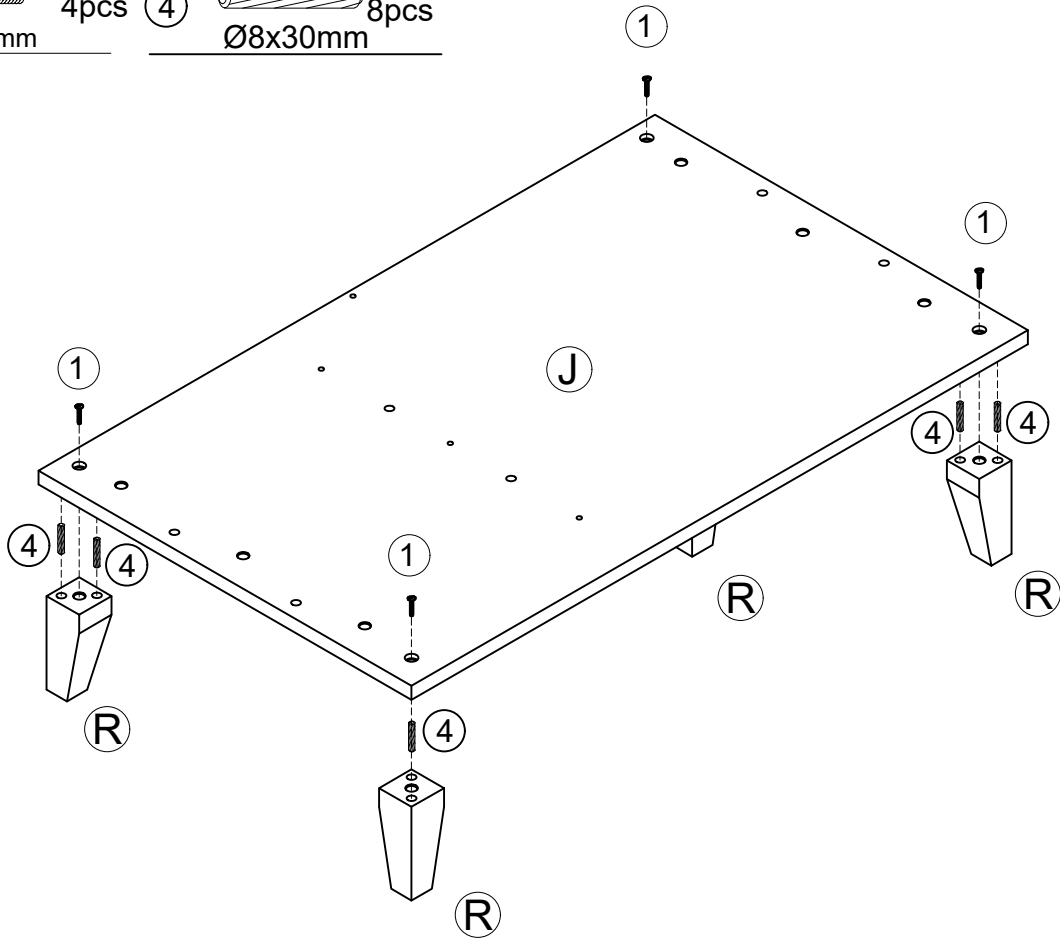


### STEP 12

- ① 1/4"x25mm 2pcs

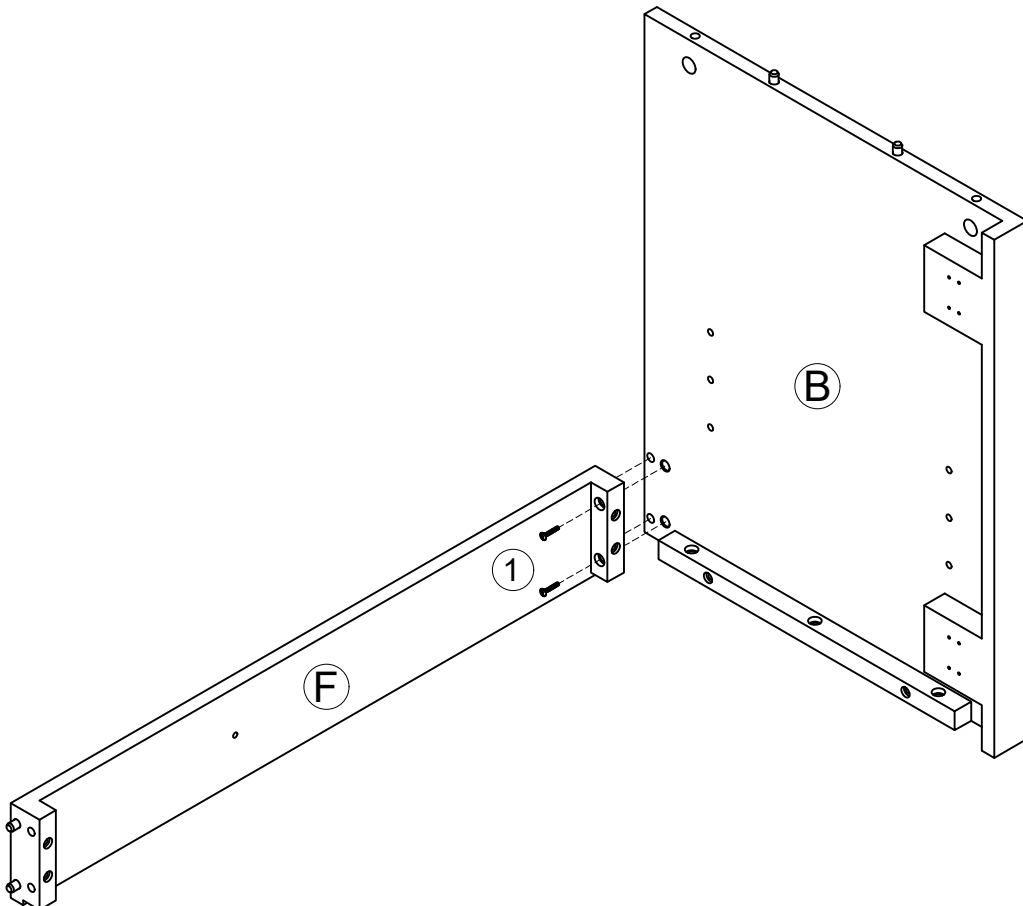


STEP 13

- ①  2pcs  
1/4"x25mm

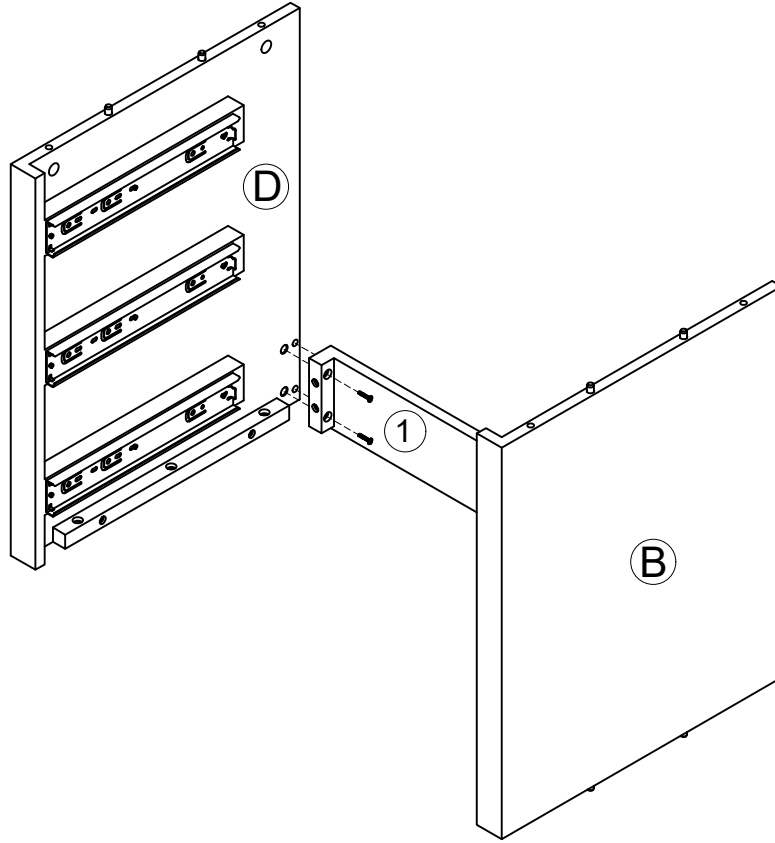


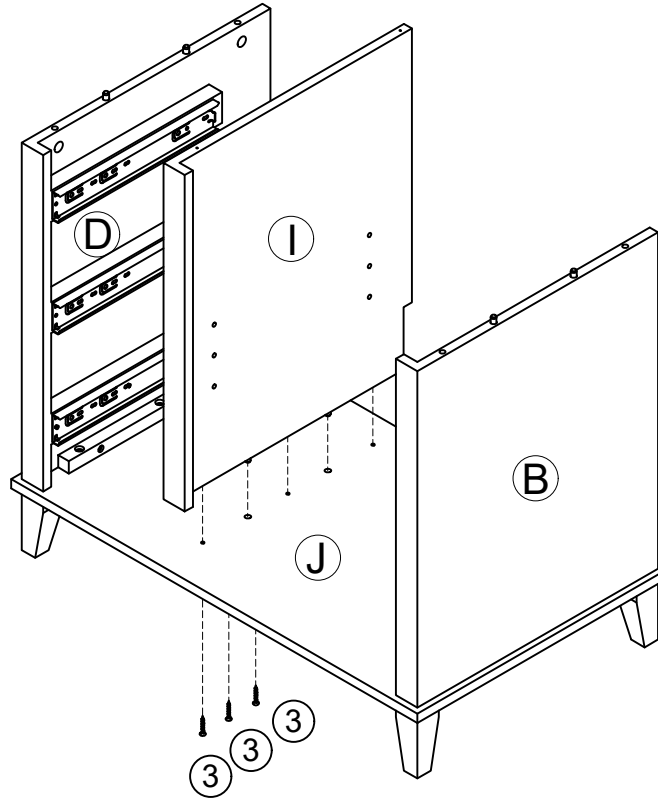
STEP 14

- ⑭  6pcs  
1/4"x25mm

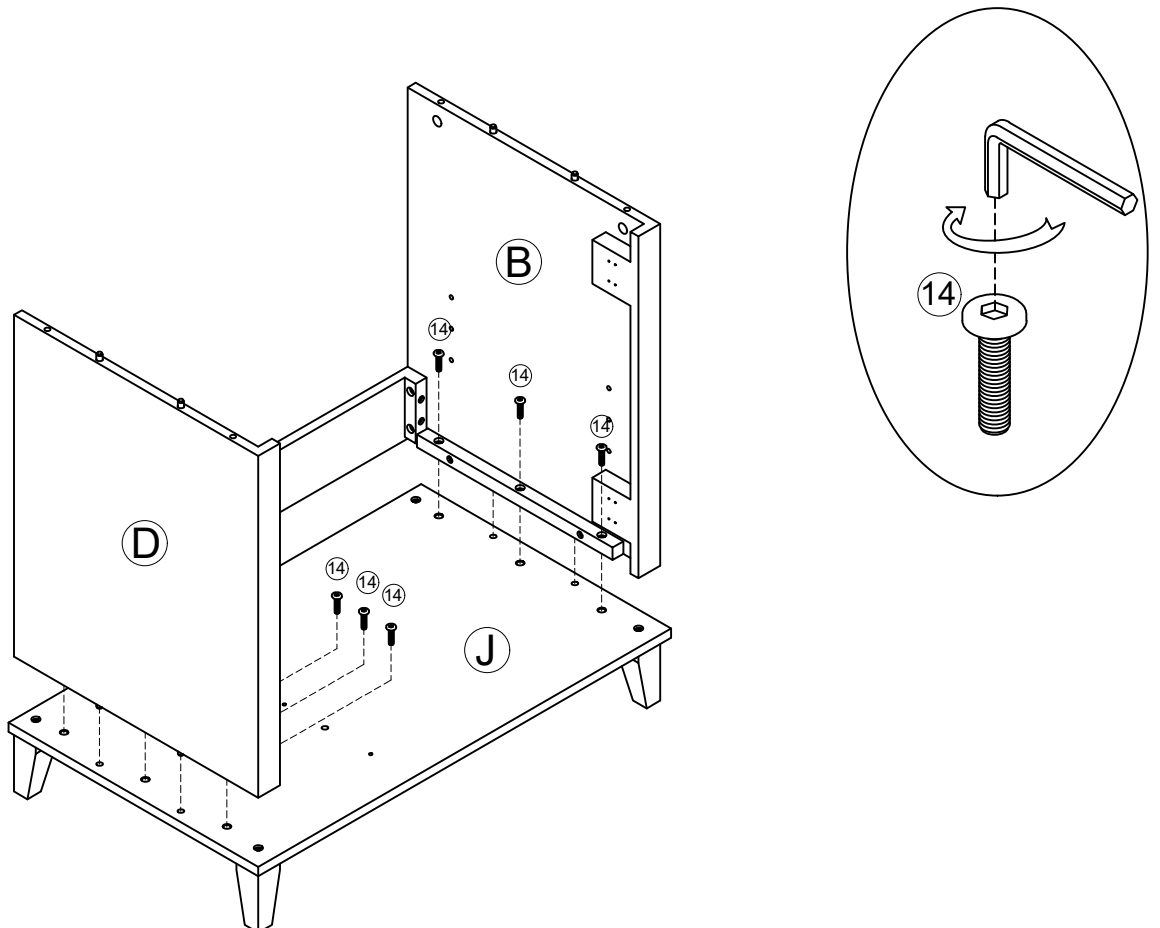





STEP 15

- ③  3pcs  
Ø4x35mm




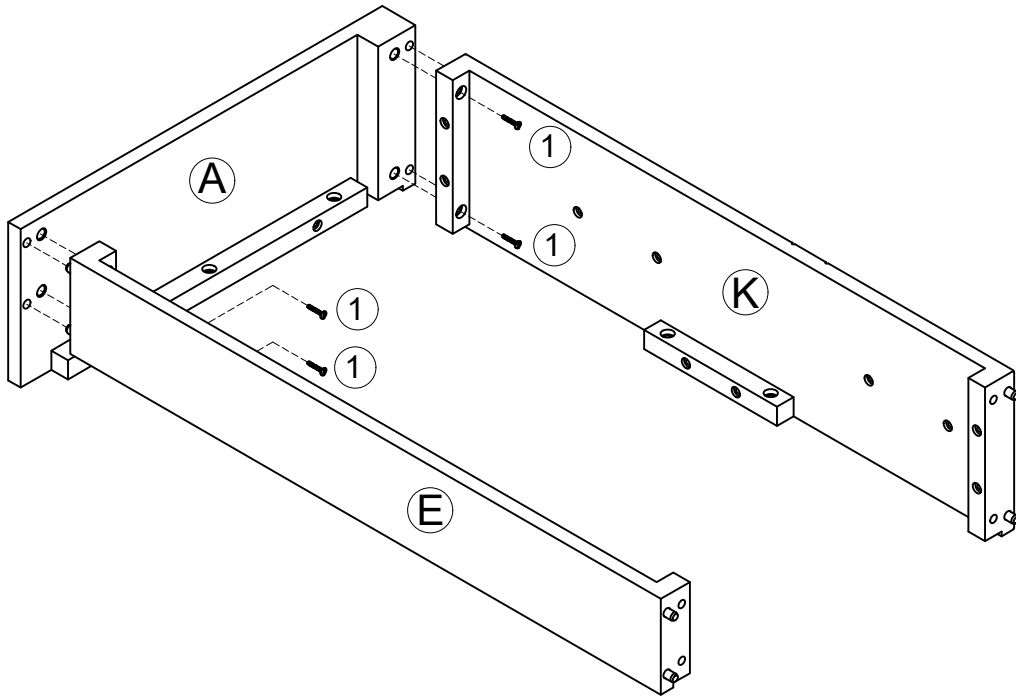
STEP 16

- ③  4pcs  
Ø4x35mm
- ⑫  4pcs  
Ø15x9mm

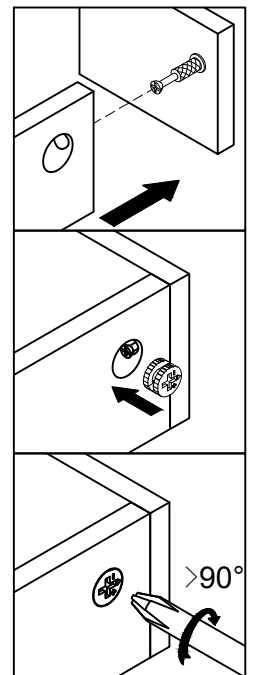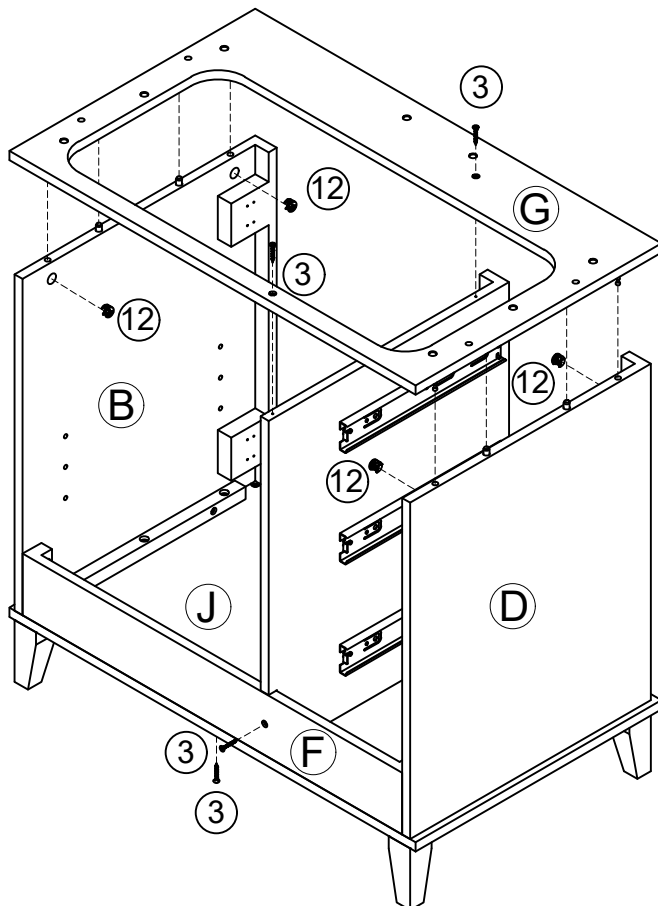


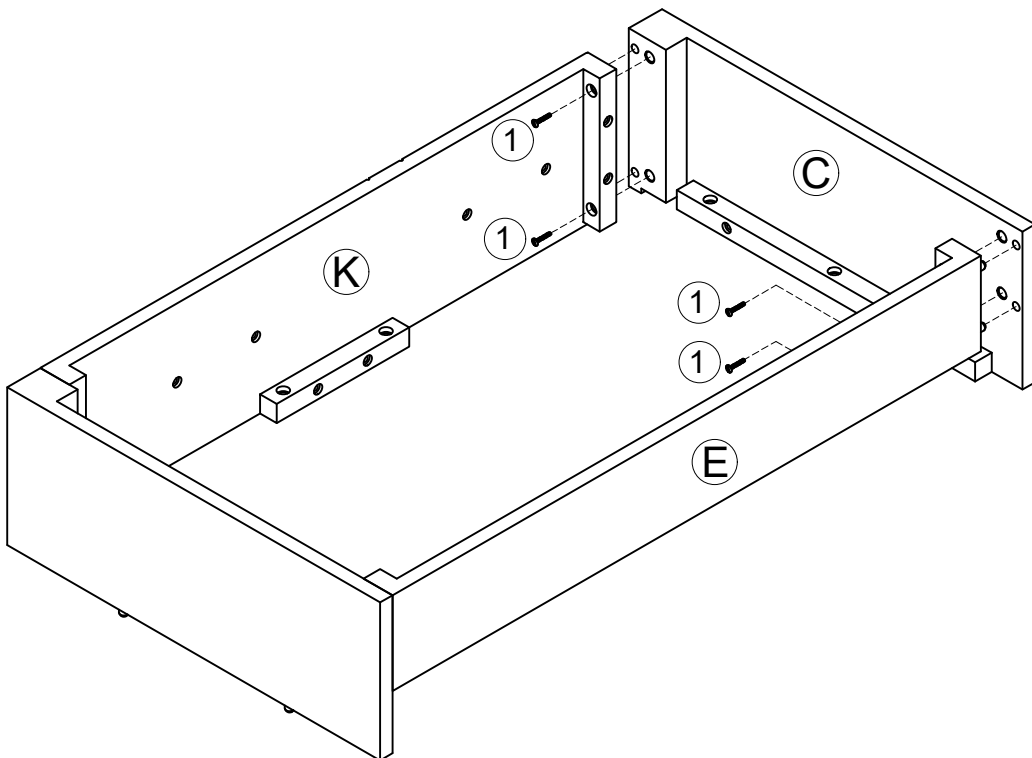
STEP 17

- ①  4pcs  
1/4"x25mm




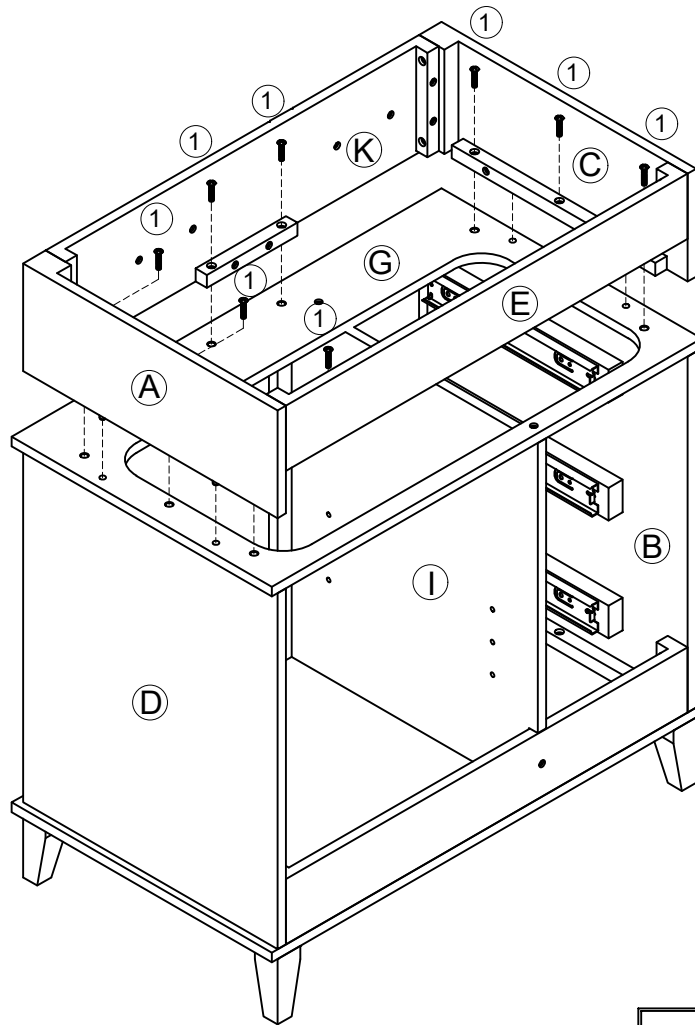
STEP 18

- ①  4pcs  
1/4"x25mm







STEP 19

- ①  8pcs  
1/4"x25mm





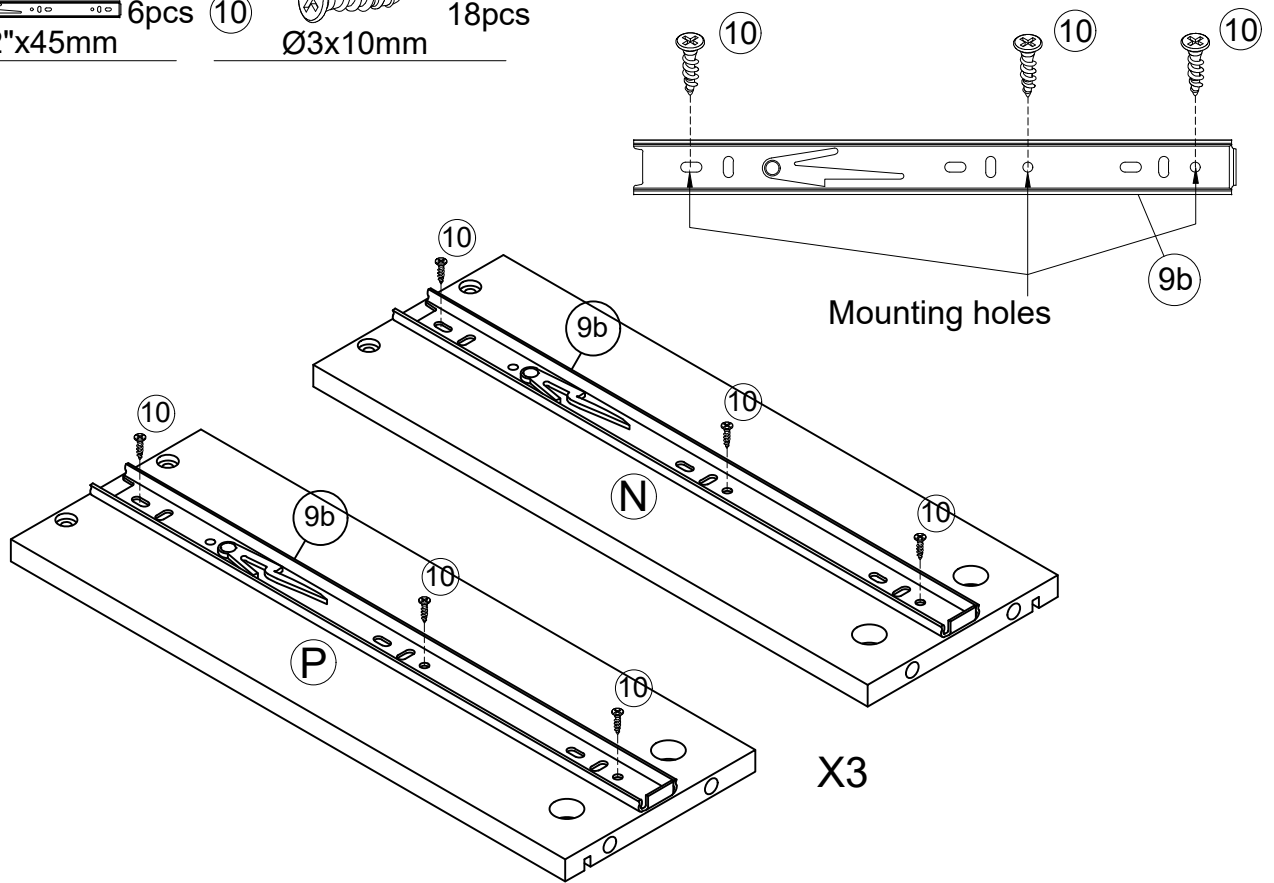
STEP 20

- ⑪  12pcs  
Ø6x33mm

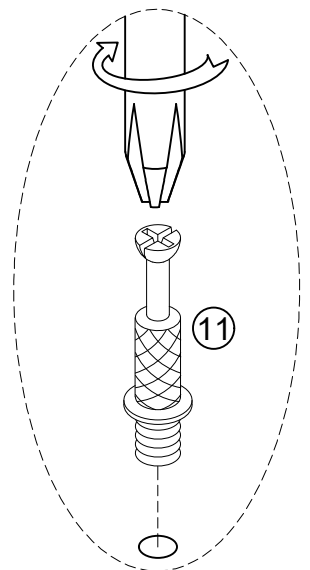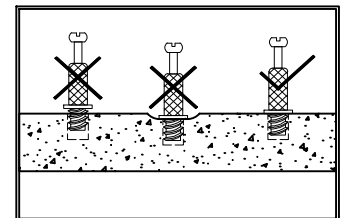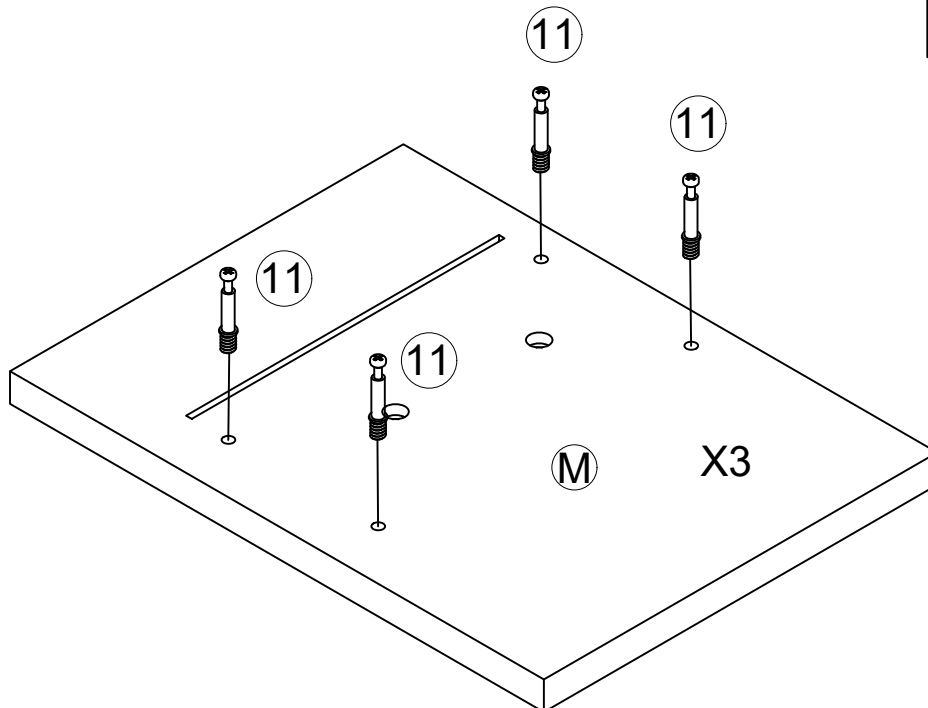


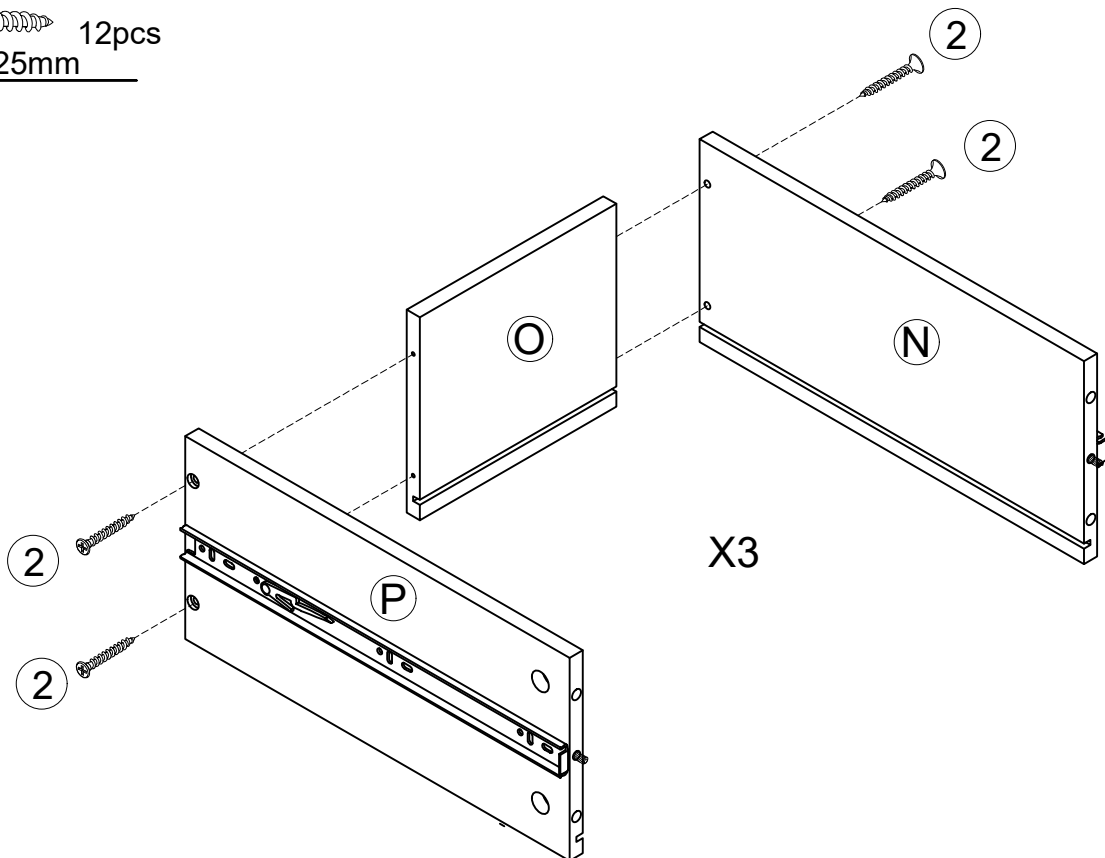
STEP 21

- 9b  6pcs  
12"x45mm
- 10  18pcs  
Ø3x10mm




STEP 22

- 2  12pcs  
Ø4x25mm




STEP 23




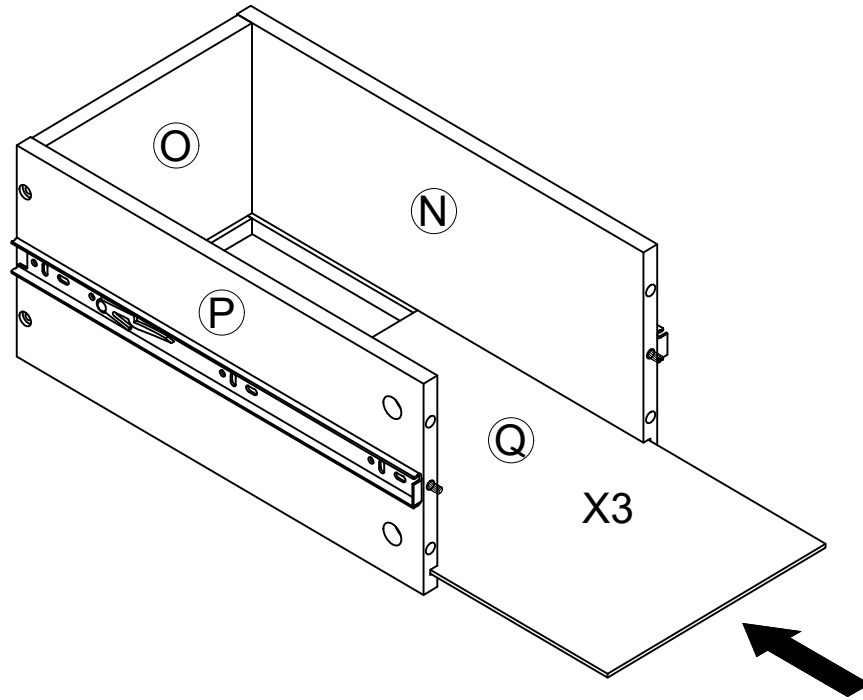


STEP 24



- |   |  |       |   |  |      |   |  |      |
|---|--|-------|---|--|------|---|--|------|
| ⑫ |  | 12pcs | ⑤ |  | 3pcs | ⑬ |  | 6pcs |
|   | Ø15x9mm  |       |   |  |      |   | 5/32"x15mm   |      |

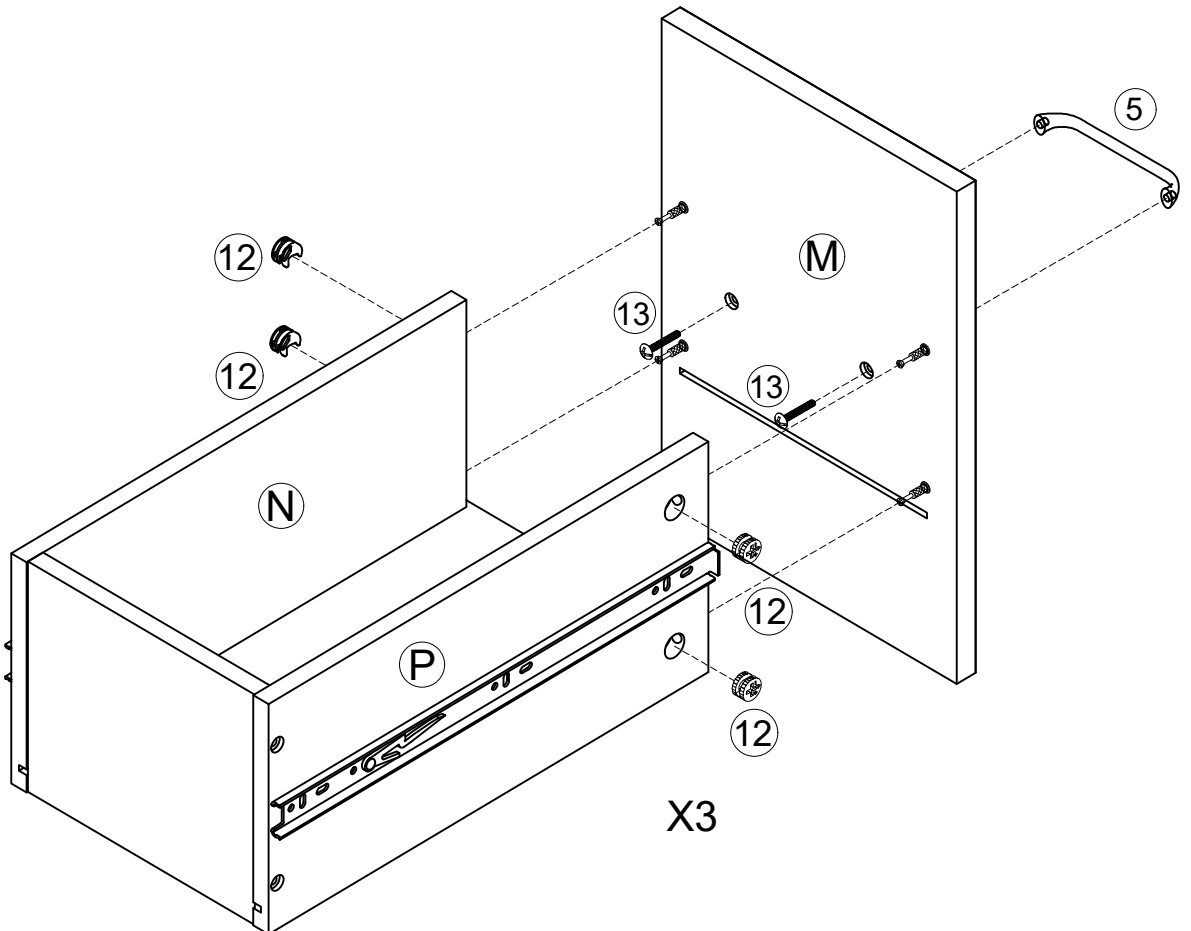


STEP 25

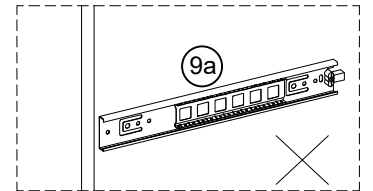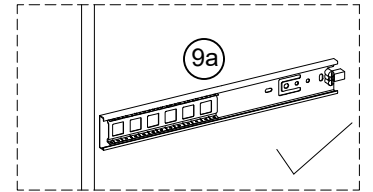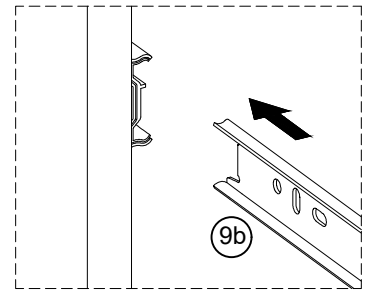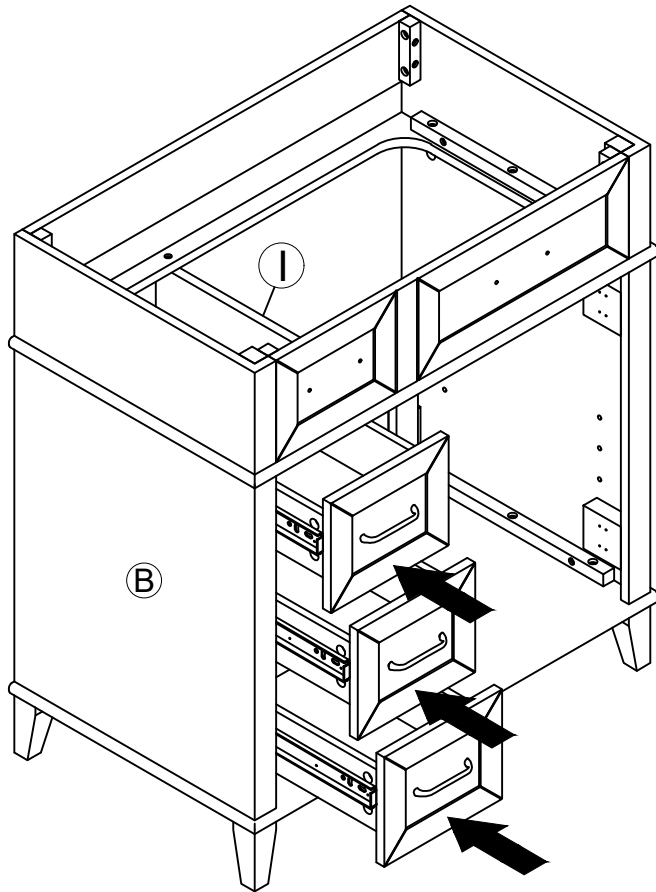

STEP 26

- ⑥  2pcs    ⑦  4pcs  
Ø4x12mm





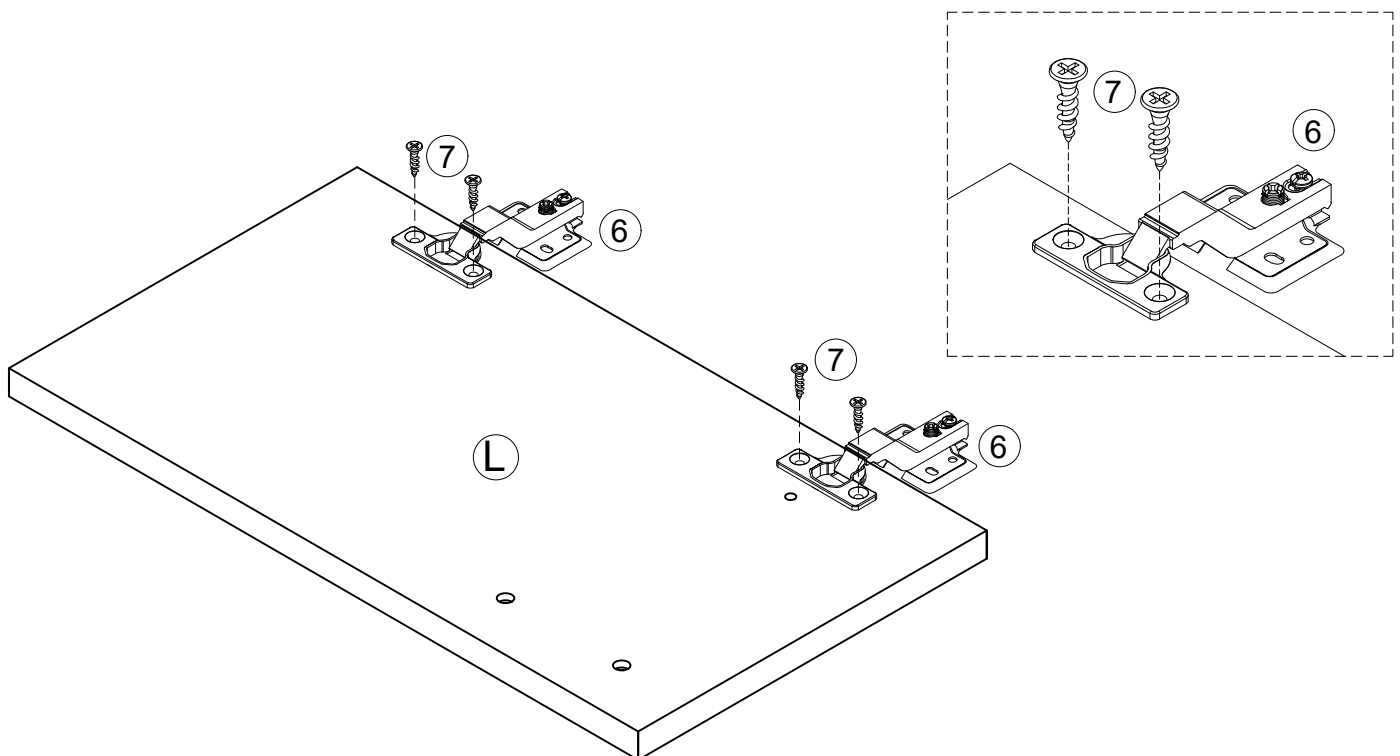


# STEP 27

- 7  8pcs  $\text{\O}4 \times 12 \text{mm}$
- 5  1pc
- 13  2pcs  $5/32" \times 15 \text{mm}$

Three-way adjustable hinge for perfectly aligned doors


1. TO ADJUST DOOR FORWARD OR BACKWARD.
2. TO ADJUST DOOR TO RIGHT OR TO LEFT.
3. TO ADJUST DOOR UP OR DOWN.

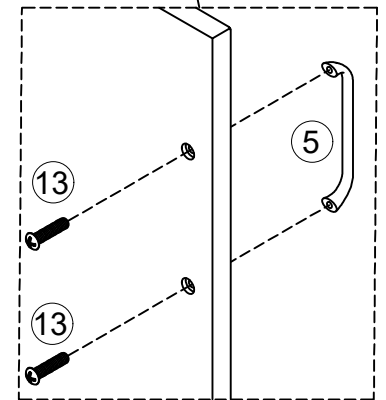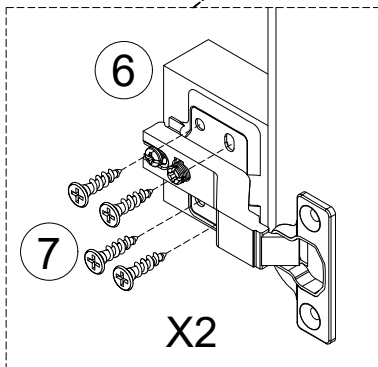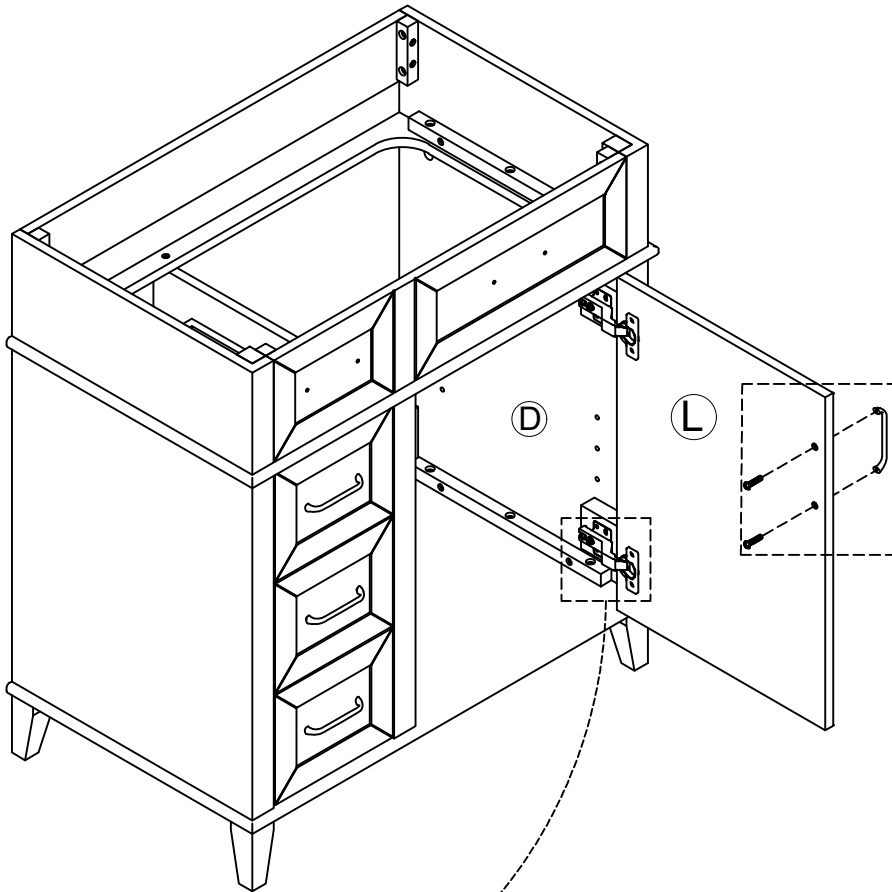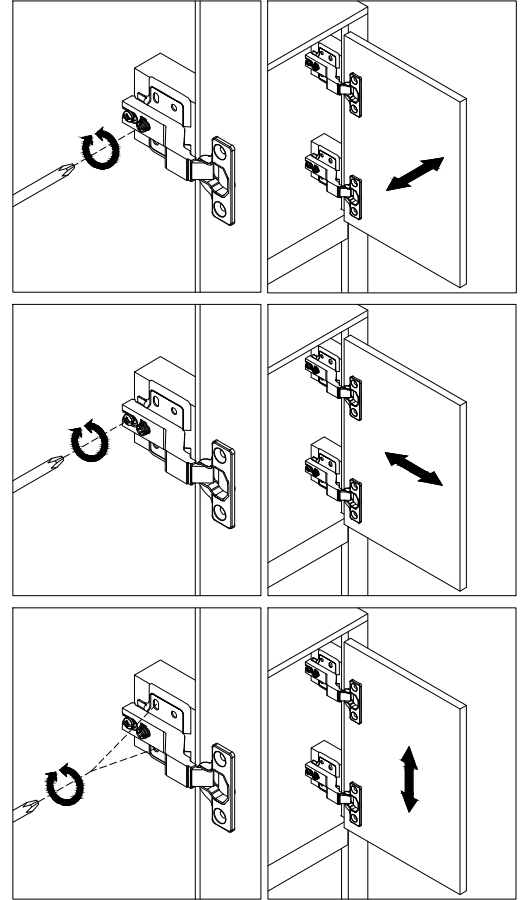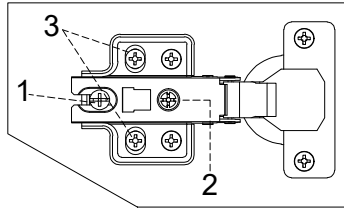

STEP 28


⑤ 2pcs

⑬ 4pcs  
5/32"x15mm

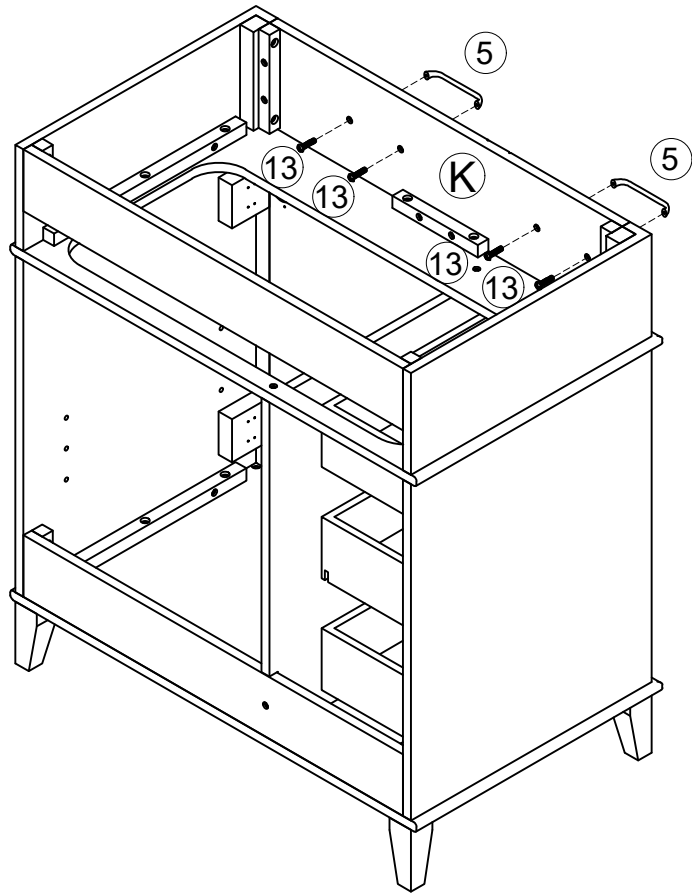

STEP 29

⑧ 4pcs

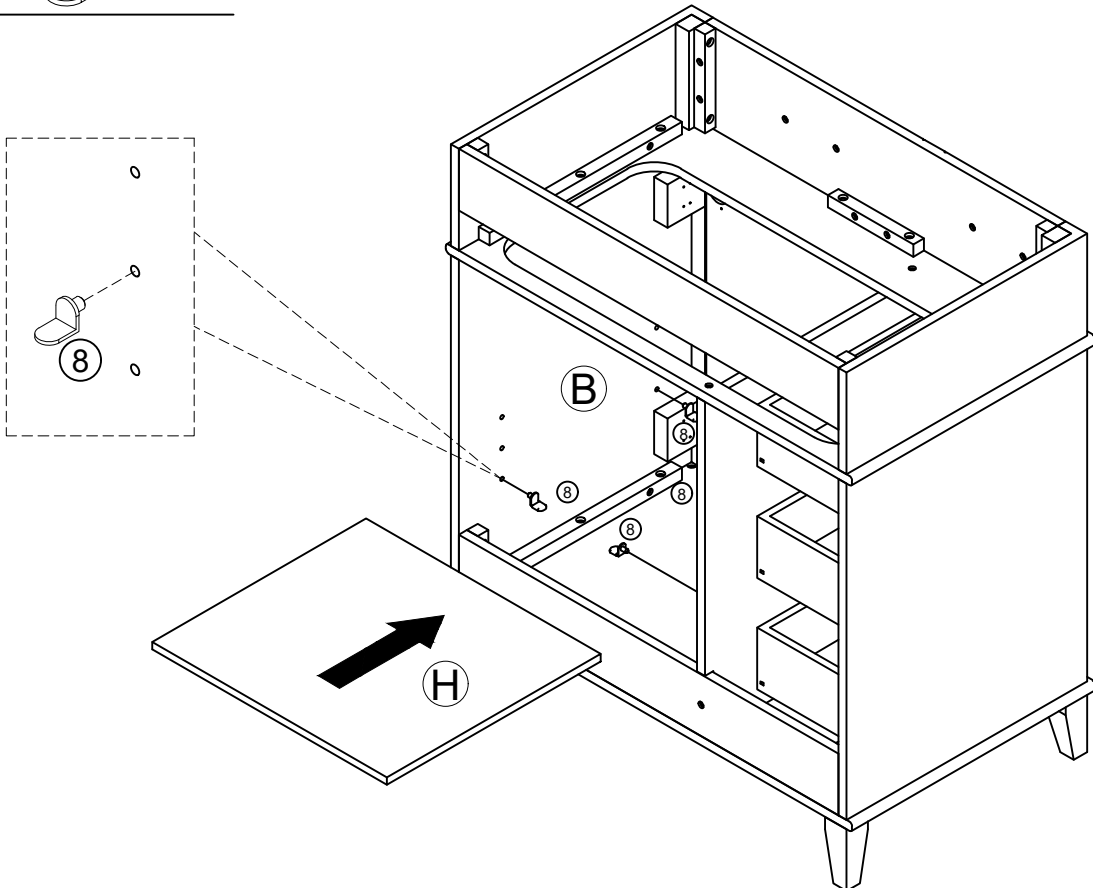

## STEP 30

To install the Top (1) to the vanity (2).  
Apply silicone caulk to the top edge of the wood cabinet. With the help of another adult, gently lower the Sink top with assembled sink onto the cabinet. Make sure the Sink top is flush with the back side of the wood cabinet and the wood cabinet left and right side walls.

