
Coffee Table Installation

Tools You Will Need: Tools You May Need



philis head screwdrier
rewuired of assembly
(not include)



hammer
(not include)



electric drill
(not include)

Assembly video


Before the Installation

1. Do not throw away packing materials until assembly is complete for small parts may come loose inside the carton during shipment. If parts are missing, please contact us.
2. Assemble this item on a soft surface, such as carpet to protect the finish.
3. Proper assembly of this item requires 2 people.
4. Periodically check to ensure that all connections are tight.
5. It is recommended that installation of the product be done by a qualified licensed furniture assembler.


Care and Cleaning

1. To protect the finish, avoid use chemicals and household cleaners.
2. All hot serving dishes should be placed on a pad.
3. Any liquid spilled onto the top should be cleaned up immediately with a damp cloth.











Parts List


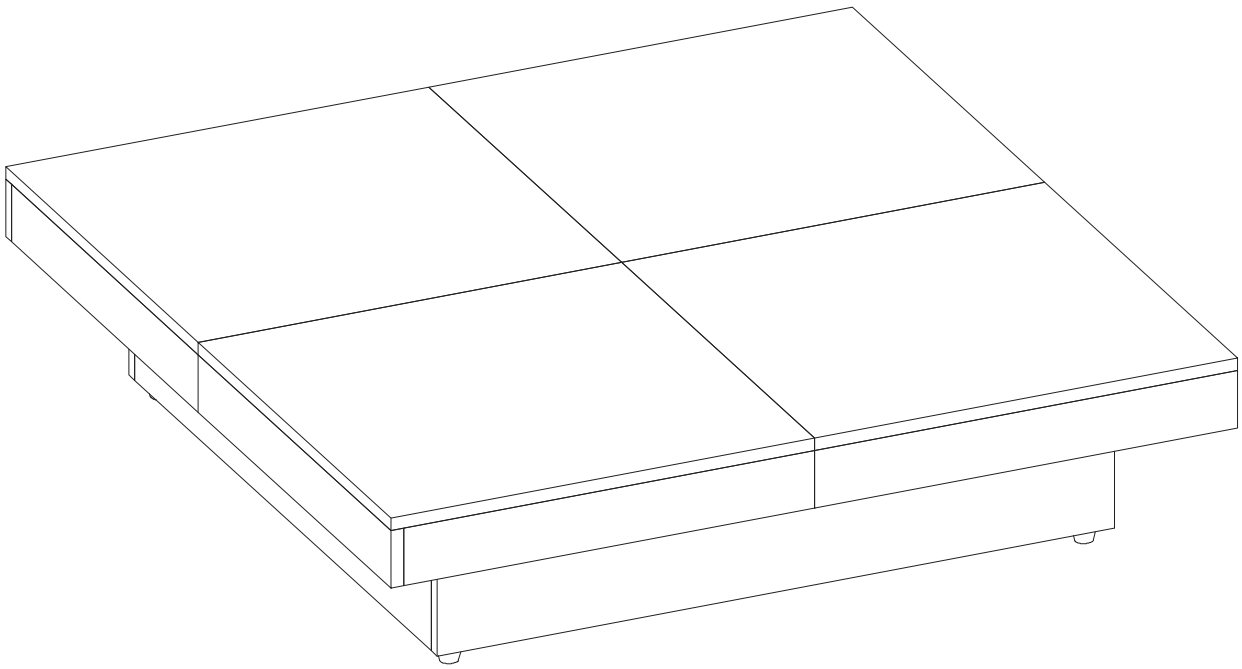



Note: Do not fully tighten all bolts until all parts are in place. Failure to follow these instructions may cause the bolt to misalign during assembly.

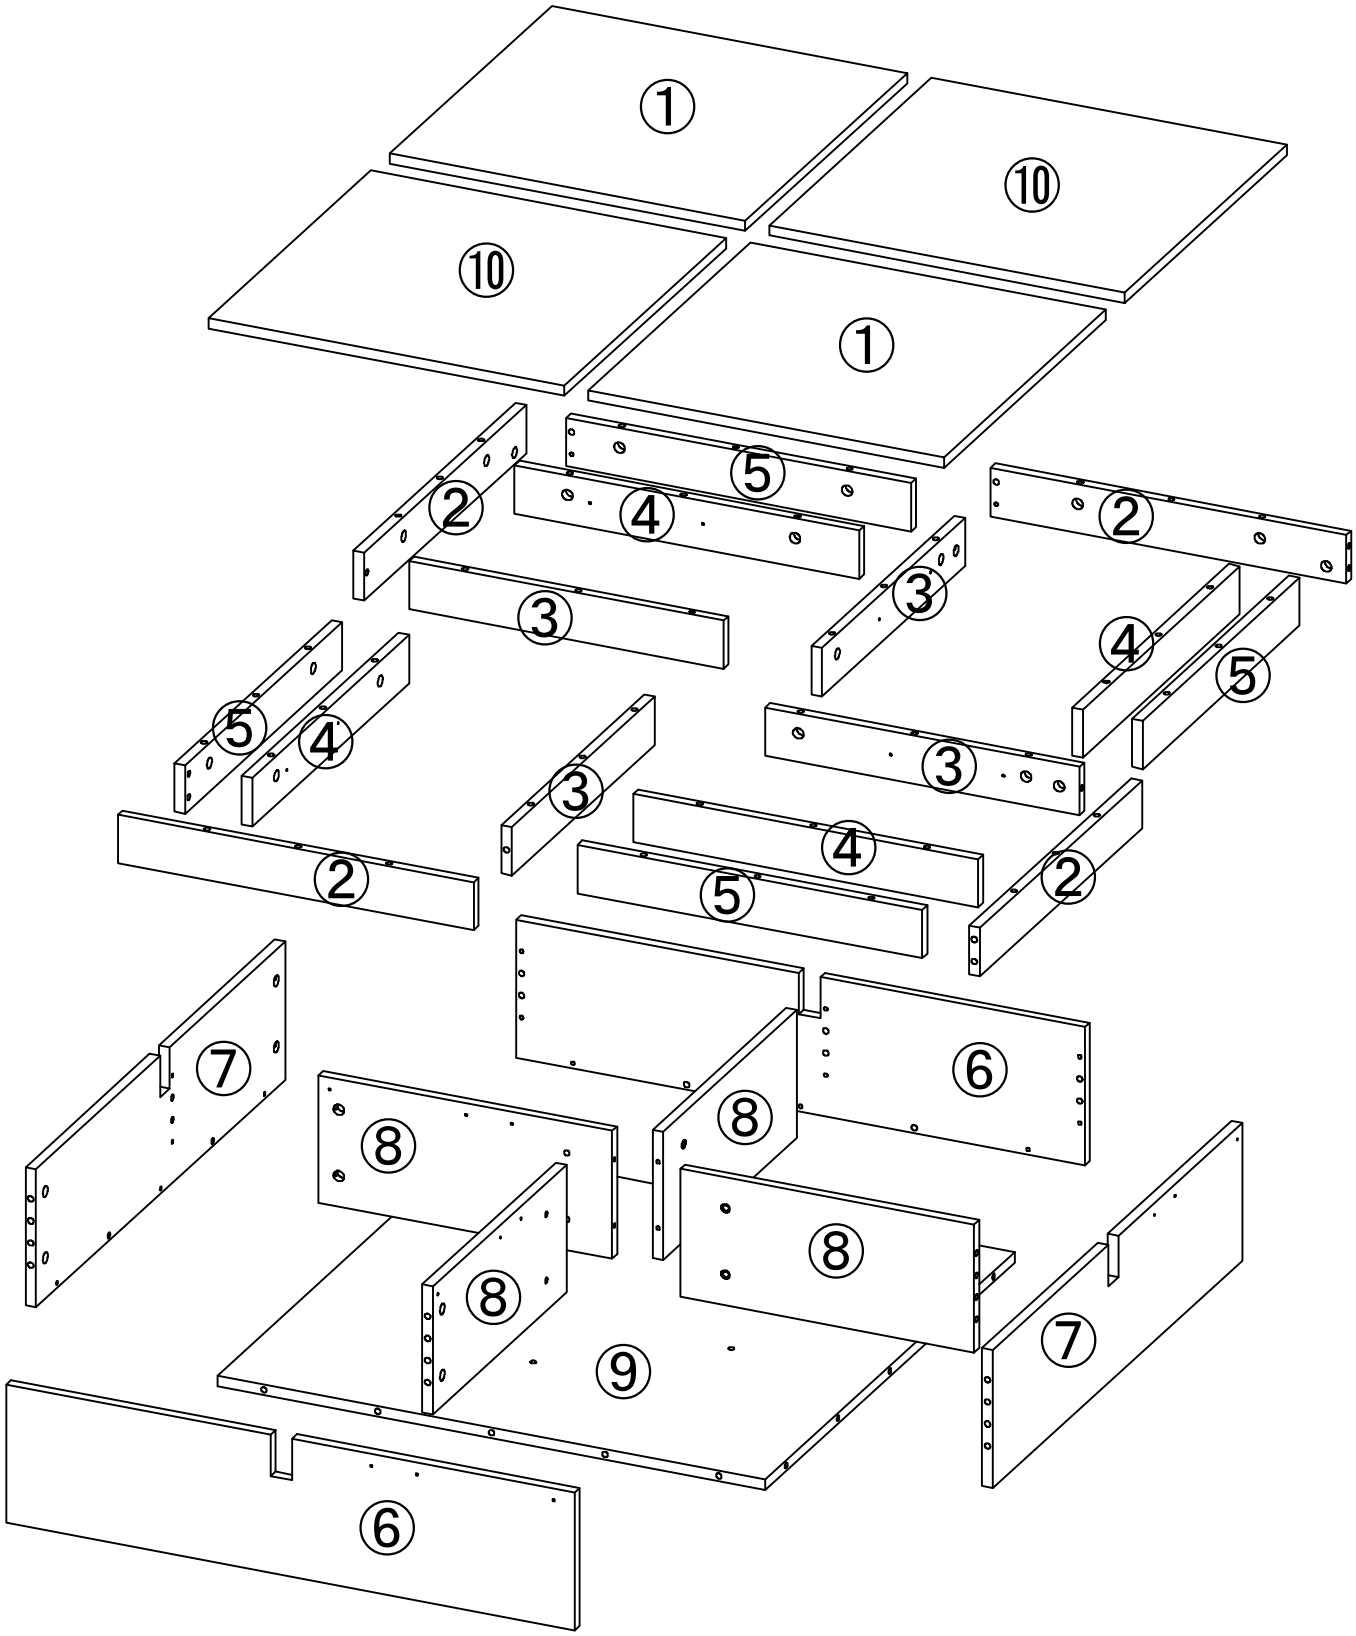
1
10
10
1
5
2
4
3
2
3
4
5
5
4
3
3
4
2
5
2
7
6
8
8
8
8
9
7
6


Parts List for WF322094AAK

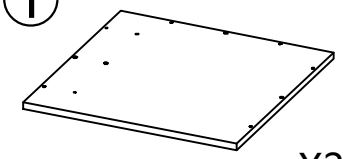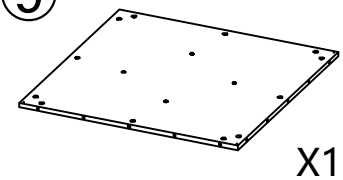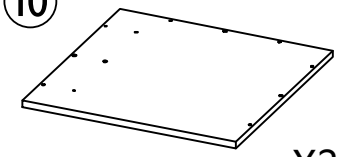①  X2	②  X4	③  X4	④  X4
⑤  X4	⑥  X2	⑦  X2	⑧  X4
⑨  X1	⑩  X2		

A  6x40mm x68	B  ø15*12mm x68	C  ø8*40mm X44	D  5*40mm x12	E  M4 x1
F  350mm X8	G  350mm X8	H  M4x12mm X48	I  ø30*20mm x4	J  M4*20mm x4
K  x68				



philis head screwdrier
rewuired of assembly
(not include)





hammer
(not include)




electric drill
(not include)


STEP1

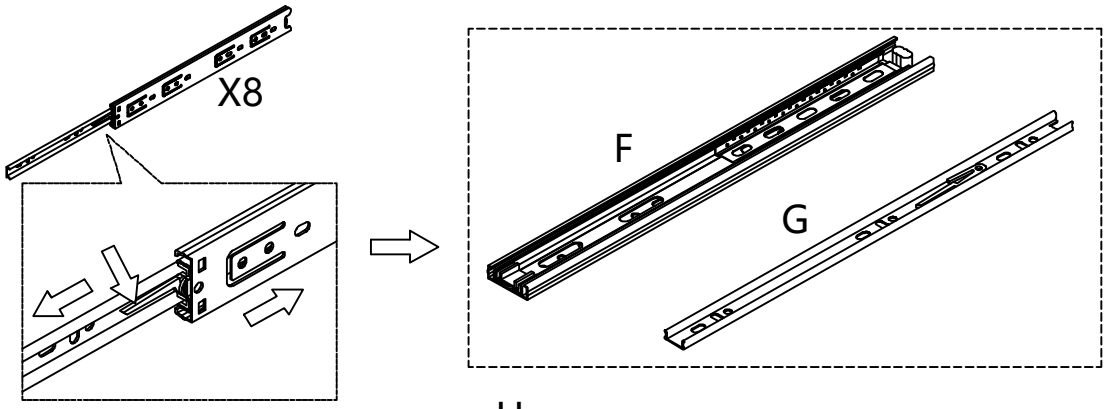

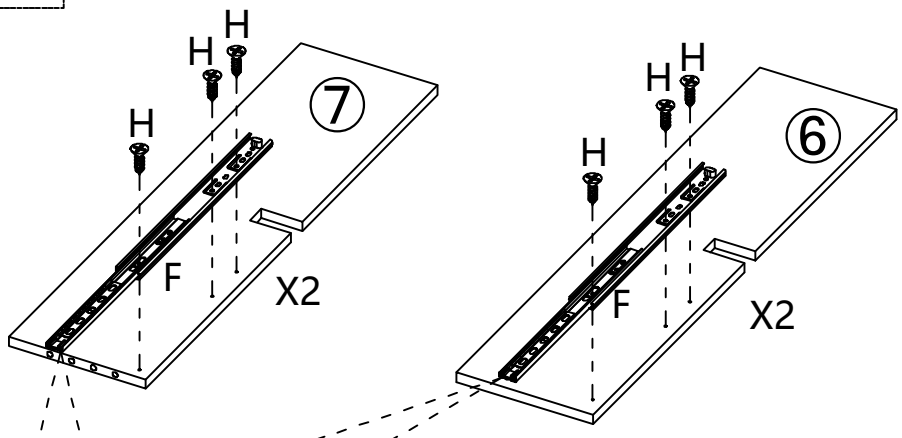

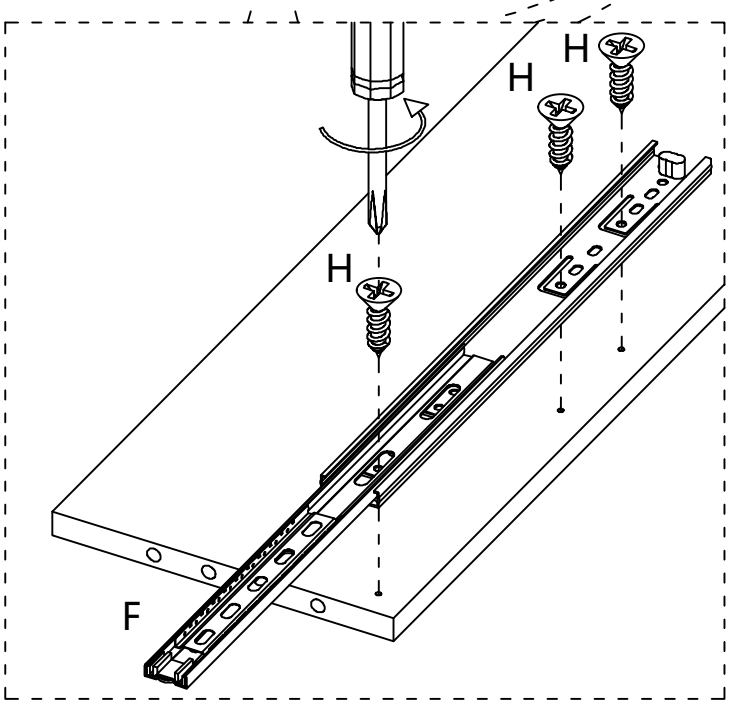

F



X4


H




M4x12mm


X12

STEP2

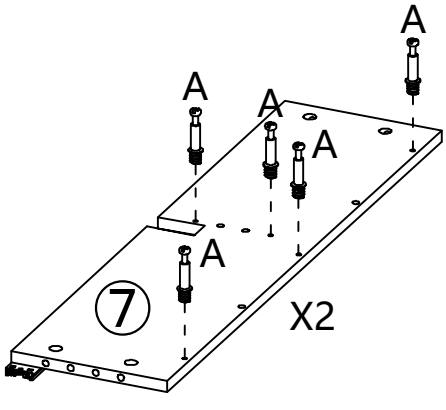

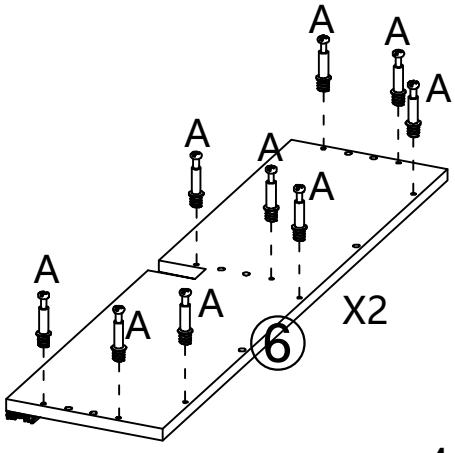


A



6x40mm

x28

STEP3

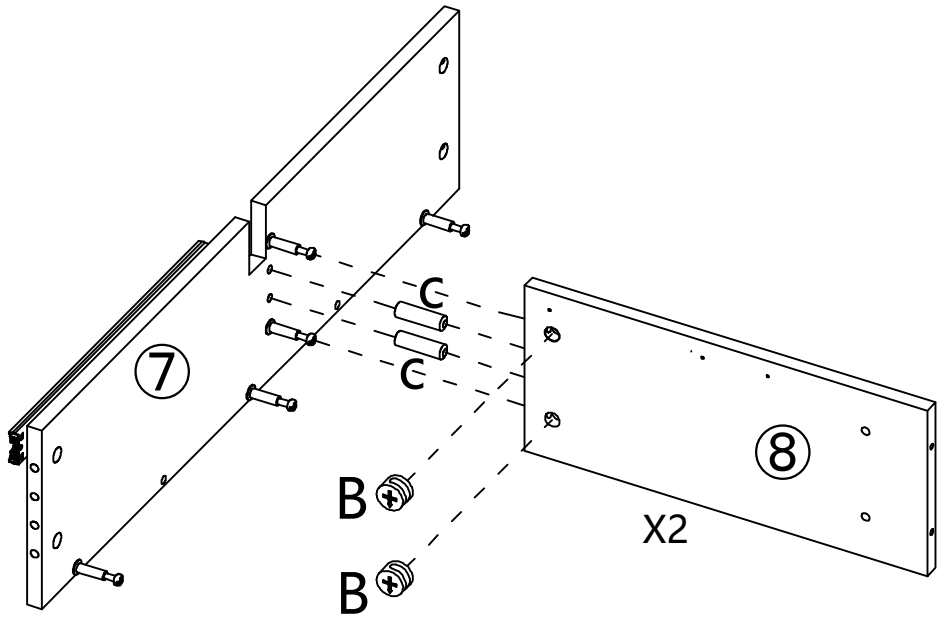


B



ϕ15*12mm

X4


C



ϕ8*40mm

X4

STEP4

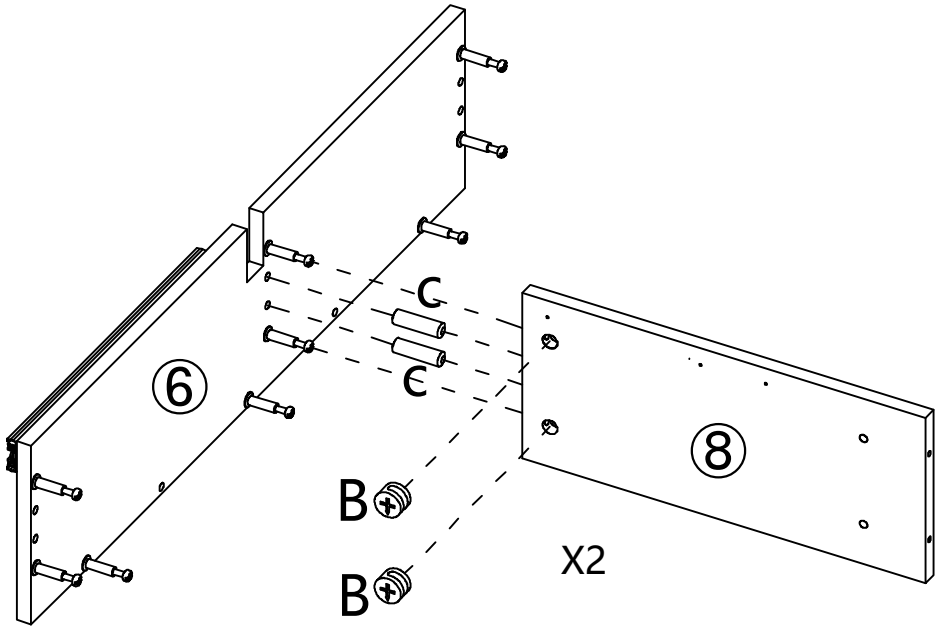


B



ϕ15*12mm

X4


C




ϕ8*40mm

X4

STEP5

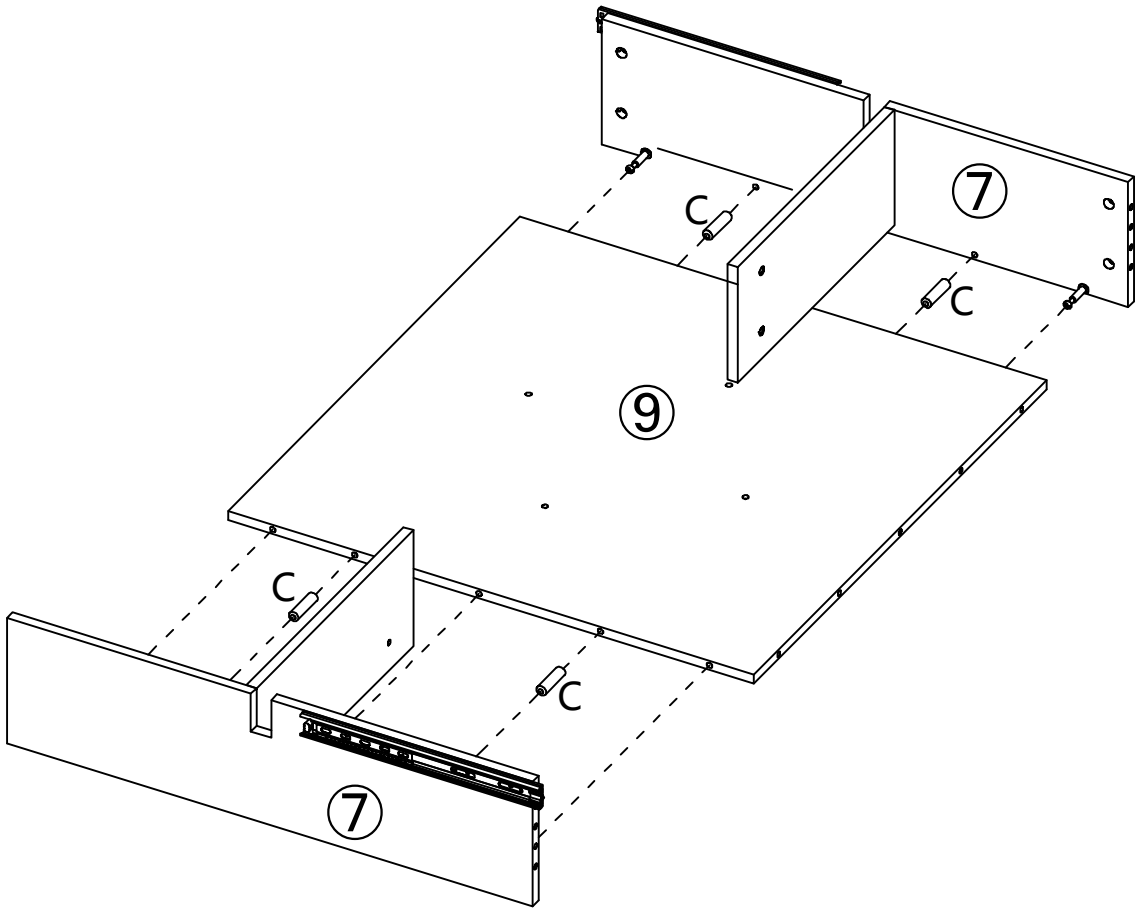

C



ϕ8*40mm X4


STEP6

B




ϕ15*12mm X8


C



ϕ8*40mm X12

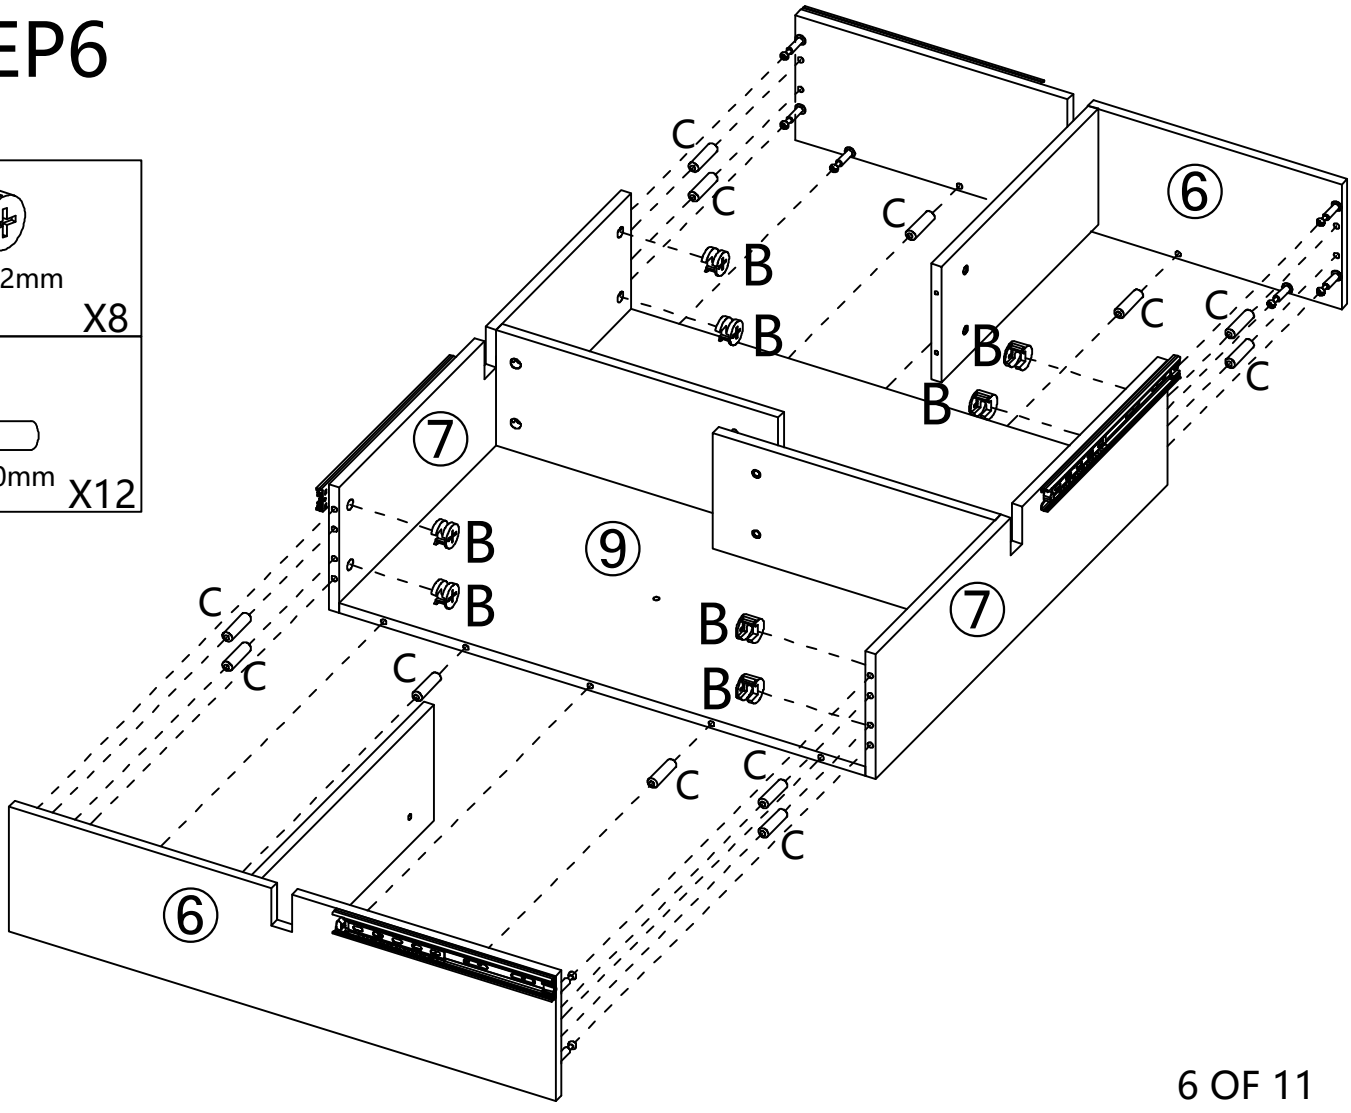

STEP7

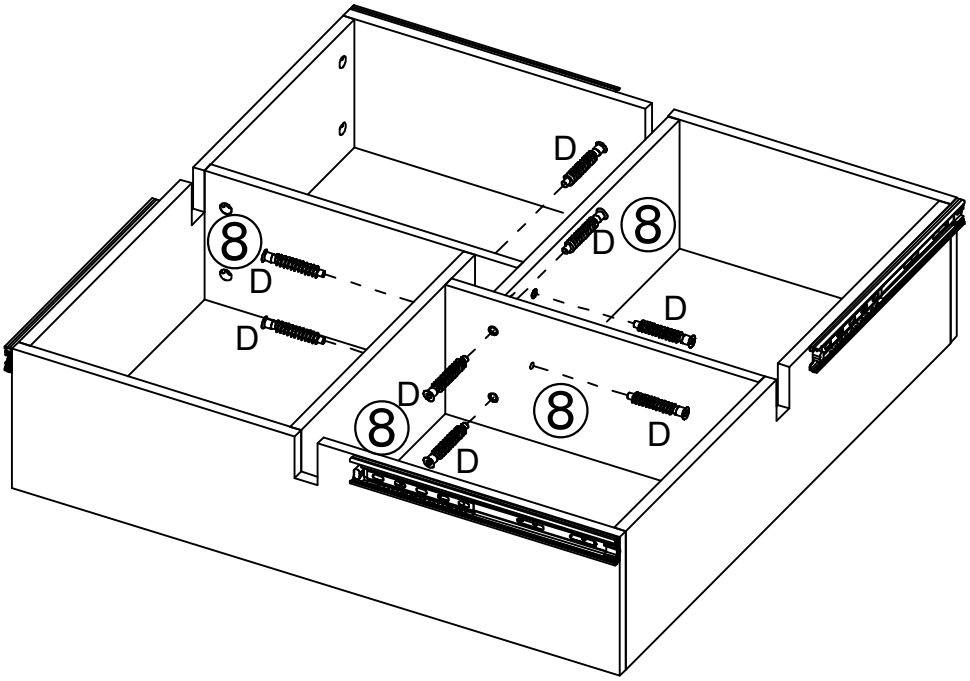

D



5*40mm

X8


E





M4

X1


STEP8

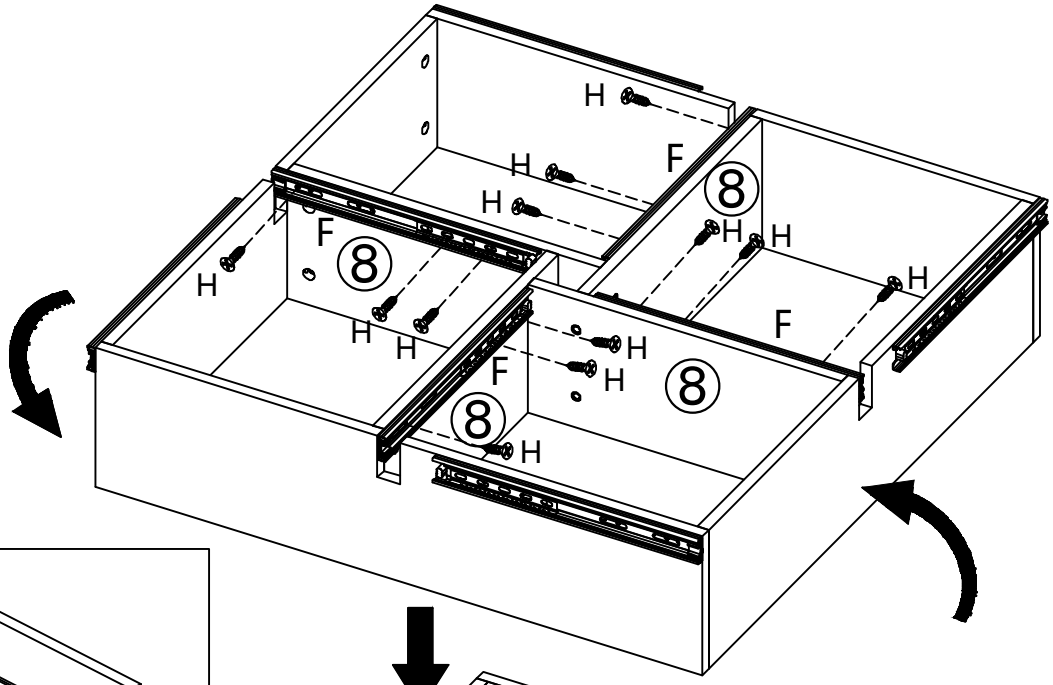

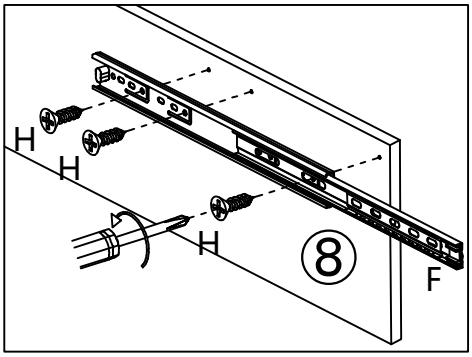

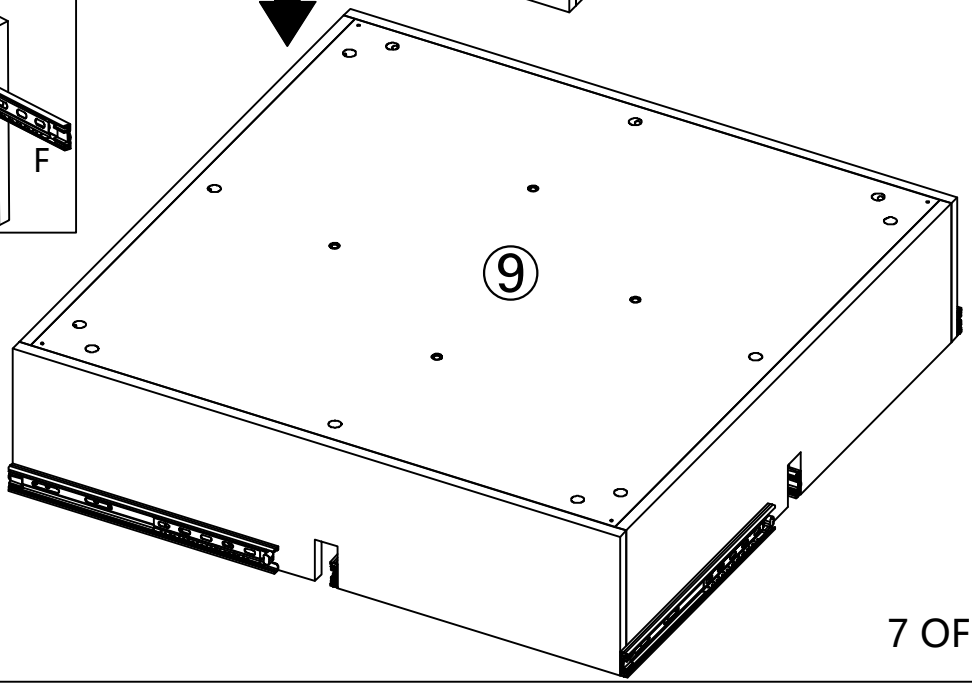

F



X4


H




M4x12mm


X12

STEP9

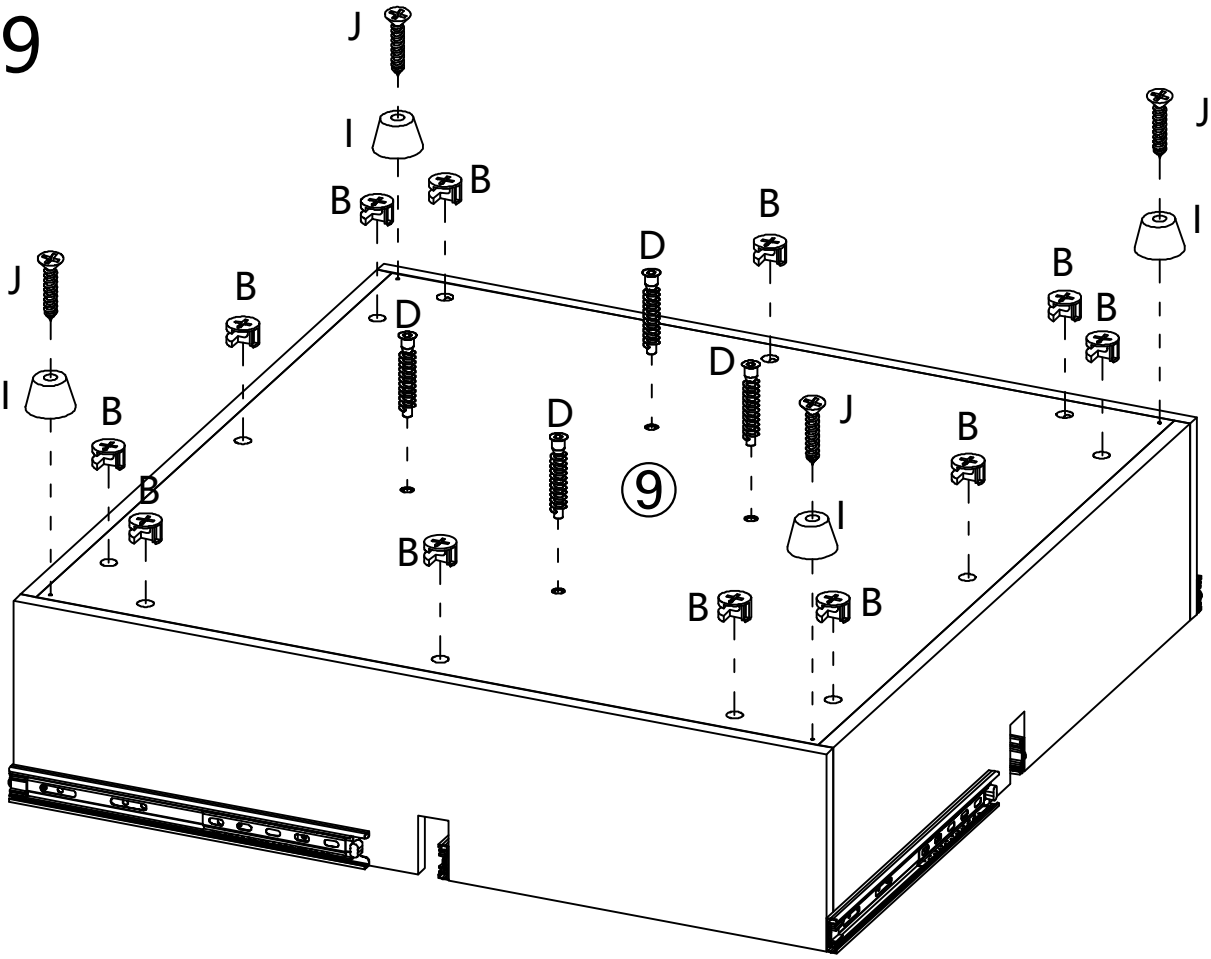


B	D	E	I	J
				
ϕ15*12mm	5*40mm	M4	ϕ30*20mm	M4*20mm
x12	x4	x1	x4	x4


STEP10

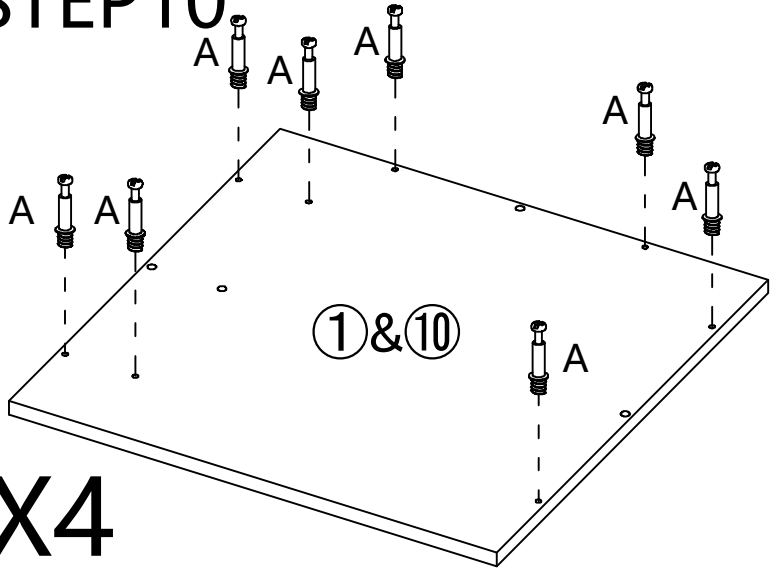


X4

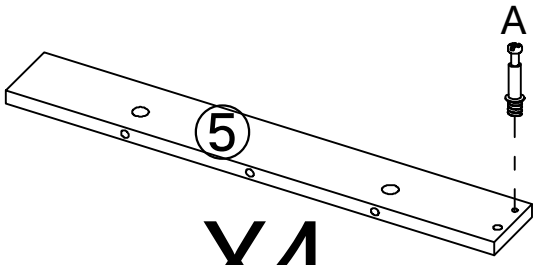


X4

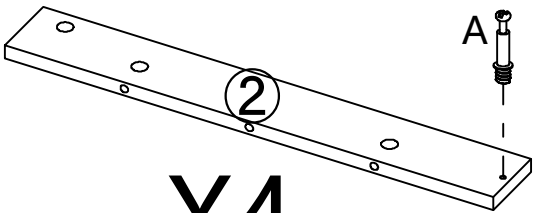

X4

A

6x40mm
x40

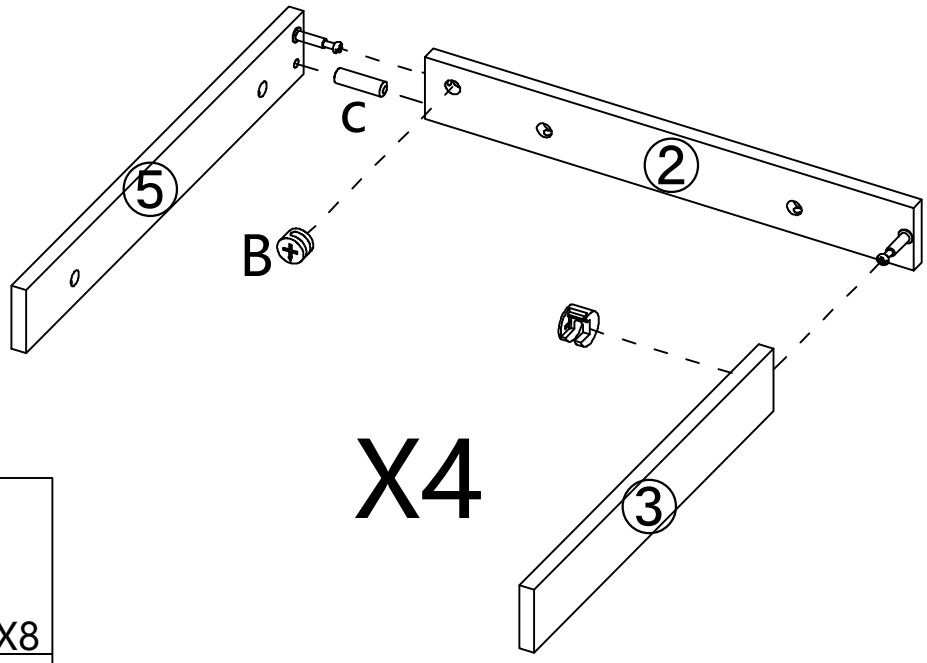STEP11



X4

B




ϕ15*12mm X8

C

ϕ8*40mm X4

STEP12

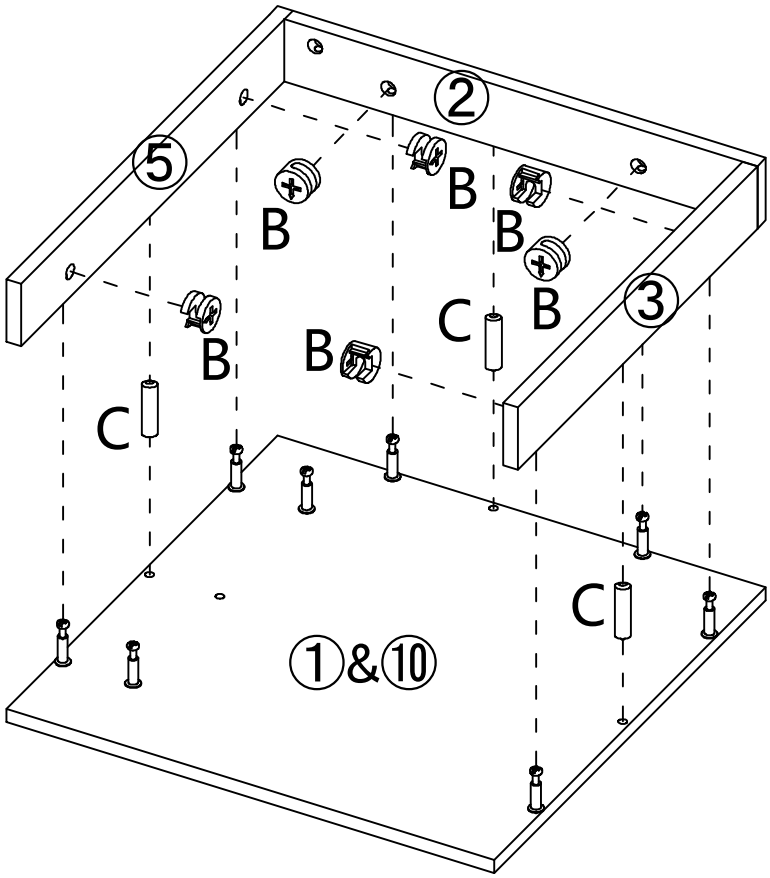

X4

B




ϕ15*12mm X24

C

ϕ8*40mm X12

STEP13

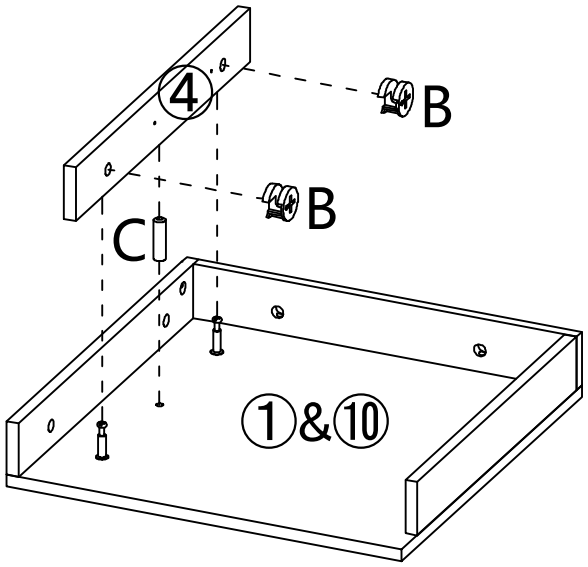

X4


B



ϕ15*12mm

X8


C




ϕ8*40mm

X4


STEP14

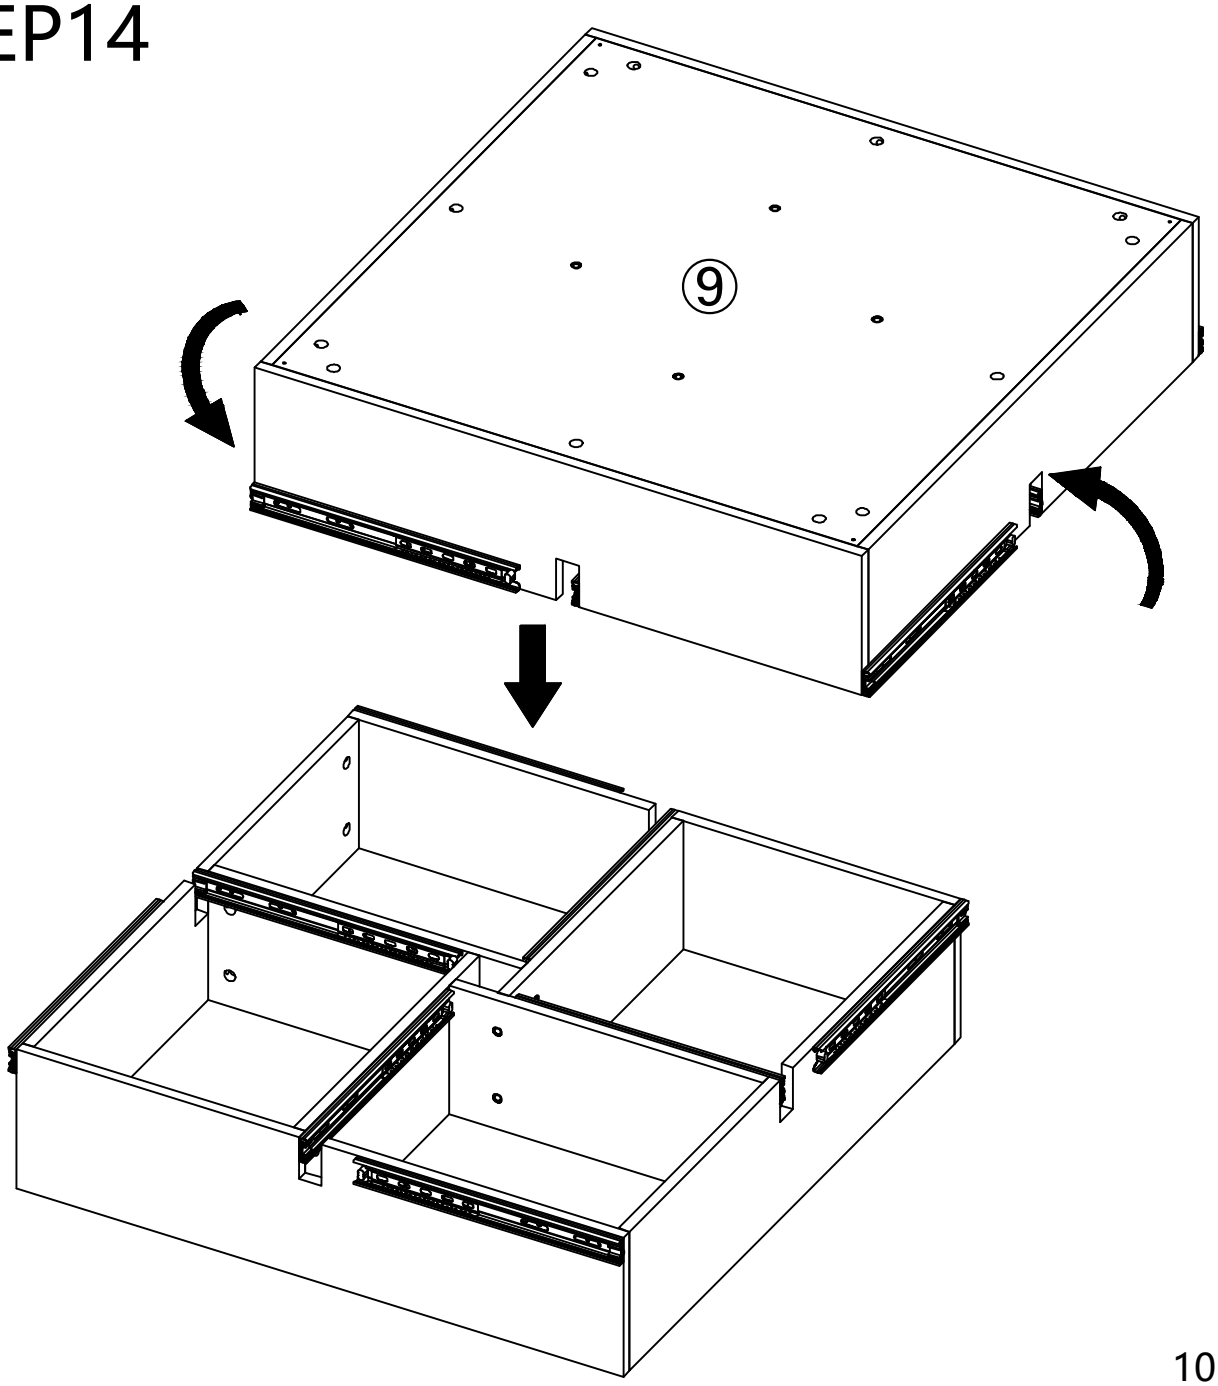

STEP15

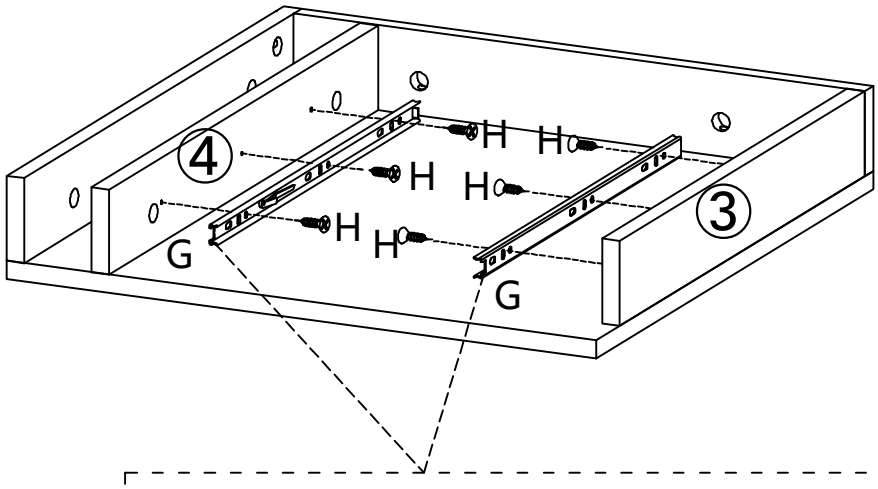

X4

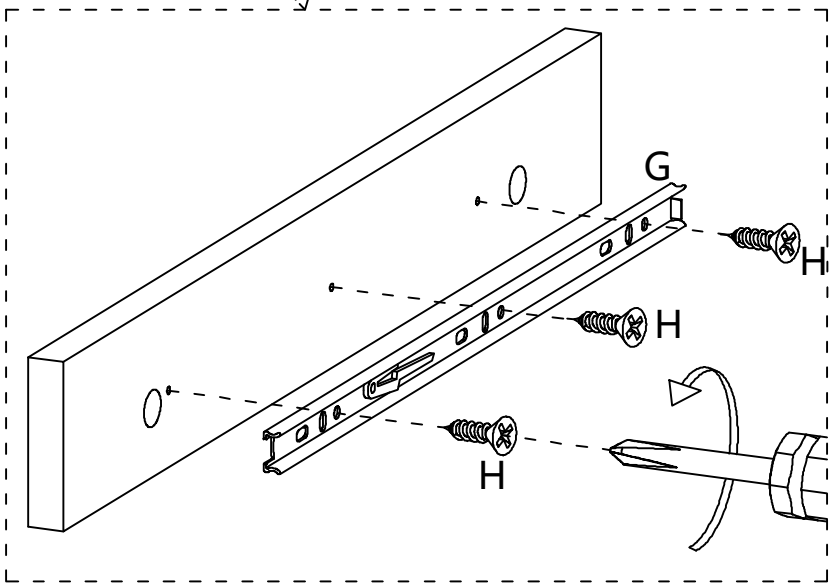

G



X8


H




M4x12mm

X24

STEP16

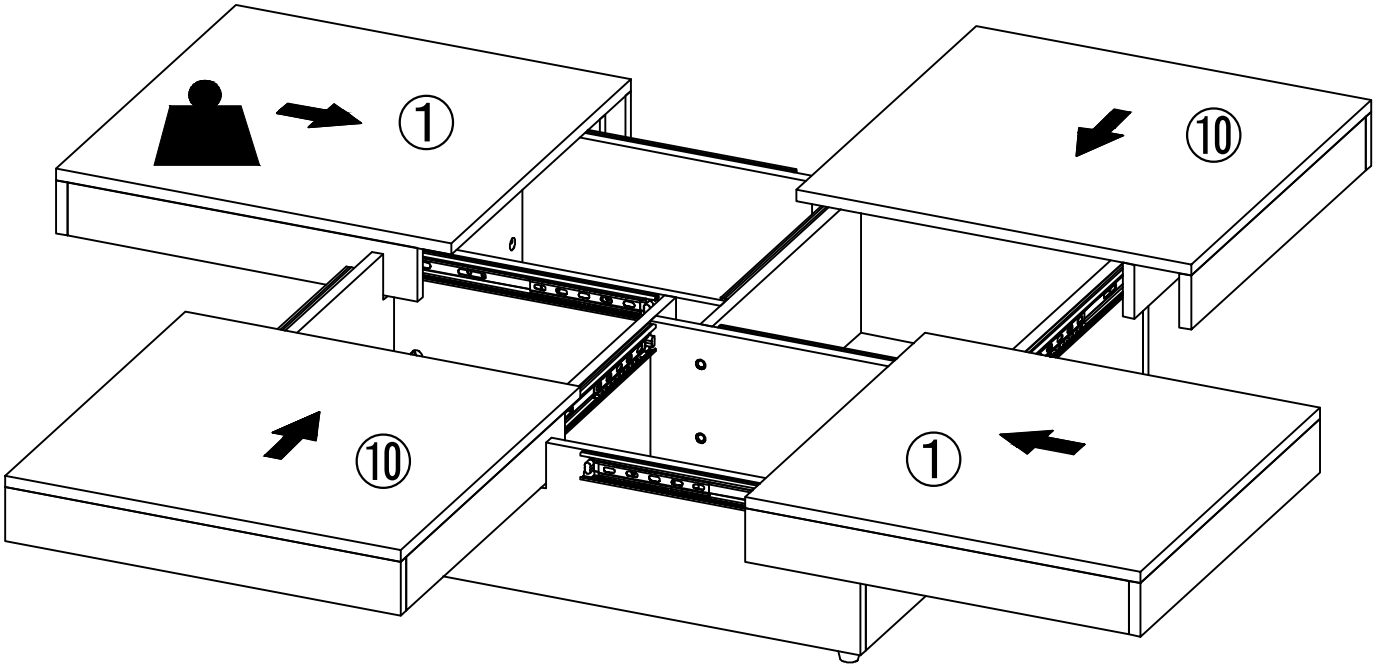

STEP 17

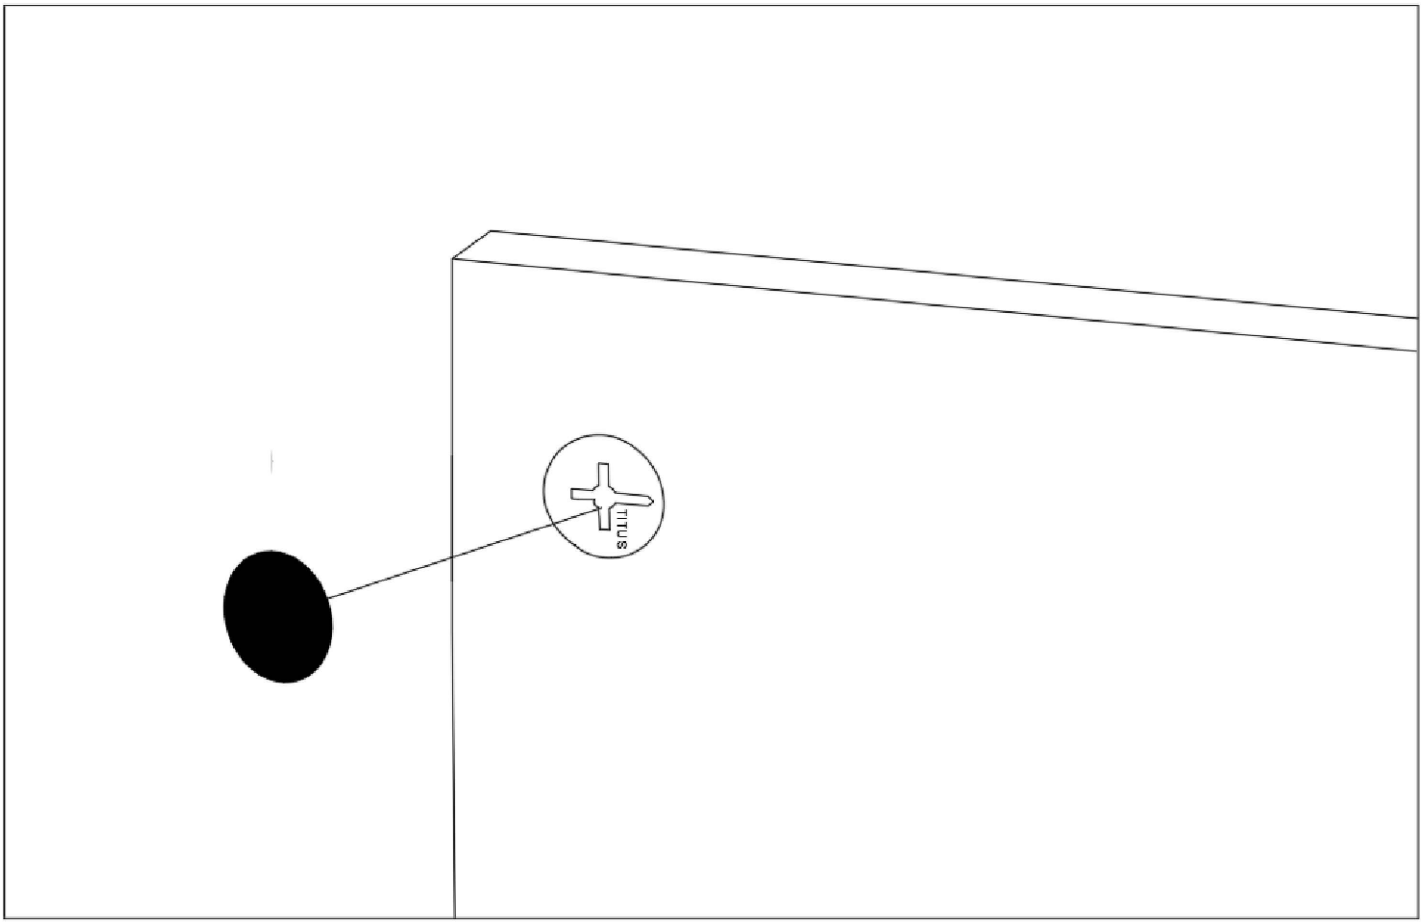

	Kx68pcs