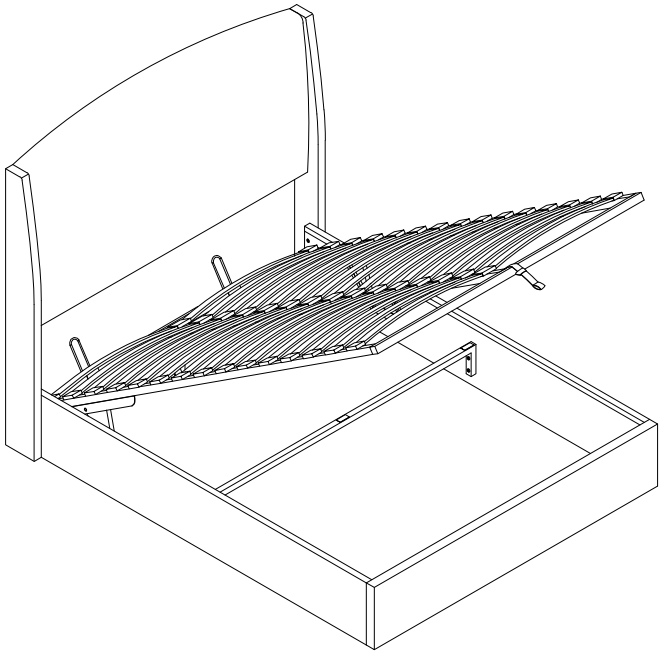
# ASSEMBLY INSTRUCTION

ITEM NUMBER: BH028
SIZE: Full/Queen





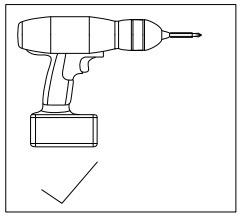
Please TEAR OFF this shrink film from side!
DO NOT USE CUTTER!

## IMPORTANT NOTE

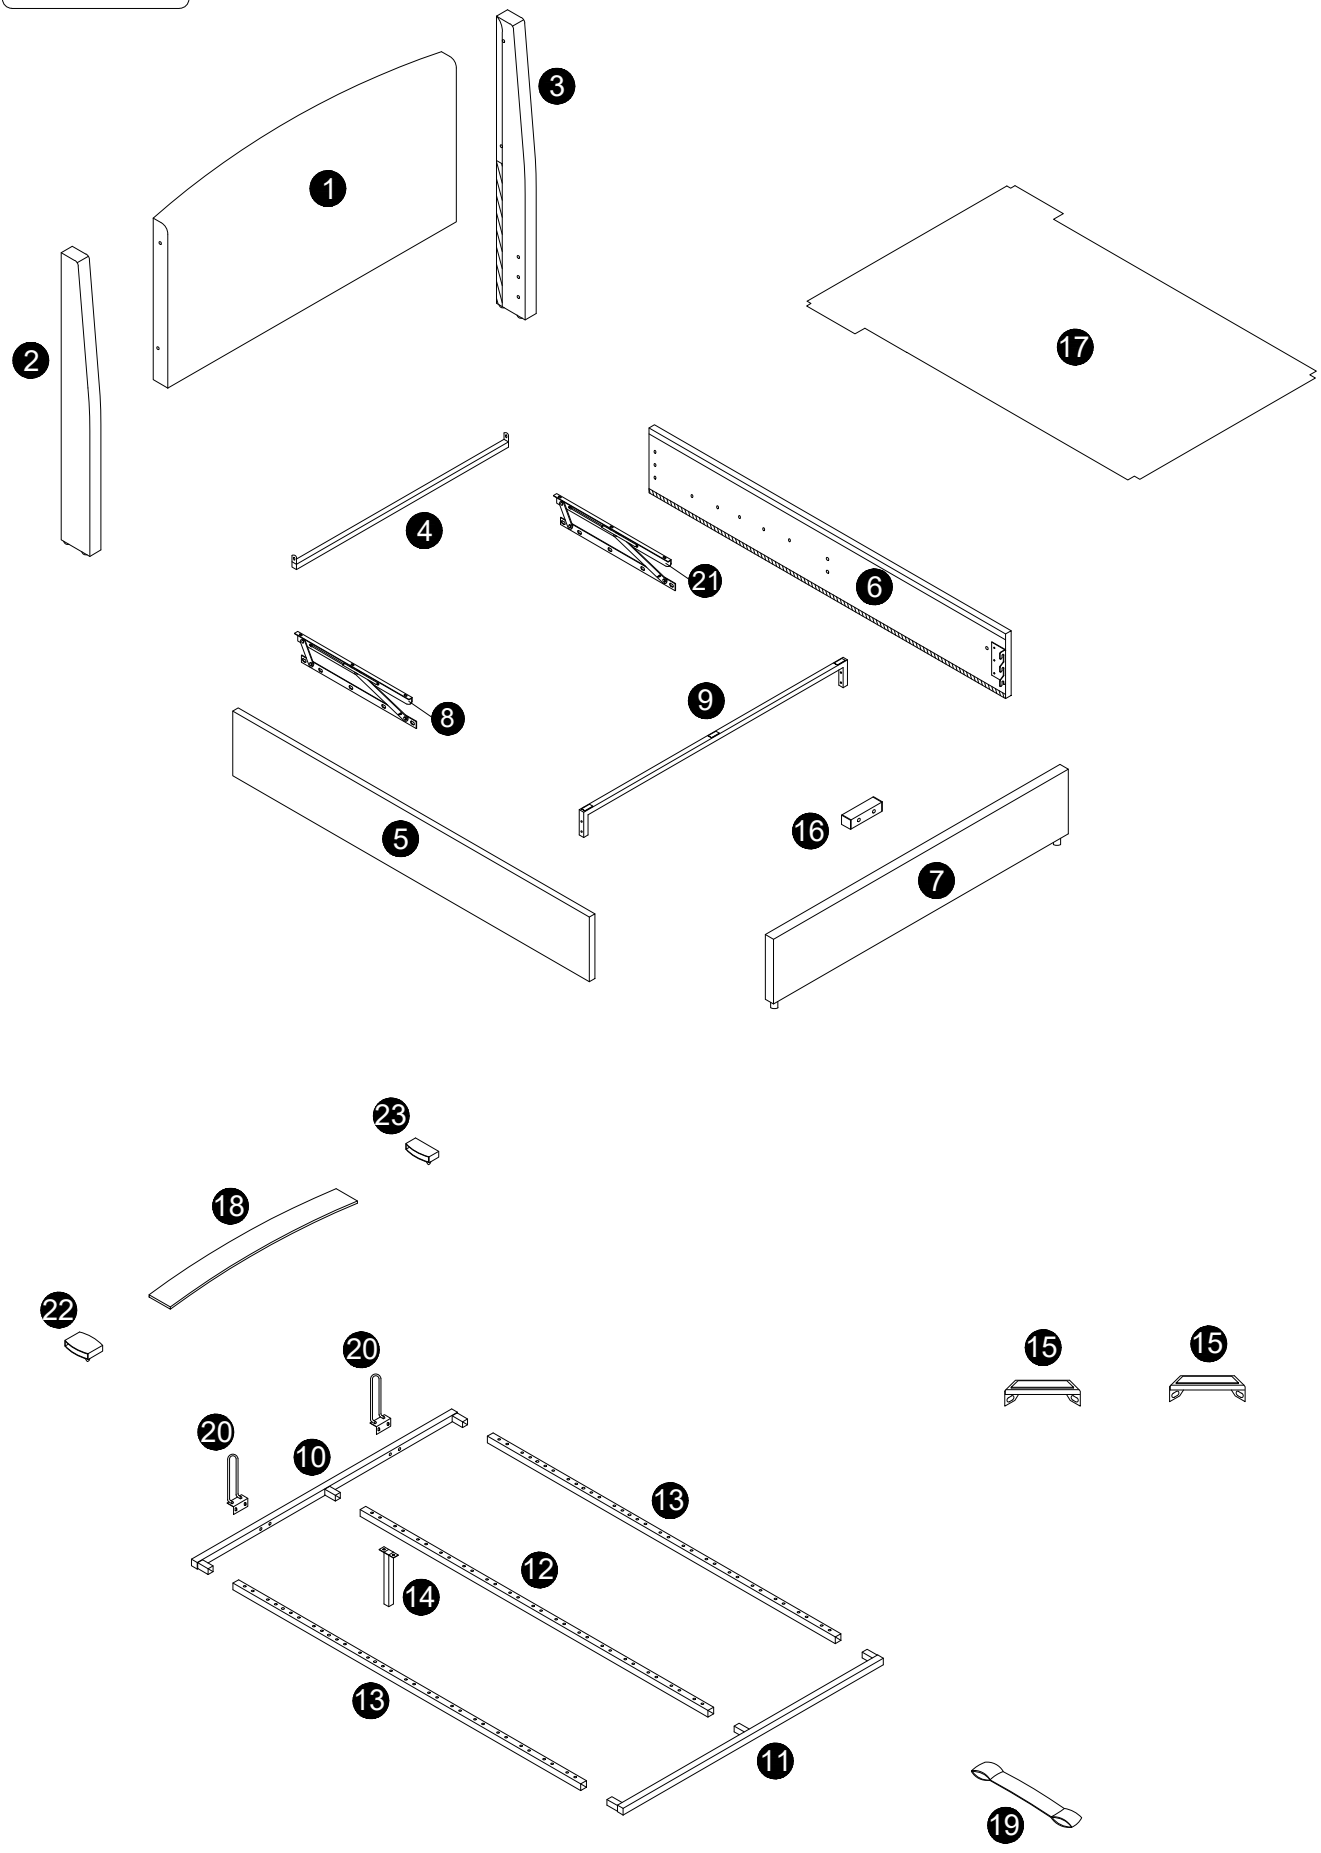
1. For the protection of your furniture, place all parts on a clean and smooth surface to prevent any damage.
2. Keep fittings out of children's reach and keep children well away from construction area.
3. When moving your assembled bed. it is best to lift the bed and never to drag it.
4. Do not use this product if parts are missing, damaged or worn.
5. This product should only be used on firm, level ground.
6. Please periodically check all fittings and re-tighten as necessary.
7. Do not use the bed unless all bolts and screws are firmly secured.
8. For further assistance, please provide a screenshot of your order and contact us via email at support@velocavabed.com



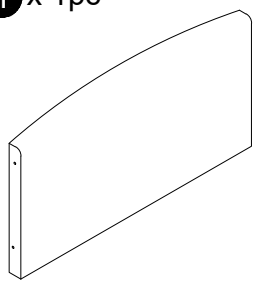
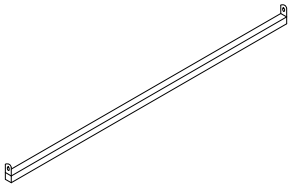
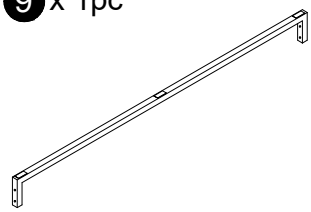
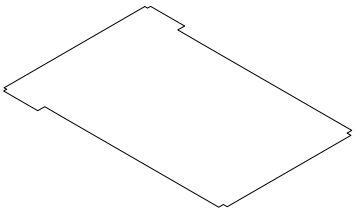
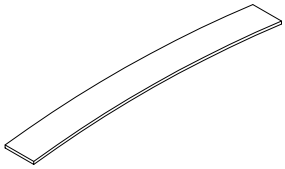
Minimum two person assembly



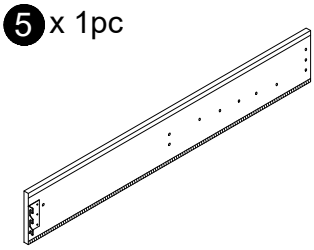
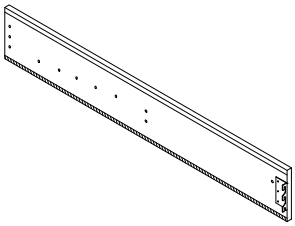
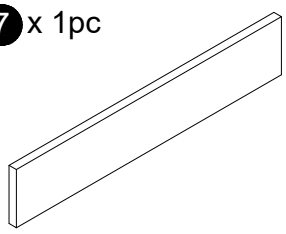
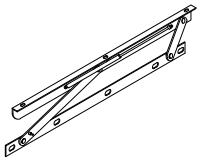
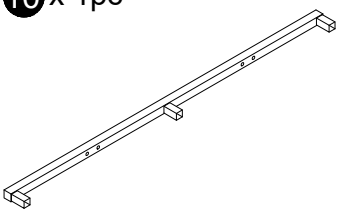
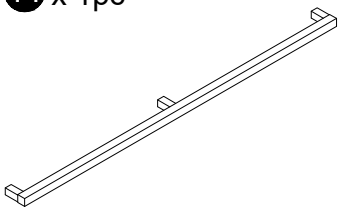
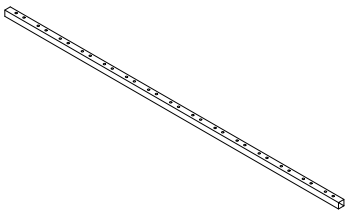
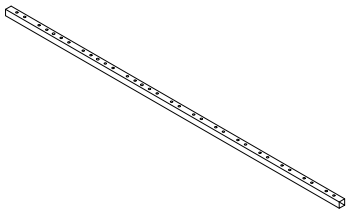




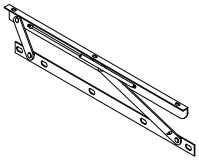

PART LIST



## Components of Carton A

| | | | |
|---|---|---|---|
| 1 x 1pc  | 2 x 1pc  | 3 x 1pc  | 4 x 1pc  |
| 9 x 1pc  | 17 x 1pc  | 18 Full Size x 28pcs<br>Queen Size x 30pcs  | |


## Components of Carton B

| | | | |
|---|---|---|---|
| 5 x 1pc  | 6 x 1pc  | 7 x 1pc  | 8 x 1pc  |
| 10 x 1pc  | 11 x 1pc  | 12 x 1pc  | 13 x 2pcs  |
| 14 x 1pc  | 15 x 2pcs  | 16 x 1pc  | 19 x 1pc  |
| 20 x 2pcs  | 21 x 1pc  | 22 Full Size x 14pcs<br>Queen Size x 15pcs  | 23 Full Size x 28pcs<br>Queen Size x 30pcs  |

**Please ensure to thoroughly inspect the small inner cardboard box containing the hardware, which are tied with a red string, before disposing of the box.**

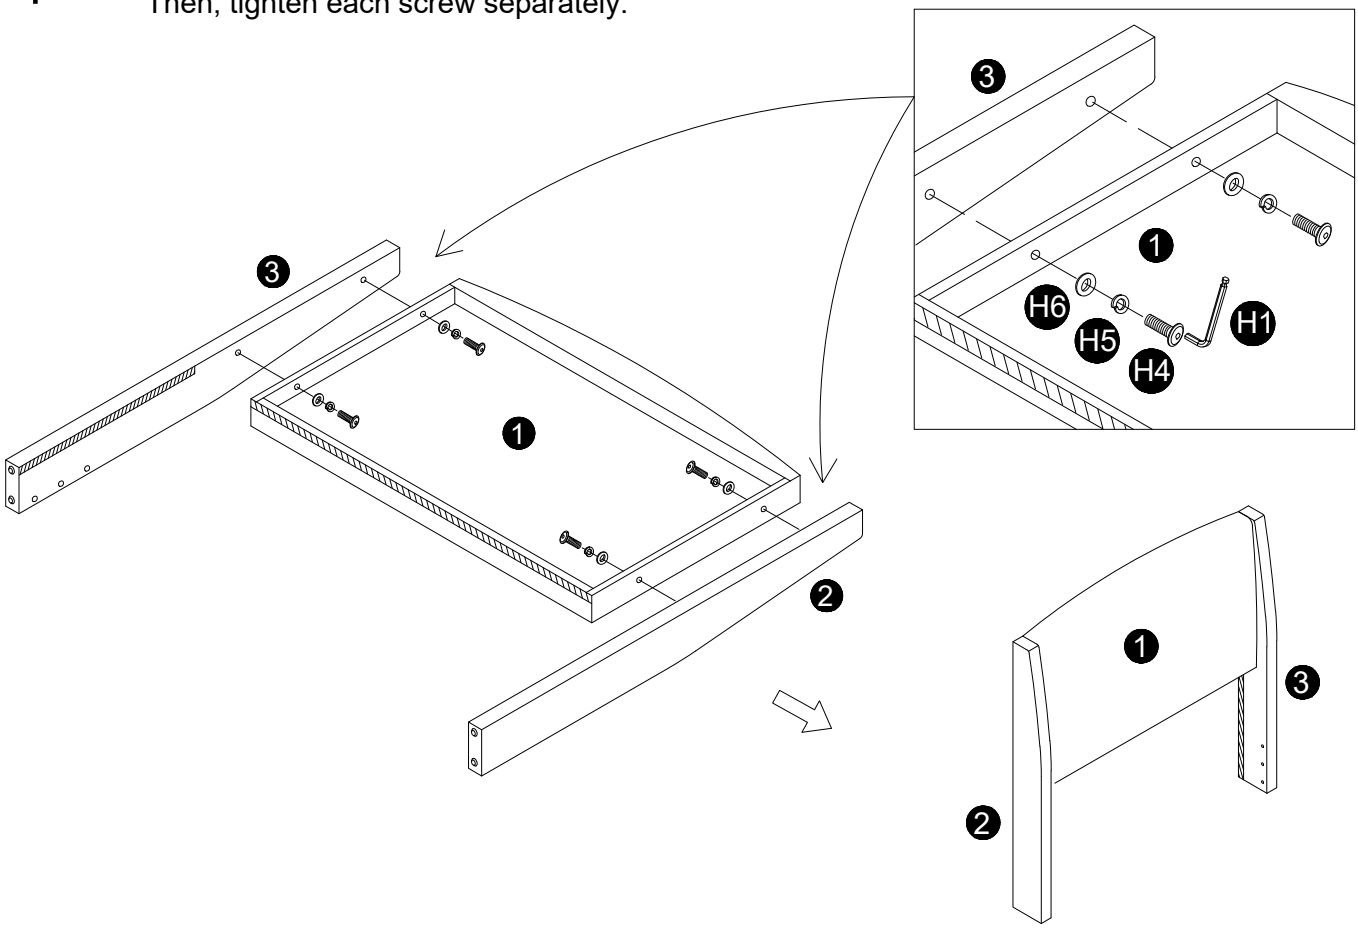
HARDWARE LIST

**Components of Carton B**

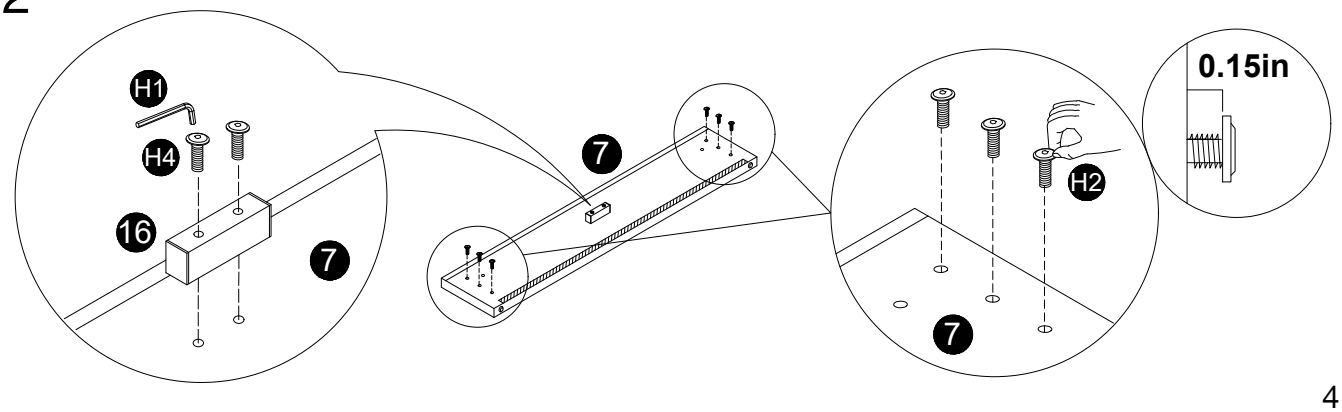
| | | | |
|---|---|---|---|
|  H1 M5 x 1pc |  H2 M8x25mm x 38pcs |  H4 M8x50mm x 22pcs |  H5 M8 x 10pcs |
|  H6 M8x22mm x 10pcs |  H7 M8 x 6pcs |  H8 M14 x 1pc | |

1

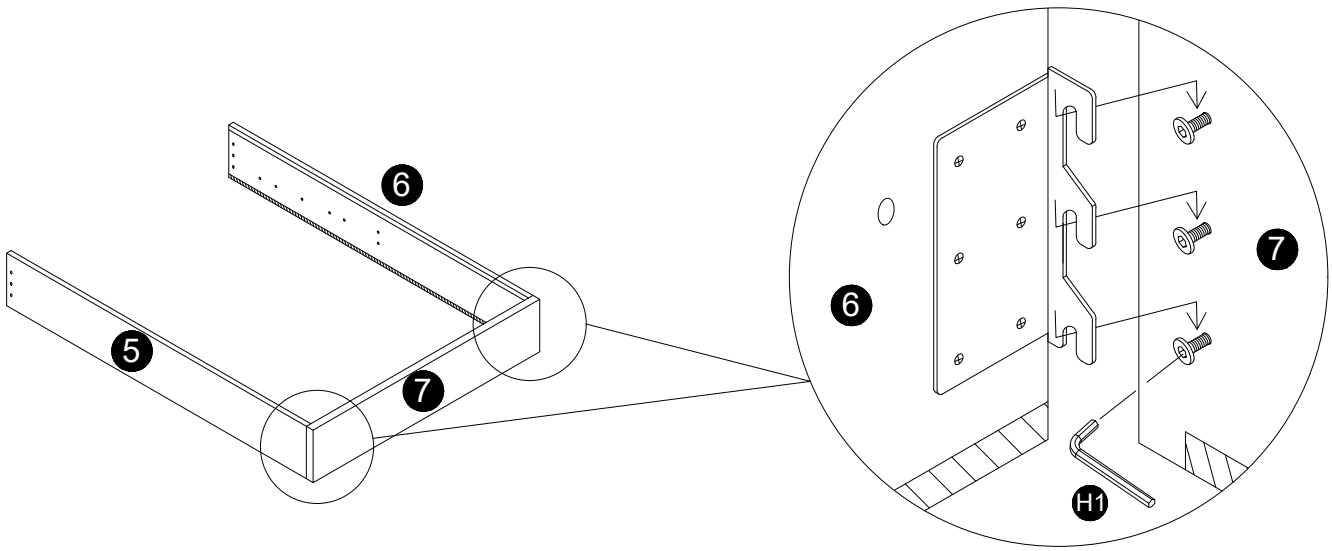
As shown in the diagram, align the screws with the corresponding holes and pre-fix them. Then, tighten each screw separately.



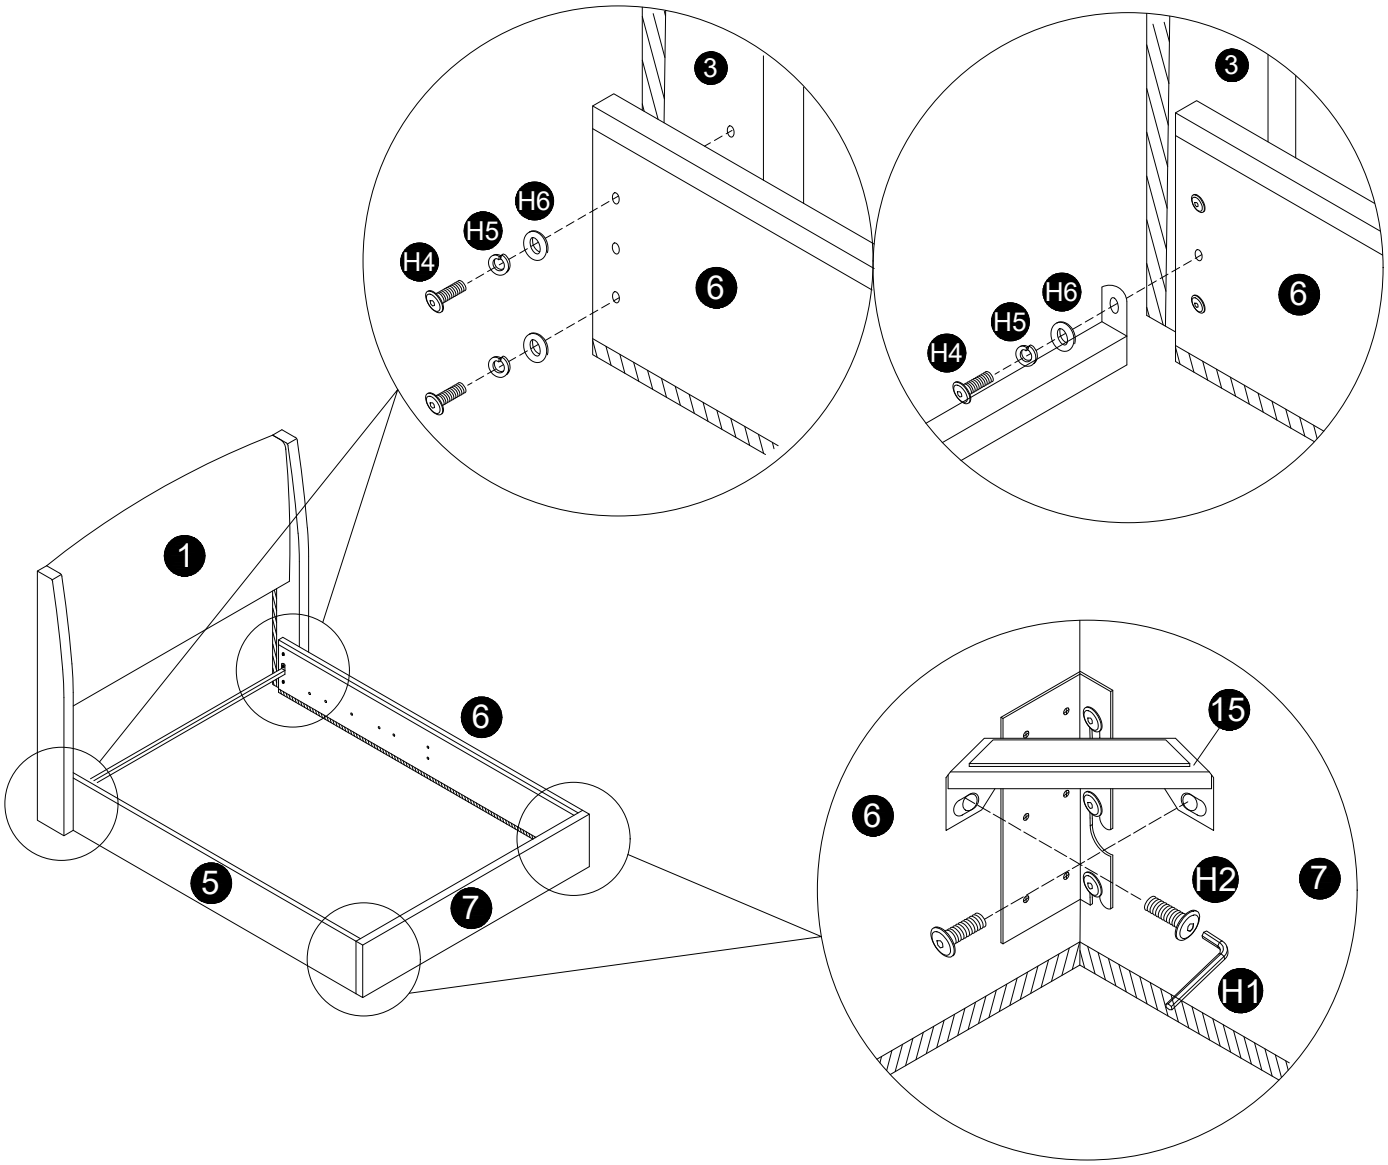

2



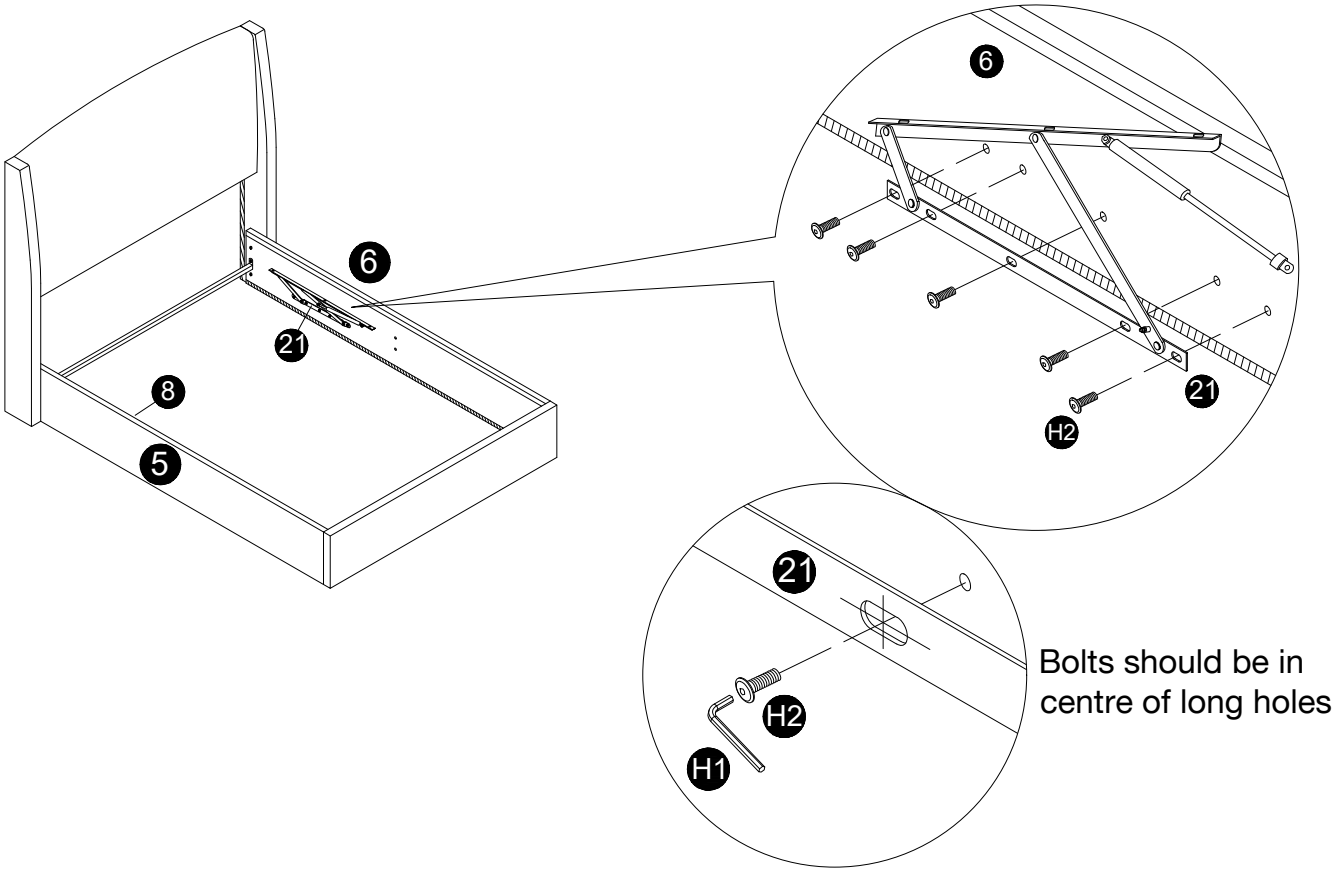
3




4 As shown in the diagram, align the screws with the corresponding holes and pre-fix them. Then, tighten each screw separately.



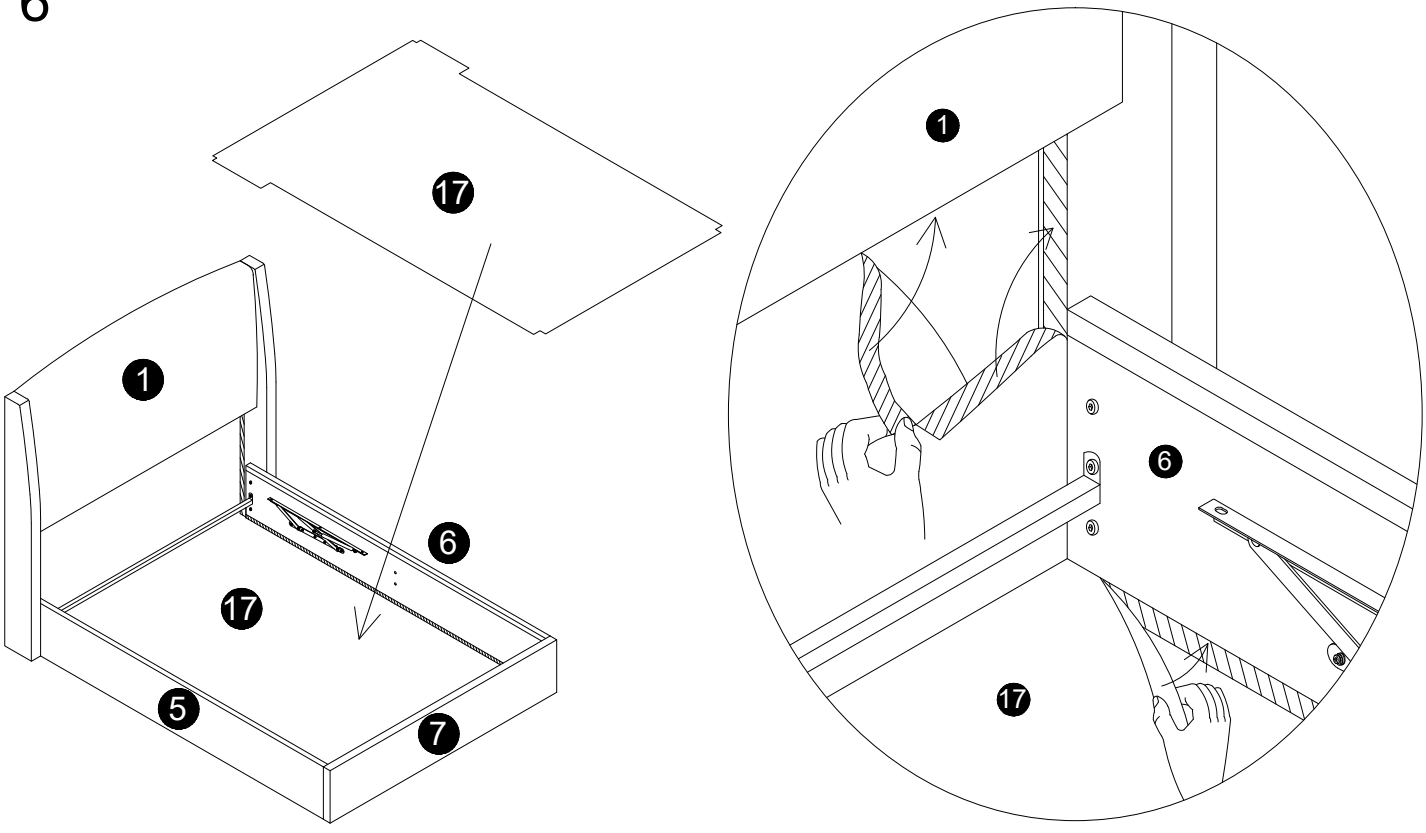
5



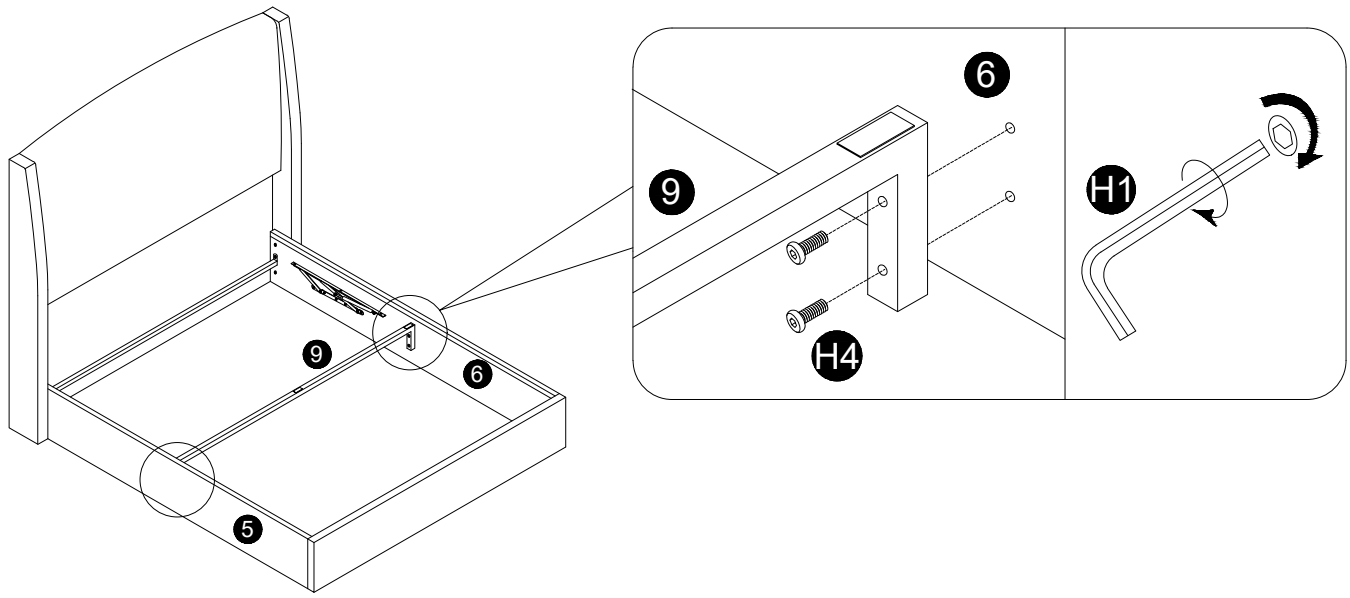

Bolts should be in centre of long holes

6

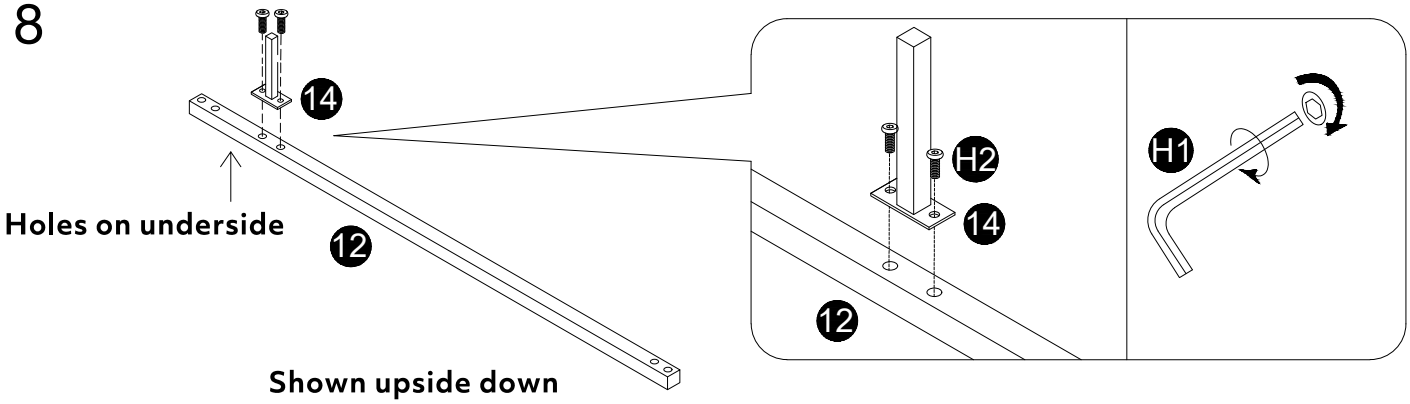
Locate fabric base into position using the hook and loop strips around the inside of the frame.



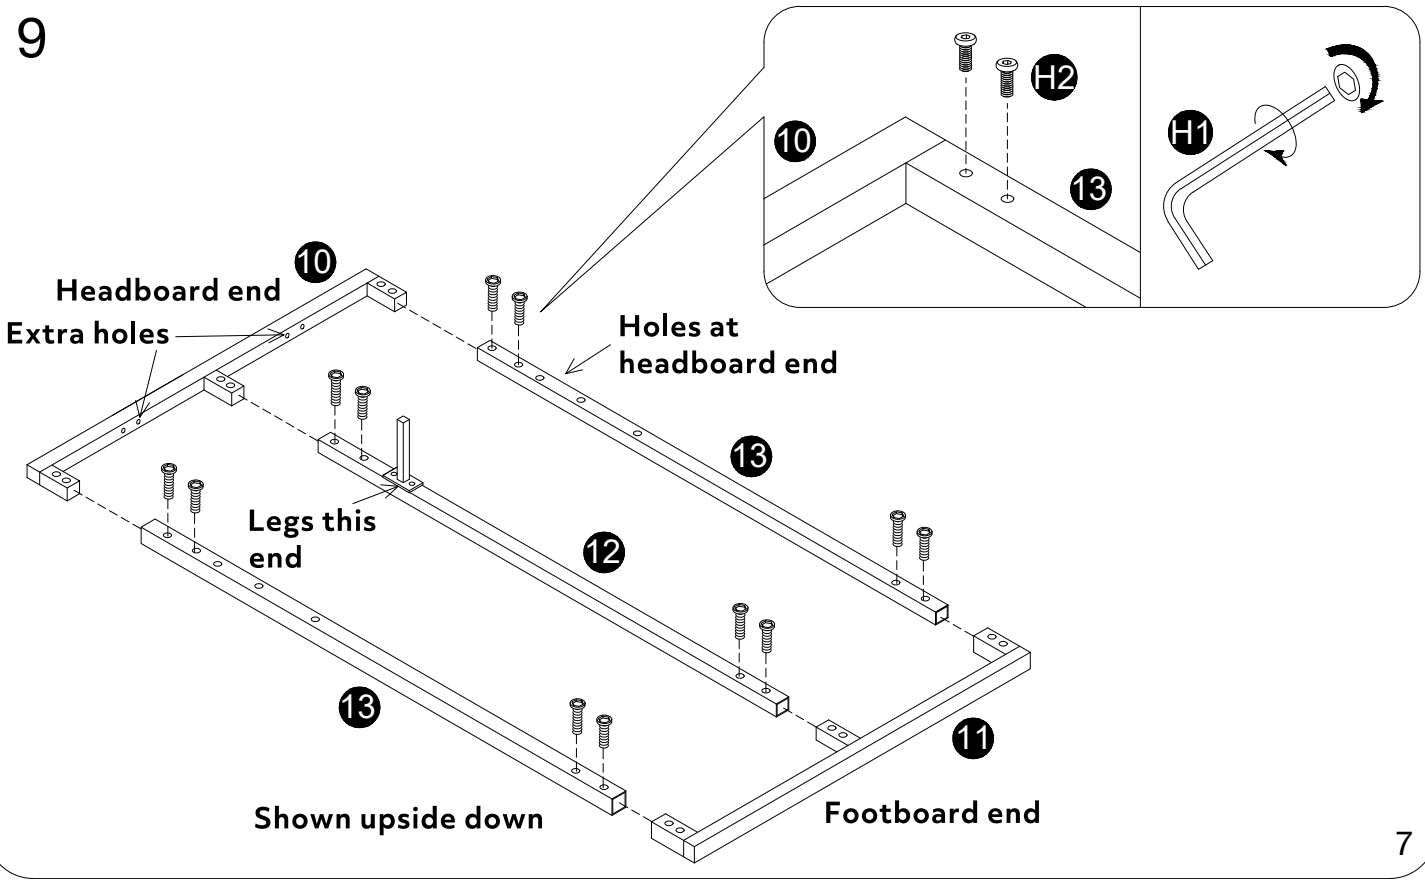
7


6
9
H1
H4
9
6
5

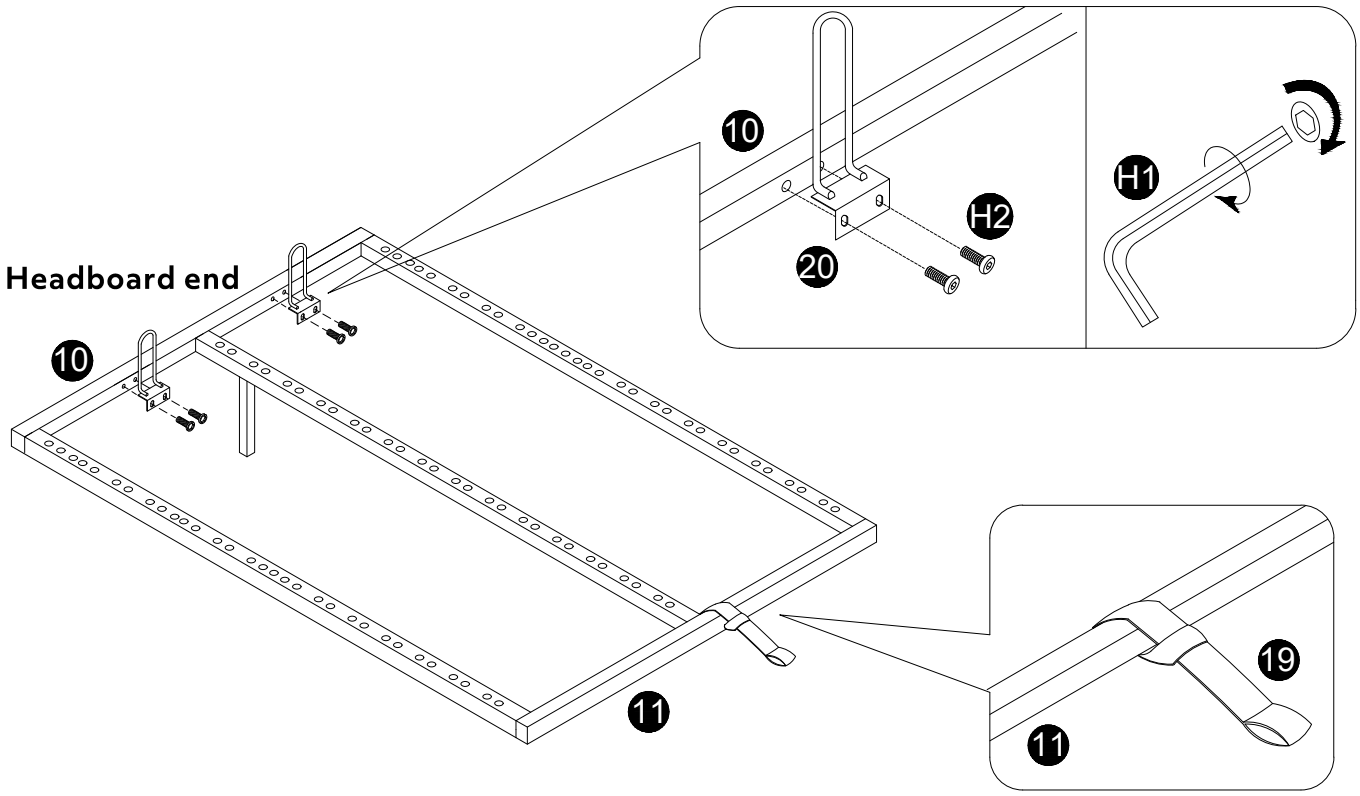
8


14
H2
H1
Holes on underside
12
14
12
Shown upside down

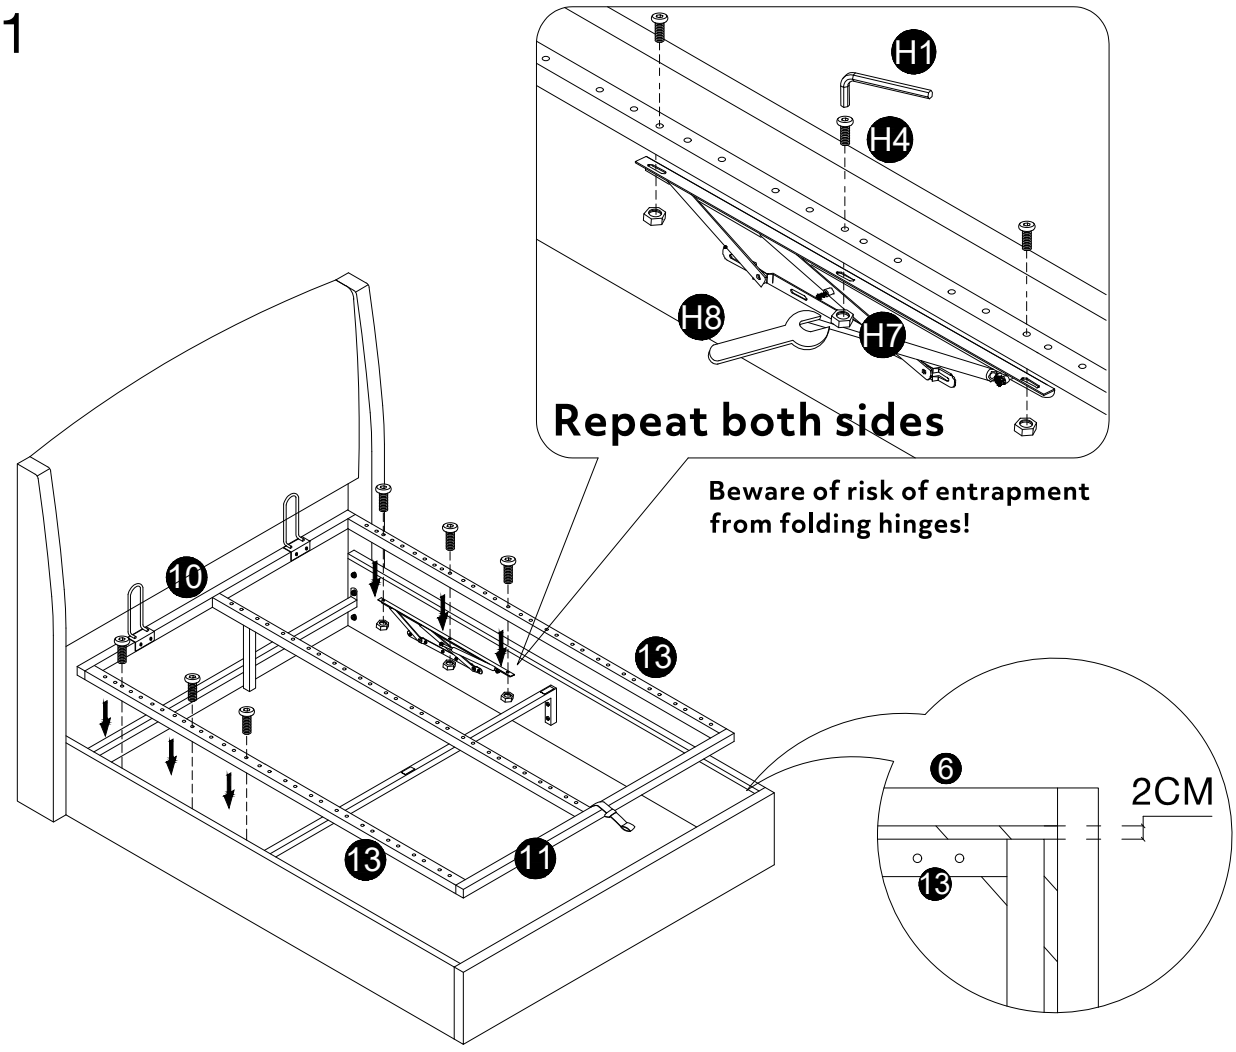
9


H2
10
H1
13
10
Headboard end
Extra holes
Holes at
headboard end
13
Legs this
end
12
13
11
Shown upside down
Footboard end

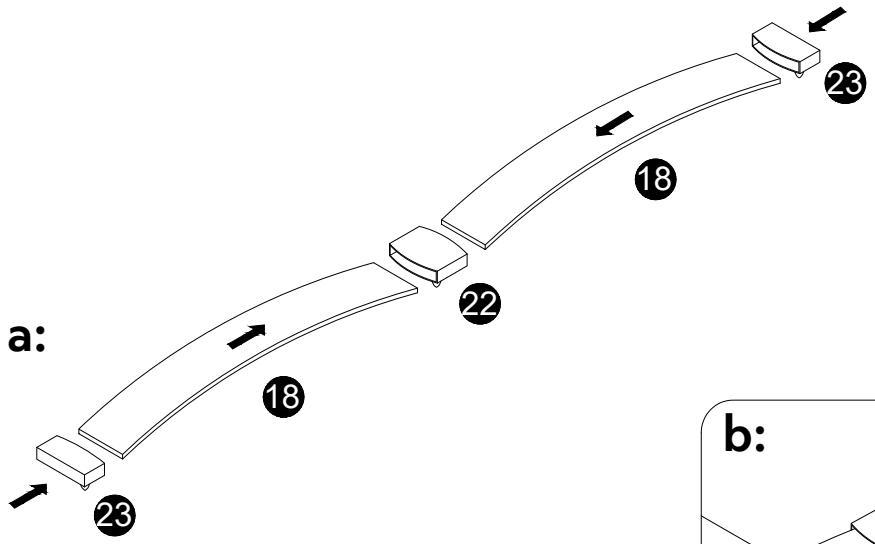
10

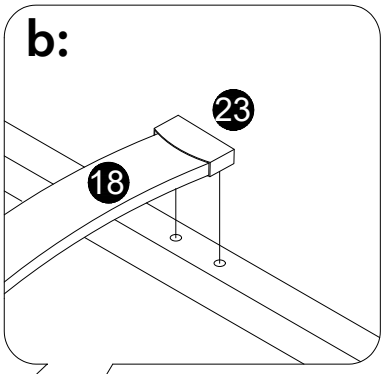

Headboard end
10
H2
20
H1
11
19

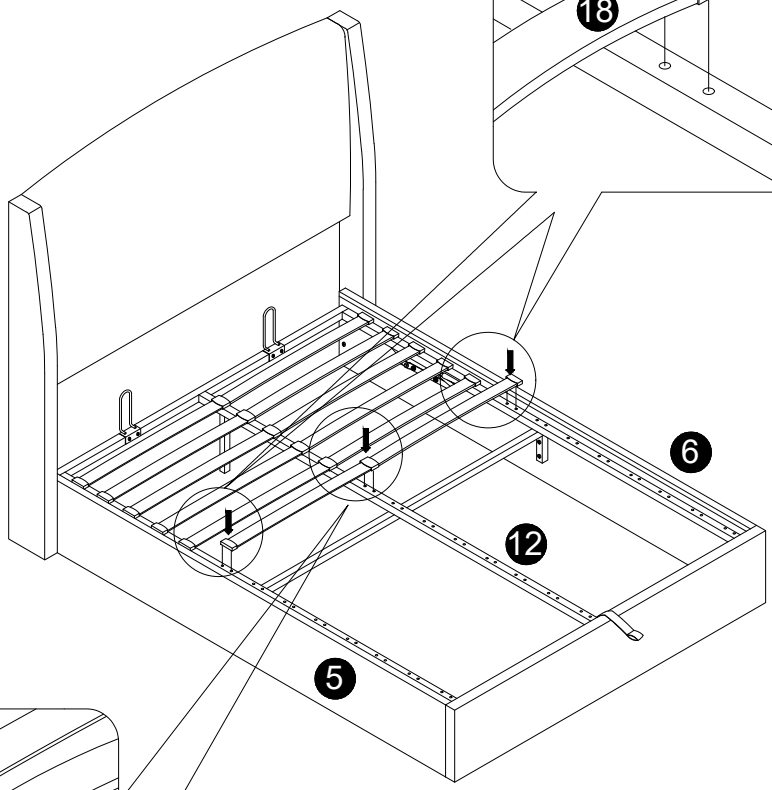
11

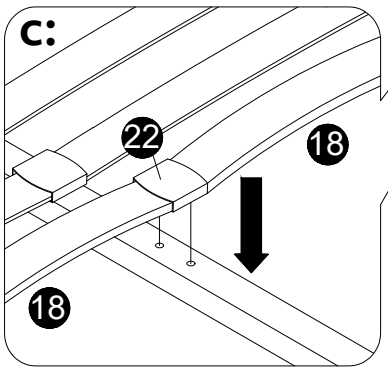

H1
H4
H8
H7
Repeat both sides
Beware of risk of entrapment
from folding hinges!
10
13
13
11
6
2CM
13

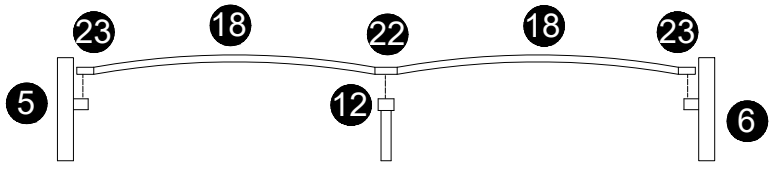
12



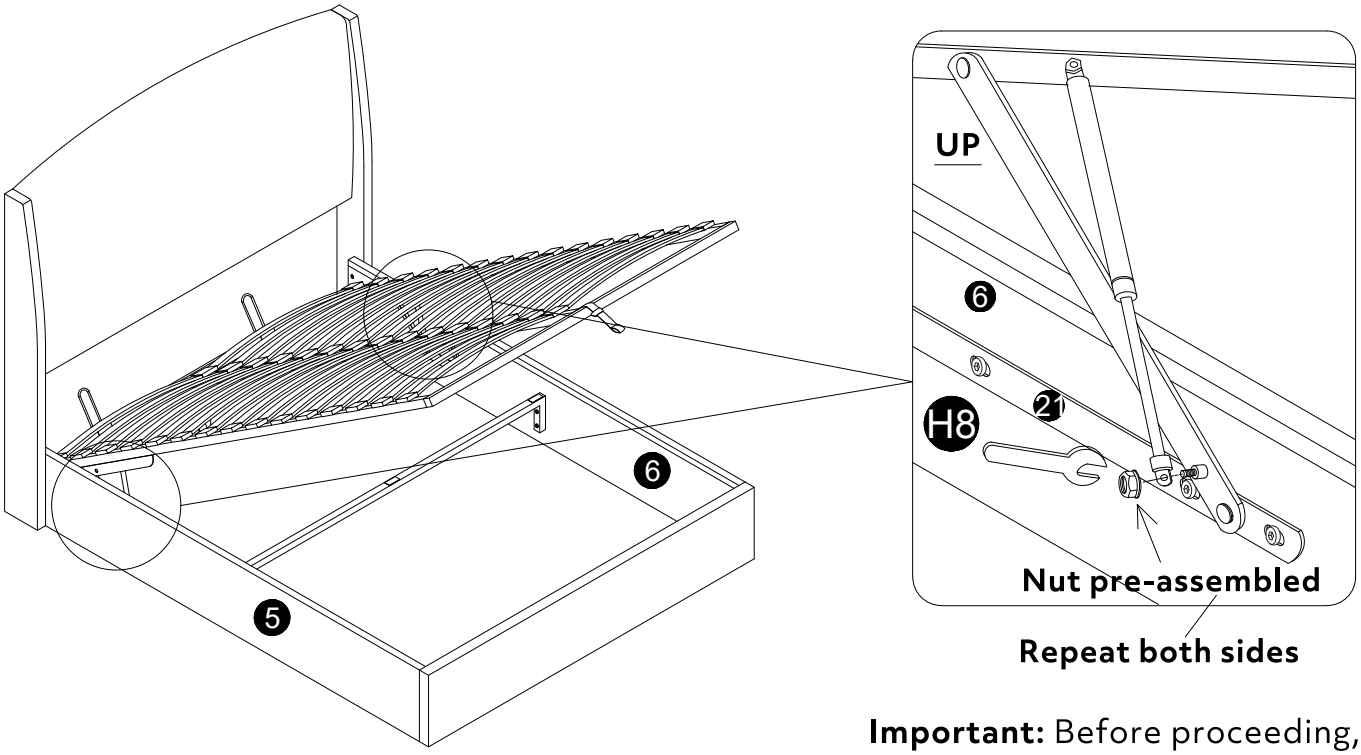




Slats to arch upwards

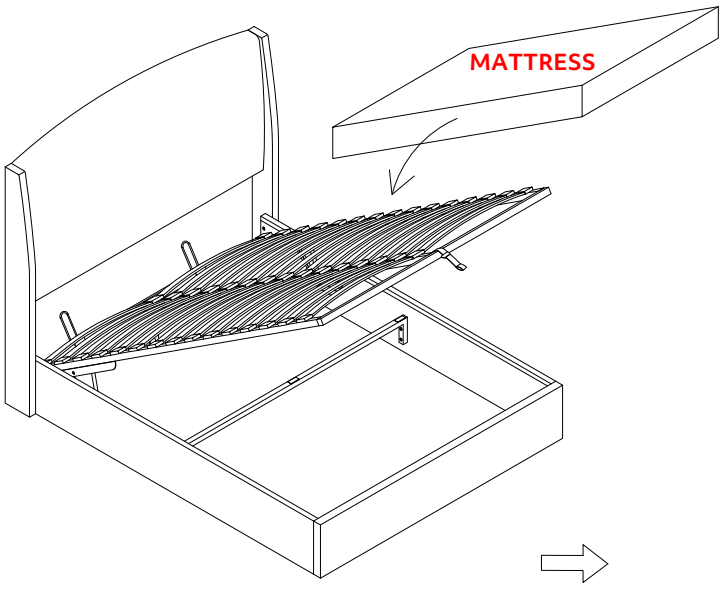
13

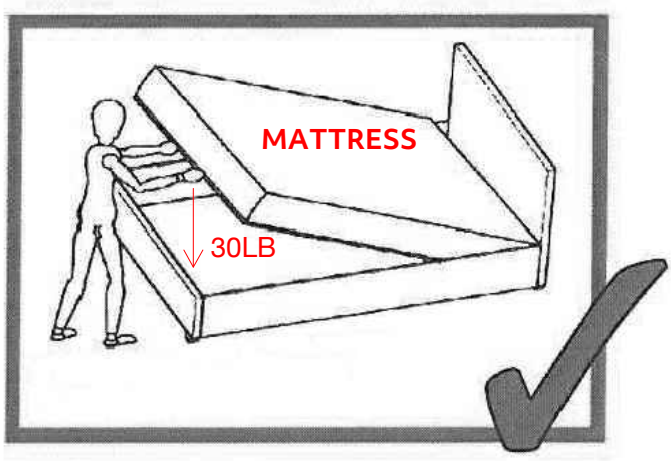
**Warning: Two people required.**
**Frame to be fully supported at all times!**




**Important:** Before proceeding, check and ensure all screws and fixings are fully tightened.

14




Place the mattress on frame & Carefully lower the frame down.
Keep objects/body part & children away from moving parts.