MAGNUSSEN® HOME

Bringing dreams home.

ASSEMBLY INSTRUCTIONS

MODEL : H2491 - 83 Fully Upholstered desk chair


CAUTION: PLEASE READ ALL INSTRUCTIONS BEFORE STARTING THE ASSEMBLY OF THIS PRODUCT. THESE PIECES ARE HEAVY. IN ORDER TO PREVENT PERSONAL INJURY AND ENSURE THAT THIS PRODUCT IS NOT DAMAGED DURING THE ASSEMBLY PROCESS,IT IS STRONGLY RECOMMENDED THAT YOU ENLIST THE ASSISTANCE OF ONE OR MORE PEOPLE.


ATTENTION: VEUILLEZ LIRE TOUTES LES INSTRUCTIONS AVANT DE COMMENCER L'ASSEMBLAGE DE CE PRODUIT. LES PIEOCES SONT LOURDES.POUR EUVITER TOUTE BLESSURE ET POUR VOUS ASSURER QUE LE PRODUIT N'EST PAS ENDOMMAGE' PENDANT L'ASSEMBLAGE,NOUS VOUS RECOMMANDONS DE FAIRE APPEL AO UNE OU PLUSIEURS AUTRES PERSONNES.

CUIDADO: FAVOR DE LEER TODAS LAS INSTRUCCIONES ANTES DE ENSAMBLAR SU PRODUCTO. ESTAS PIEZAS SON PESADAS. PARA PREVENIR HERIDAS PERSONALES Y ASEGURAR QUE SU PRODUCTO NO SEA DAN ADO MIENTRAS ES ENSAMBLADO, SE RECOMIENDA LA ASISTENCIA DE UNA O MAUS PERSONAS.

WARNING.....PROTECTIVE GLIDE IS PLACED UNDER LEGS OF FURNITURE TO RESIST SCRATCHES TO FLOOR SURFACE. SOME FLOOR SURFACES CAN BE EXTRA SENSITIVE TO MARKING. IF YOU ARE NOT SURE CONSULT WITH YOUR DEALER.

AVERTISSEMENT... LES PIEDS DES MEUBLES SONT MUNIS DE PATINS DESTINÉS À PROTÉGER LE PLANCHER. CERTAINS REVÊTEMENTS DE SOL PEUVENT ÊTRE TRÈS FRAGILES. EN CAS DE DOUTE, CONSULTER LE MARCHAND.

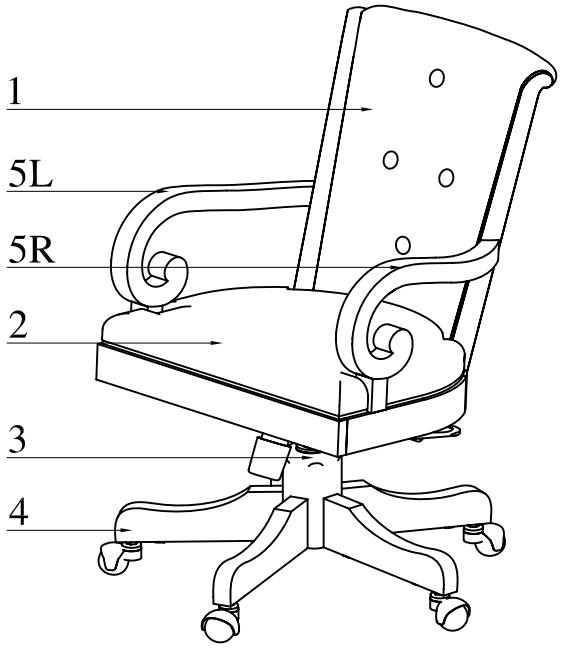

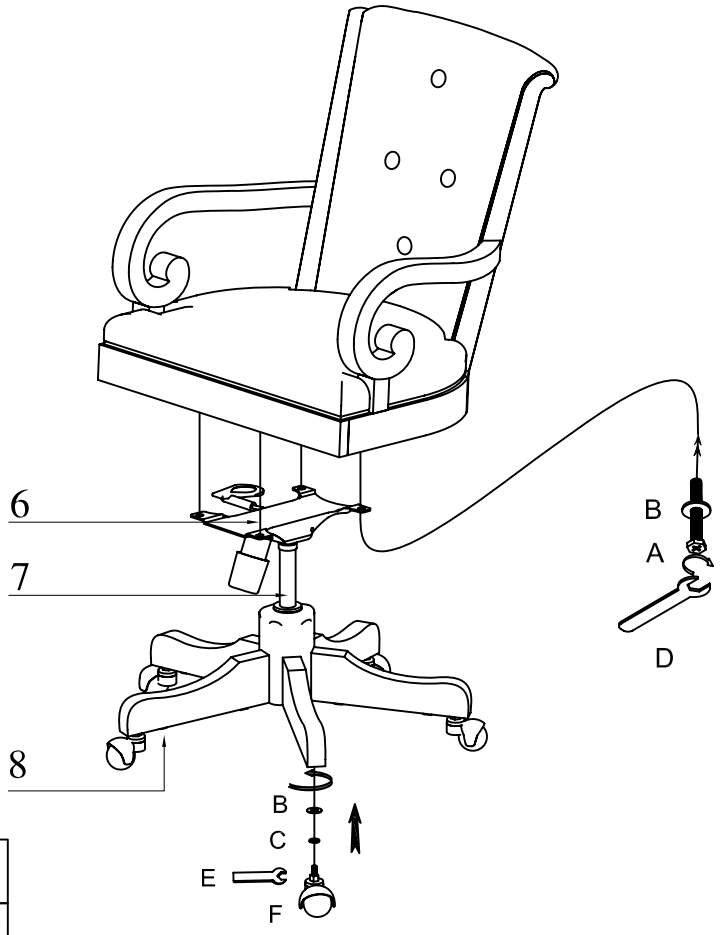

LIST OF PARTS AND HARDWARE

No.	Description			Q'ty
1		Cushion chair back		1
2		Cushion Seat		1
3		Wood cover post		1
4		Wood cover mending plate		5
5		Arm chair		2
6		Upper base		1
7		Cylinder		1
8		Bottom base		1
9		Bolt	Φ1/4"* 32mm	6
10		Flat washer	Φ6/Φ13mm	2
11		Flat washer	Φ6/Φ19mm	4
12		Lock washer	Φ6/Φ9mm	6

LIST OF HARDWARE

No.	Description			Q'ty
A		Bolt	Φ5/16"* 19mm	4
B		Flat washer	Φ9/Φ22mm	9
C		Lock washer	Φ9/Φ11mm	5
D		Wrench	12mm	1
E		Wrench	17mm	1
F		Caster		5