

# DAYBED ONLY WITH BASE FRAME

## ASSEMBLY INSTRUCTION



# ASSEMBLY INSTRUCTIONS

## ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### Warning !


1. Don't attempt to repair modify parts that are broken or defective . Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishment.

## PARTS IDENTIFICATION:

Z


## HARDWARE LIST:

A Back panel

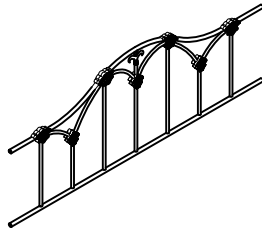


1pc

B Left panel

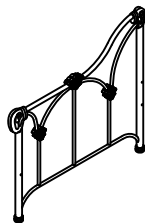


1pc

C Right panel

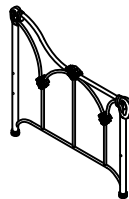


1pc

D Rail

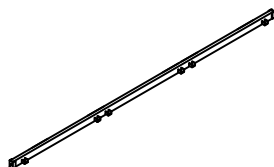

2pcs

E Base frame

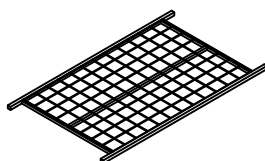


3pcs

NO	DESCRIPTION	FIGURE	QTY
1	BOLT 1/4"x2-1/2"		2pcs
2	BOLT 1/4"x2-1/4"		2pcs
3	BOLT 5/16"x2-1/4"		4pcs
4	BOLT 1/4"x5/8"		12pcs
5	METAL WASHER		12pcs
6	METAL WASHER		4pcs
7	ALLEN WRENCH 4x4MM		1pc
8	ALLEN WRENCH 5x5MM		1pc


## ASSEMBLY

Do not fully tighten all bolts until assembly is complete. This will help all parts to assemble properly.

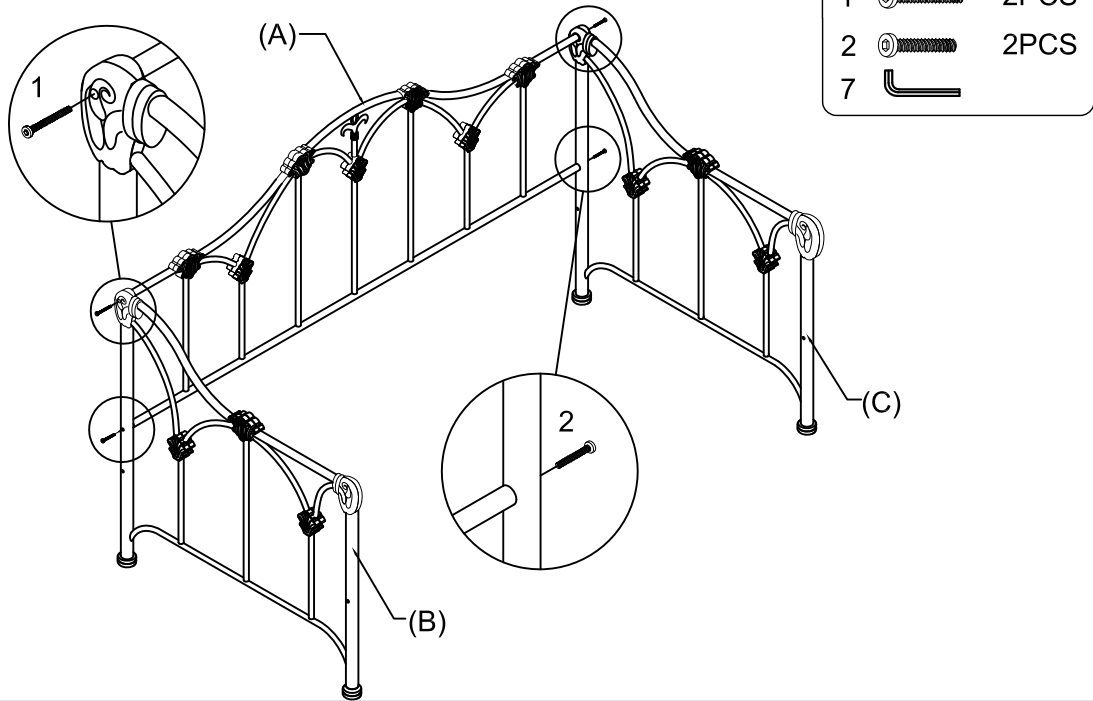


STEP 1: Align and attach the left panel (B) and right panel (C) to the back panel (A) using the bolt(1), bolt(2), tighten with the allen wrench.


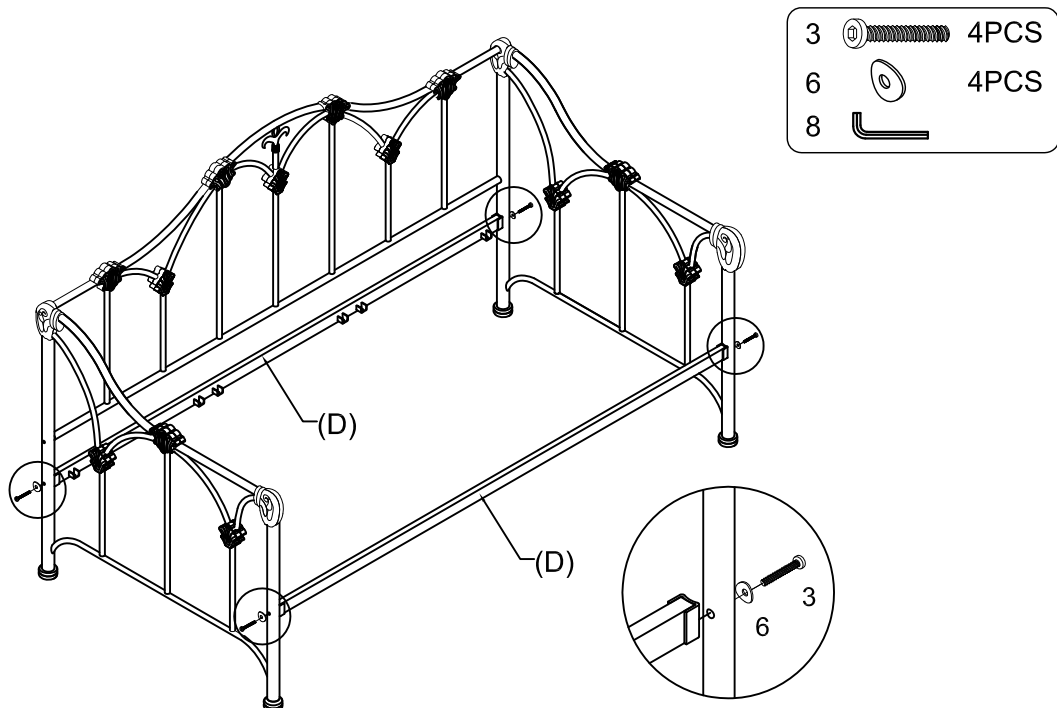


STEP 2: Align and attach the rail (D) to the left and right panel using the bolt (3), washer (6), tighten with the allen wrench.



STEP 3:Put the base frame (E) onto the front and back rail using the bolt(4),washer(5),tighten with allen wrench.

4		12PCS
5		12PCS
7		

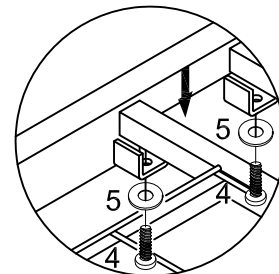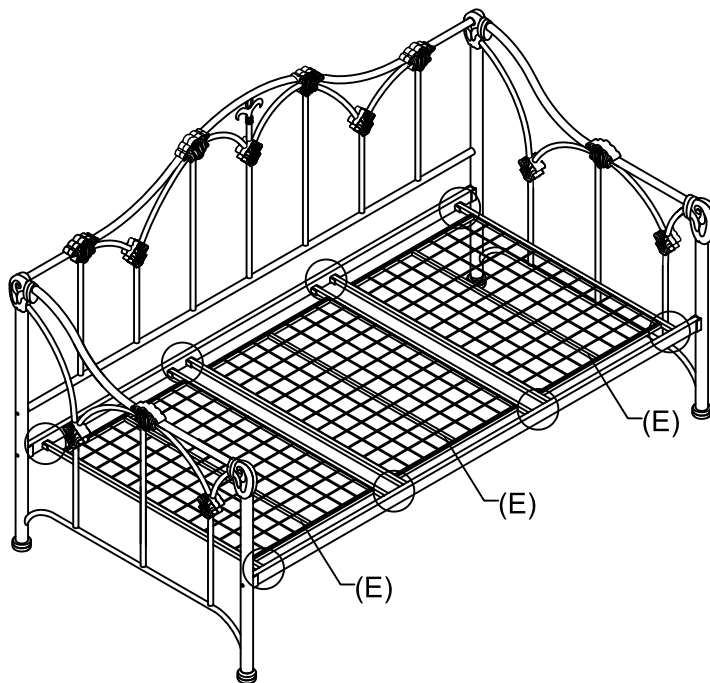

STEP 4:Use the screw and washer to fix the base frame .

