



Assembly Instruction

Item No.:500604-48

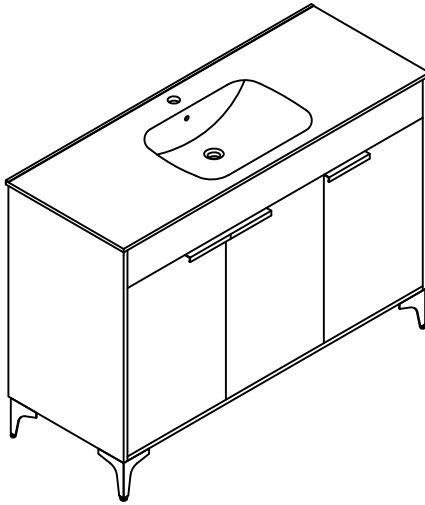

Components

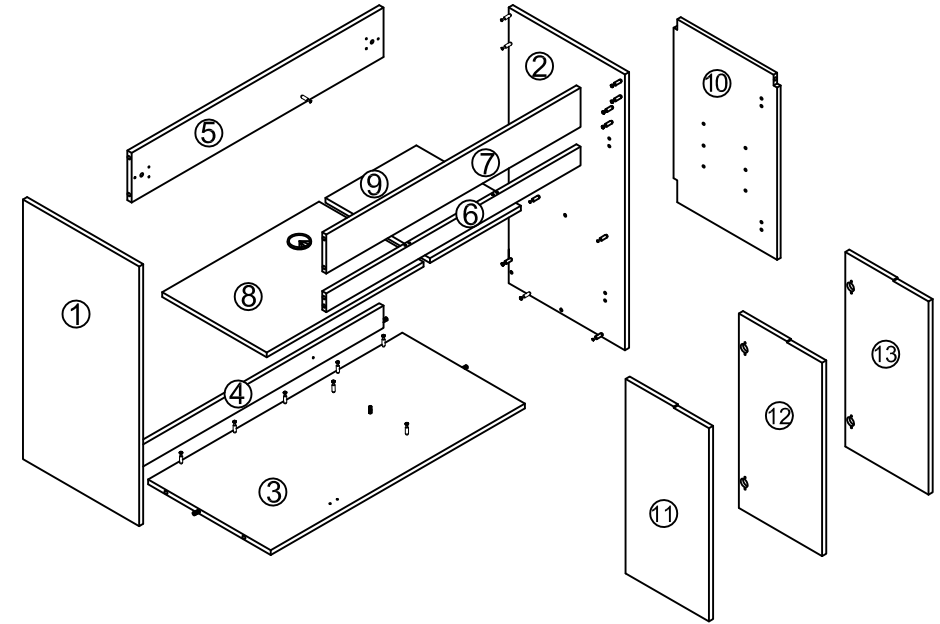


Hardware


NO.	Draw	QTY
A	 Screws Ø4x14mm	64
B	 Two-in-one connector	31
C	 Two-in-one connector	31
D	 Wood plug	7
E	 Bracket (53x70x44mm)	2
F	 Plastic anchor(Ø10mm)	2
G	 Screws for fix on the wall	2
H	 Door stopper	2
I	 Bracket (19x19x35mm)	4

NO.	Draw	QTY
J	 Hinges (Internal hiding)	4
K	 Hinges (Half cover)	2
L	 Handle (Screws Ø4x14mm)	3
M	 Screws Ø4x25mm	1
N	 Movable laminate support	4
O	 Metal Feet	4
P	 Screws M4x14mm	16
Q	 Anti-collision gasket	6
R	 Screwdriver	1

Recommended tools You Will Need-Outils Requis

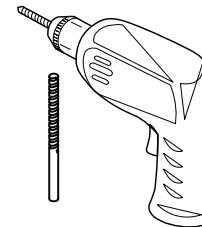

Power drill

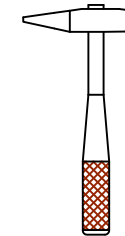

Hammer



Silicone





Pencil





Screwdriver


Step 1

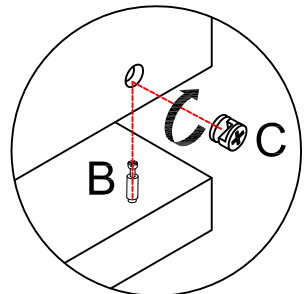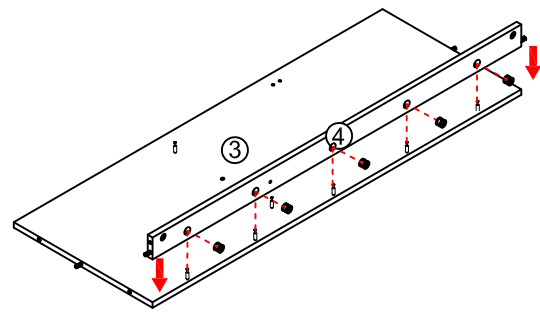

- x5
- x5
- x1


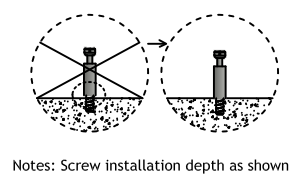
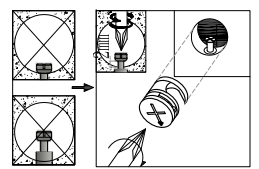


Notes: Screw installation depth as shown

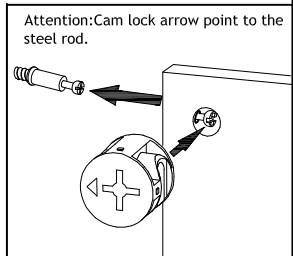

Attention: Cam lock arrow point to the steel rod.




Step 3

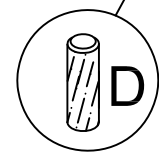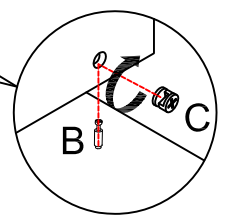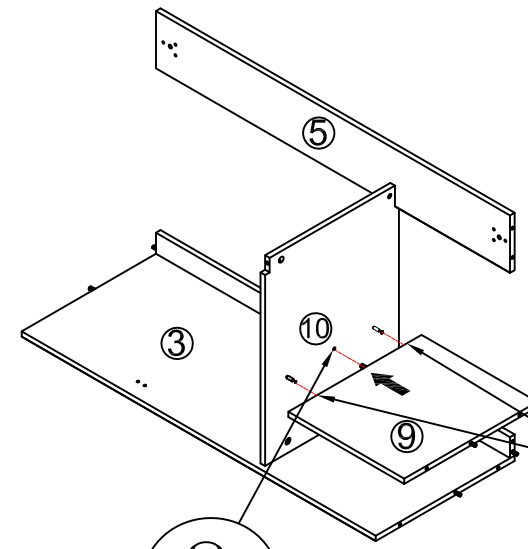



Note: The D parts are used for this hole

- x2
- x2
- x1
- x1

Step 2

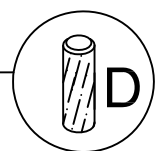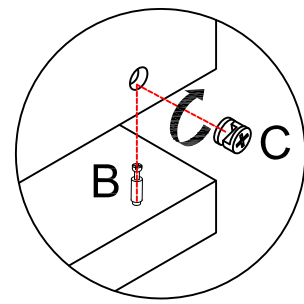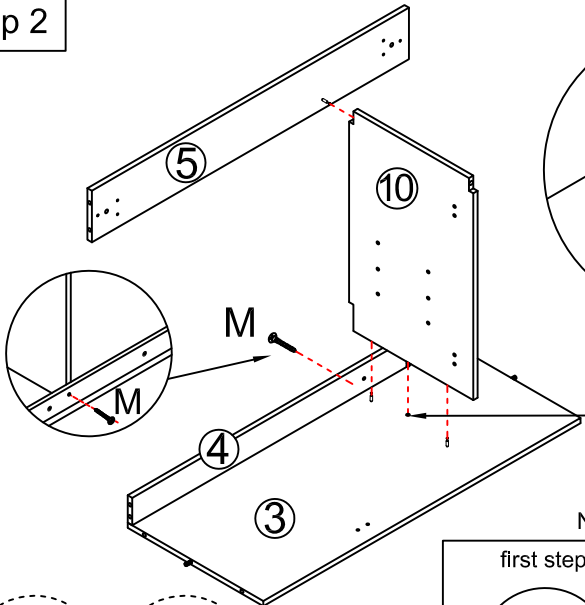

Note: The D parts are used for this hole

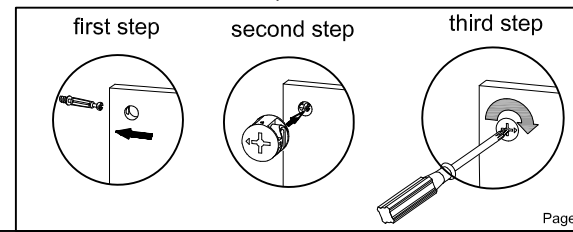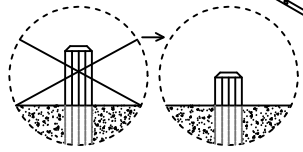



first step

second step

third step


- x3
- x3
- x1
- x1

Step 4

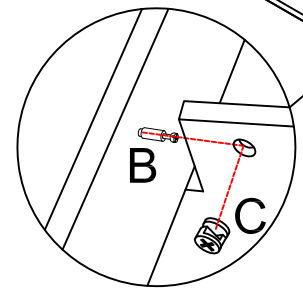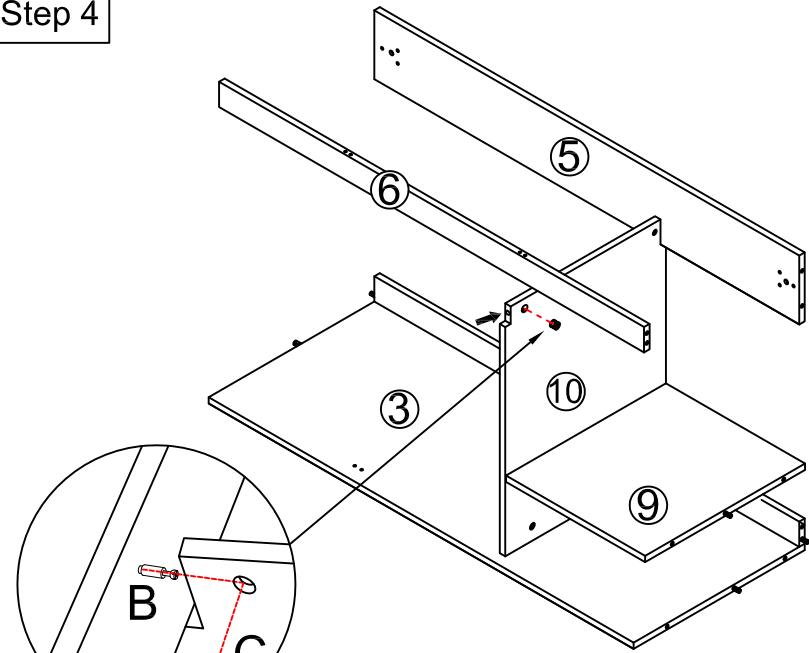

- x1
- x1
- x1


Step 5

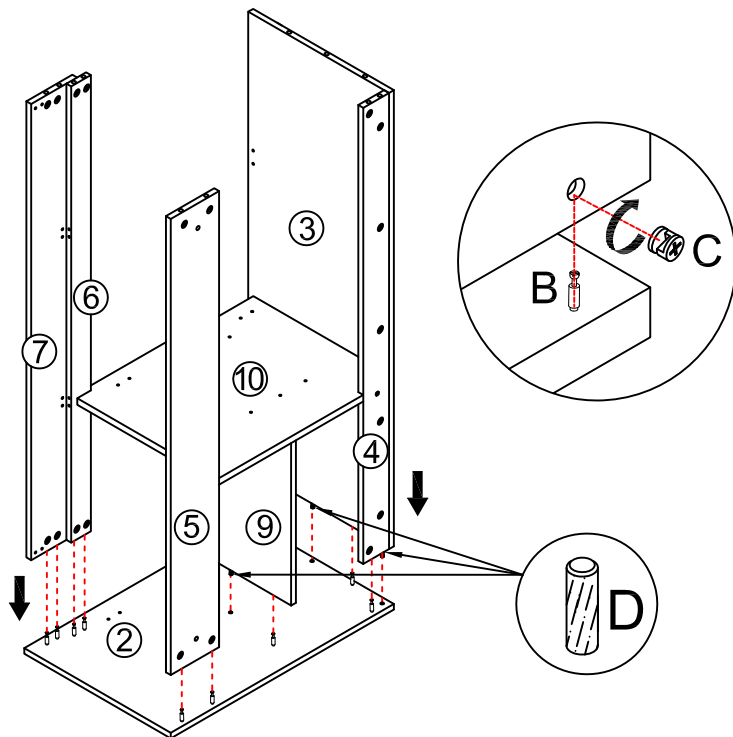

	x11
B	
	x11
C	
	x3
D	
	x1
R	


Note: The D parts are used for these three holes.

Step 7

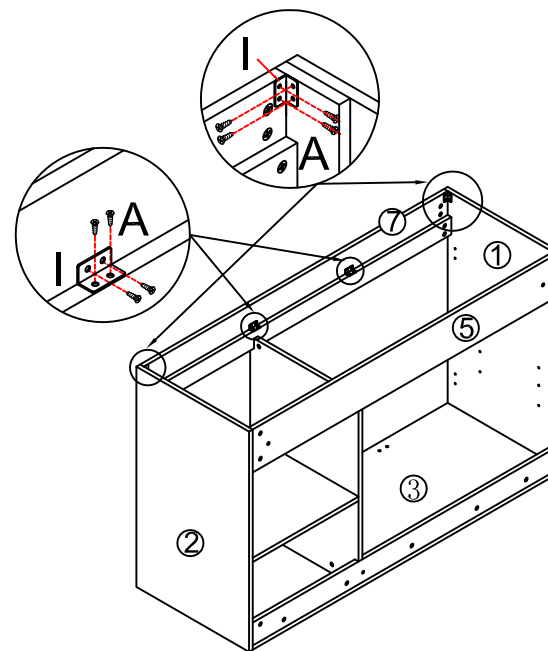

	x4
I	
($\varnothing 4 \times 14\text{mm}$)	
	x16
A	
Tool	


Step 6

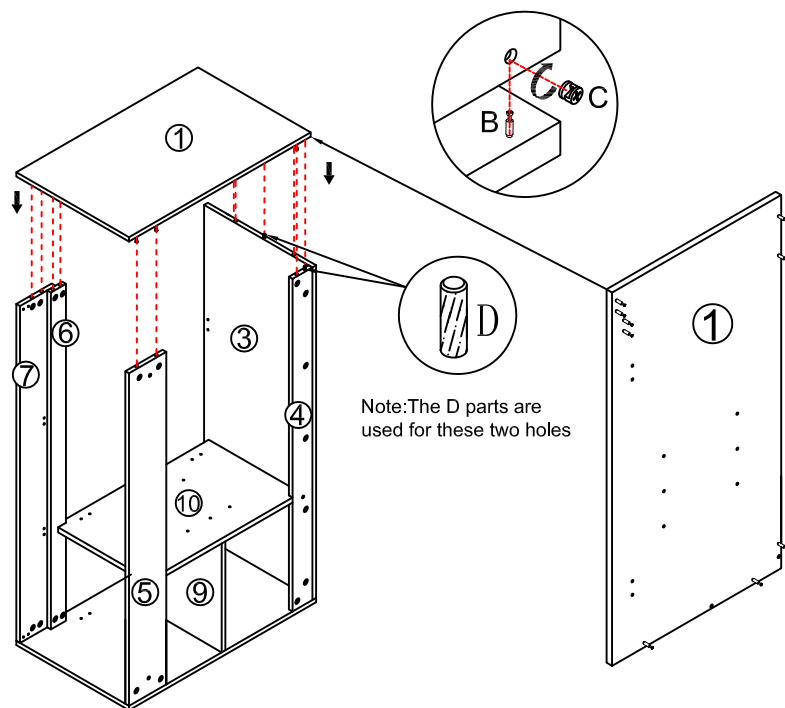

	x9
B	
	x9
C	
	x2
D	
	x1
R	


Note: The D parts are used for these two holes

Step 8

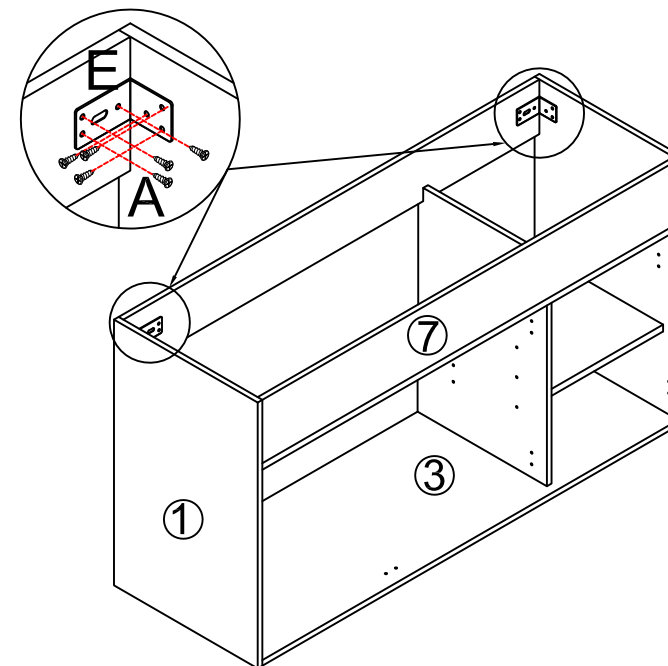


	x2
E	
($\varnothing 4 \times 14\text{mm}$)	
	x12
A	
Tool	


Step 9

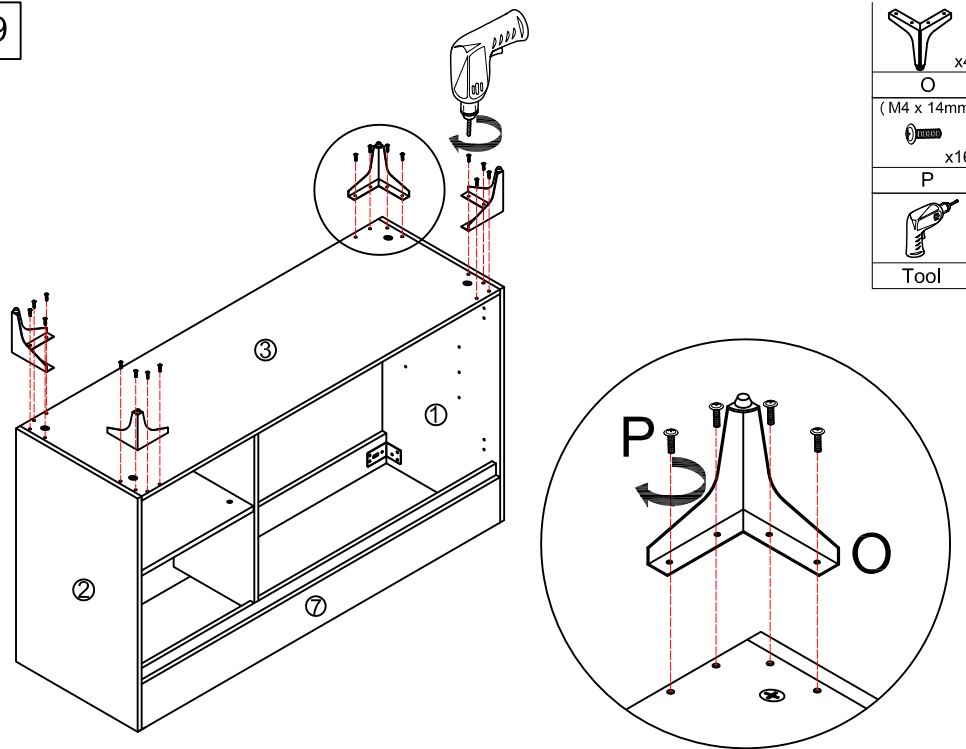


Step 10

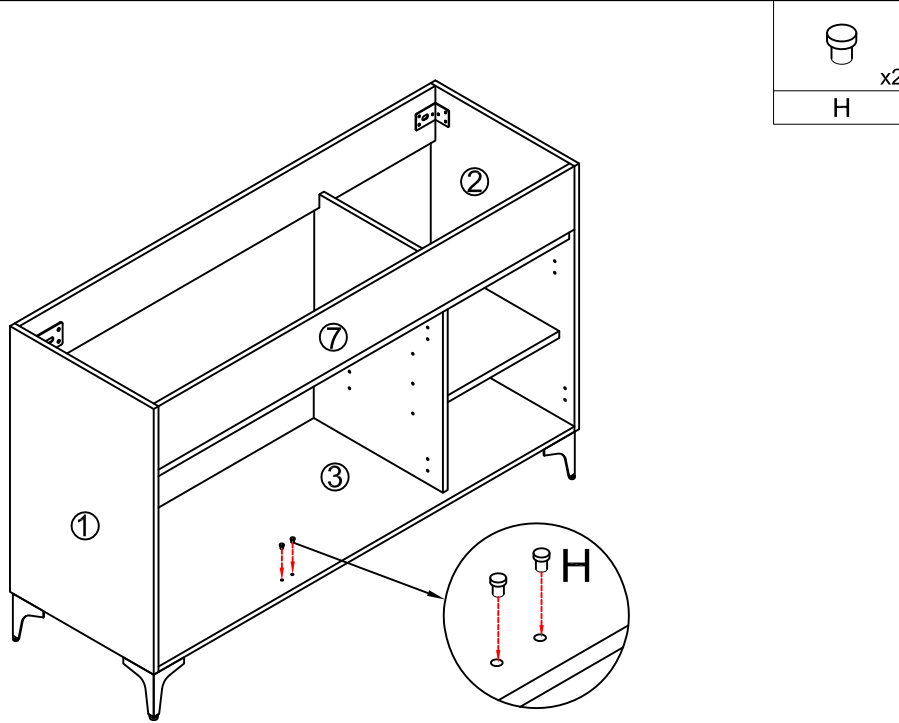


Step 11

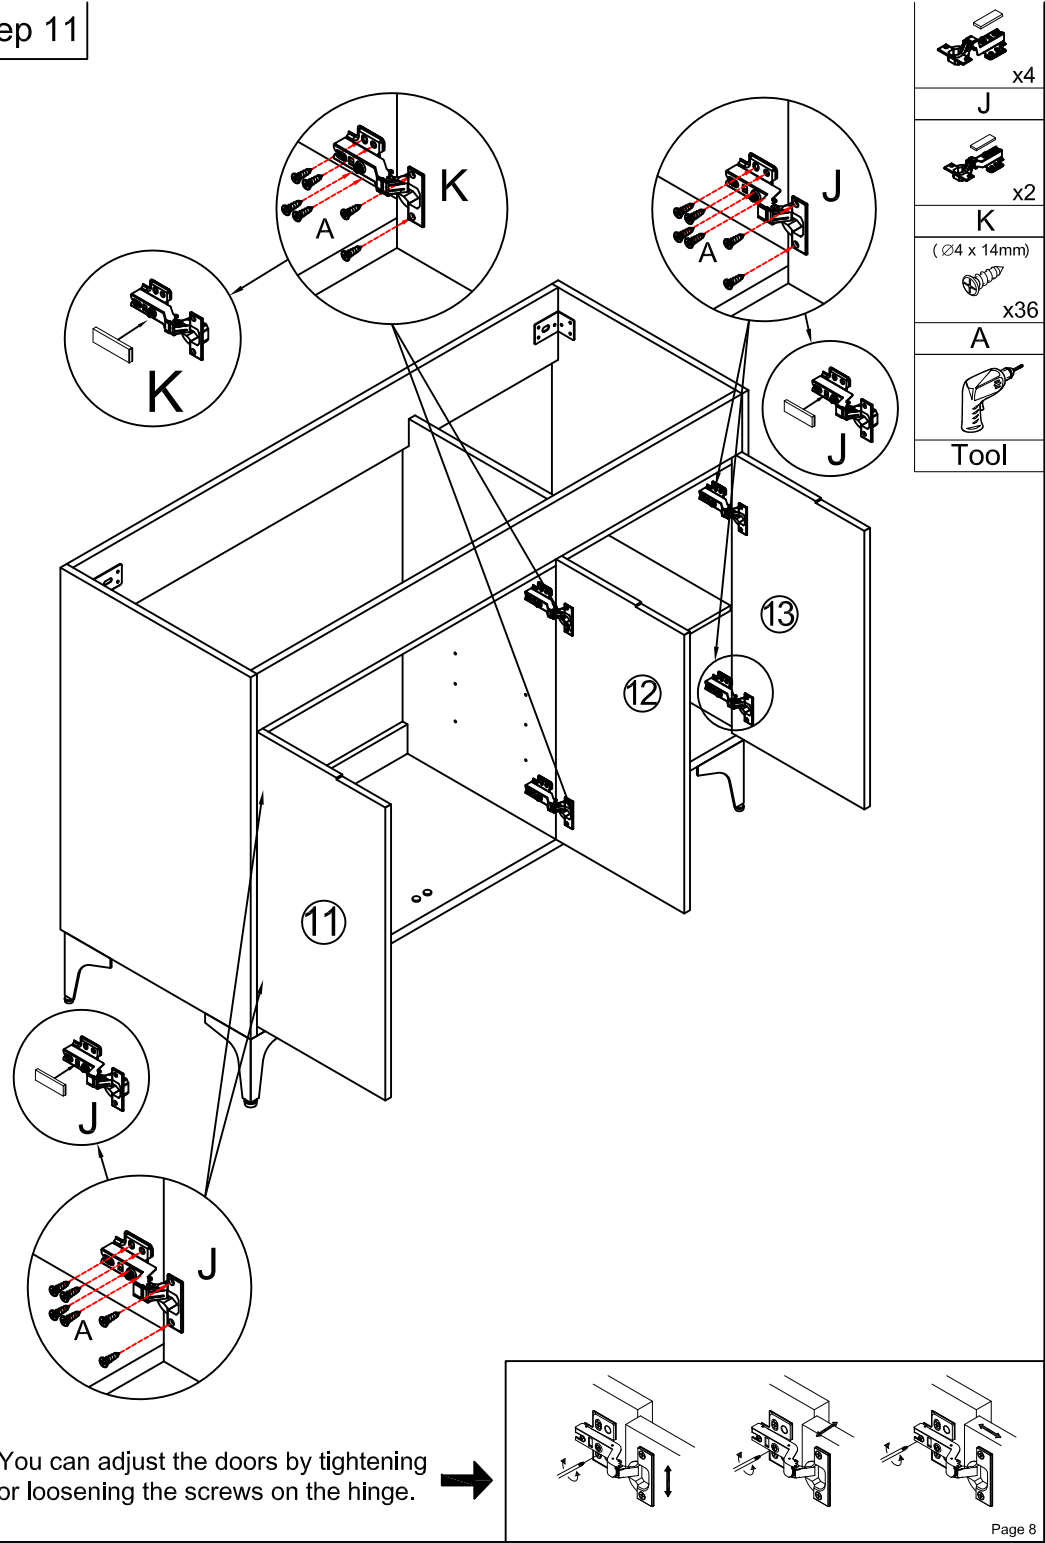



Step 12

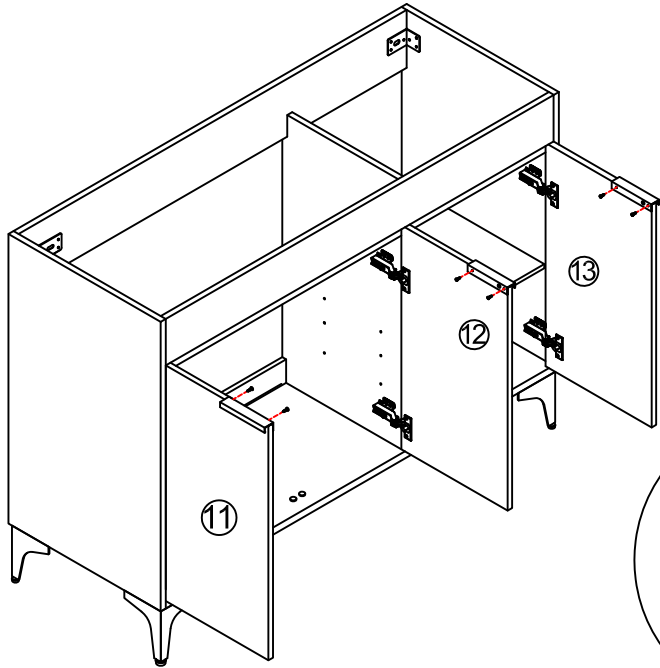

- L x3
- Q x6


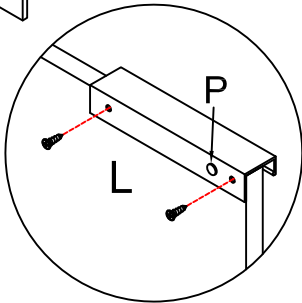


Step 14

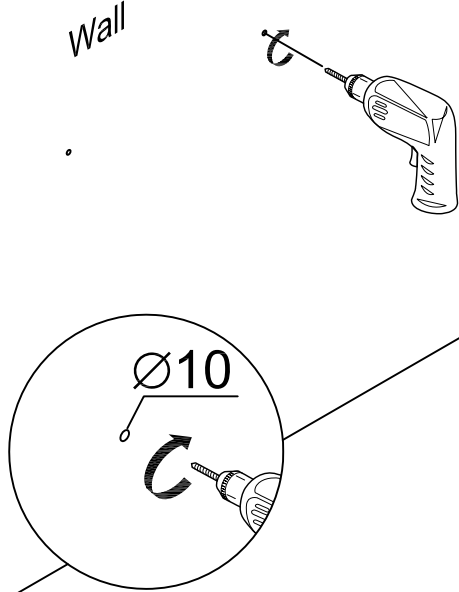


Tool

Step 13

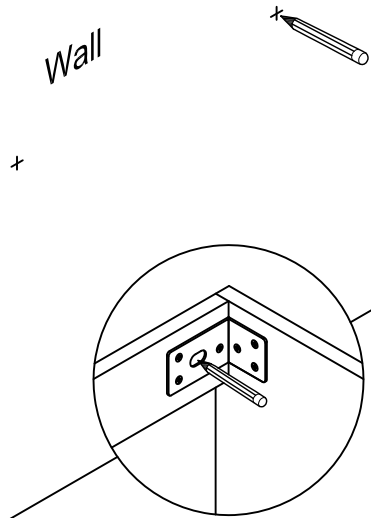


Tool

Step 15

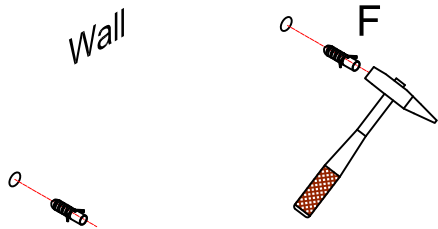



x2

F





Tool

Step 16

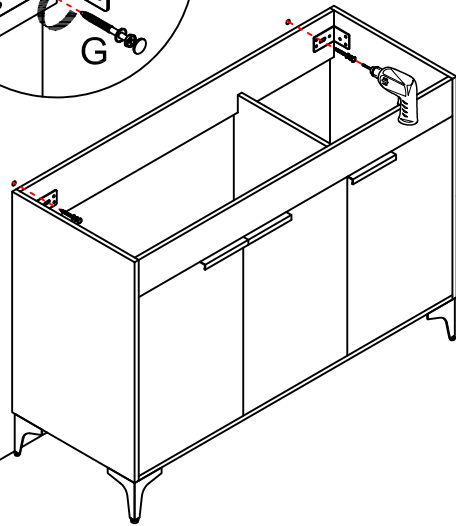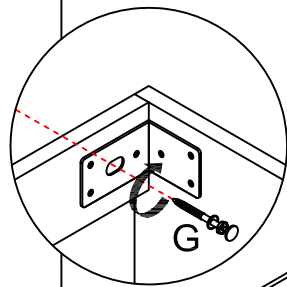

003 x2
G
Tool



Step 18

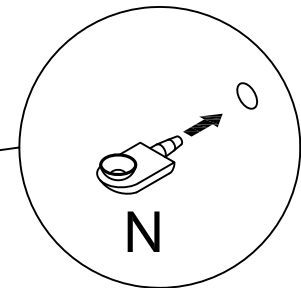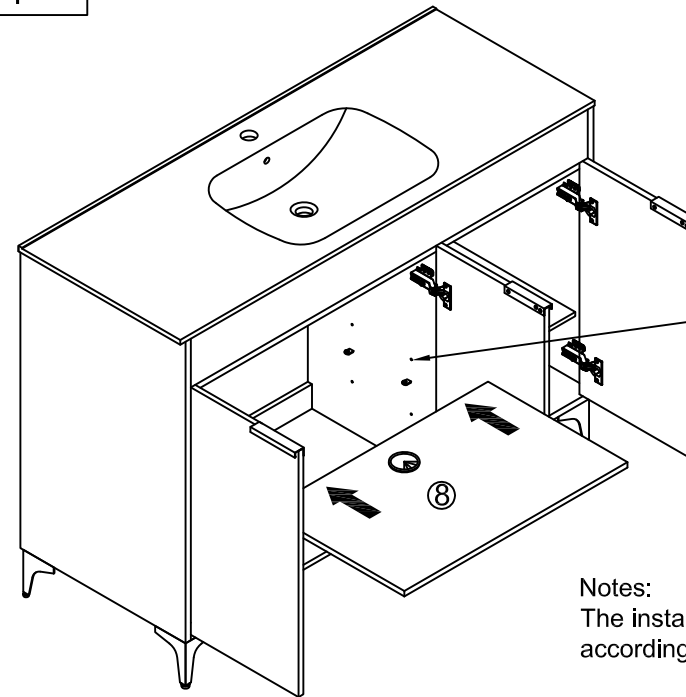

x4
N

Notes:
The installation position can be selected according to the required height.

Step 17

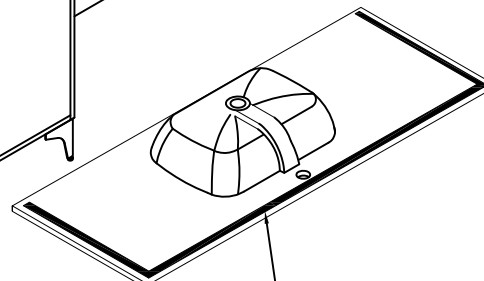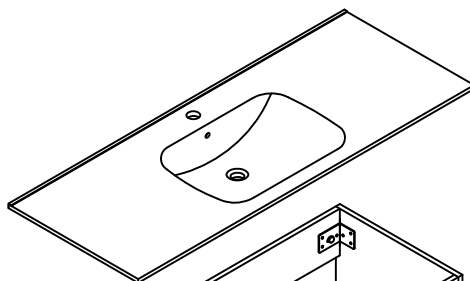

Remove the protective surface of 3M tape from the basin bottom and attach to the cabinet.

Finished

