


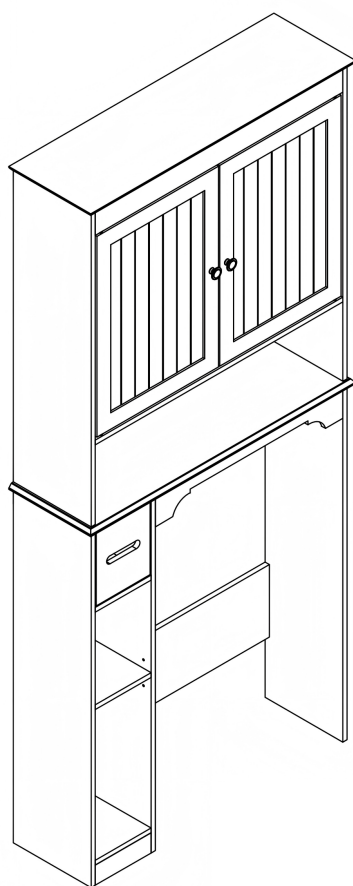




























Homocentric Square Door Toilet Cabinet







ASSEMBLY INSTRUCTIONS

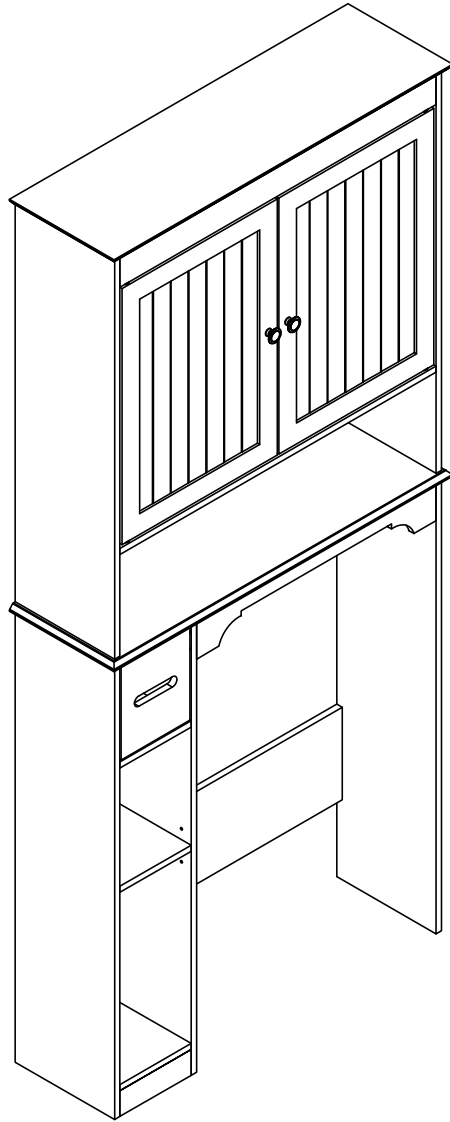


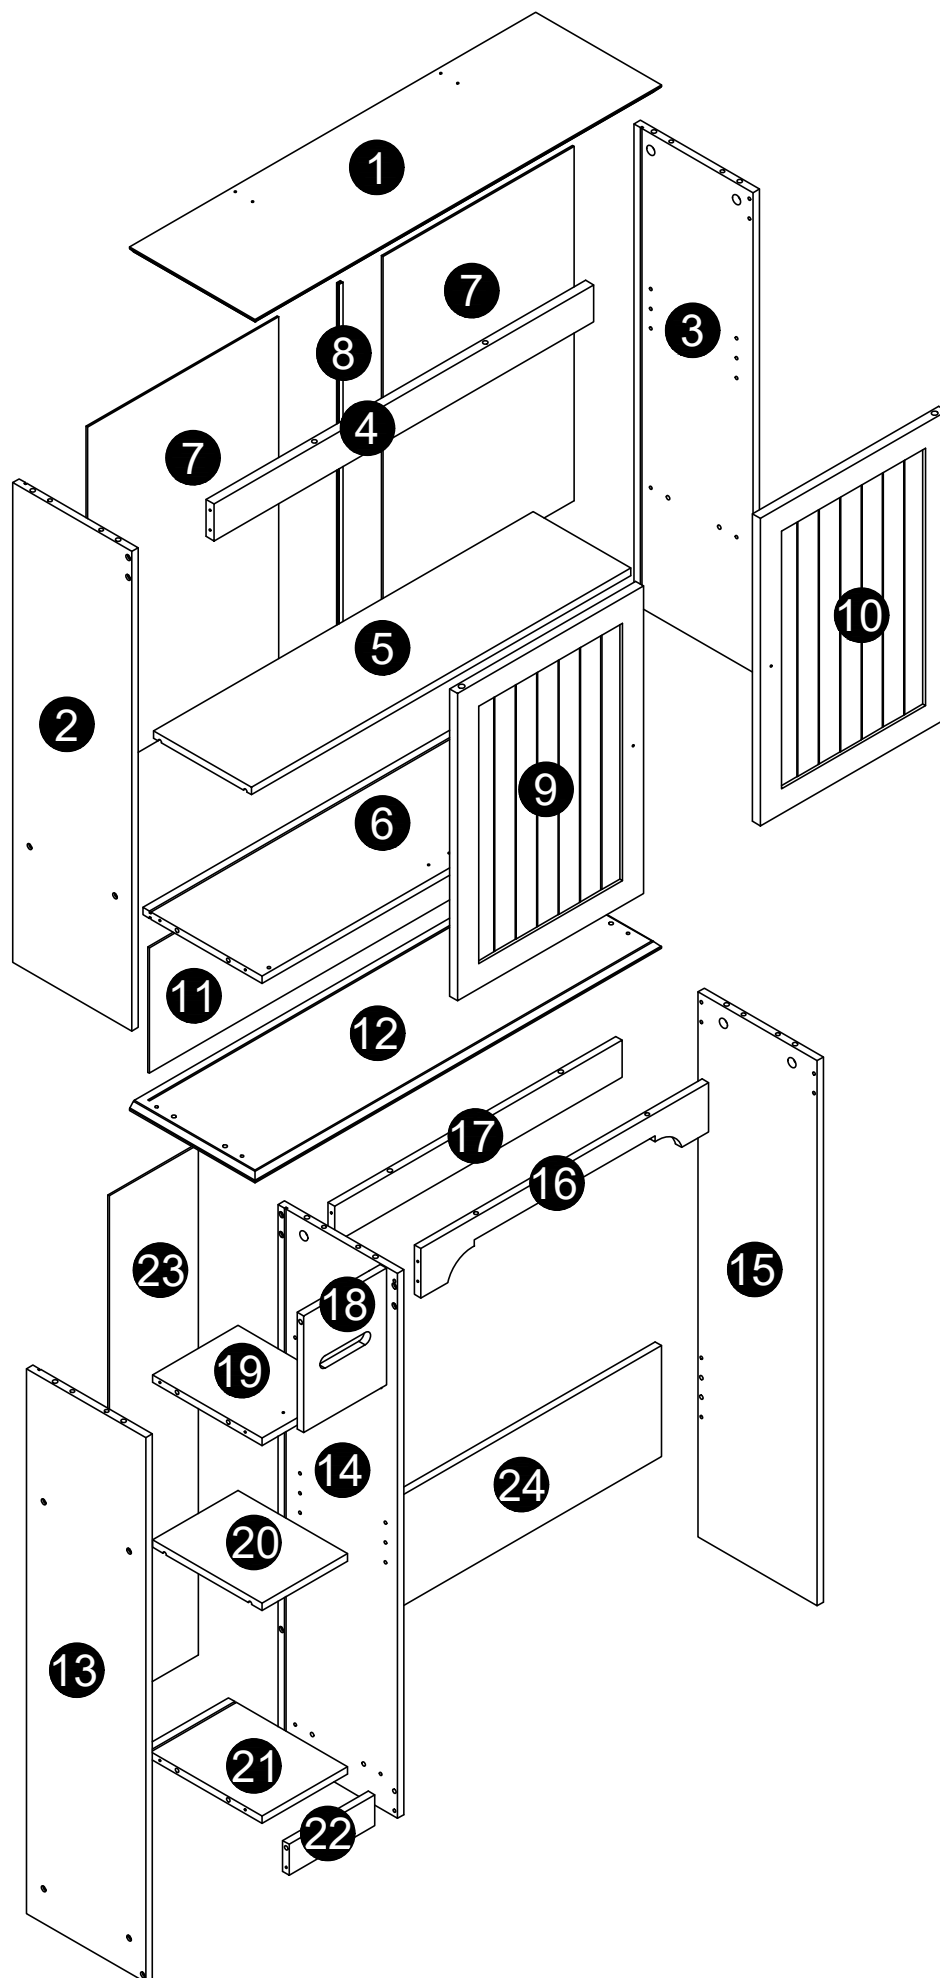

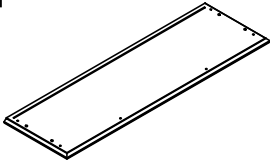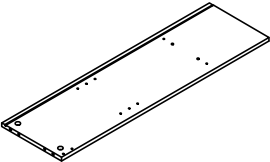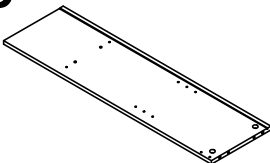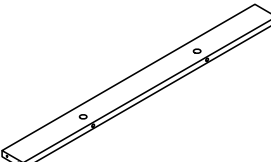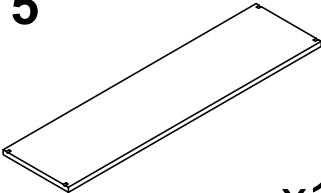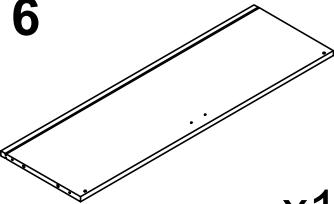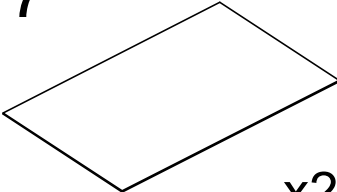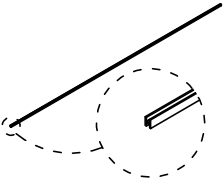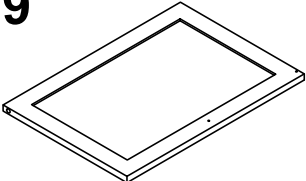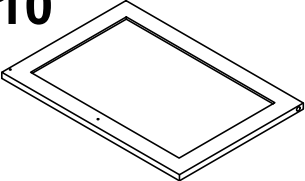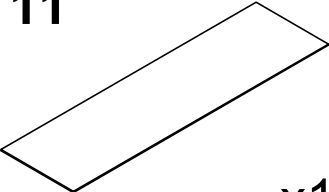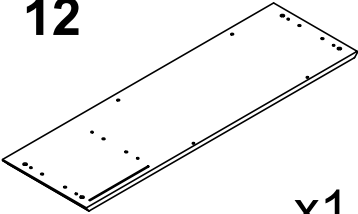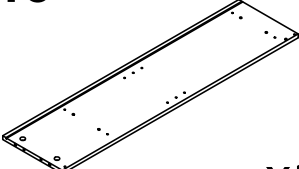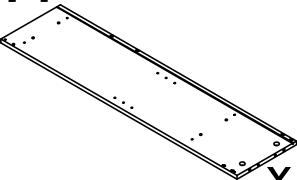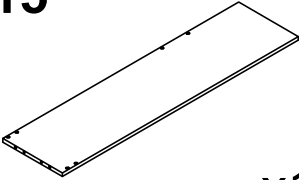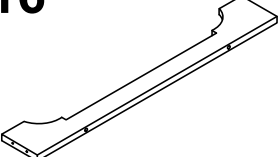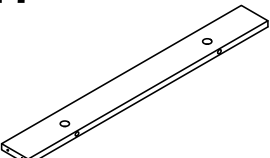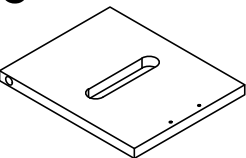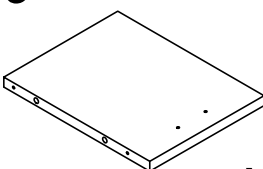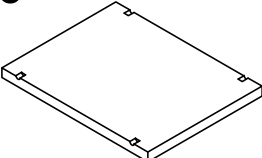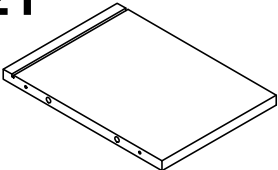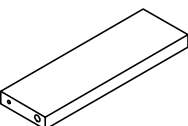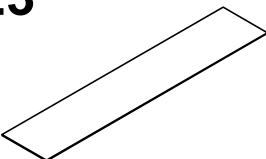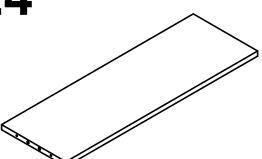
1  x1	2  x1	3  x1	4  x1
5  x1	6  x1	7  x2	8  x1
9  x1	10  x1	11  x1	12  x1
13  x1	14  x1	15  x1	16  x1
17  x1	18  x1	19  x1	20  x1
21  x1	22  x1	23  x1	24  x1

A 6x35mm  x14(+1)	B 15x10mm  x14(+1)	C 6x30mm  x34(+2)	D 6x35mm  x36(+3)	E 3.5x12mm  x4(+2)
F  x1	G 3x16mm  G1  G2  x2	H 3x16mm  H1  H2 x22(+2)	I 4x14mm  I1  I2  x2	J  x8
K 18mm  x26(+2)	L  x6	M  x2	N 4x20mm  N1  N2 x2	O 6x30mm  x2


Step 1

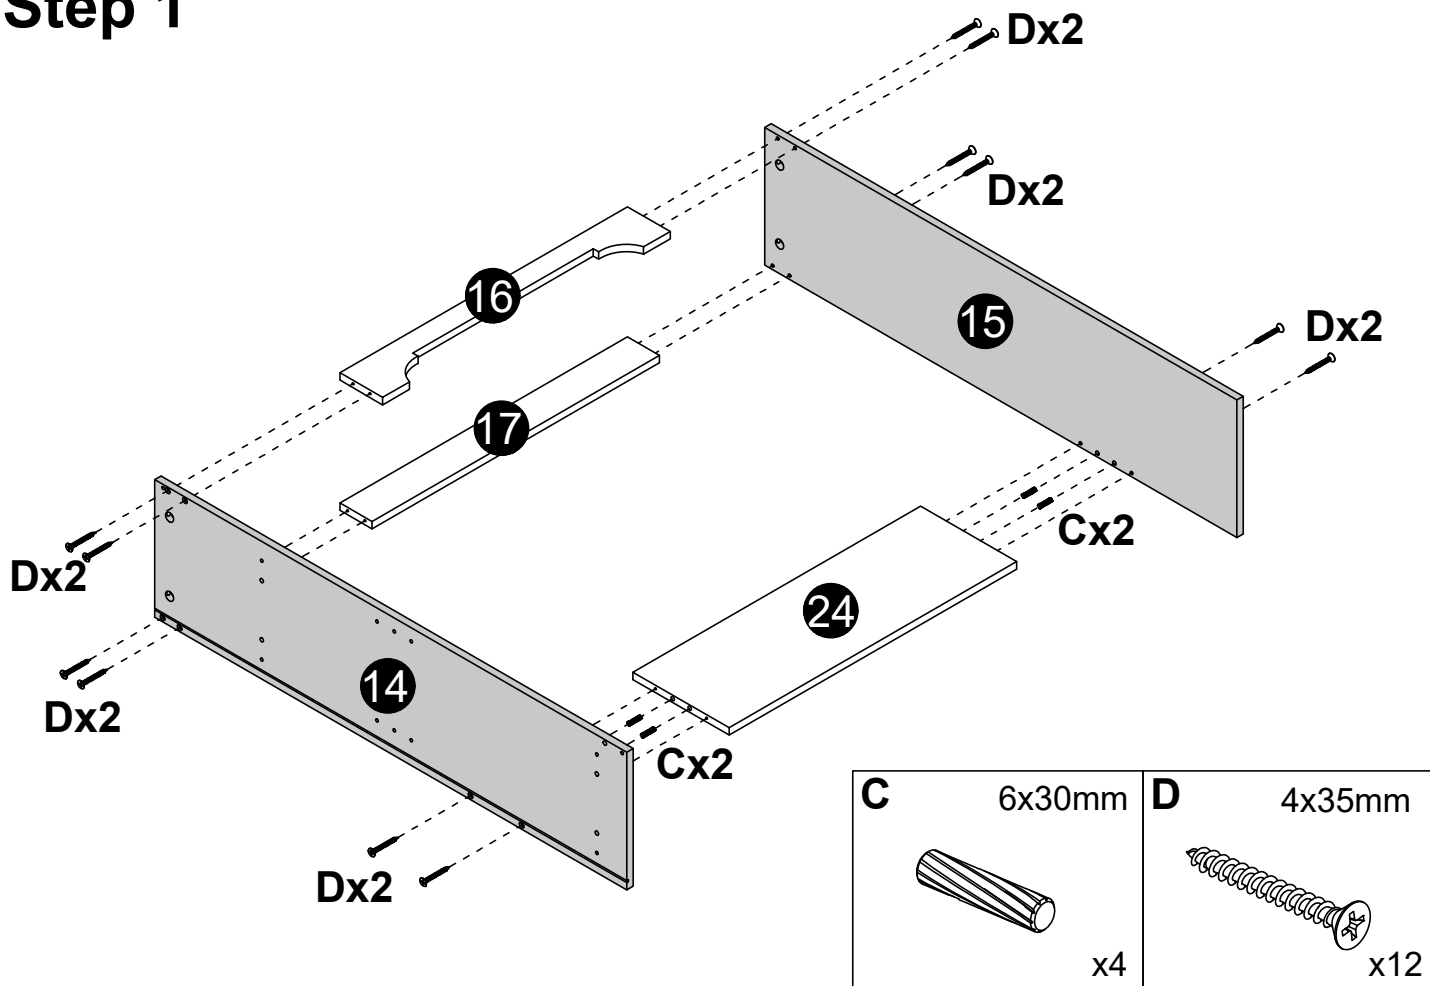


Step 2

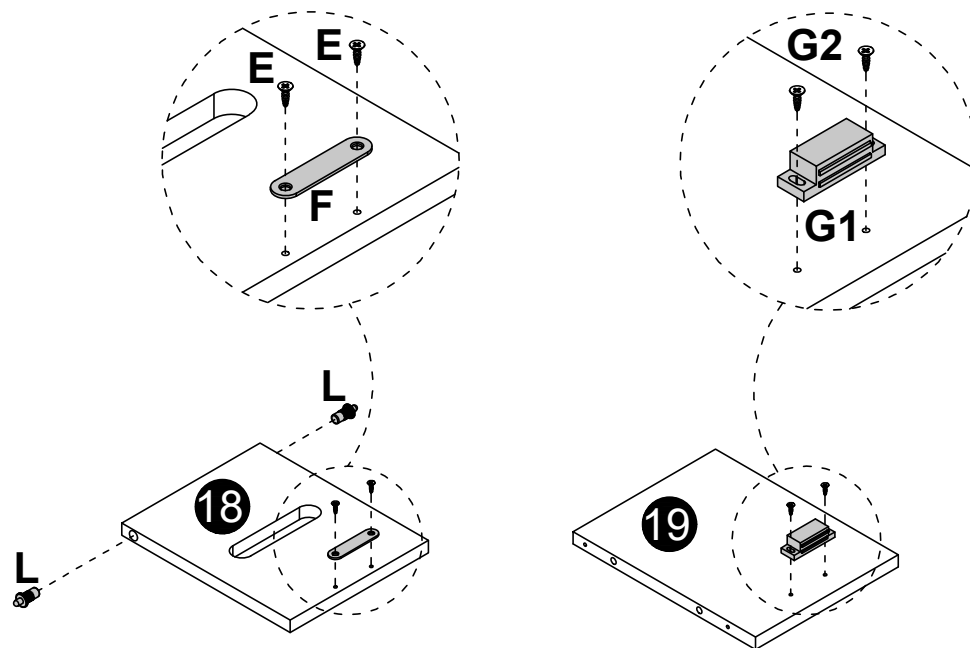

Step 3

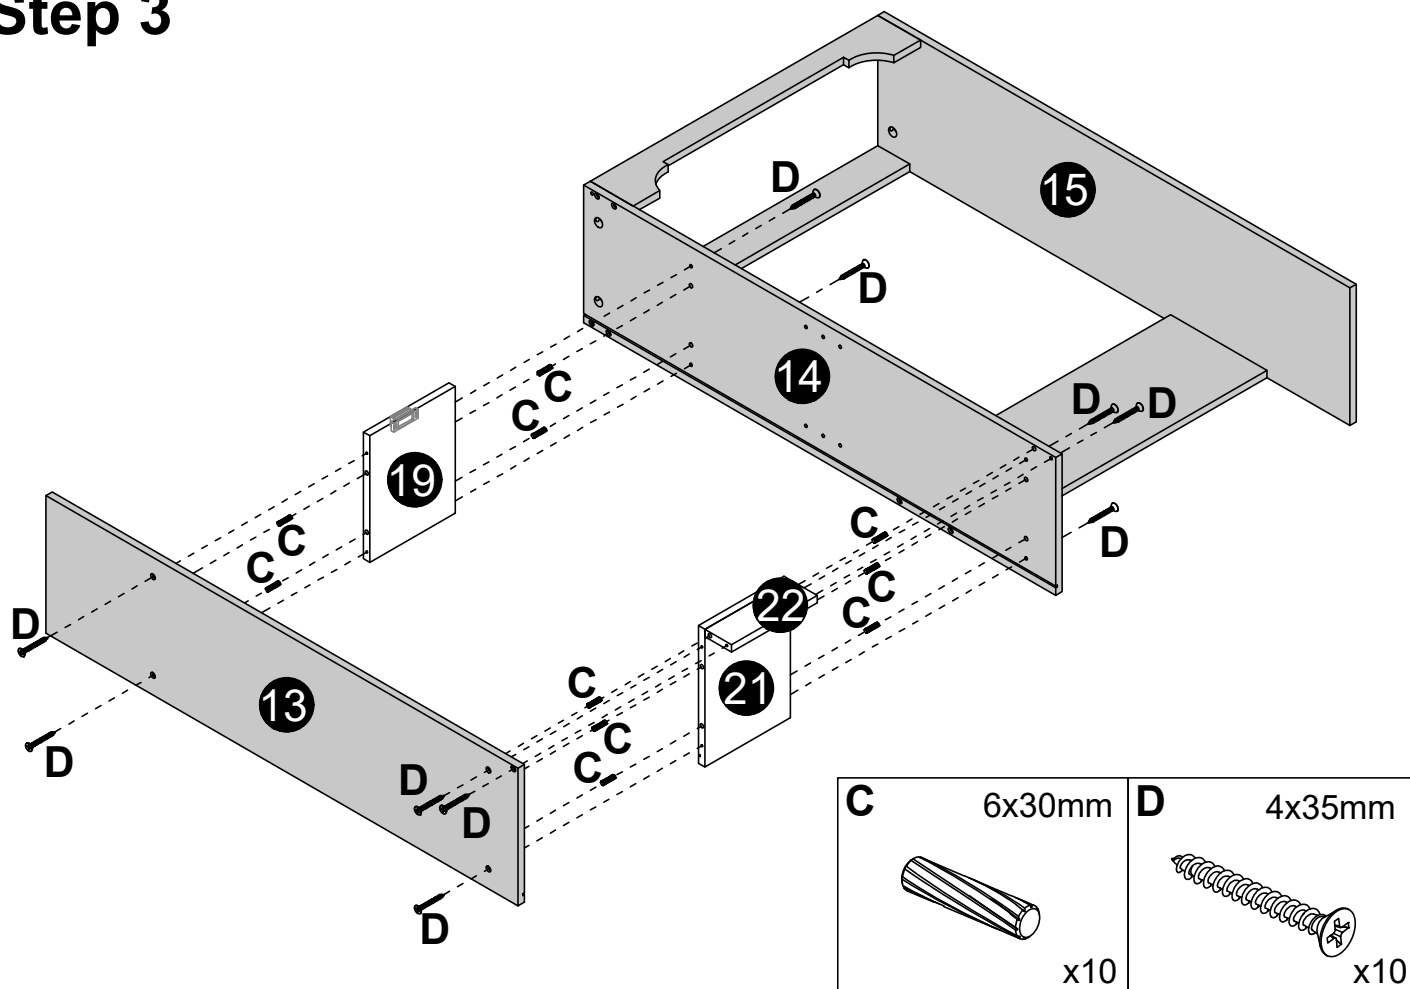


Step 4

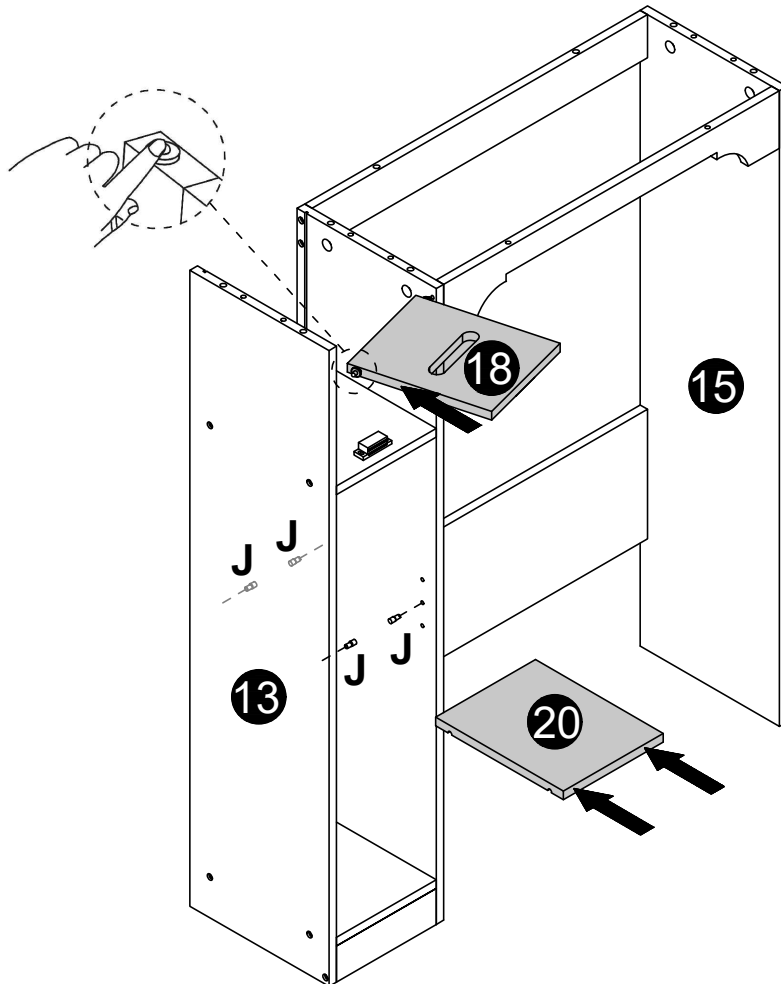


WARNING


Note the installation direction of Part 18, the side of the F iron piece faces inward!

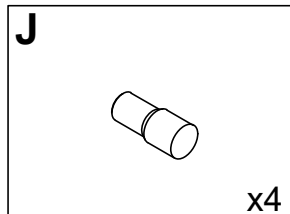

Step 5

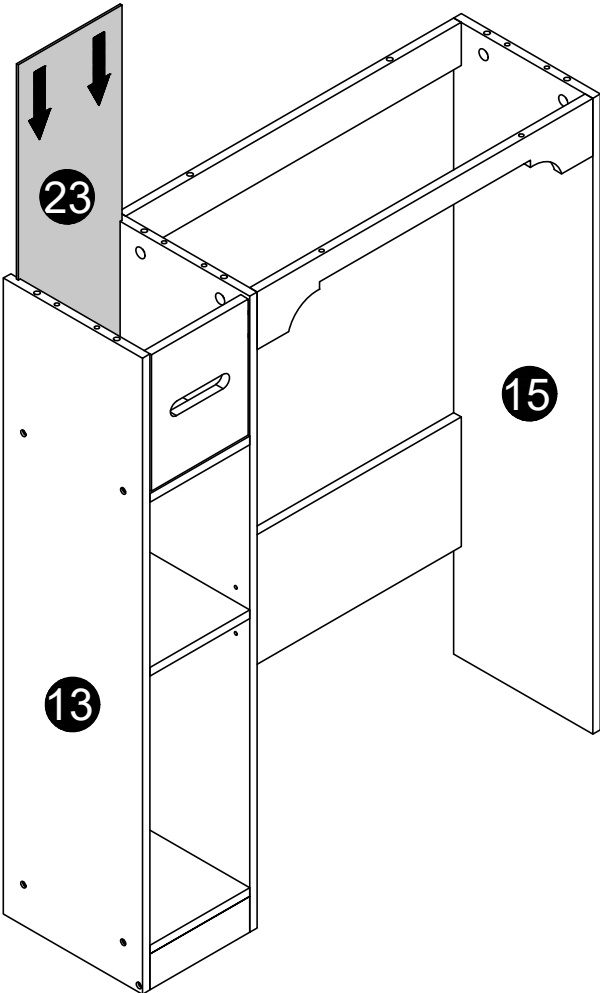


Step 6

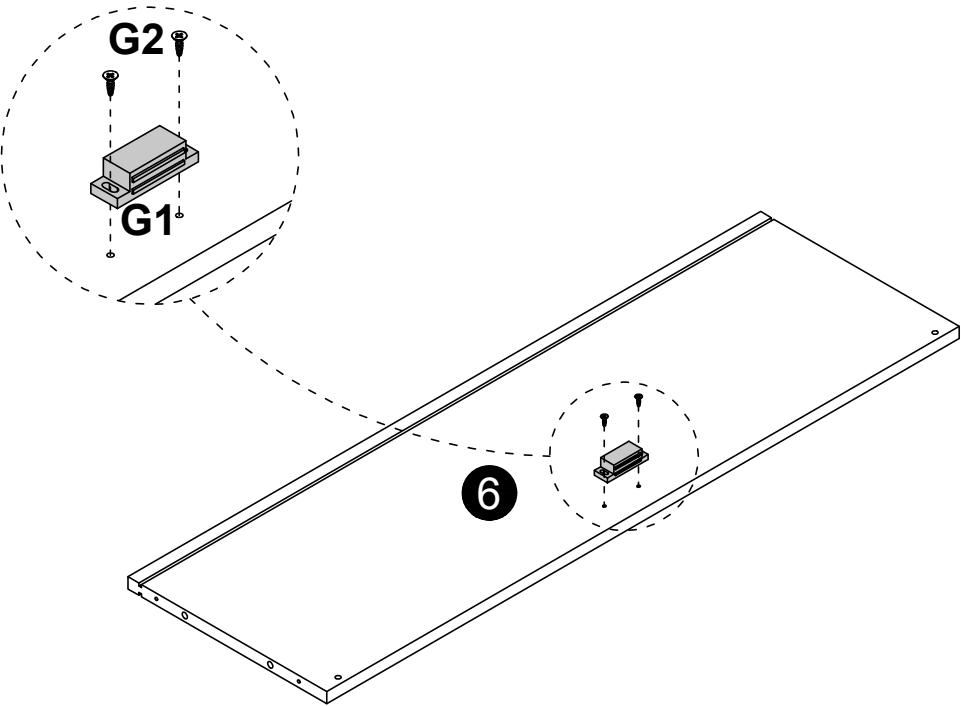


G		3x16mm
G1	G2	
		
		
		x1


Step 7

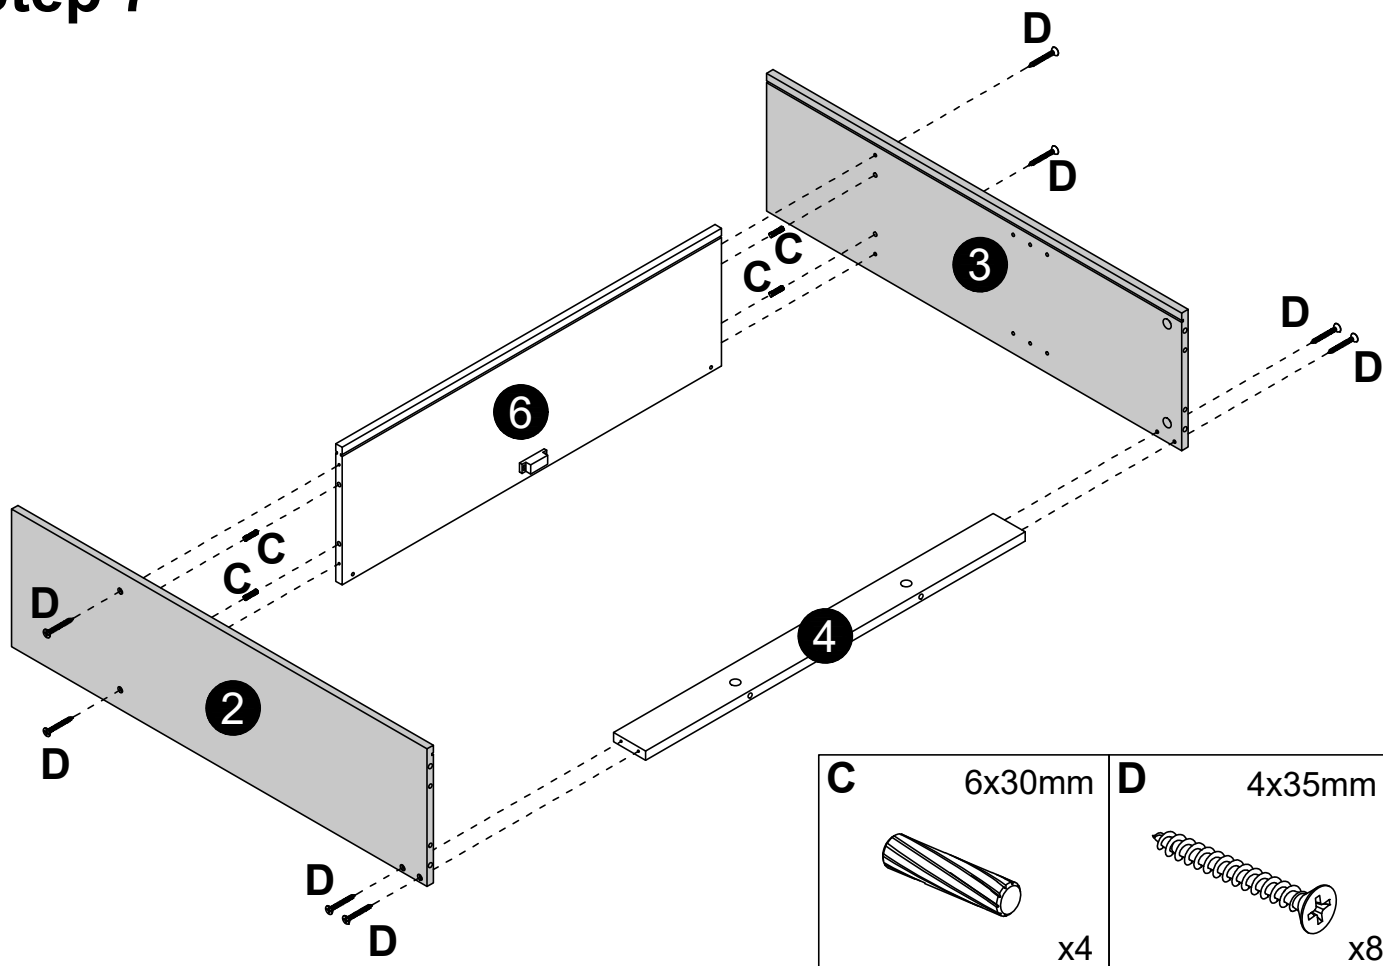



Step 8

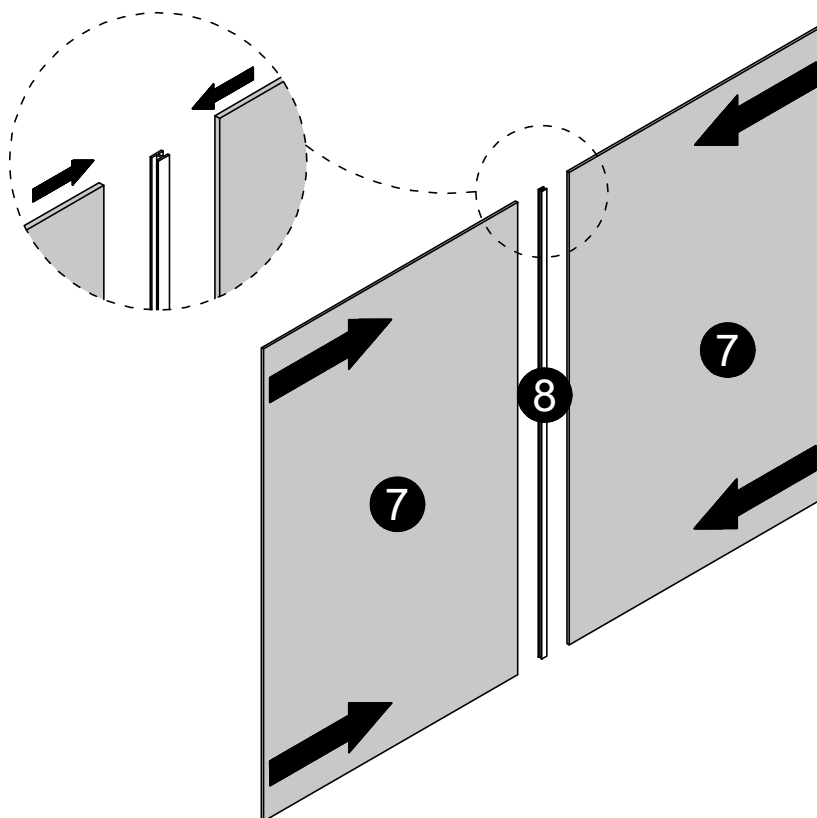

Step 9

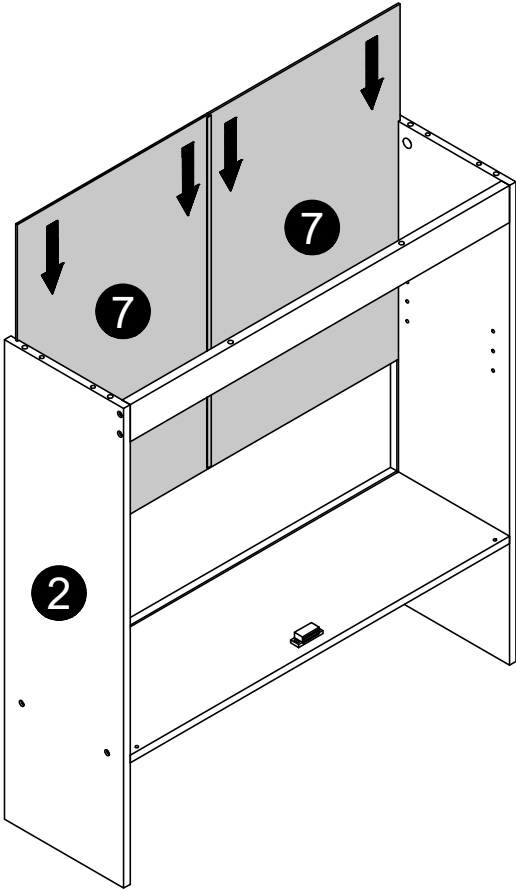

Step 10

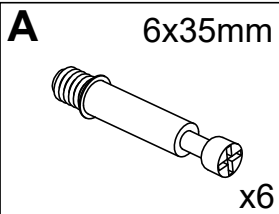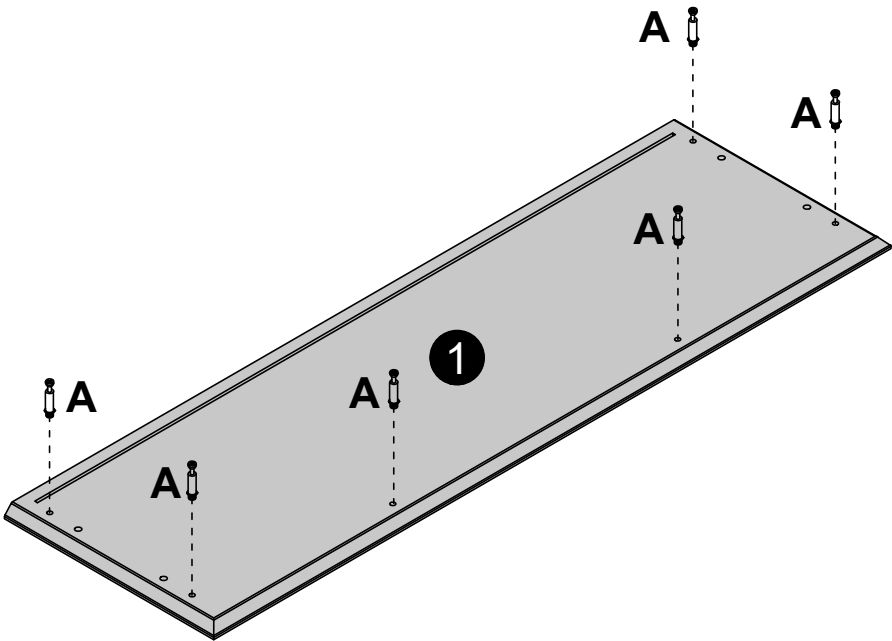



Step 11




WARNING

Note the installation direction of Part 1!

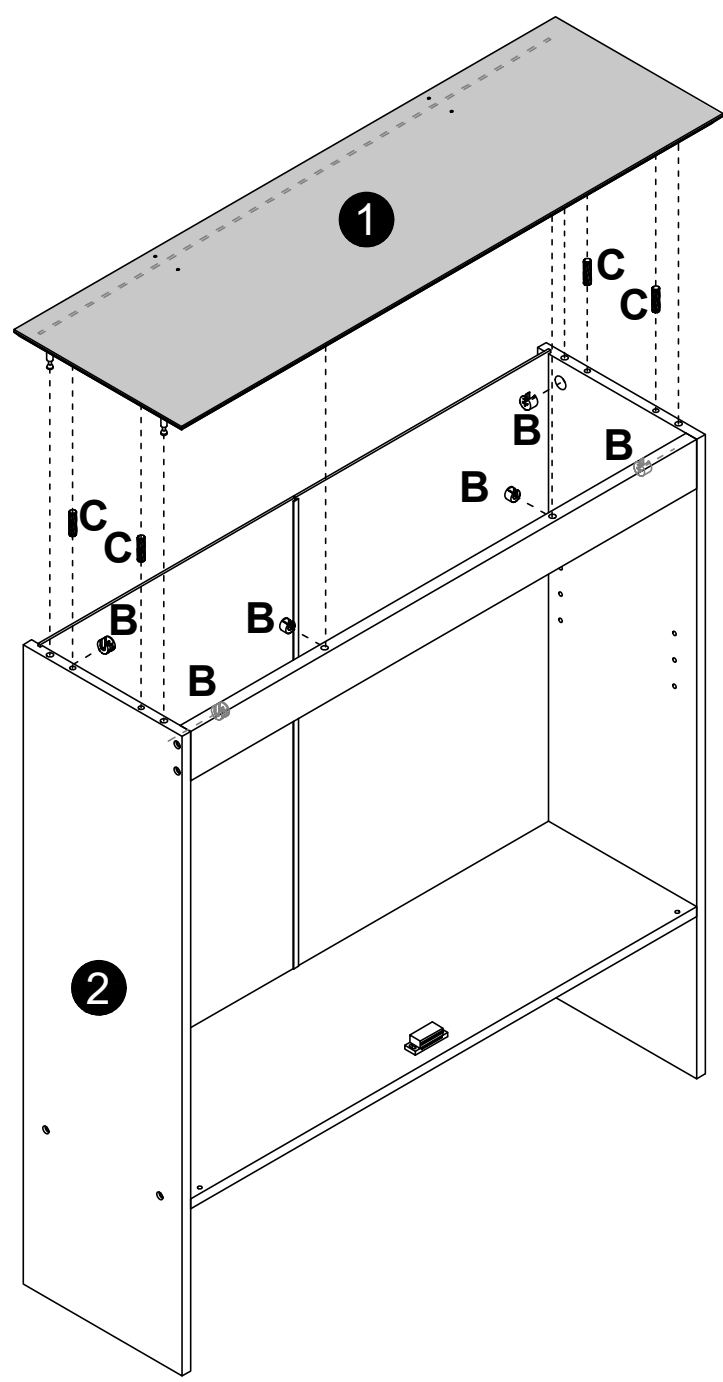


B	15x10mm	C	6x30mm
			
	x6		x4

Step 12

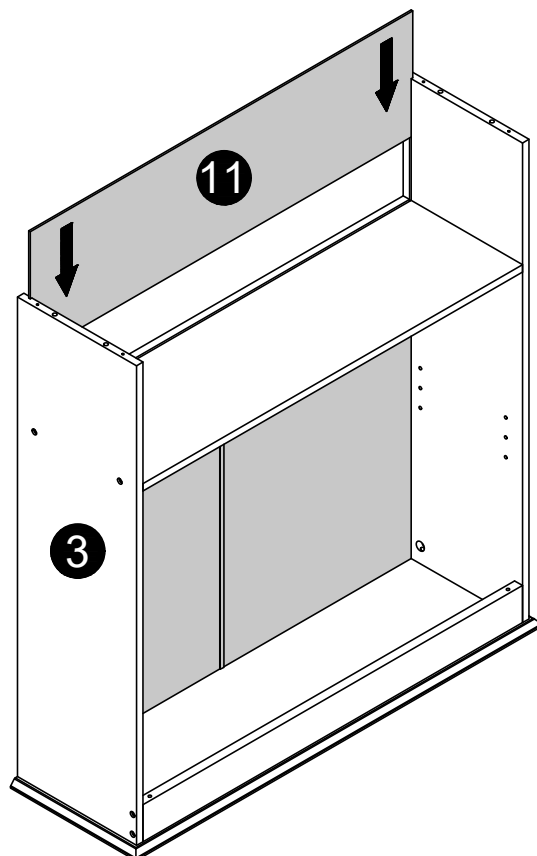

Step 13

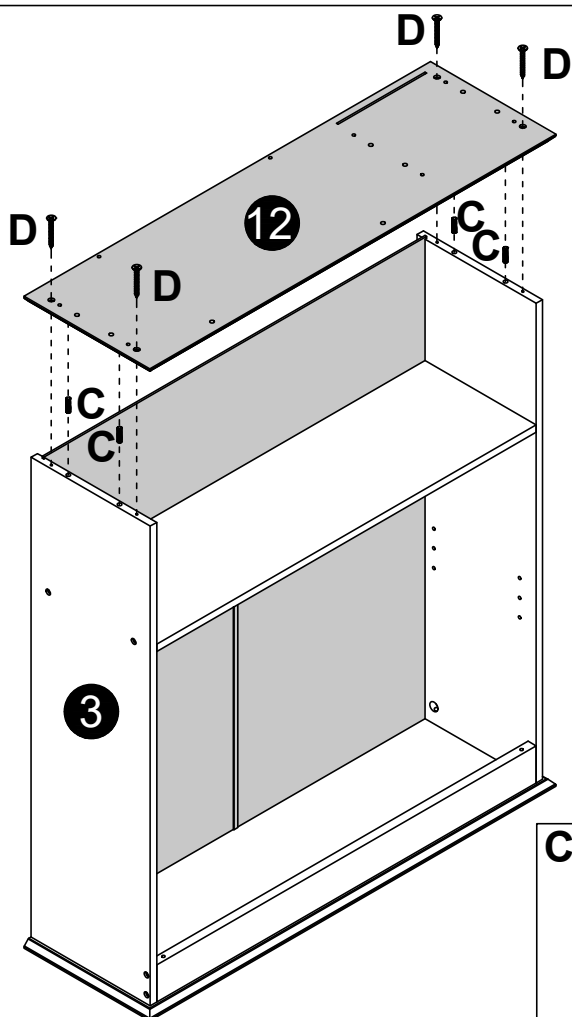

WARNING

Note the installation direction of Part 12!

C


6x30mm



x4



D

4x35mm





x4



Step 14

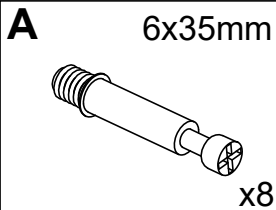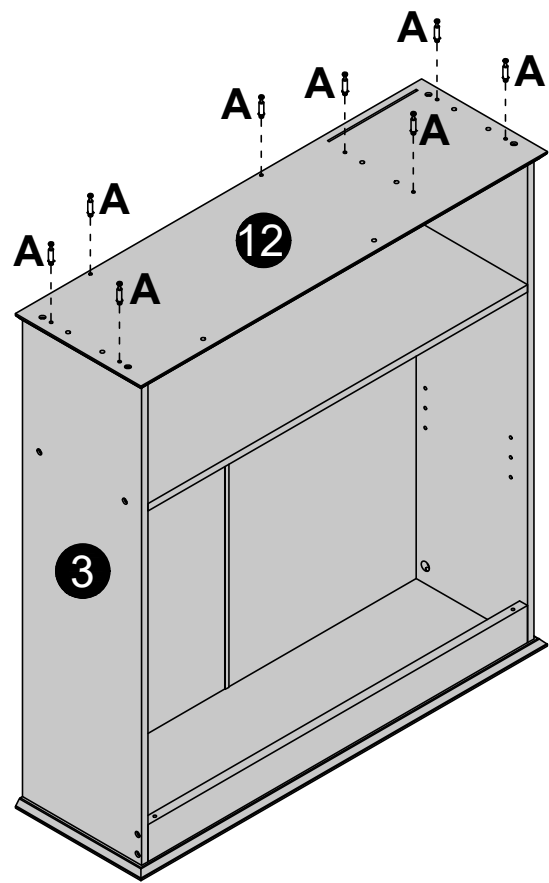

Step 15

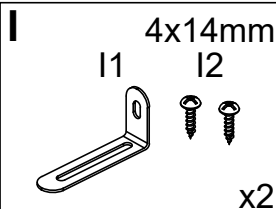
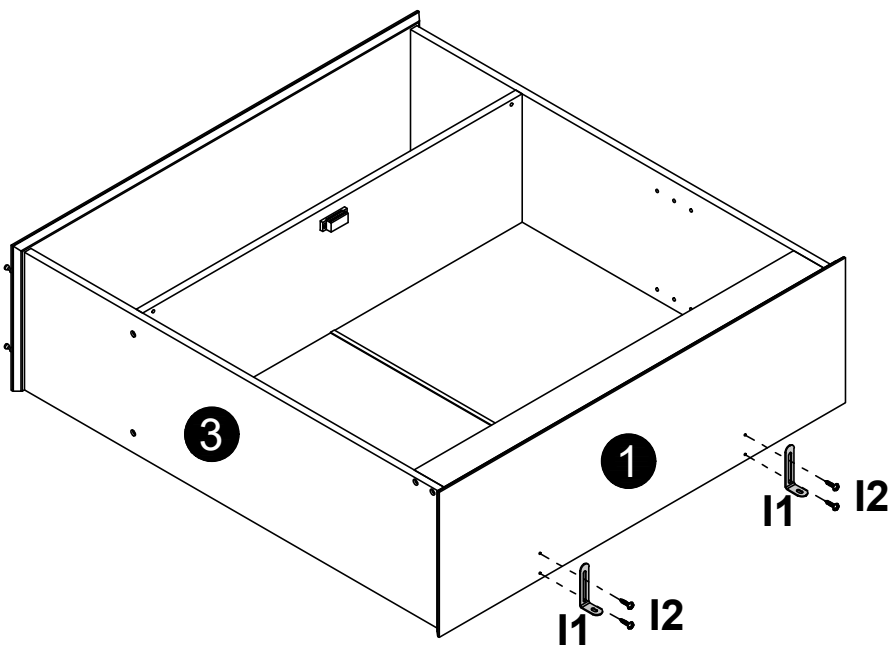


Step 16

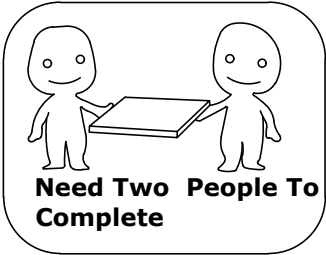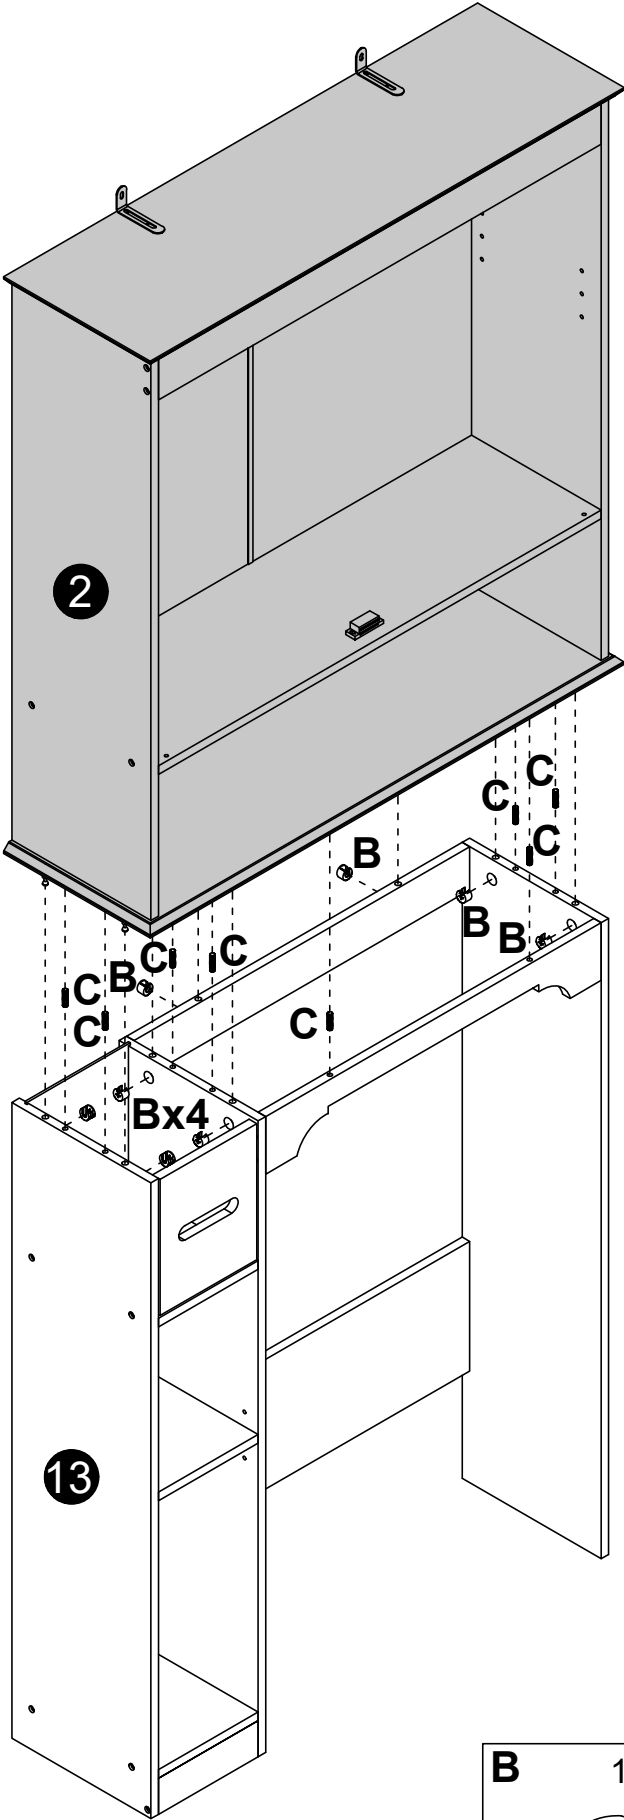


B	15x10mm	C	6x30mm
			
	x8		x8

Step 17

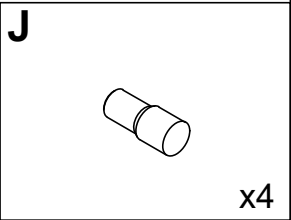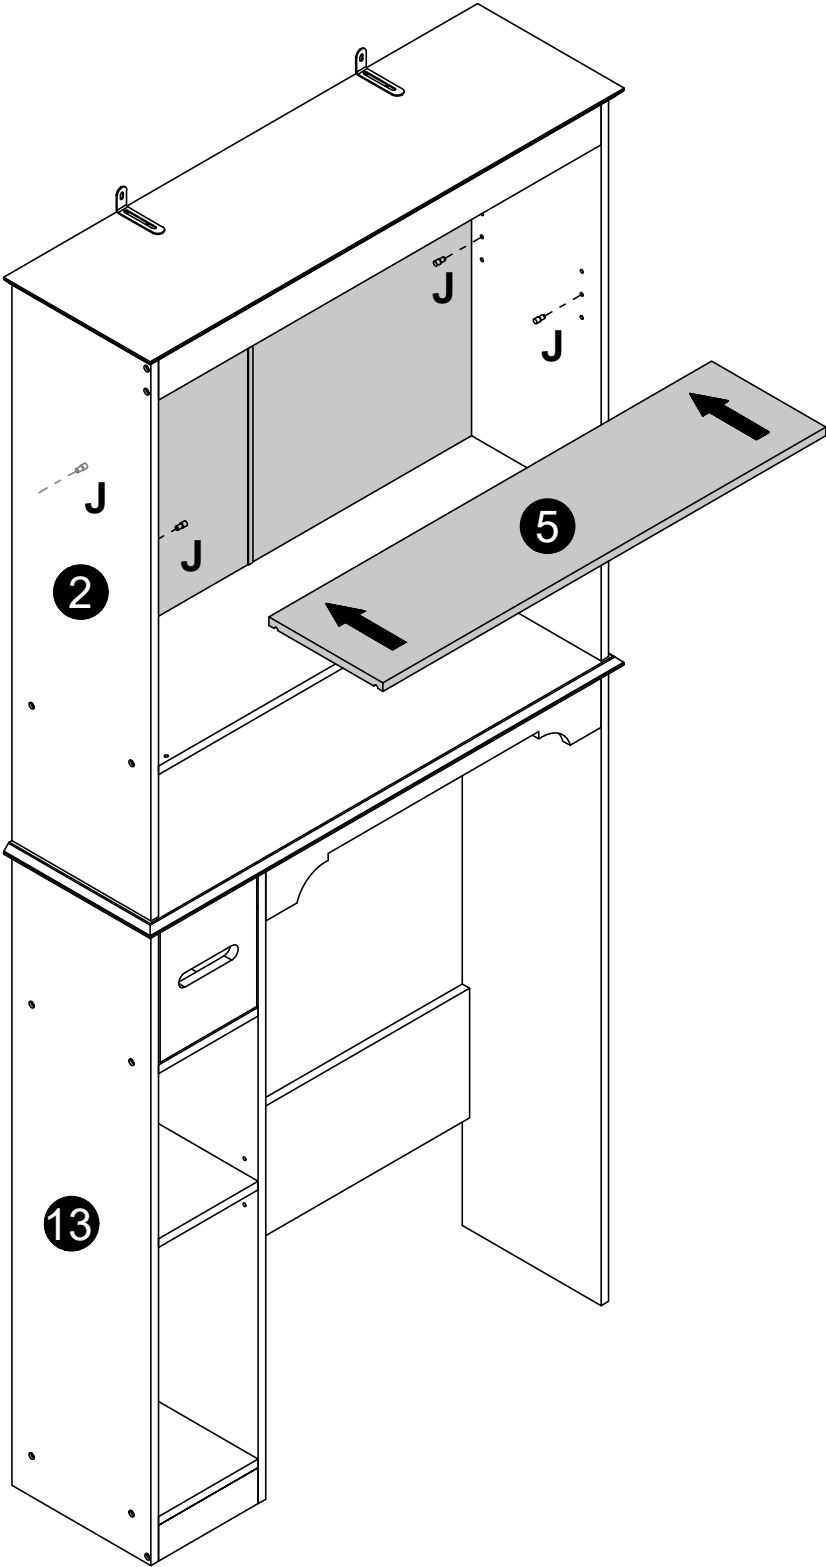


Step 18

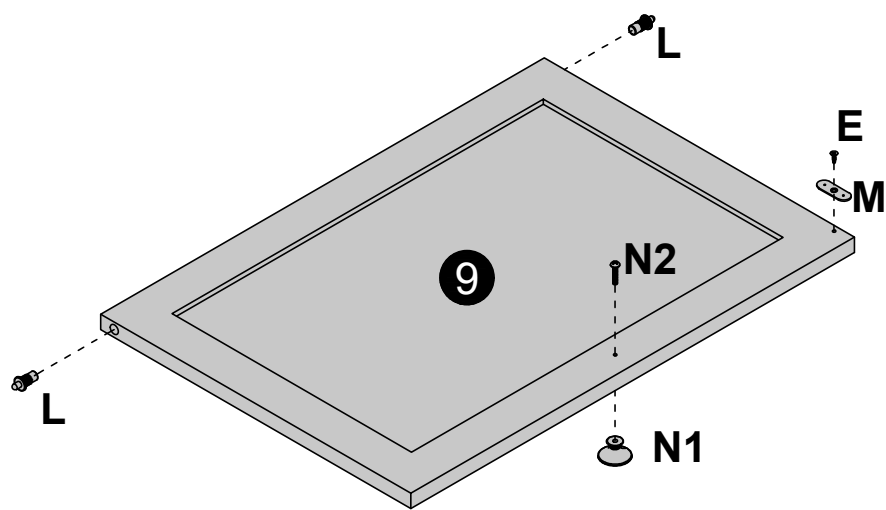


E	3.5x12mm	L	M	N	4x20mm
					
x1		x2	x1		x1

Step 19

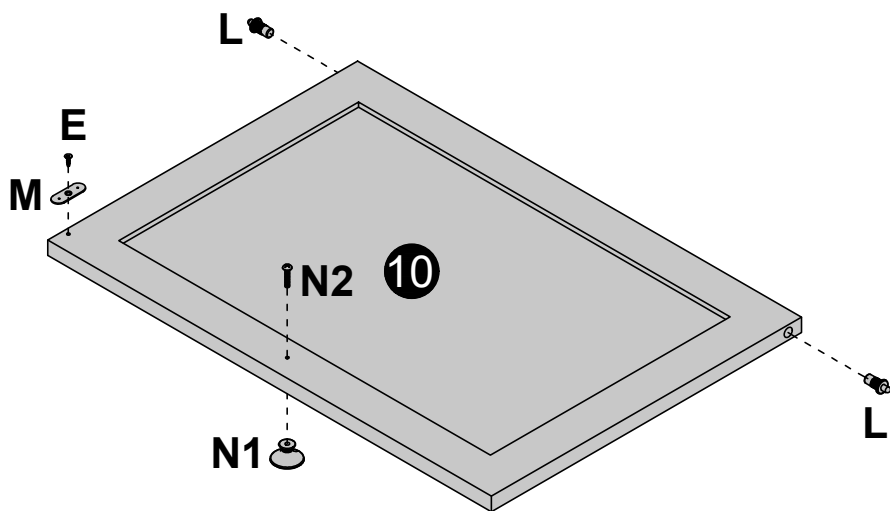


E	3.5x12mm	L	M	N	4x20mm
					
x1		x2	x1		x1

Step 20

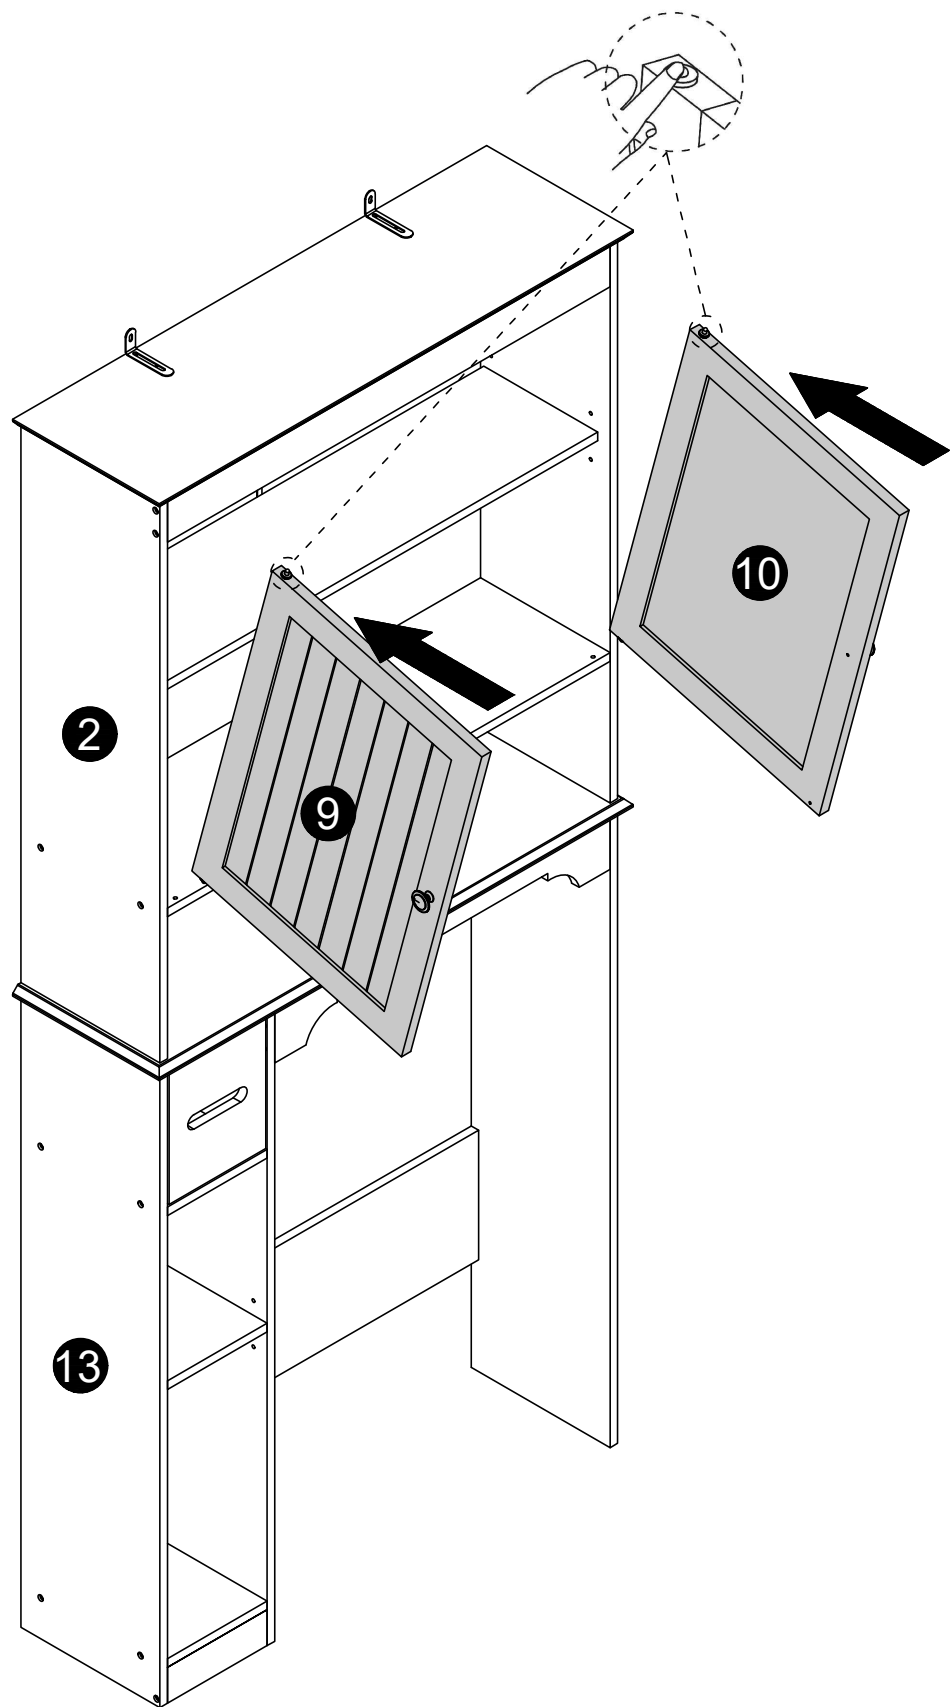


Step 21

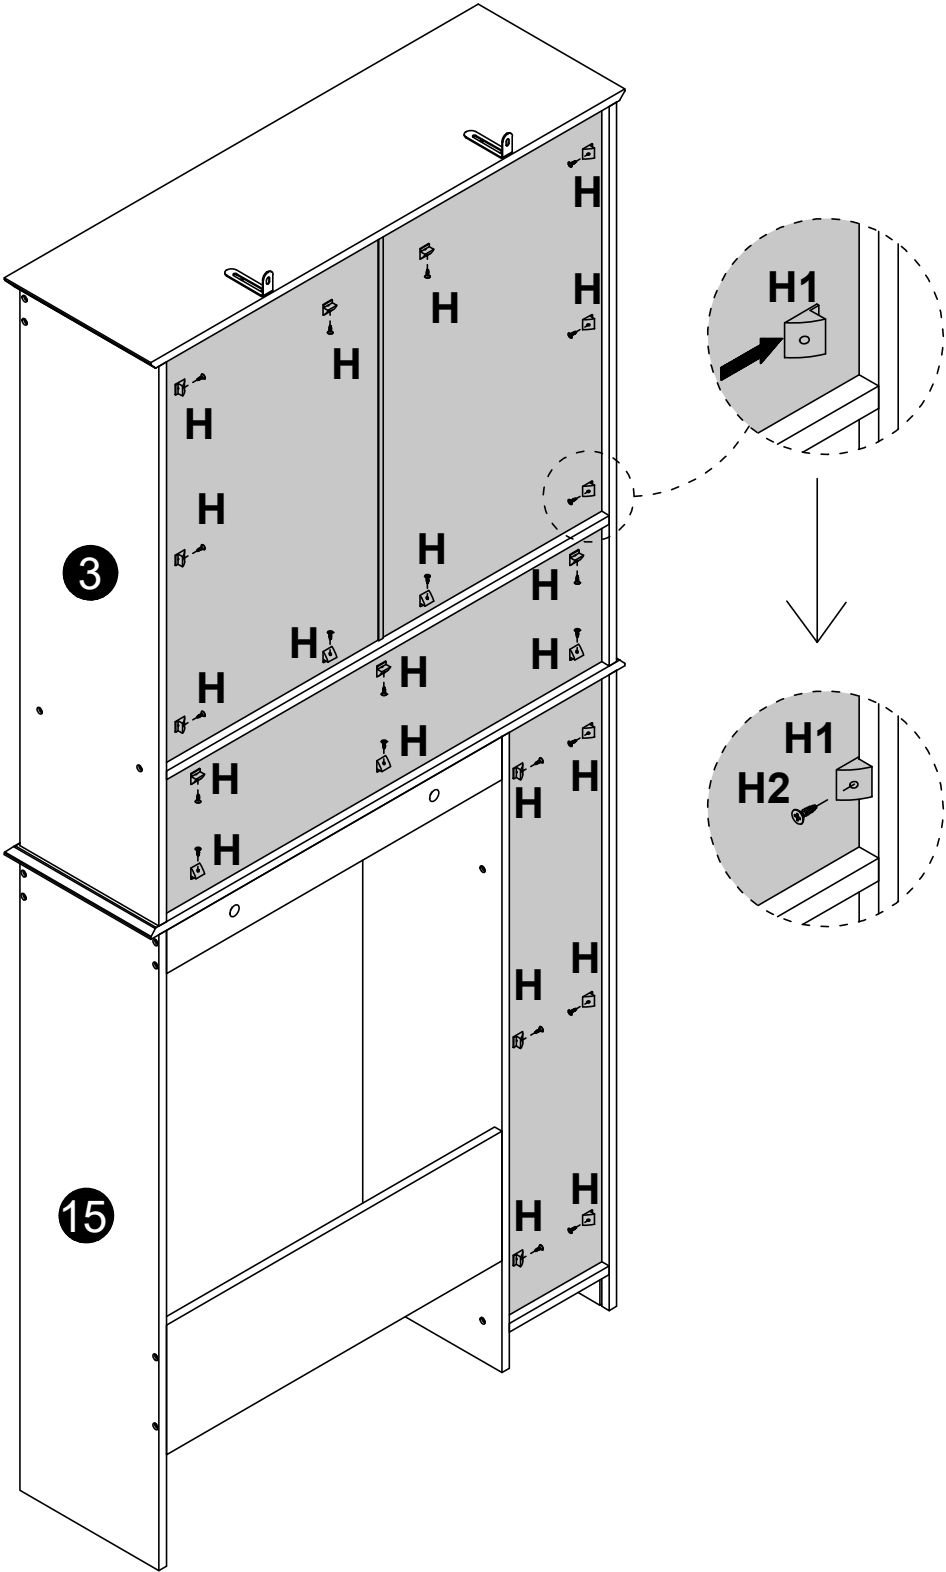

H	3x16mm
H1	H2
	x22

Step 22

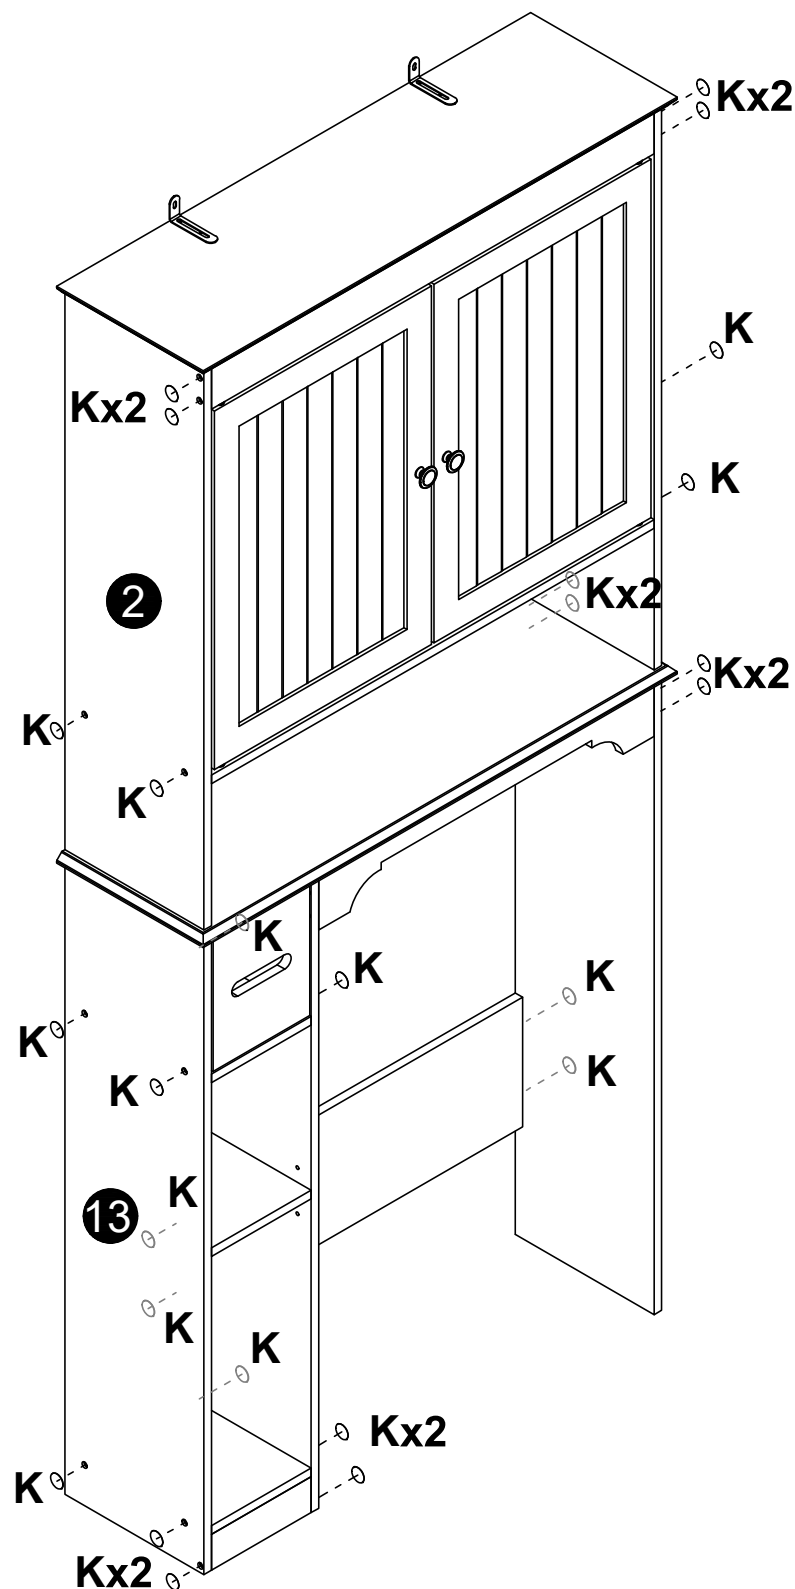

K	18mm
	
x26	

Step 23

