




## ASSEMBLY INSTRUCTIONS

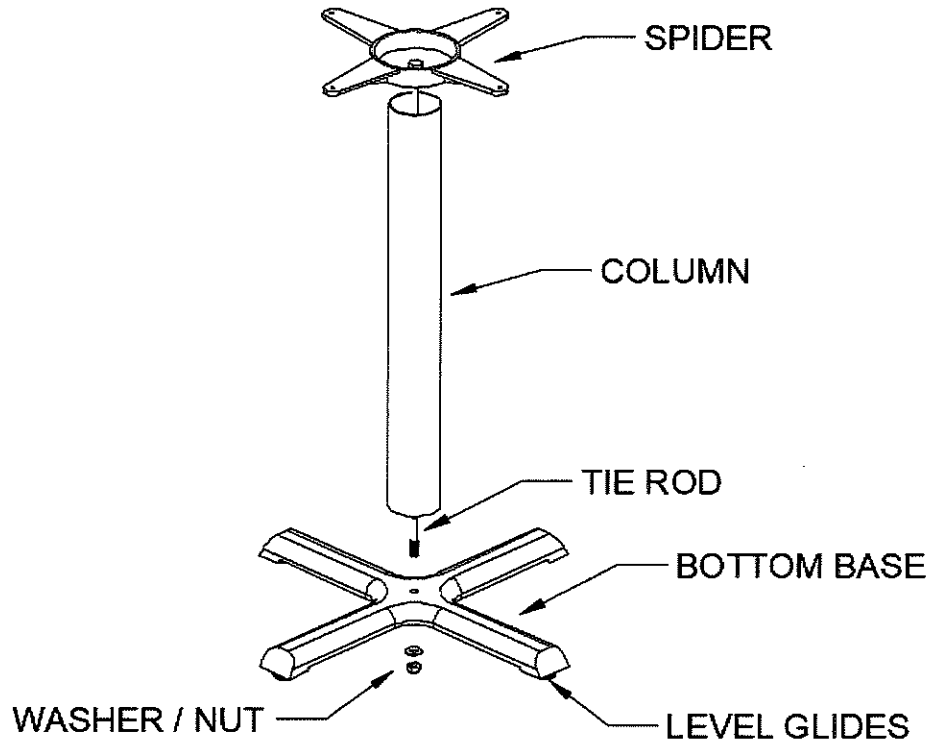

### Tools Needed: $\frac{3}{4}$ " Wrench / Socket

Note: T-Base not shown in above diagram. Assembly is the same

1. Insert **TIE ROD** threaded end through **SPIDER** center hole.
2. Insert **TIE ROD / SPIDER** through **COLUMN**.
3. Place **SPIDER** on a hard surface with the **TIE ROD** threaded in the end in the upright position.
4. Install **WASHER / NUT**. Center all components and tighten securely.
5. Adjust **LEVEL GLIDES** as necessary.