



Before assembling your bed, please read through these instructions carefully and familiarize yourself with the different parts.

Instructions apply for bed sizes
QUEEN > KING

1	HEADBOARD PANEL	1 PC
2	LEFT LEG	1 PC
3	RIGHT LEG	1 PC
4	WOOD DOWELS (Factory Installed)	4 PCS
5	FOOTBOARD	1 PC

 **A** JCB M6 X 110mm (4 3/8") - 4 pcs
Spare - 1 pc


B Barrel nut - 4 pcs
Spare - 1 pc

Allen wrench - 1pc
Spare - 1pc

NOTE: WE INCLUDE SPARE HARDWARE IN CASE DAMAGE OCCURS DURING ASSEMBLY.

Step 1

Attach the legs (2) and (3) to headboard panel (1) and pillow stop (4) using JCB (A) and barrel nut (B). Tighten with the Allen wrench (F).

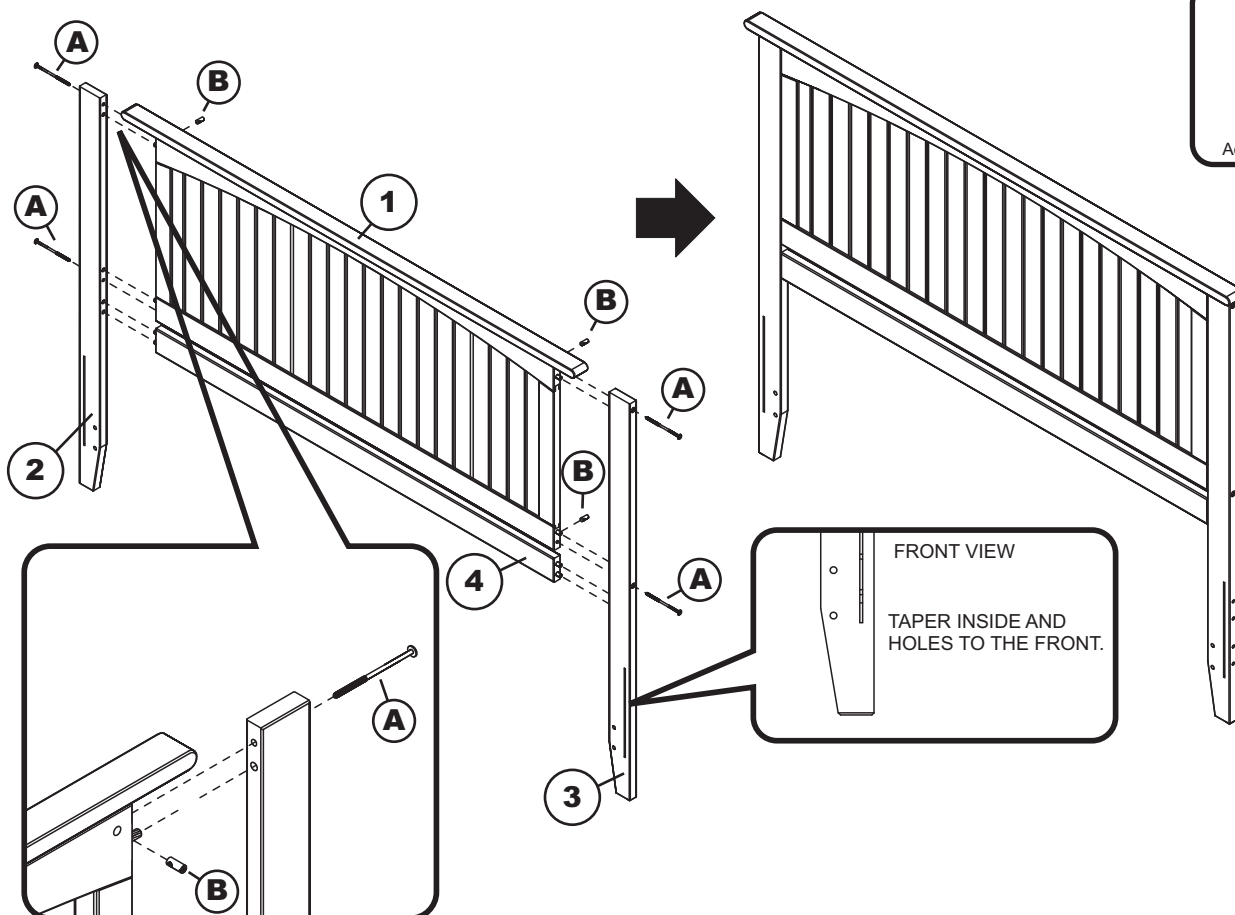

Adult assembly

FRONT VIEW

TAPER INSIDE AND
HOLES TO THE FRONT.

Congratulations!

Your headboard is now assembled.

To ensure lasting safety, we recommend that you periodically check that all screws are tight and all parts are secure.

PO : 



BED WITH MATCHING FOOTBOARD



- 01 **HARDWARE**
 - 02 **HEADBOARD**
 - 03 **FOOTBOARD**
 - 04 **SIDE RAILS**
- BOX 1
- BOX 2




Adult assembly

Step 1

Attach the side rails (04) to the headboard (02) and footboard (03) using the bed hook as shown below.

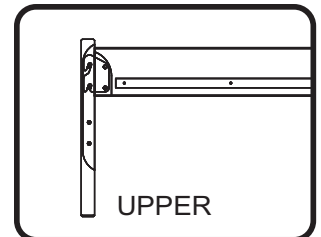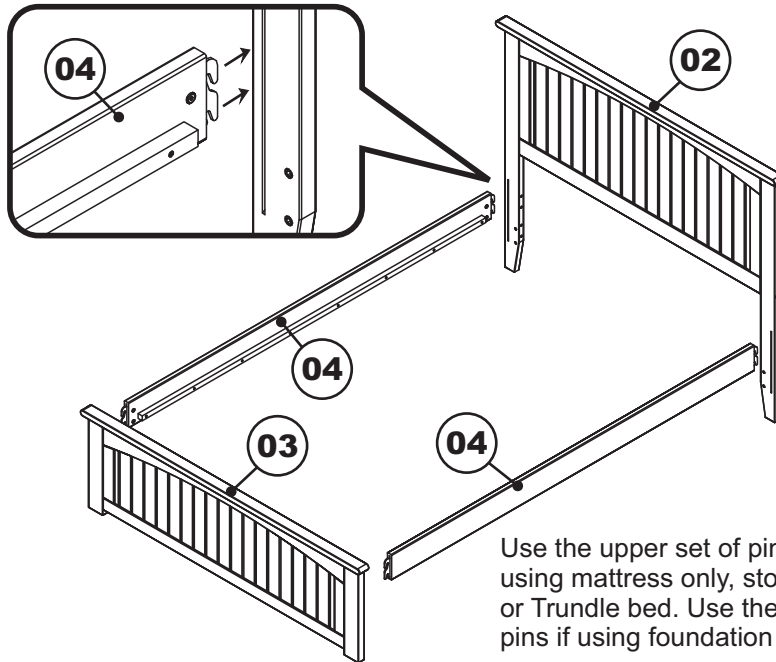

UPPER

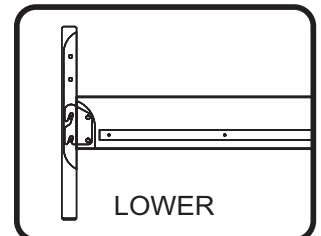


LOWER

Use the upper set of pins when using mattress only, storage drawers or Trundle bed. Use the lower set of pins if using foundation and mattress.

Step 2

Lastly, lay slat kit or foundation support board onto the bed. For assembly, follow the assembly instructions included with support system.

PLATFORM BED - TALL HEIGHT

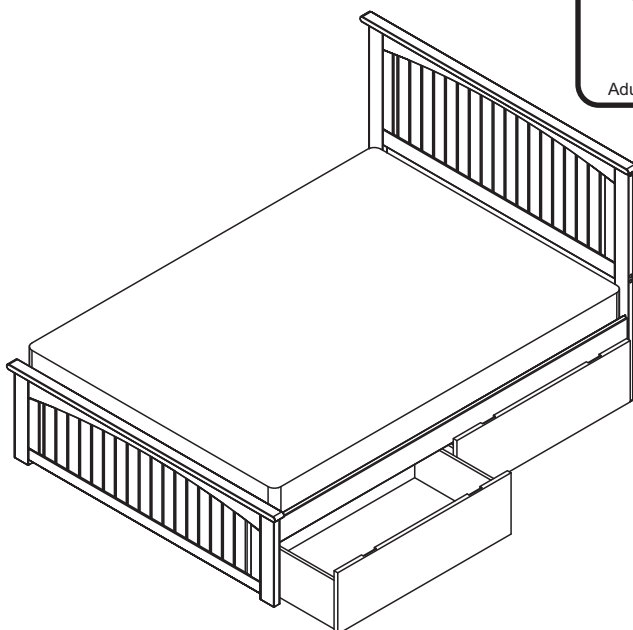

Adult assembly

TRADITIONAL BED - LOW HEIGHT

