


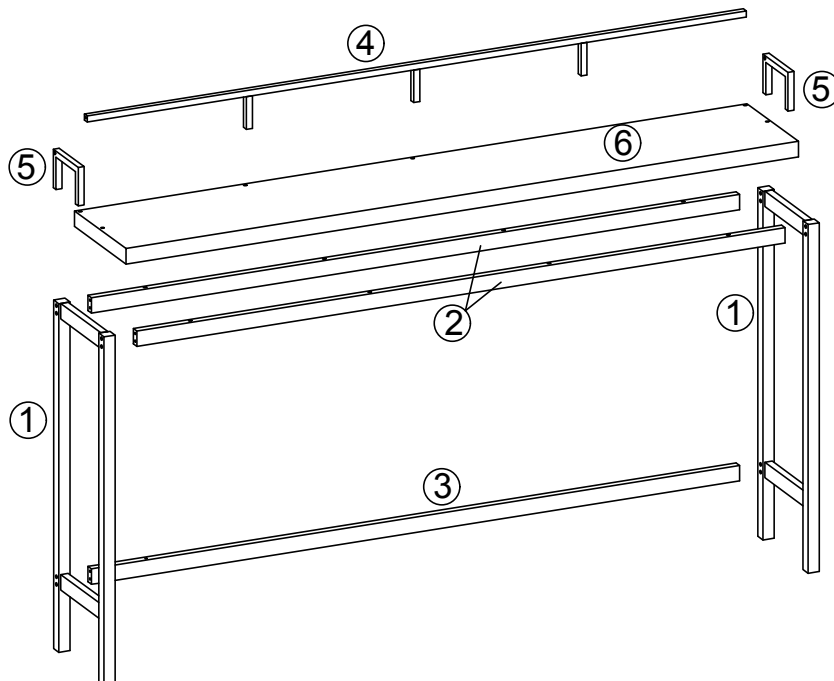


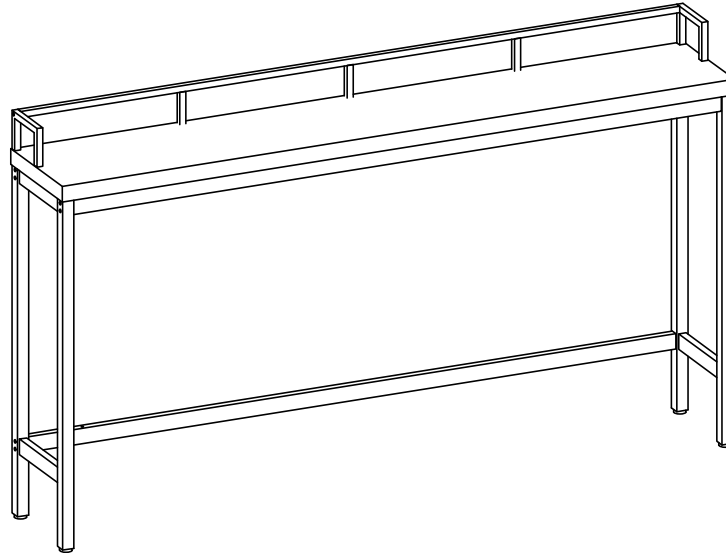




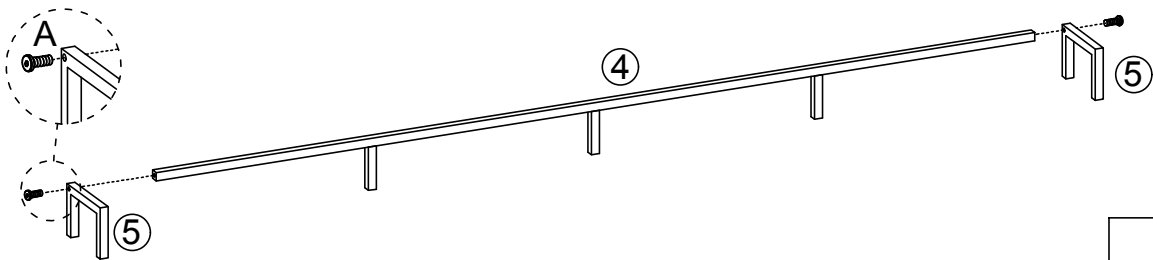
Installation Instructions


Notes: Don't tighten screws completely at first, just in case parts were assembled wrong and need disassemble. Tighten screws at last when all parts are put together.




 M6×35mm A×2pcs	 M6×55mm B×27pcs	 4×35mm C×2pcs	 Ø6×30mm D×2pcs	 E×2pcs	 F×4pcs	 G×1pc
--	---	---	--	--	---	--


STEP 1





M6×35mm
Ⓐ×2pcs



STEP 2

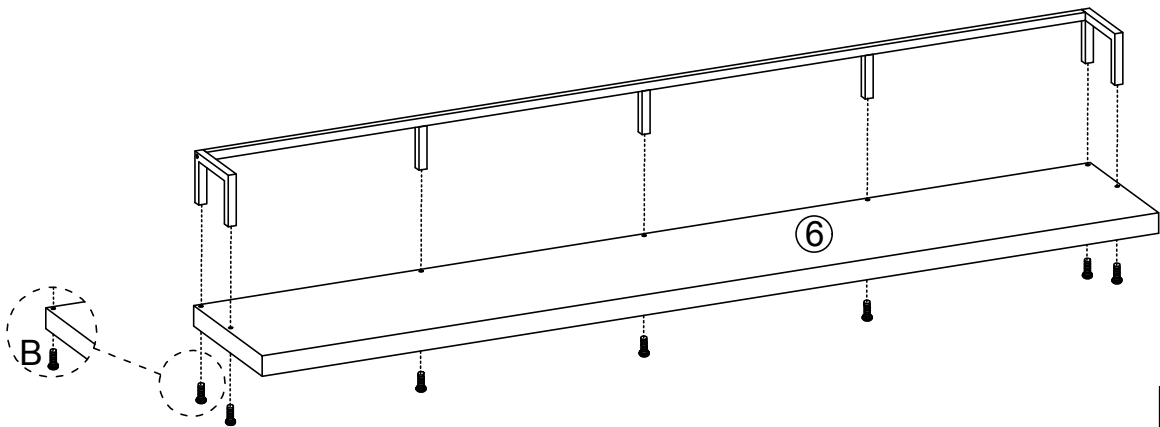



M6×55mm
Ⓑ×7pcs


STEP 3

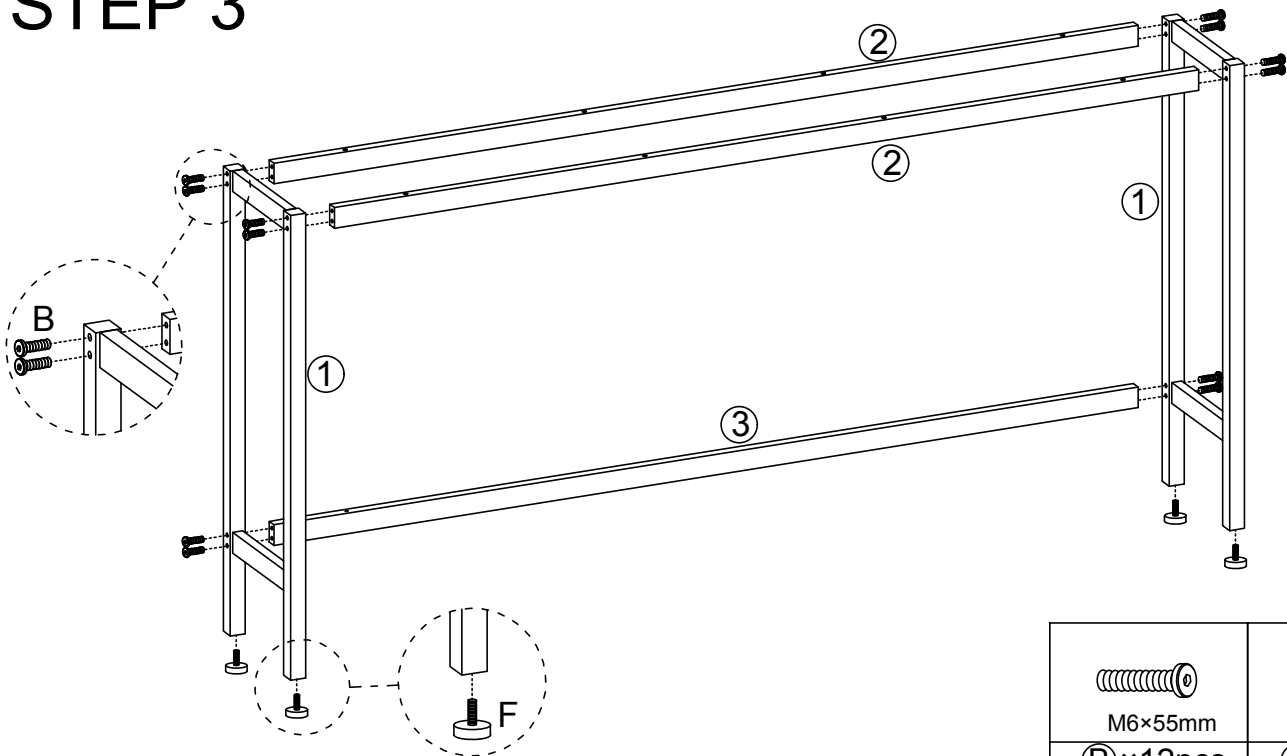


	
M6×55mm	
Ⓑ×12pcs	Ⓕ×4pcs




STEP 4

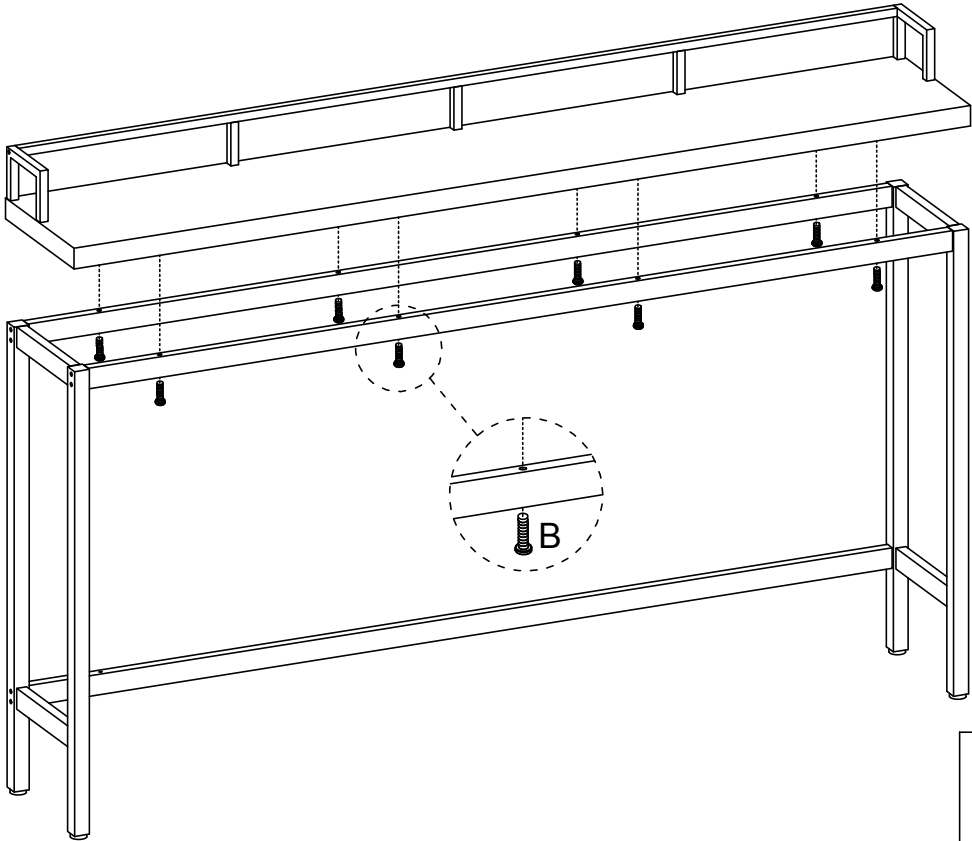


M6×55mm
Ⓑ × 8 pcs

STEP 5

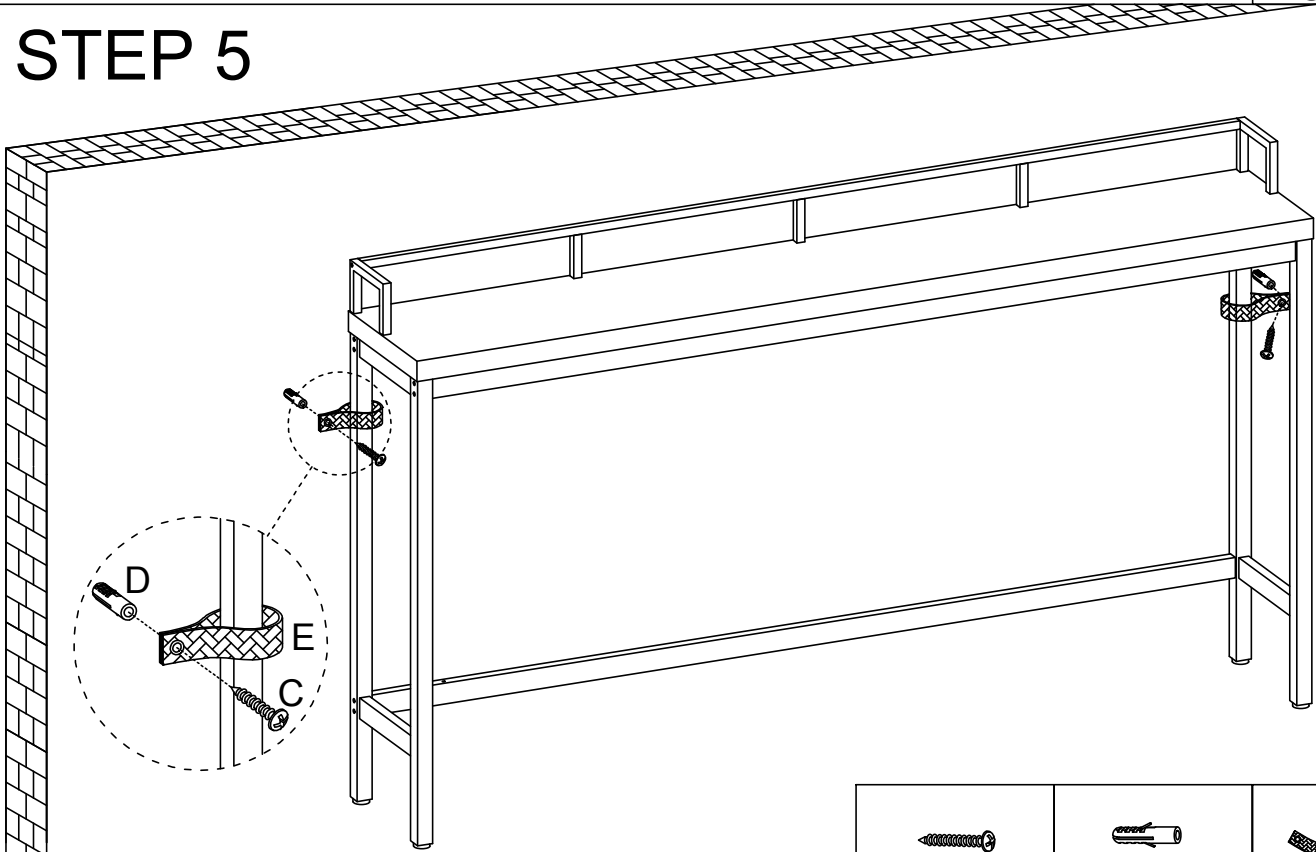

		
4×35mm	Ø6×30mm	
Ⓒ × 2 pcs	Ⓓ × 2 pcs	Ⓔ × 2 pcs