



C50900 ASSEMBLY INSTRUCTIONS

Parts:

(2) Sides



(2) Dividers



(2) Shelves



(1) Top and Bottom



(3) Backs




Hardware:


(24) Hex screws



(1) Allen wrench

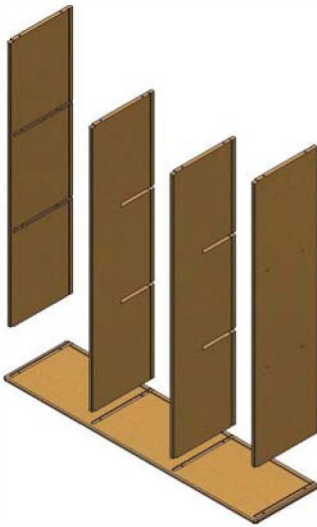


Step 1: Attach **Top, Bottom, and Shelves** into a **Side** piece using (8) supplied hex screws and allen wrench. Back grooves in top and bottom, -cuts that go all the way through from short end to short end, align with 3/8" deep back groove in side component. Back grooves face inwards towards middle of side. Slots in shelves also point towards 3/8" deep back groove in side.

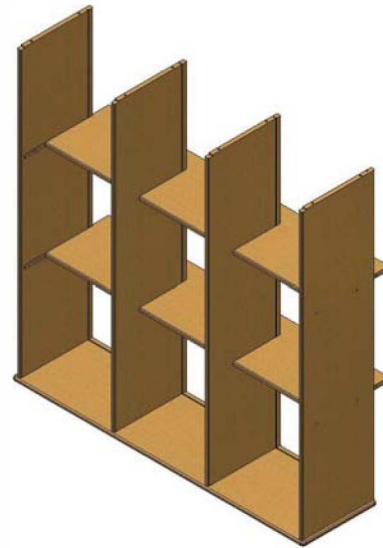


Step 2: Slide **Dividers** into place in grooves of **Shelves**. Attach to side piece using (2) hex screws for each with allen wrench.


For assistance, call: Customer Service 1-800-247-8465

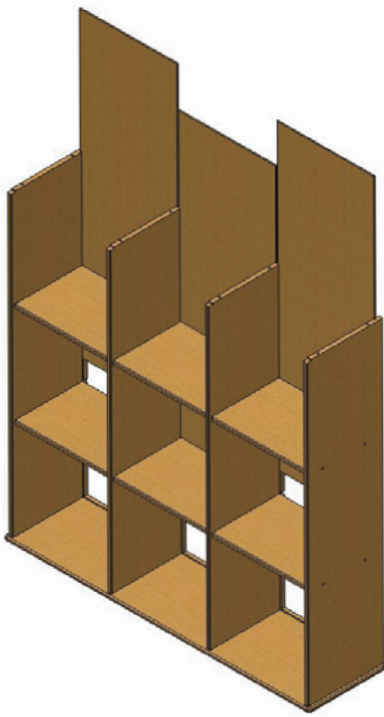

Step 3: Slide (3) **Backs** into place using back grooves of top, bottom, and shelves. Backs will extend out past edge of top, bottom, and shelves. Do not force and make flush. Make sure backs are sitting in back groove of side piece. No hardware required in this step.

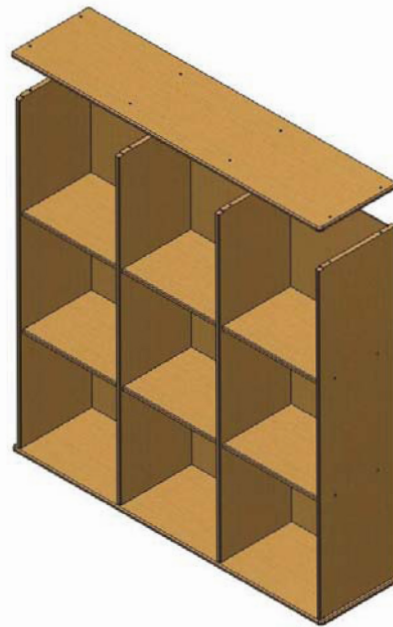

Step 4: Attach second **Side** piece using (8) supplied hex screws and allen wrench. Overhang on backs past top, bottom, and shelves will fit into deeper 3/8" back groove of second side piece.

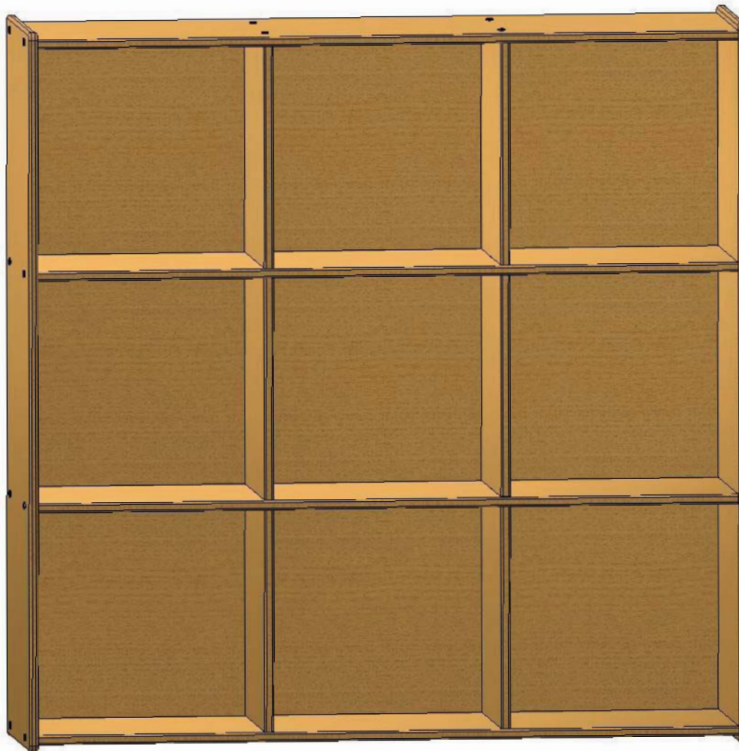

Step 5: Set unit upright, resting edges of sides on floor. Tighten all screws snugly. **DO NOT OVER-TIGHTEN. DO NOT DRILL.** Assembly is now complete.

For assistance, call: Customer Service 1-800-247-8465