

ASSEMBLY INTRODUCTION

Needed for Assembly:




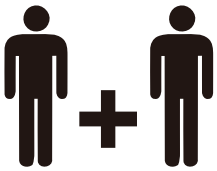


2 People

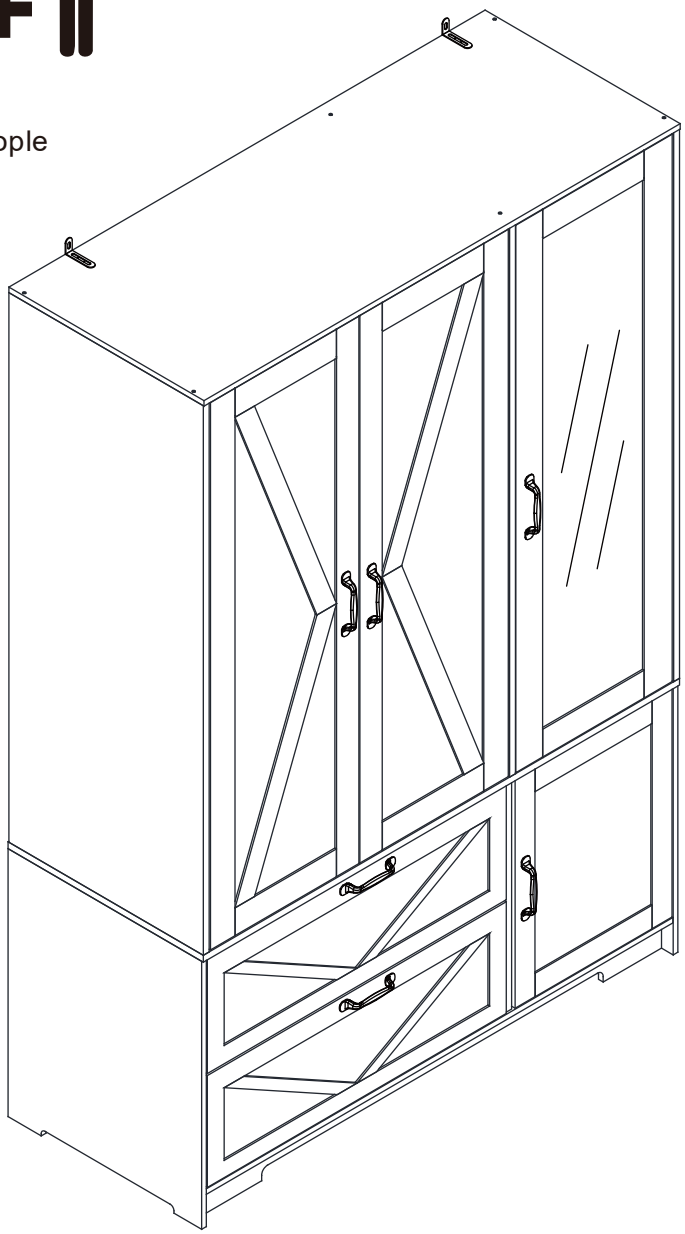

Exploded View

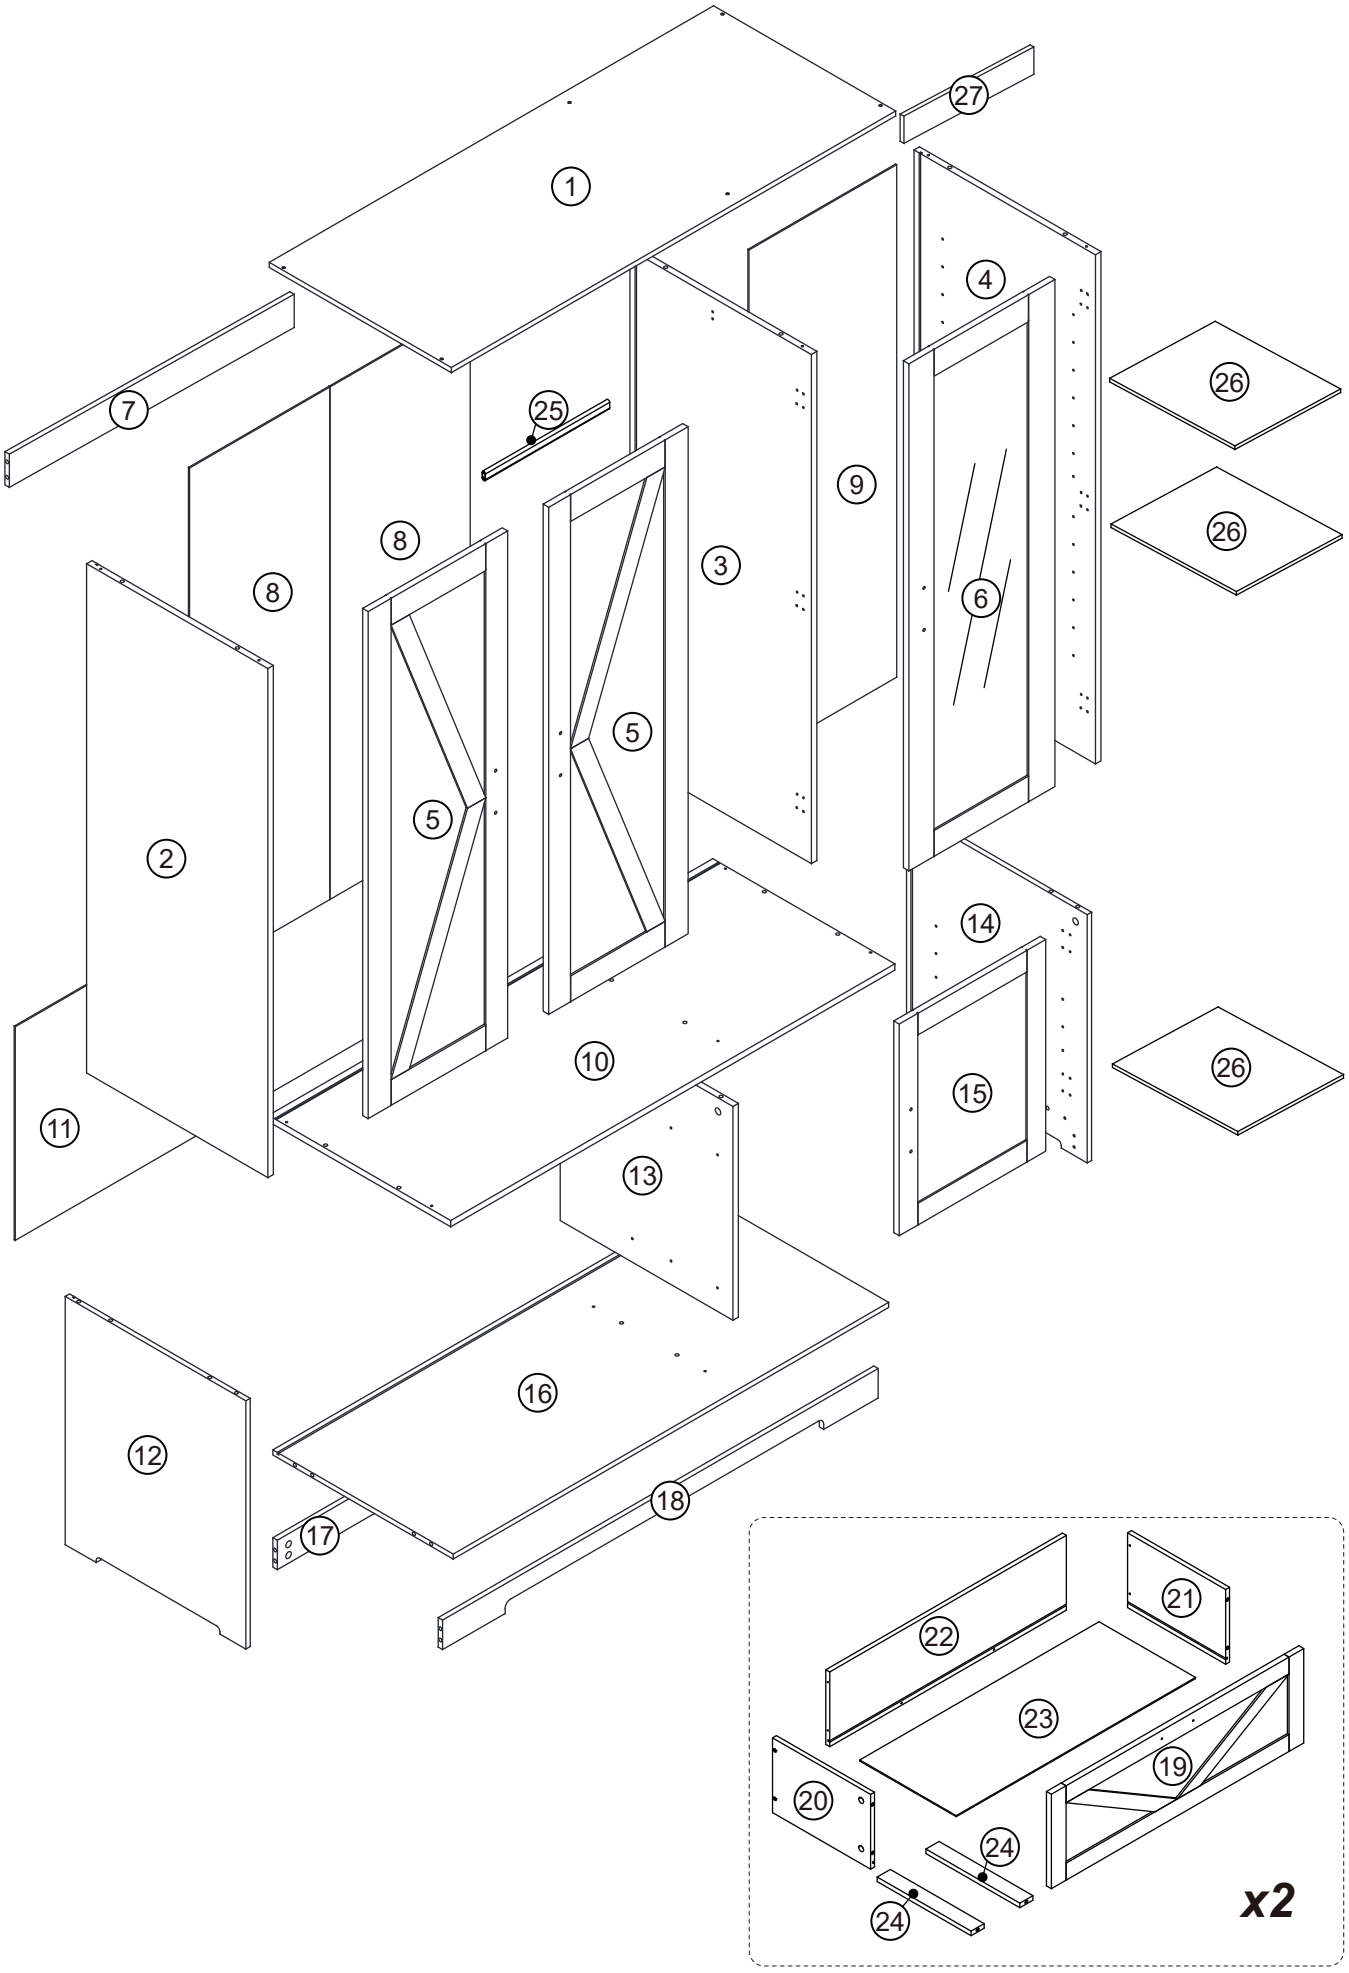


Fittings

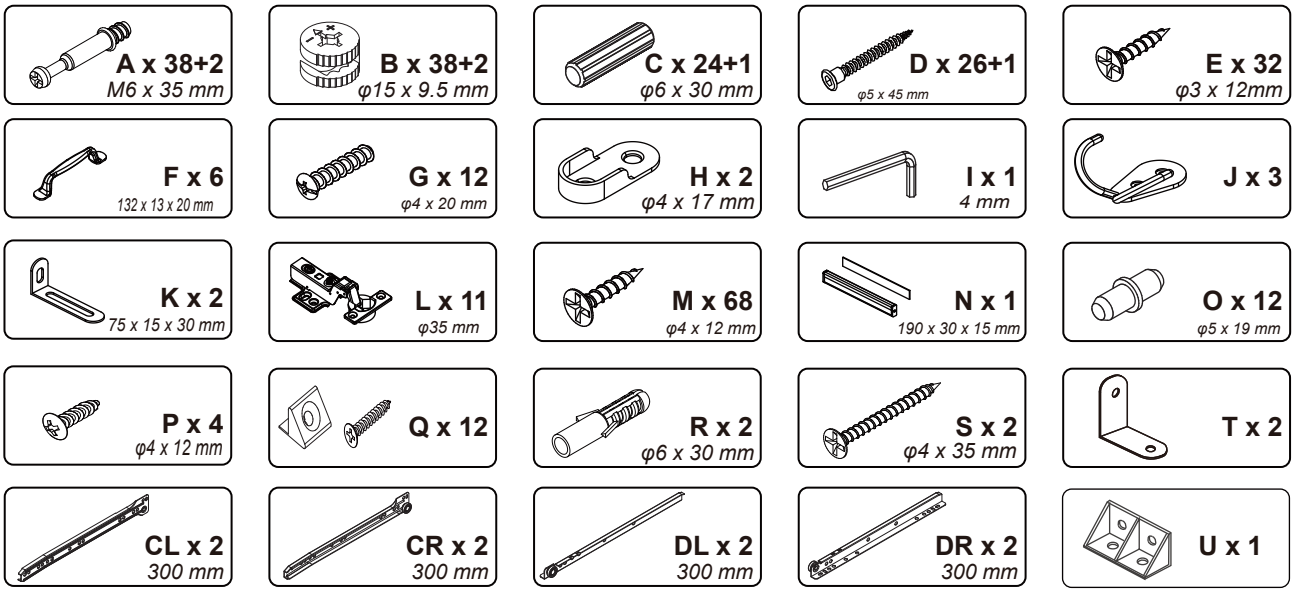

CAM-LOCK




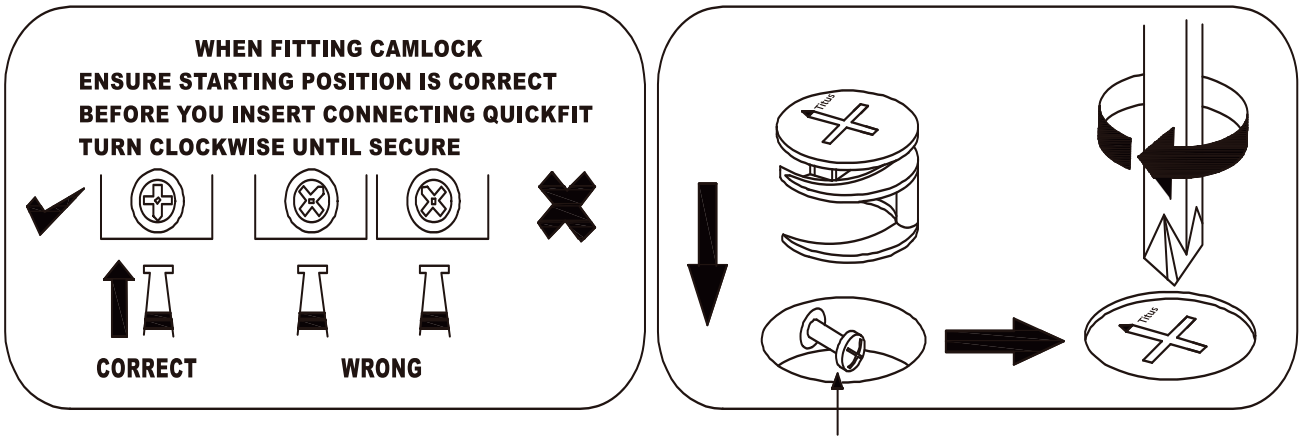


Quickfit head needs to be in centre

QUICKFIT


Tighten until shoulder is flush with panel.DO not overtighten or undertighten (see example below

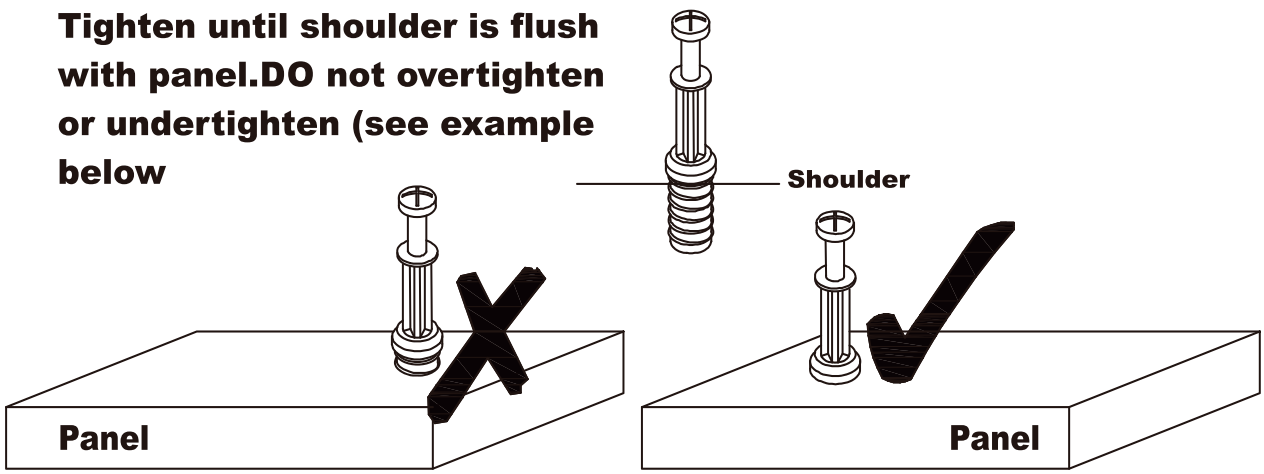


Step 1

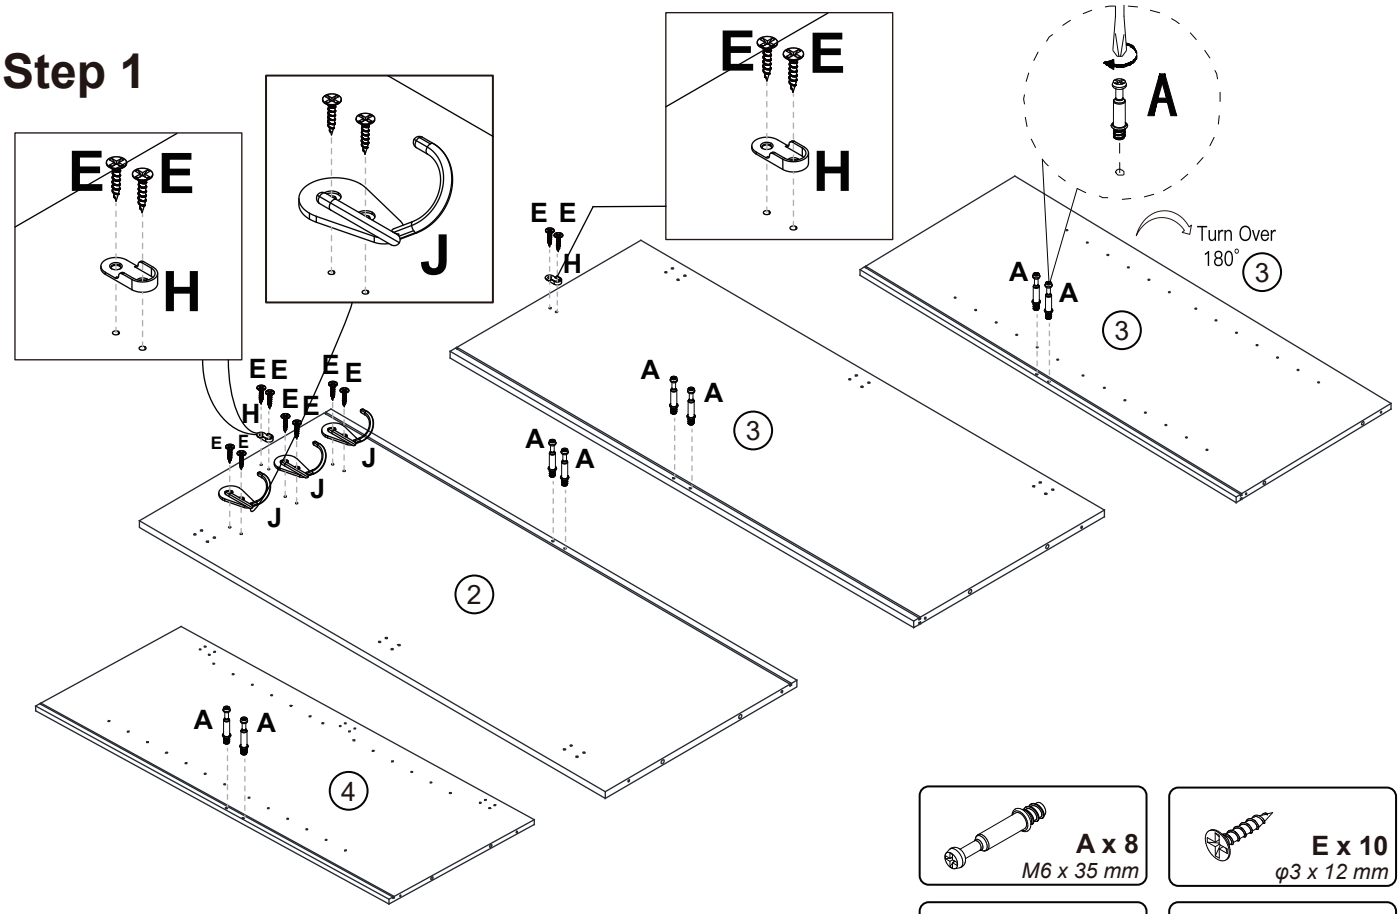

E E
H
J
A
Turn Over
180°
3
2
4
A x 8
M6 x 35 mm
E x 10
φ3 x 12 mm
H x 2
J x 3

Step 2

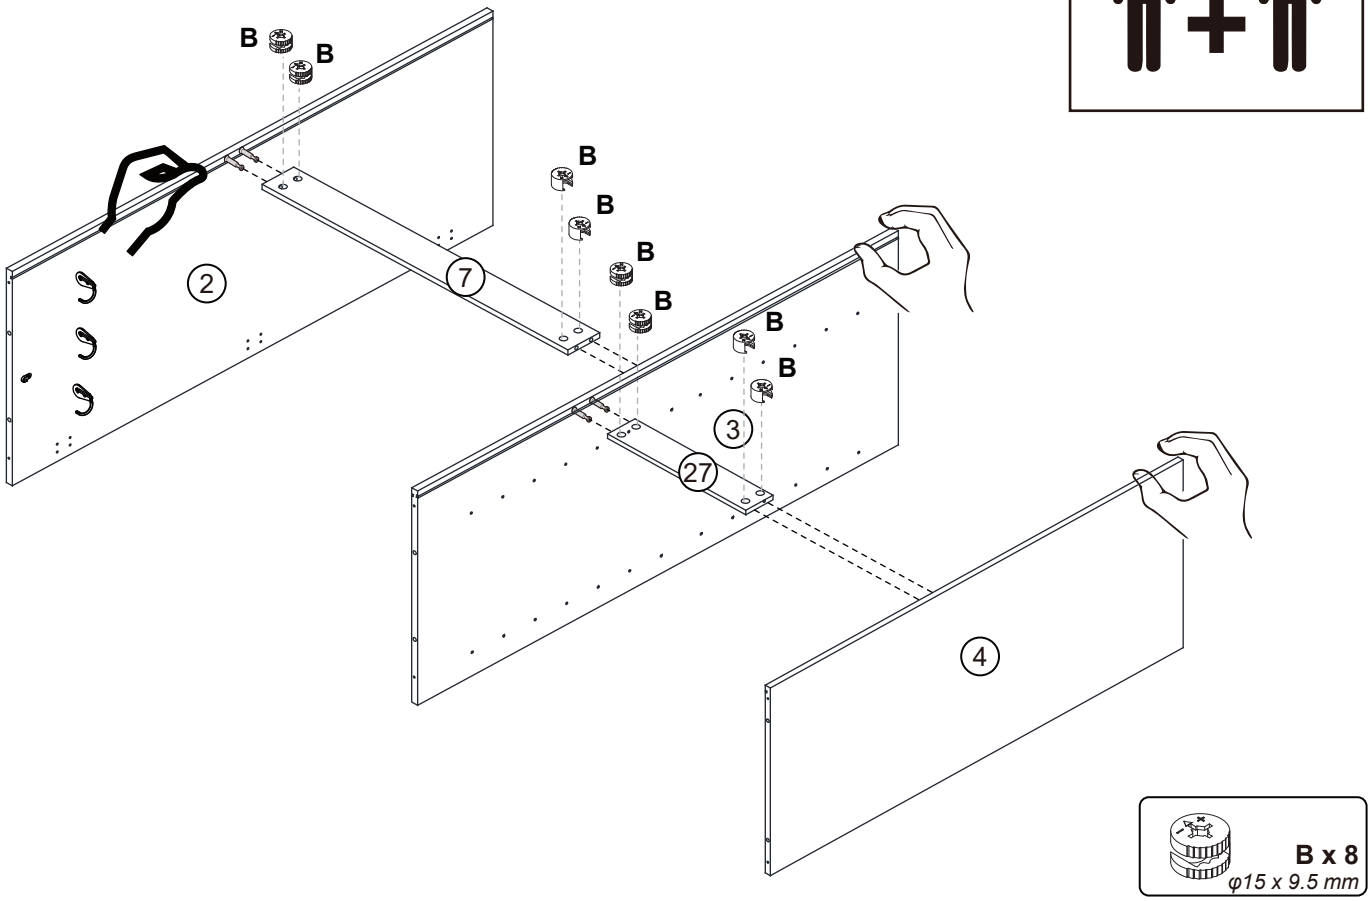

B
2
7
3
27
4
B x 8
φ15 x 9.5 mm

Step 3

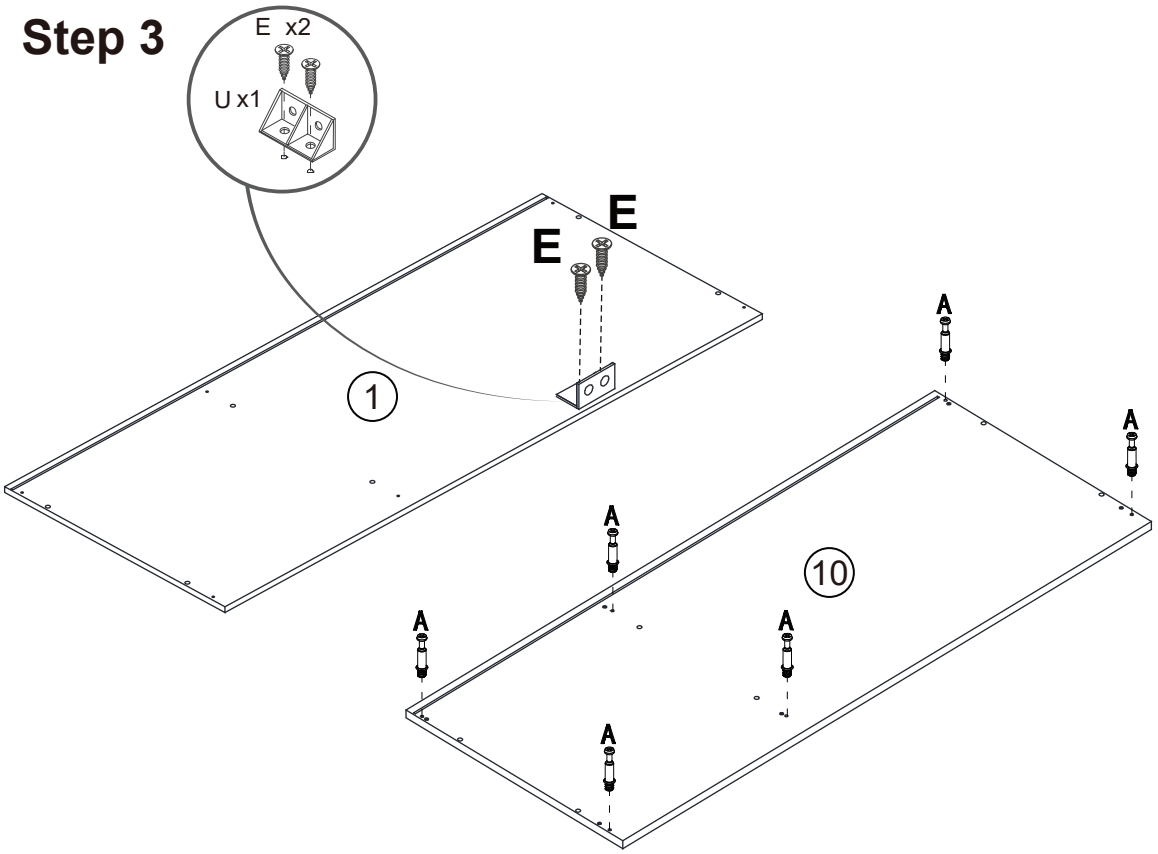










Step 4

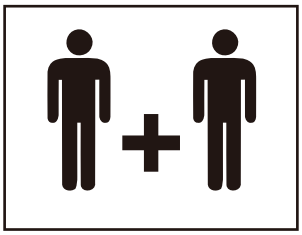


Turn Over 90° **Step 5**





Step 5

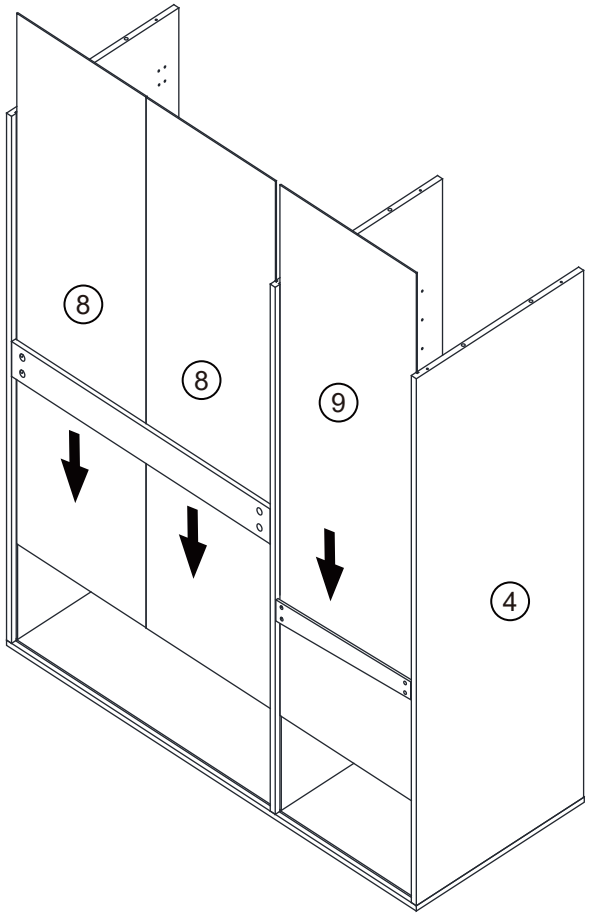


Step 6

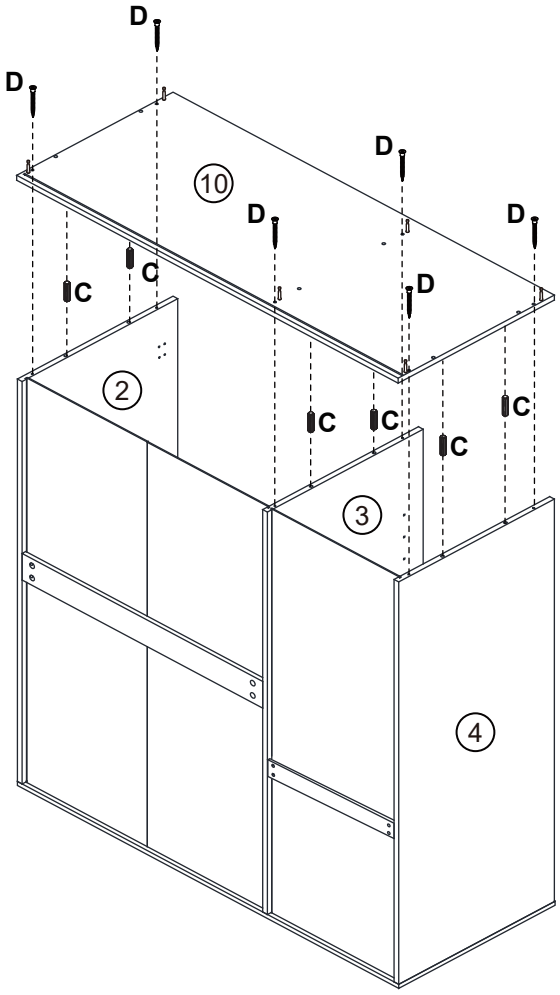

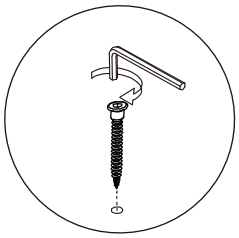








Step 7

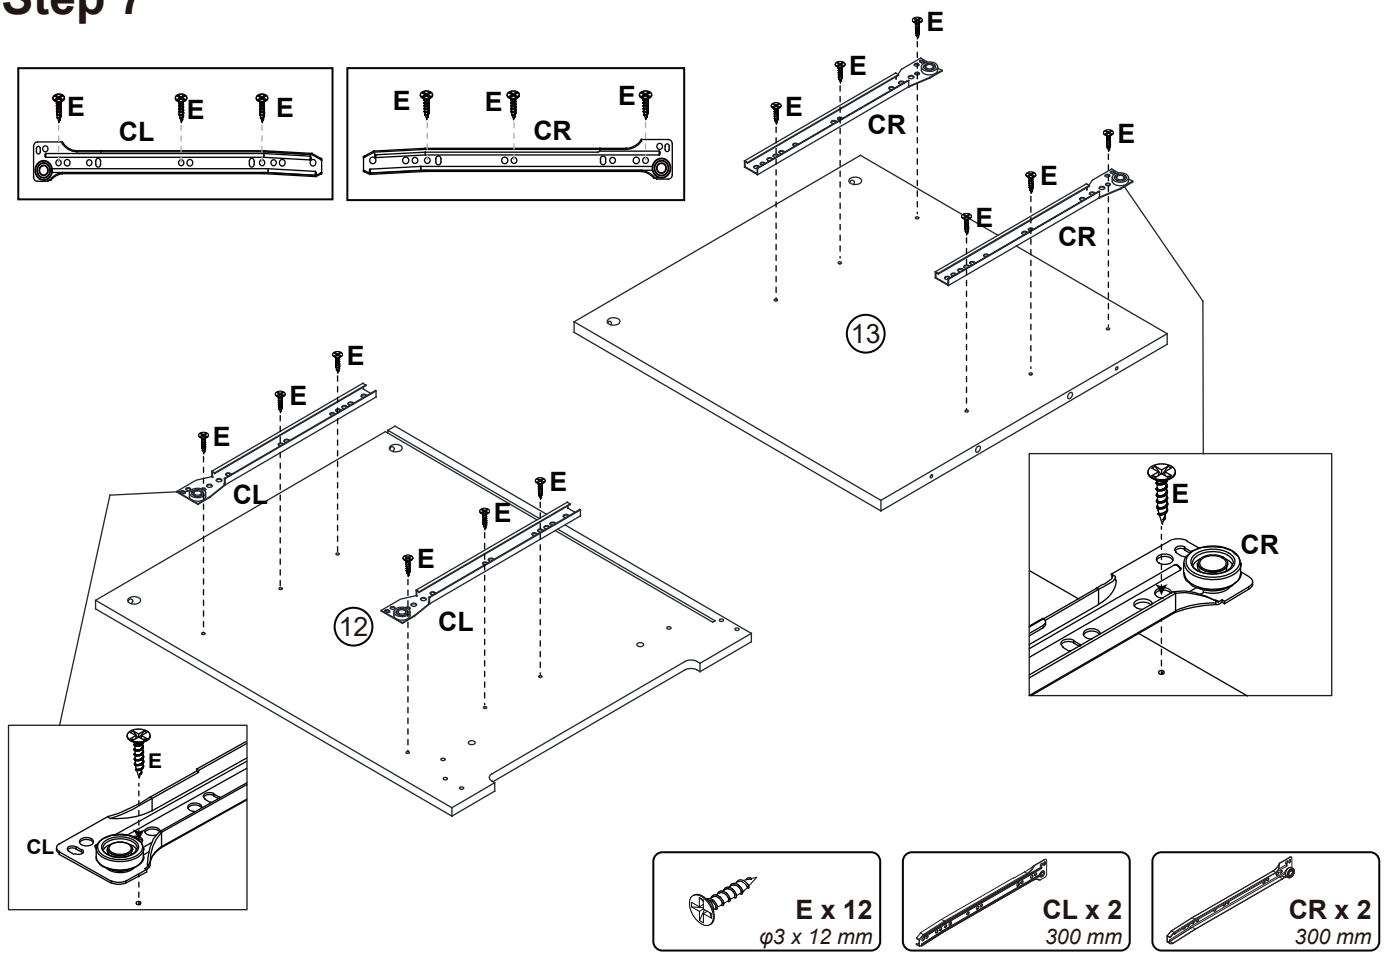


E x 12
φ3 x 12 mm

CL x 2
300 mm


CR x 2
300 mm


Step8

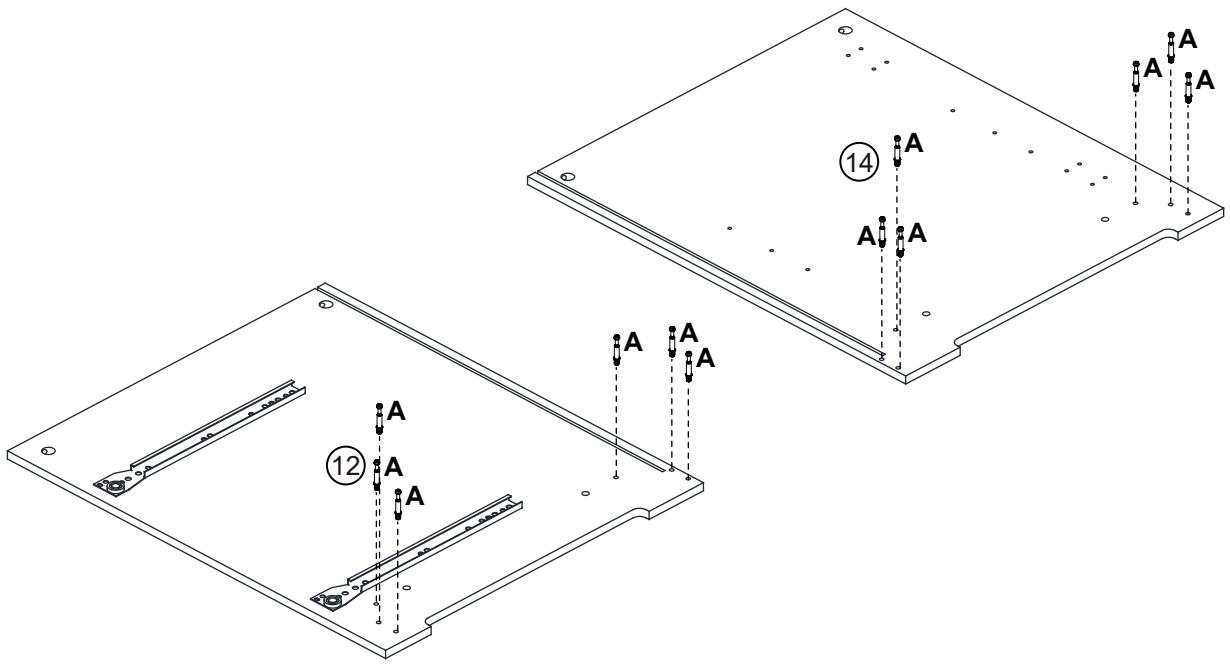


A x 12
M6 x 35 mm


Step 9

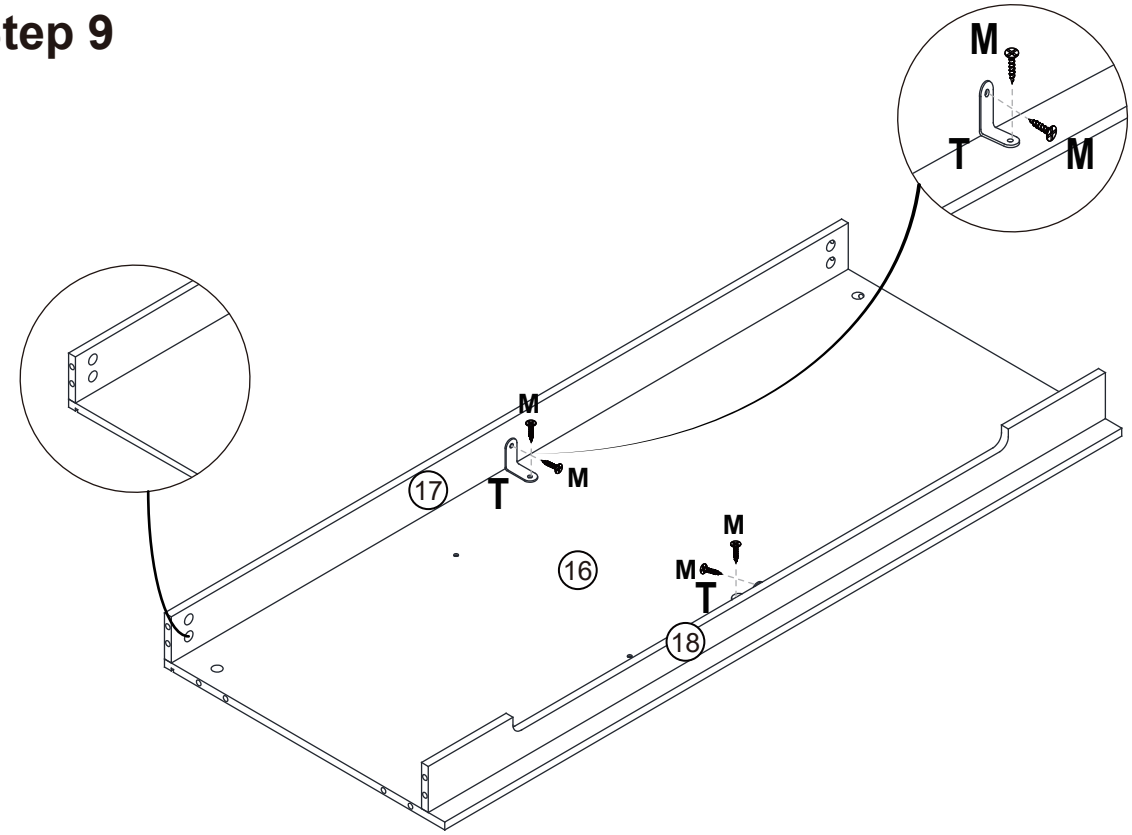








Step10

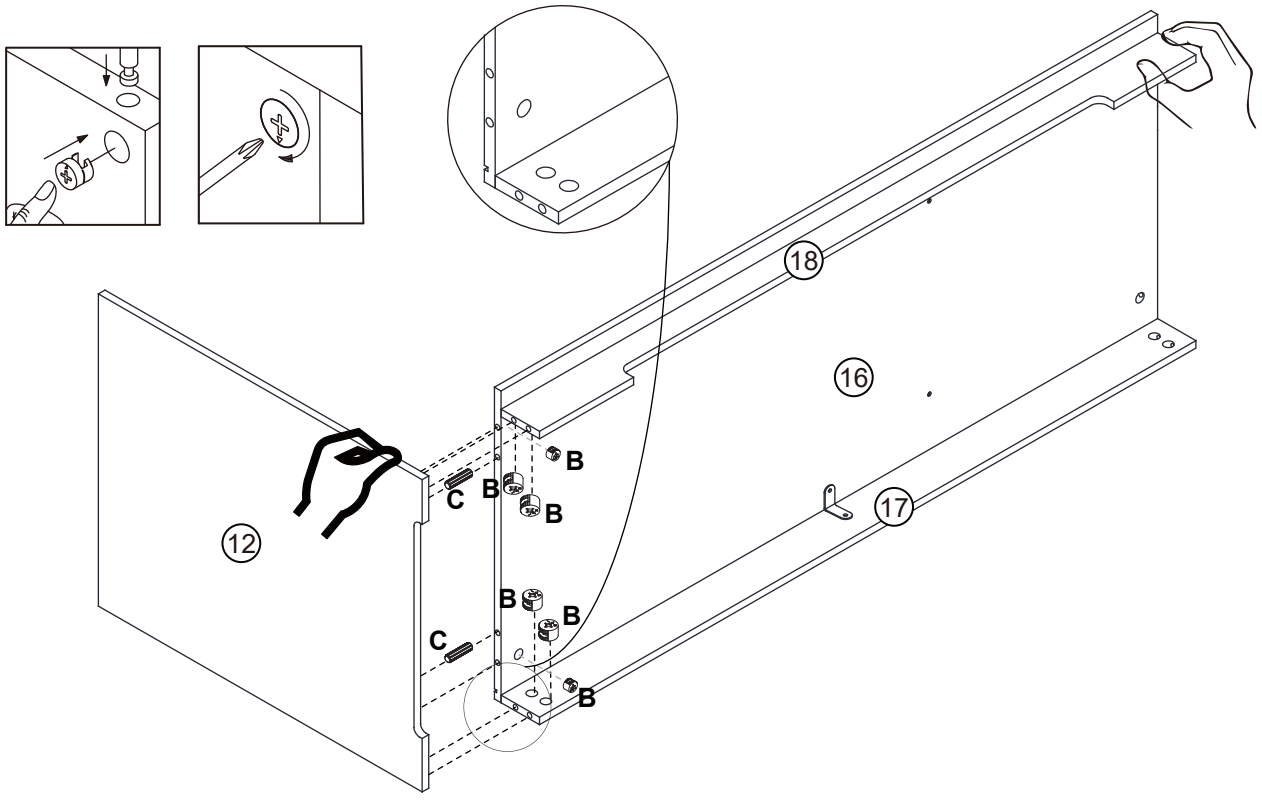








Step 11

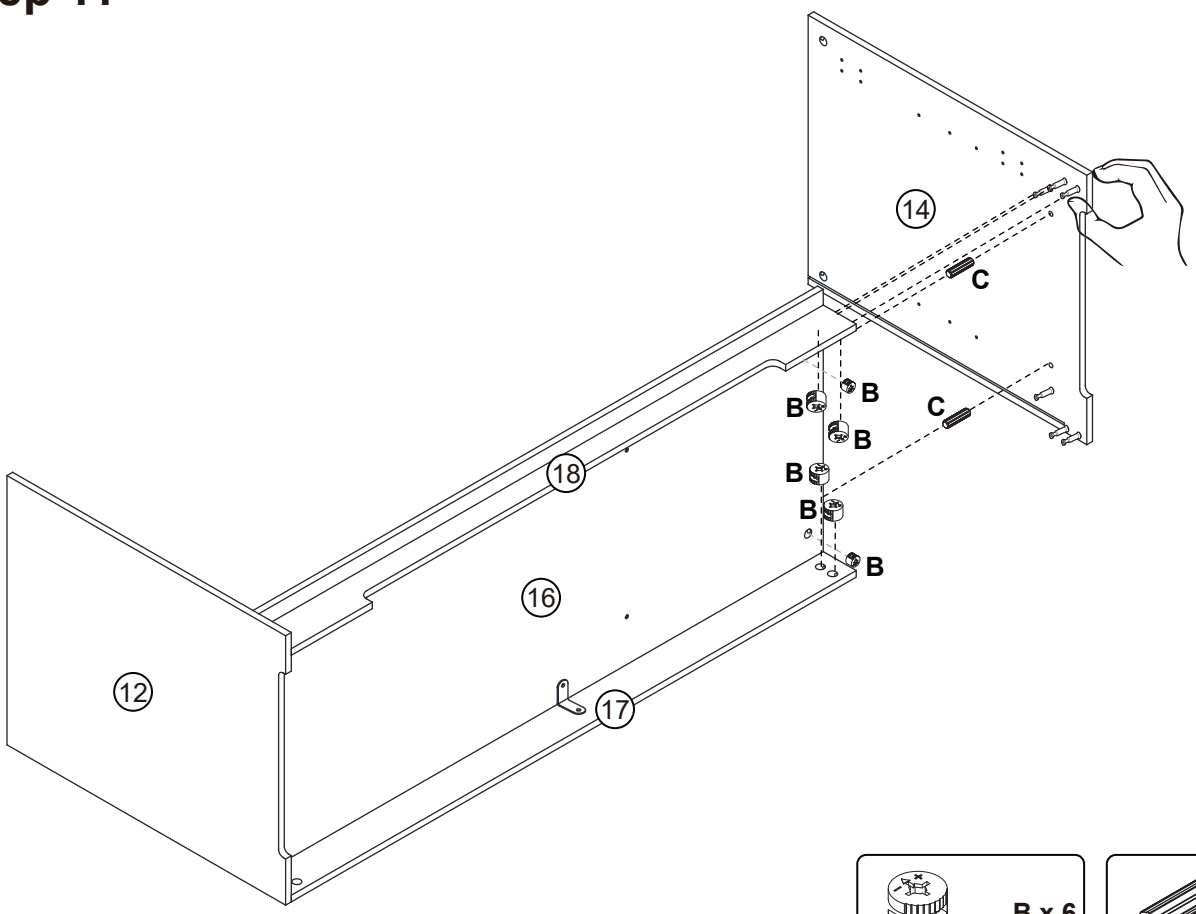




Step 12

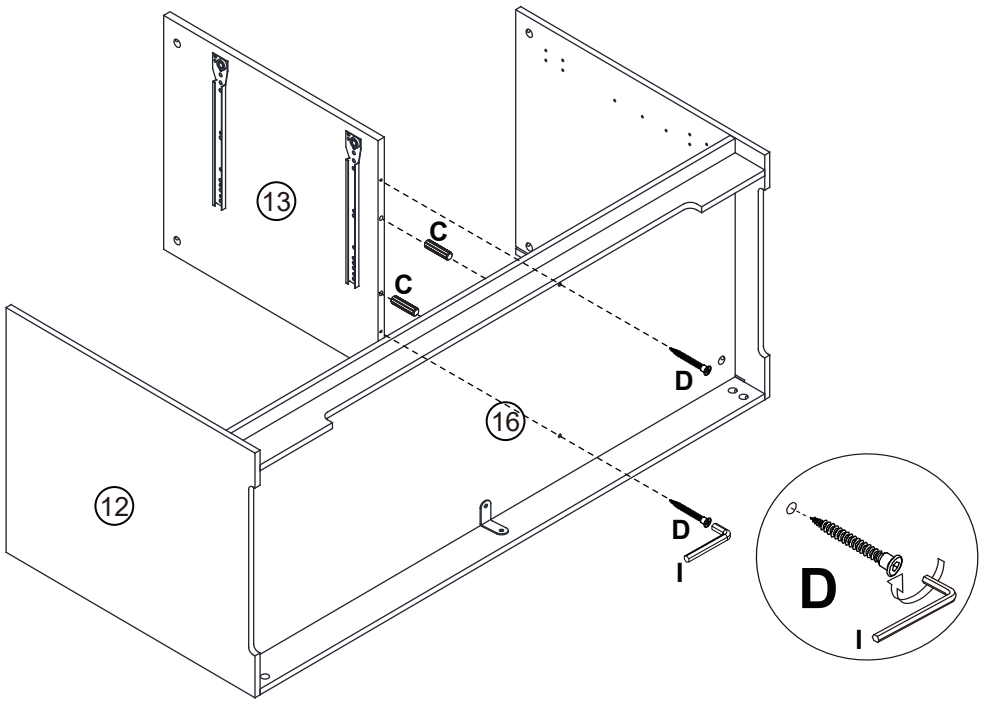









Step 13

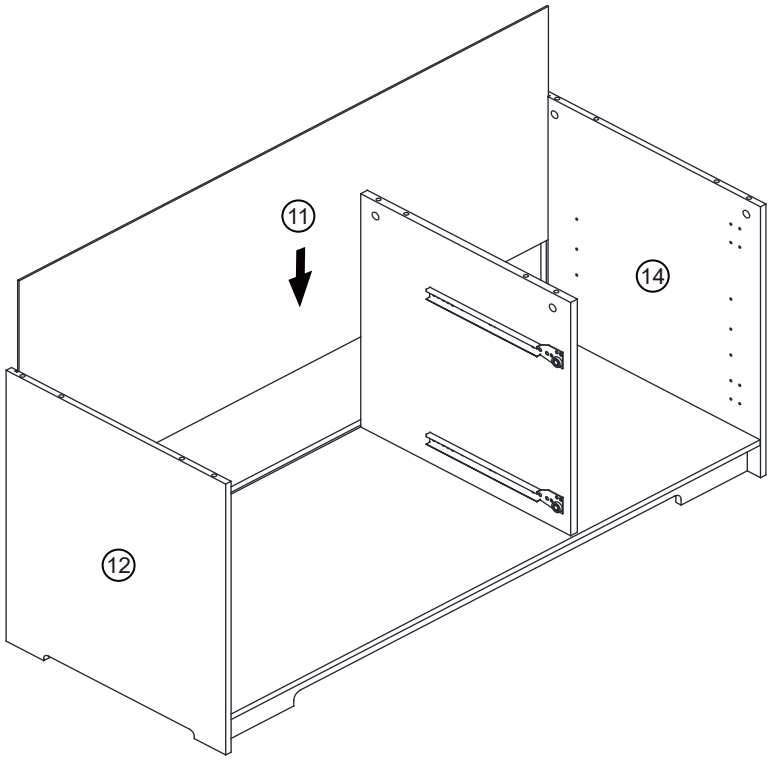


Step 14

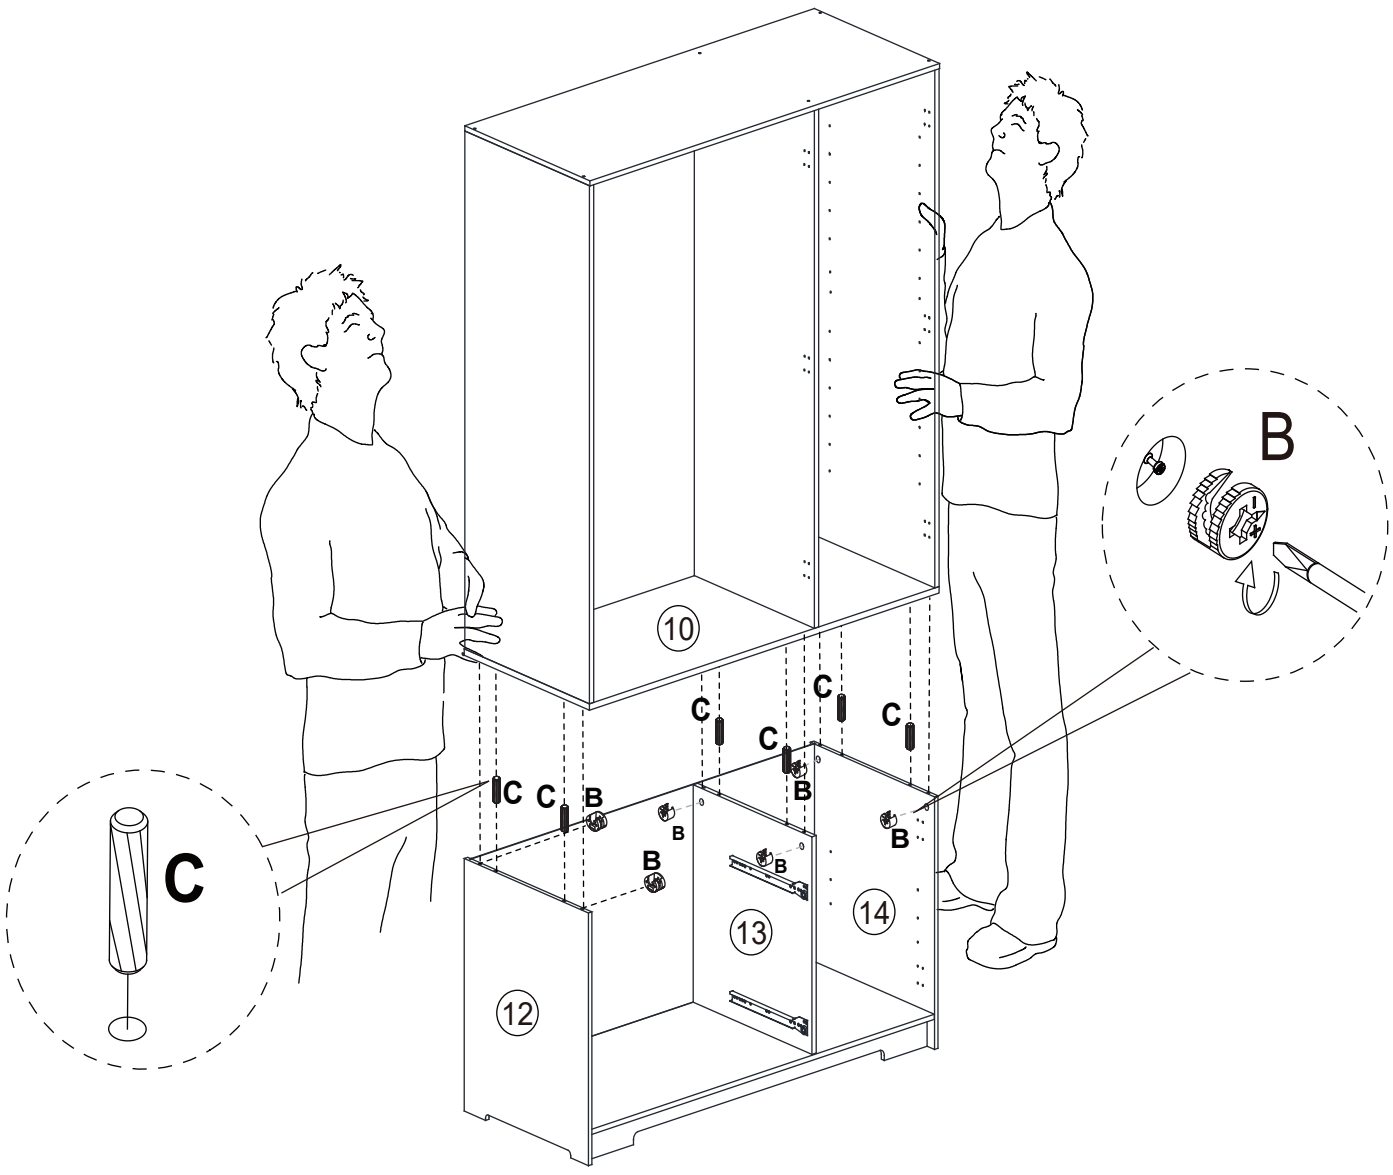

B x 6
φ15 x 9.5 mm


C x 6
φ6 x 30 mm

Step 15

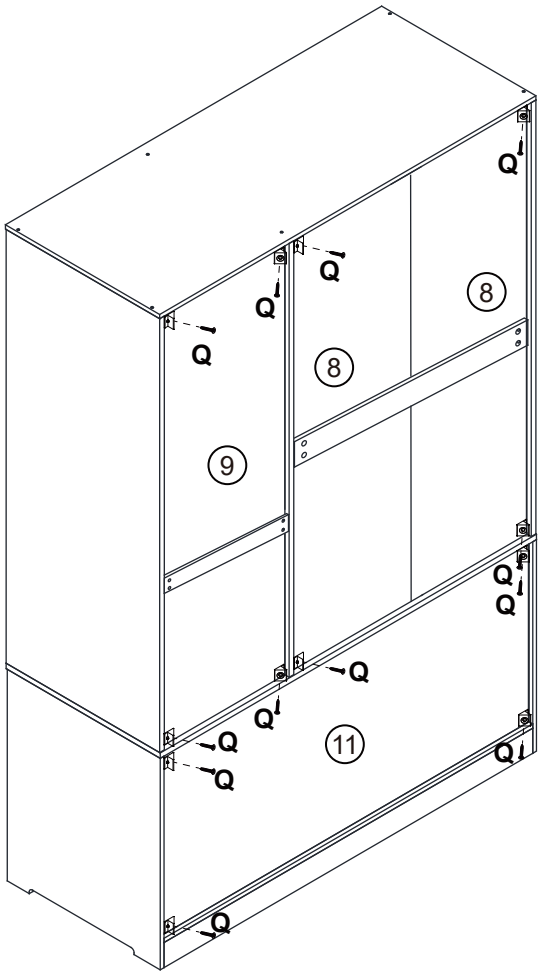

6 Q x 12

Step 16

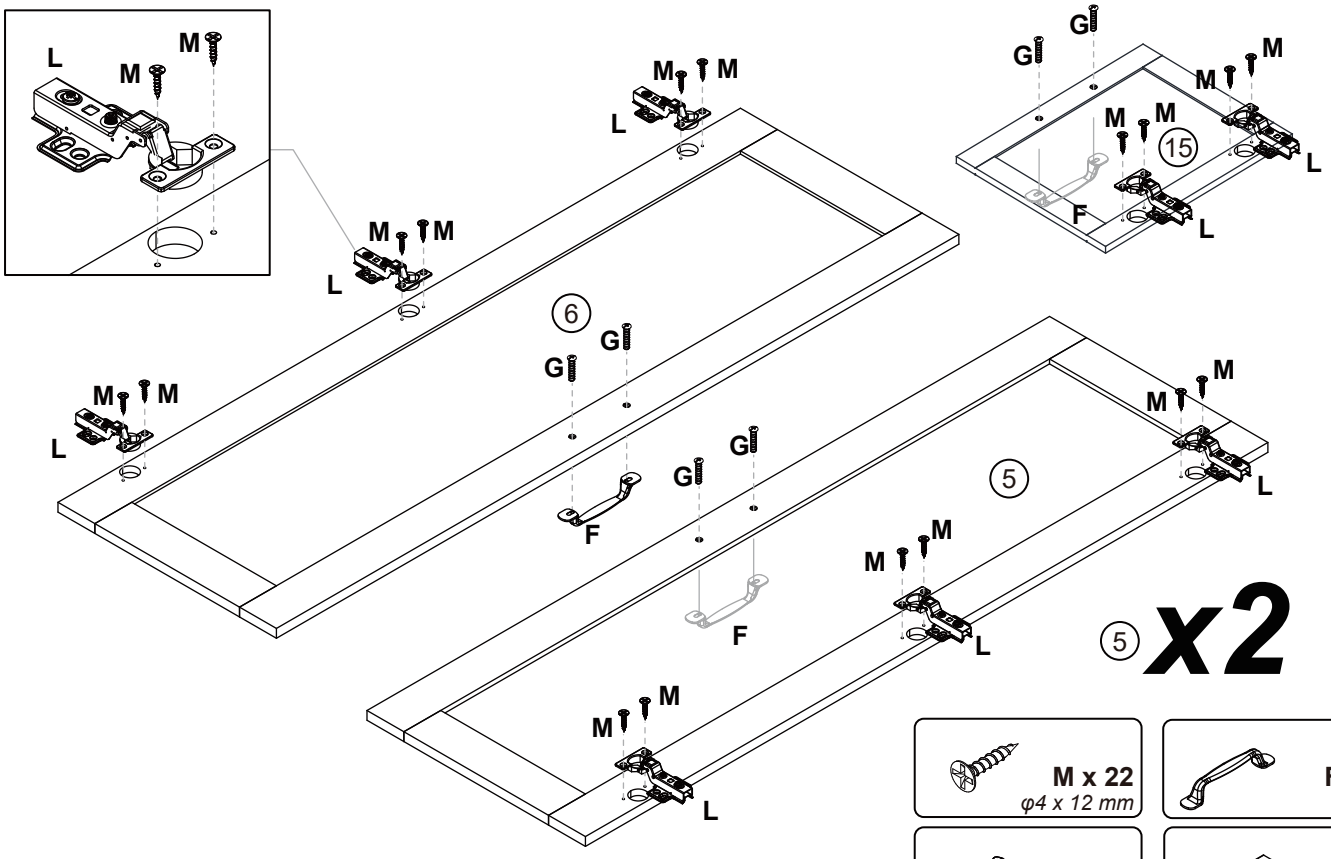


M x 22
φ4 x 12 mm

F x 4

G x 8


L x 11

Step 17

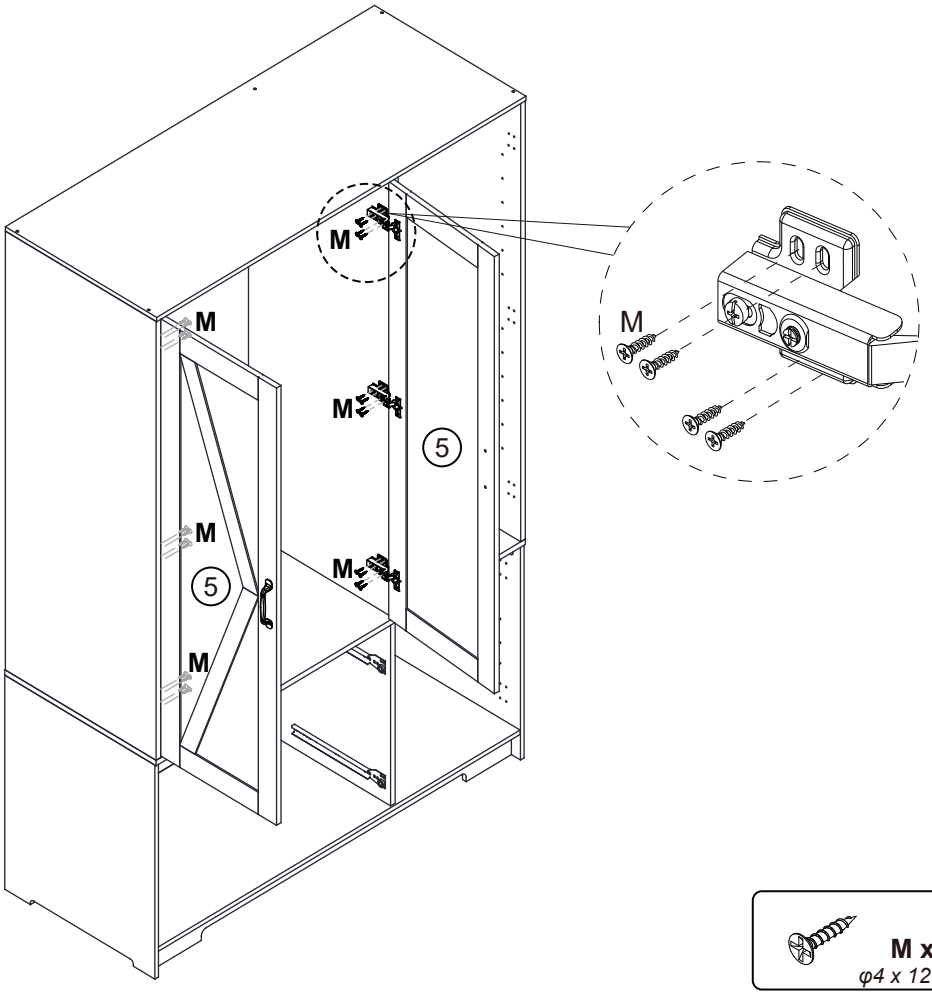


M x 24
φ4 x 12 mm


Step 18

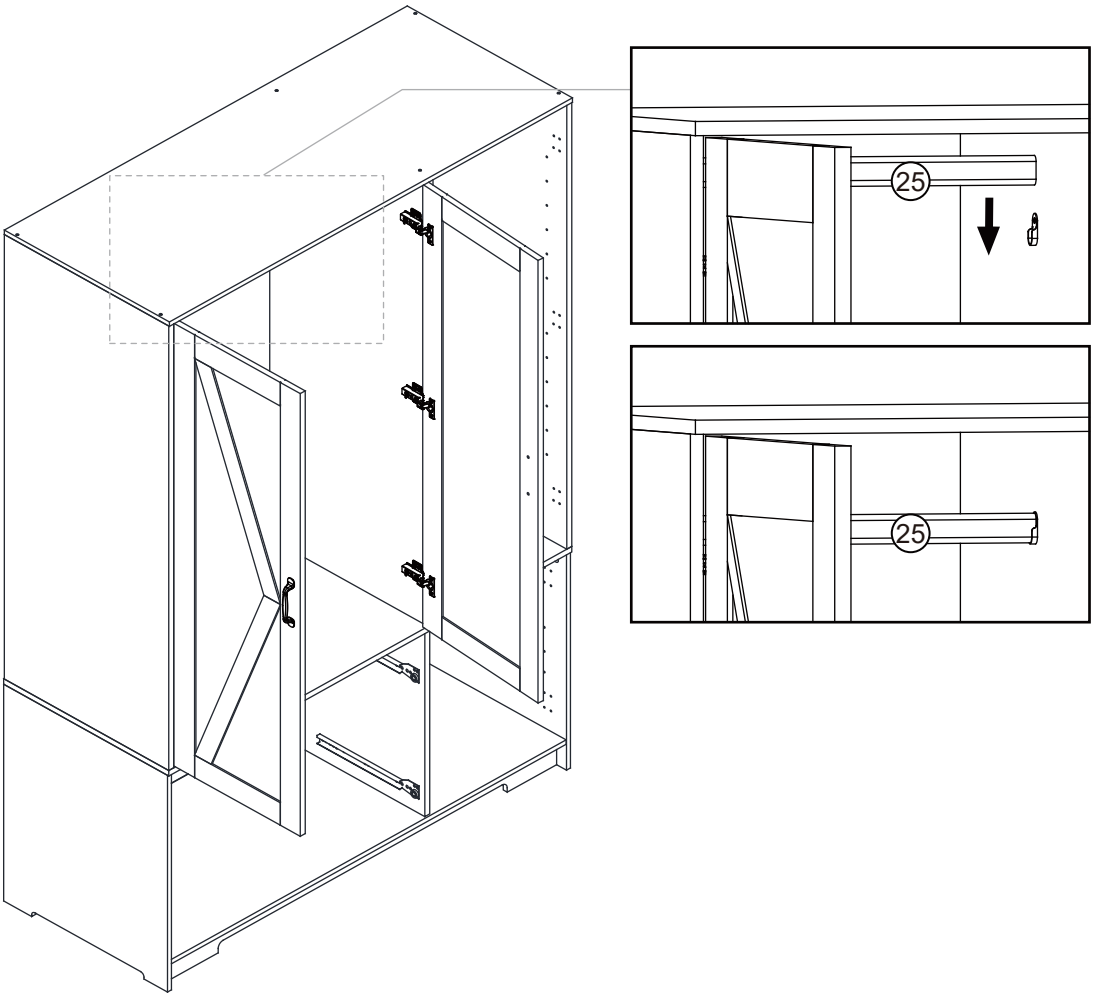

Step 19

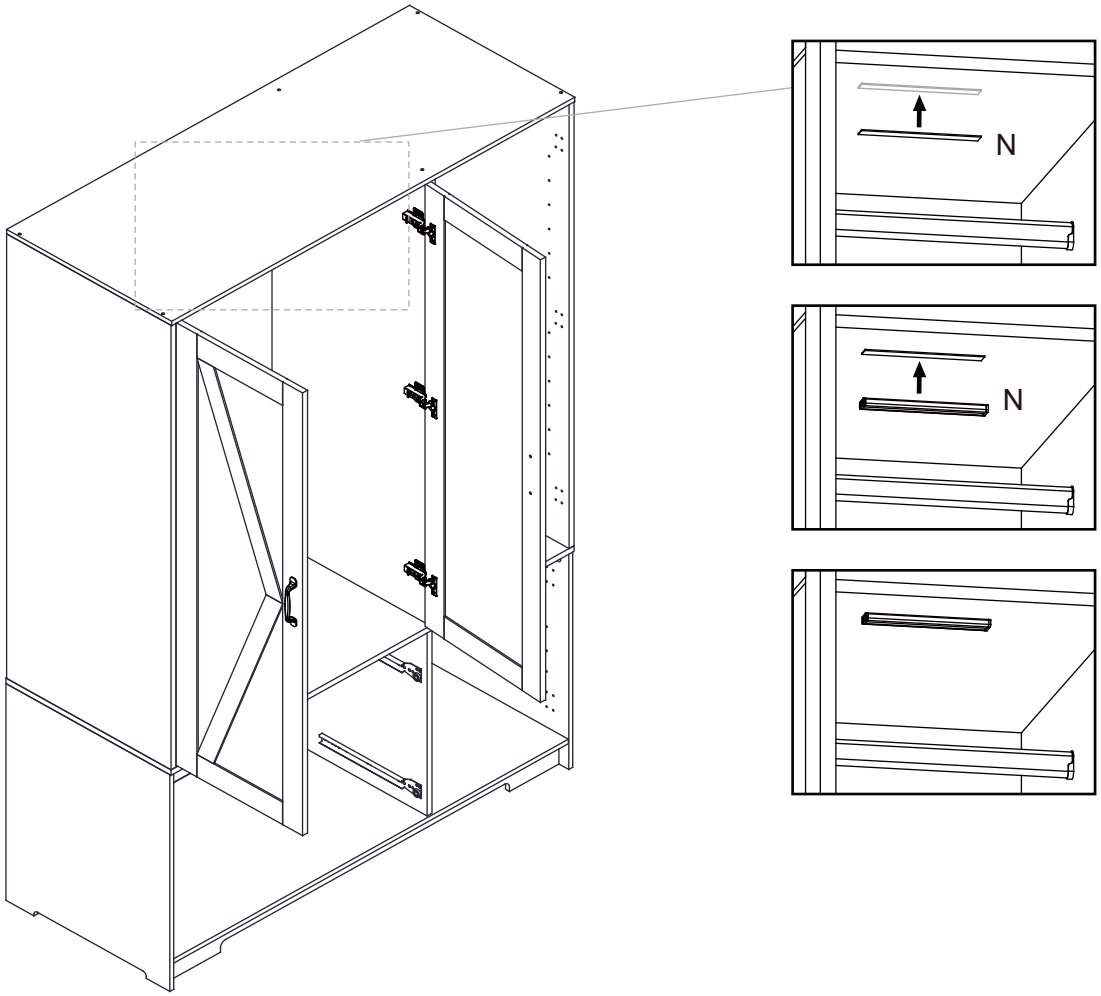


Step 20

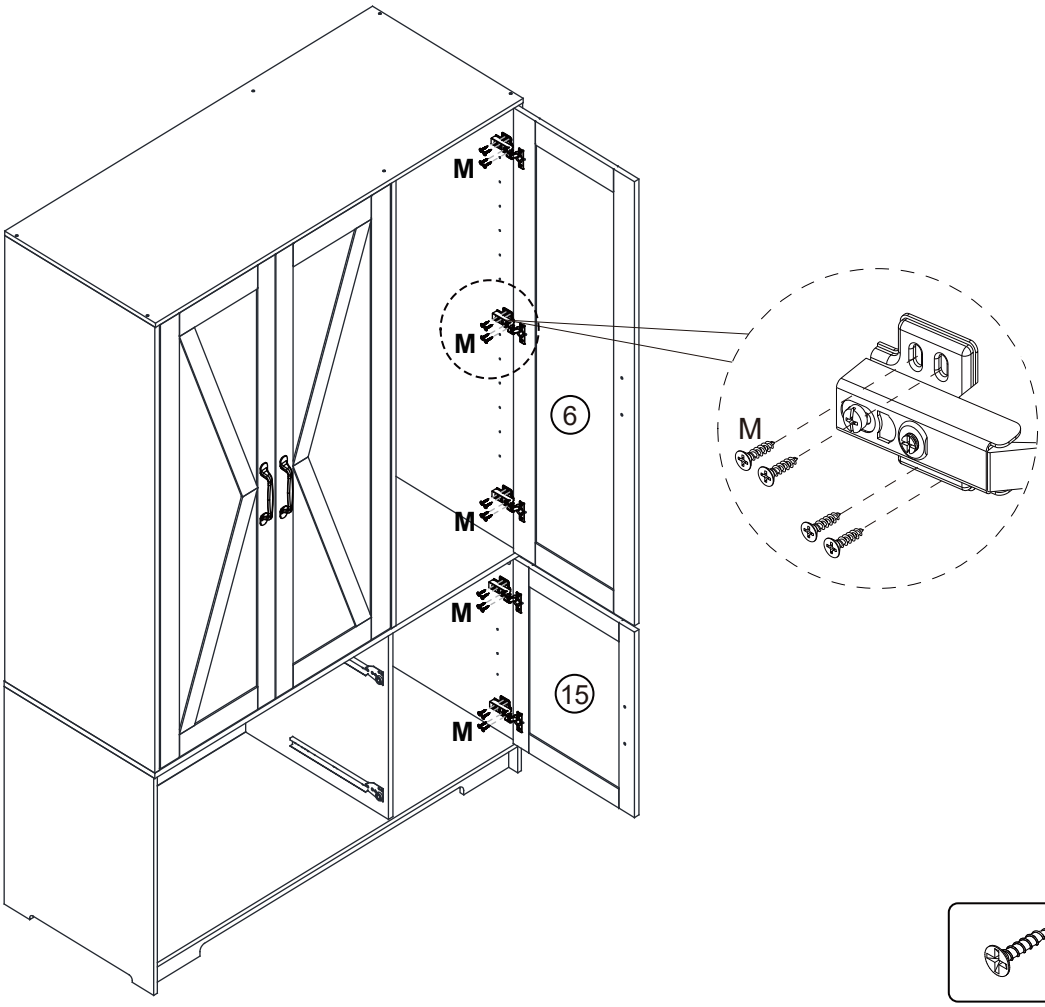


M x 20
φ4 x 12 mm


Step 21

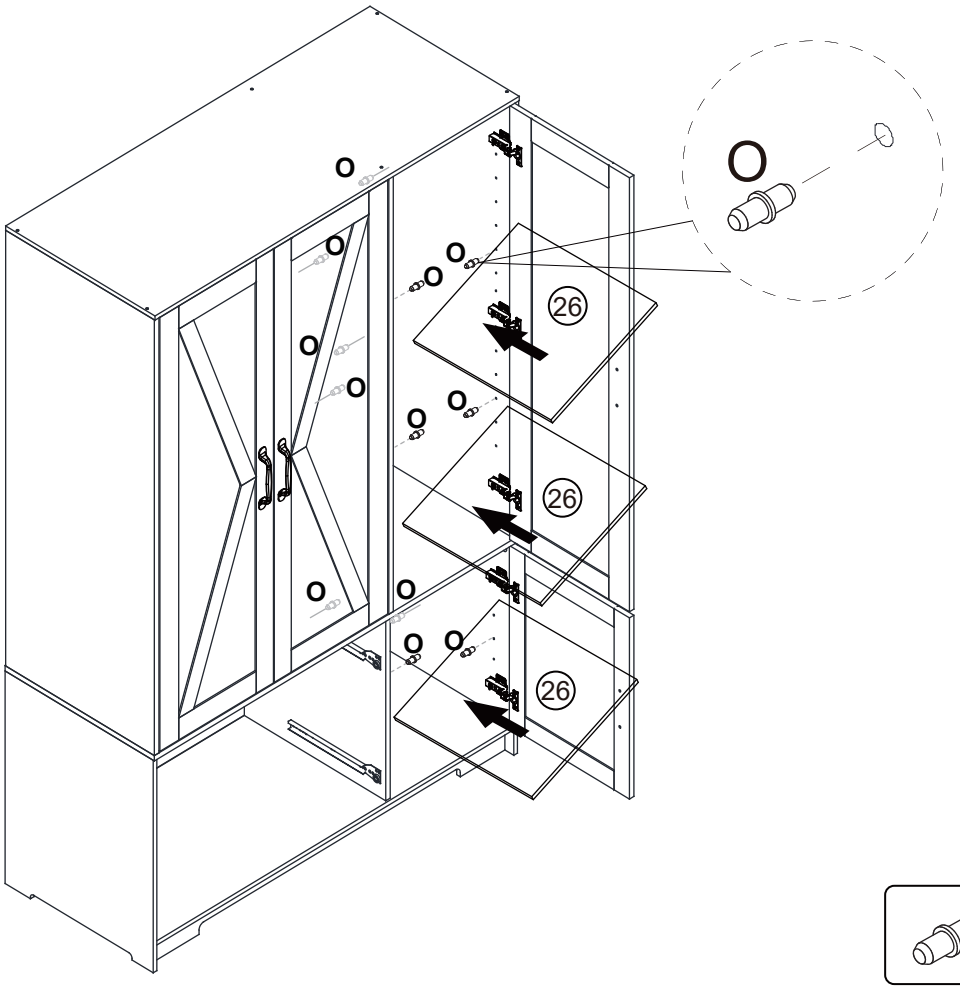


O x 12

Step 22

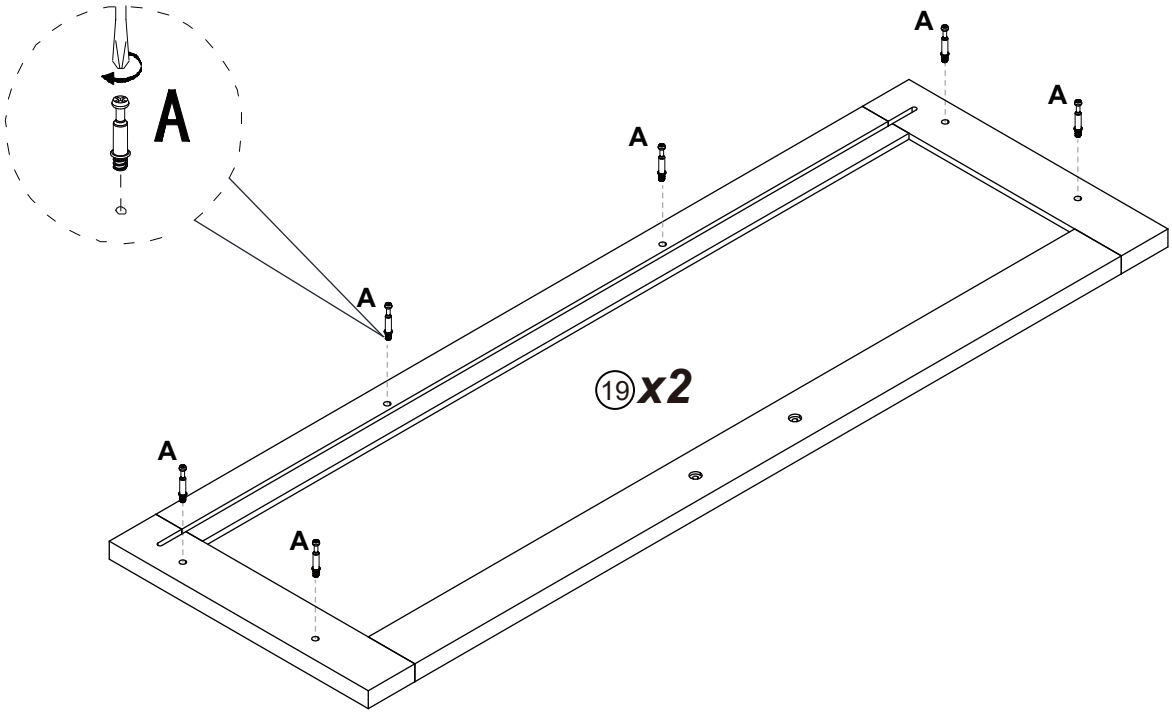



A x 12
M6 x 35 mm


Step 23

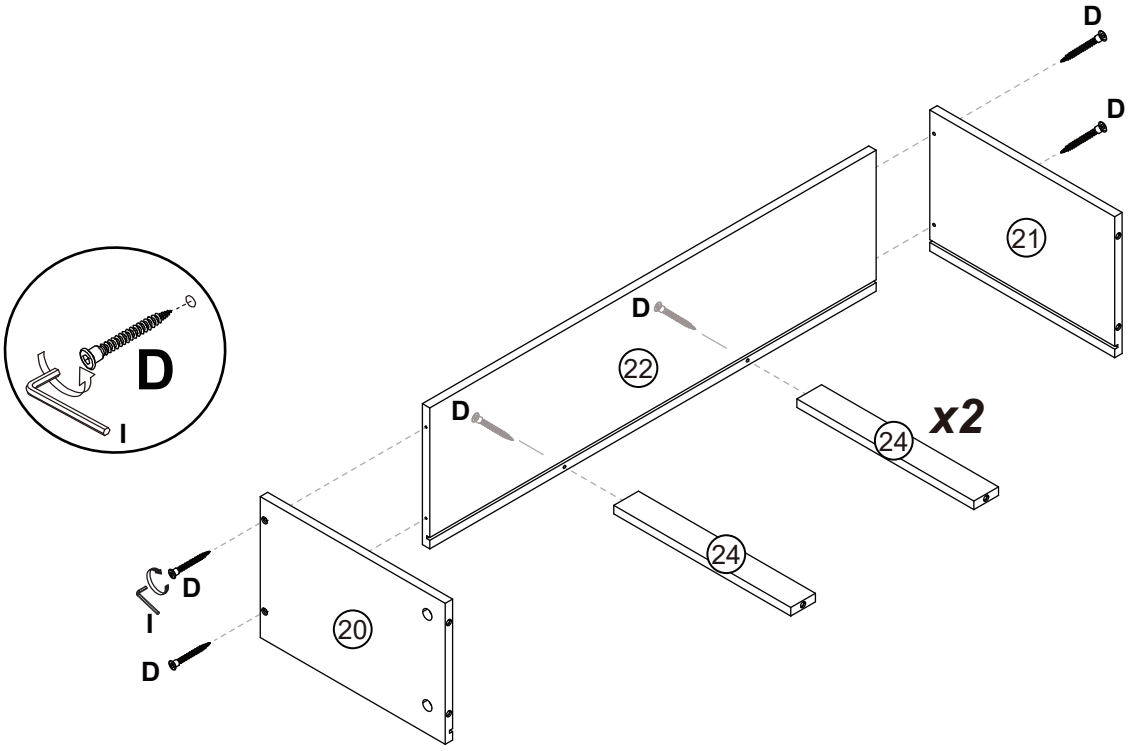






Step 24

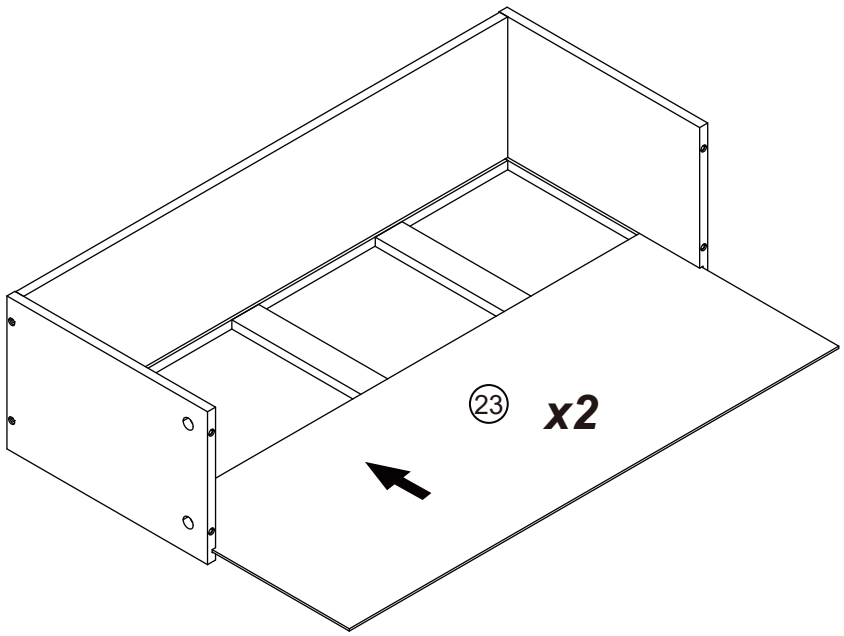



Step 25

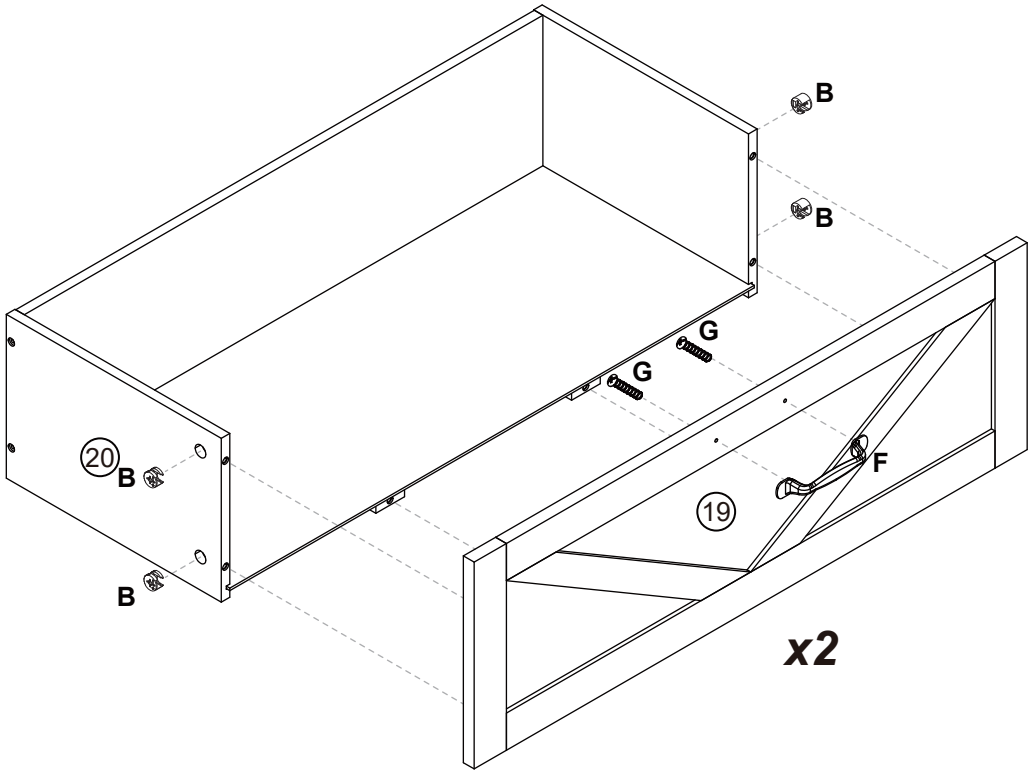





Step 26

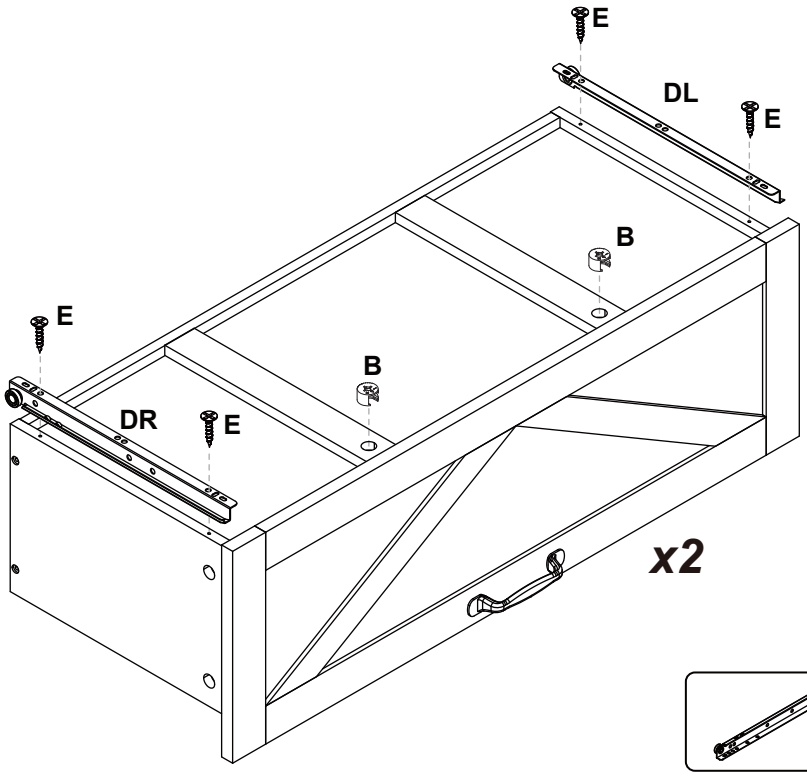


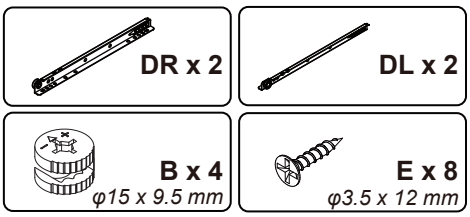


Step 27

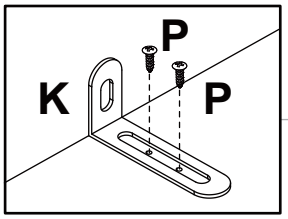

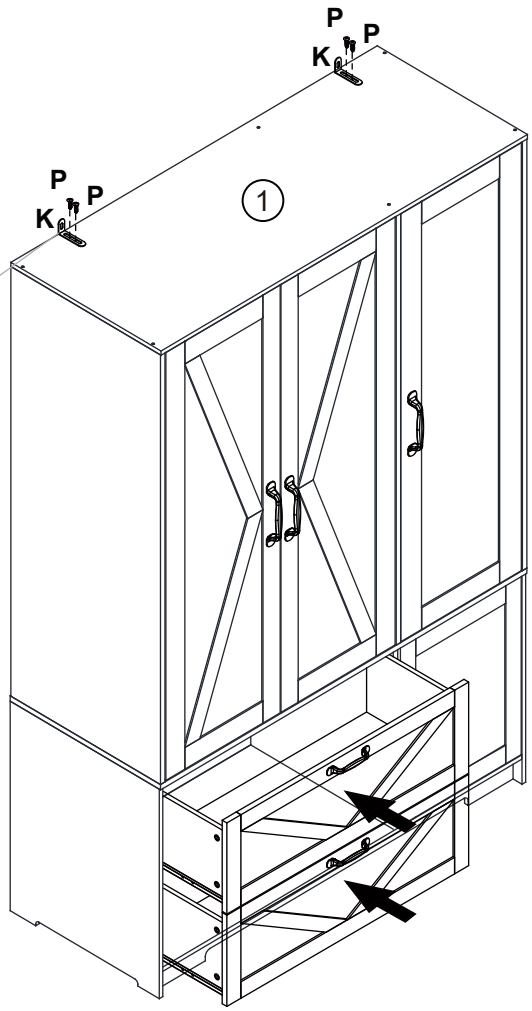

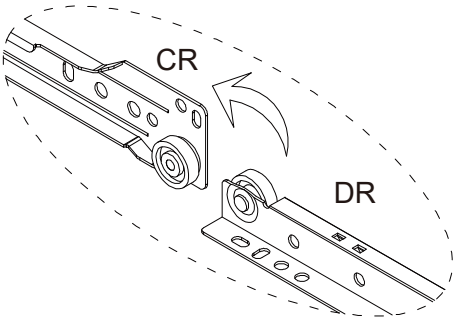


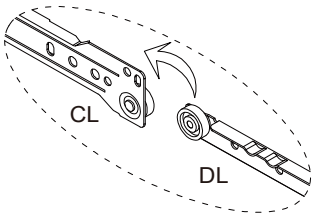


K x 2


P x 4

Step 28

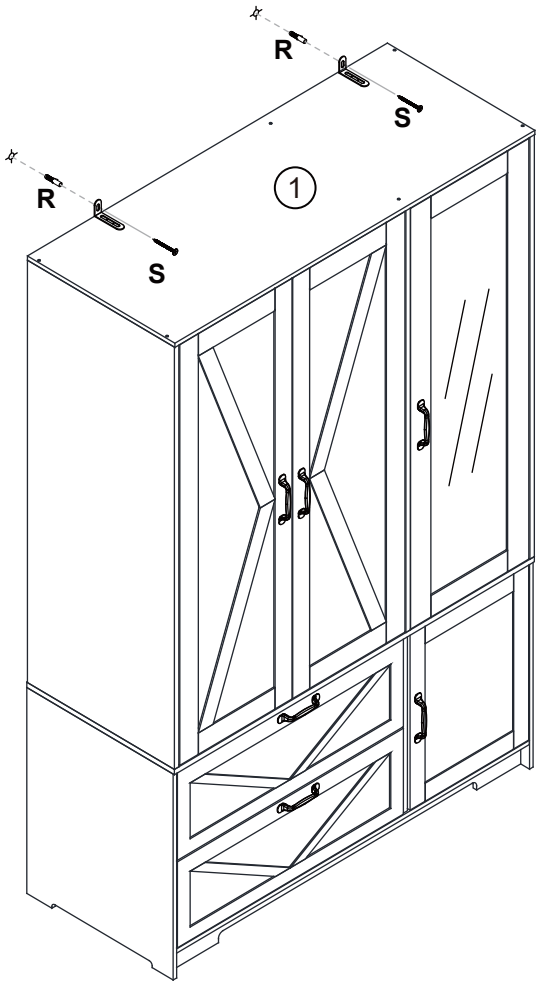




R x 2


S x 2


Step 29


Customer Attention:
To align doors and control gap in between doors. Product doors may need adjusting during and after assembly.
This can be done by adjusting appropriate screws. See below illustration.

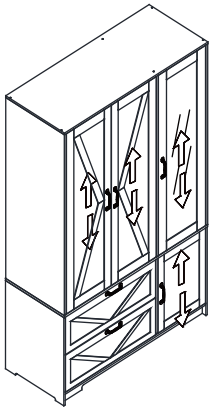

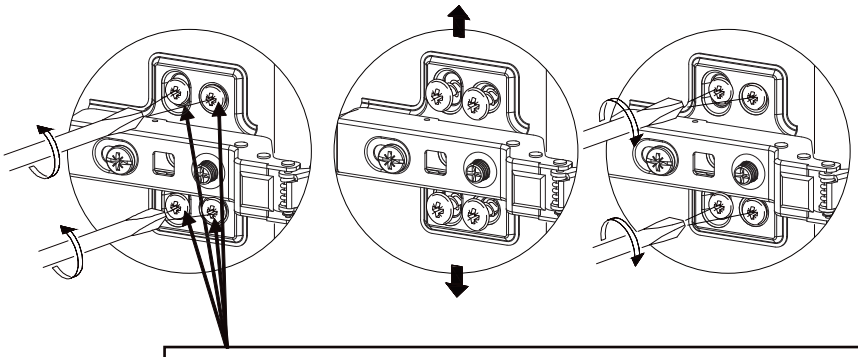



Vertical Door Adjustment:
Loosen both screws on all hinges and lift the door to the desired height.
This allows an even space at the top and bottom between the door and frame.

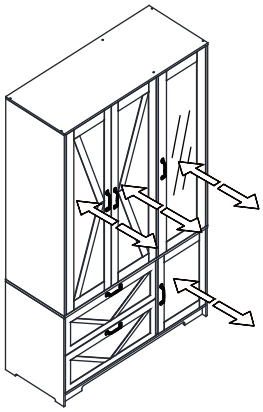

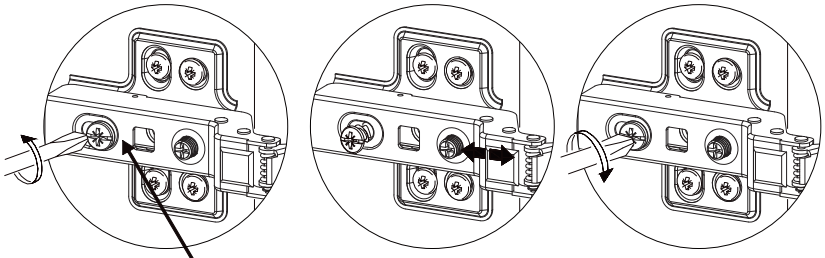

Lateral Door Adjustment:
If door is hinge bound, (rubbing on frame as you close or open door) loosening screw shown and move the door in approriate direction. (In or out)

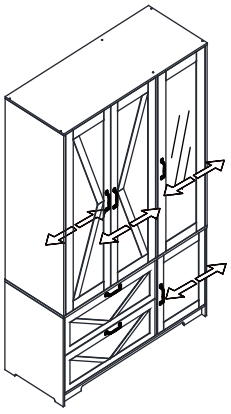

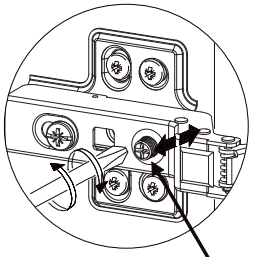

Horizontal Door Adjustment:
Rotate Screw clockwise or anticlockwise.
This will produce an even gap between doors and frame.