



# Assembly Instructions

Item #:FUR2025017

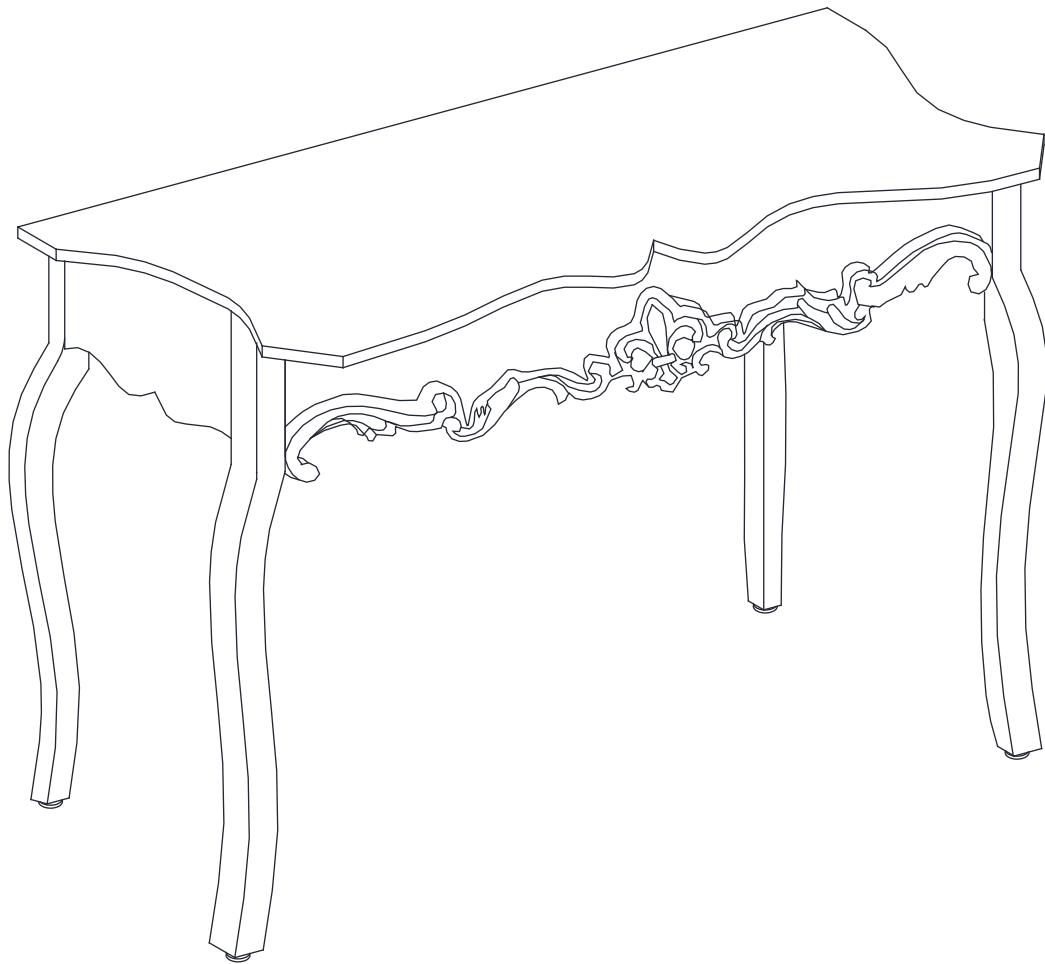


# Exploded Drawing

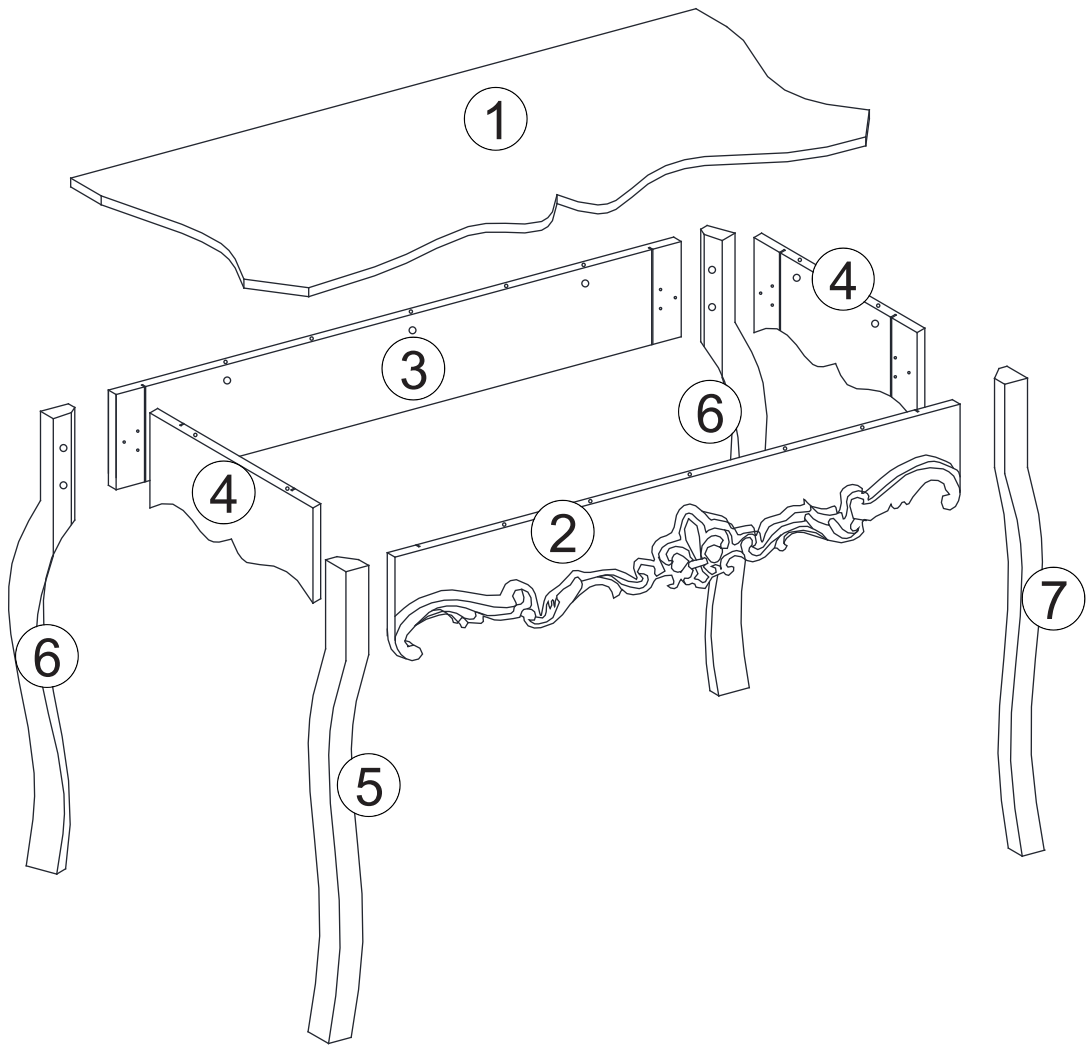


# Parts


① 1PC

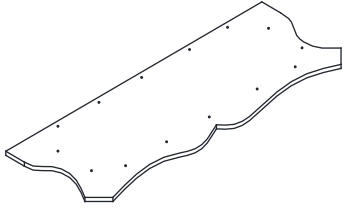


② 1PC

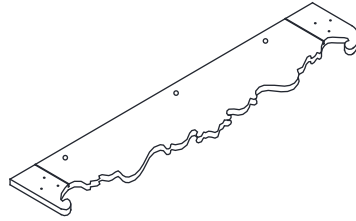


③ 1PC

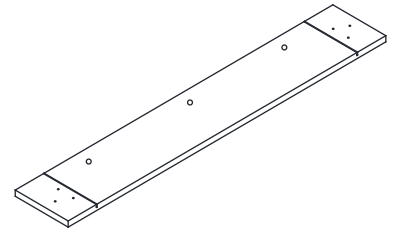


④ 2PCS

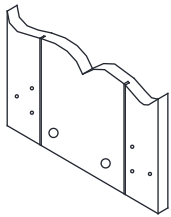


⑤ 1PC

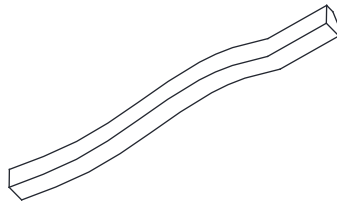

⑥ 2PCS

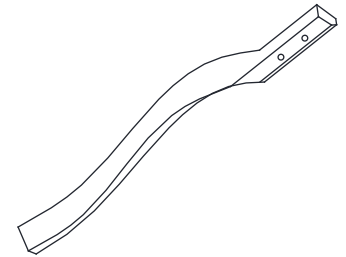

⑦ 1PC

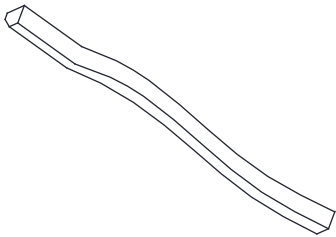

# Parts

A




10 PCS  
+1(spare)

B




10 PCS  
+1(spare)

C




4 PCS

D




24 PCS  
+1(spare)

E

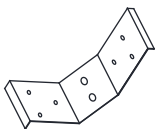


4 PCS

F



8 PCS


G



1 PC


H

# ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)

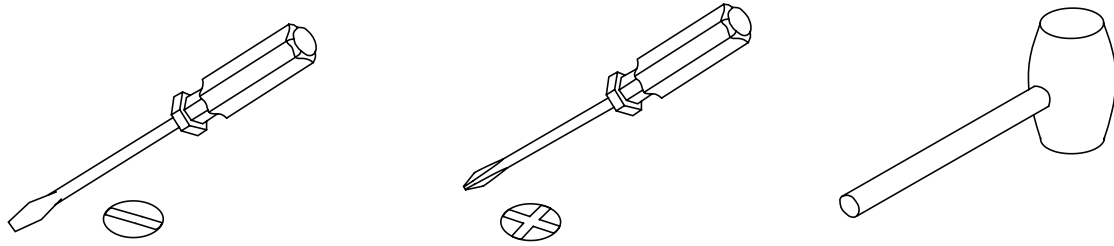

- \* Before discarding packing materials, please check all parts and hardware are presented.
- \* Please follow the instructions closely.
- \* After few days of initial assembly, the product may have acclimated to new environment, please tighten all hardware again.


## Dowel Installation

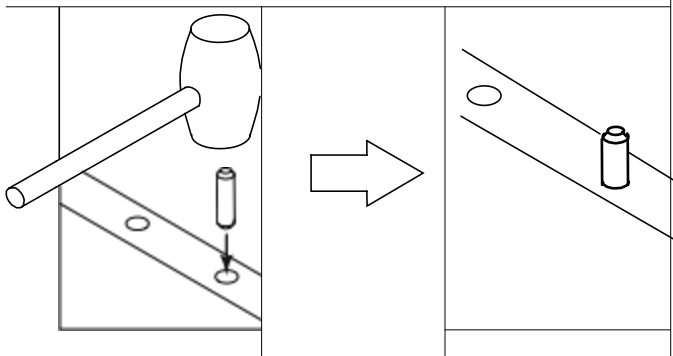

Gently tap dowel into hole with rubber mallet.



## CAM-LOCK




Tighten until shoulder is flush with panel. Do not overtighten or undertighten

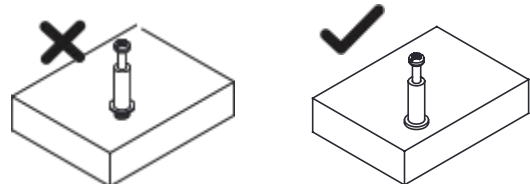


## WHEN FITTING CAMS

ENSURE STARTING POSITION IS CORRECT  
BEFORE YOU INSERT CONNECTING CAM-PILLAR  
TURN CLOCKWISE UNTIL SECURE

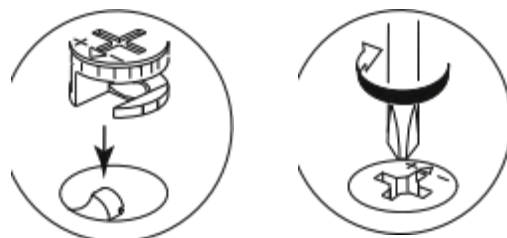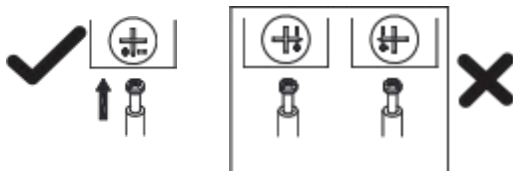

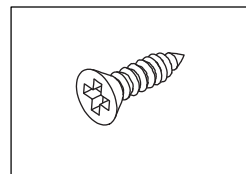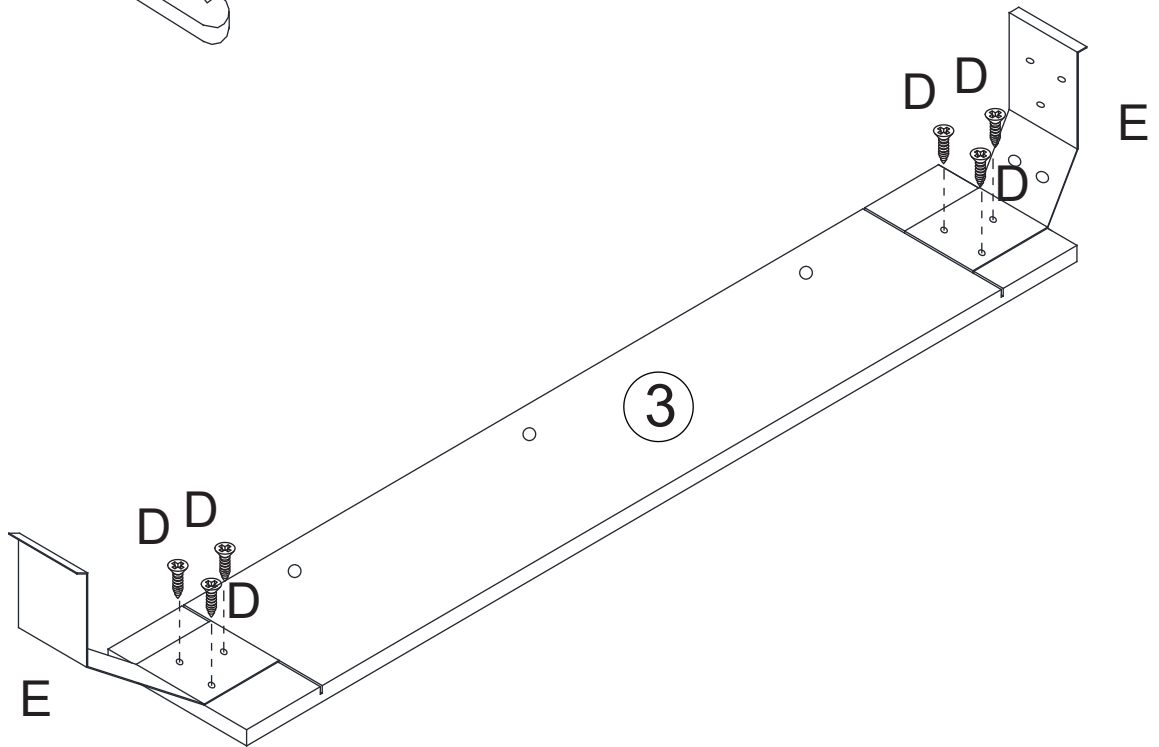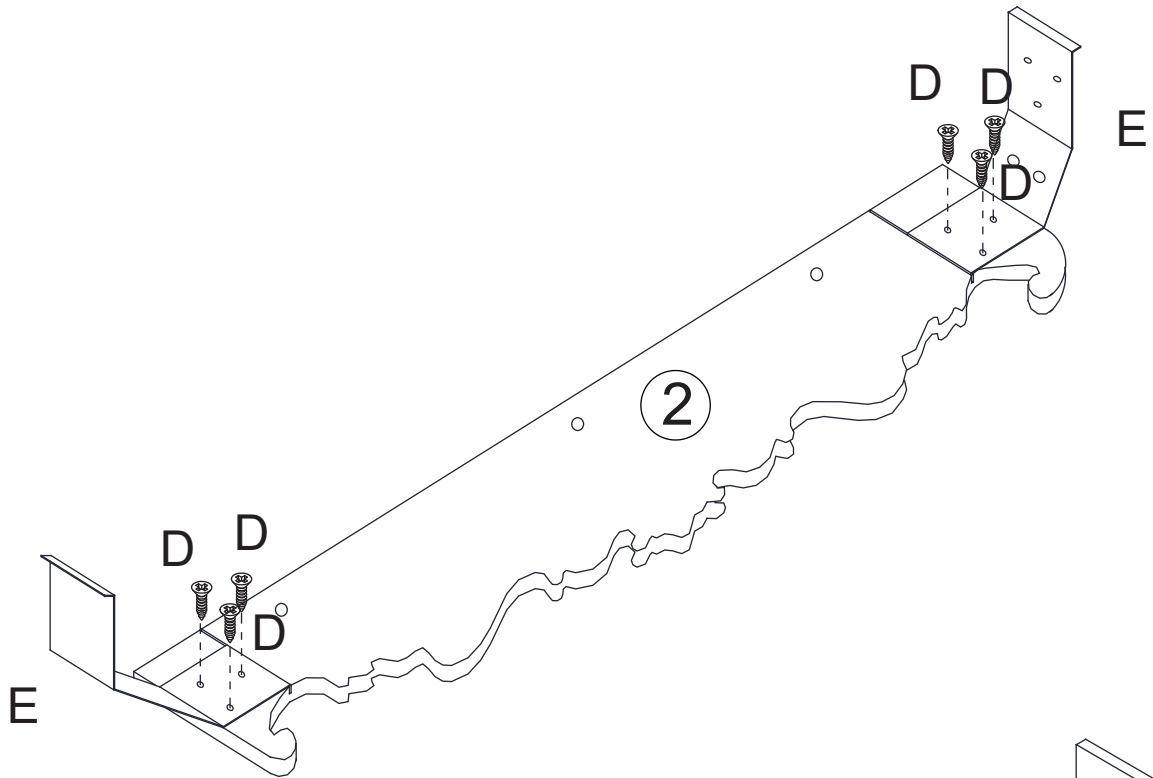

D x12

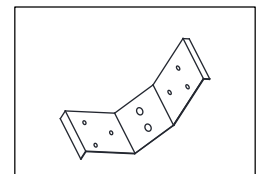

E x4

Note: please pay attention to the orientation of the curve edges on panel #4.

