



48*80" Bypass 0 Panel Sliding Closet Door Installation Manual

Any question please contact us:
support@jubest.com








MYCD0P-48+HD

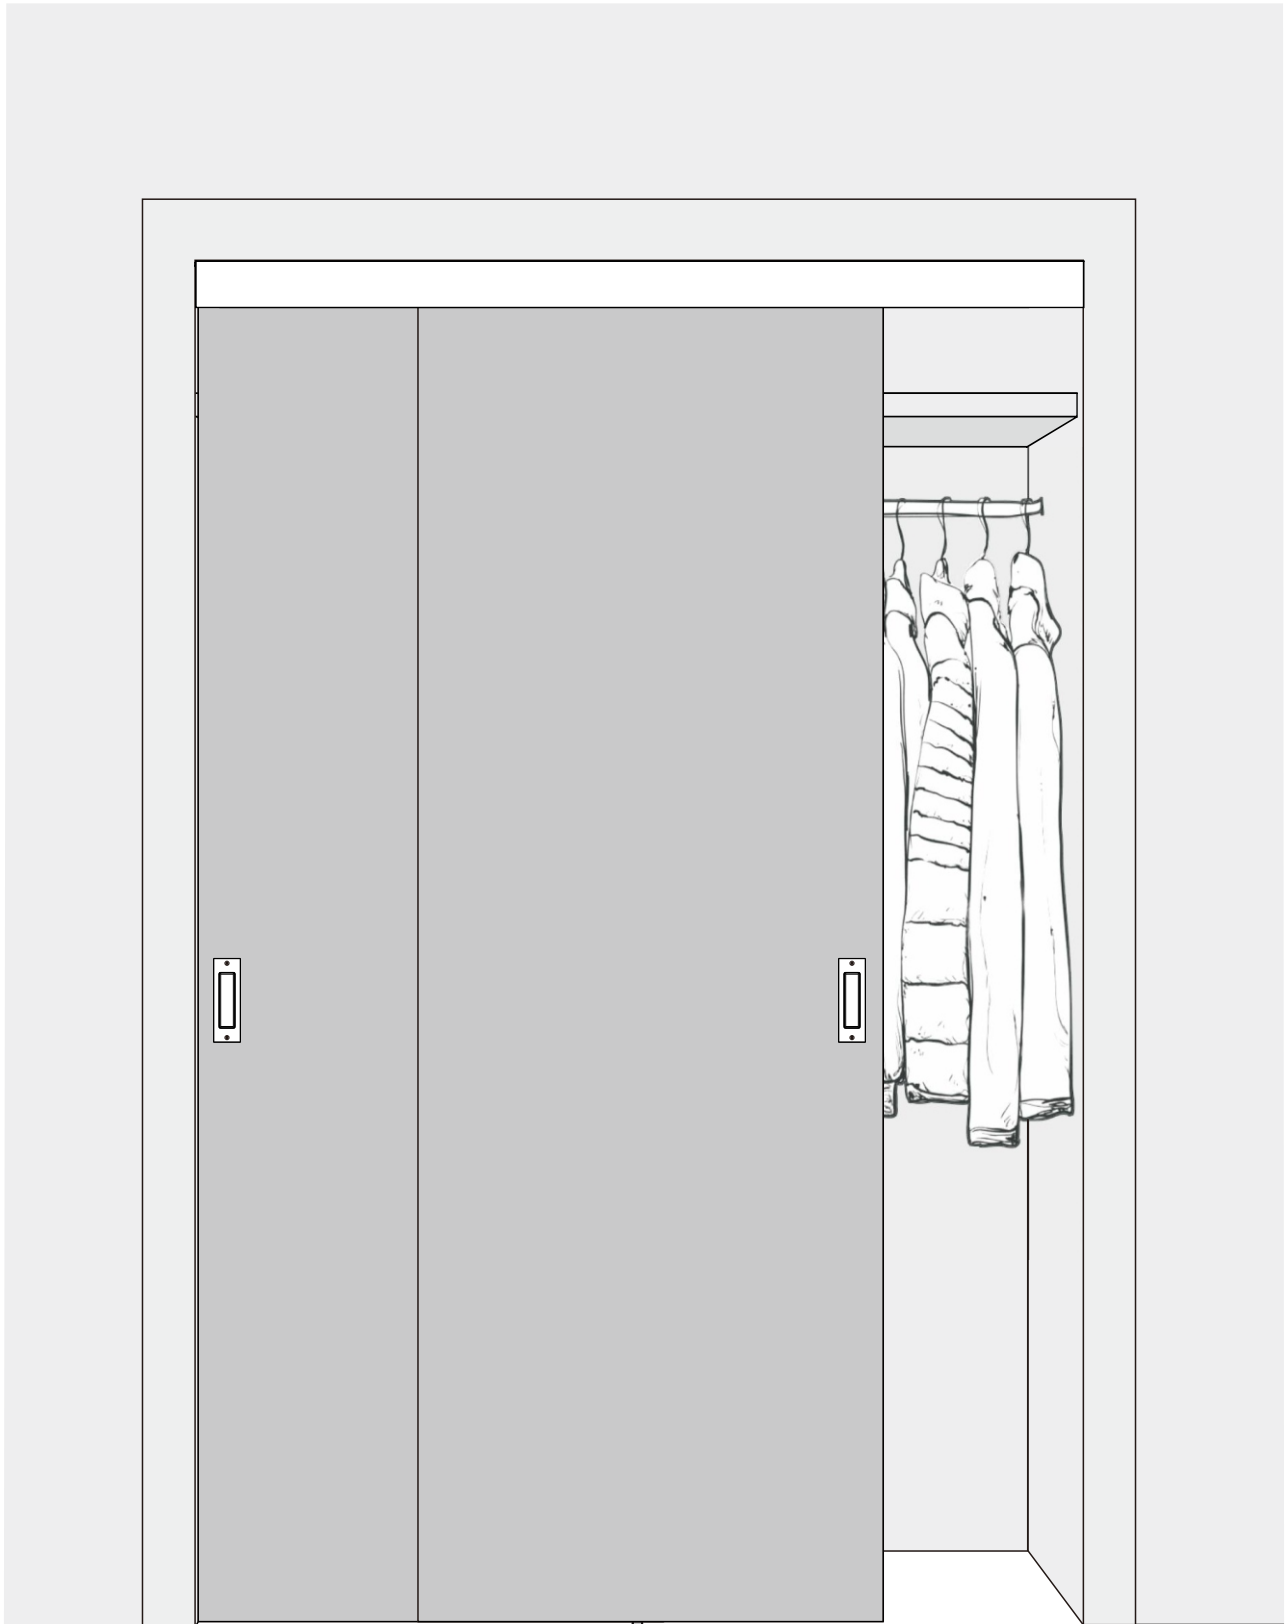


TOOLS REQUIRED

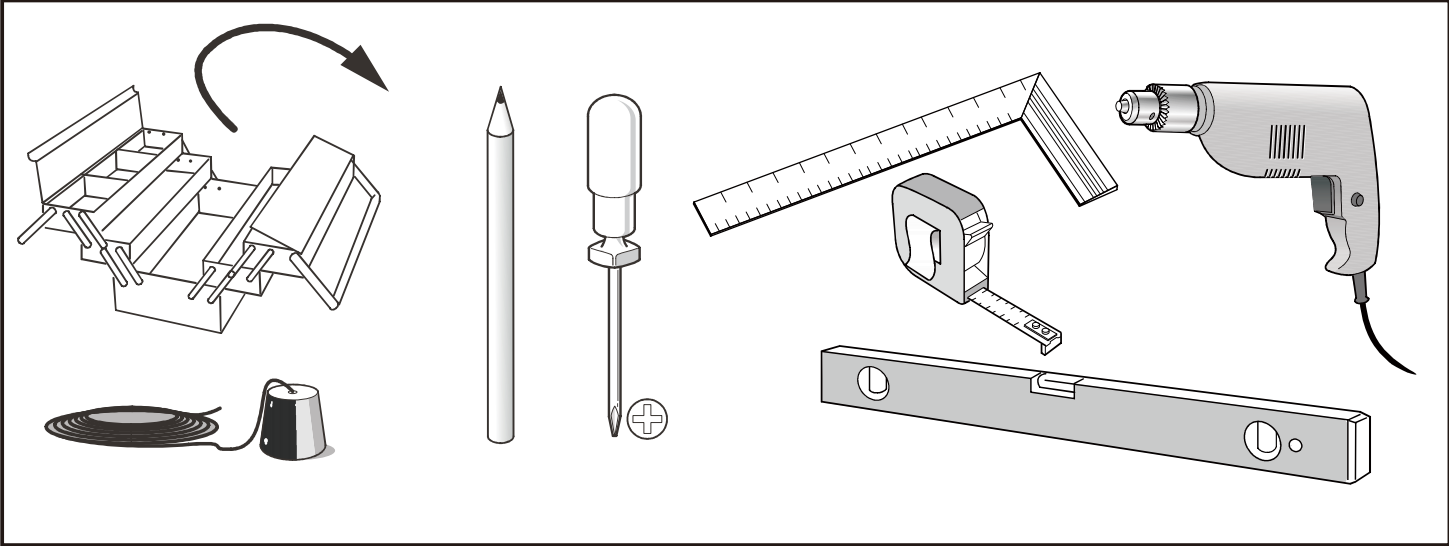

WHAT IS IN THE BOX

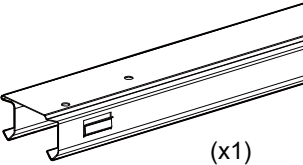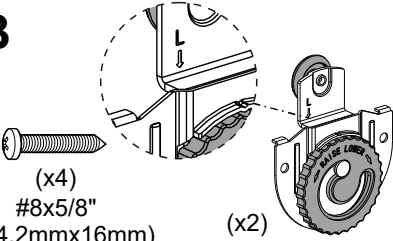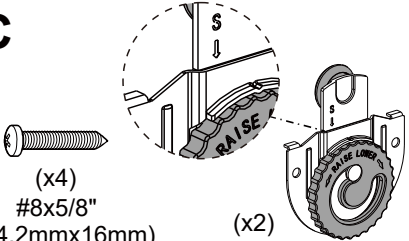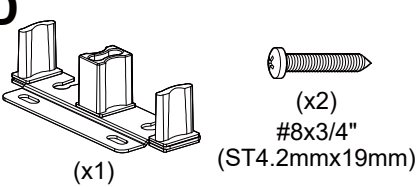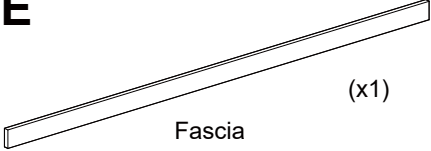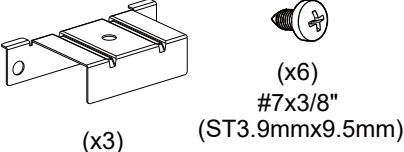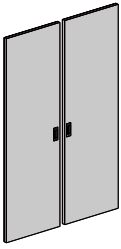A  (x1)	B  (x4) #8x5/8" (ST4.2mmx16mm) (x2)	C  (x4) #8x5/8" (ST4.2mmx16mm) (x2)
 (x9) #8x1-1/4" (ST4.2mmx32mm)	D  (x1) (x2) #8x3/4" (ST4.2mmx19mm)	E  (x1) Fascia
F  (x3) (x6) #7x3/8" (ST3.9mmx9.5mm)	G  (x1)	

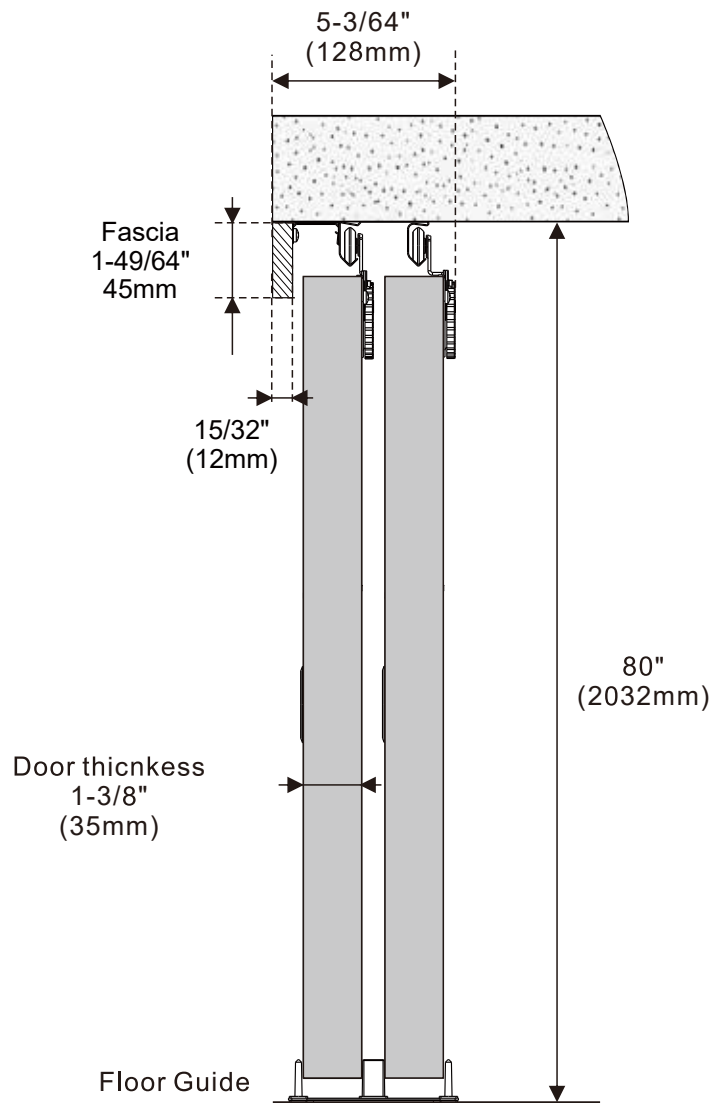


INSTALLTAION INSTRUCTIONS

1


INSTALL FASCIA (E)

Mark locations on the fascia with pencil

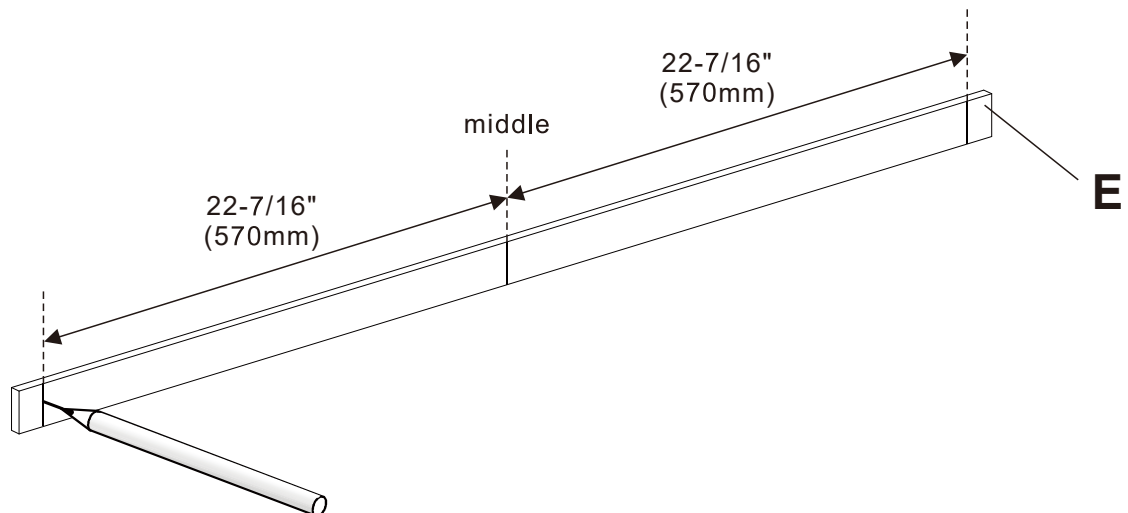


2 MOUNT CONNECTORS (F) ONTO FASCIA (E)

Attach 3 connectors to fascia is and use screws to fasten them.


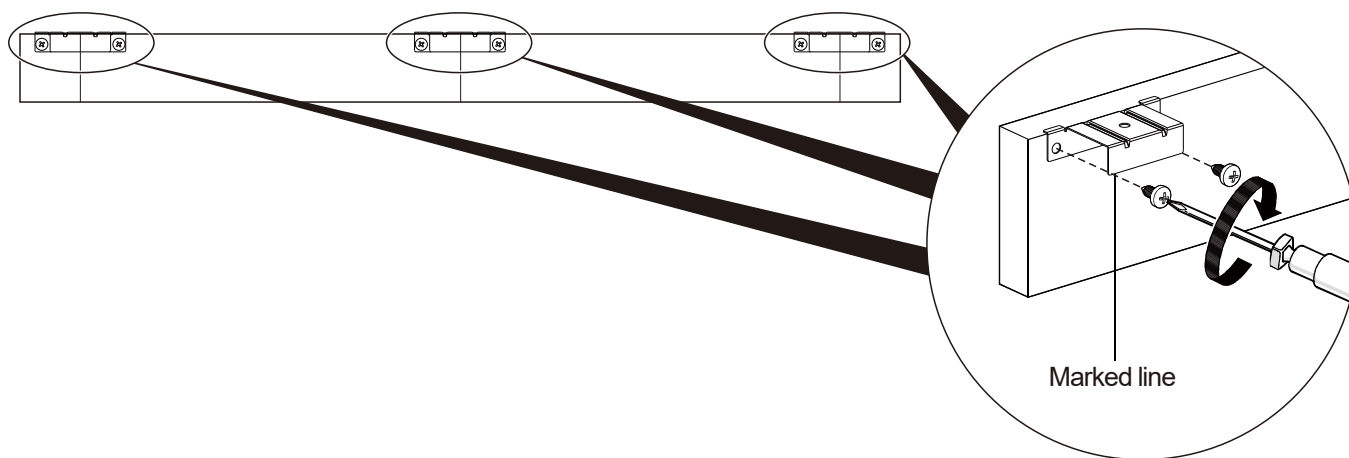





3 INSTALL FASCIA (E) ONTO TRACK (A)

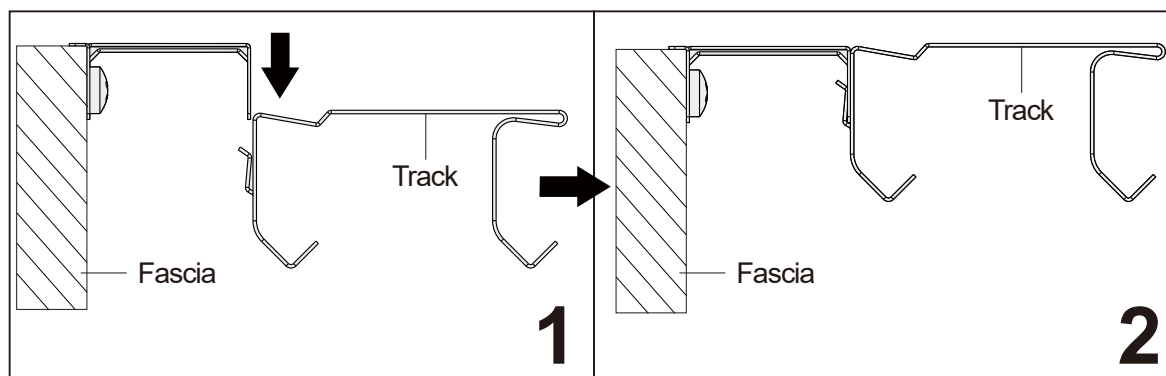

4 INSTALL TRACK

Place track on door header, centered between both door jambs. Make sure track openings are facing inside of closet. Position fascia flush with door opening. With track as template, mark location of screwholes. Drill $\frac{3}{32}$ " (2.4mm) pilot holes to approximate screw length. Using supplied #8x1-1/4" (ST4.2mmx32mm) screws, securely attach track to header.

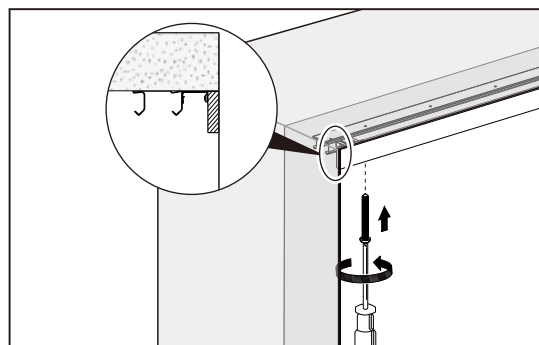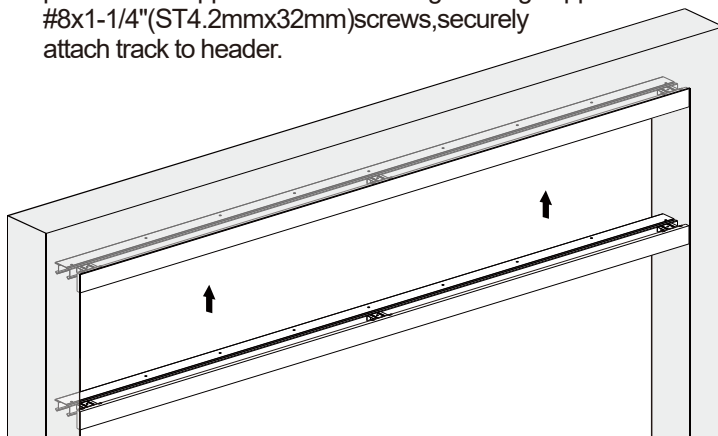

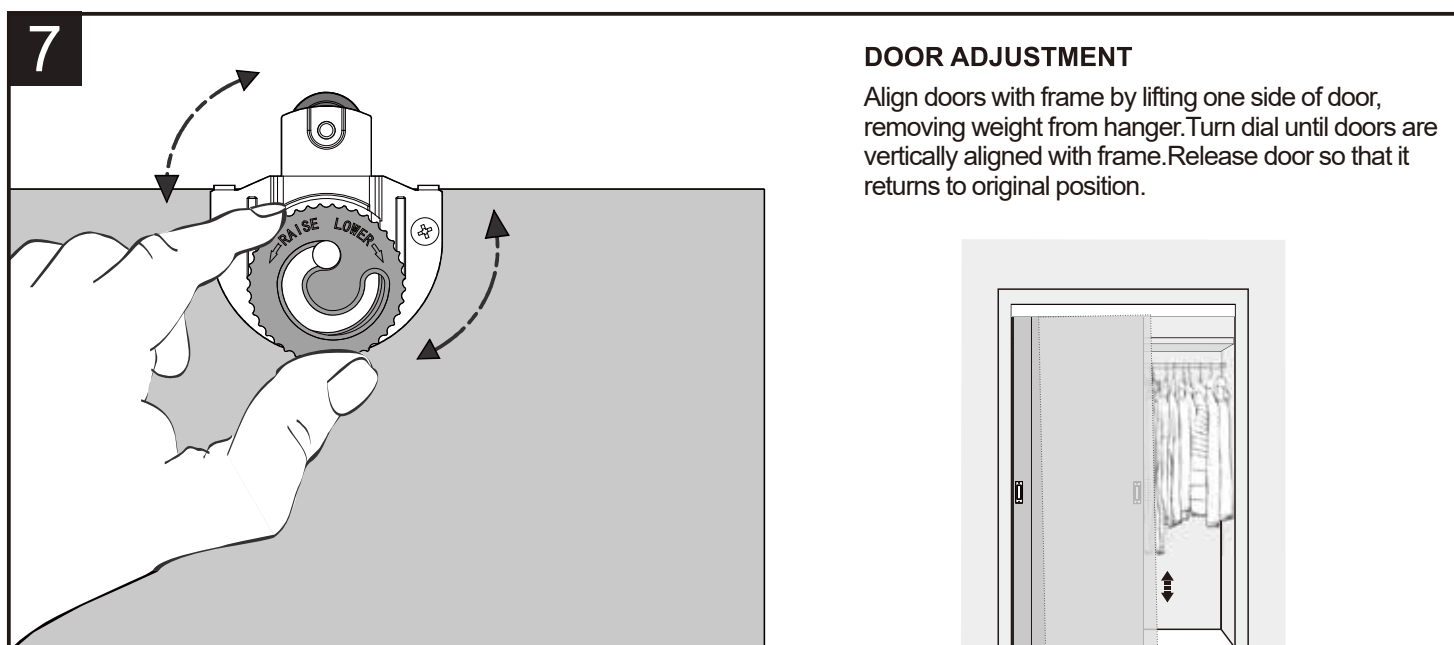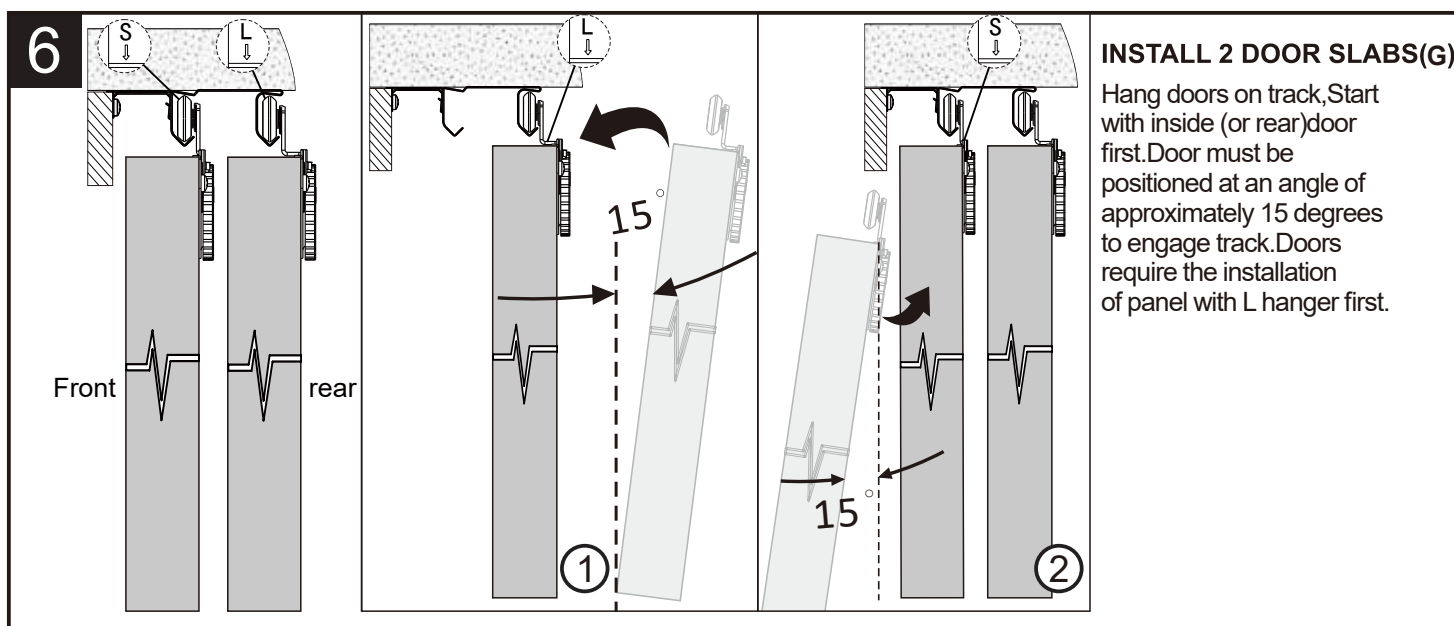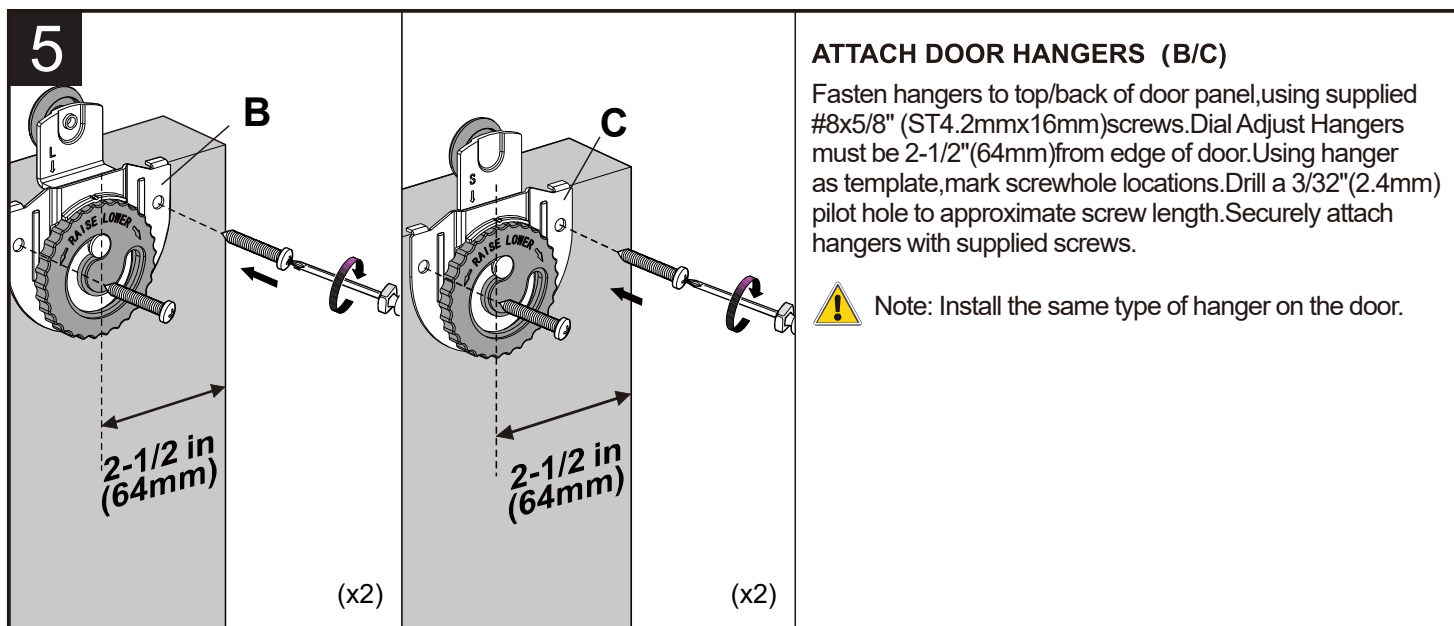

8



INSTALL DOOR GUIDE (D)

Push the two door slabs to the same side against the wall.


Position the guide beneath overlap of doors,as shown.

Adjust the two door slabs so that they are vertical.

Using supplied #8x3/4"(ST4.2mmx19mm) screws, securely fasten guide to floor.

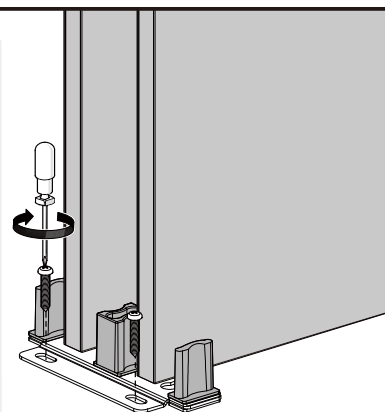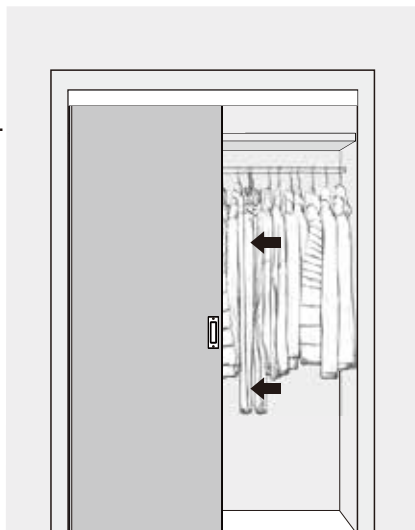

2-DOORS



(Default for 1-3/8"(35mm) thick door)