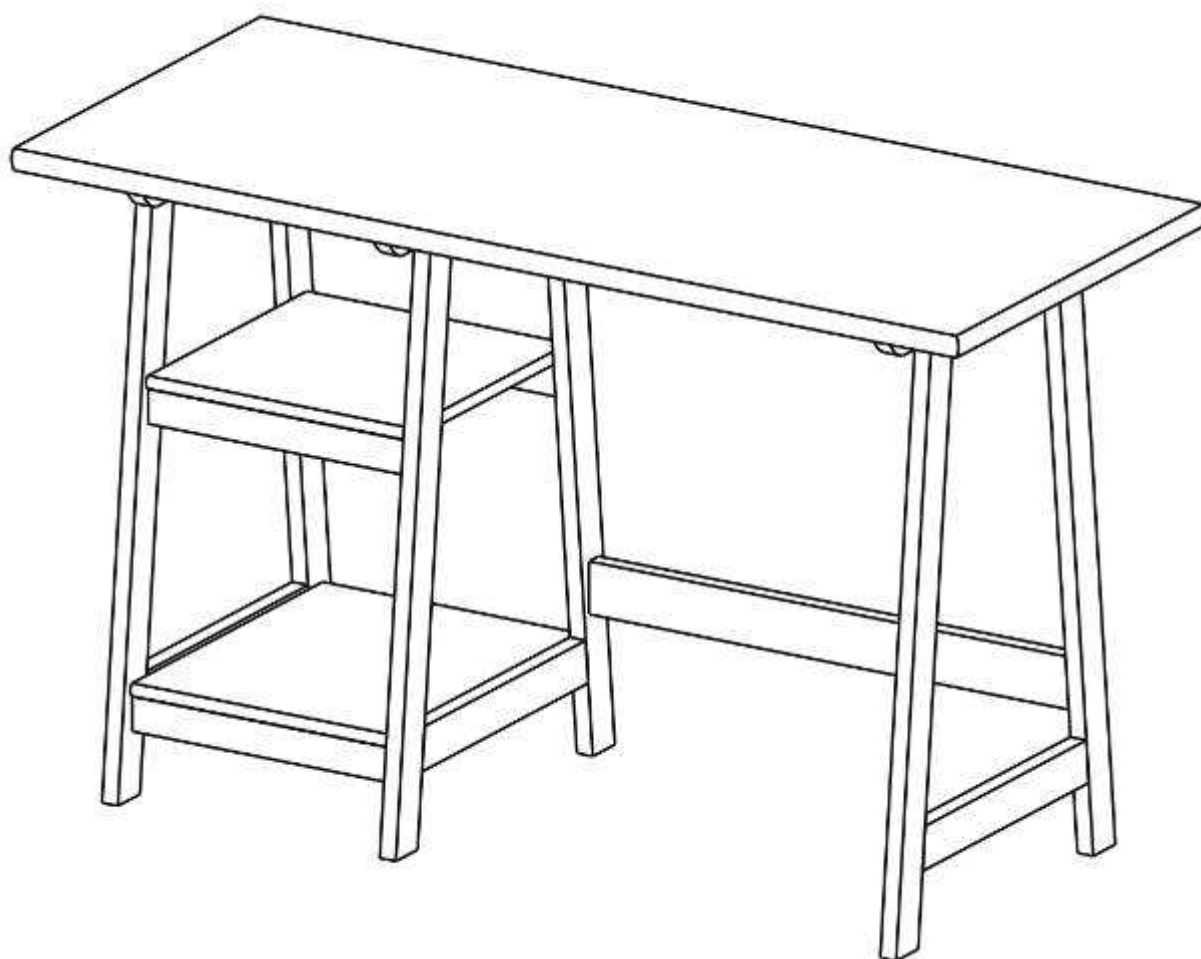


BLACK
WHITE
ESPRESSO

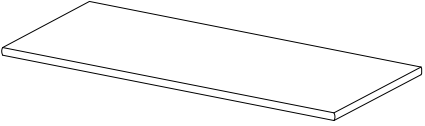
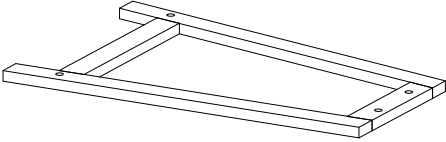
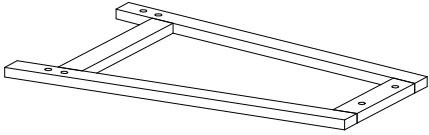
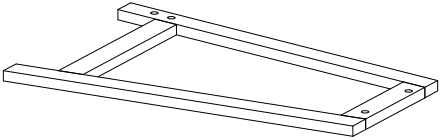
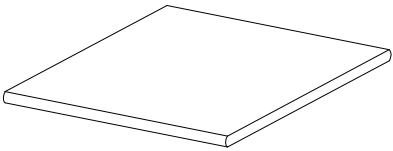
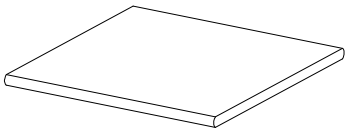
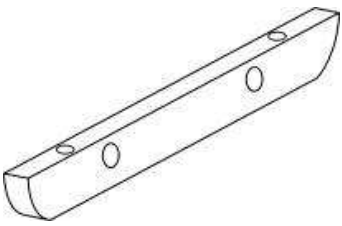
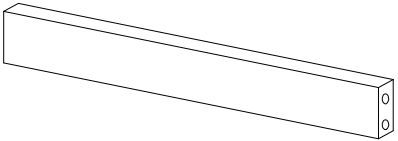
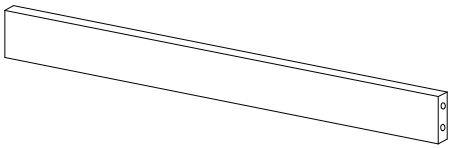
DESK
Assembly Instruction






Max top load 40 lb.



BLACK WHITE/ESPRESSO DESK Parts List

Please review all parts and hardware before disposing of any packaging.
Call Customer Service if missing hardware. Do not return to store/retailer.
Using a screw that is too long will cause damage. Before beginning assembly,
separate each type of screw. Carefully study the screw diagrams below. You may
receive extra hardware with your unit.


A Quantity Of 1  Wood Top	B Quantity Of 1  Left Side Panel	C Quantity Of 1  Central panel
D Quantity Of 1  Right Side panel	E Quantity Of 1  Bottom Shelf	F Quantity Of 1  Top Shelf
G Quantity Of 3  Top Stretcher	H Quantity Of 4  Short Stretcher	I Quantity Of 1  Long Stretcher

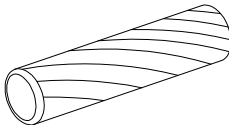1 Quantity Of 10  Bolts 1/4"x 45mm	2 Quantity Of 10  Barrel Nuts 1/4"	3 Quantity Of 8  Screw 4 x 32mm
4 Quantity Of 20  Dowel 8 x30 mm	5 Quantity Of 1  Wrench 1/4"	6 Quantity Of 6  Bolts 1/4" x 32mm 7 Quantity Of 6  Bolts 1/4" x 25mm
Care and Cleaning Instructions: Before using, wipe with a clean, dry cloth. Periodically apply furniture wax to renew the finish. Avoid rubbing or scratching the surface with rough or abrasive objects.		Do not return product to store. Please call manufacturer for assistance, questions or parts.
Assembly Tool Required No.2 Phillips Screw Driver		

BLACK/ WHITE/ESPRESSO


DESK

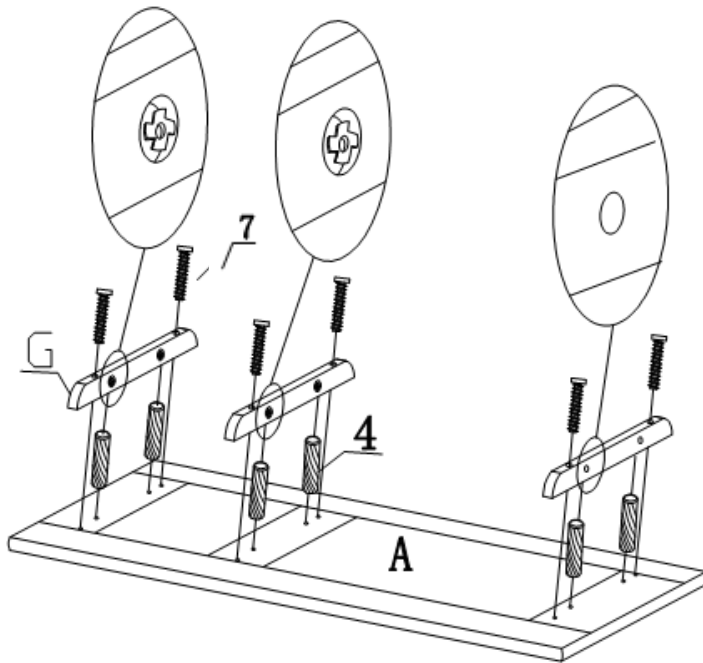Assembly Instruction




Step 1: Put all parts on a soft surface to prevent scratches.

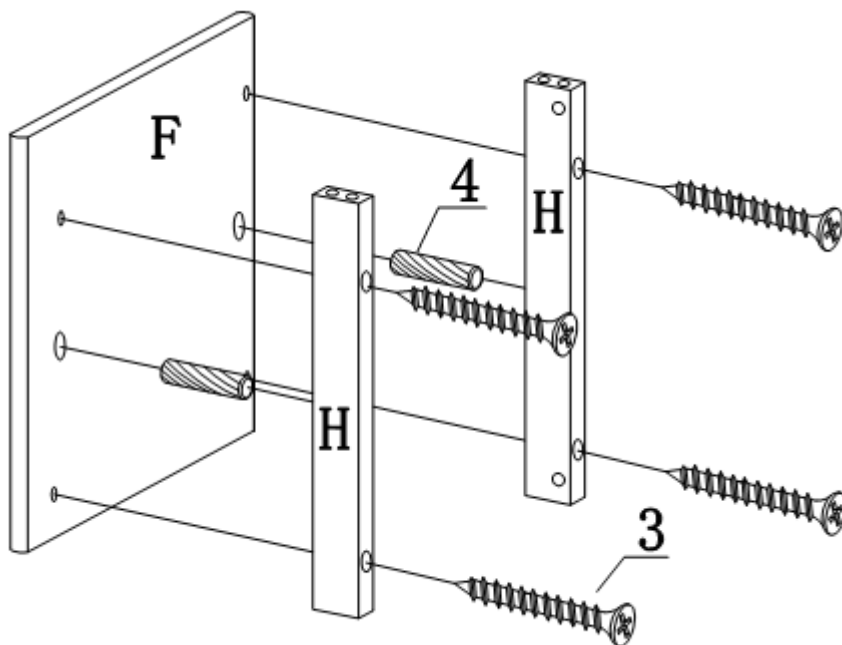
Attach top stretcher (G) to wood top (A) by using bolts (7) and dowel (4) as shown.



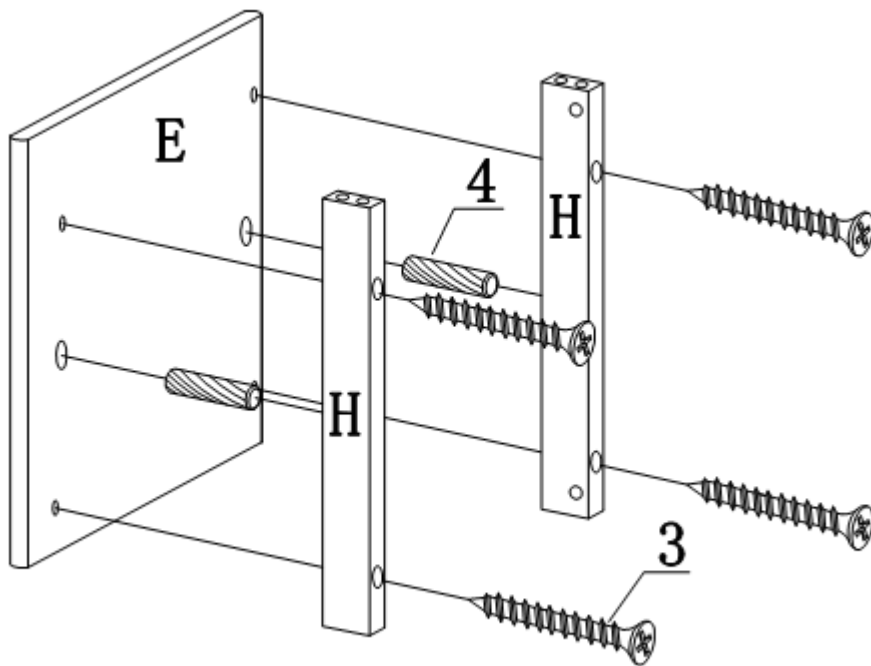Step 2: Attach short stretcher (H) to top shelf (F) by using screw (3) and dowel (4) as shown.




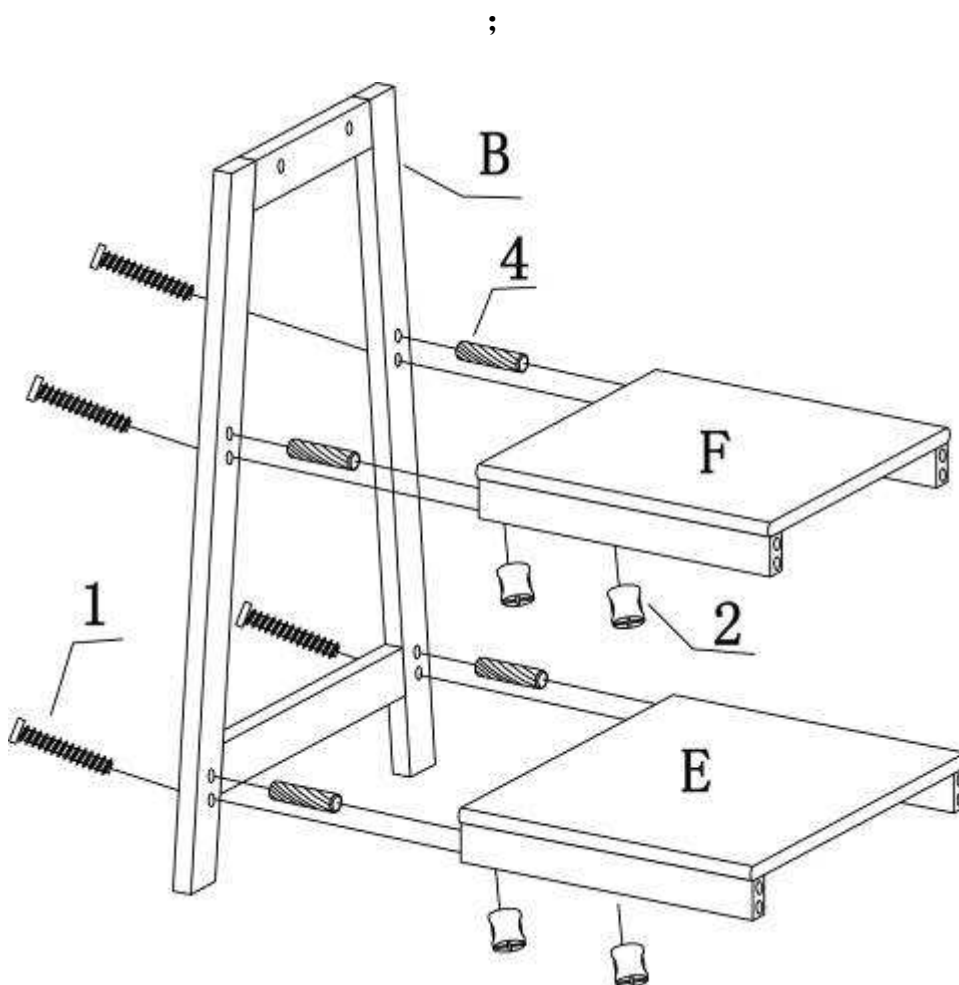Step 3: Attach short stretcher (H) to bottom shelf (E) by using screw (3) and dowel (4) as shown.




Step 4: Insert barrel nut (2) into short stretcher (H) and keep the hole of barrel nut (2) to be horizontal when assembly.

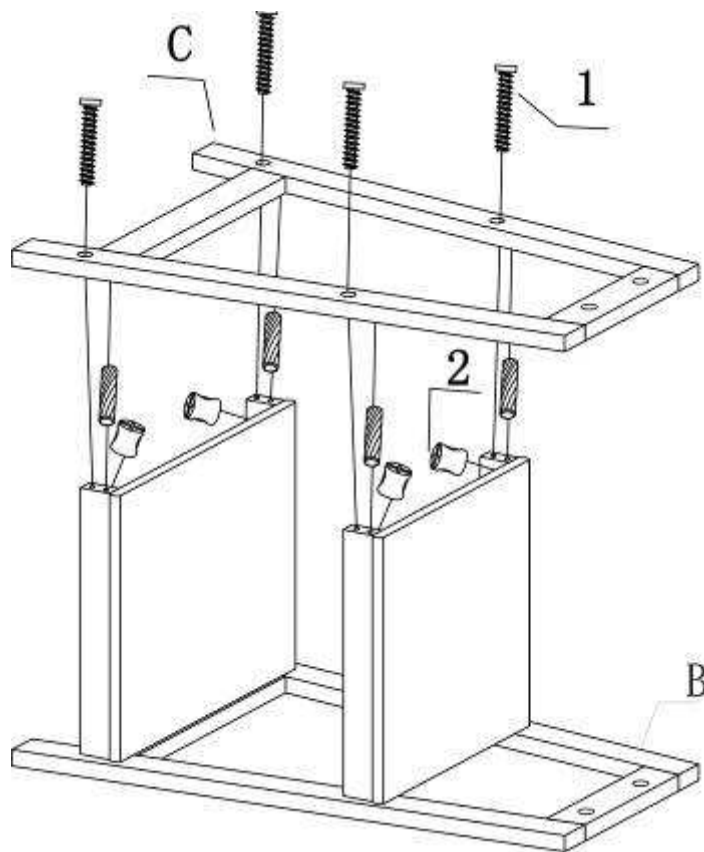Then attach left side panel (B) to shelves (E) & (F) by using bolts (1), dowel (4) and barrel nut (2) as shown.




Step 5: Repeat same procedure as Step 4.

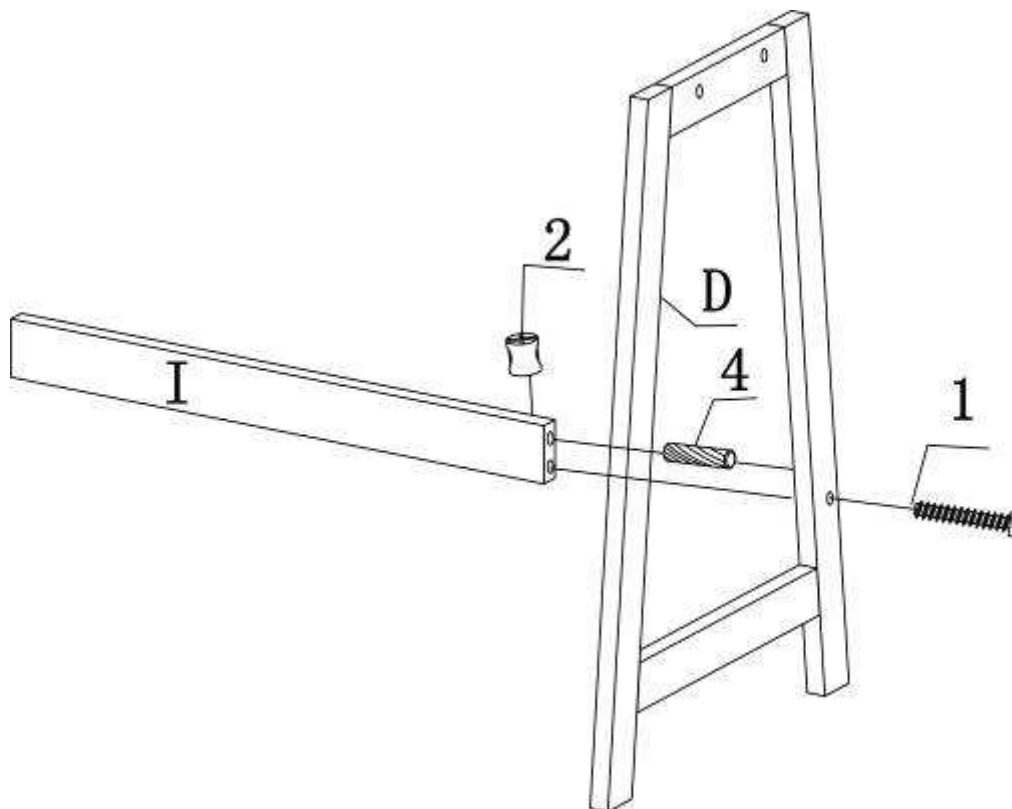Attach central panel (C) to shelves (E) & (F) by using bolts (1), dowel (4) and barrel nut (2) as shown.




Step 6: Insert barrel nut 2) into long stretcher (I) and keep the hole of barrel nut (2) to be horizontal when assembly.

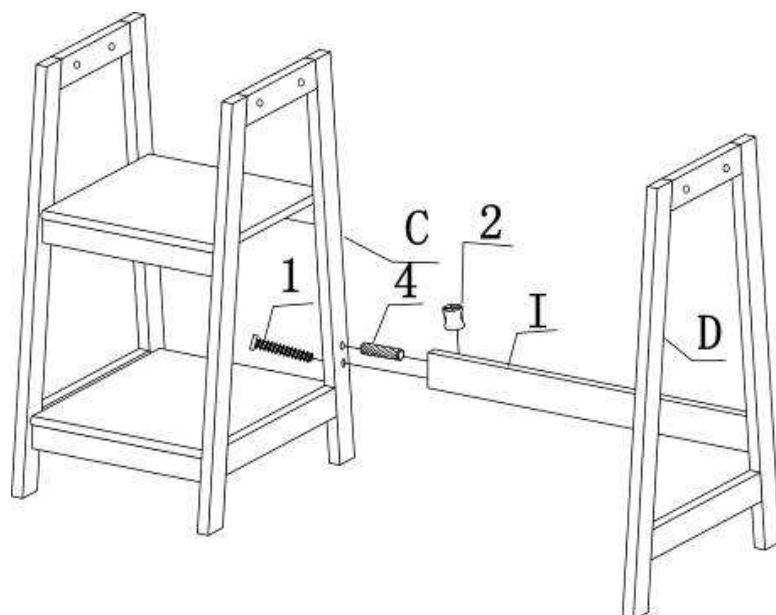Attach long stretcher (I) to right side panel (D) by using bolt (1), dowel (4) and barrel nut (2) as shown.



Step 7: Repeat same procedure as Step 6.

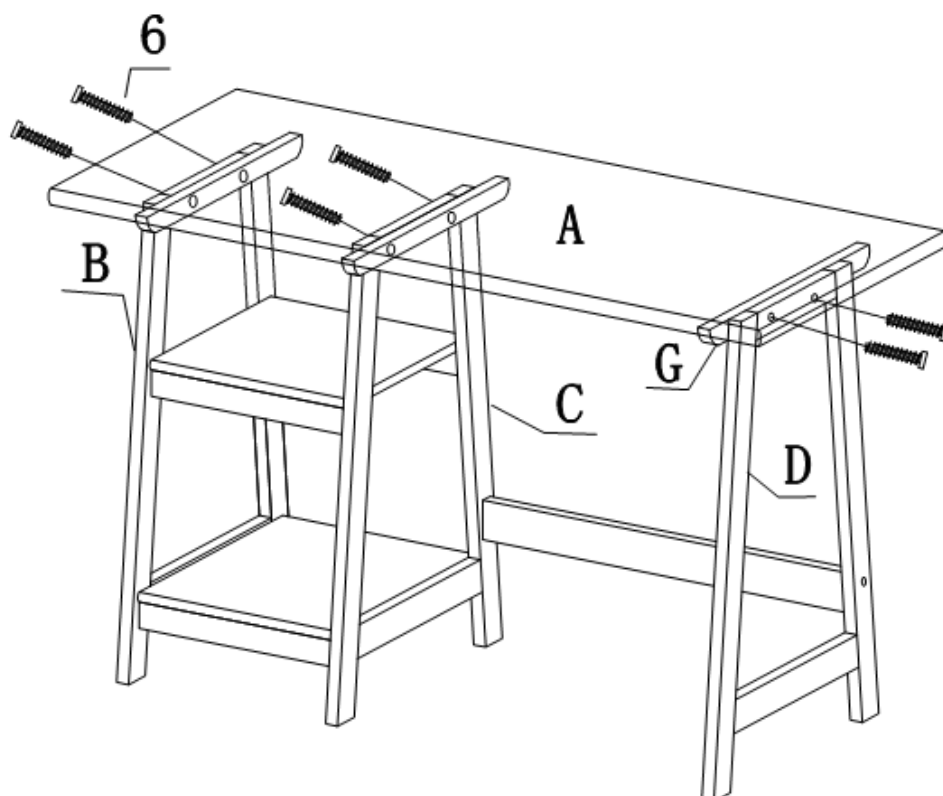Attach long stretcher (I) to central panel (C) by using bolt (1), dowel (4) and barrel nut (2) as shown.



Step 8: Attach wood top (A) to panels (B), (C), (D) by using bolt (6) as shown.

Then your table is ready to use.

Parts Replacement Form

Customer Information

Name

Address

City/State/Zip Code

Phone Number

Please indicate where you purchased this item: Store/Website/Catalog

Please indicate color/size/style number:

Style No

Parts Letter

Parts Description

Quantity Needed
