


















Installation & Assembly













Assembling Instruction

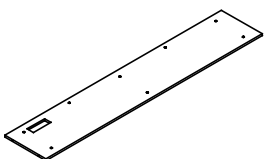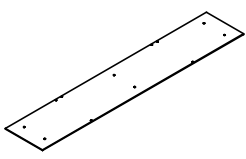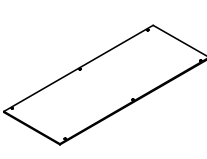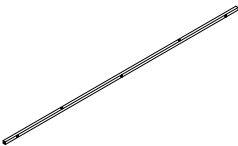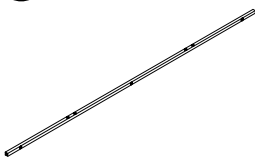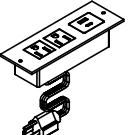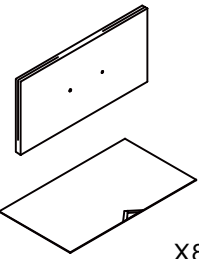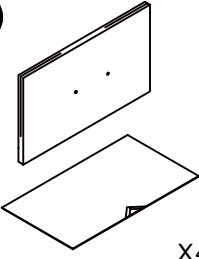Attention: Do not tighten the screws until all of them are in right positions

1  X1	2  X1	3  X1	4  X2	5  X1
6  X1	7  X2	8  X2	9  X4	10  X2
11  X2	12  X1	13  X1	14  X3	15  X8
16  X1	17  X1	18  X8	19  X4	

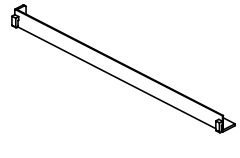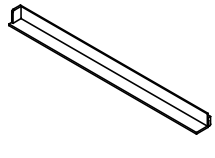A  M6X10 X12	B  M6X22 X28	C  M6X28 X14	D  M5X40 X4	E  M4X10 X24
F  M4X12 X2	G  M6 X8	H  X12	J <div data-bbox="1013 392 1204 638">  M3X12 </div> X5	K <div data-bbox="1324 392 1516 638">  M6X30  M4X50 </div> X2
L  X12	R  X12	 M4	 M3	

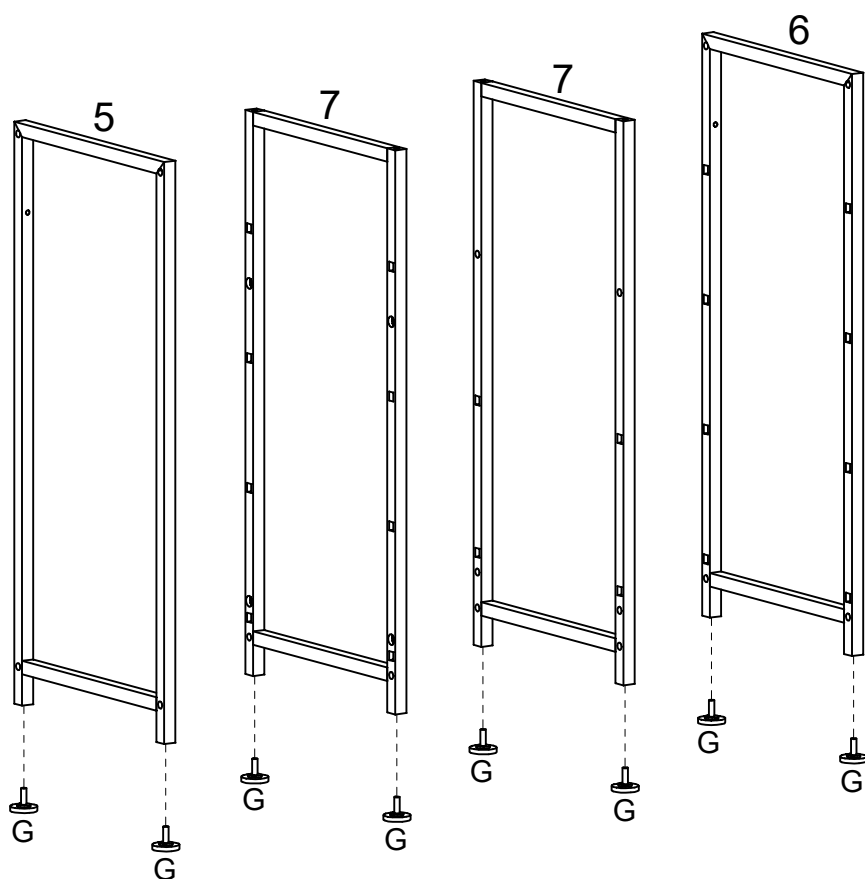Step 1




G	M6	X8
---	----	----

Step 2



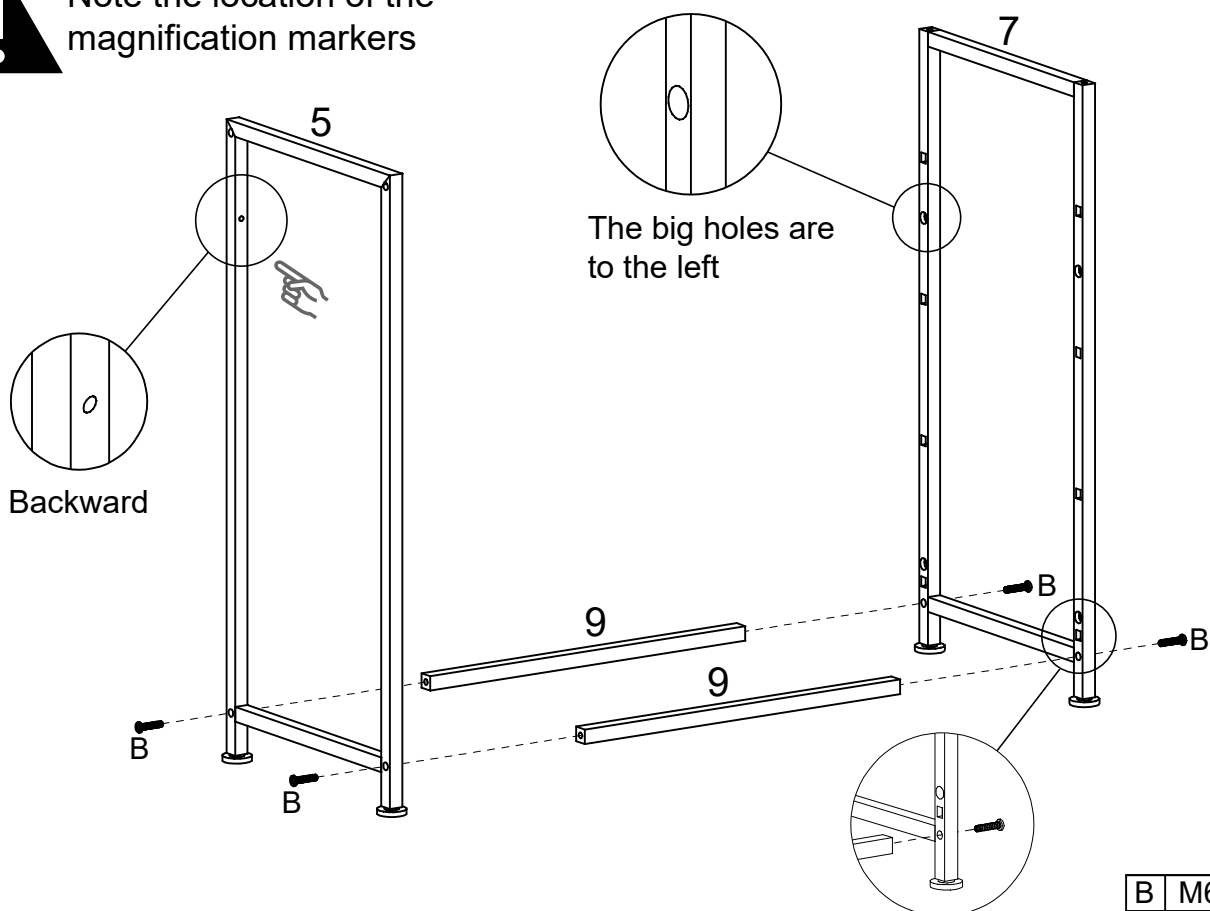Note the location of the magnification markers




B	M6X22	X4
---	-------	----

Step 3



Note the location of the magnification markers

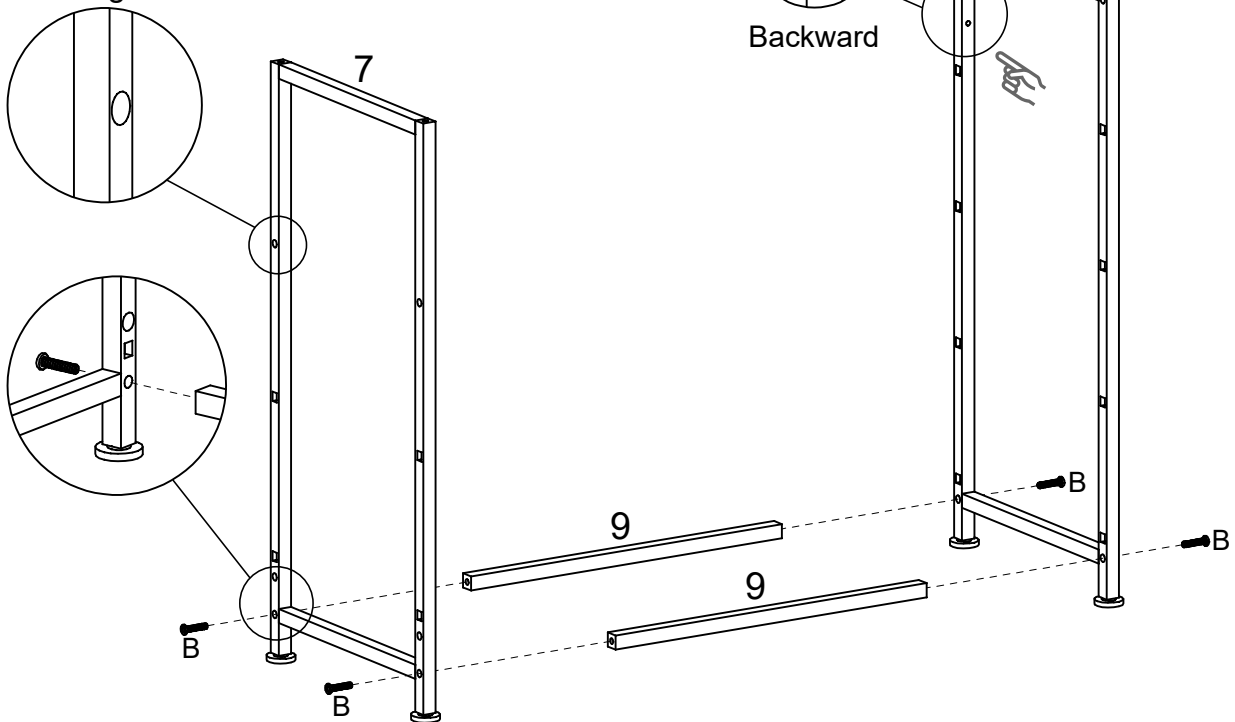The big holes are to the right




B	M6X22	X4
---	-------	----

Step 4




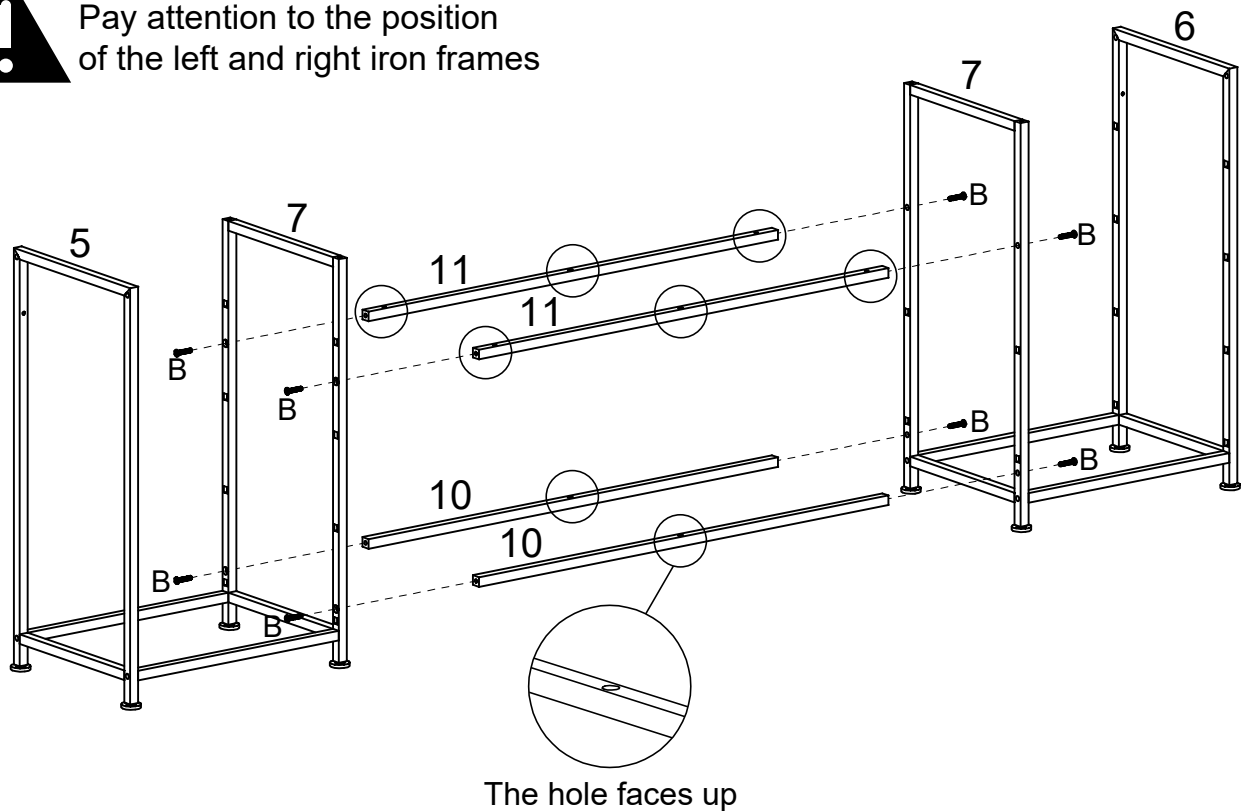Pay attention to the position of the left and right iron frames



B	M6X22	X8
---	-------	----

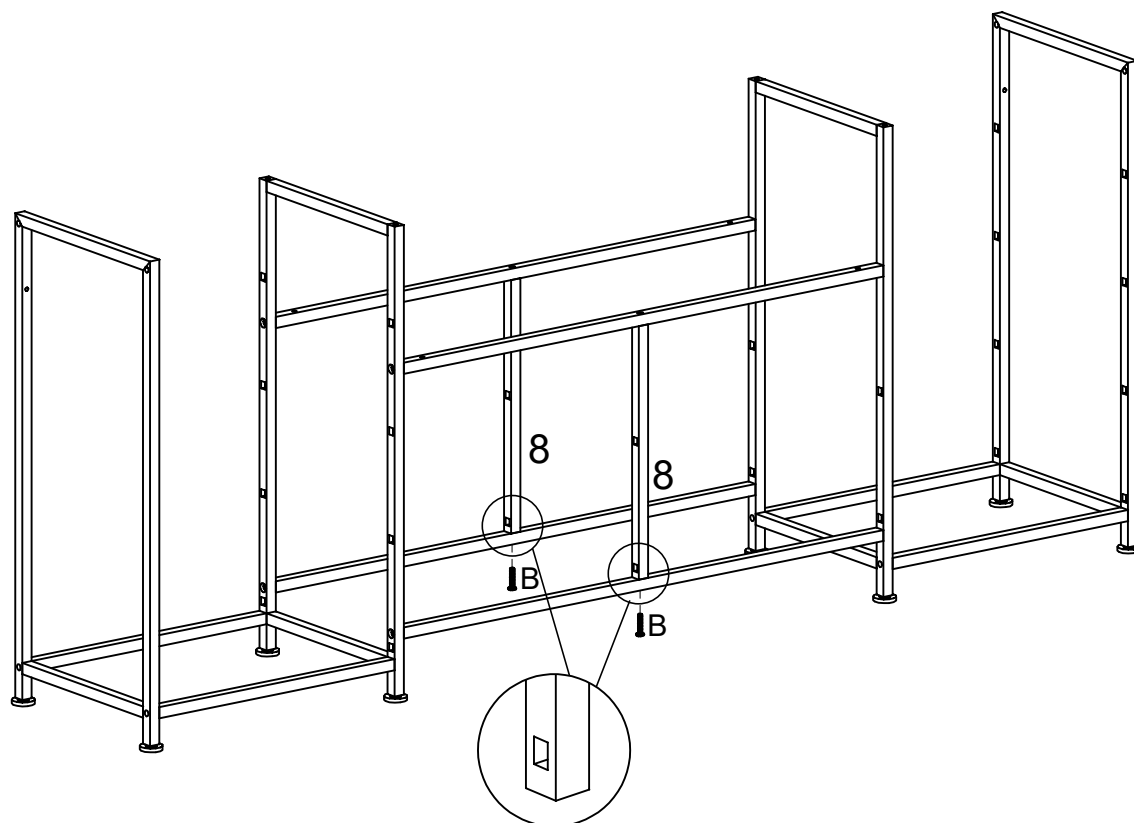
Step 5



The rectangular hole closer to the edge of the steel pipe faces downwards.

B	M6X22	X2
---	-------	----

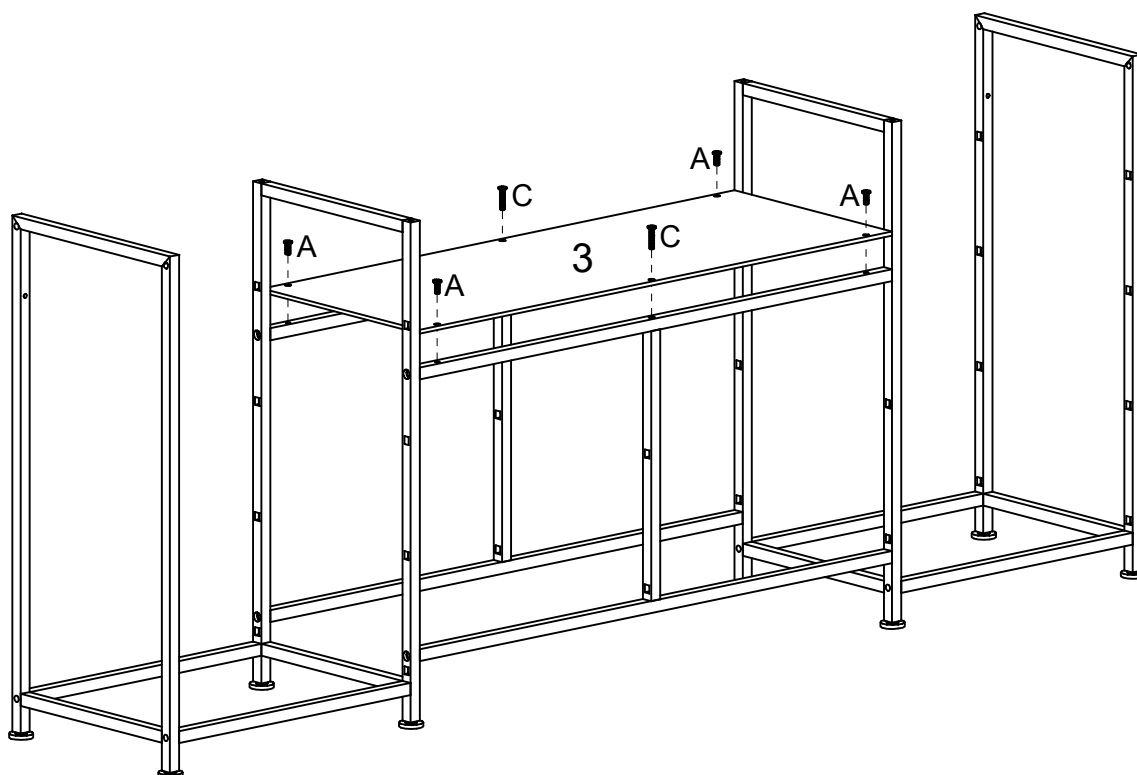
Step 6



A	M6X10	X4
C	M6X28	X2

Step 7

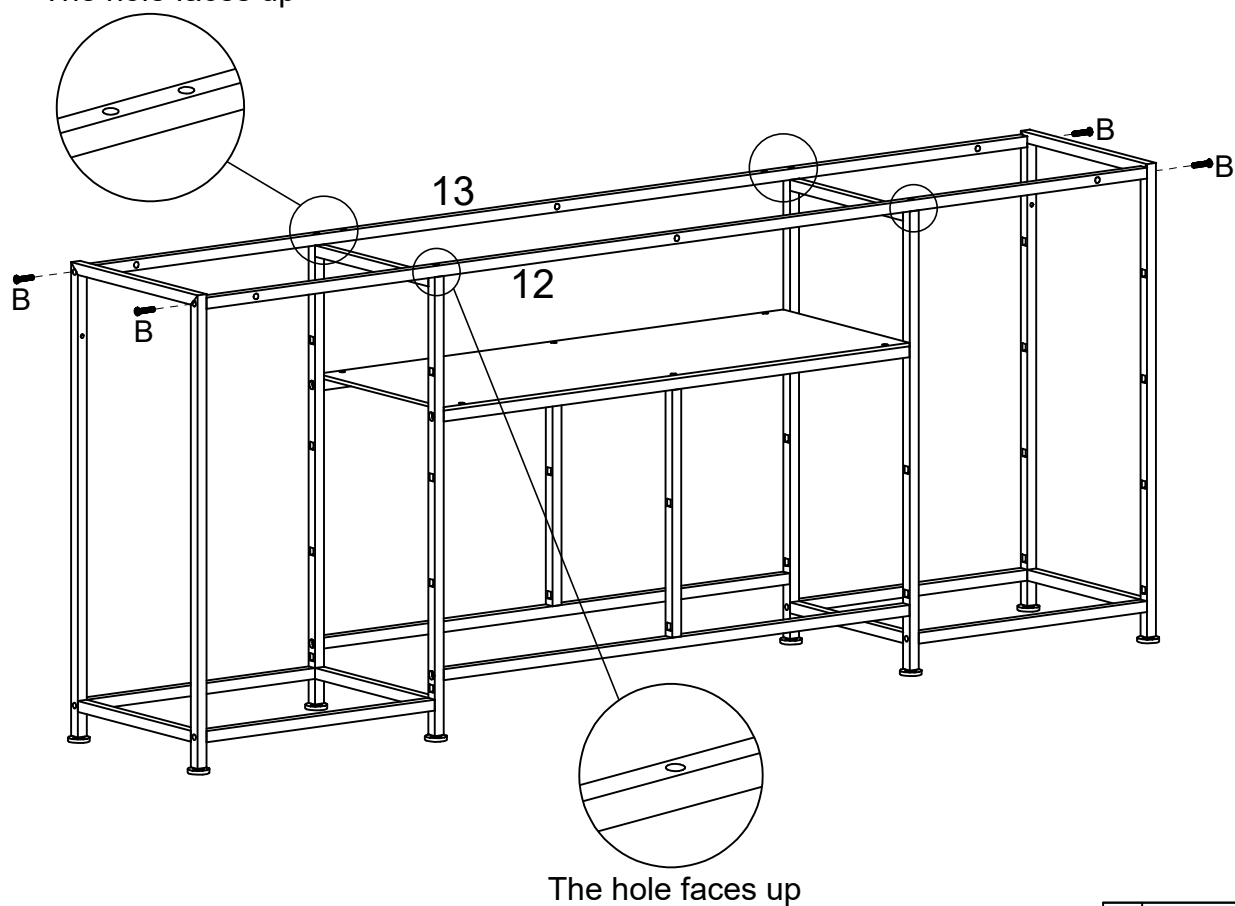
The hole faces up



B	M6X22	X4
---	-------	----


Step 8

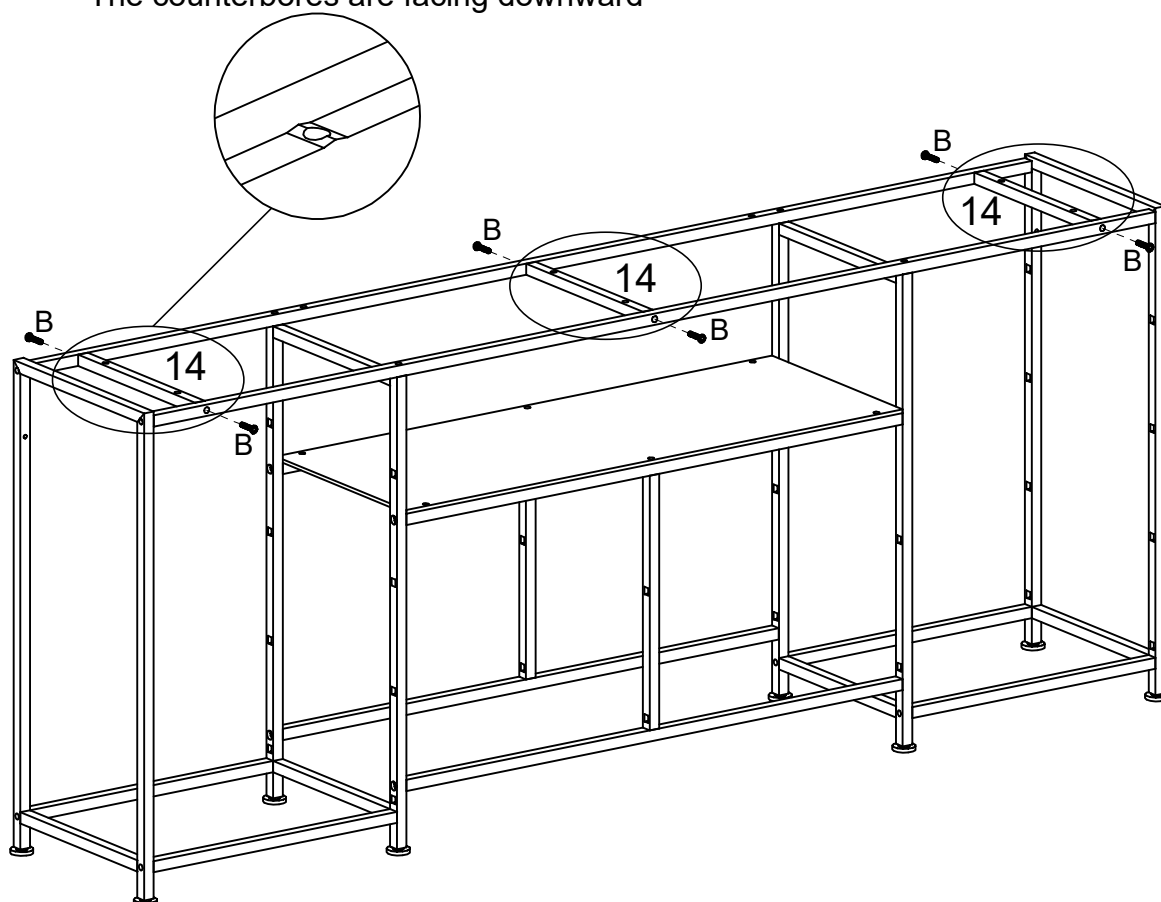The counterbores are facing downward



B	M6X22	X6
---	-------	----

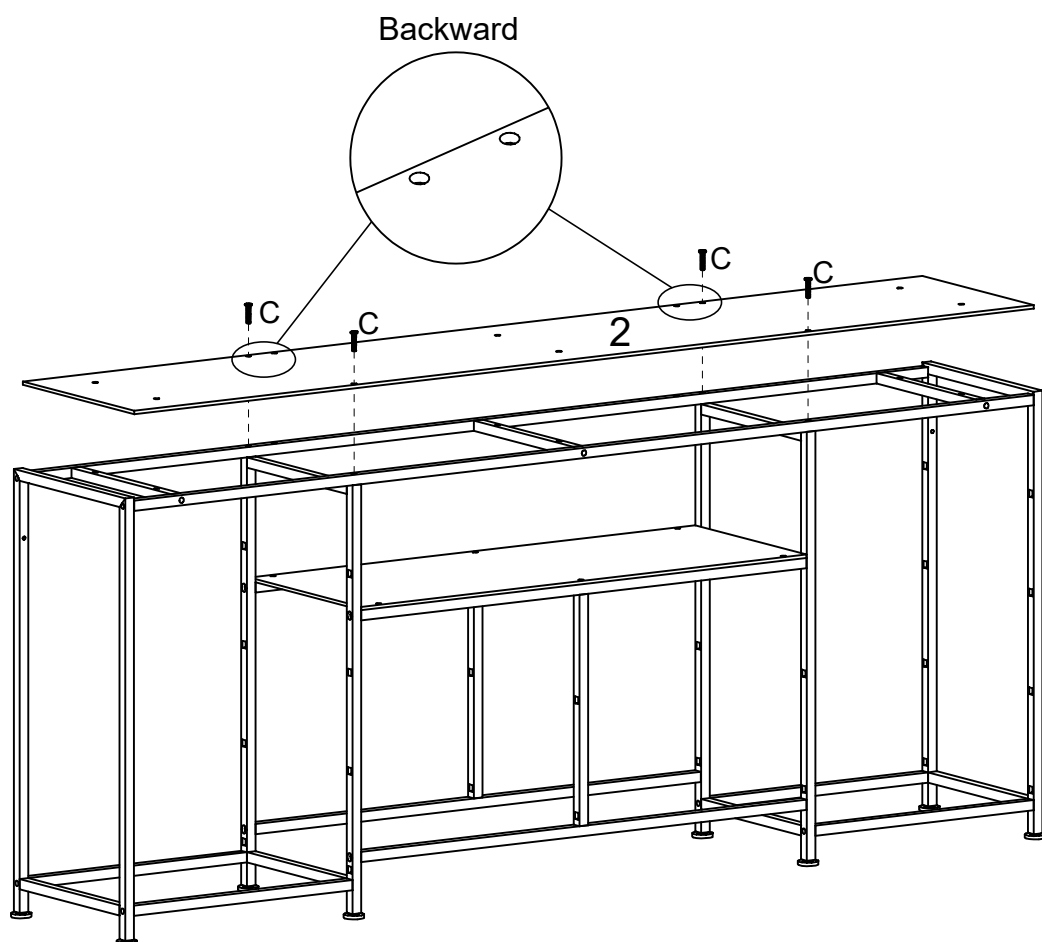Step 9




C	M6X28	X4
---	-------	----

Step 10




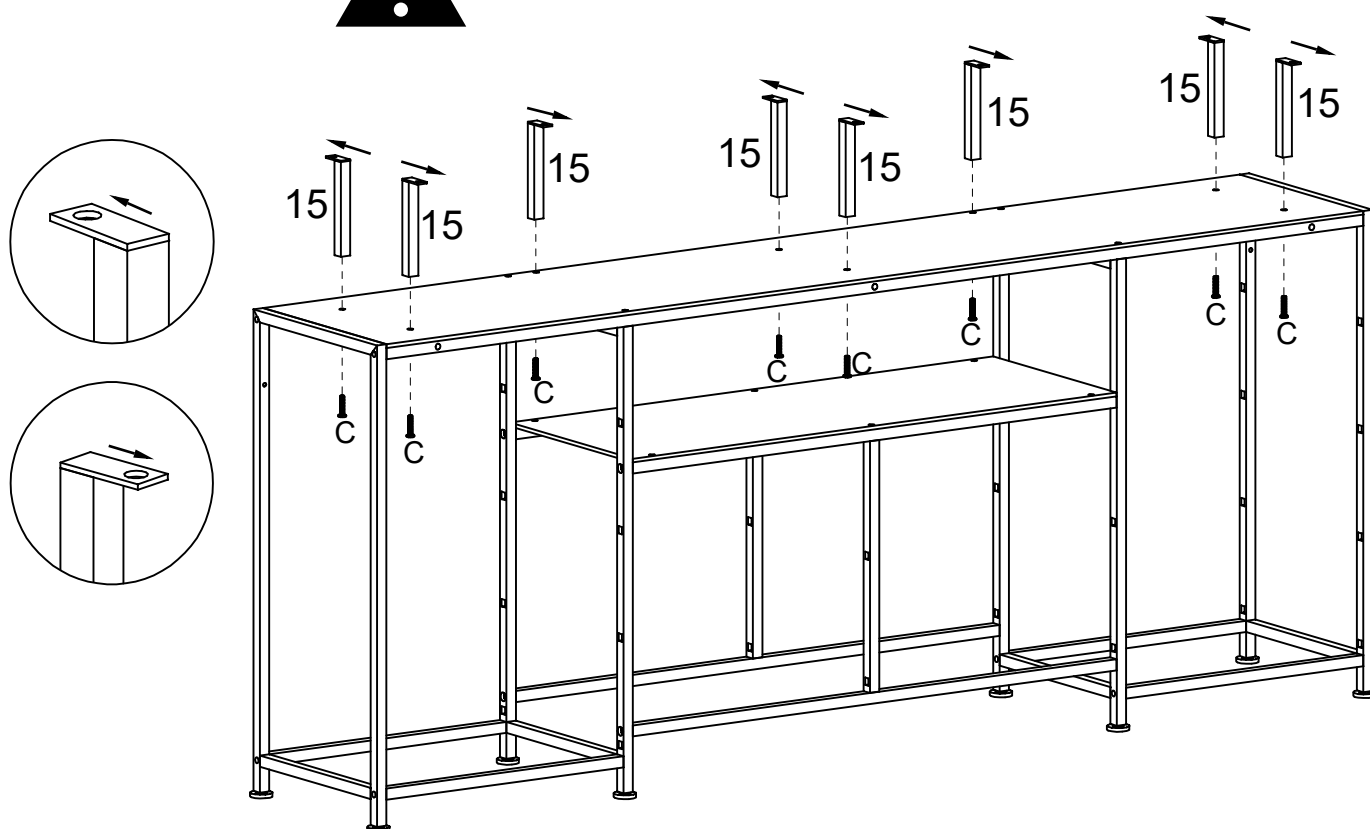Pay attention to the direction of the arrows




C	M6X28	X8
---	-------	----

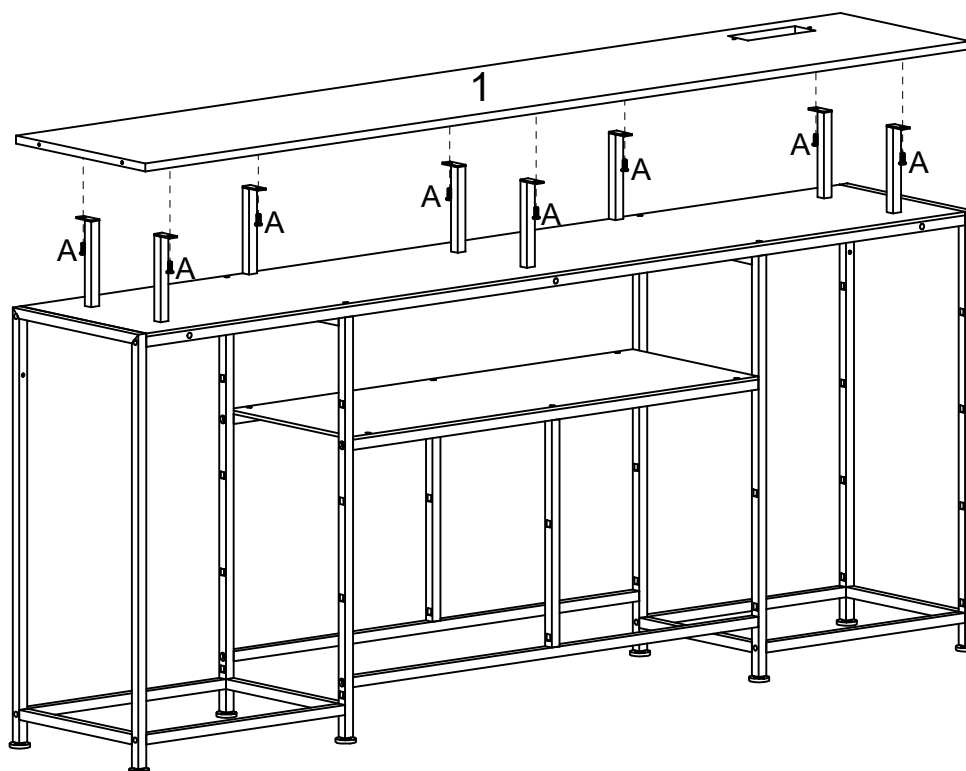Step 11




A	M6X10	X8
---	-------	----

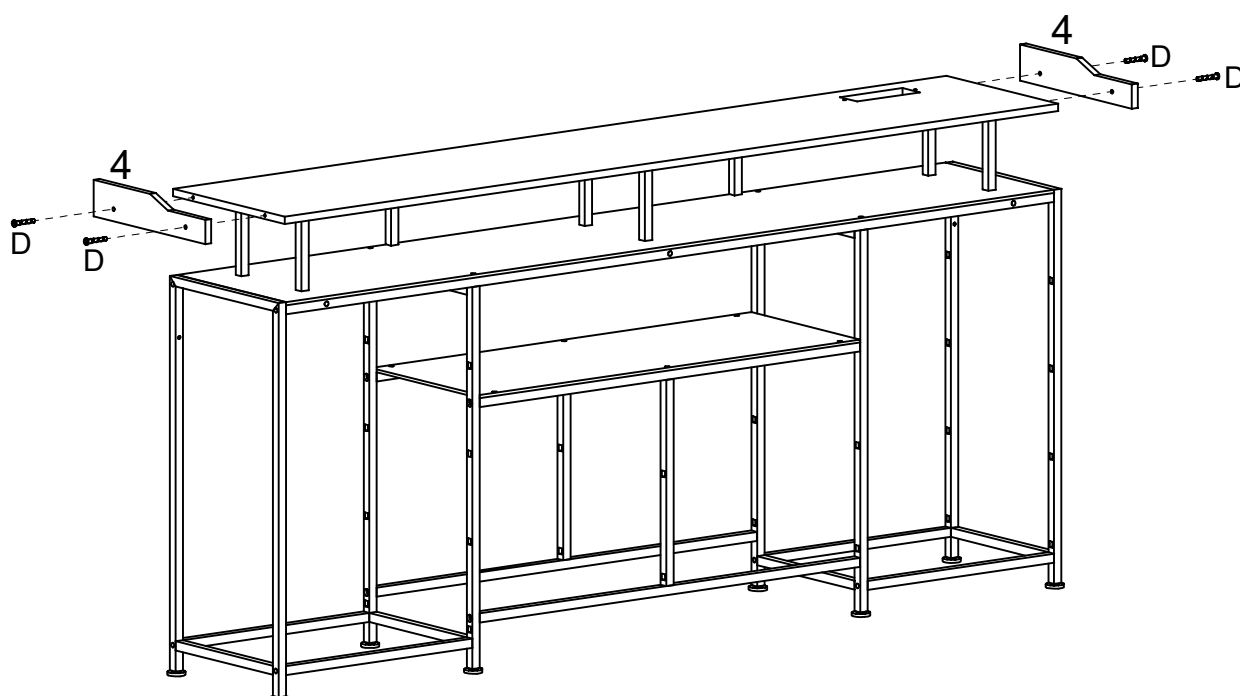Step 12




D	M5X40	X4
---	-------	----

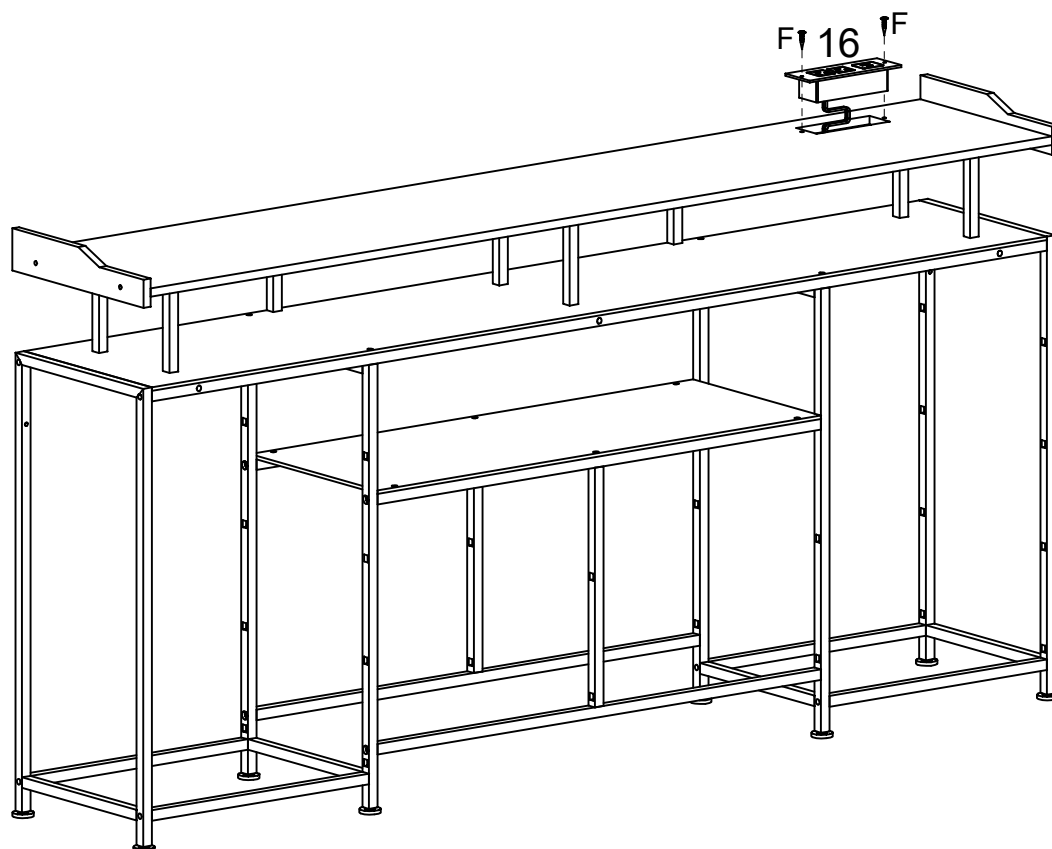Step 13



F	M4X12	X2
---	-------	----

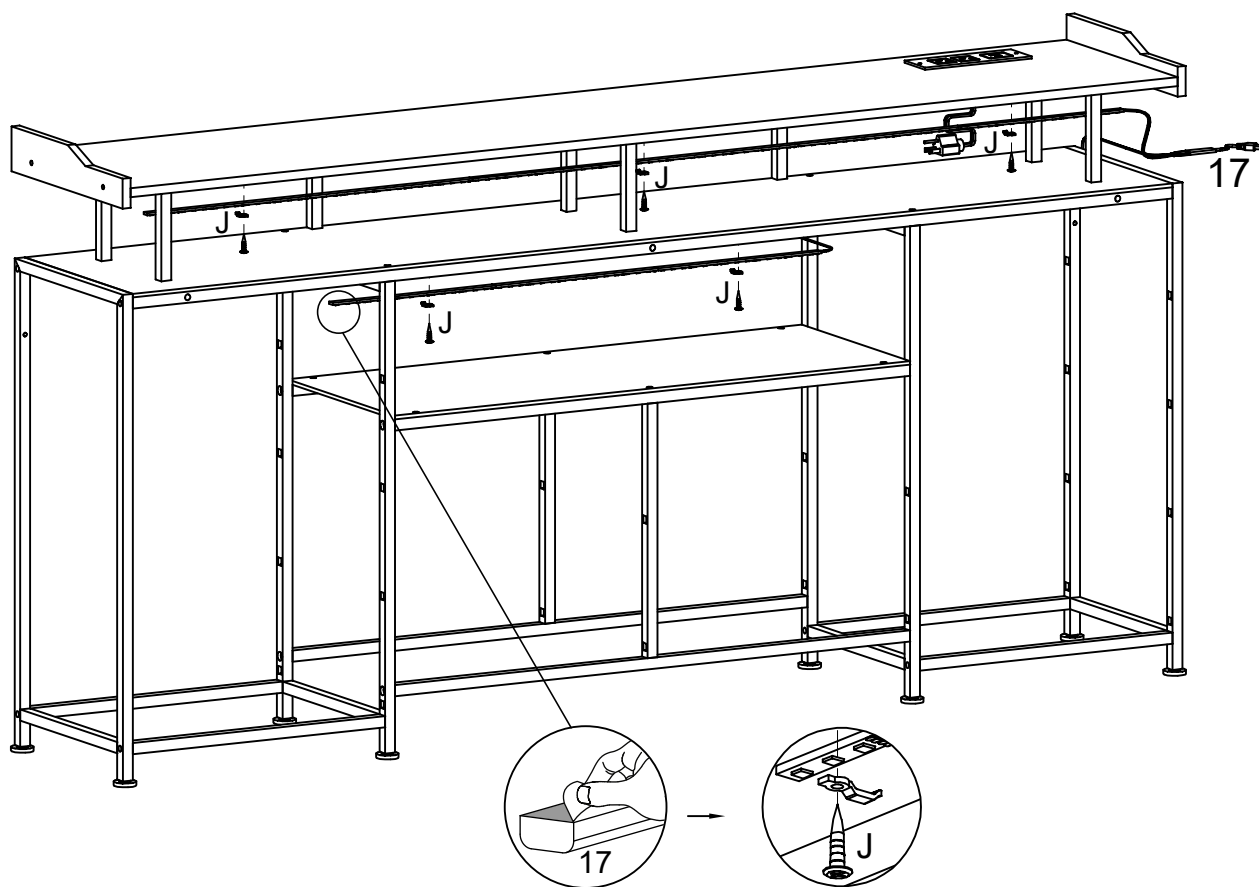
Step 14




Rip the protective paper

J		X5
---	--	----

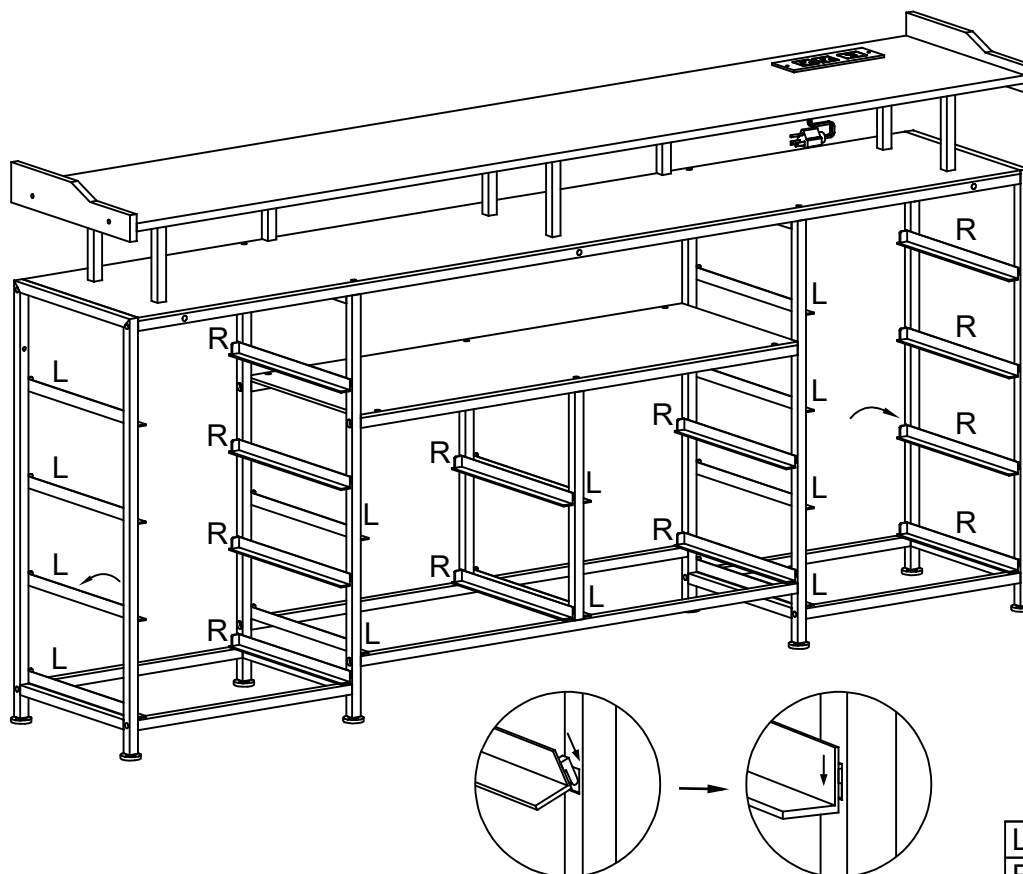Step 15




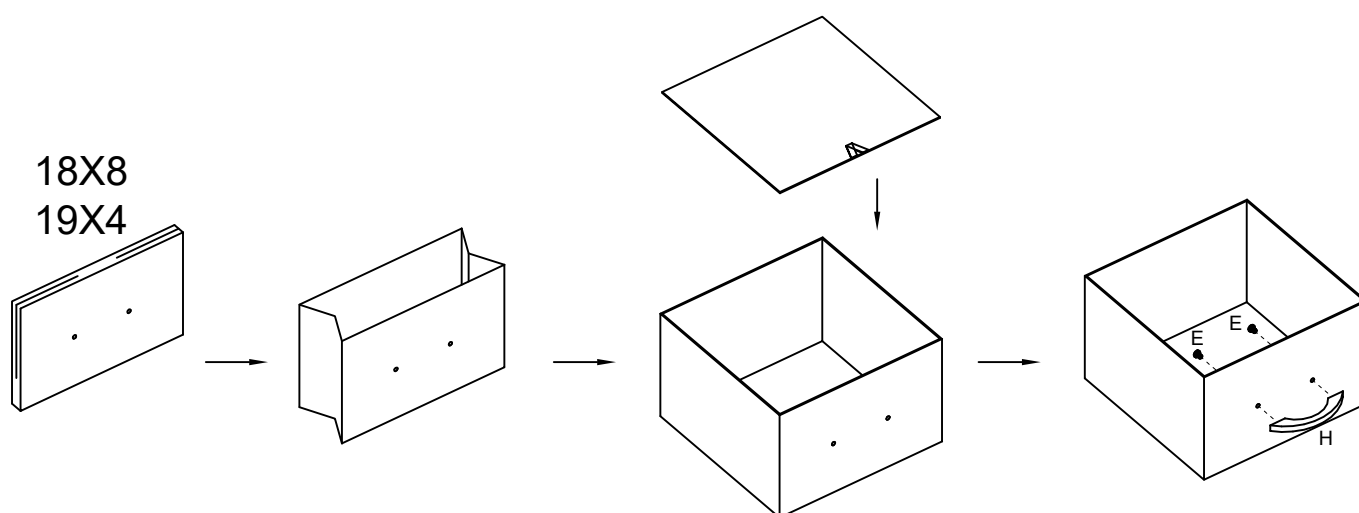Step 16



E	M4X10	X24
H		X12

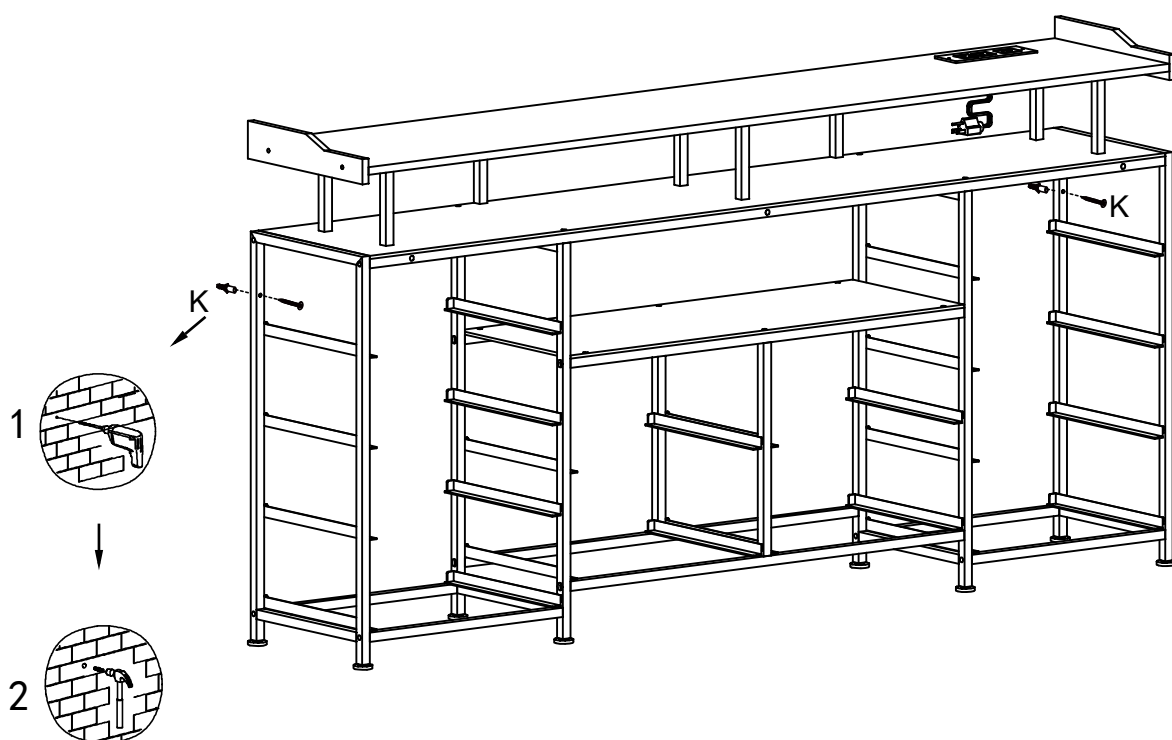Step 17



K	X2
---	----

