
ASSEMBLY INSTRUCTIONS

SKU:SF-HG47CFDE

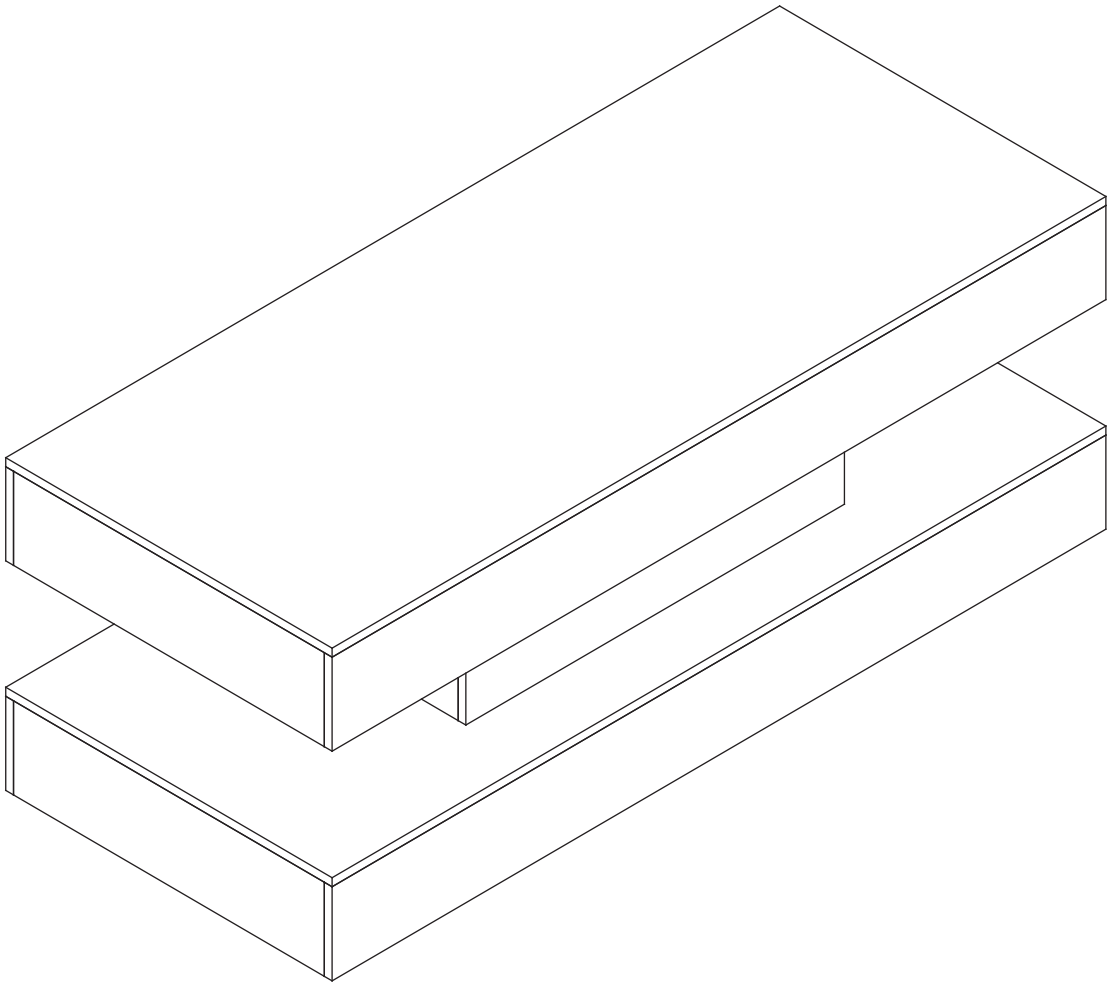










Two-person installation is recommended for this product.

hellovitesse@gmail.com

+1(503) 928-7812


Parts list

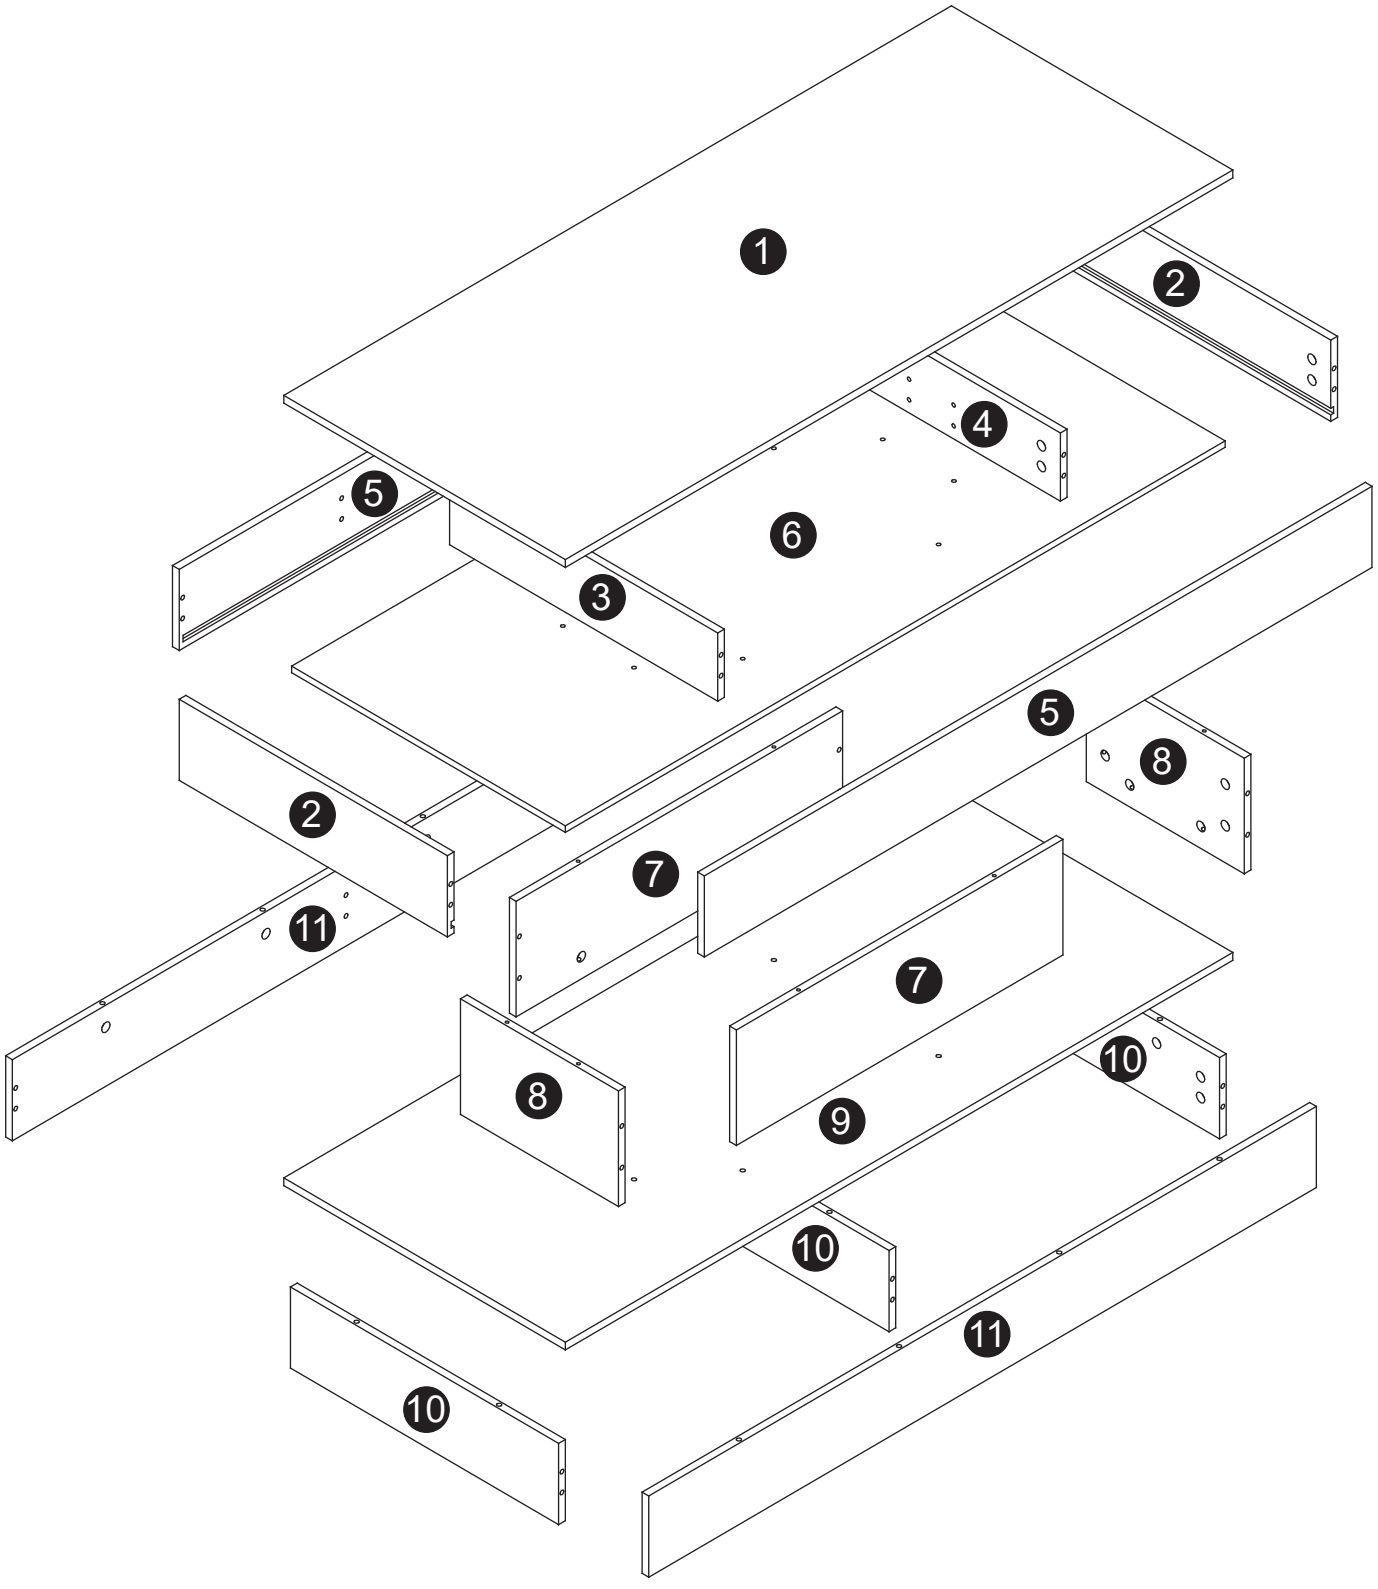


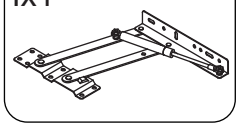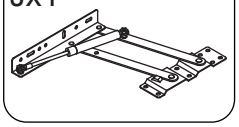Ax58 	Bx58 	Cx8  30mm	Dx24  8mm	Ex10 	Fx12 
Gx1 	Hx24 	Ix1 	Jx1 		


Installation steps

STEP 1

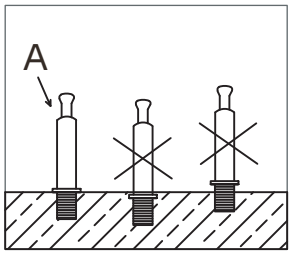


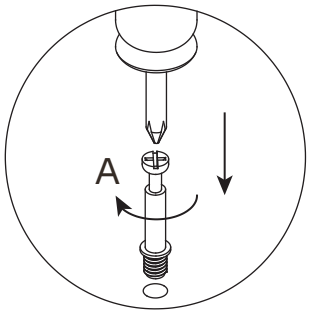


x2

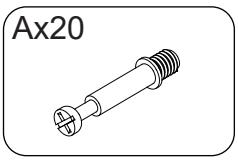

STEP 2

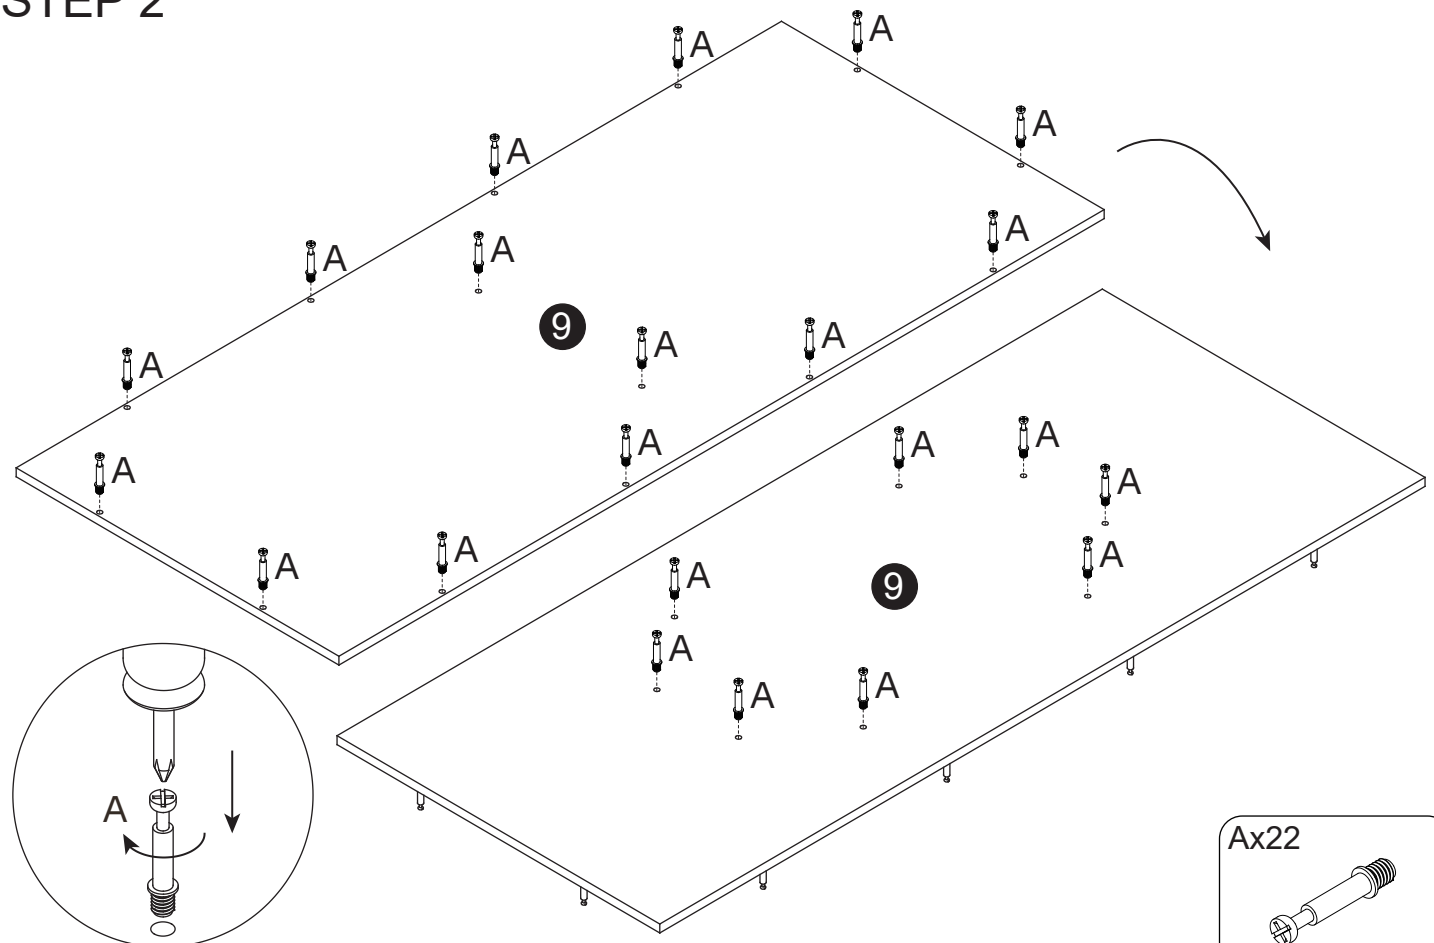


STEP 3

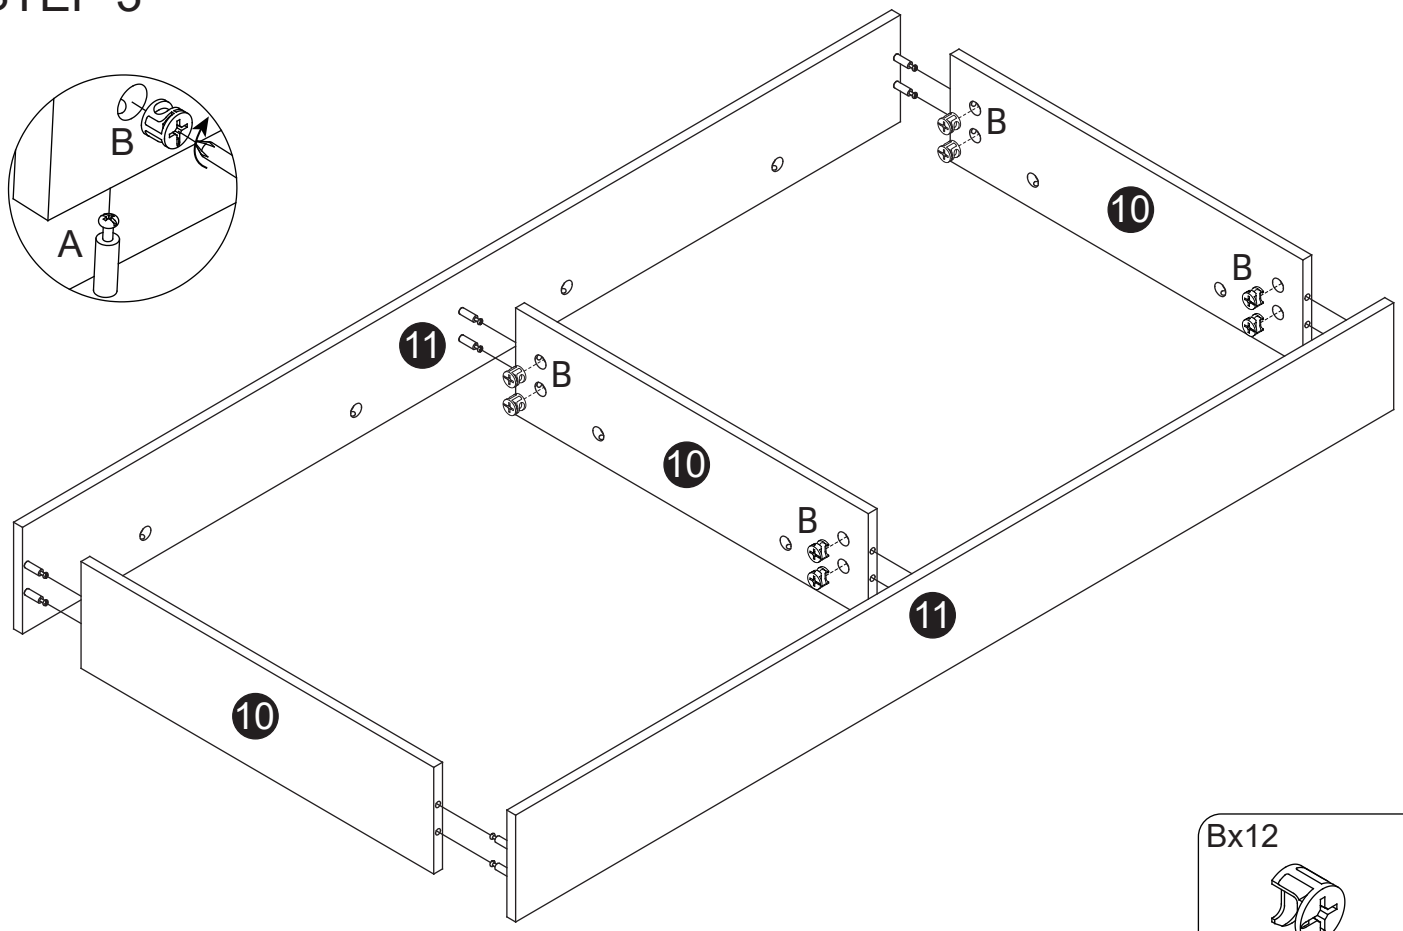

Bx12


STEP 4

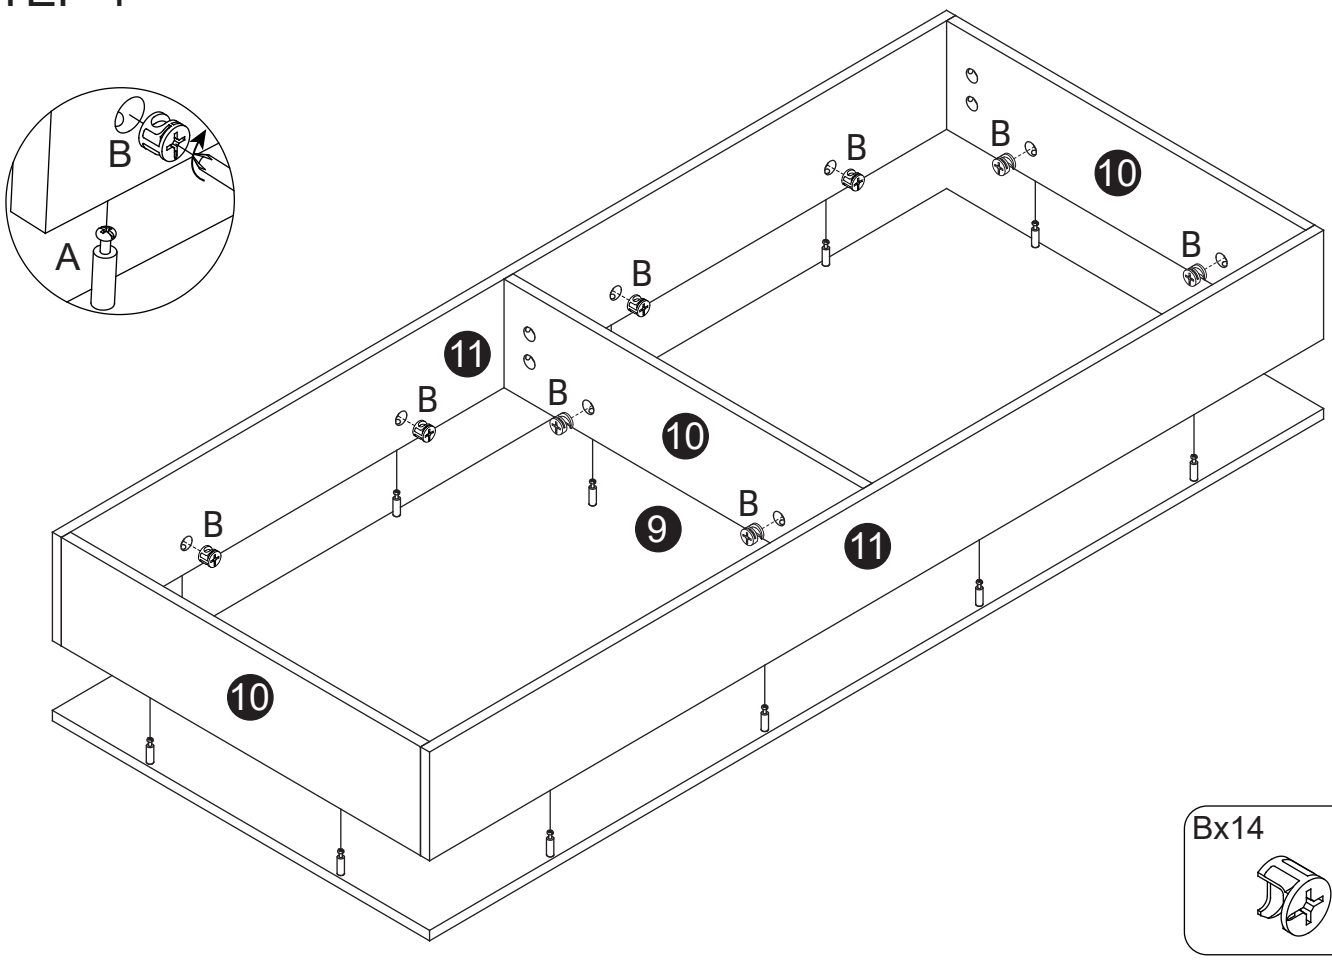


Bx14

STEP 5


Please note that there are screw holes here.

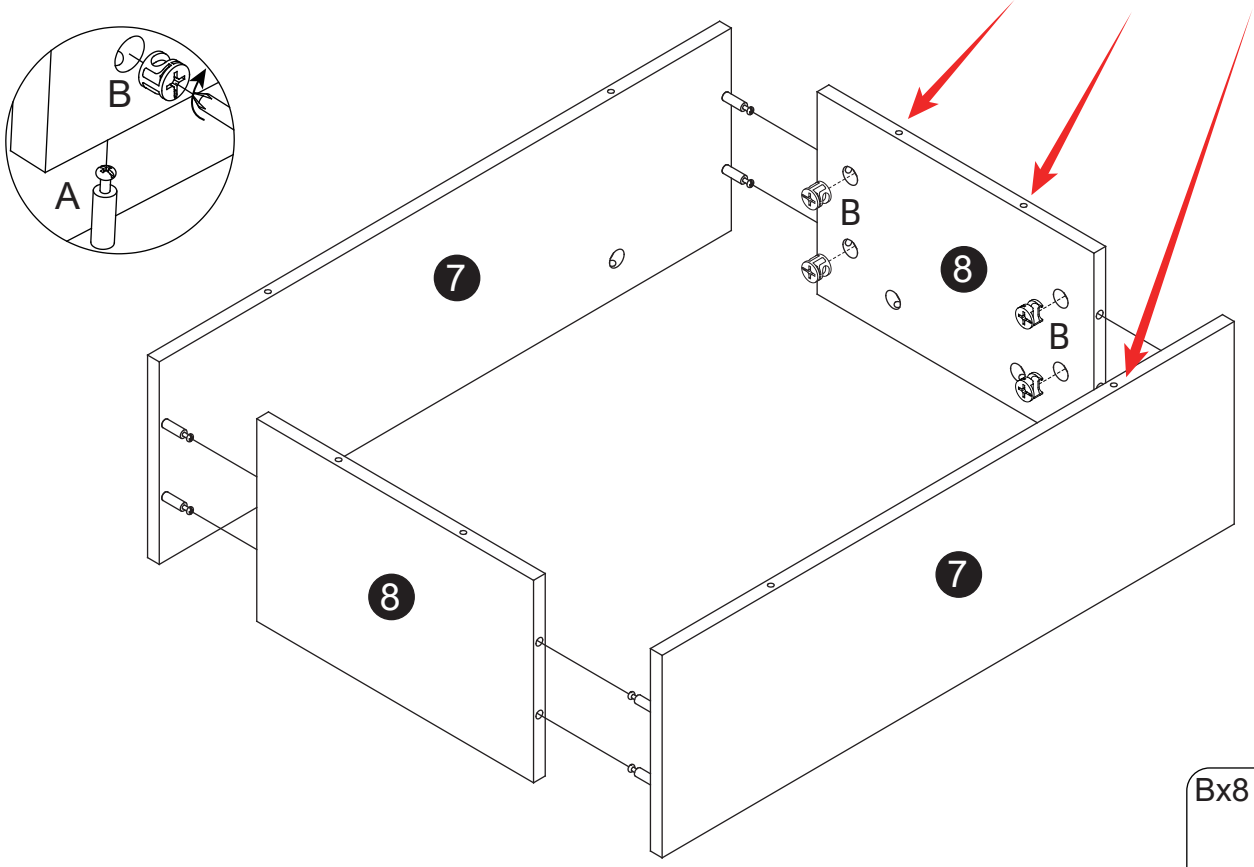

Bx8




STEP 6

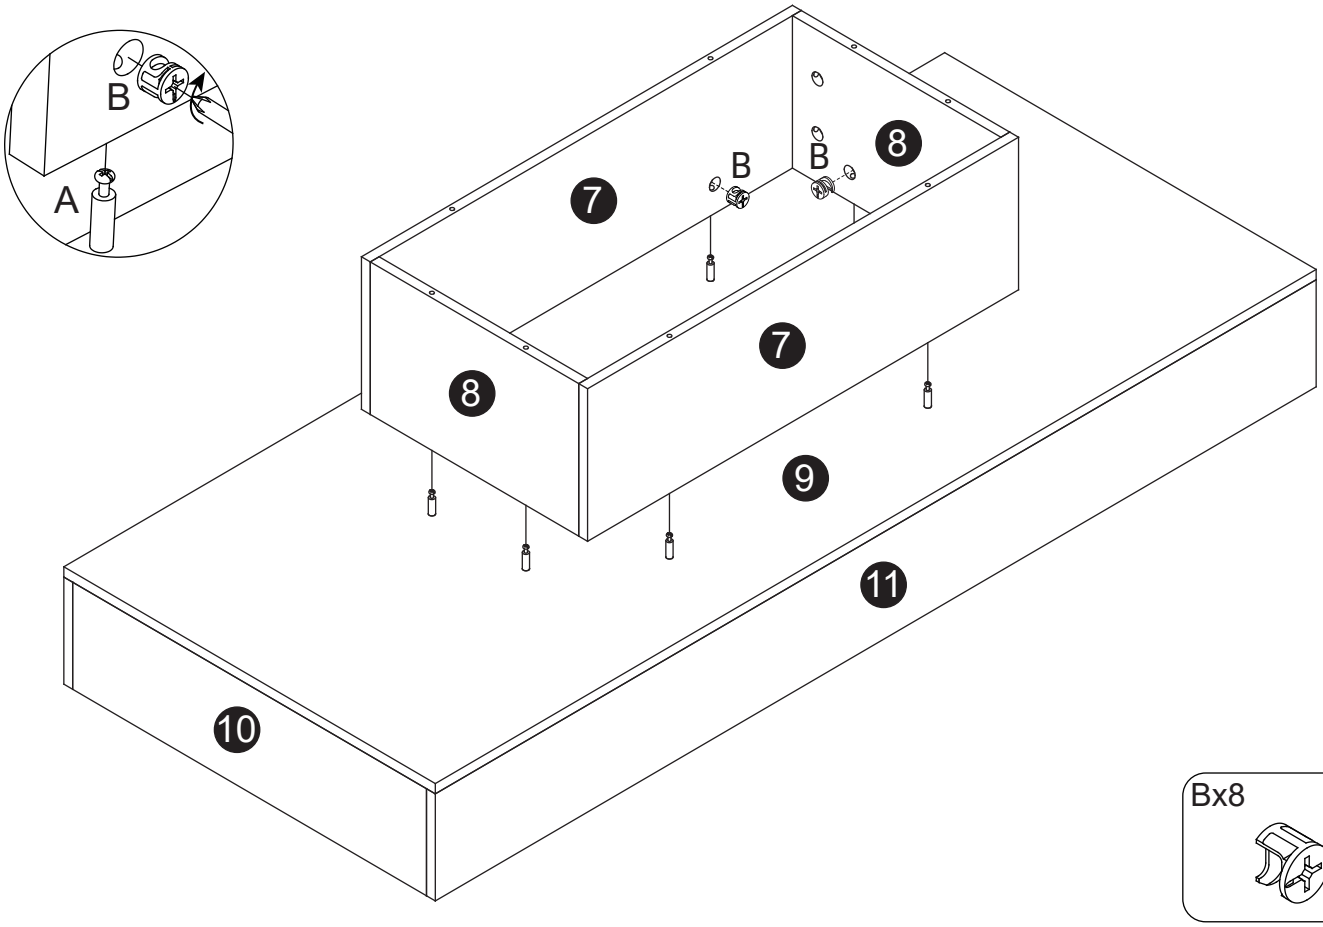


Bx8

STEP 7

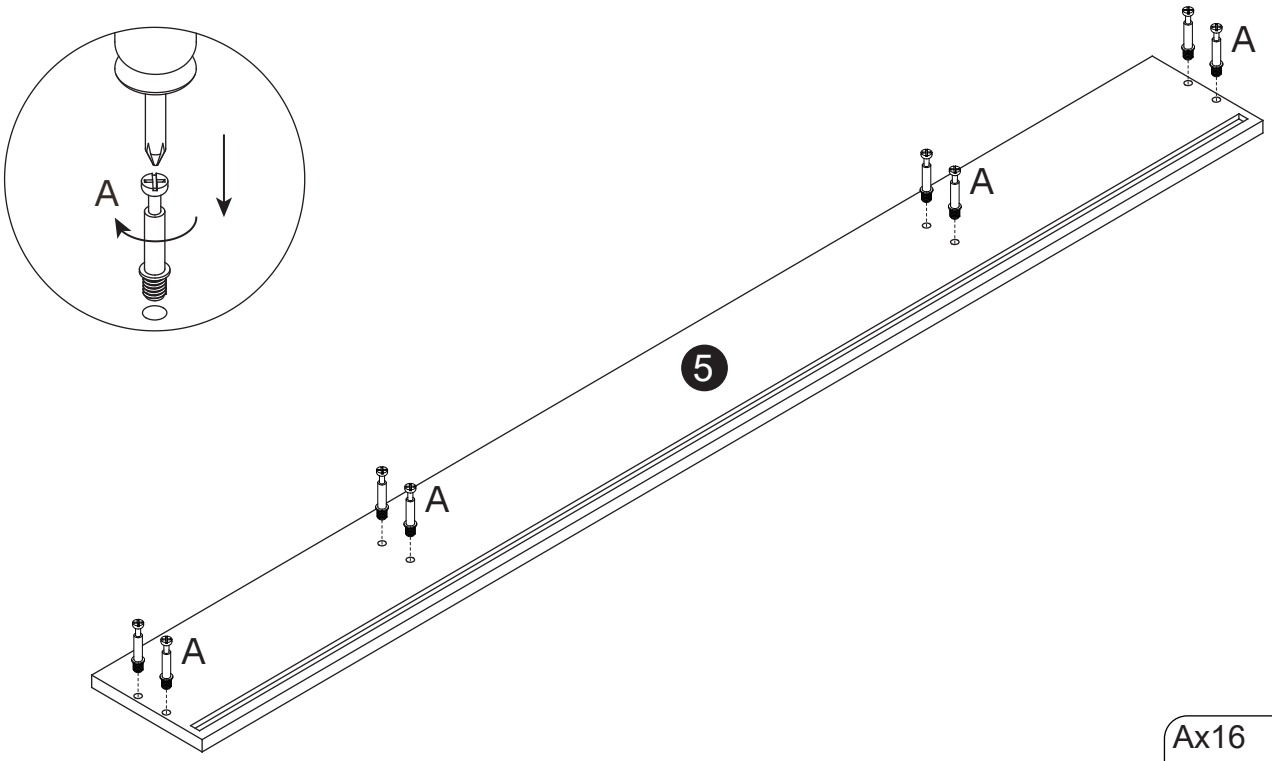



x2

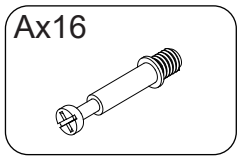


STEP 8

The grooved sides on Panel 2 and Panel 5 are on the same side.

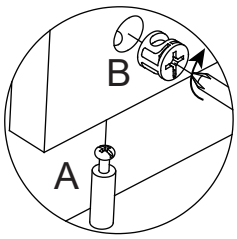


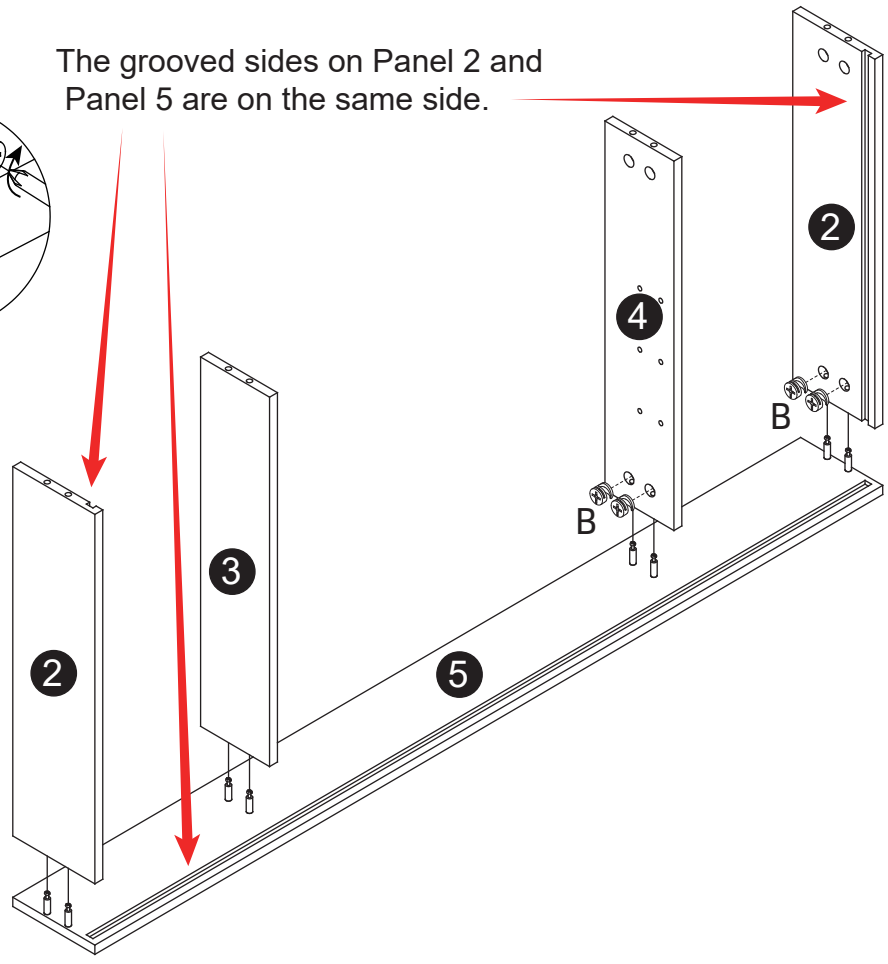

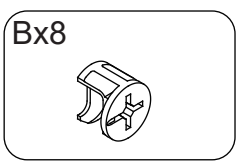


STEP 9


The side with multiple holes faces downward.

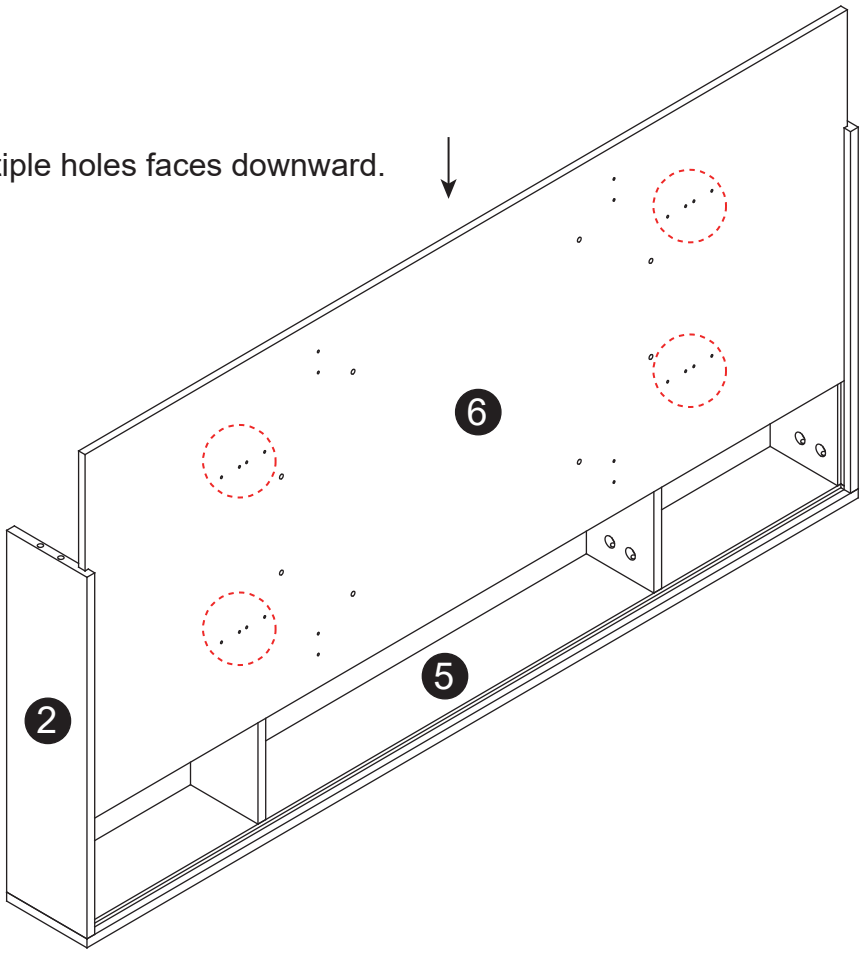

STEP 10

The dotted line indicates the groove. The groove must face inward during installation.

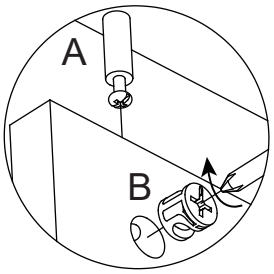


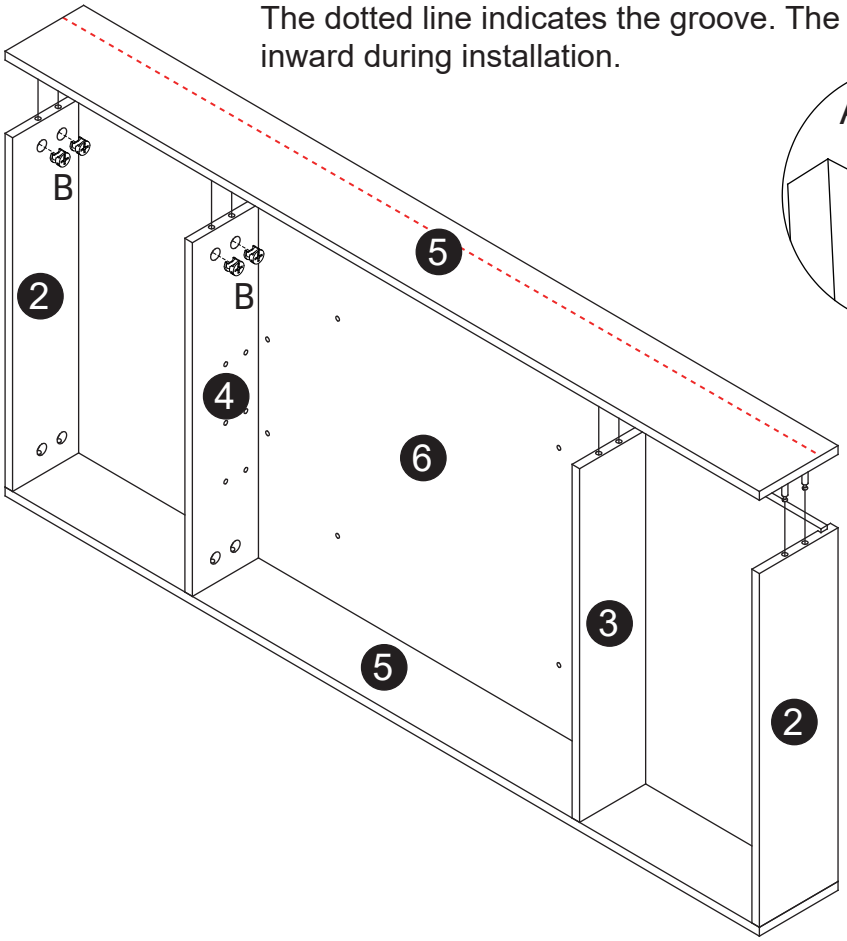


Bx8





STEP 11

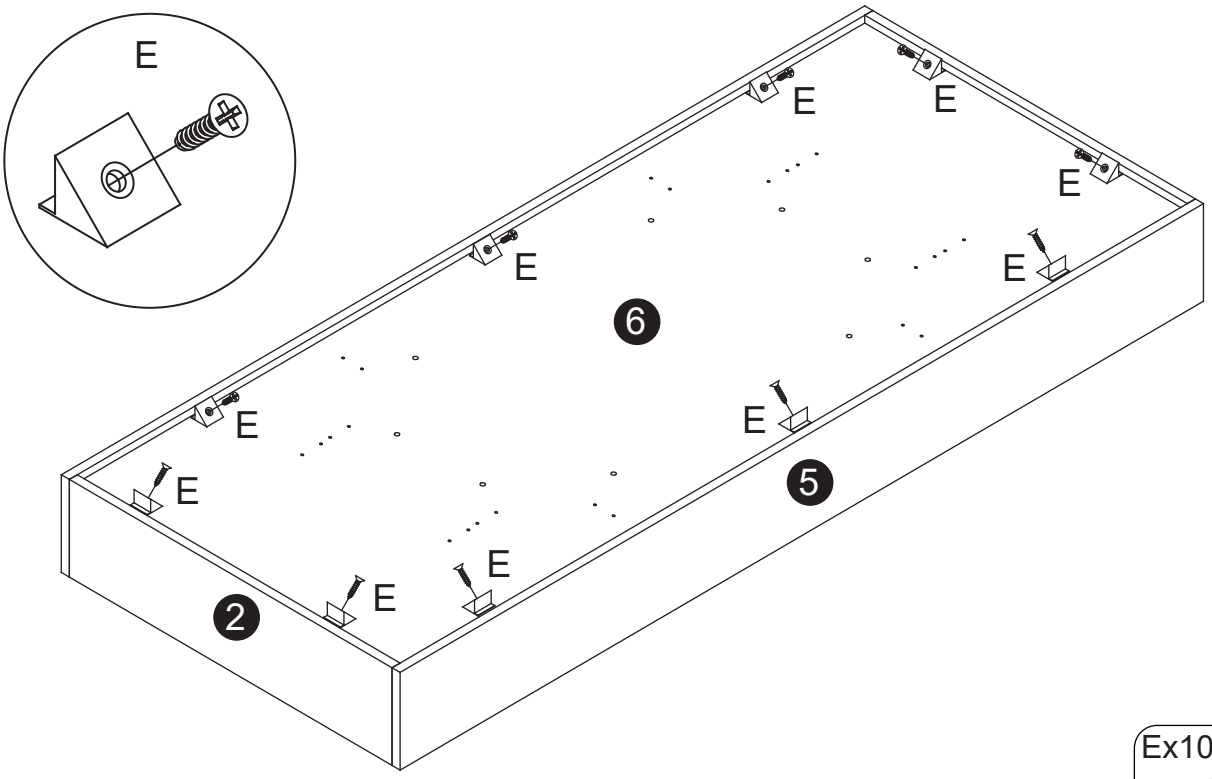


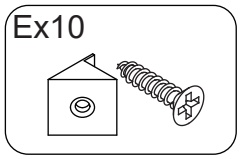

STEP 12

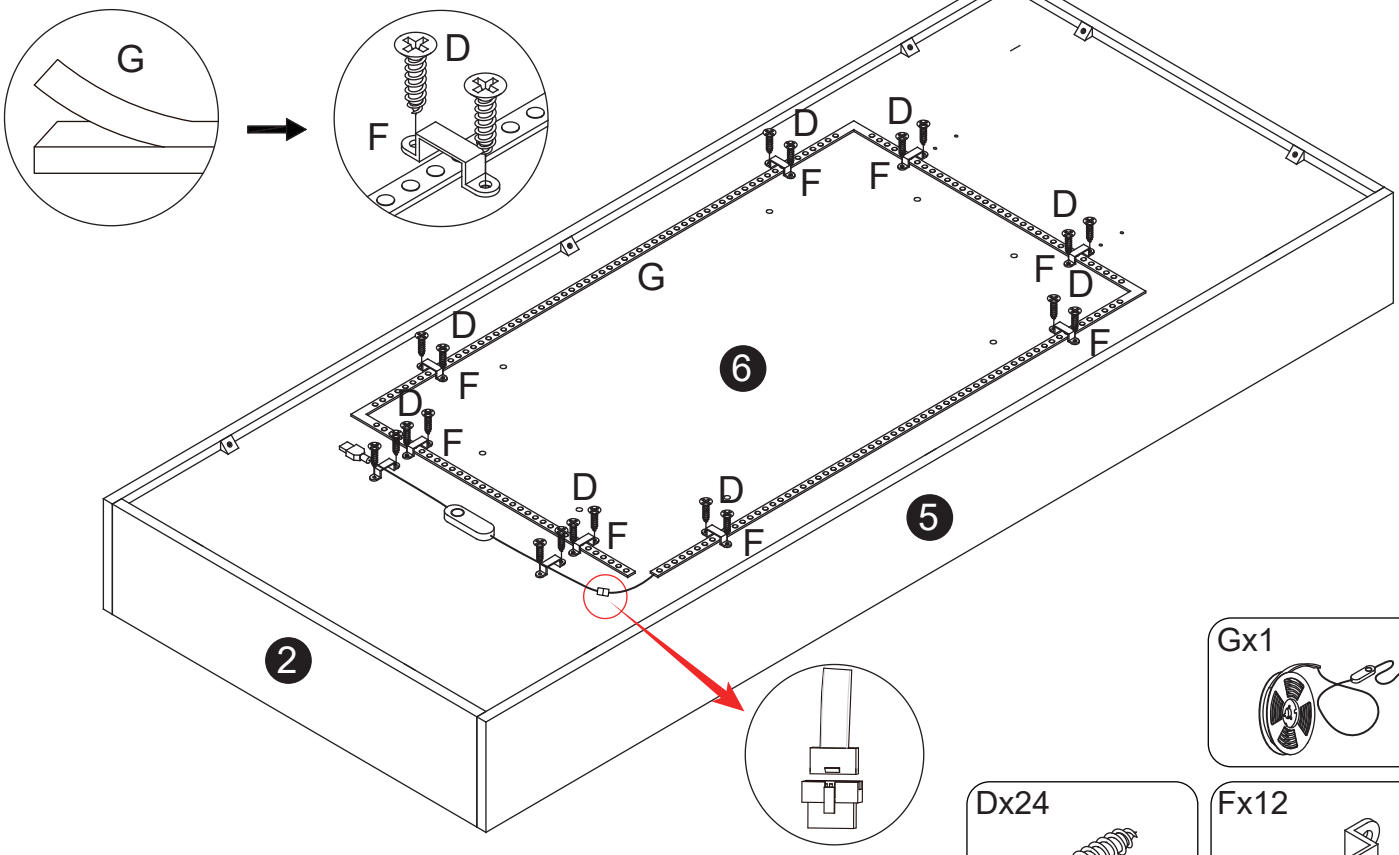

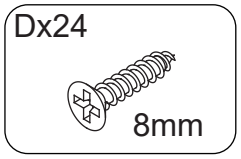


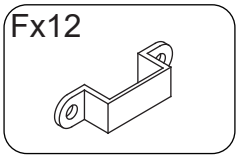


Install the clip as shown, paying attention to the correct orientation.

STEP 13


When installing screw C, first align the holes of Panel 6 and the bottom panel, then install the screw.

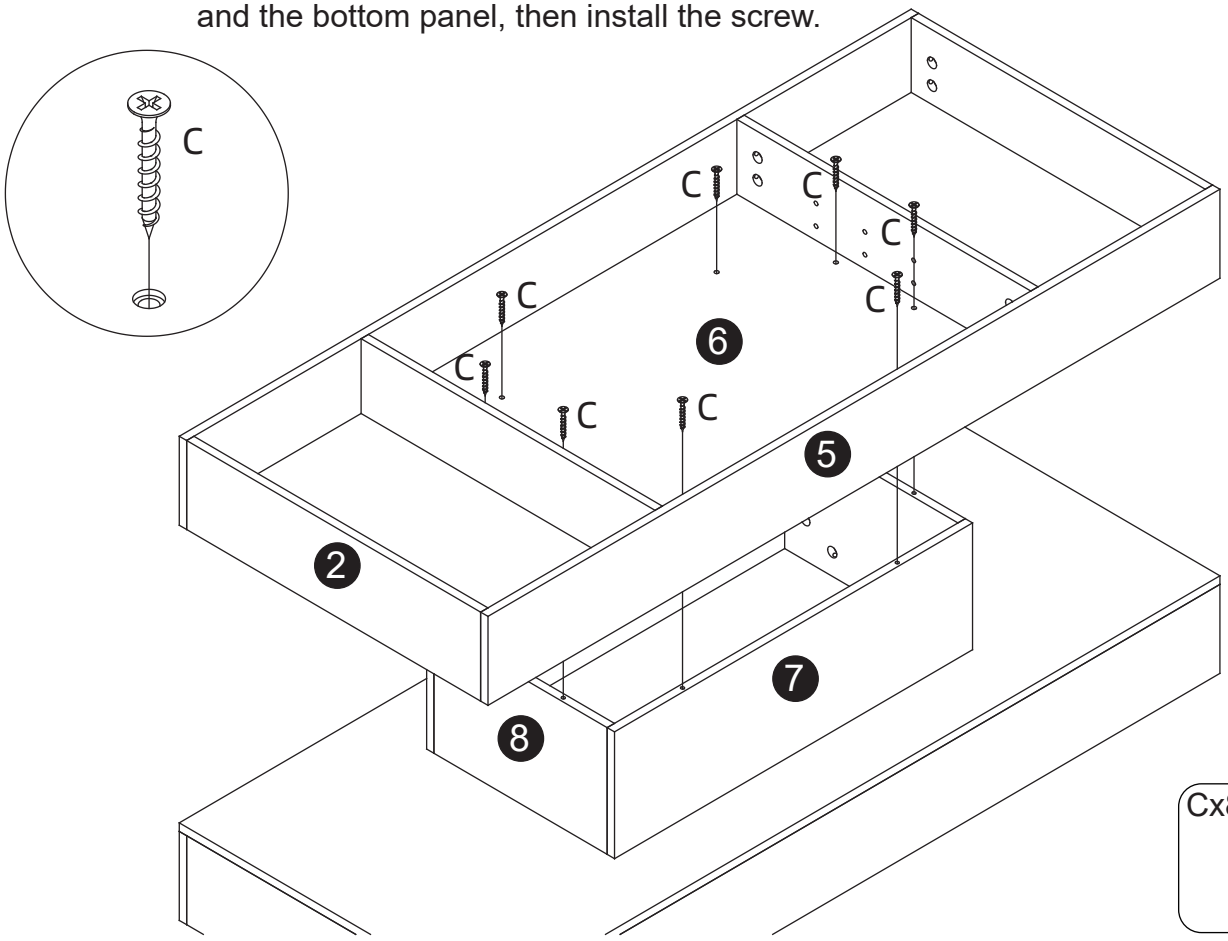

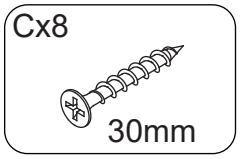


STEP 14

Align the 6 holes on the lifting bracket with Panel 1. No missing or misaligned holes.

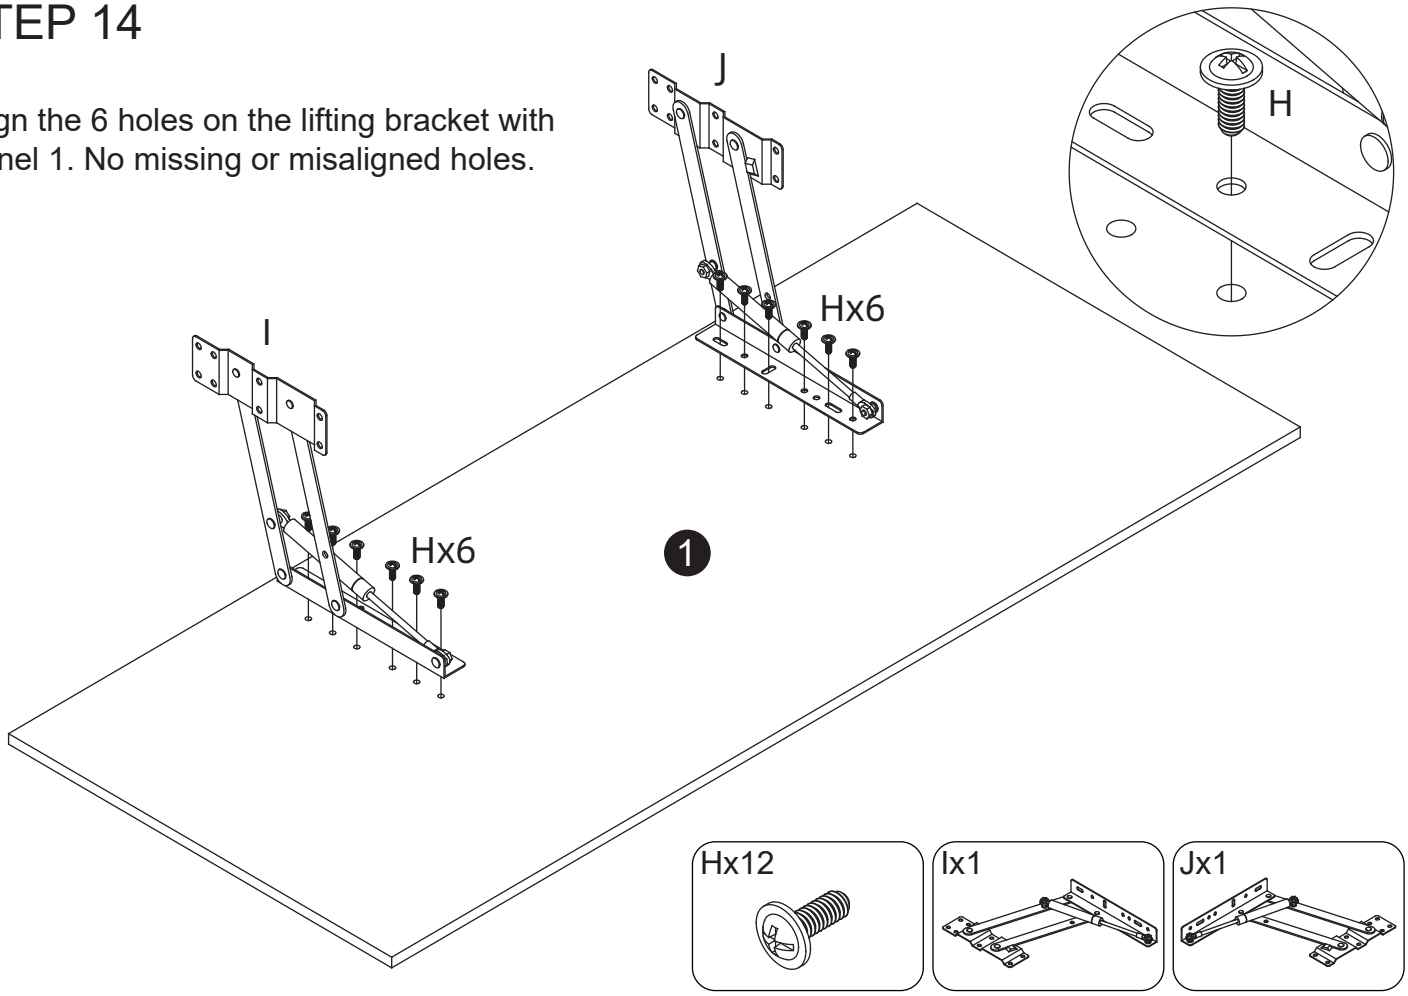


STEP 15

When installing Panel 1, pay attention to the front and back. If the top panel cannot be closed after installation, rotate Panel 1 by 180 degrees and reinstall.

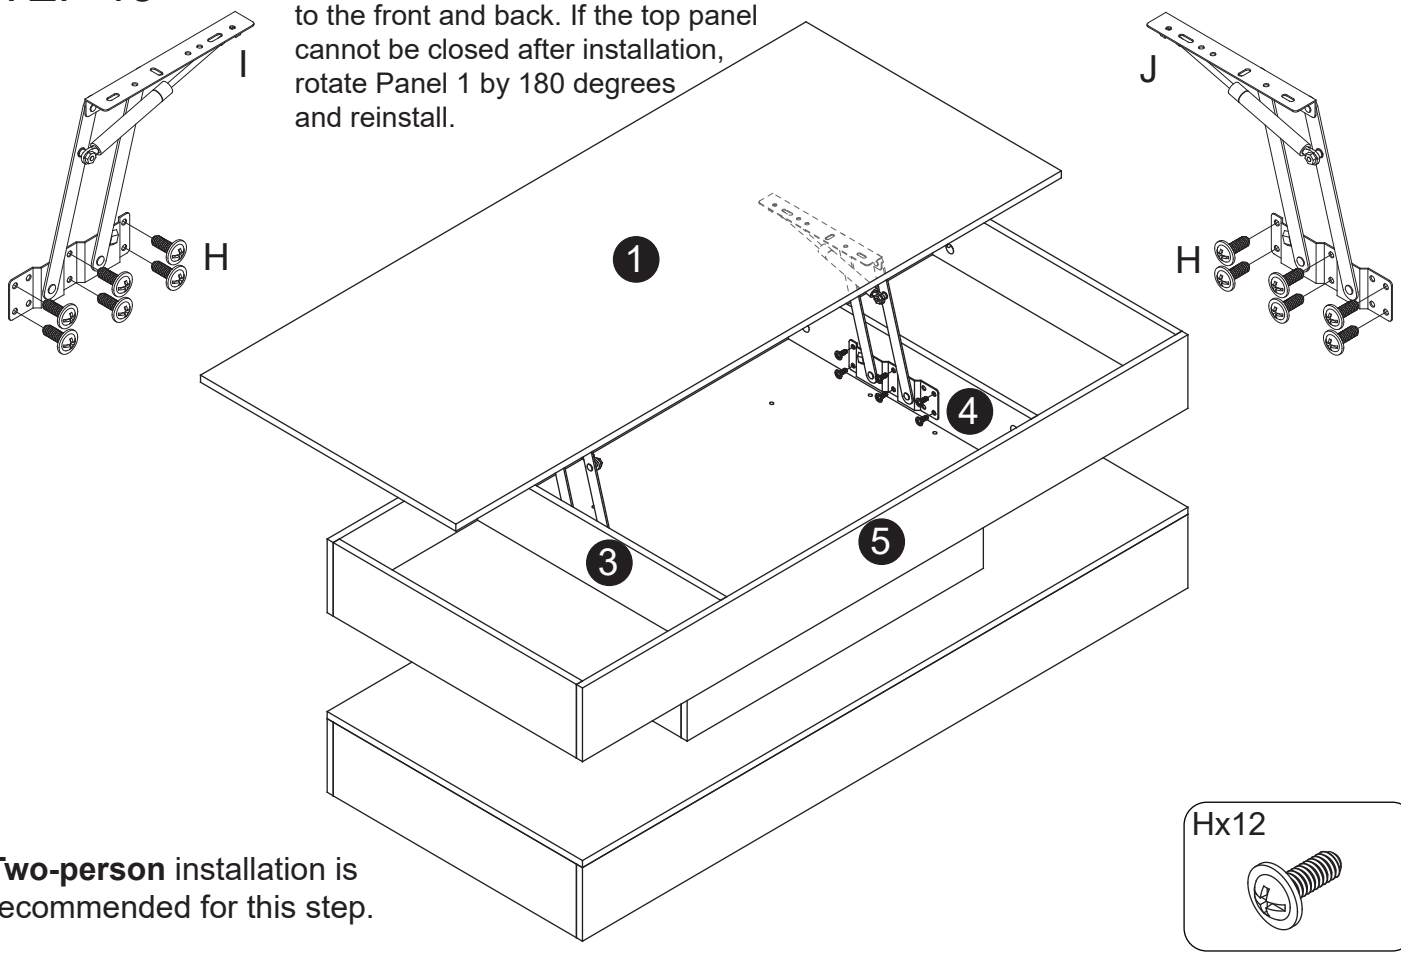

Two-person installation is recommended for this step.

STEP 16

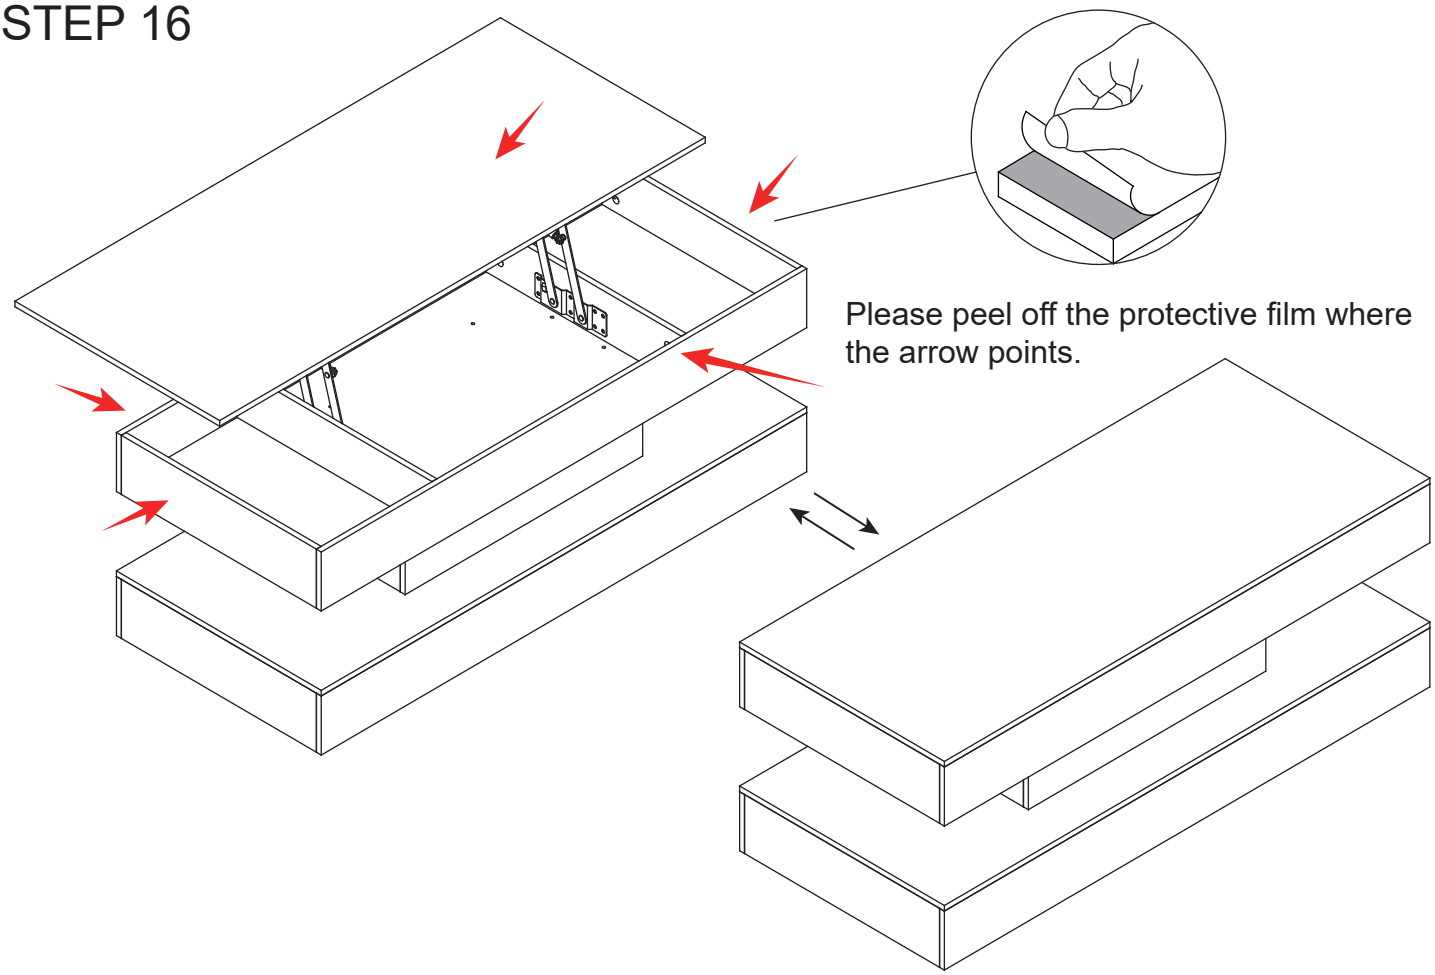

Please peel off the protective film where the arrow points.