

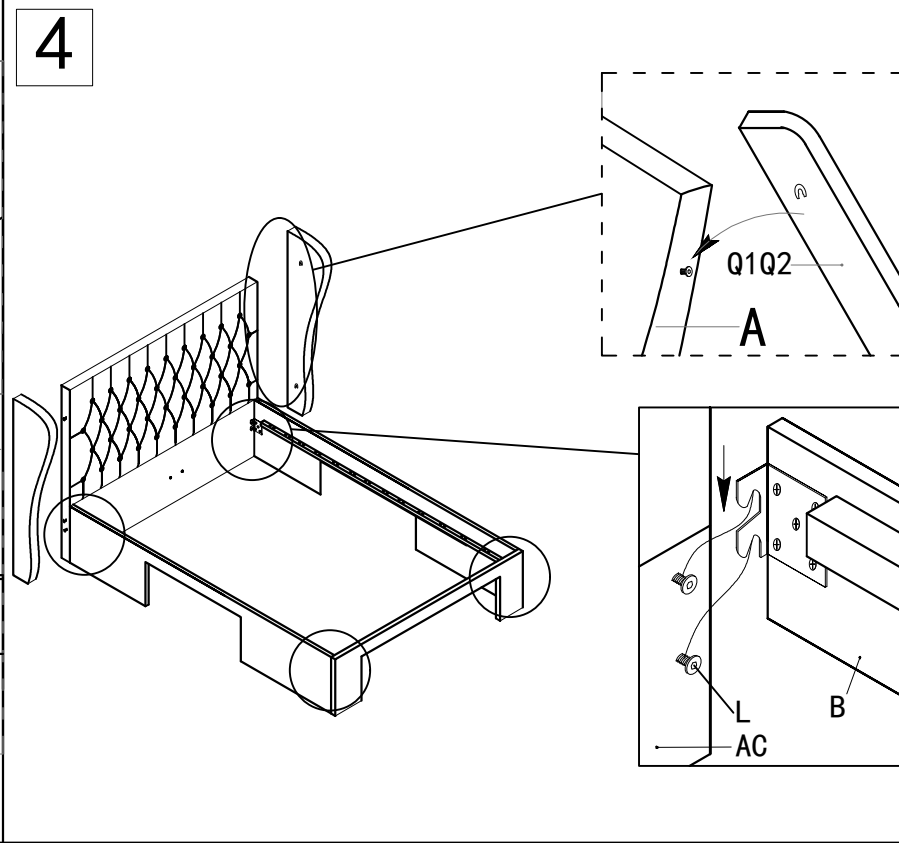
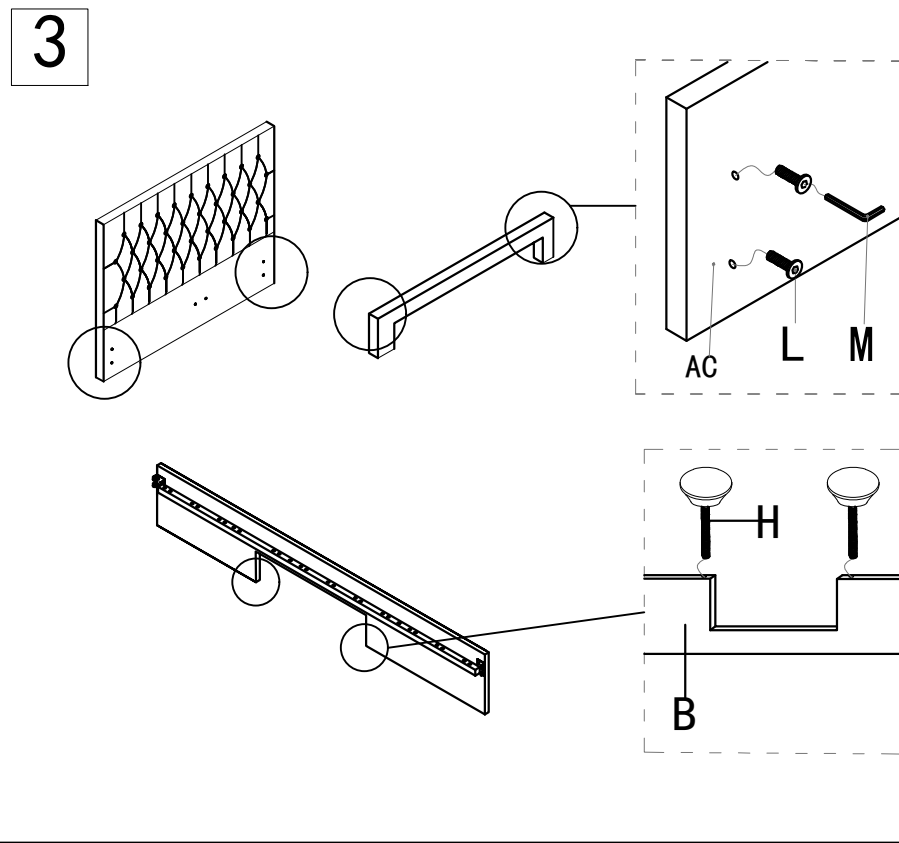
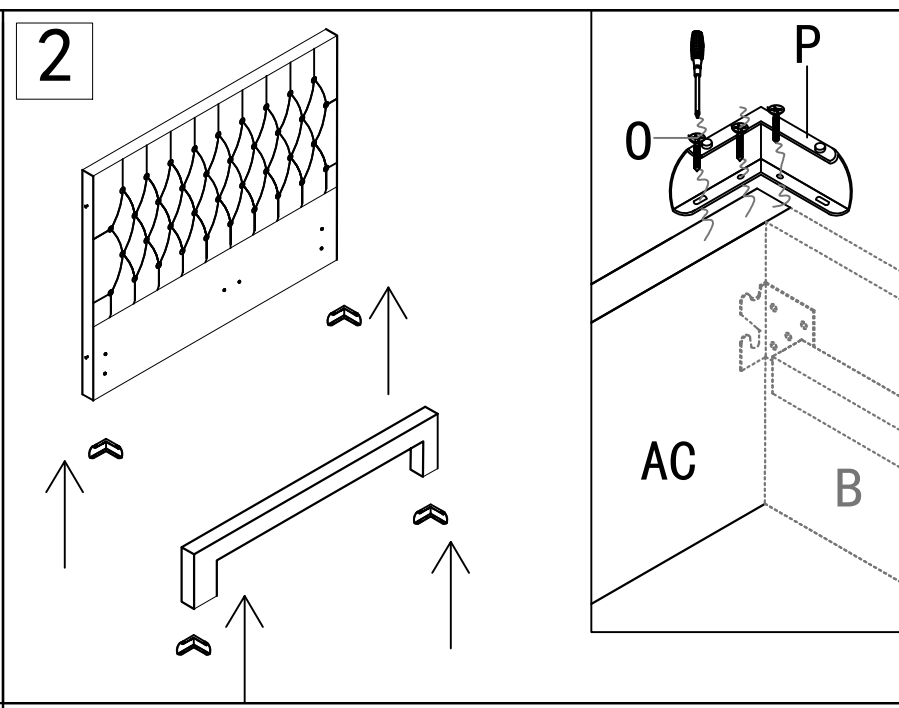




A x 1 	B x 2
C x 1 	D x 1
E x 2 240mm	F x 24
G x 24 	H x 4
I x 12 	J x 2
K x 2 	L x 14
M x 1 	N x 1
O x 15 	P x 4
Q1 x 1 Q2 x 1 	
R x 2 	

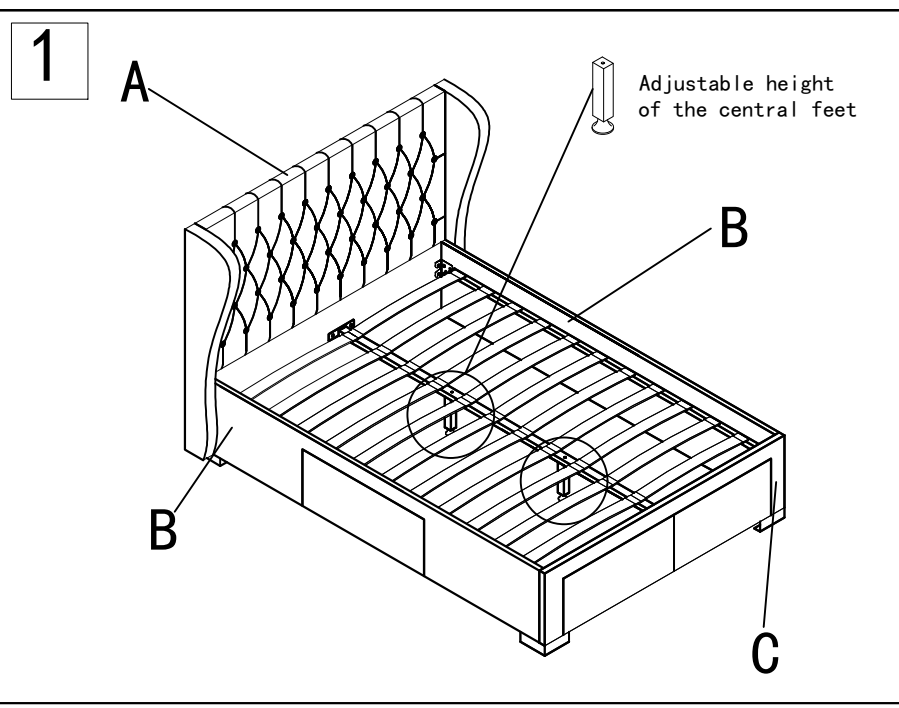

5


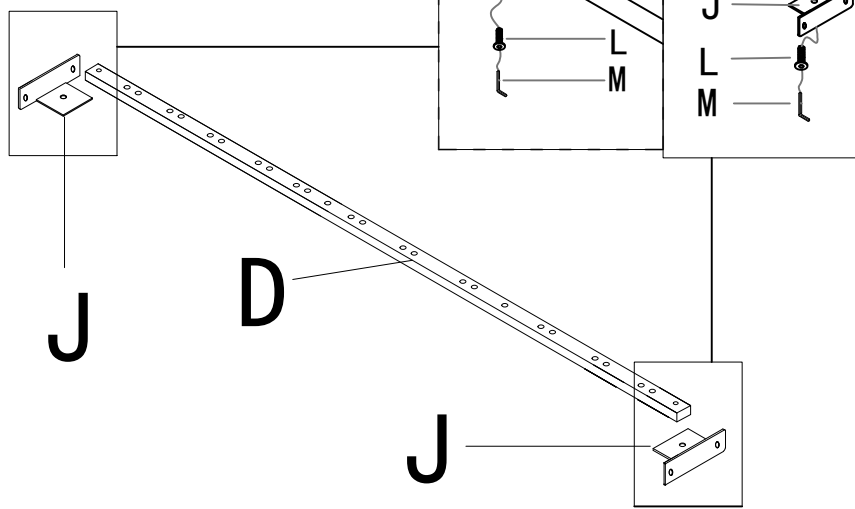


6


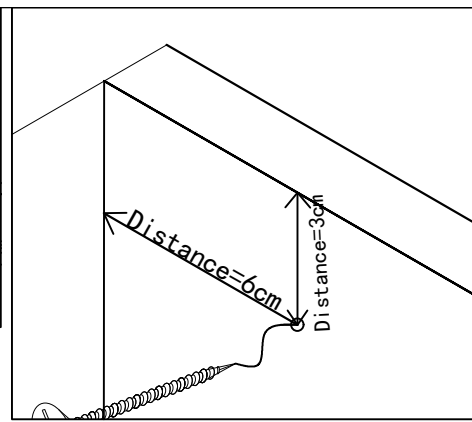
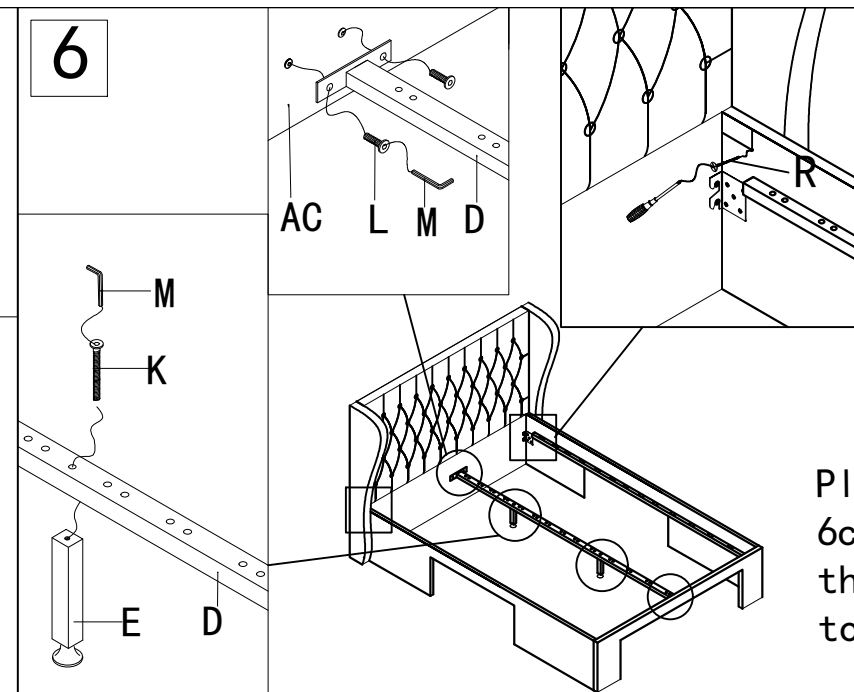












Please install the screw 6cm from the headboard of the bed and 3 cm from the top of the siderail

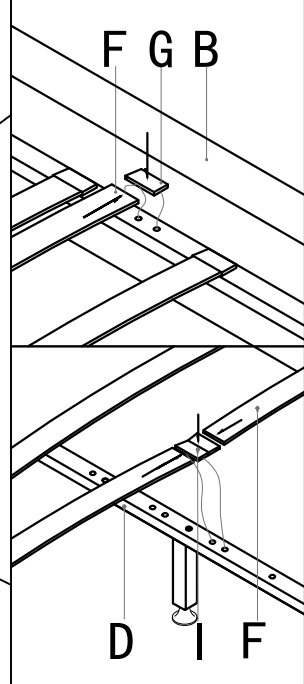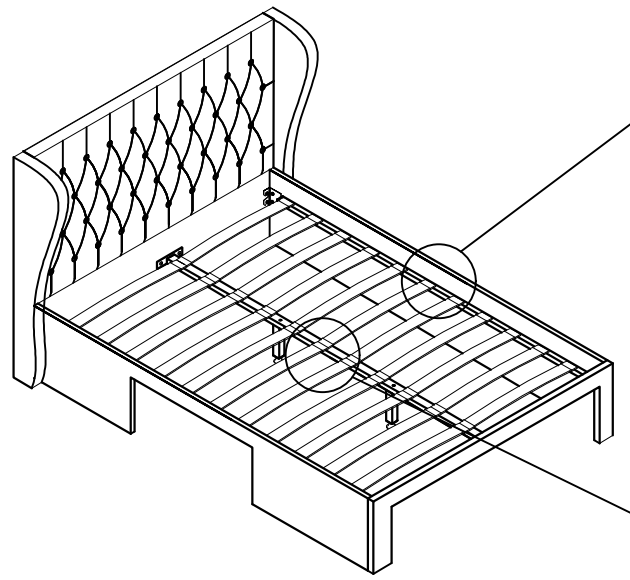7

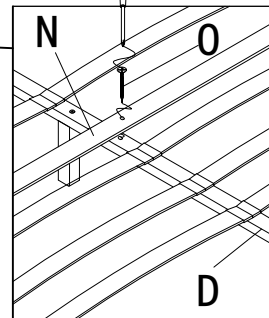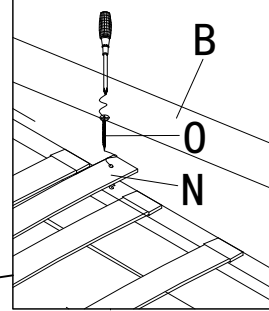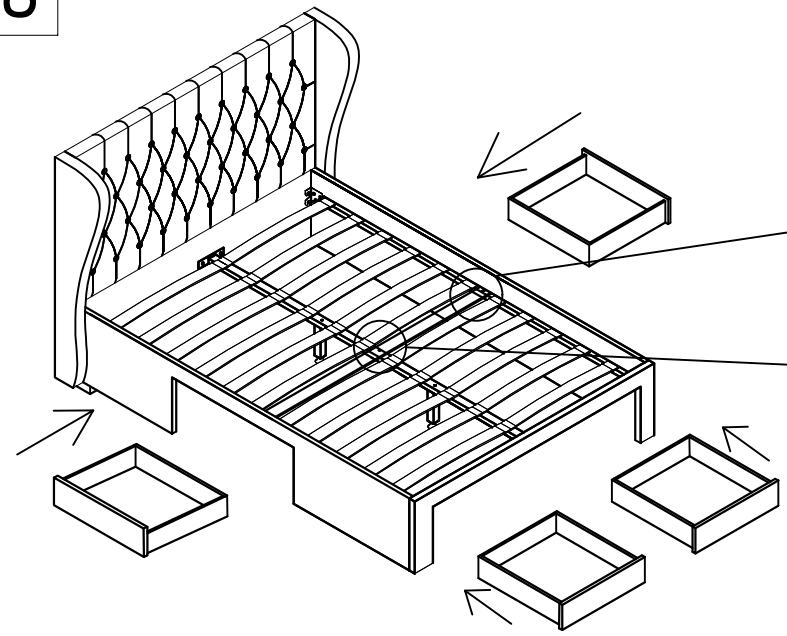

8



A1 x 4 	B1 x 16 
C1 x 32 	D1 x 8  M8x30
E1 x 32  M4x15	G1 x 32  M4x50
H1 x 4 	I1 x 4 
J1 x 8 	K1 x 4 
	M D1 