








Assembly Instruction

-Upholstered Bar Stools(set of 2)









Please check that you have all the parts listed before you start assembling,if you do find that something is missing,do not continue assembly,please contact us immediately.


NOTE:Please do not completely tighten all the hardware until the entire assembly is complete!

Part List


No.	Description	Diagram	Qty pcs
1	Backrest		1
2	Seat Frame		1
3	Front Legs (Left)		1
4	Front Legs (Right)		1
5	Side stretcher (Left)		1
6	Side stretcher (Front)		1
7	Side stretcher (Right)		1

Hareware

No.	Description	Diagram	Qty pcs
A	Dowel	 10*30	1
B	Short Bolt	 5/16*57mm	2
C	Middle Bolt	 5/16*52mm	4
D	Long Bolt	 5/16*90mm	4
E	Flat Washer	 5/16	10
F	Spring Washer	 5/16	10
G	Allen Key	 M5	1
H	Selftapping Screw	 8*45	6

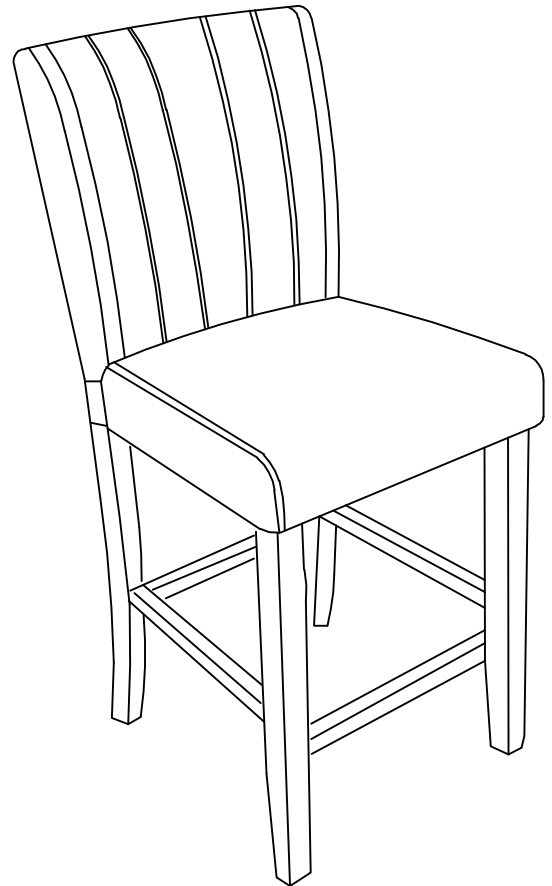


Step 1

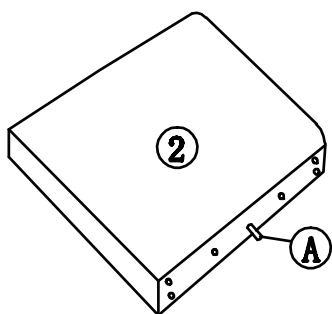


Stick the dowel(A) in the seat frame(2)

Step 2

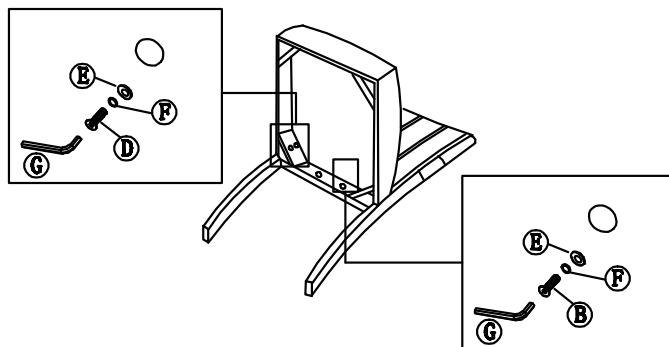


Open the velcro strips on the edge of the seat frame, attach the seat frame (2) to the backrest (1), using the allen key (G) to fully fasten 6pcs bolt (B and D), 6pcs flat washer (E) and 6pcs spring washer (F).

Step 3

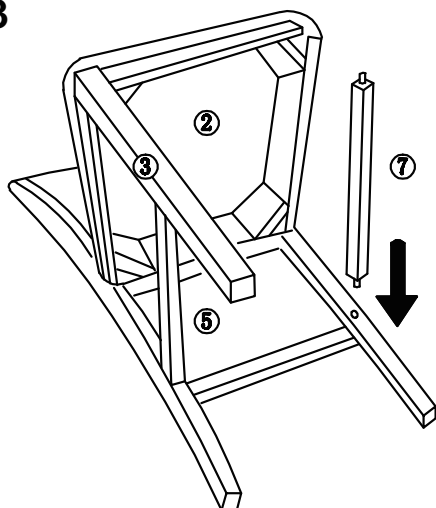


Insert the side stretchers(5) and (7) as showed in above figure.

Step 4

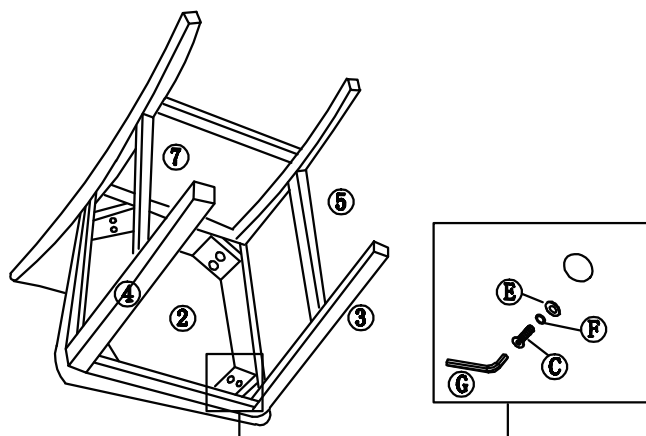

Using the allen key(G) to fasten 4pcs bolt(C) and 4pcs flat washer(E)and 4pcs spring washer(F).

Step 5

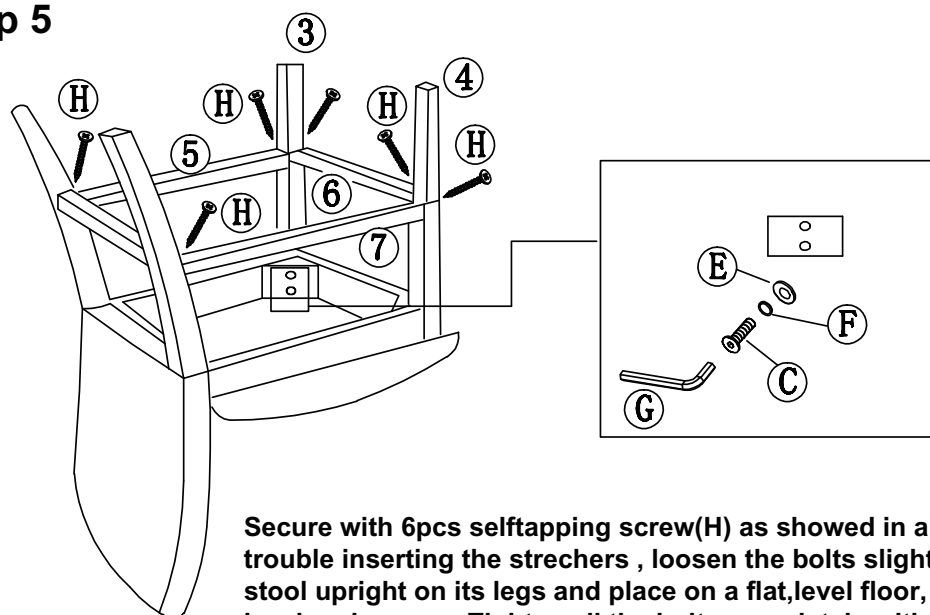

Secure with 6pcs selftapping screw(H) as showed in above figure. Note: If you have trouble inserting the stretchers , loosen the bolts slightly to allow for extra space.Turn stool upright on its legs and place on a flat,level floor, make sure that the stool is level and square. Tighten all the bolts completely with Allen key(G).