

READ AND SAVE THESE INSTRUCTIONS

WARNING

ALL ELECTRICAL WORK MUST BE DONE IN ACCORDANCE WITH LOCAL AND/OR NATIONAL ELECTRICAL CODE AS APPLICABLE

TURN OFF POWER AT BREAKER BOX BEFORE INSTALLING, WIRING OR SERVICING THIS PRODUCT.


DO NOT OIL CHIME PLUNGERS.

Oil will cause them to stick during operation. If plungers fail to operate freely due to accumulation of dust, cooking grease, etc., clean with a non-flammable cleaning solvent which will evaporate, leaving a dry surface.

LIMITED WARRANTY

INSTALLER: Leave This Manual With The Homeowner

Three Door Chimes

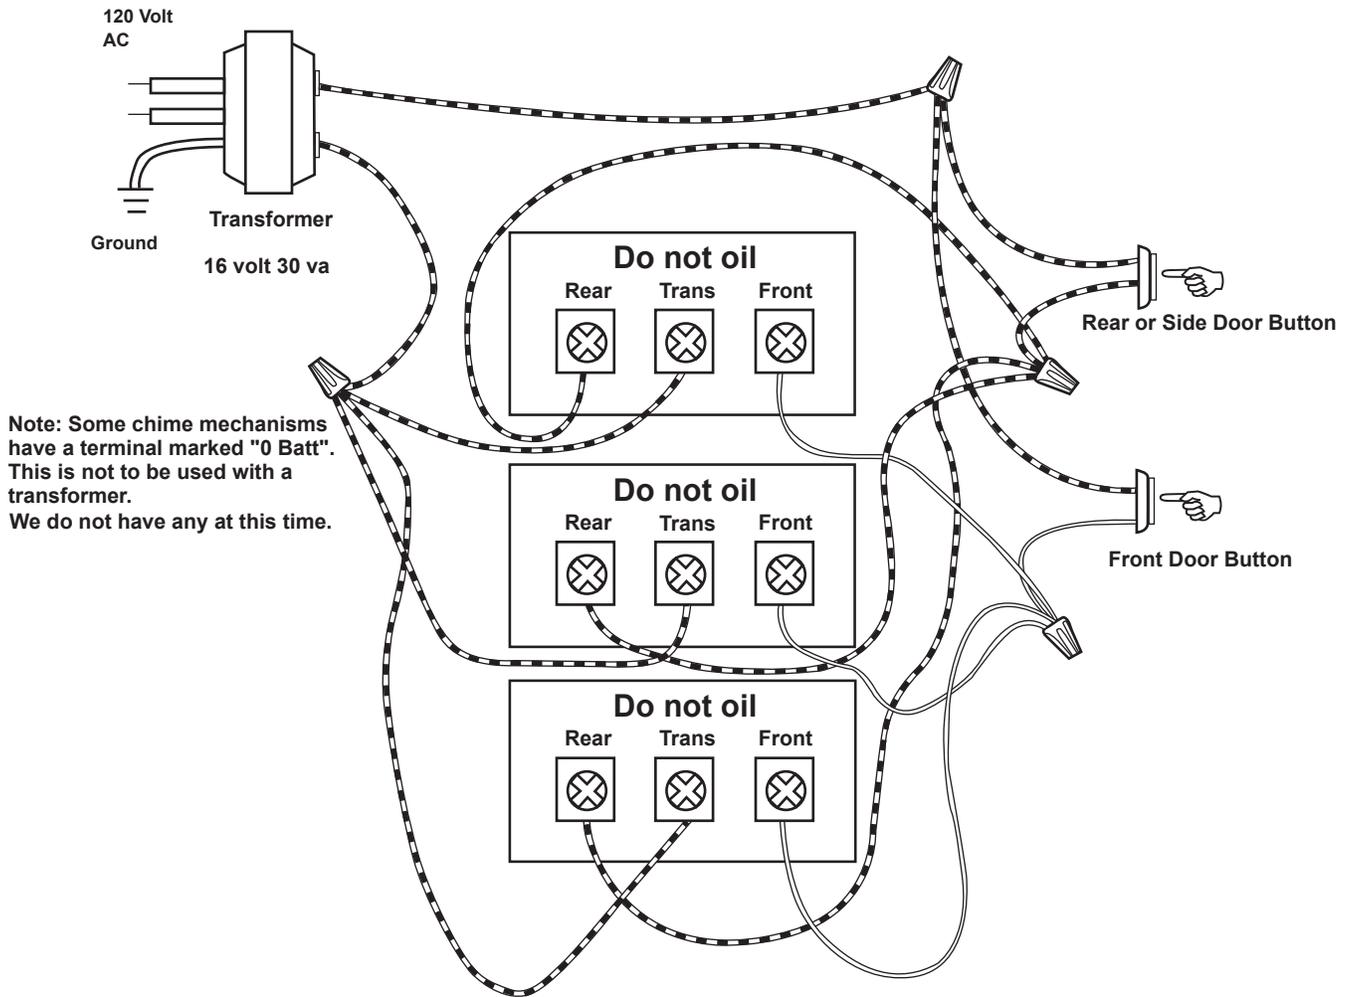


Questions?

LIMITED WARRANTY


Door Chime Wiring

One Door Chime

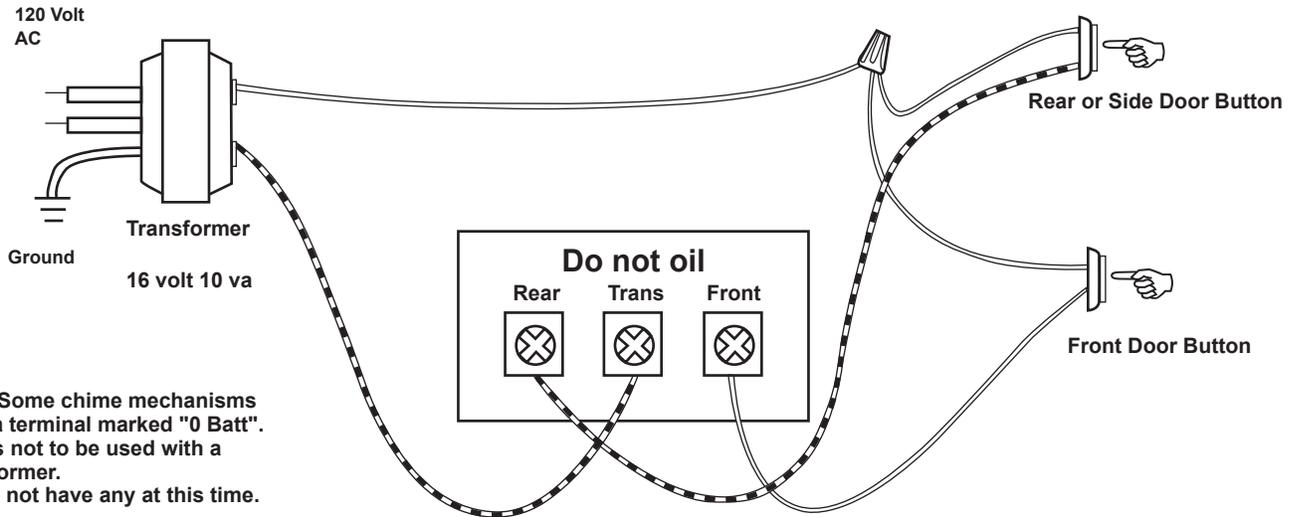


Note: Some chime mechanisms have a terminal marked "0 Batt". This is not to be used with a transformer. We do not have any at this time.

Two Door Chimes

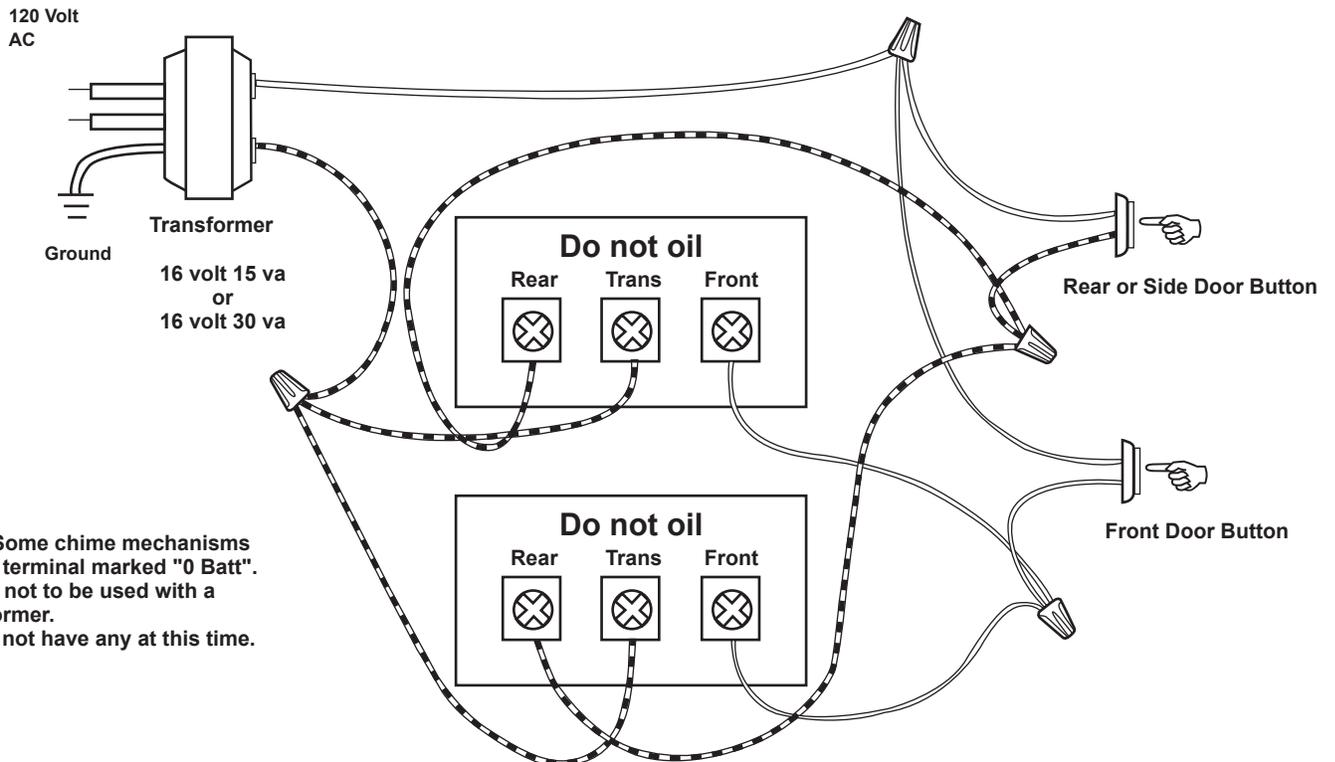

Note: Some chime mechanisms have a terminal marked "0 Batt". This is not to be used with a transformer. We do not have any at this time.

INSTALLATION

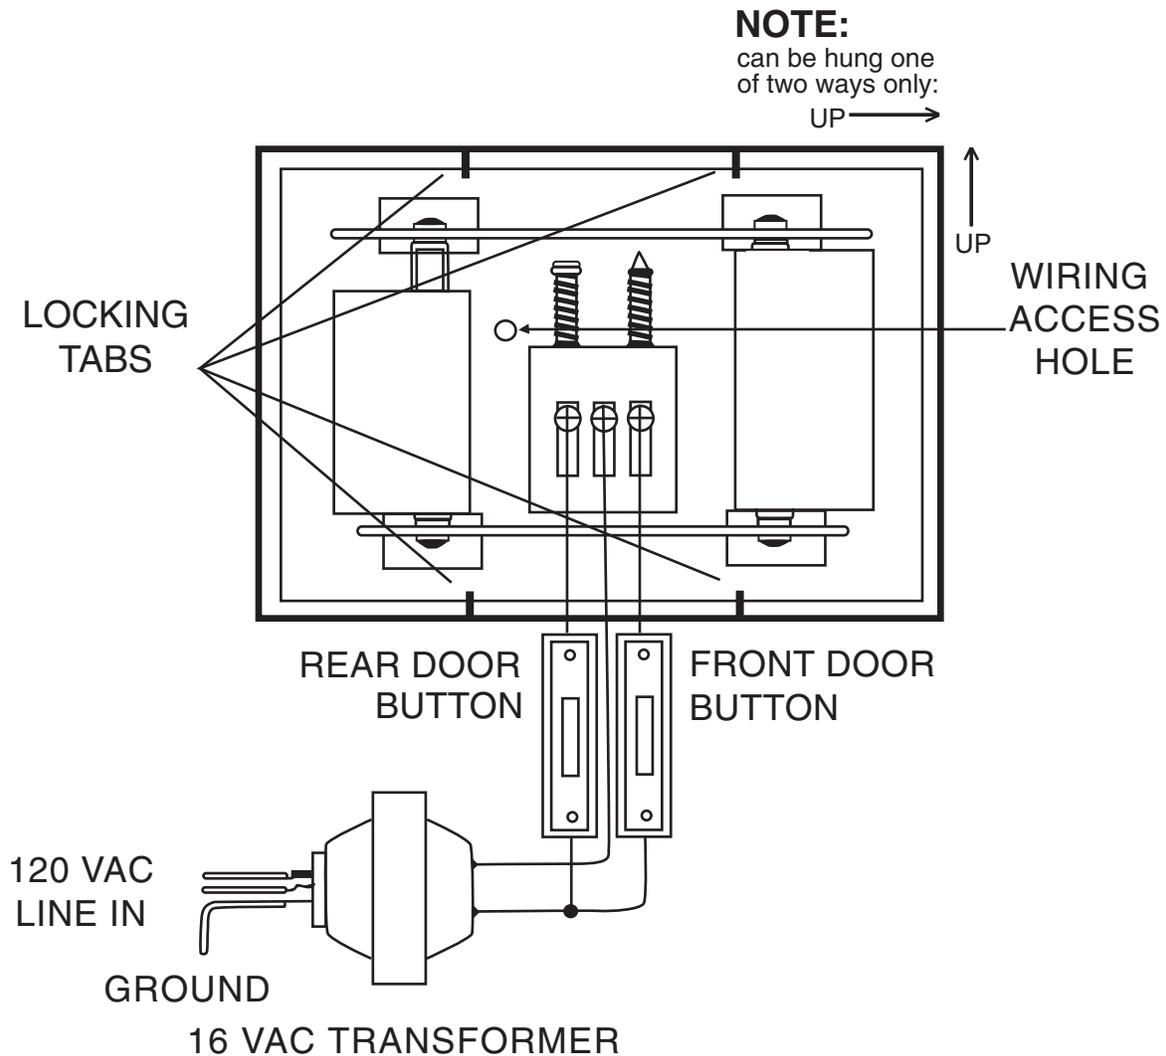

1. Remove chime from housing.
2. Position housing so it will be flush with the finished wall. Nail housing to wall stud.
3. Bring wiring through access hole and connect wires to terminals shown.
4. Place chime into housing. Blend locking tabs inward with a screwdriver to hold chime in place.
5. Finish drywall.
6. Install grille by using the screws provided.
7. Turn on power. Make sure button(s) operate chime properly.