
Garment Rack


GYJ033 | 100CM Mobile
Assembly Instructions

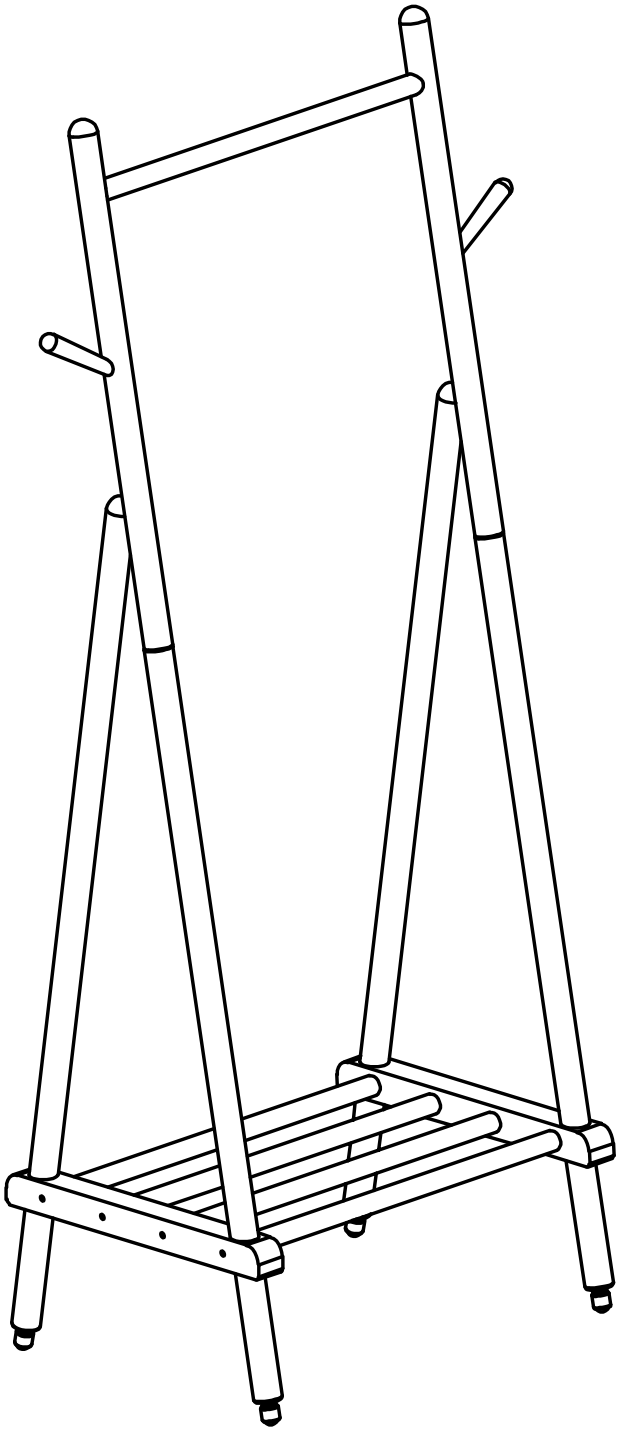

2 workers required

Parts List


1 Left Front Upper Post

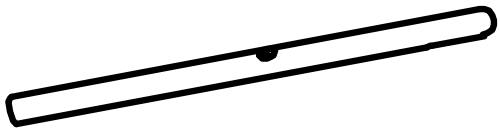

640 × Ø34MM

1 PC

2 Right Front Upper Post

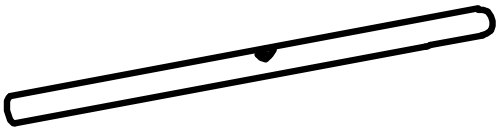

640 × Ø34MM

1 PC

3 Front Middle Post



720 × Ø34MM

2 PCS

4 Rear Post



885 × Ø34MM

2 PCS

Parts List (continued)


5 Foot Post



180 × Ø34MM

4 PCS

6 Hanging Rod

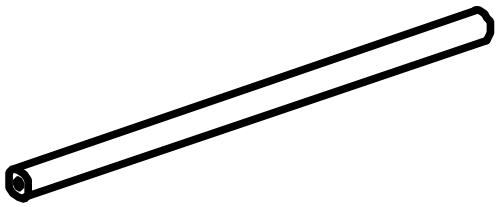

930 × Ø25MM

1 PC


7 Hook



120 × Ø22MM

2 PCS

8 Frame Bar

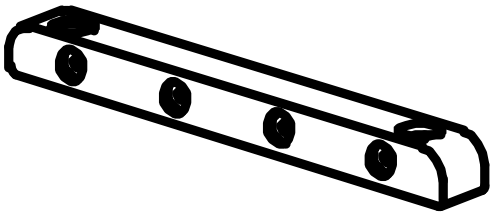


420 × 40 × 40MM

2 PCS

Parts List (continued)

9 Base Bar

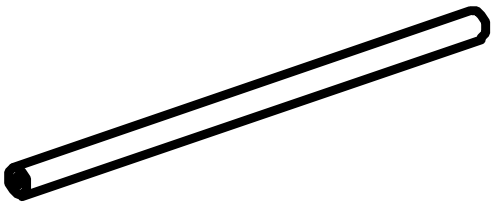


930 × Ø25MM

4 PCS

Hardware & Tools

A Hex Socket Screw

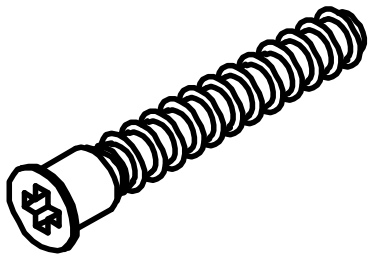

M7 × 70MM

8 PCS

B Hex Key




M4 × 57MM

1 PC

Tool - reuse as needed

C Hex Socket Head Screw

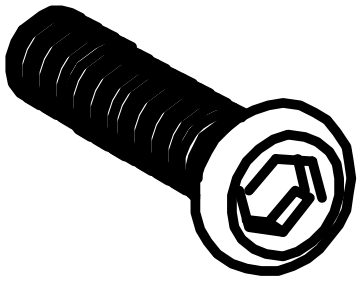


M6 × 45MM

4 PCS

Hardware & Tools (continued)

D Flat Washer

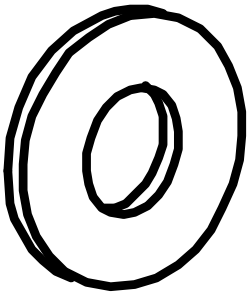

M6 × 13MM

4 PCS

E Caster




23 × 23 × 28MM

4 PCS

Step 1

Check the parts and hardware against the list before assembly.
Align four base bars 9 with the end holes in frame bars 8.
Fasten with screws A using hex key B.
If any parts are missing or damaged on arrival, contact us.
We will respond within 24 hours.


Screws: A × 8. Tool: B.

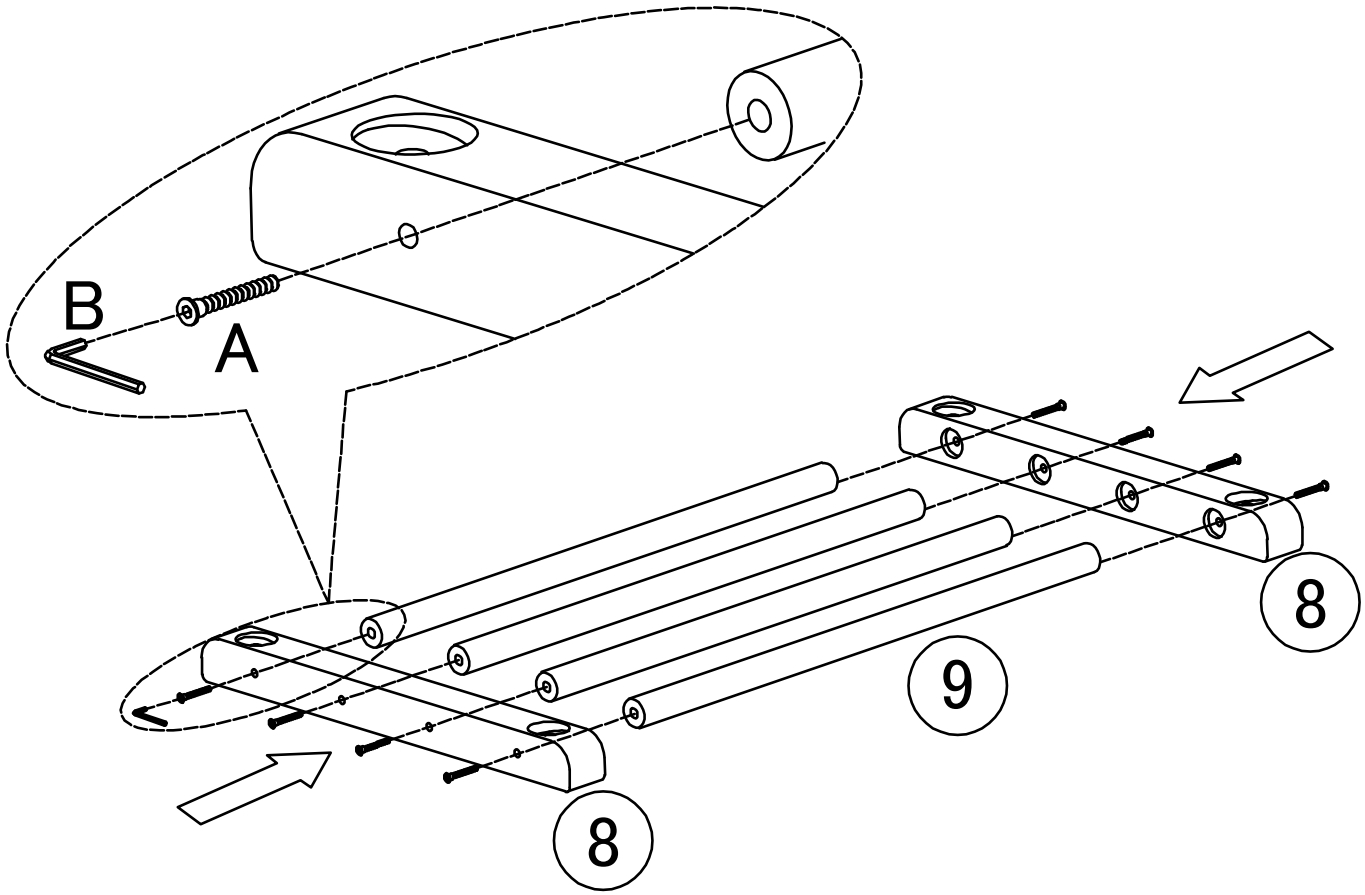

Step 2


Align middle posts 3 with the bottom holes in upper posts 1 and 2, then turn clockwise to tighten.
Screw casters E clockwise into the holes in foot posts 5.

Casters: E × 4.

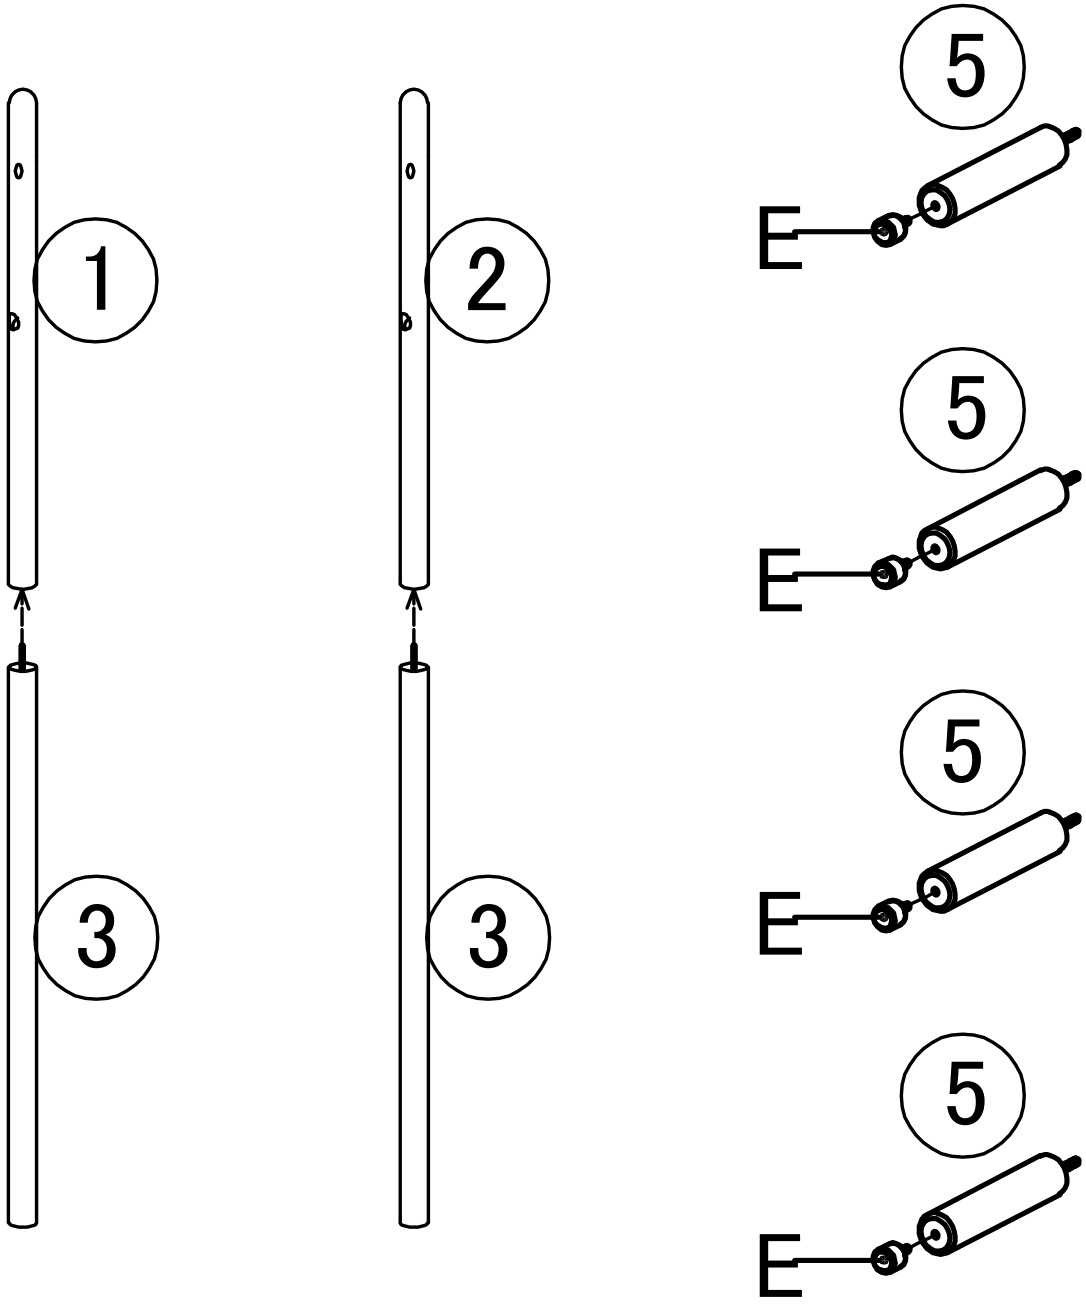

Step 3


Align foot posts 5 with the bottom holes in posts 3 and 4, as shown. Turn clockwise, leaving them partly tightened until the components in the next step are installed.

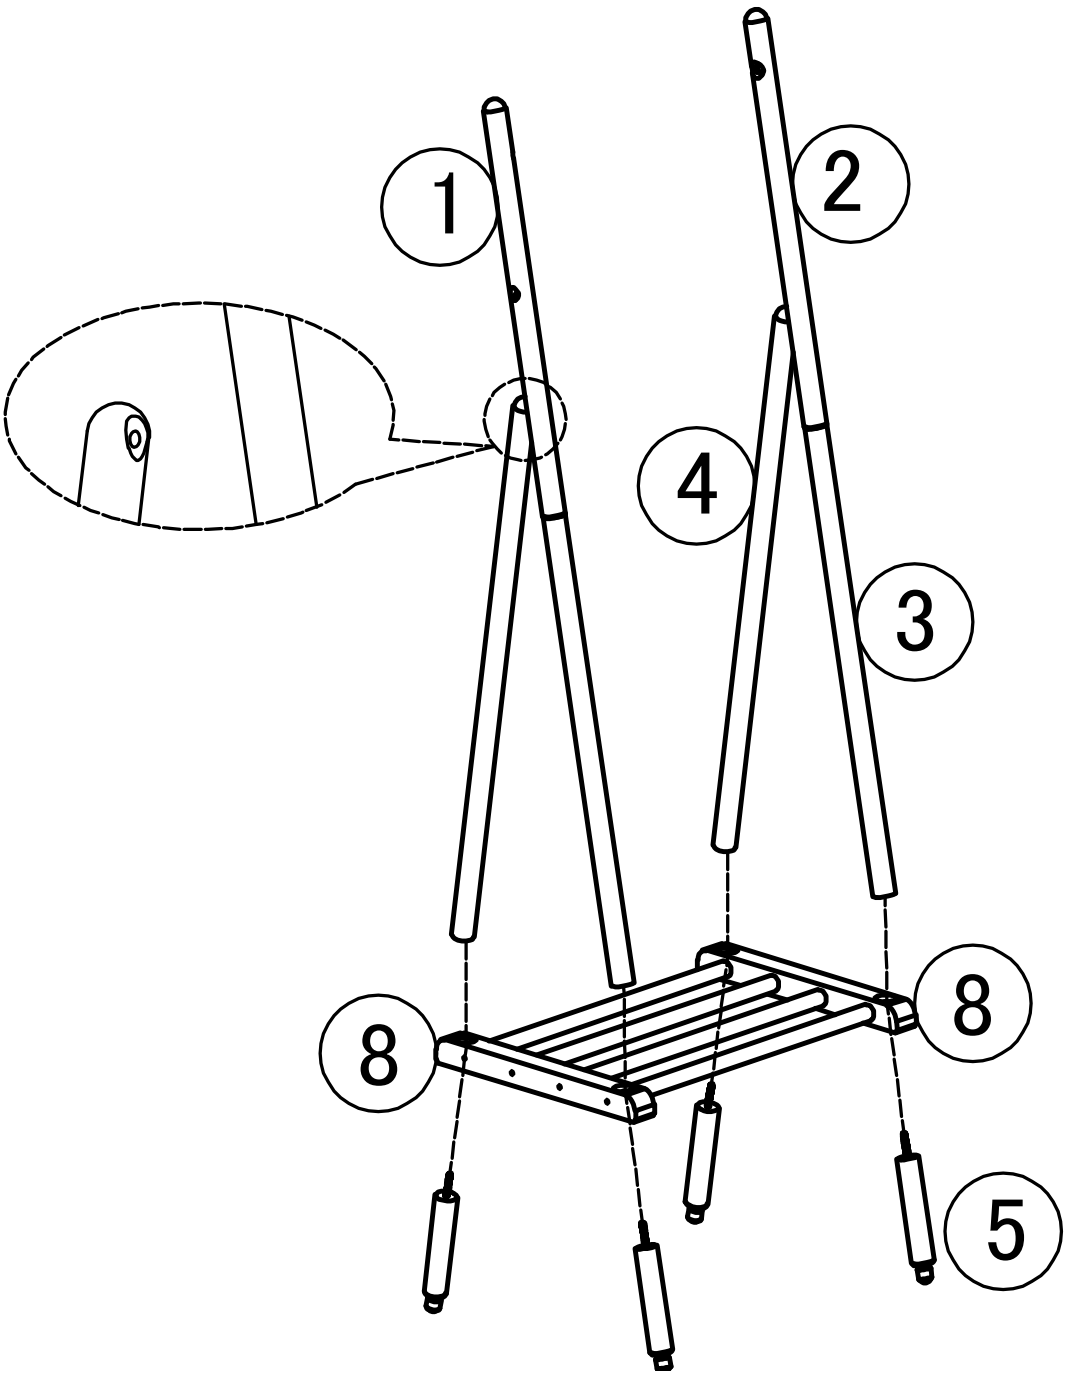

Step 4


Align rear posts 4 with the side holes in upper posts 1 and 2.
Fasten with screws C and washers D using hex key B.
Attach hanging rod 6 in the same way, as shown.
Fully tighten the foot posts fitted in Step 3.

Screws: C × 4; washers: D × 4. Tool: B.

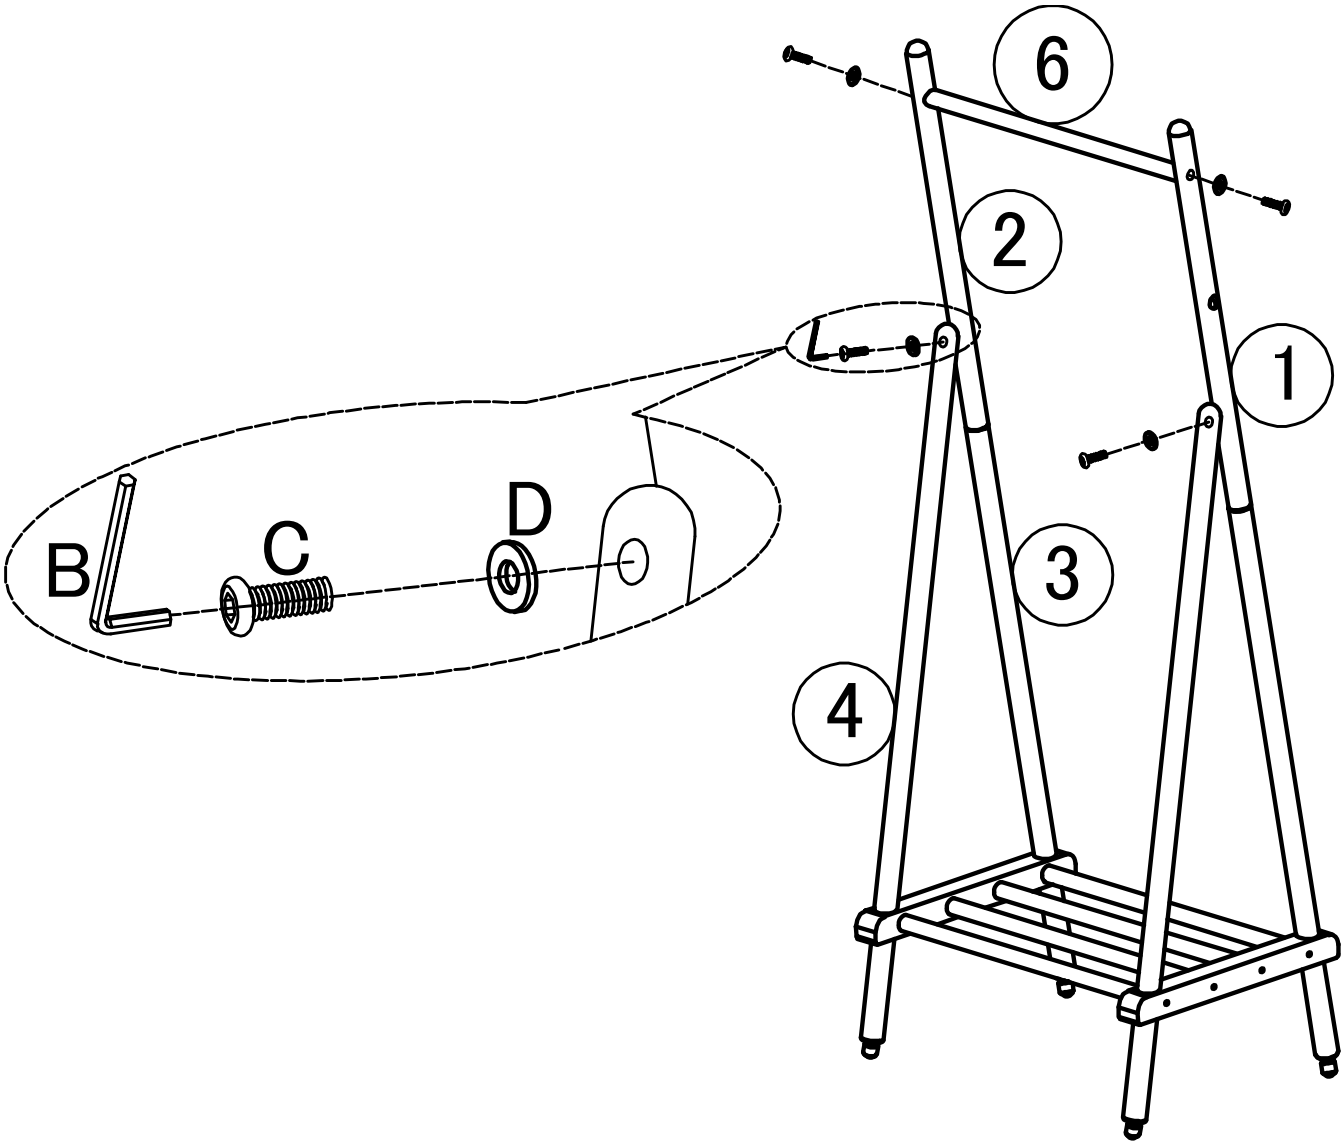

Step 5

Align hooks 7 with the side holes in upper posts 1 and 2.
Turn clockwise to tighten.

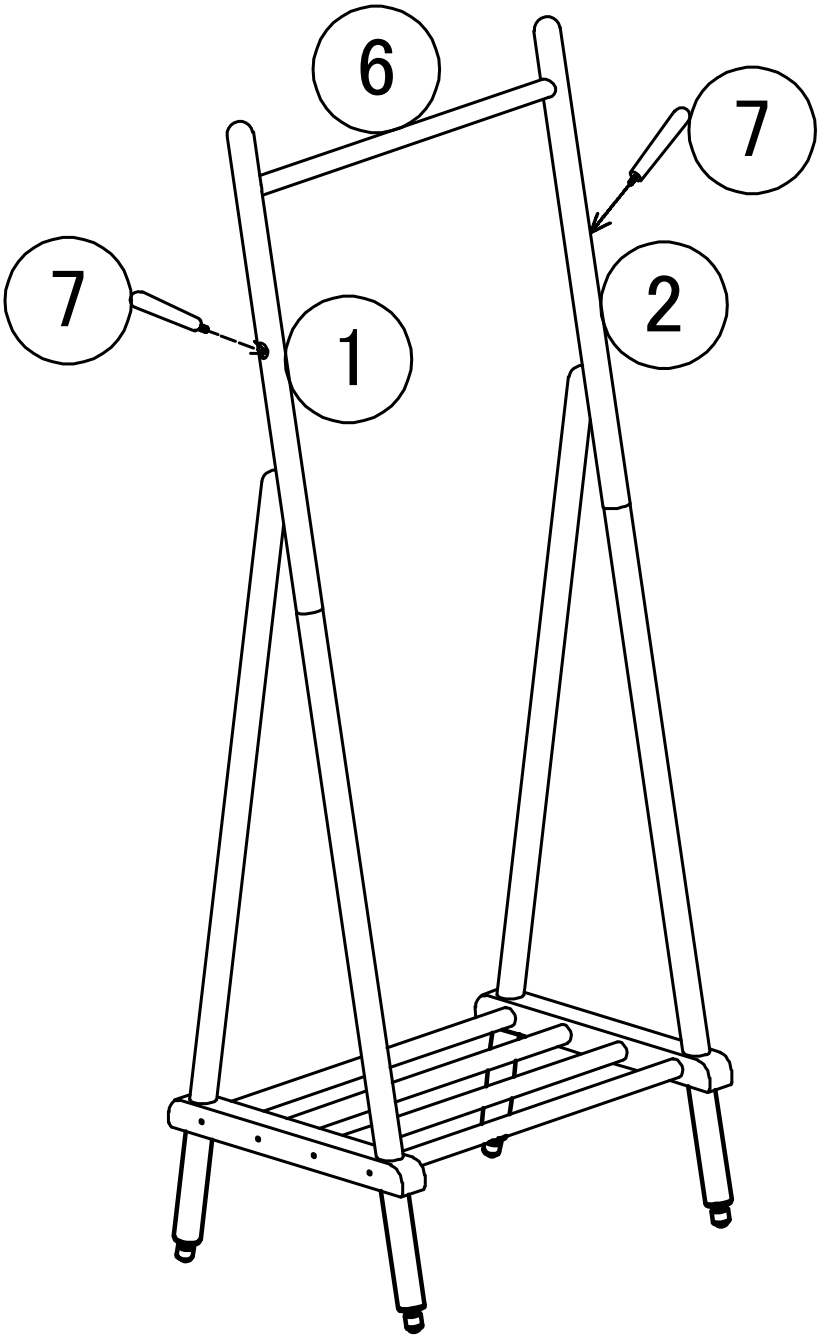

Step 6

Assembly complete.

