



HK-BF-011V1-CL-F

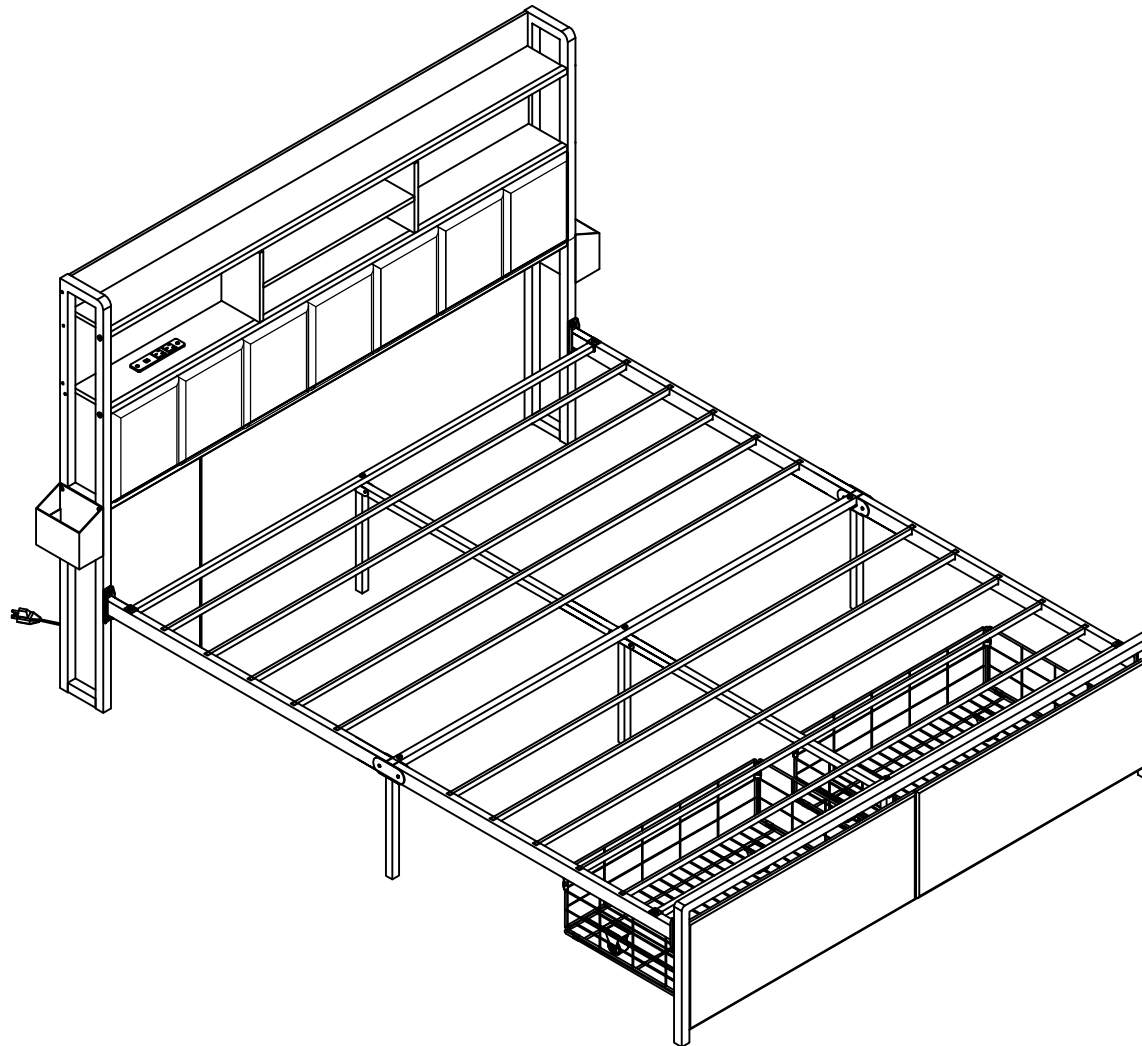


Bed Frame with LED lights User Manual

Disassembly Diagram

The installation would be easier if completed by two people

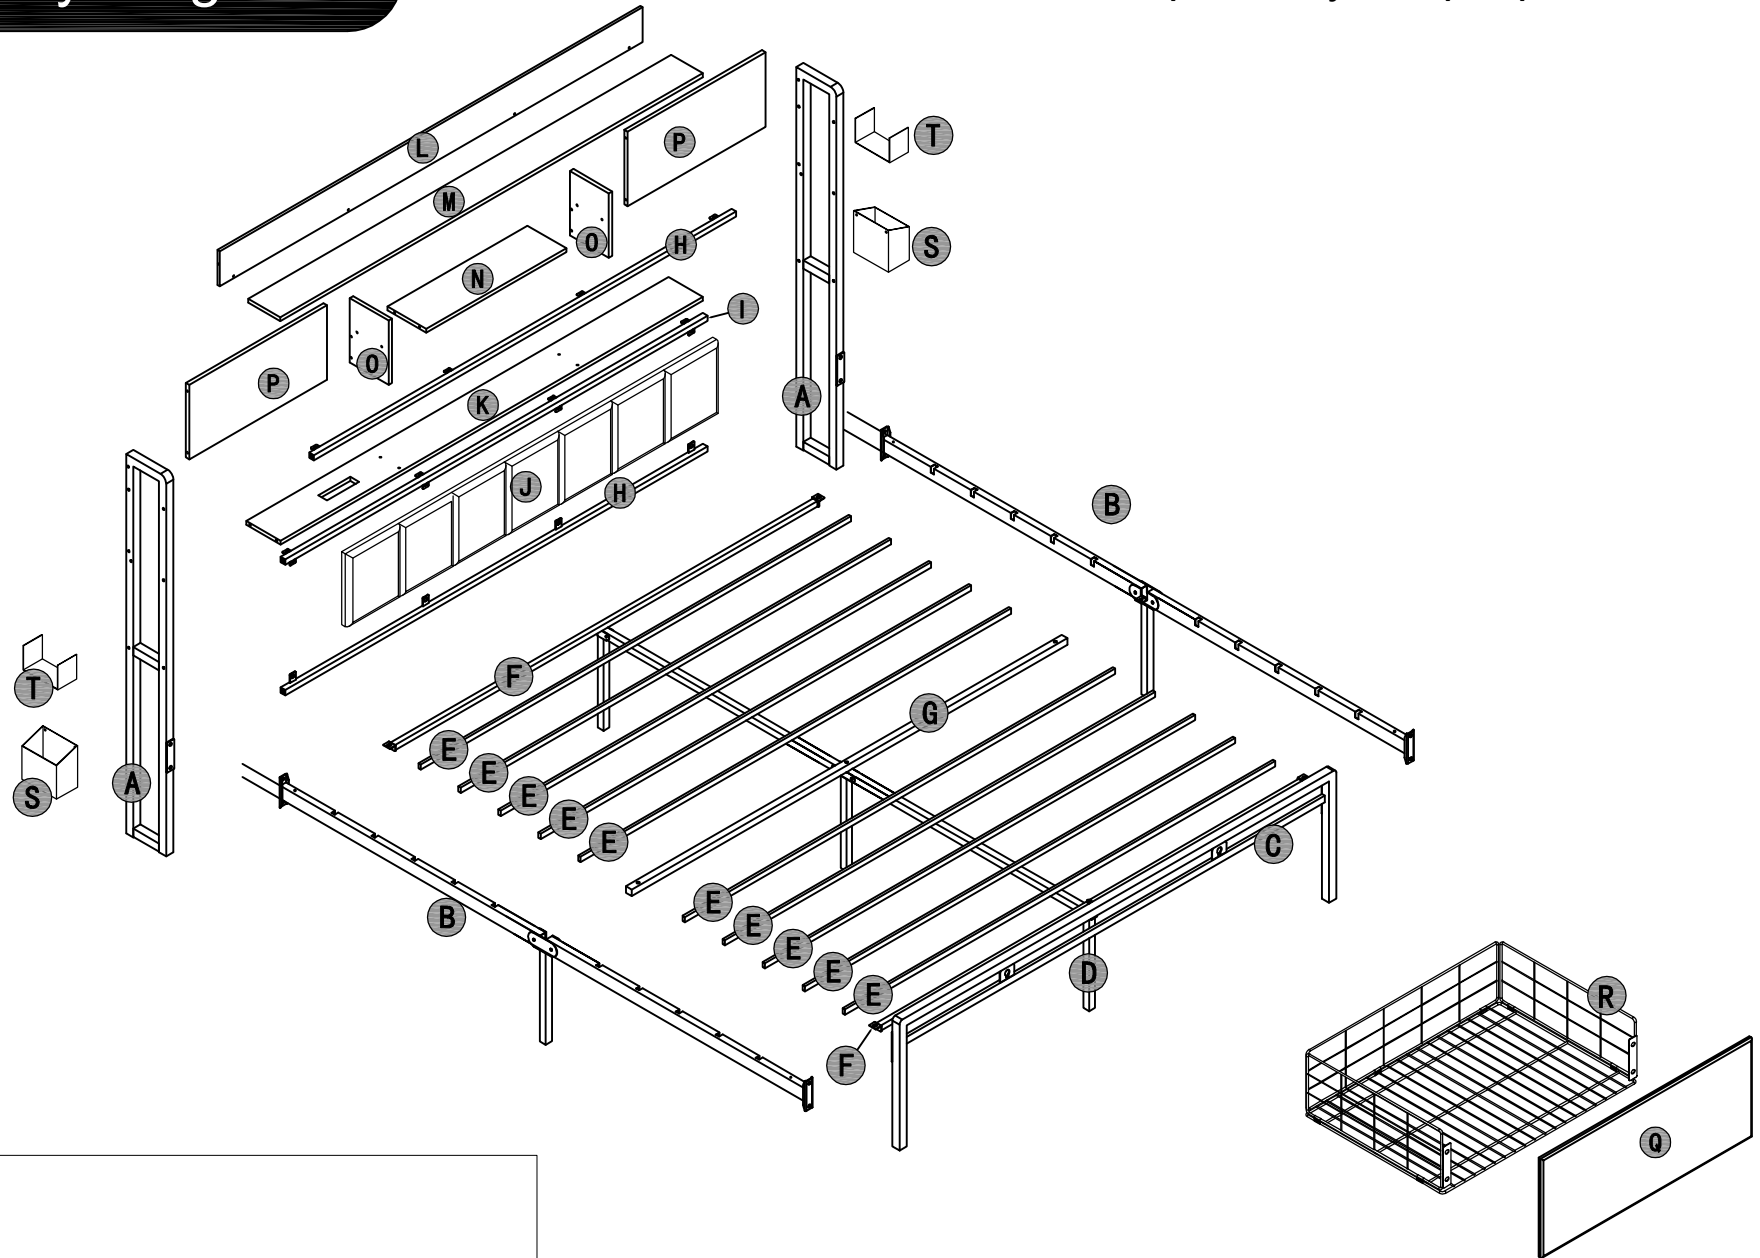


Accessories

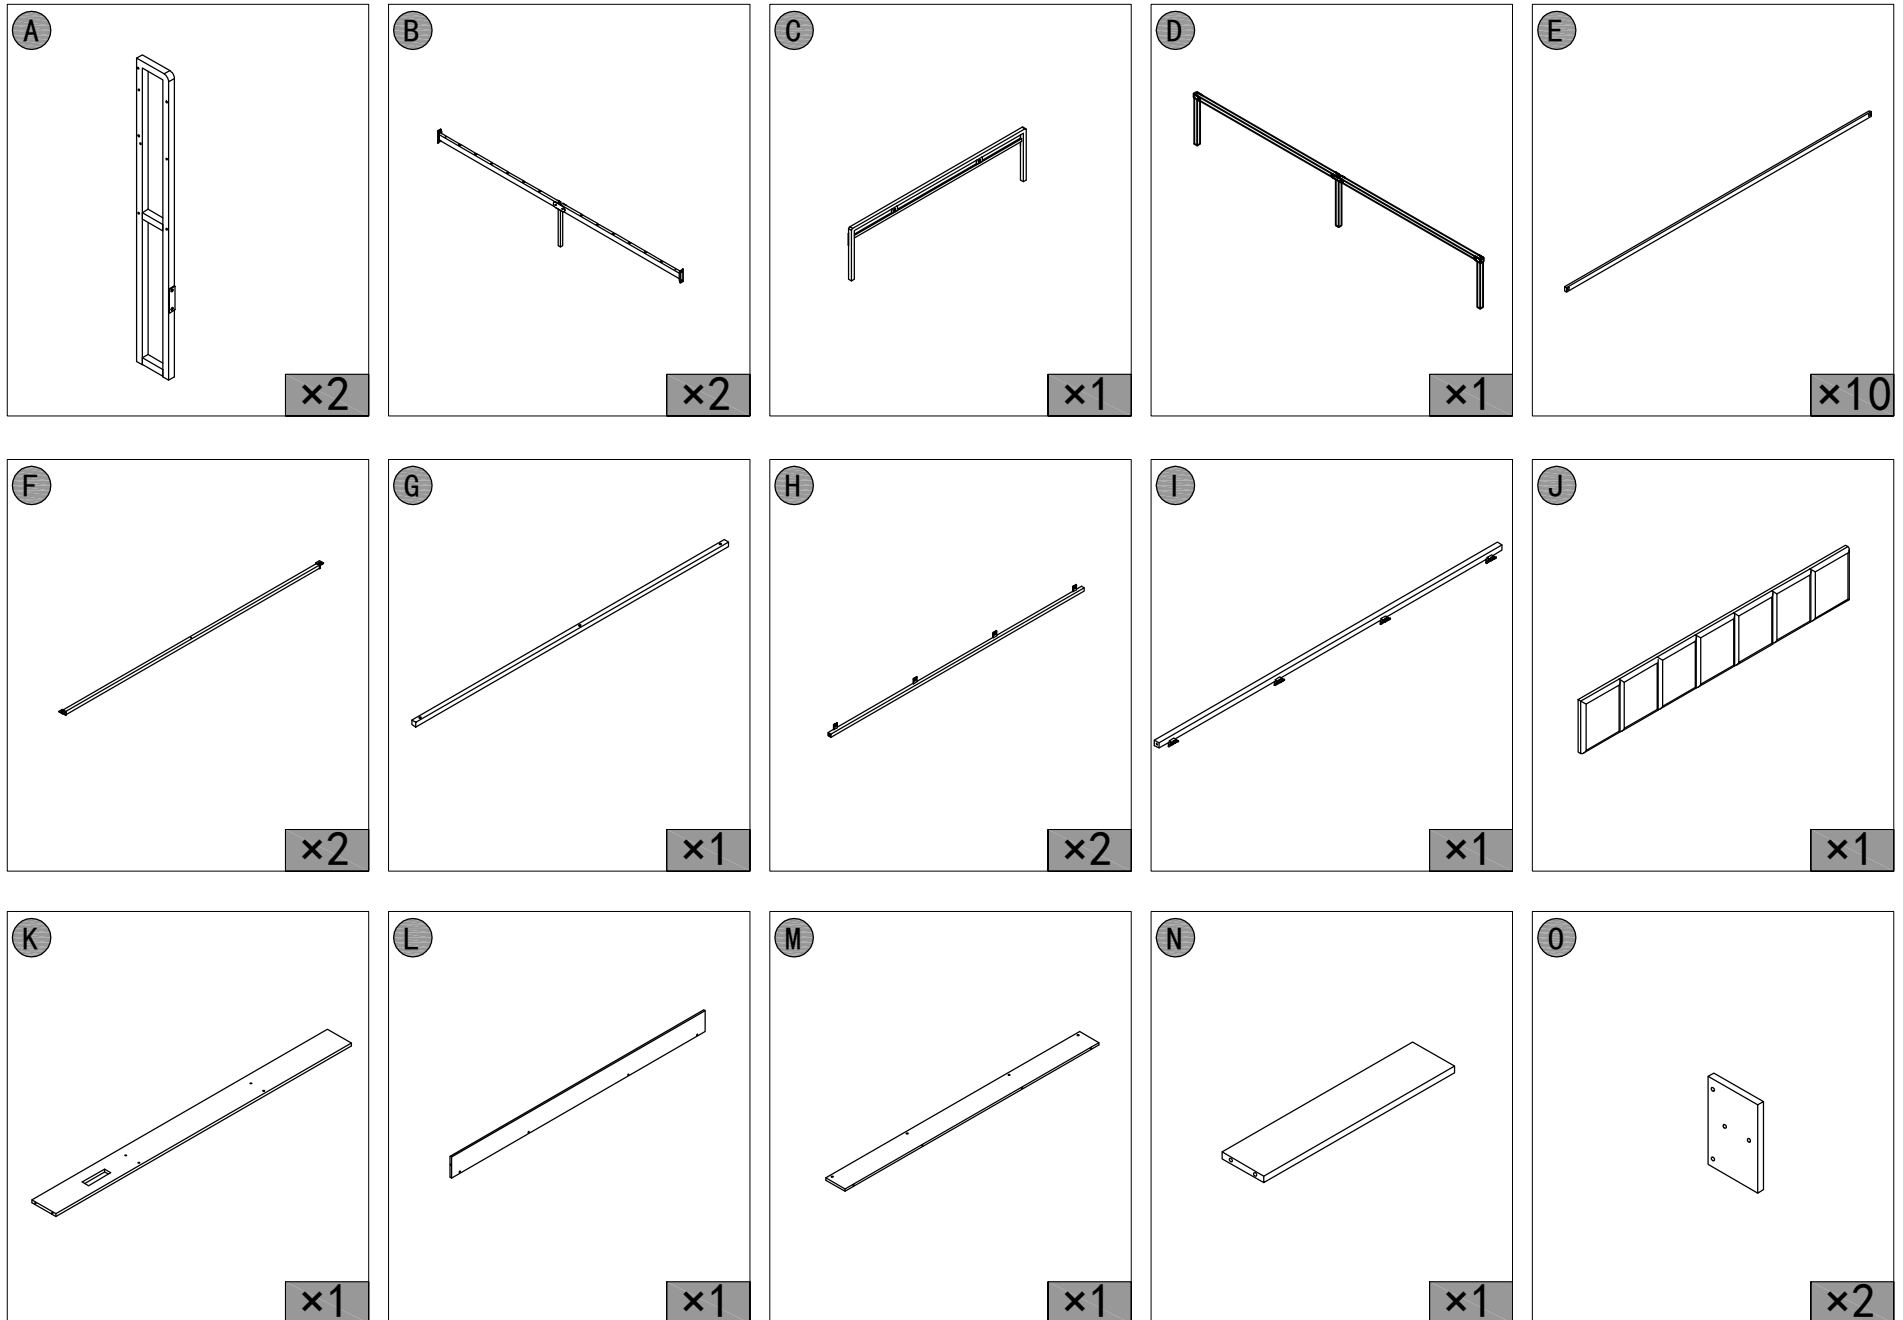


Accessories

P

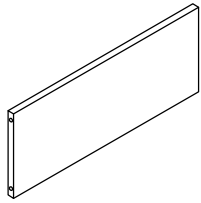


x2

Q

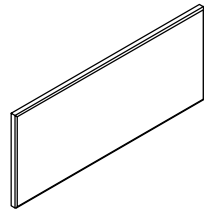


x2

R

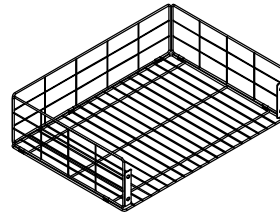

x2

S















x2

T




x2

Accessories

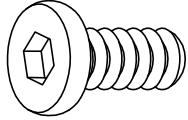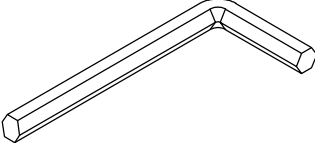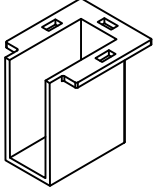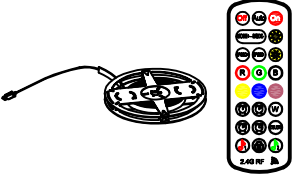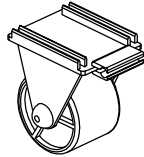1  Ø1/4"*10mm ×18	2  Ø1/4"*14mm ×22	3  M8*28mm ×2	4  Ø1/4"*50mm ×9	5  Ø5*38mm ×24
6  Ø3.5*12mm ×2	7  M3 ×1	8  M4 ×2	9  M5 ×1	10  ×20
11  ×1	12  ×1	13  ×8	14  ×4	15  ×2

Accessories


16

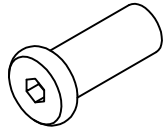

Ø1/4"*20mm

×2

17

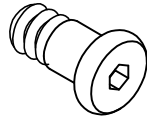


Ø1/4"*16mm

×2

step 1

Attach frame H & I onto board J using screw 2.

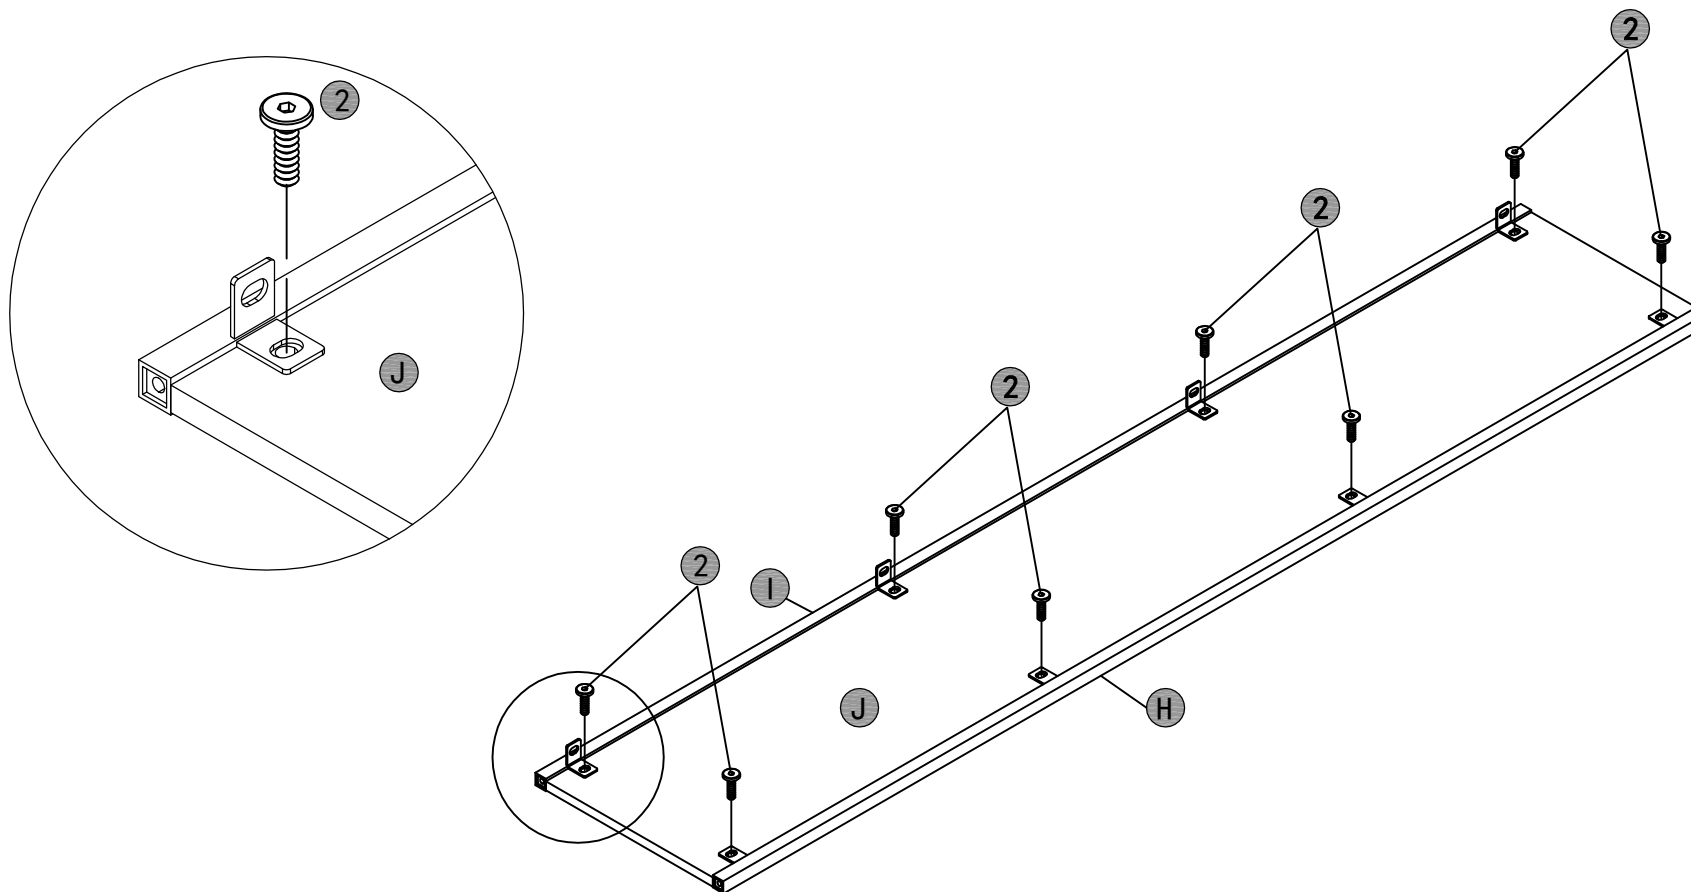


1


2 × 8pcs



8 × 1pc

step 2

Use screw 1 to connect board K to frame I.

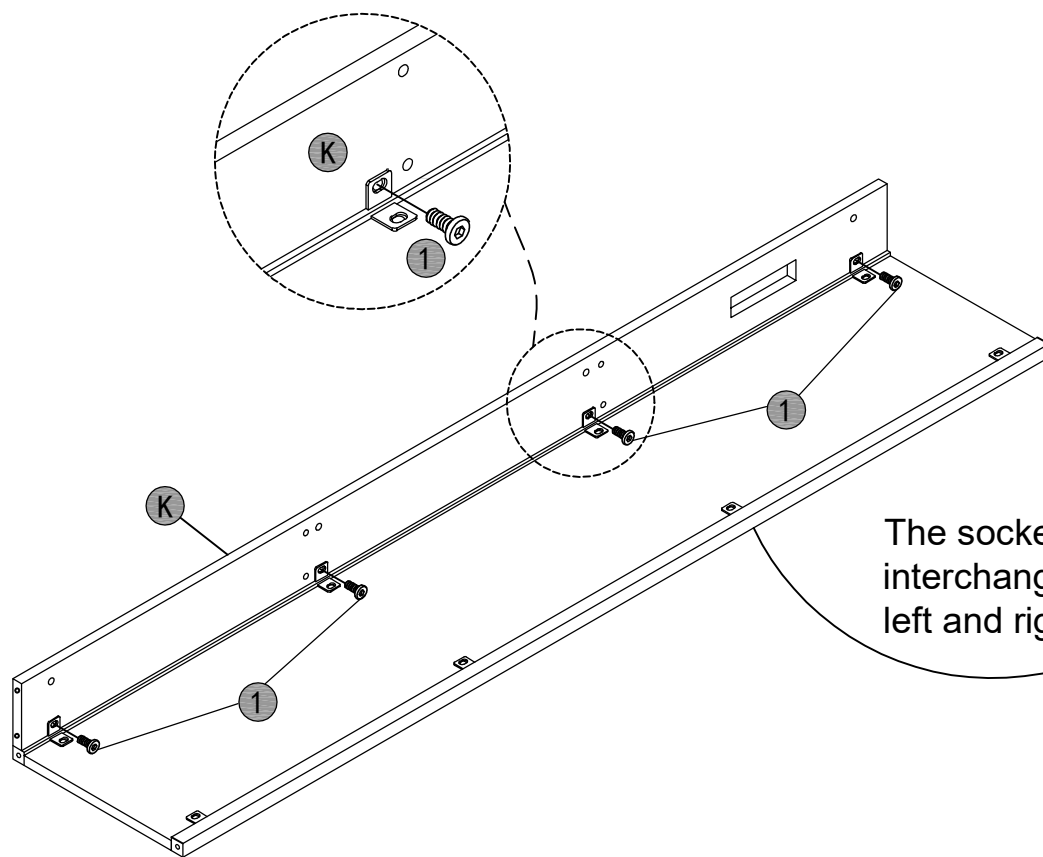

The sockets are
interchangeable
left and right

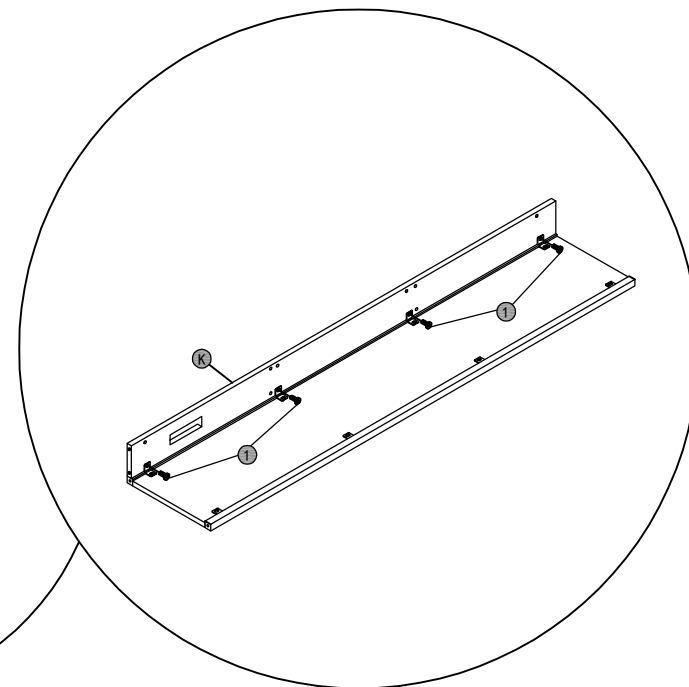

Please tighten the screws **1** to 80%
first, and tighten screws **1** 100% after
adjusting all the boards line up



1 × 4pcs




8 × 1pc

step 3


Insert part T into the fabric pocket S.

Attach part K&I onto frame A using screw 4&5.

Use screws 2 and 16 to connect pocket S and frame A.

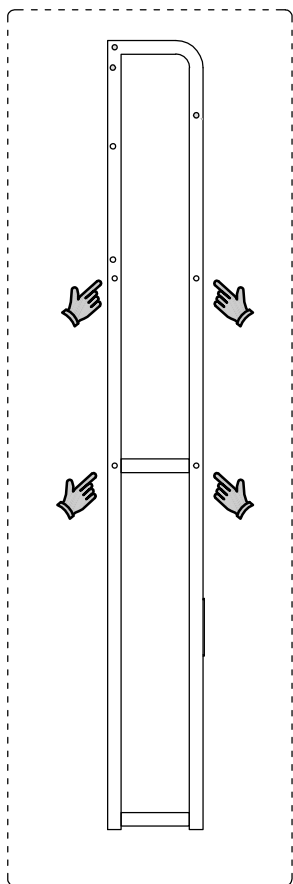

Please pay attention to the direction of the metal bolts on Frame A.

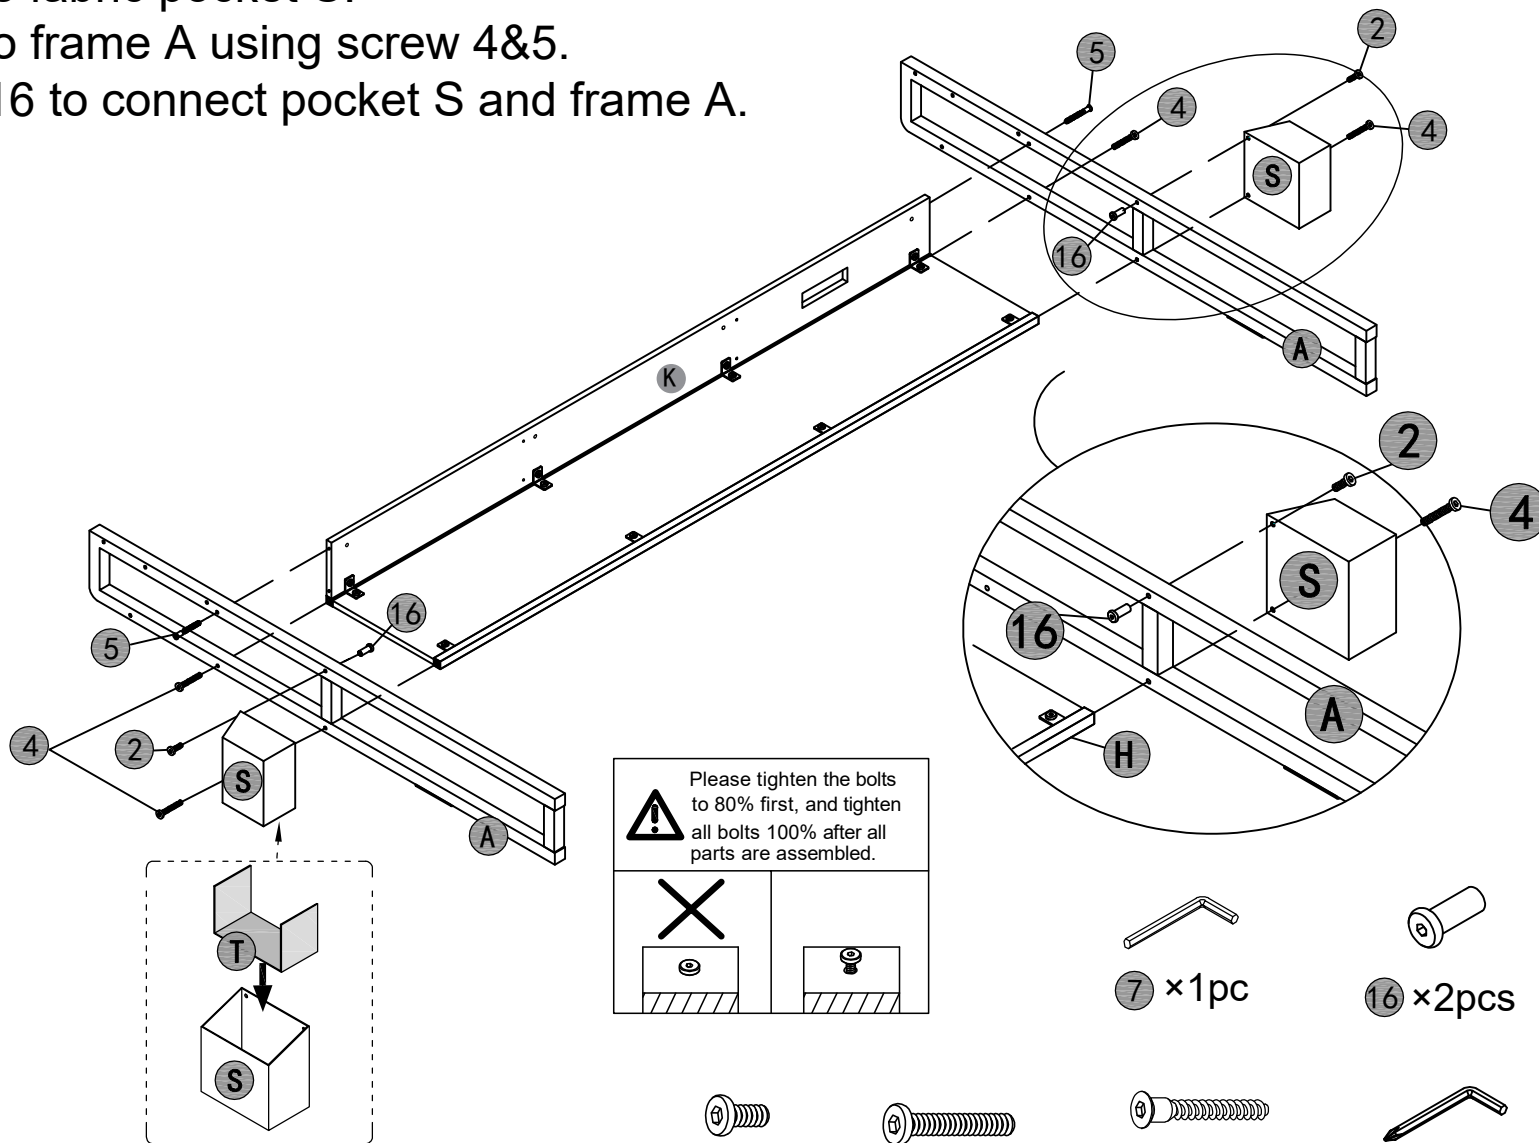


3

-  $\times 2\text{pcs}$
 $\times 4\text{pcs}$
 $\times 2\text{pcs}$
 $\times 2\text{pcs}$
-  $\times 1\text{pc}$
 $\times 2\text{pcs}$



step 4

Connect board O & P together using screw 5.

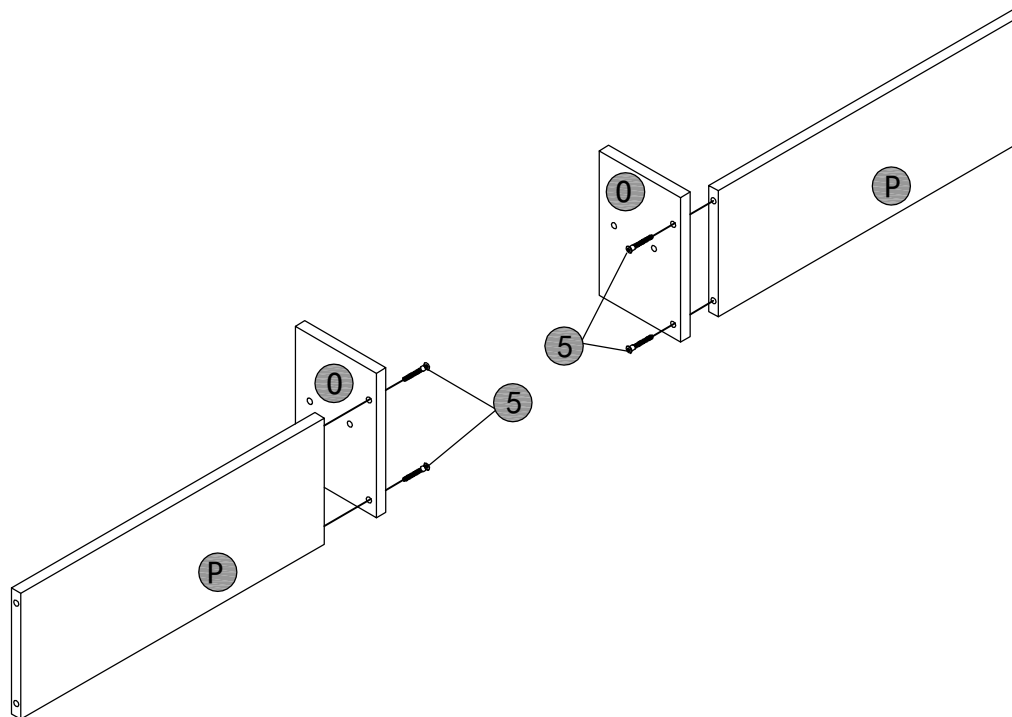

4



5 ×4pcs




7 ×1pc



step 5

Attach board O & P onto the structure using screw 5.

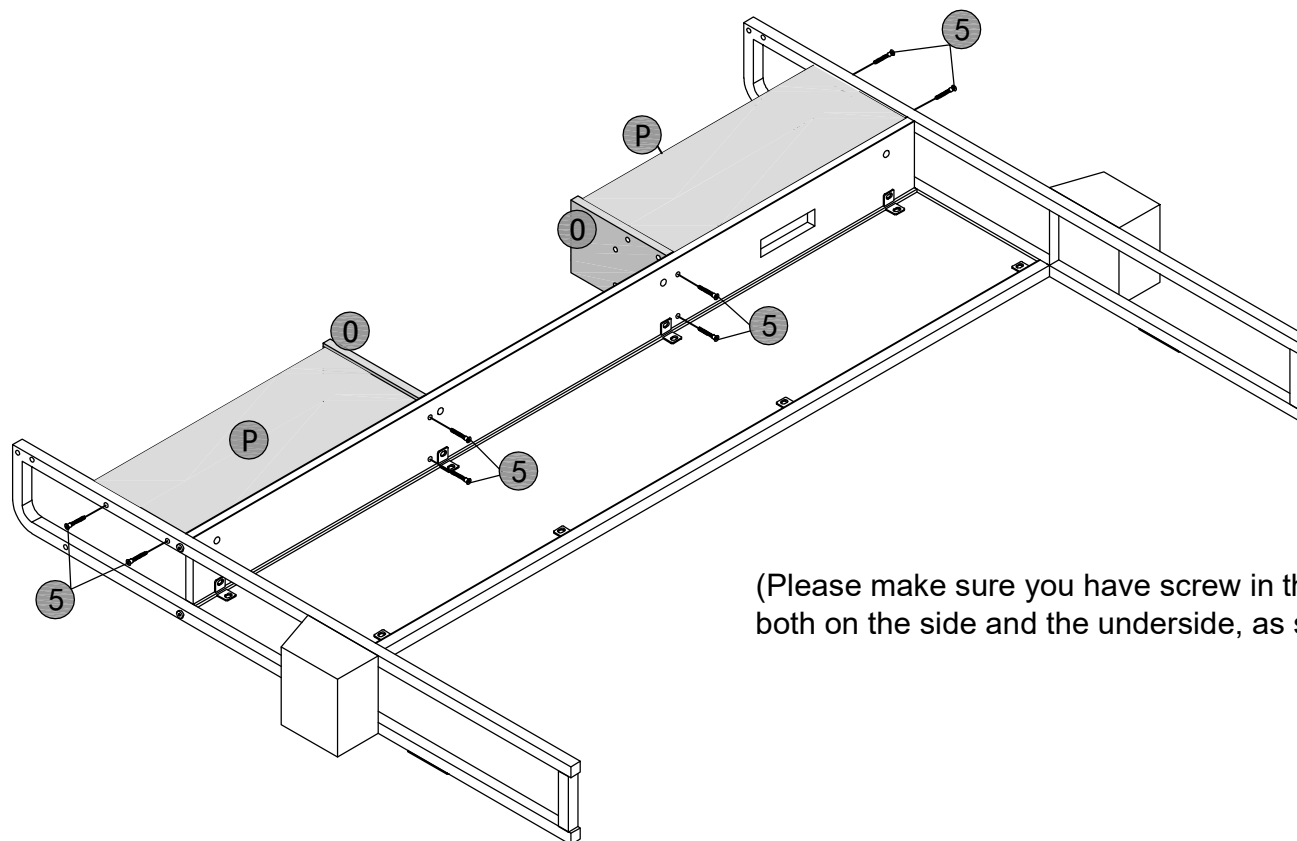

(Please make sure you have screw in the holes both on the side and the underside, as shown.)



5 × 8pcs




7 × 1pc



step 6

Connect board N with board O using screw 5.

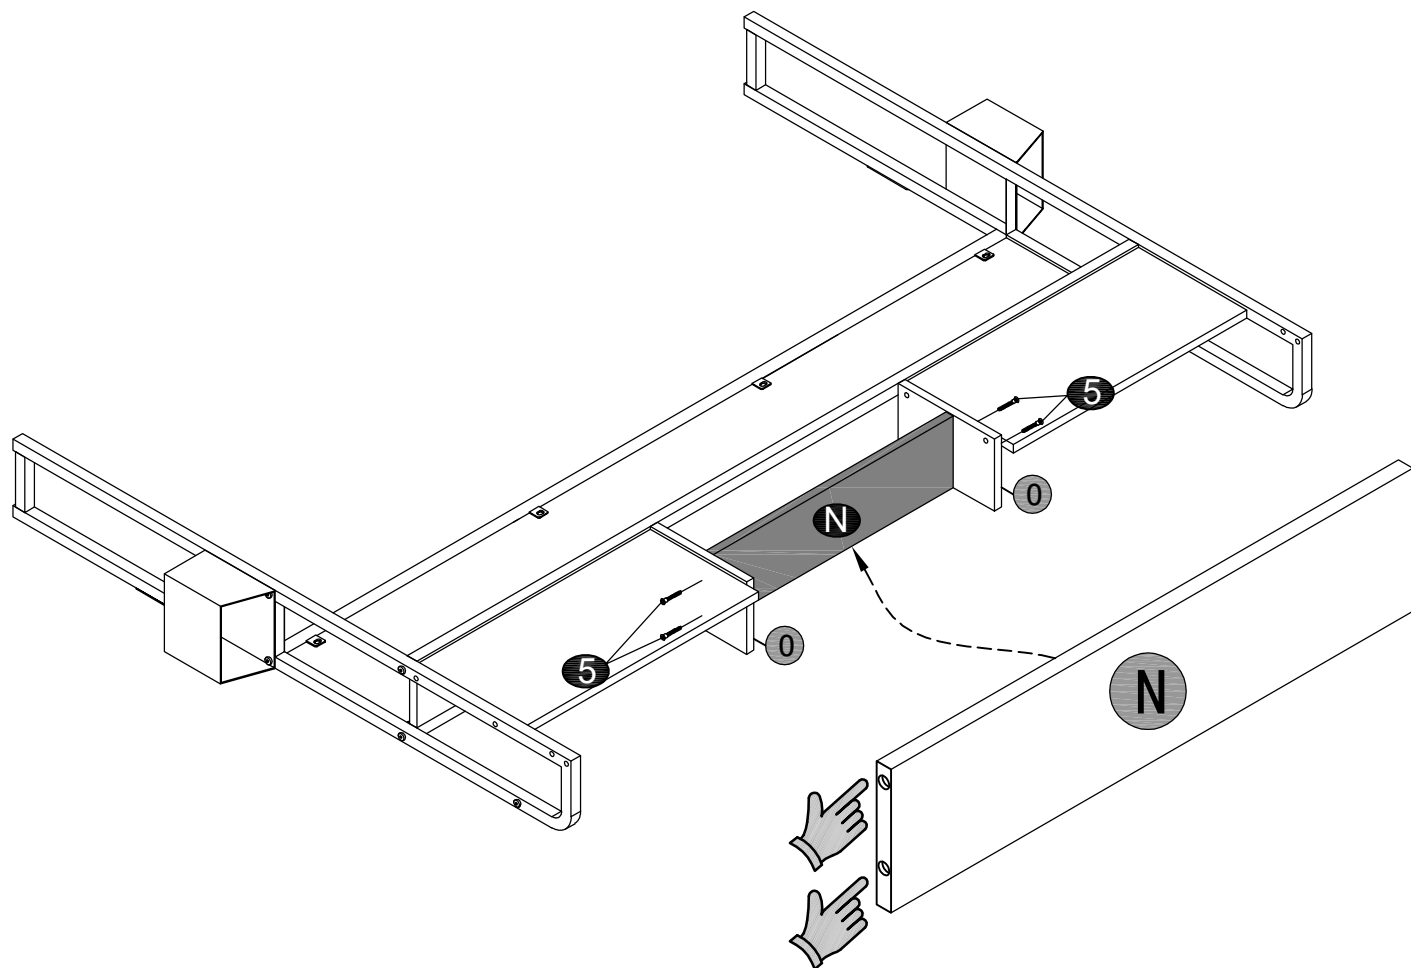

6



5 × 4pcs




7 × 1pc



step 7

Connect board L with board M using screw 5.
Connect board M with frame H using screw 1.

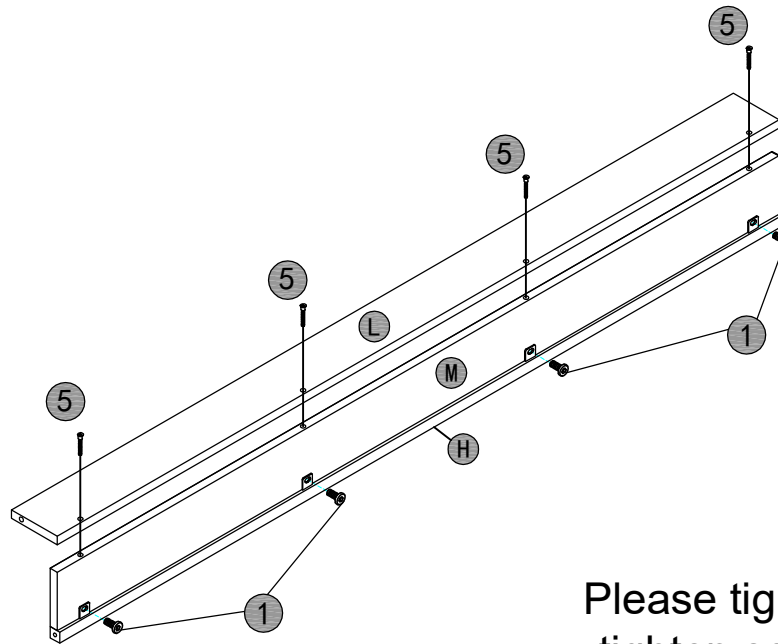

Please tighten the screws ① to 80% first, and
tighten screws ① 100% after adjusting all the
boards line up

7



⑤ ×4pcs



⑦ ×1pc




① ×4pcs



⑧ ×1pc

step 8


Peel off the sticker on the LED light strip and stick it onto board M (position as shown).

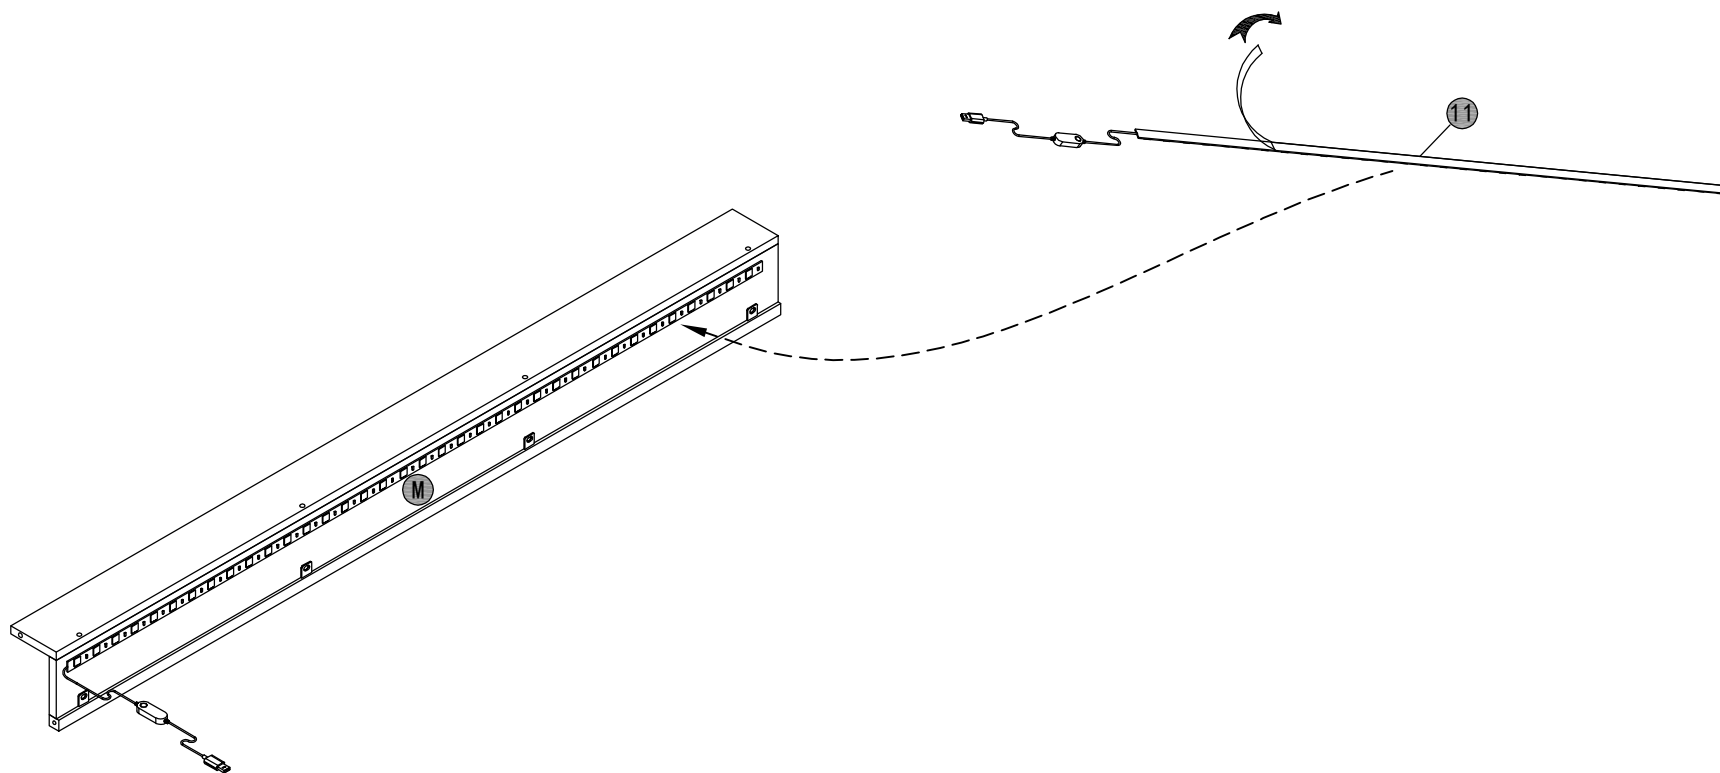

11 × 1pc

step 9

Attach board L onto the big frame using screw 5 and attach frame A with tube H using screw 4.

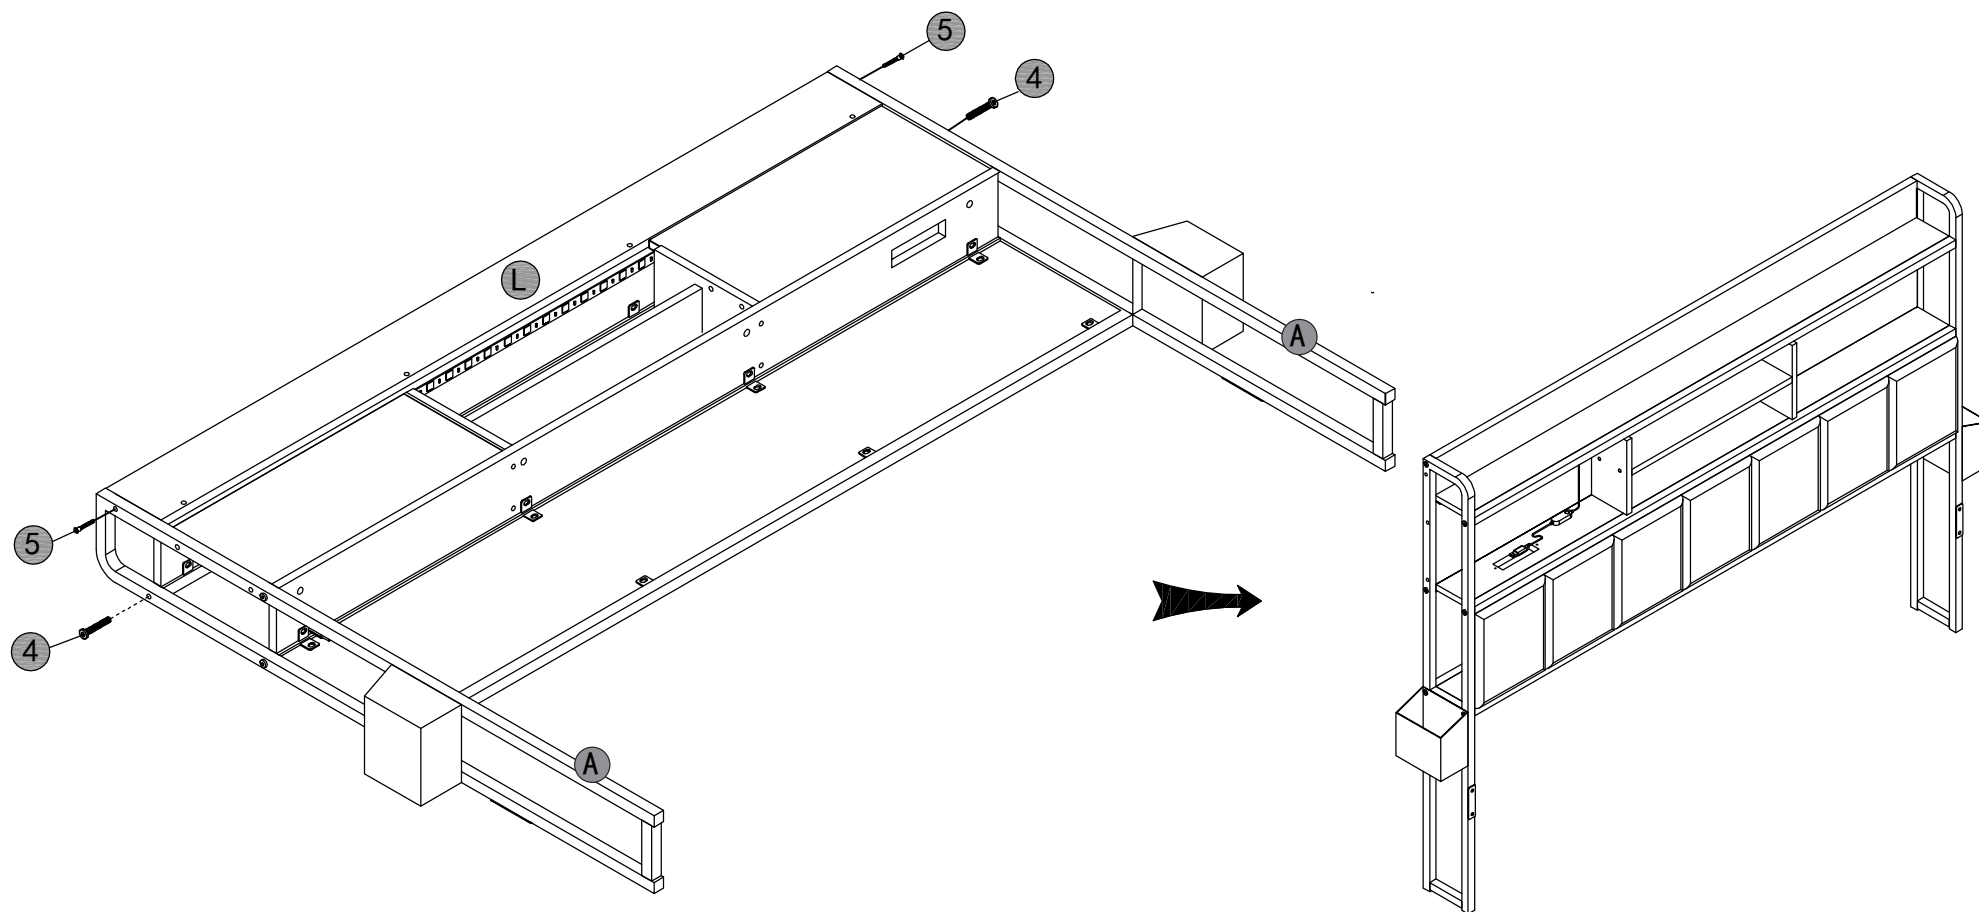

9



5 × 2pcs



7 × 1pc



4 × 2pcs




8 × 1pc




step 10

Unfold frame B .

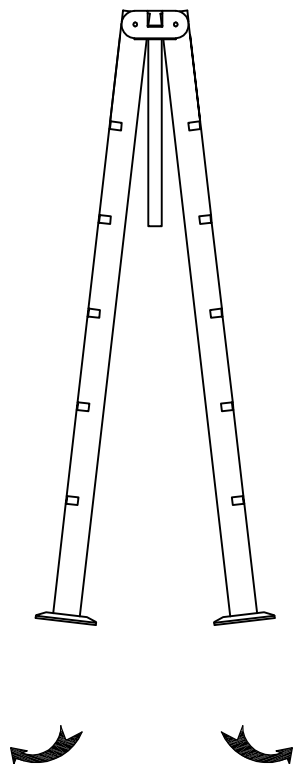


x2

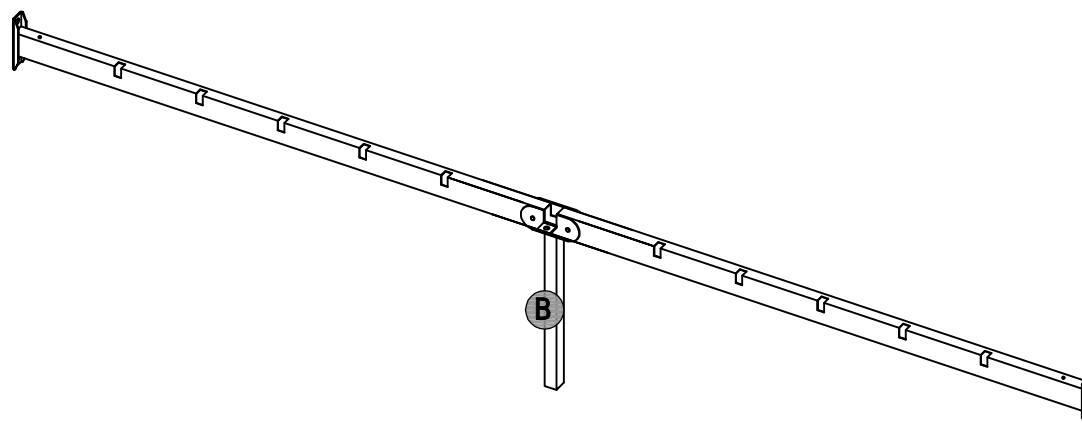



Connect part B onto the headboard using screw 2.


Connect part B to the bed-end of the bed frame using screw 2.

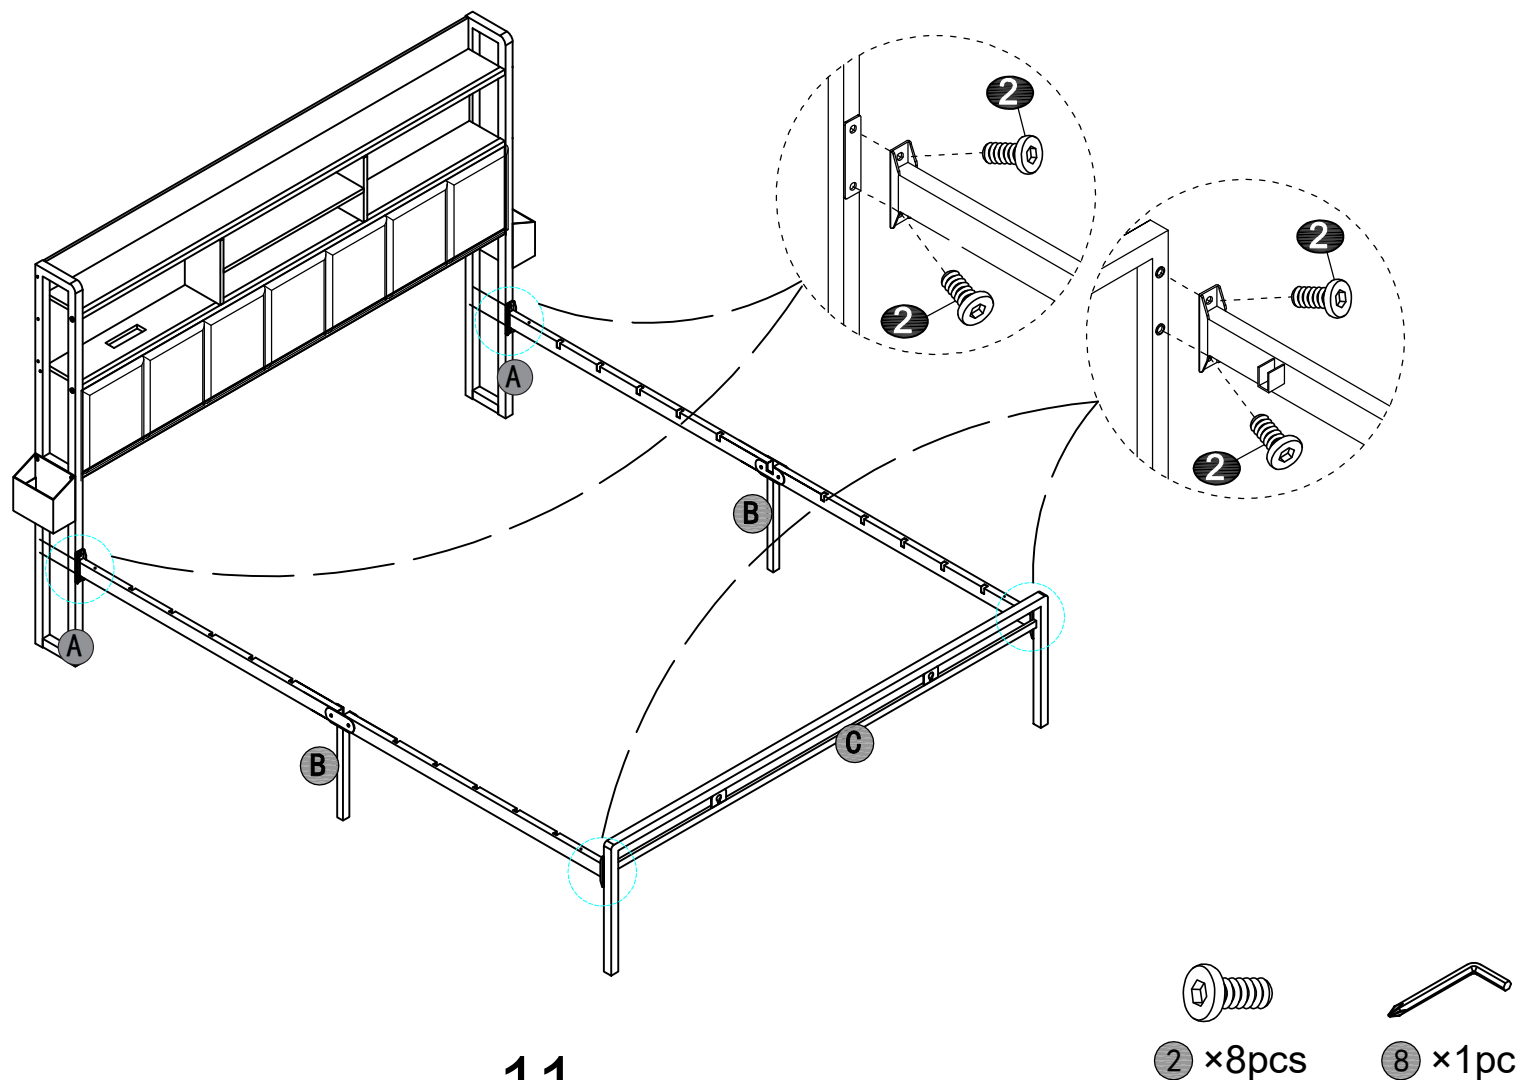




step 12

Insert frame G into the slot (as shown) and fix them with screw 3.

Insert frame F into the middle of the bed beam and secure it with screws 2.

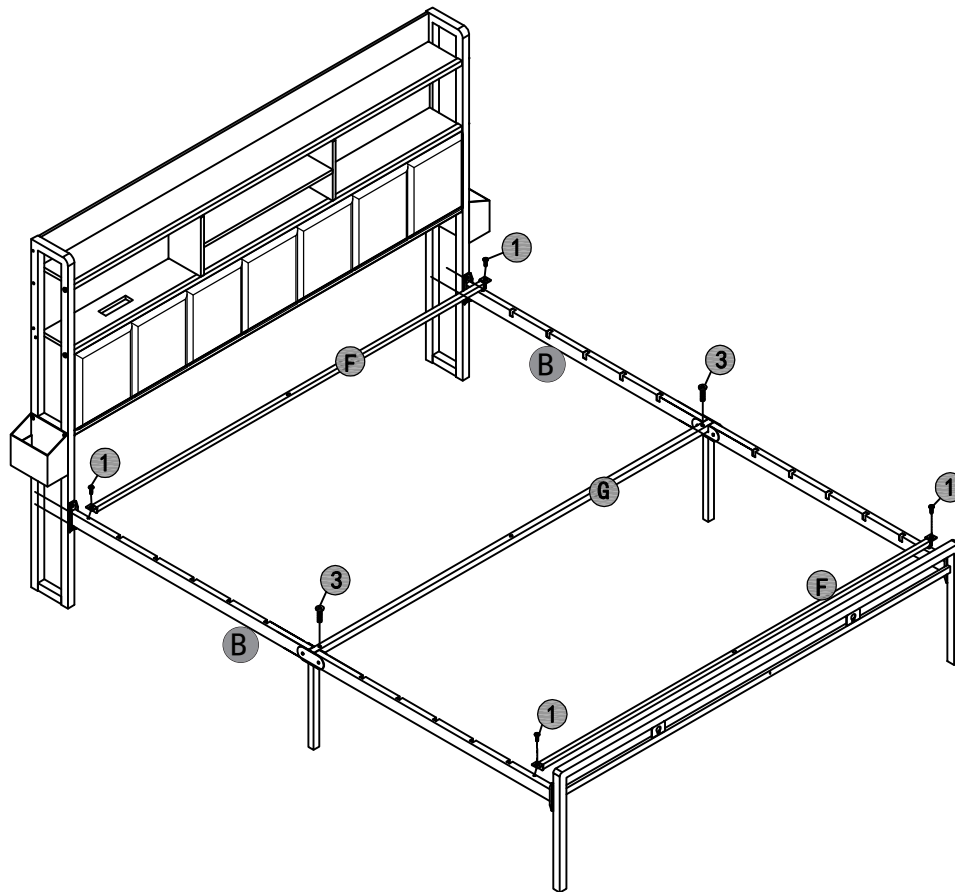


12

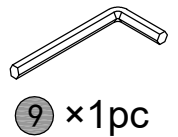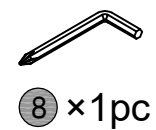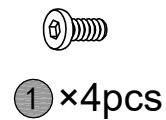




step 13

Unfold frame D.

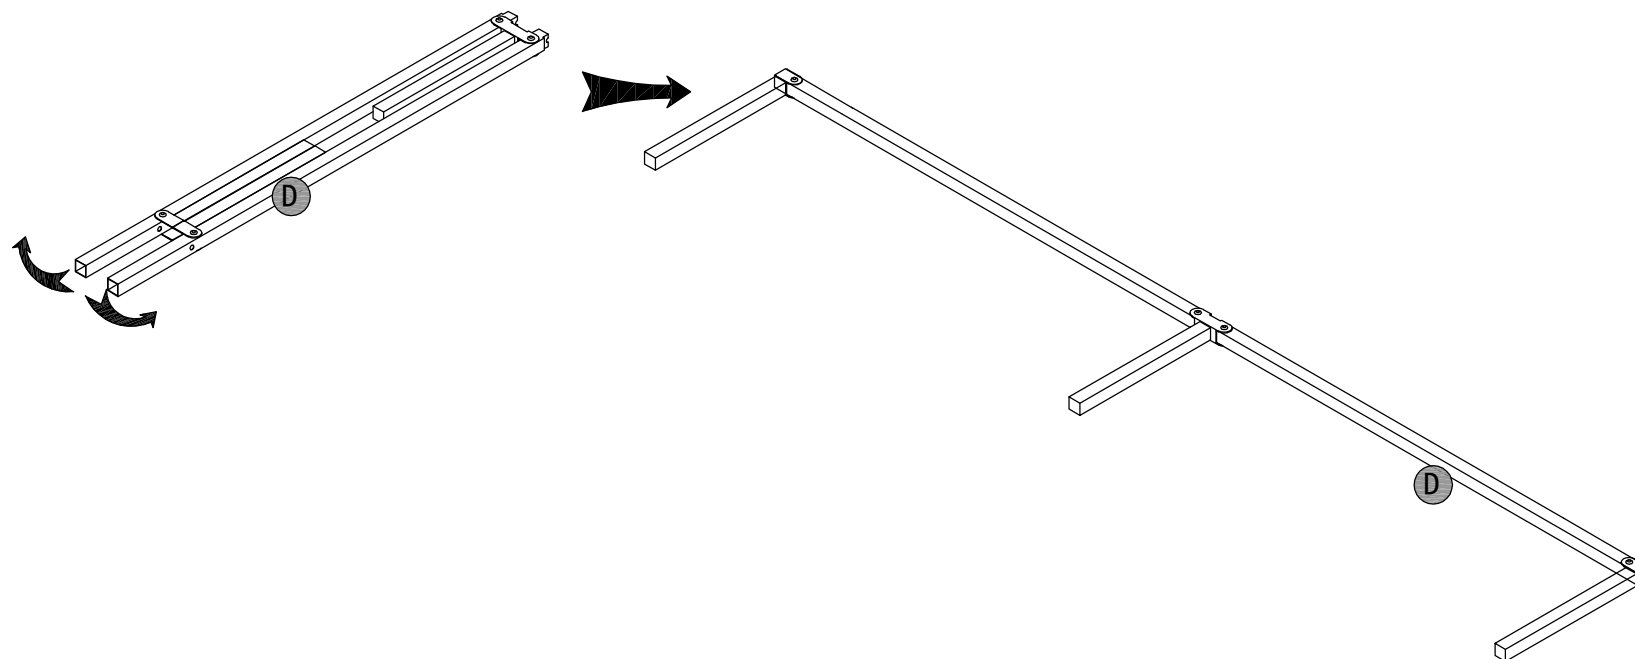

step 14

Fix frame D onto the underside of the bed frame using screw 4.

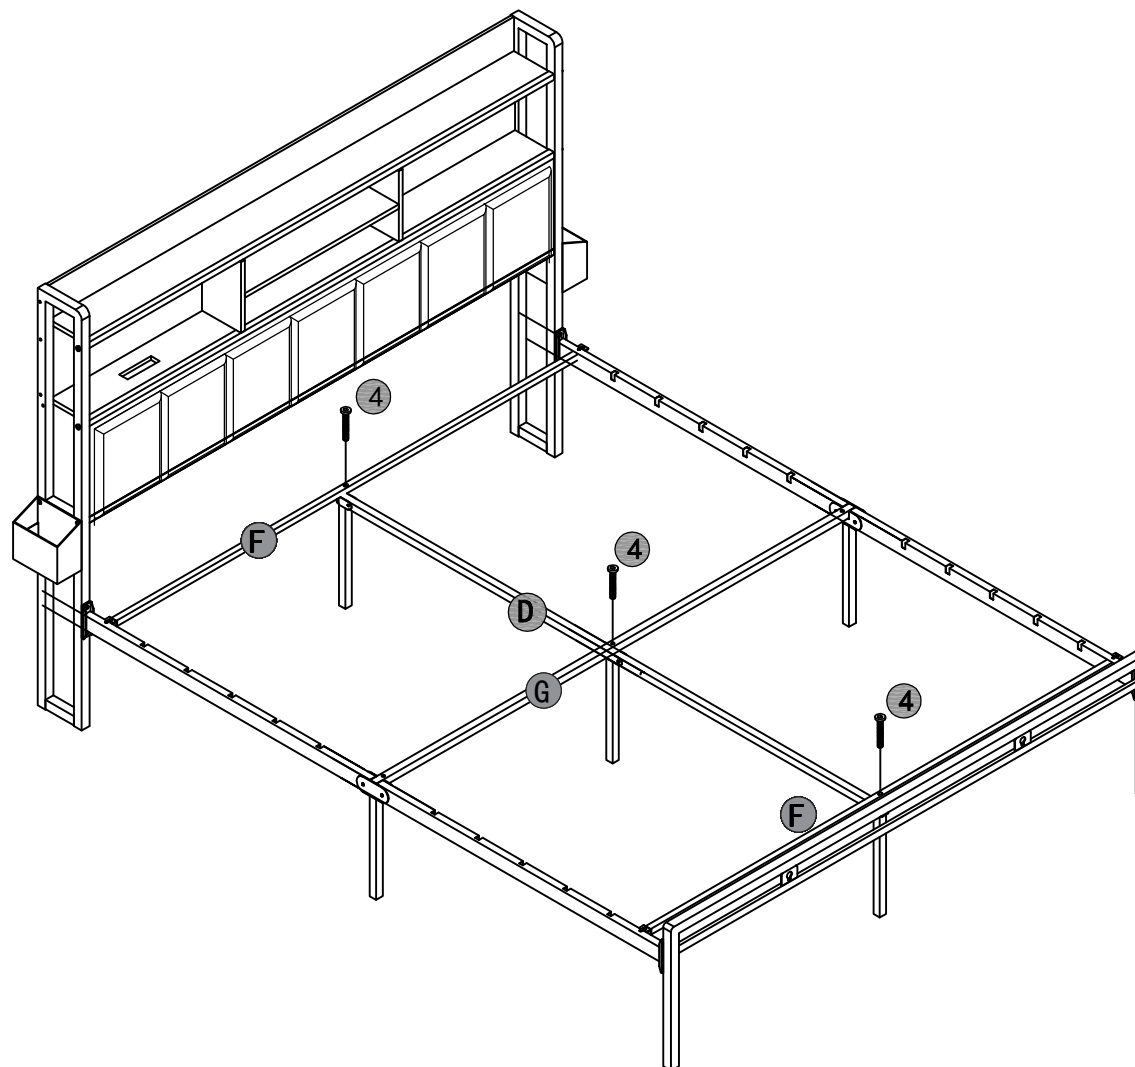

④ × 3pcs




⑧ × 1pc




step 15


Attach part 10 onto both sides of frame B.
Insert frame E into the slot shown.

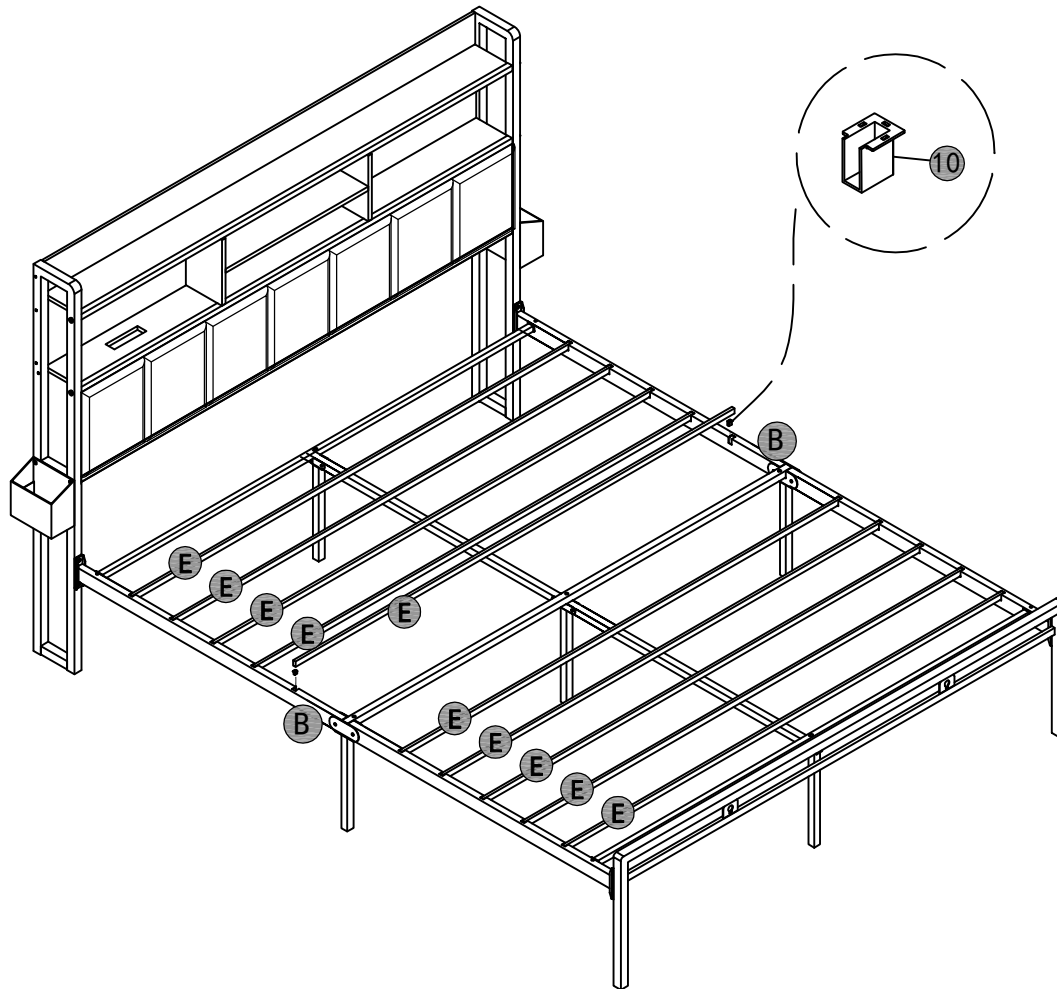


Assemble the slats

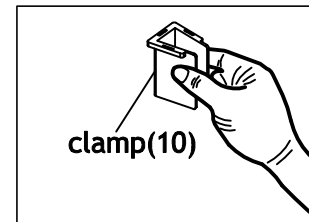


1. Squeeze the clamp (10) tightly.

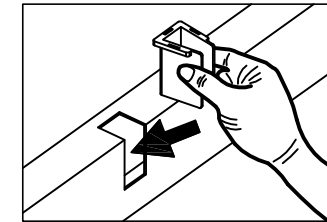


2. Put the clamp into the gaps.

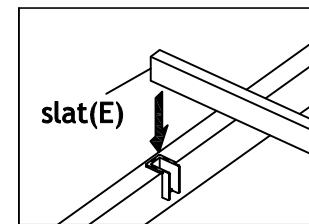

3. Put the slat (E) into the clamp.

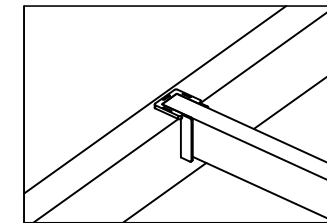


4. Finished.



10 × 20pcs

step 16

Attach charging station 12 onto the headboard slot using screw 6.

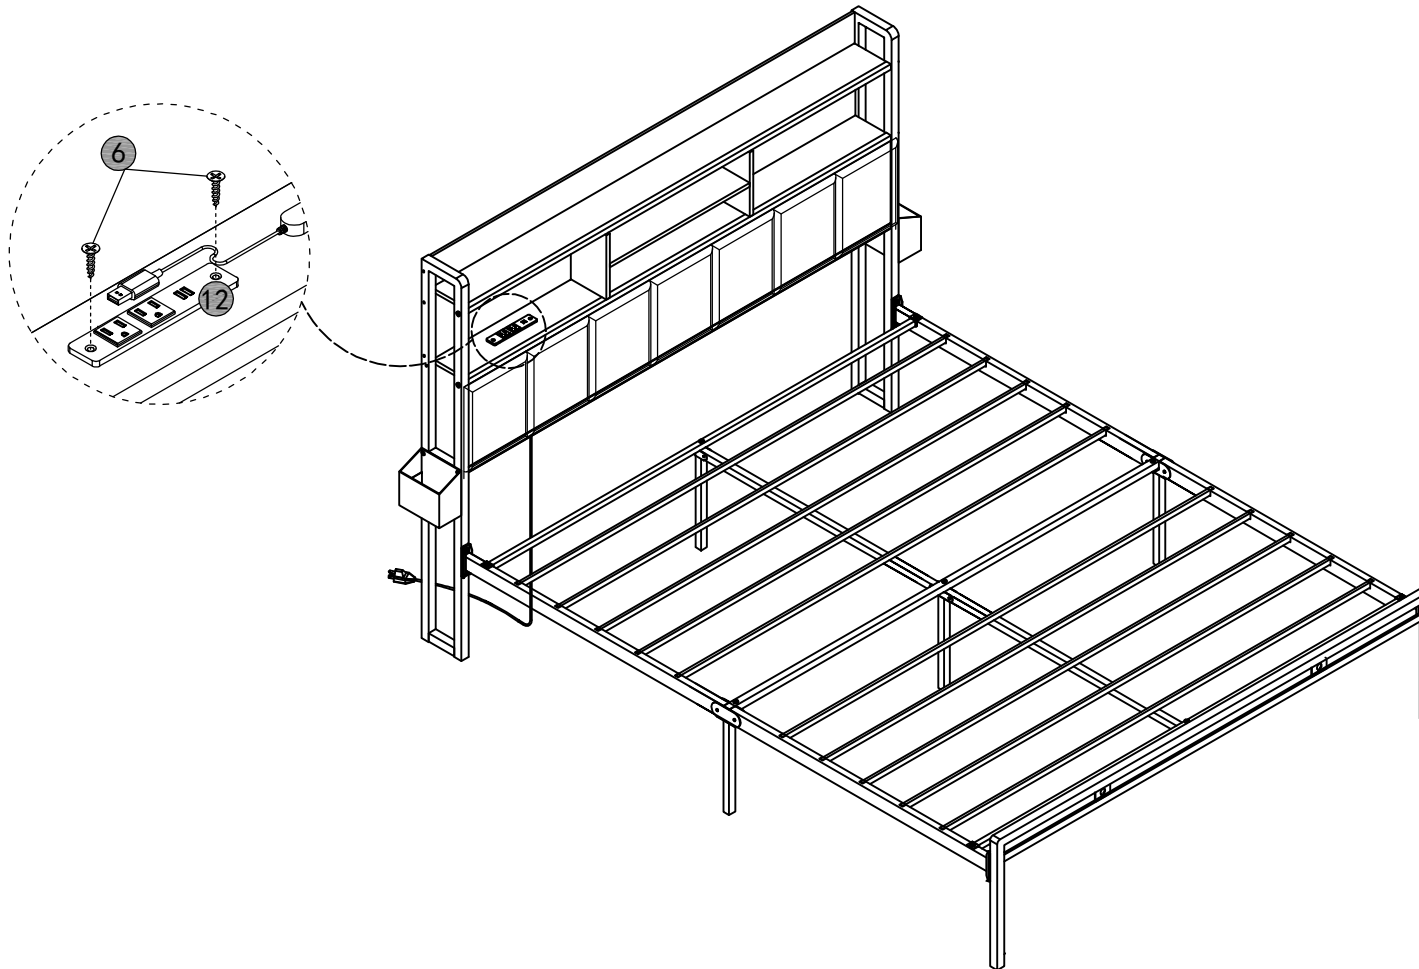

6 × 2pcs



8 × 1pc




12 × 1pc

 step 17

Expand the drawer frame.


x2

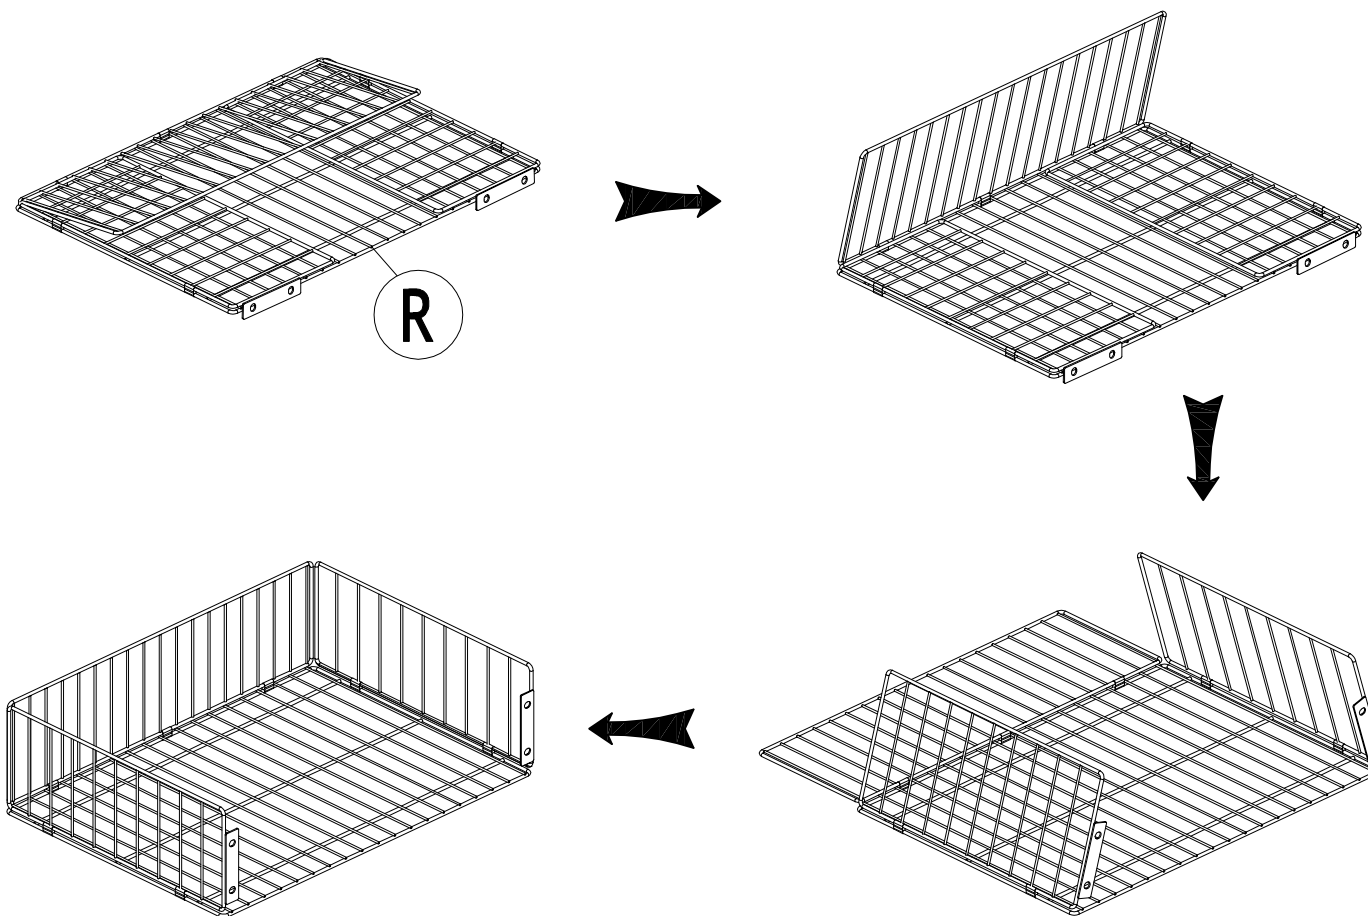


step 18

Attach part 14 onto the drawers (place as shown).

x2

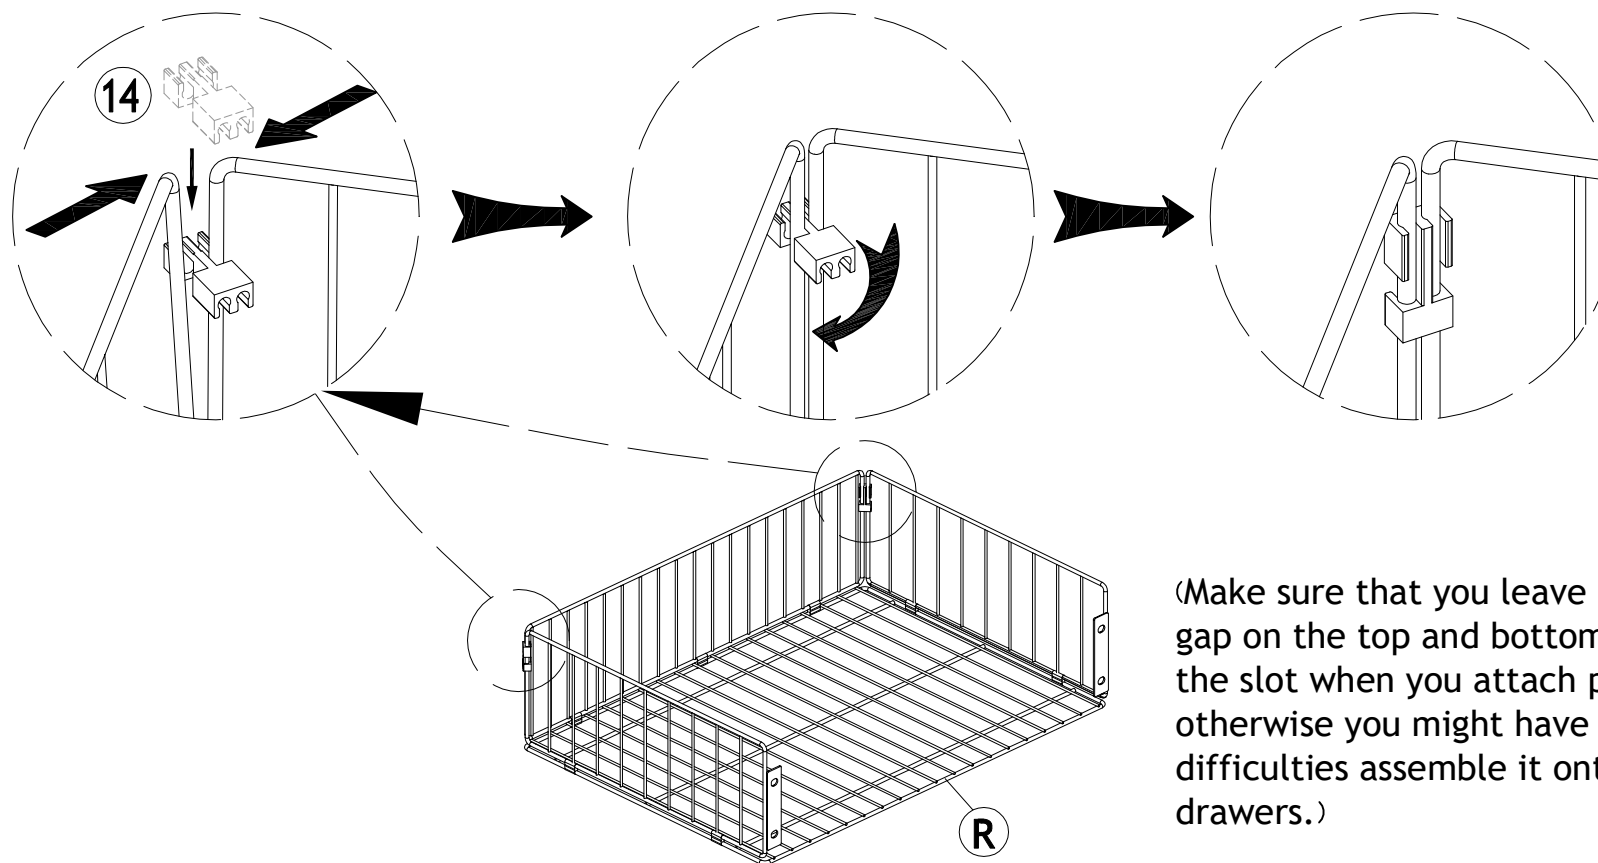

(Make sure that you leave an even gap on the top and bottom side of the slot when you attach part 14, otherwise you might have difficulties assemble it onto the drawers.)




14 x4pcs


step 19

Click in the rollers.

x2

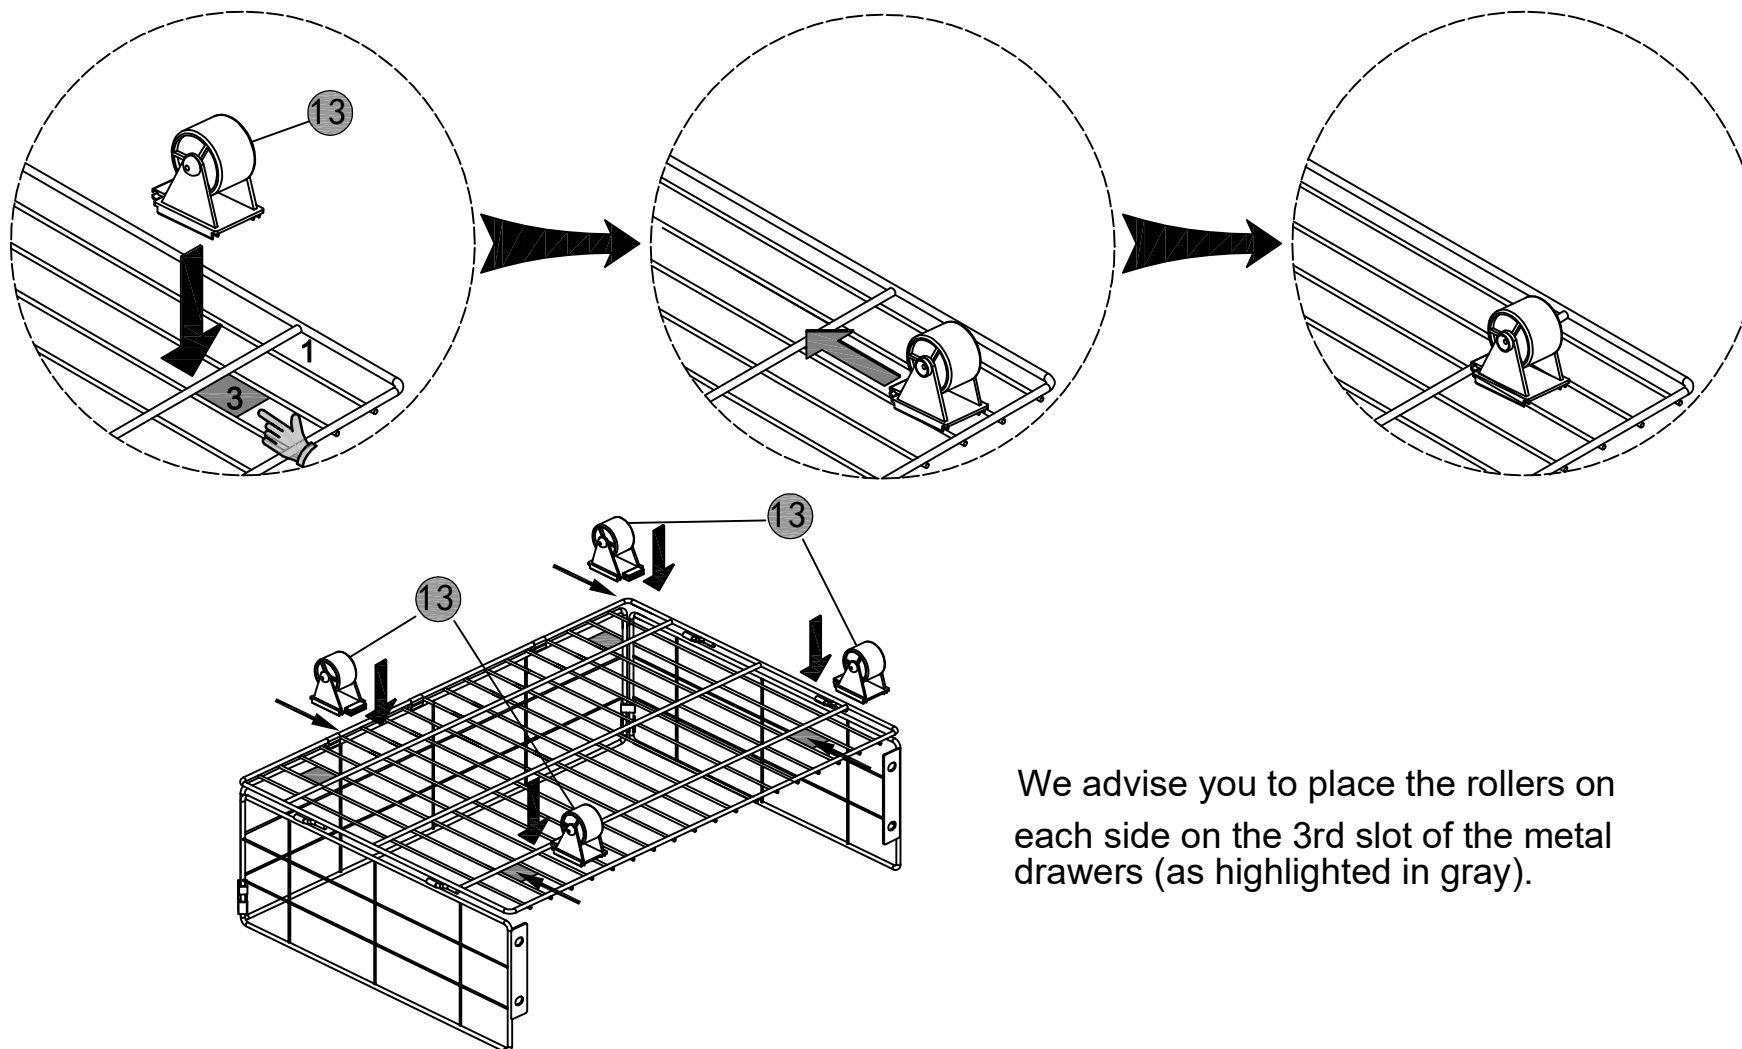


We advise you to place the rollers on each side on the 3rd slot of the metal drawers (as highlighted in gray).



13 x8pcs




step 20

Attach board Q and part 15 onto drawer R using screw 1.
Lock screw 17 onto board Q.

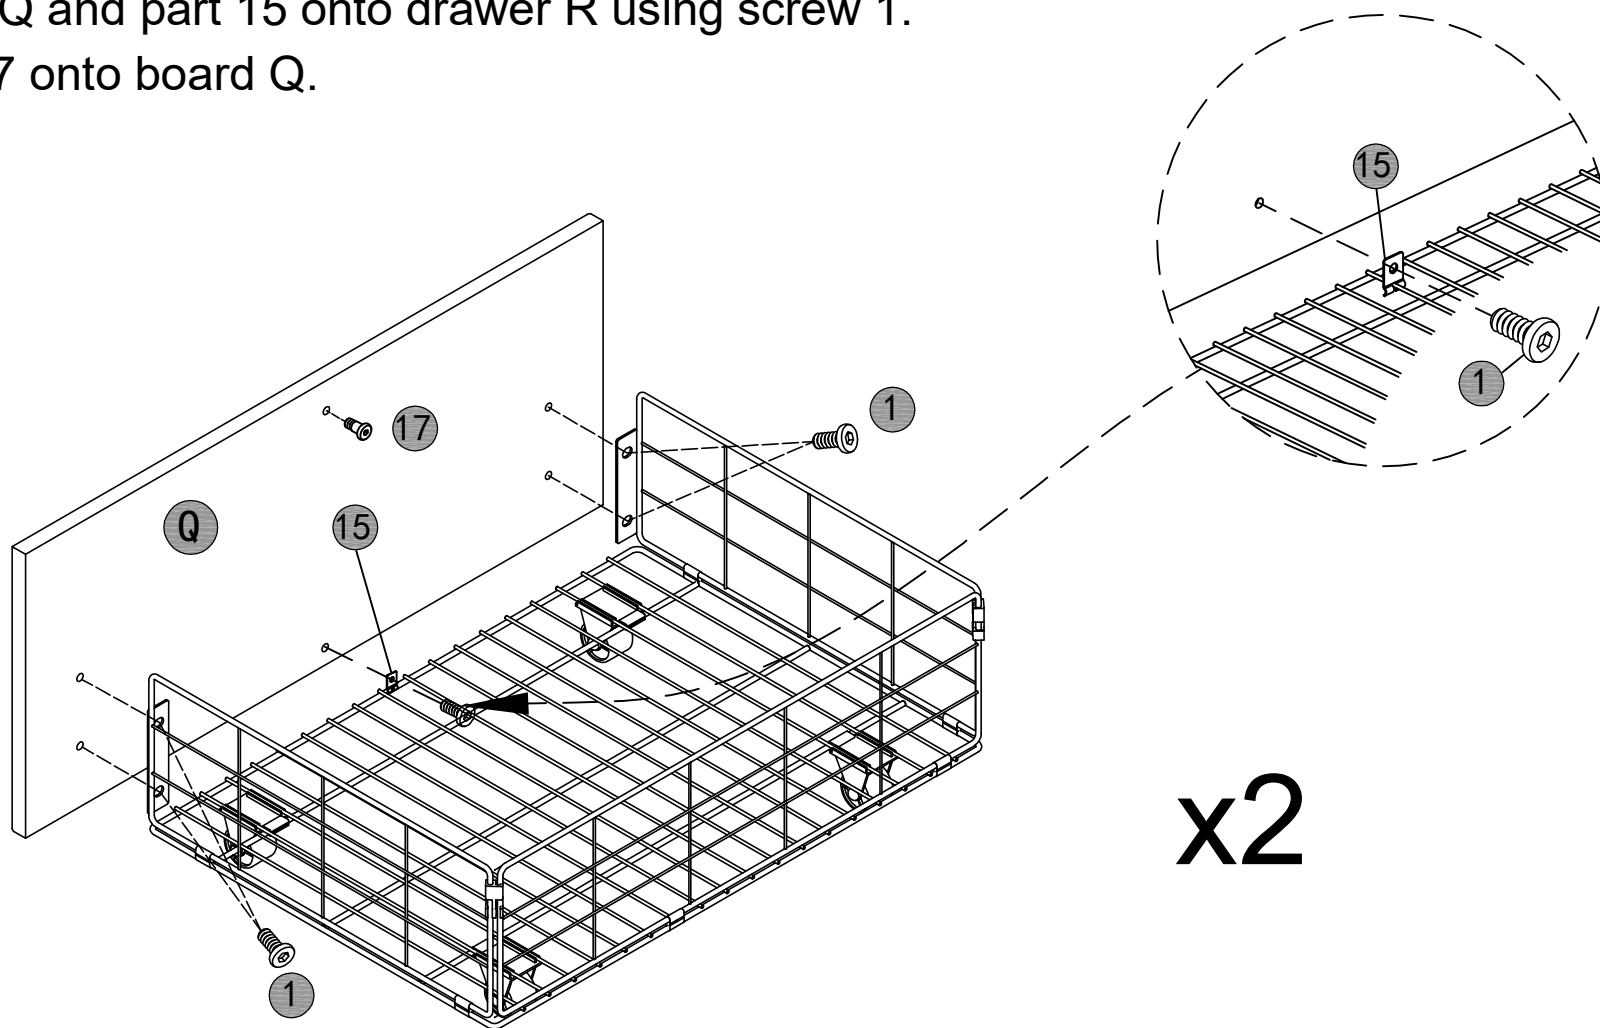

x2

20

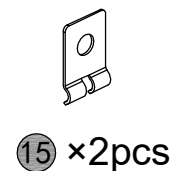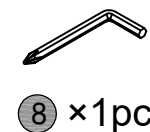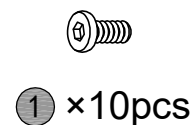

step 21

Insert the metal drawers into the bed frame.

