

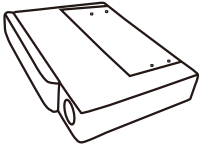

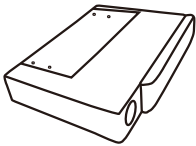
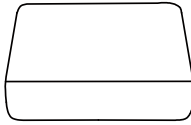
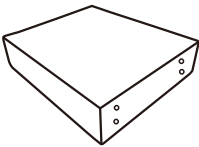
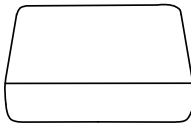

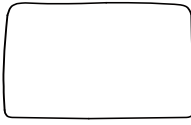

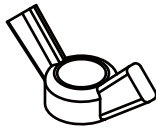
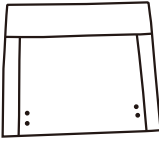


Part NO.	Part Image	Part Name	QTY	Part NO.	Part Image	Part Name	QTY
A		Right Armrest	1	K		Side Panel (long)	2
B		Left Armrest	1	J		Ottoman Cushion	1
C		Seat Frame	3	①		Screw M6*16mm	16
D		Seat Cushion	3	②		Screw M6*32mm	20
E		Leg	16	③		Screw M8*40mm	8
F		Side Panel (short)	2	④		Gasket	36
G		Back Cushion	3	⑤		Connect Iron	4
H		Seat Plate	1	⑥		Nut	8
I		Back Frame	3	⑦		Allen Key M6	1
				⑧		Plastic Gasket	16

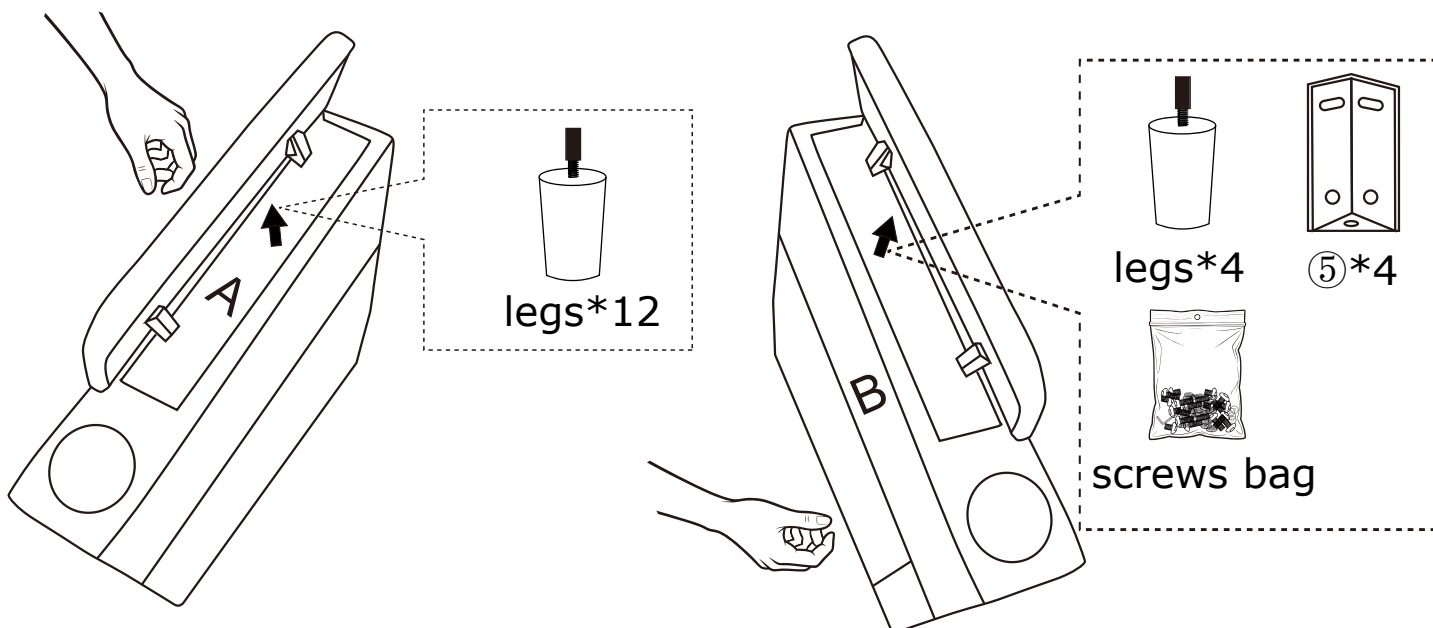


Some parts are inside the storage space of armrests, please take them out

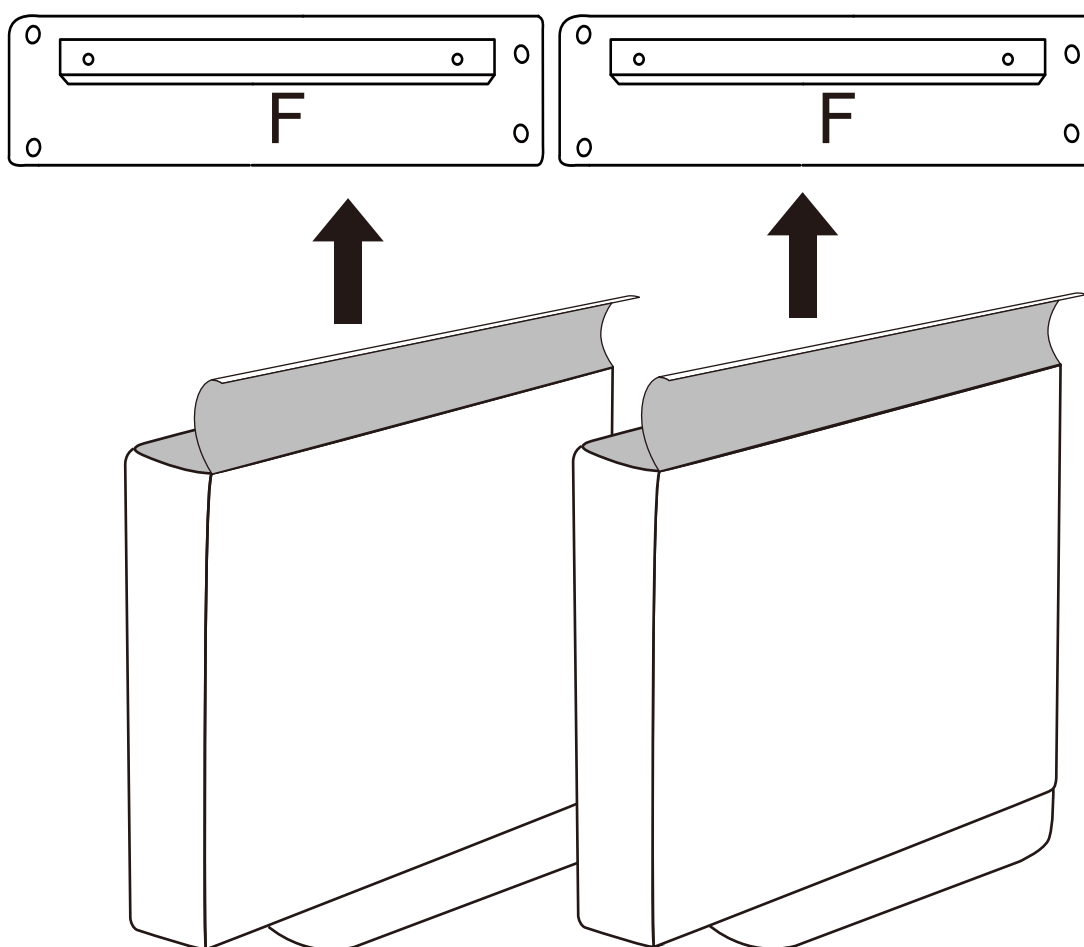

Please reverse the 2 armrests of the sofa and open the velcro under the bottom of the 2 armrests.

STEP 1



- C** x3
- I** x3
- 2** x12
- 4** x12

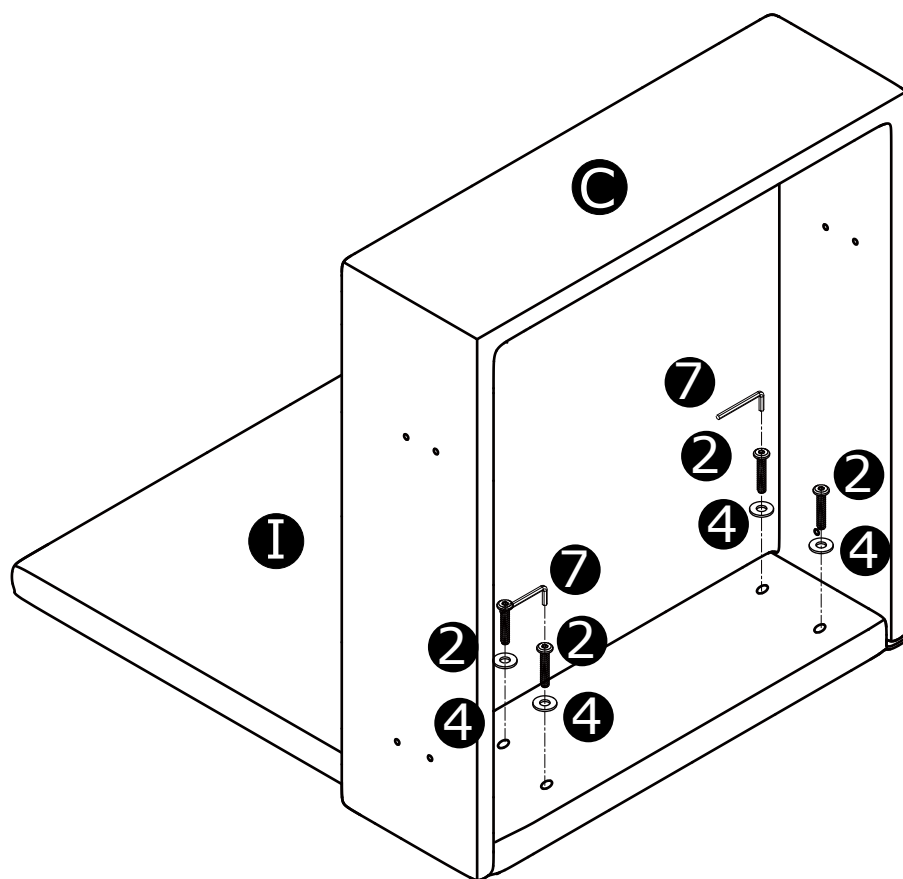

x3

STEP 2

- A** x1
- B** x1
- 2** x8
- 4** x8

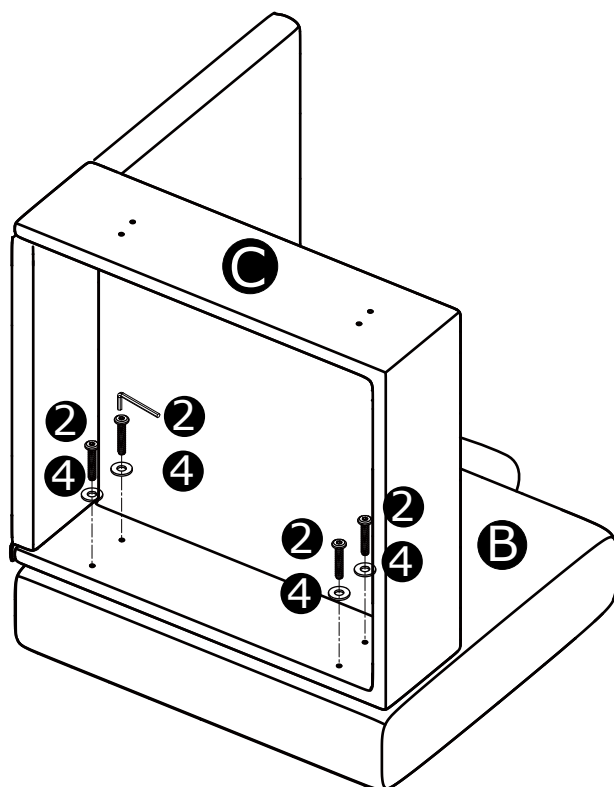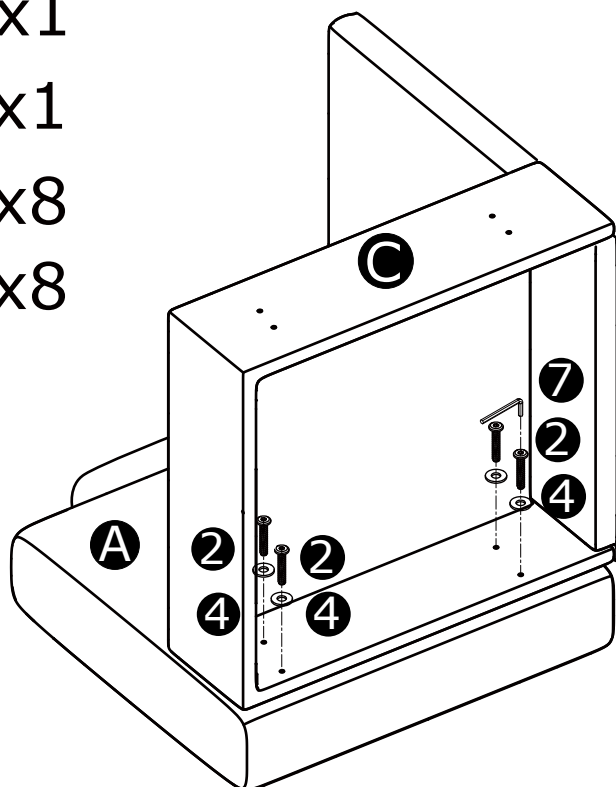


STEP 3

③ x8

④ x16


⑥ x8

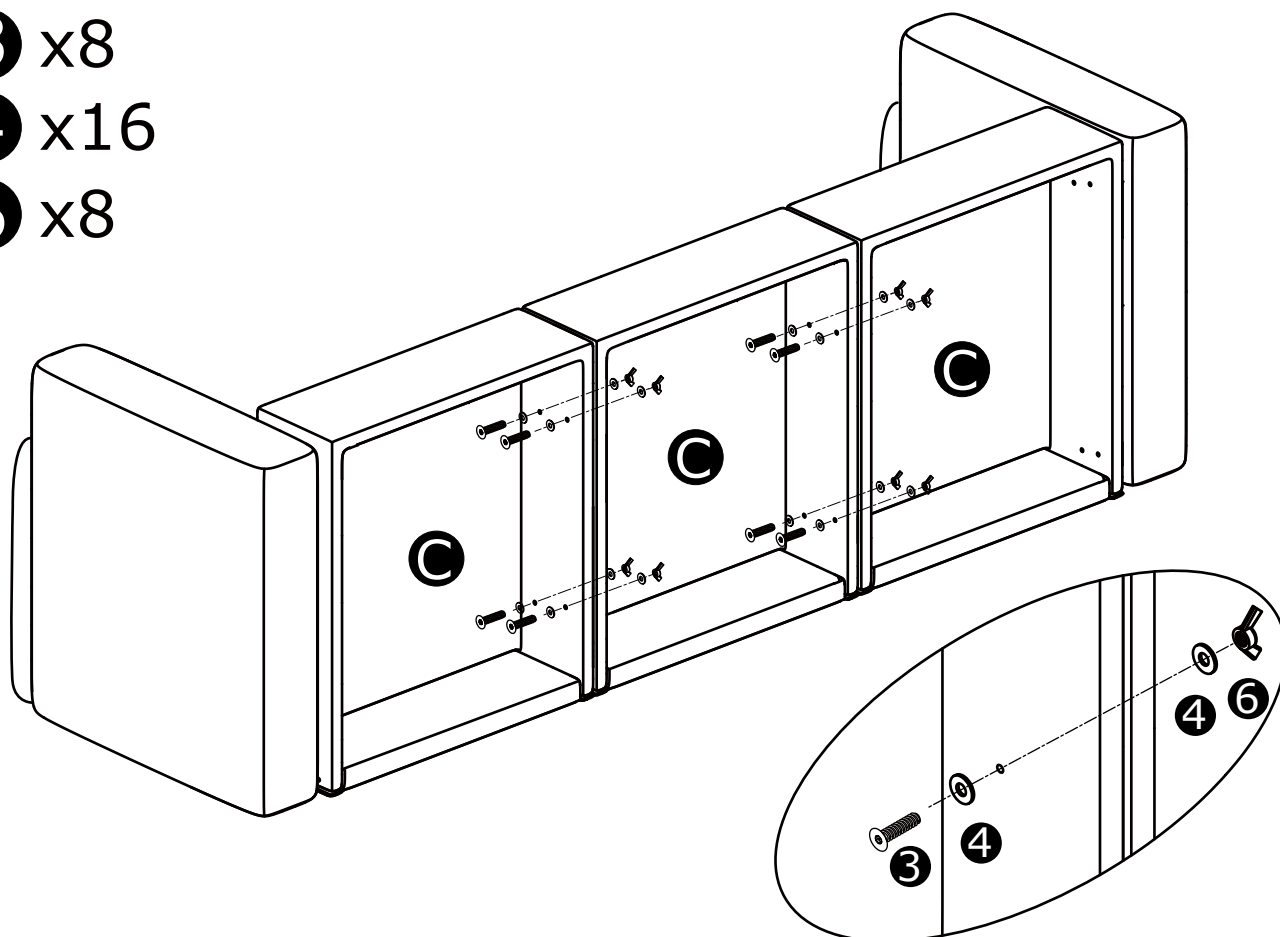

STEP 4

Ⓔ x12

⑧ x12

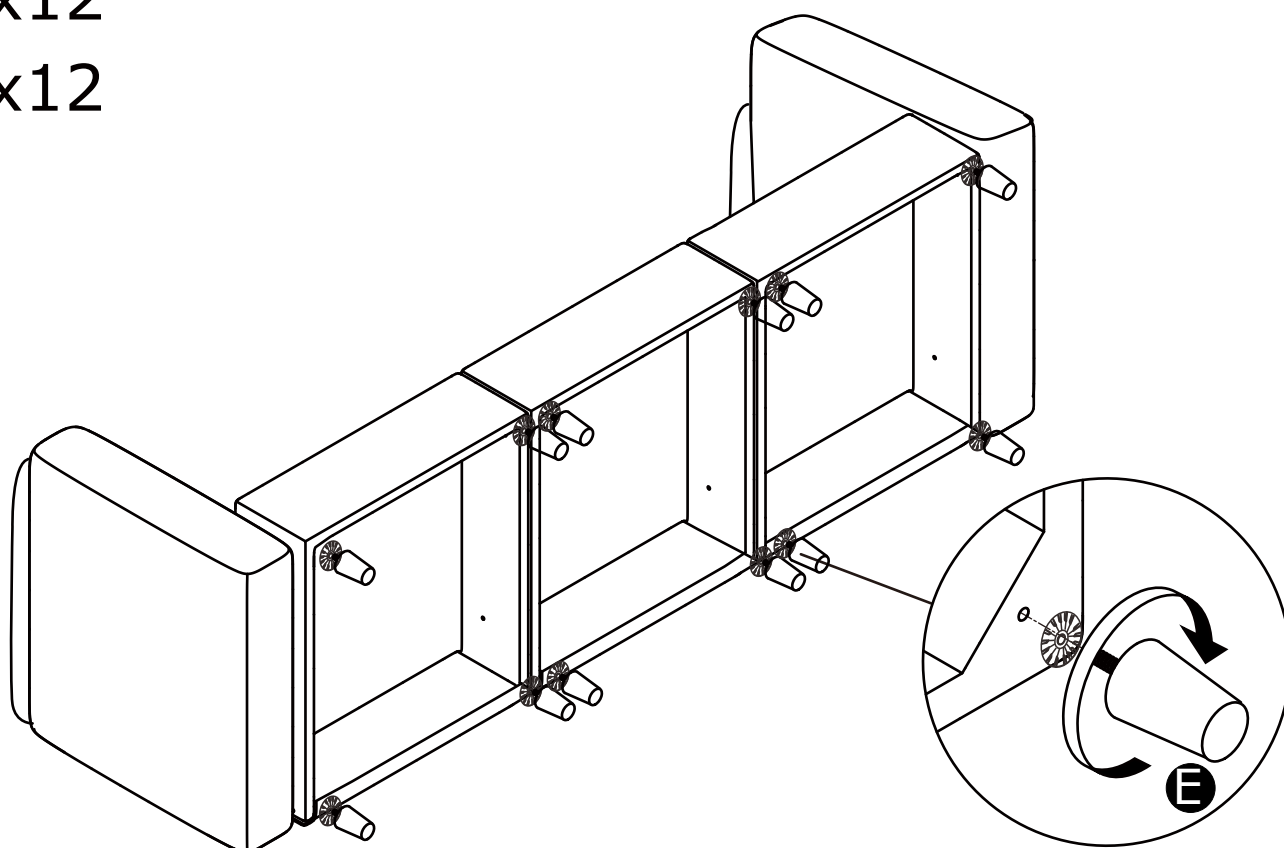


STEP 5

① x8

5 x4


F x2

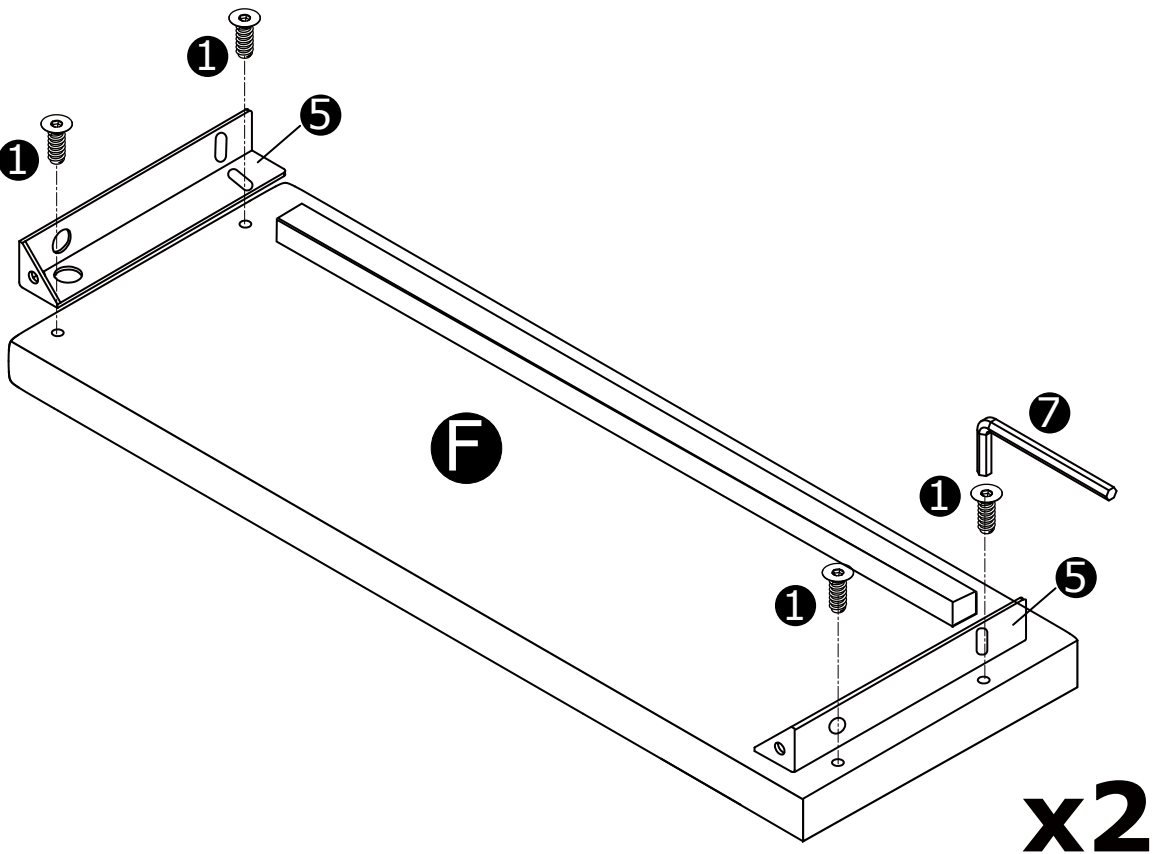

STEP 6


K x2

1 x4

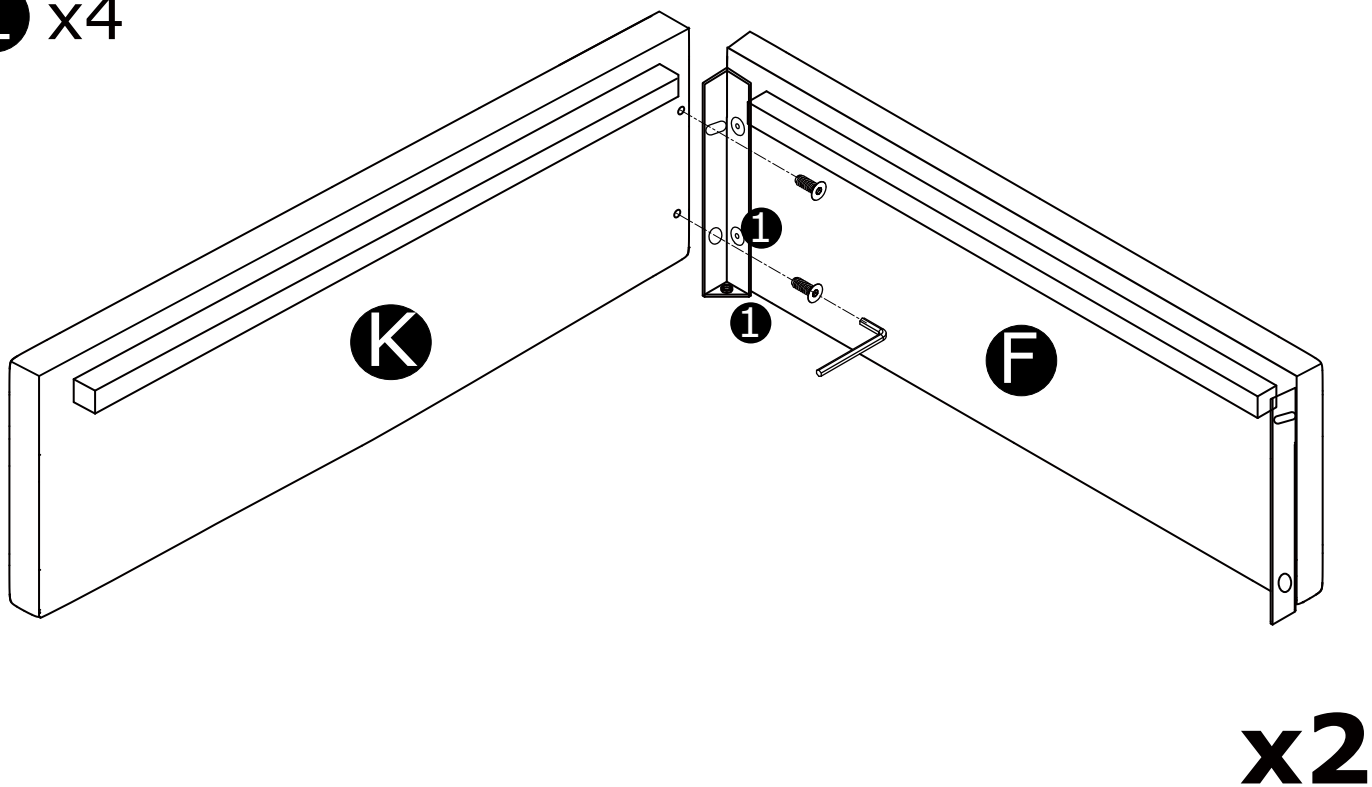

STEP 7


1 x4

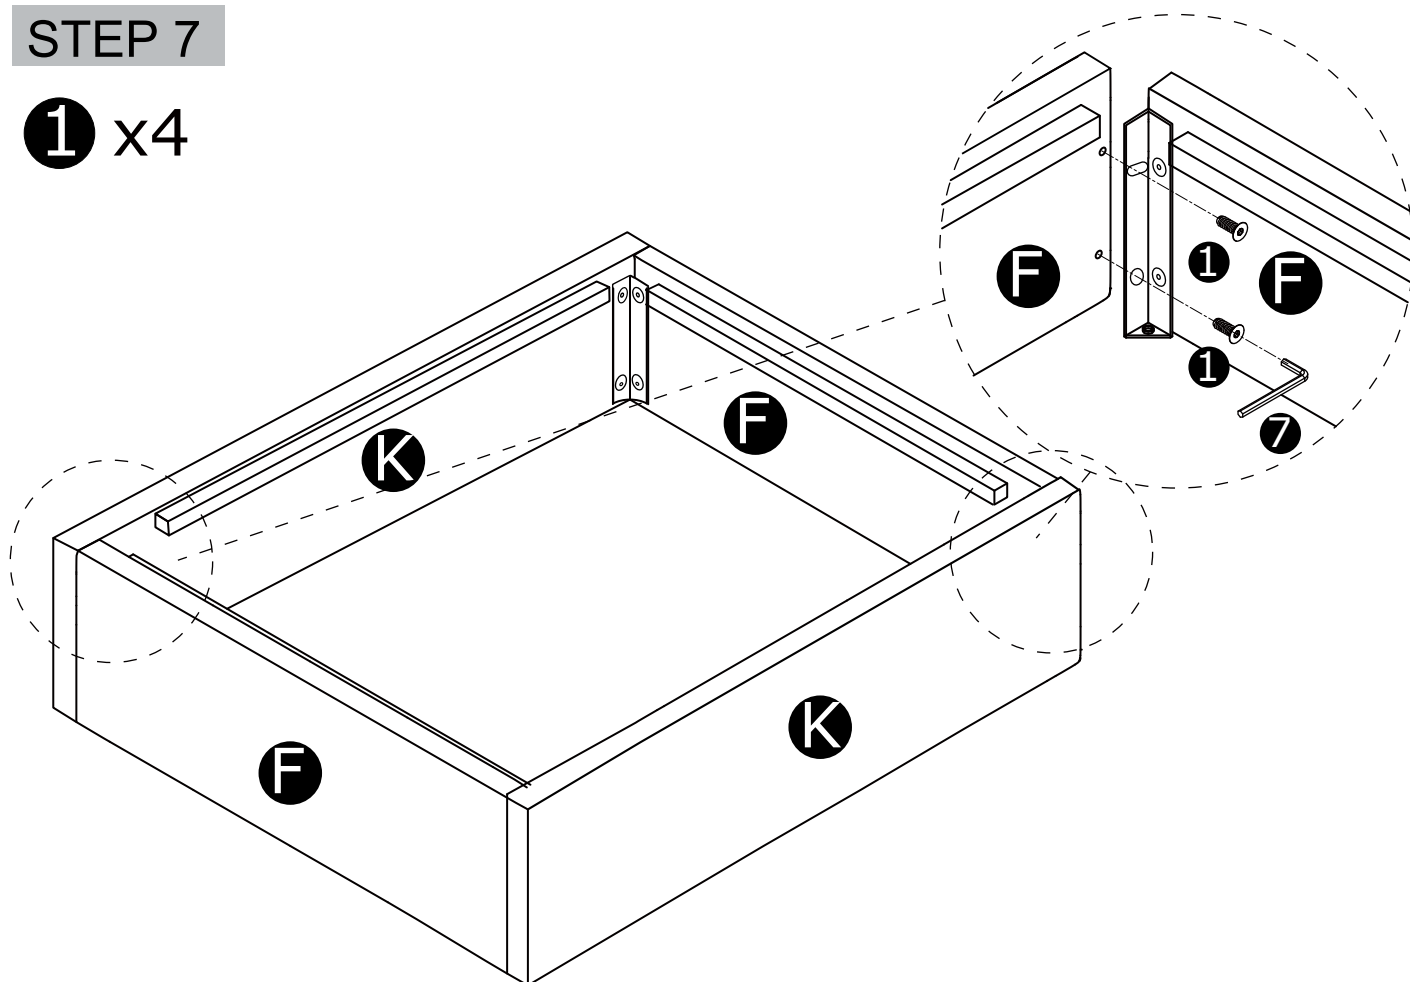

STEP 8


8 x4

E x4

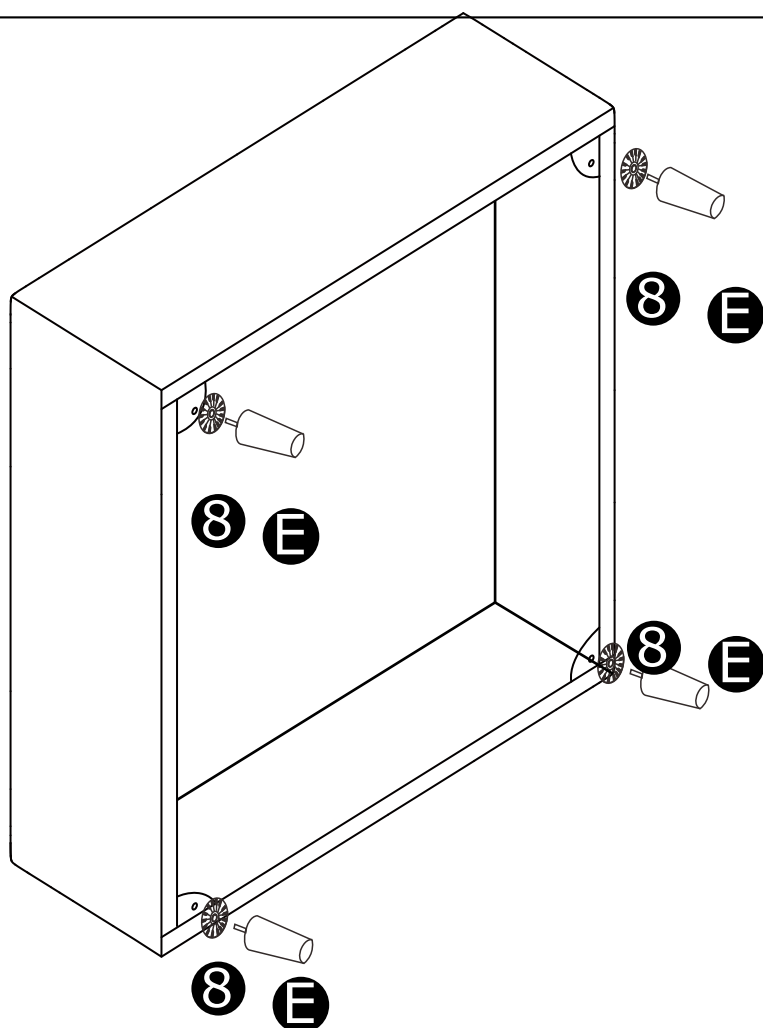


STEP 9



H x1

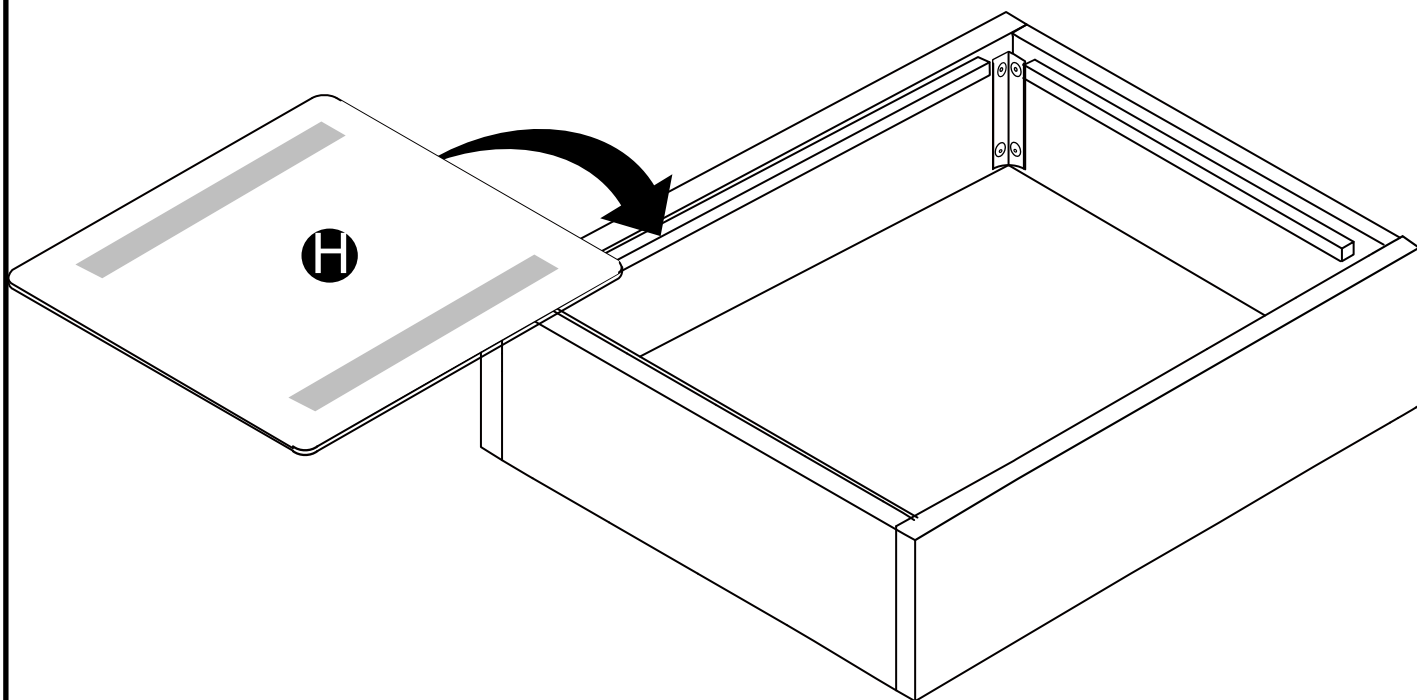

STEP 10

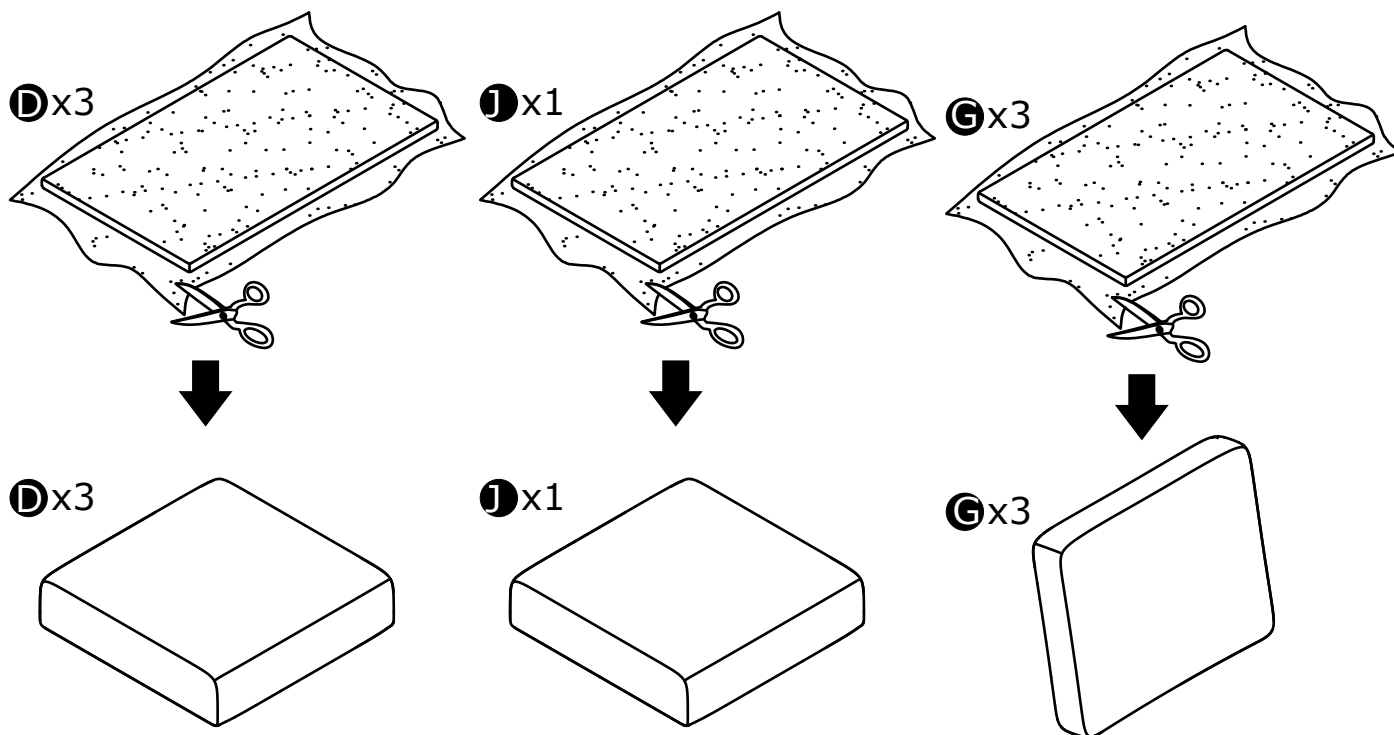

STEP 11

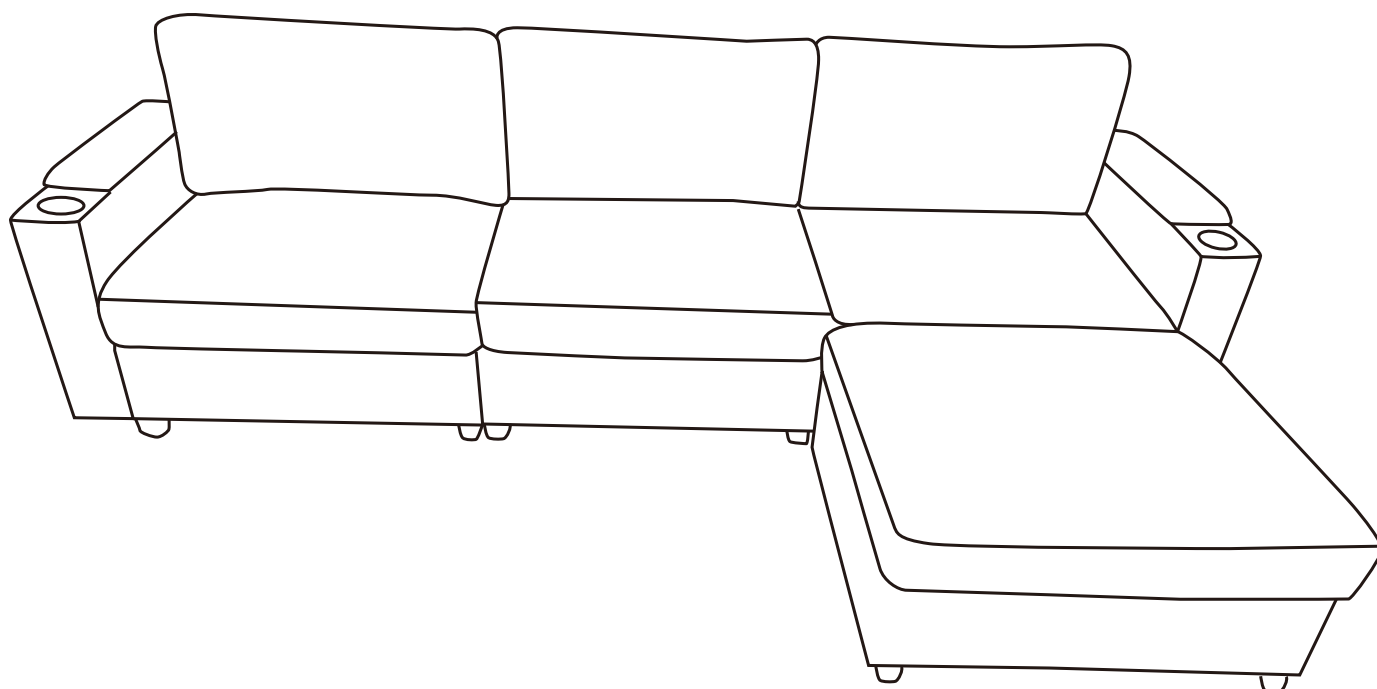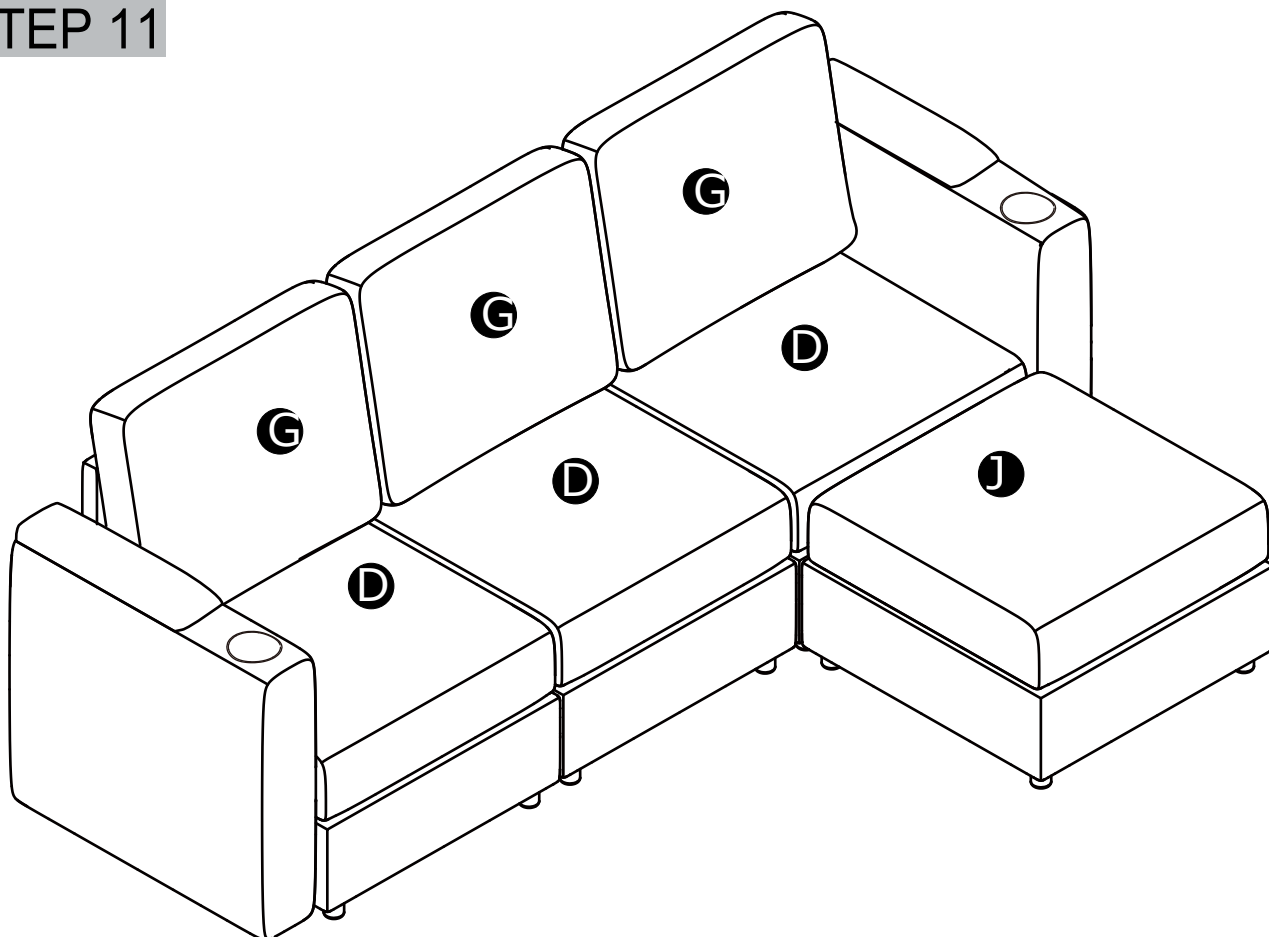

**The product has compression parts,
Please pat them by hand and wait 72 hours, the cushions will be recover.**