


ASSEMBLY INSTRUCTION


MODEL : DRESSER

WF 531201

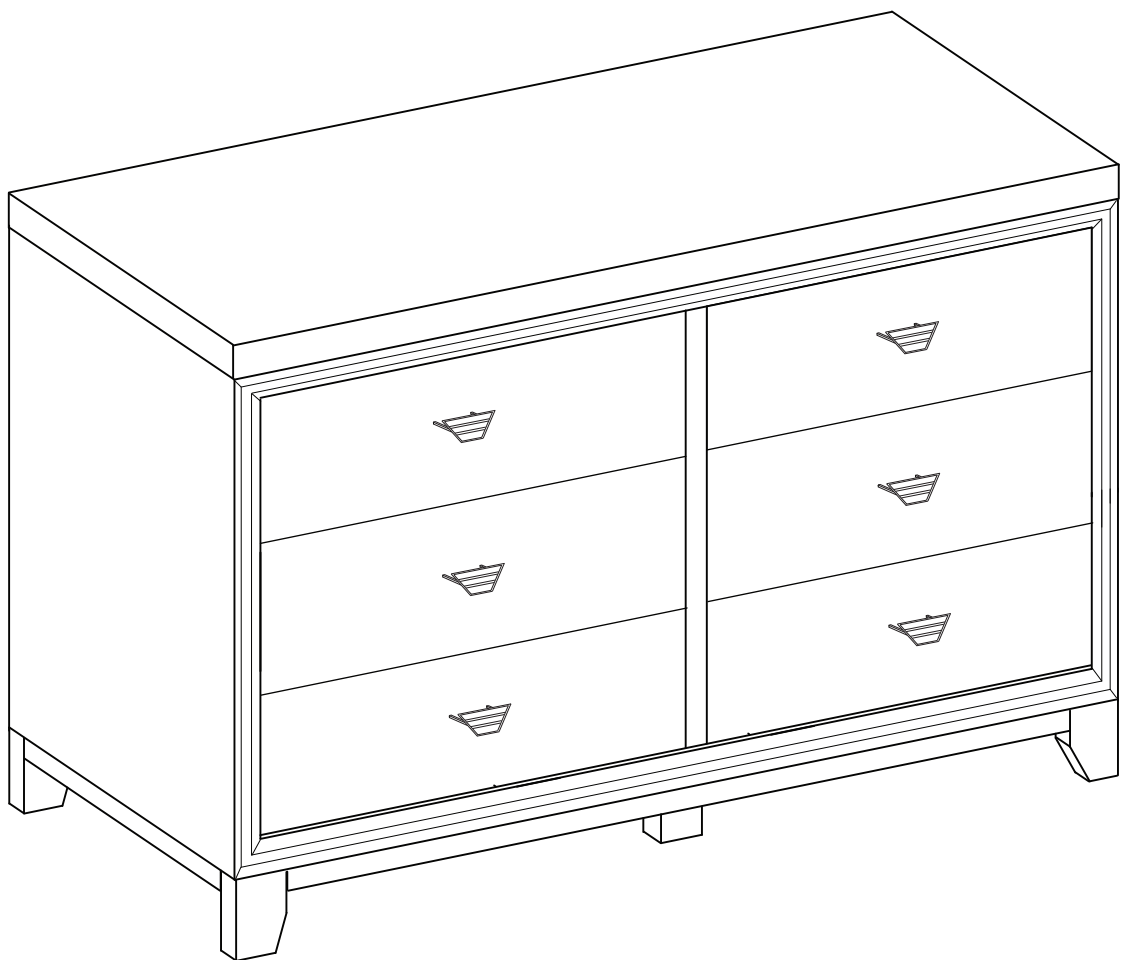

ASSEMBLY INSTRUCTION









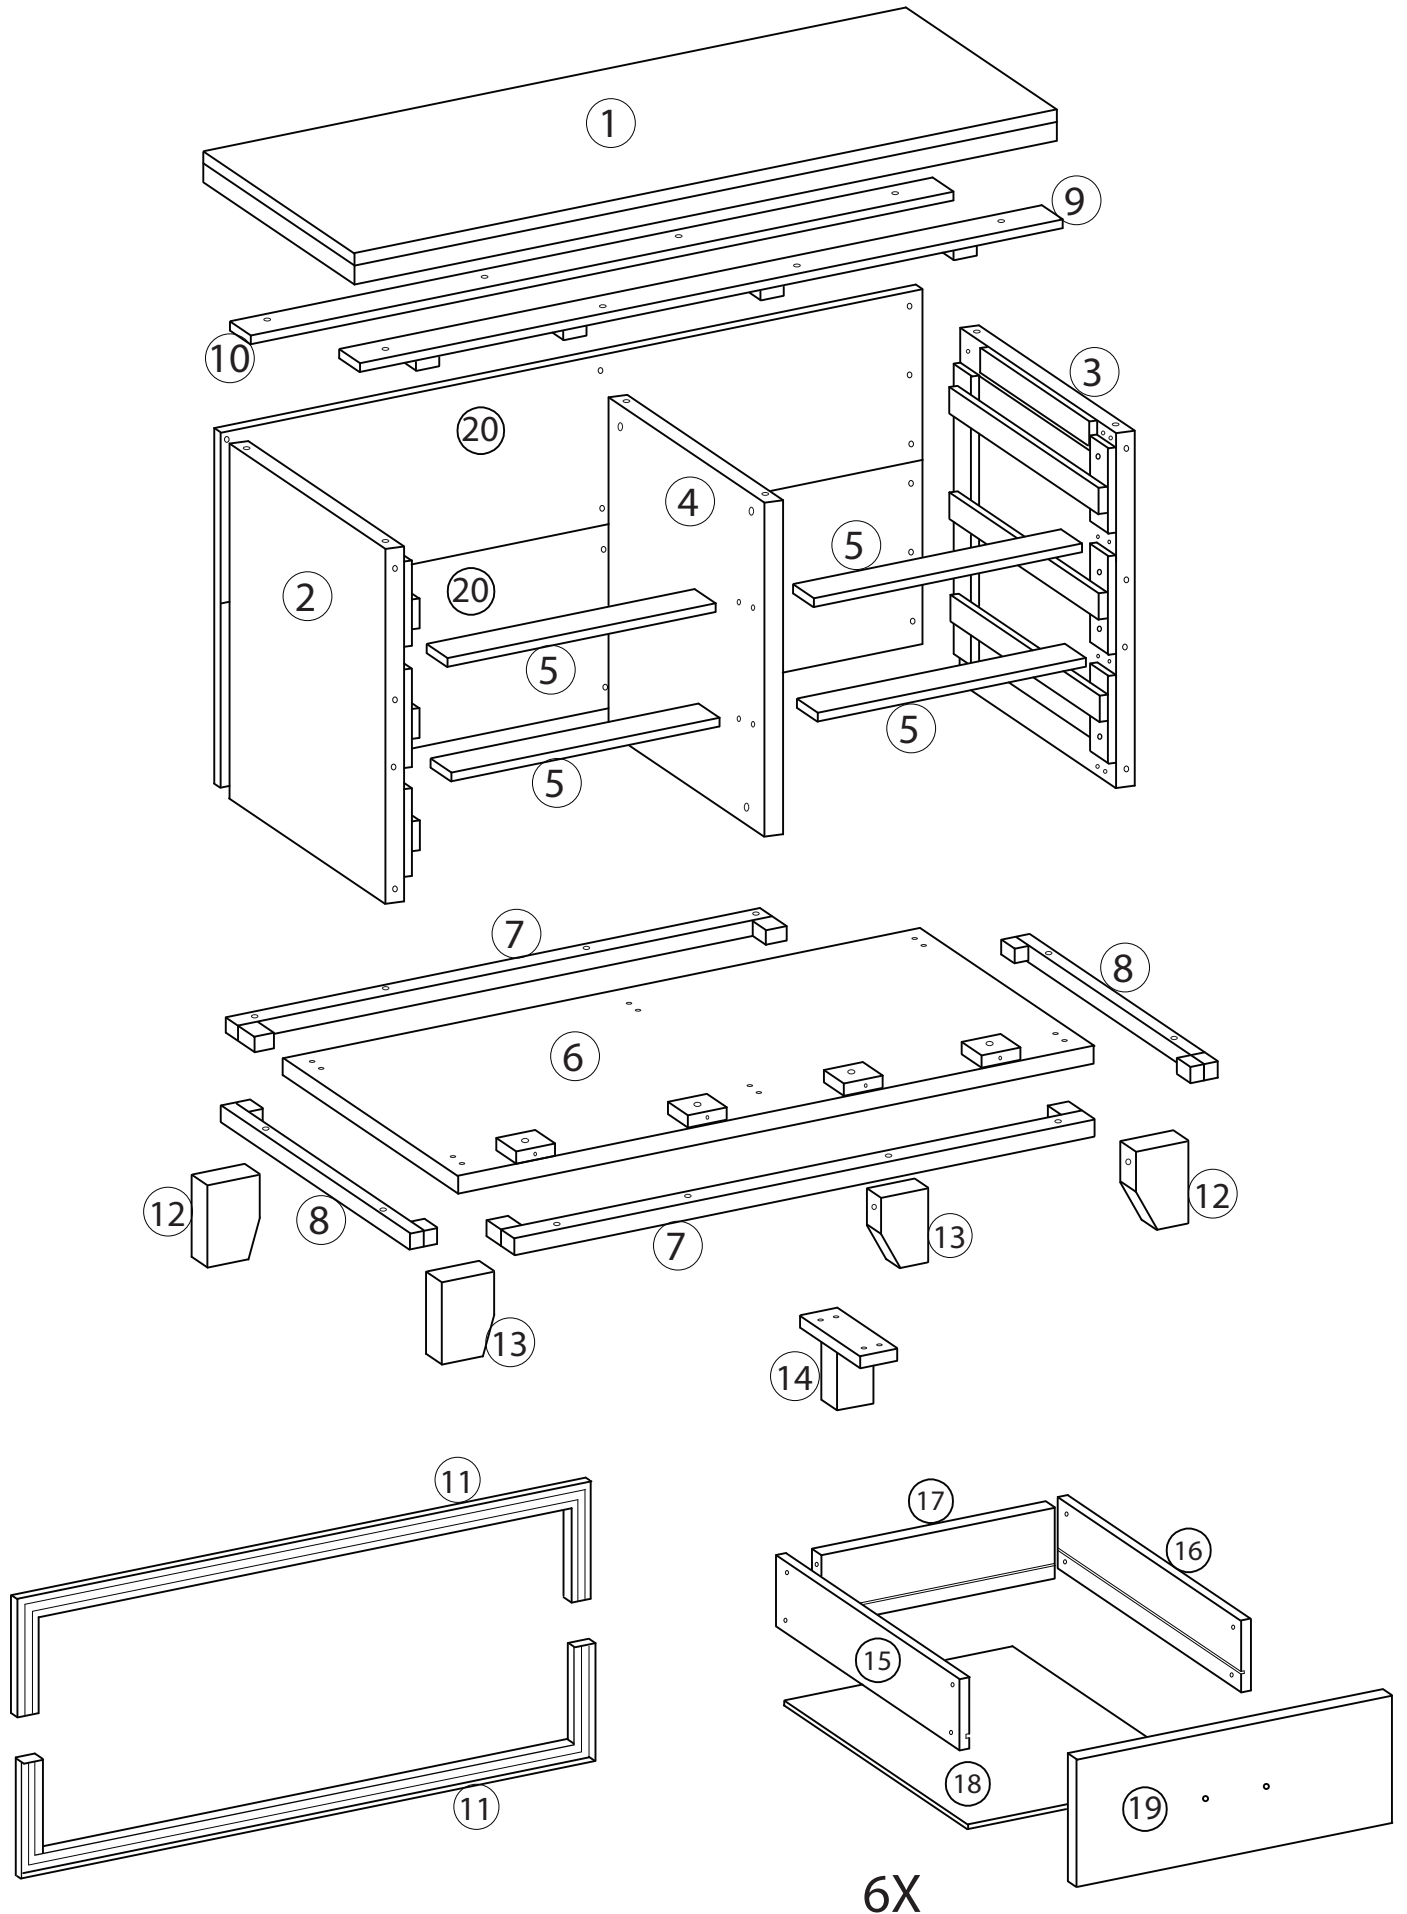











MODEL : DRESSER



6X

ASSEMBLY INSTRUCTION


PART LIST

<p>1</p>  <p>TOP PANEL</p> <p>x 1</p>	<p>2</p>  <p>SIDE PANEL - L</p> <p>x 1</p>	<p>3</p>  <p>SIDE PANEL - R</p> <p>x 1</p>	<p>4</p>  <p>CENTER PANEL</p> <p>x 1</p>
<p>5</p>  <p>DRAWER SUPPORT</p> <p>x 4</p>	<p>6</p>  <p>BOTTOM PANEL</p> <p>x 1</p>	<p>7</p>  <p>BOTTOM APRON-F/B</p> <p>x 2</p>	<p>8</p>  <p>BOTTOM APRON-L/R</p> <p>x 2</p>
<p>9</p>  <p>TOP FRONT SUPPORT</p> <p>x 1</p>	<p>10</p>  <p>TOP BACK SUPPORT</p> <p>x 1</p>	<p>11</p>  <p>DECO FRAME</p> <p>x 2</p>	<p>12</p>  <p>SIDE LEG - L</p> <p>x 2</p>
<p>13</p>  <p>SIDE LEG - R</p> <p>x 2</p>	<p>14</p>  <p>CENTER LEG</p> <p>x 1</p>	<p>15</p>  <p>INSIDE DRAWER - L</p> <p>x 6</p>	<p>16</p>  <p>INSIDE DRAWER - R</p> <p>x 6</p>
<p>17</p>  <p>INSIDE DRAWER-BACK</p> <p>x 6</p>	<p>18</p>  <p>INSIDE DRAWER-BOTTOM</p> <p>x 6</p>	<p>19</p>  <p>FRONT DRAWER PANEL</p> <p>x 6</p>	<p>20</p>  <p>BACK PANEL</p> <p>x 2</p>

ASSEMBLY INSTRUCTION

HARDWARE LIST


(A)



M4 x 28mm
CSK SCREW

x 4

(B)



M4 x 25mm
CSK SCREW

x 24


(C)



M3.5 x 16mm
CSK SCREW

x 60


(D)



M4 x 30mm
CSK SCREW

x 44

(E)



CAM BOLT

x 64


(F)



CAM LOCK

x 64

(G)



M6 x 30mm
WOOD DOWEL

x 16

(H)



M4 x 15mm
THRUSTER SCREW

x 12


(I)



HANDLE

x 6

(J)



RUNNER

x 12

(K)




ANTI TIPPING


x 1

ASSEMBLY INSTRUCTION

STEP 1

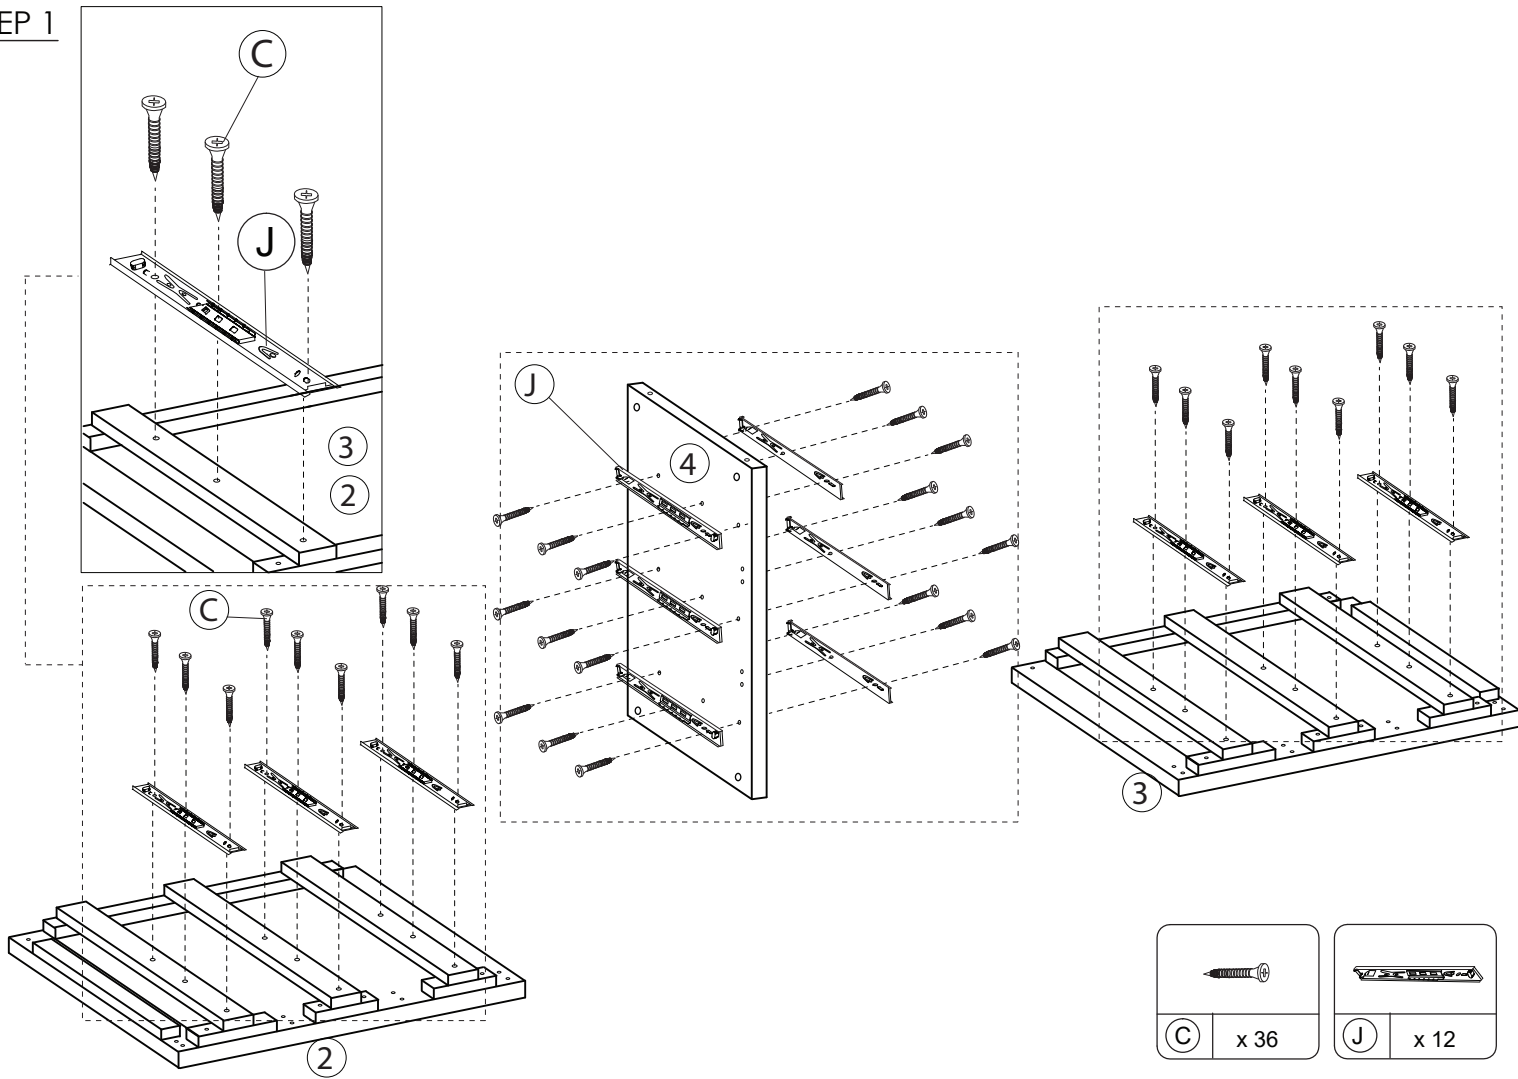


STEP 2

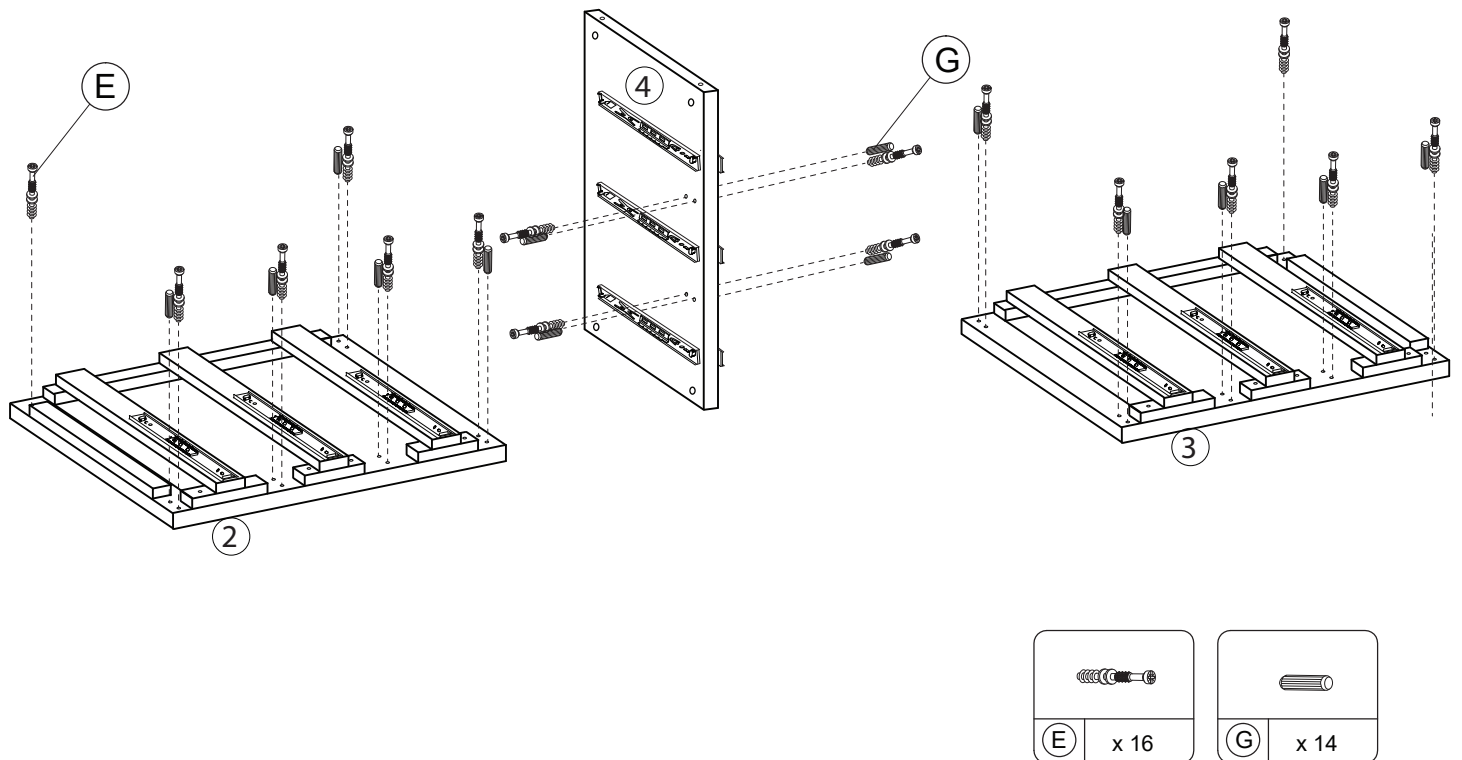


ASSEMBLY INSTRUCTION

STEP 3

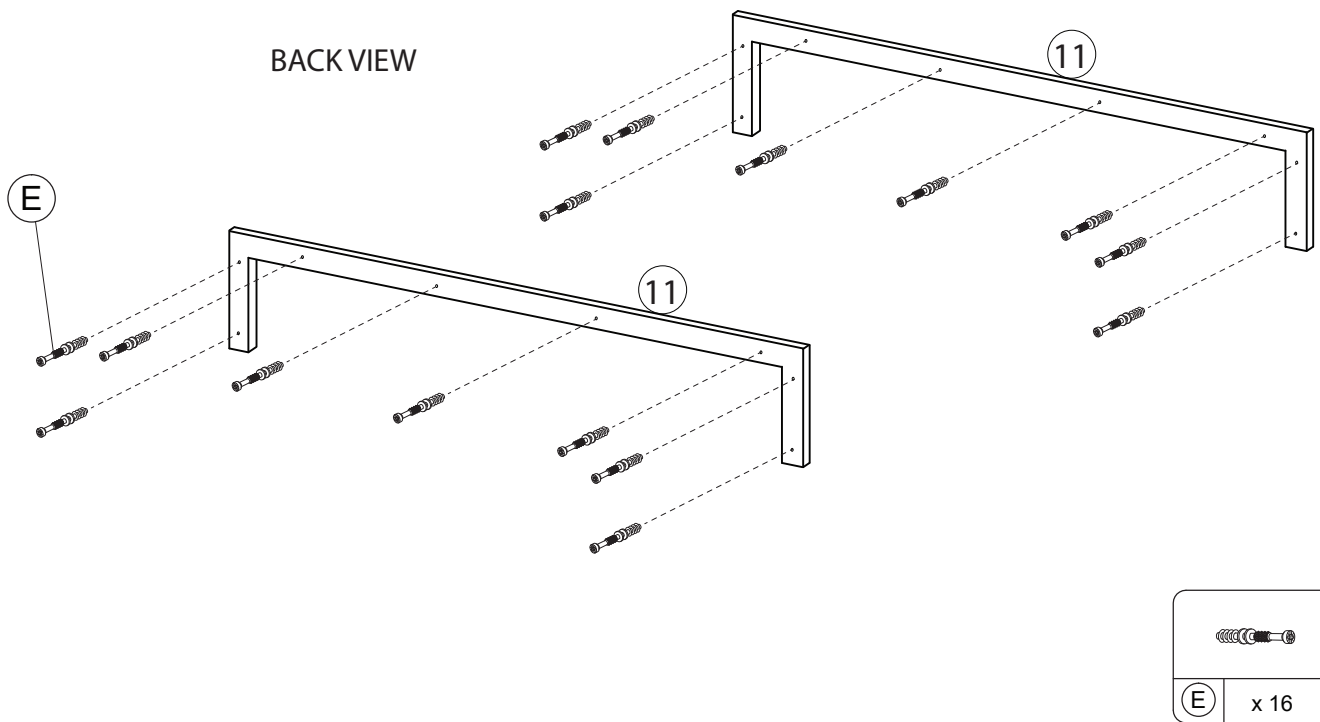


STEP 4

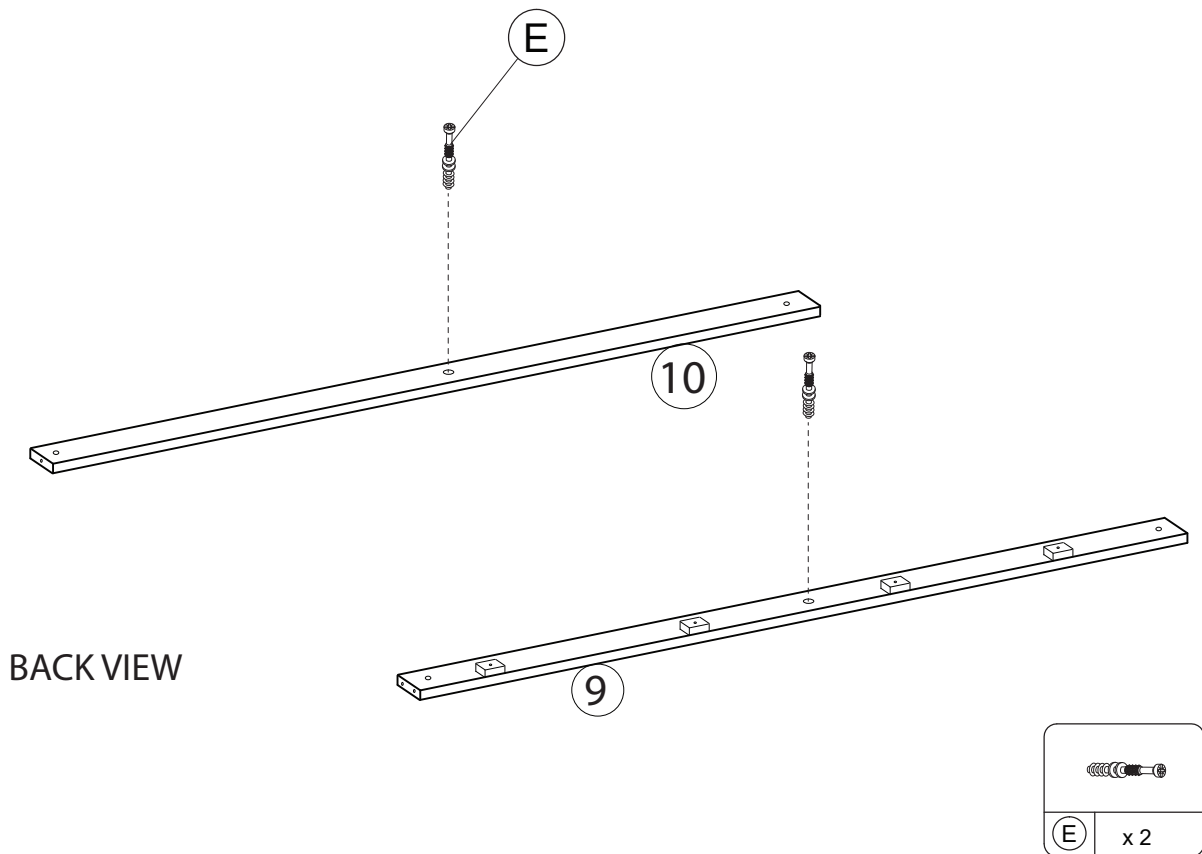


ASSEMBLY INSTRUCTION

STEP 5

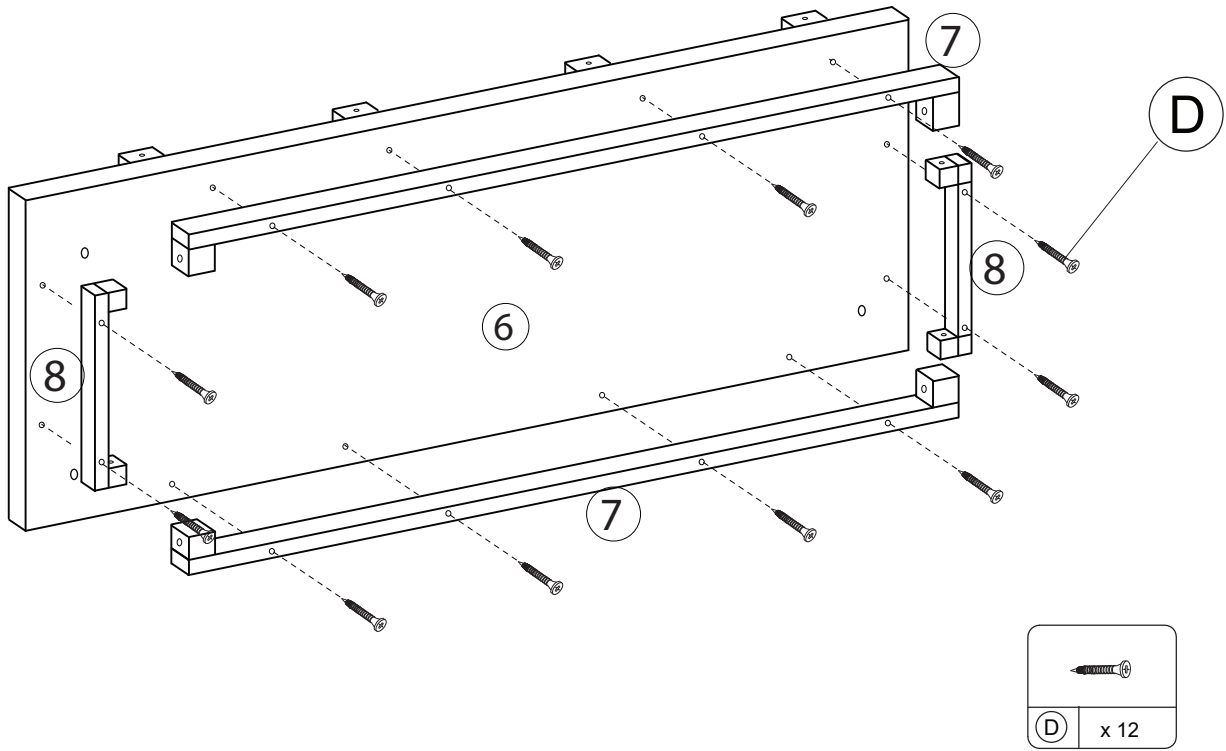


STEP 6

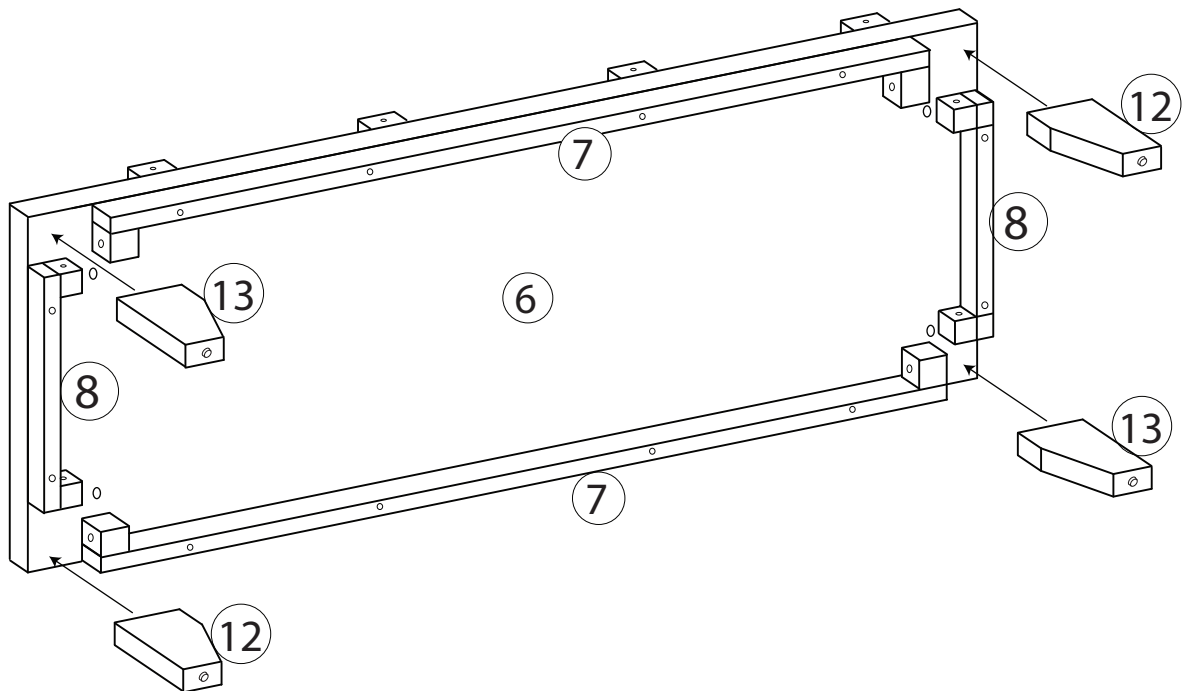


ASSEMBLY INSTRUCTION

STEP 7

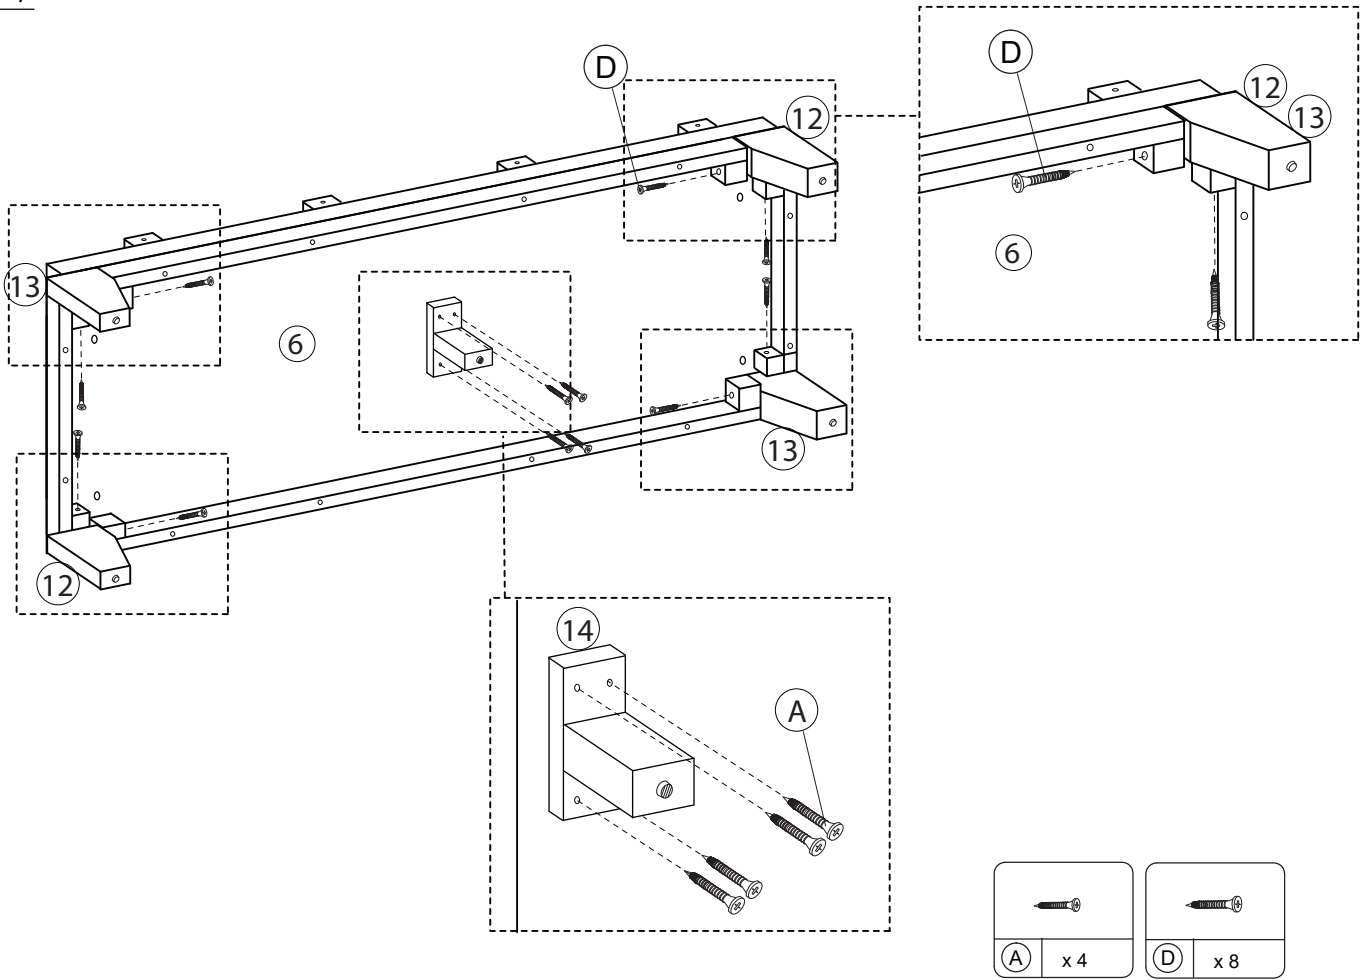


STEP 8

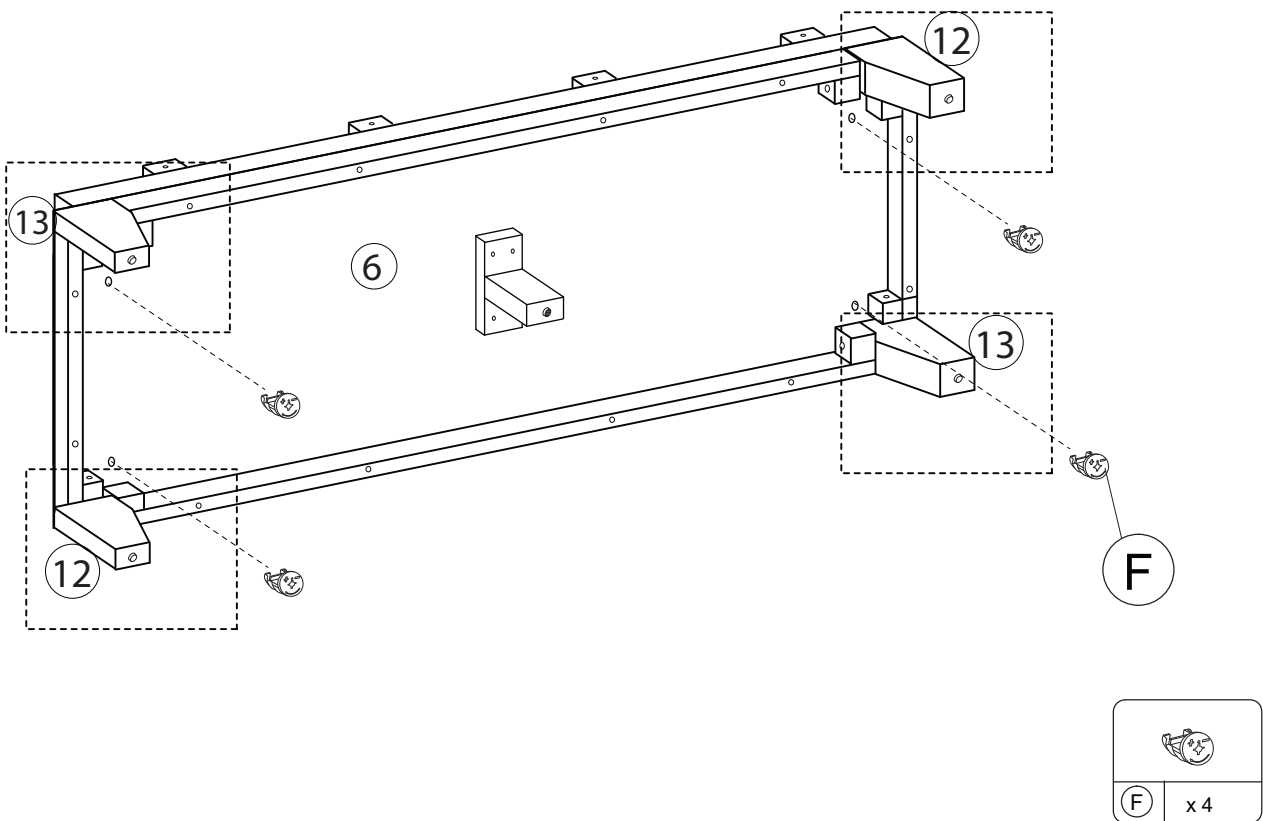


ASSEMBLY INSTRUCTION

STEP 9


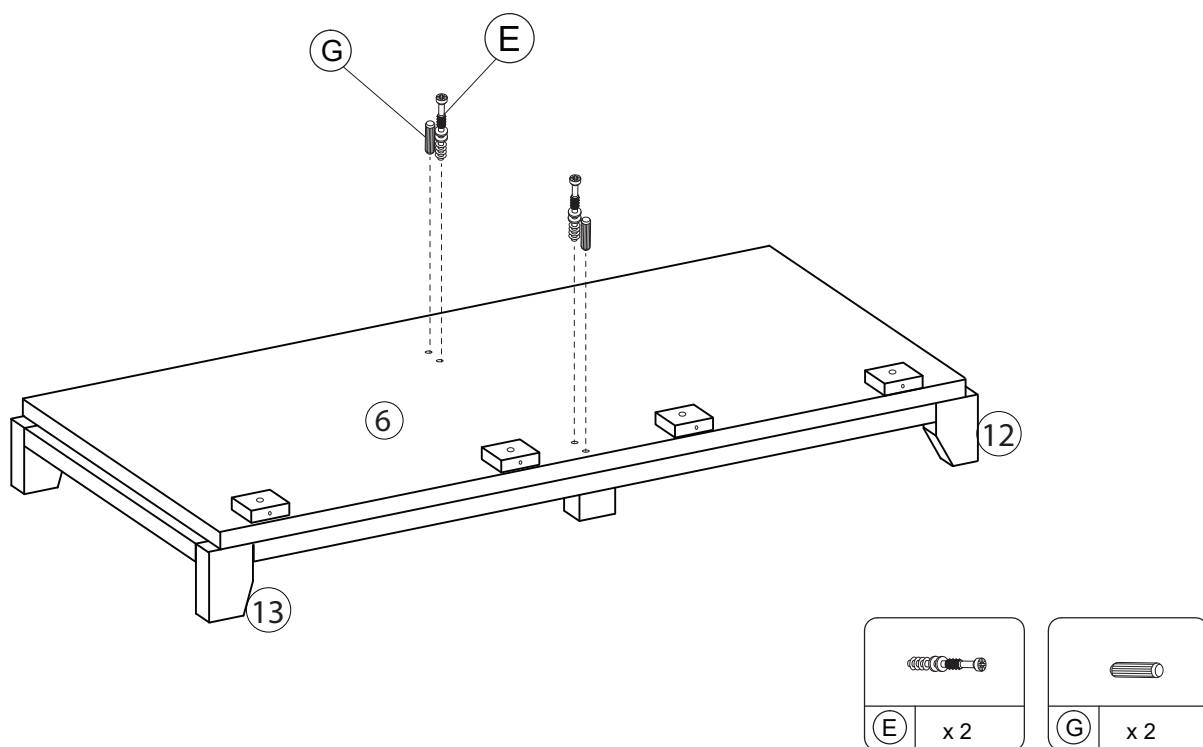


STEP 10


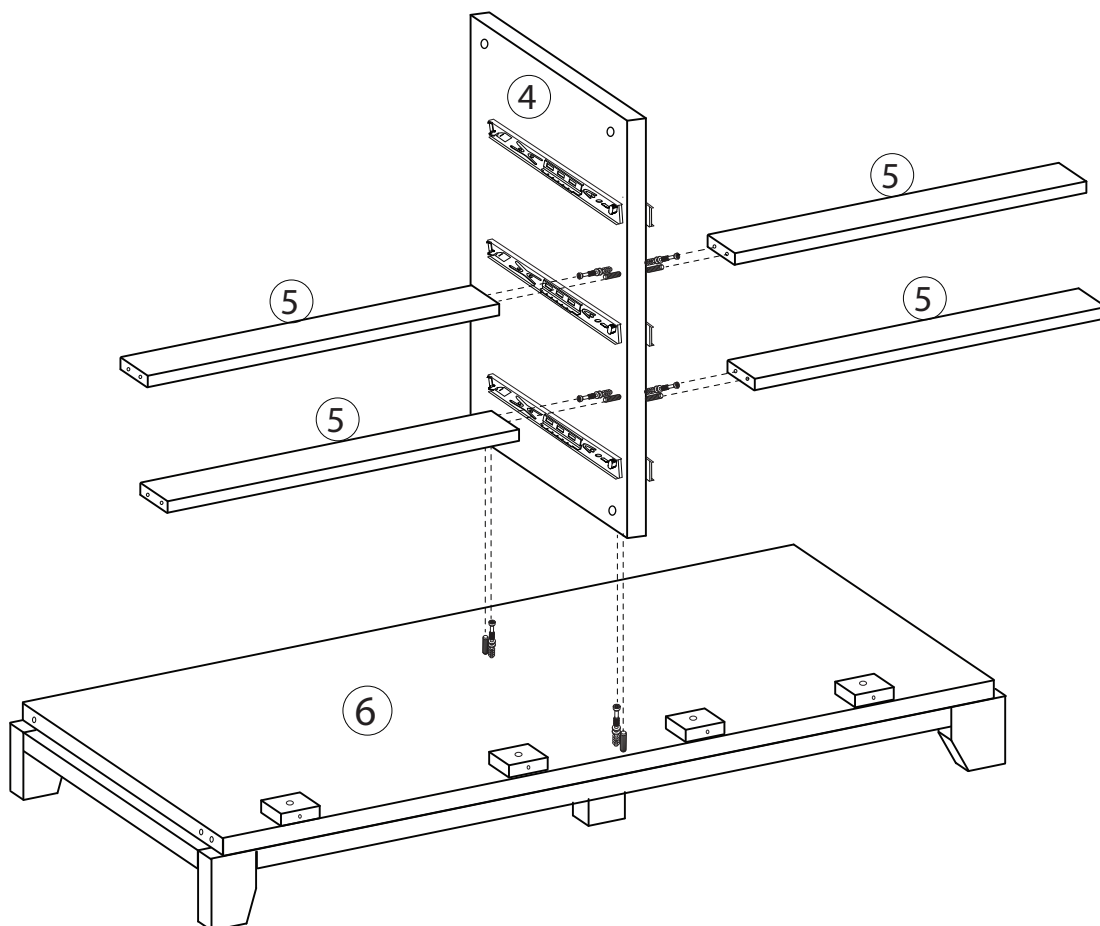


ASSEMBLY INSTRUCTION

STEP 11

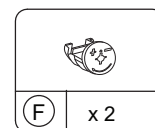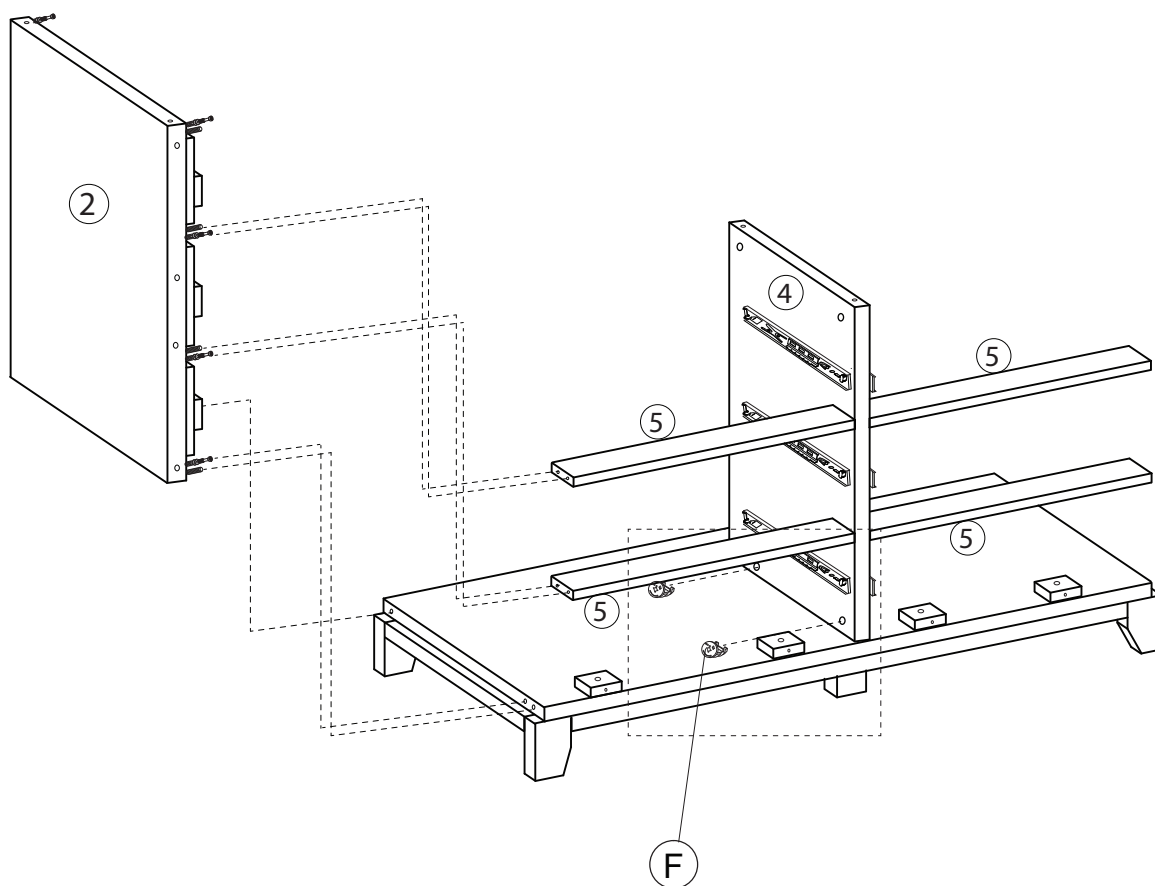


STEP 12

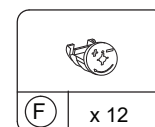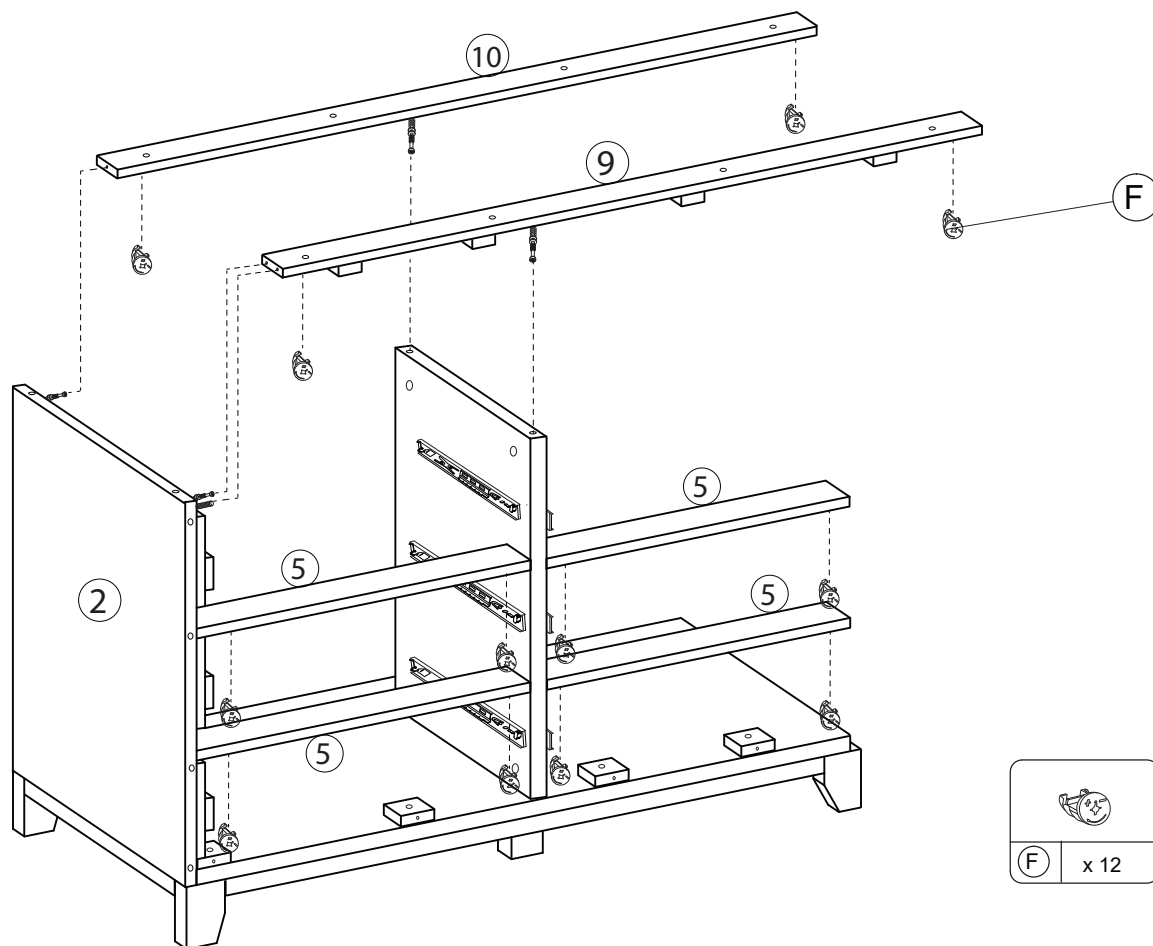


ASSEMBLY INSTRUCTION

STEP 13

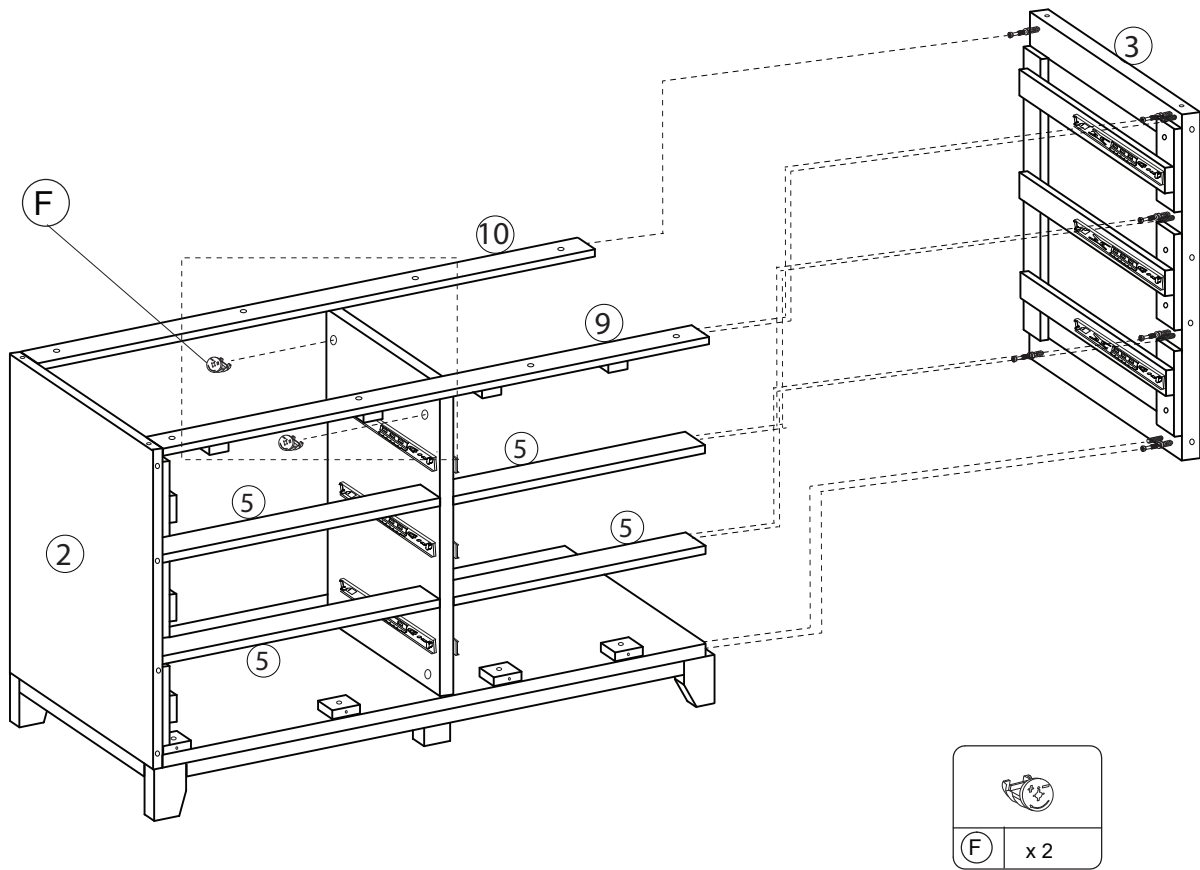


STEP 14

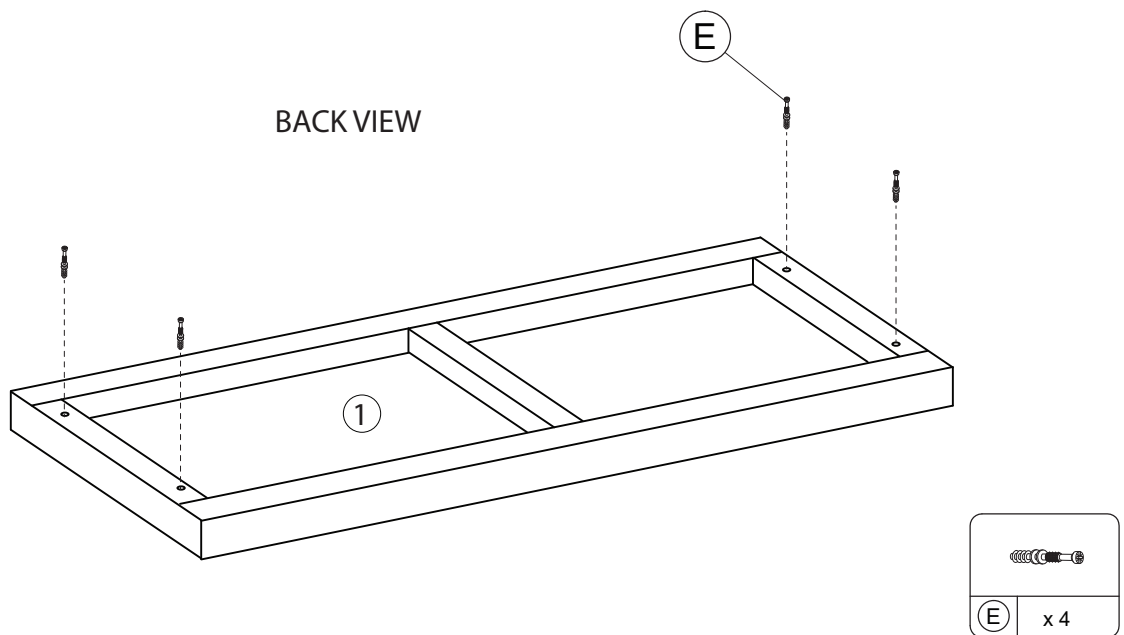


ASSEMBLY INSTRUCTION

STEP 15

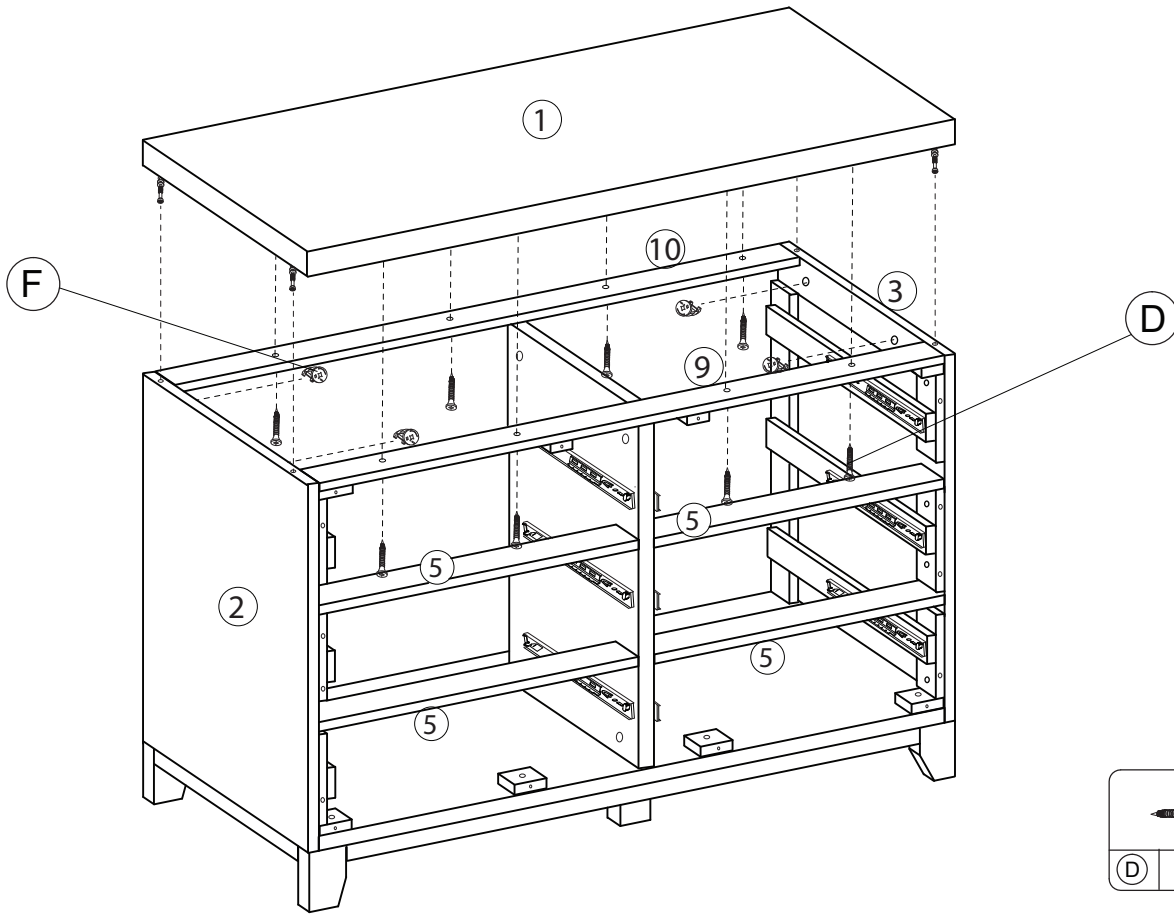


STEP 16

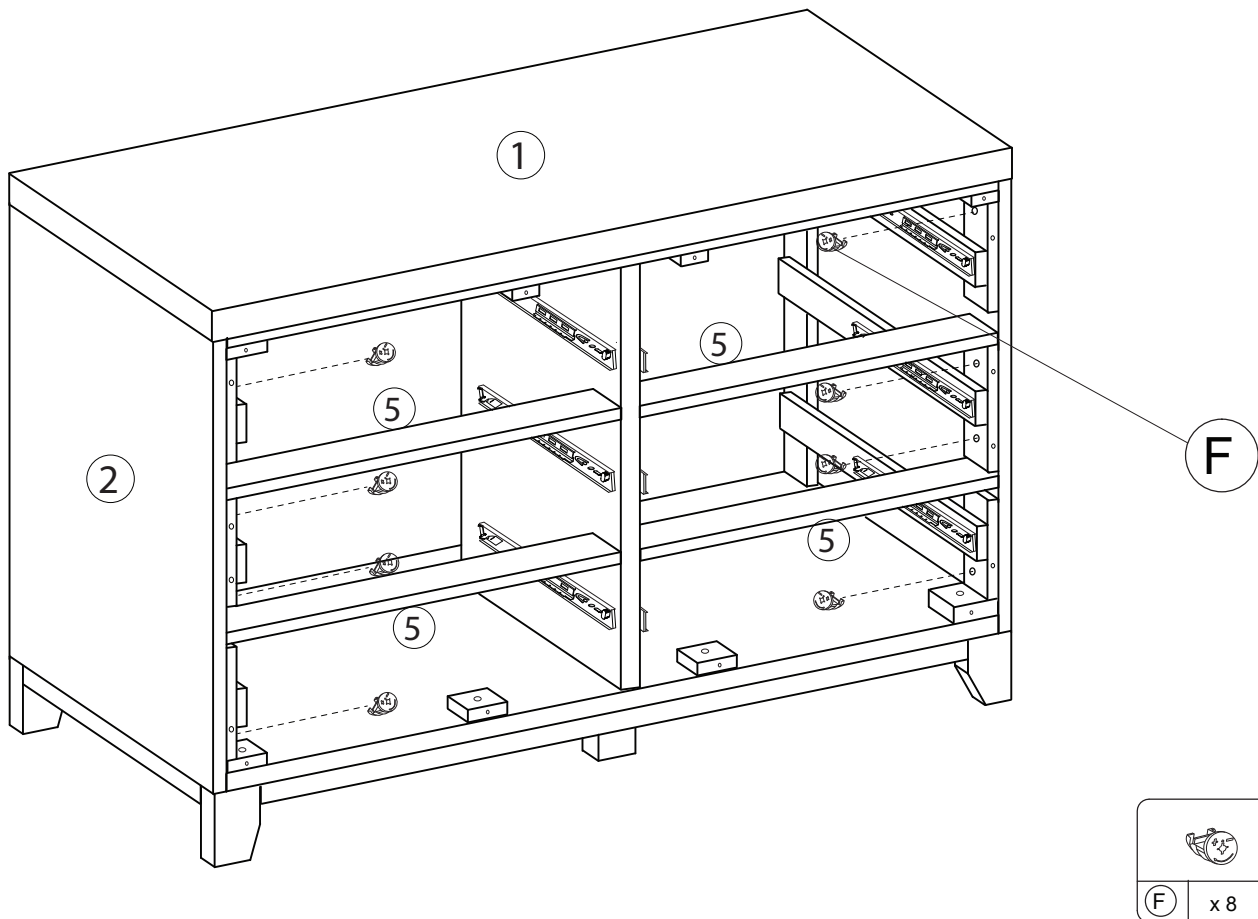


ASSEMBLY INSTRUCTION

STEP 17

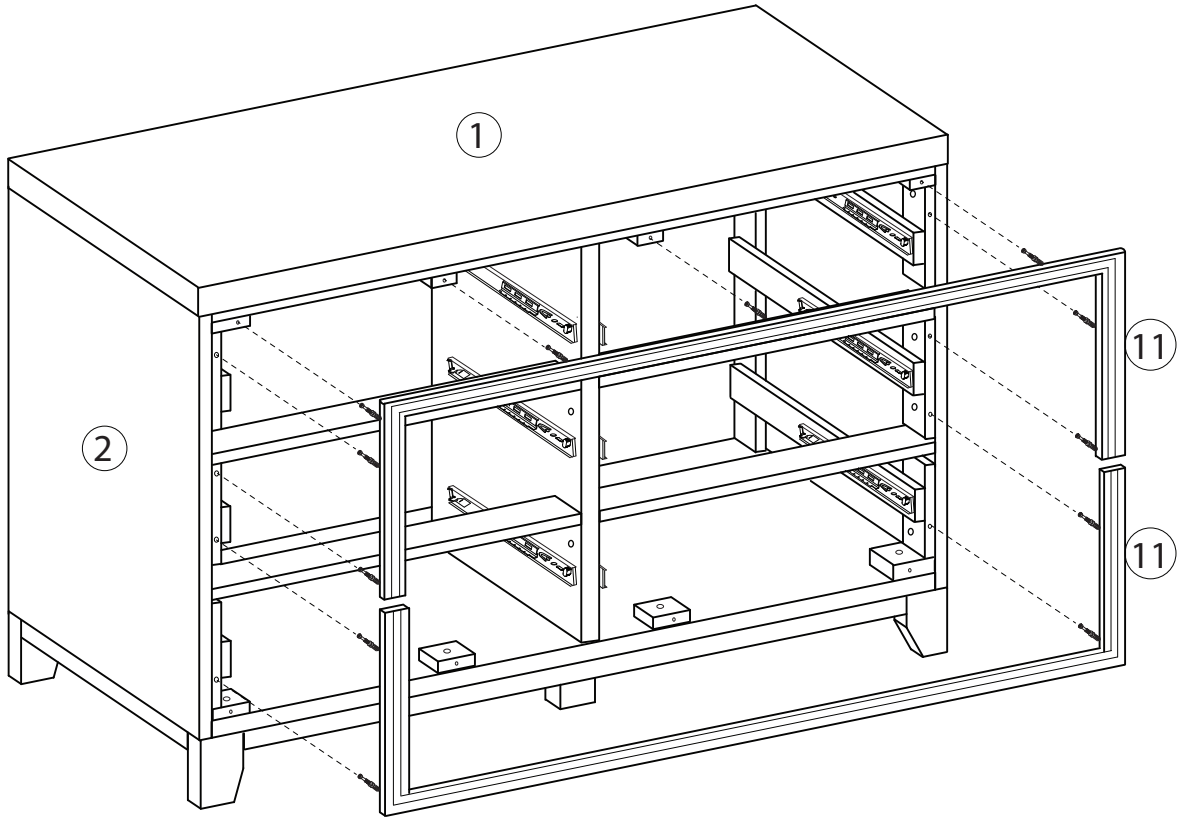


STEP 18

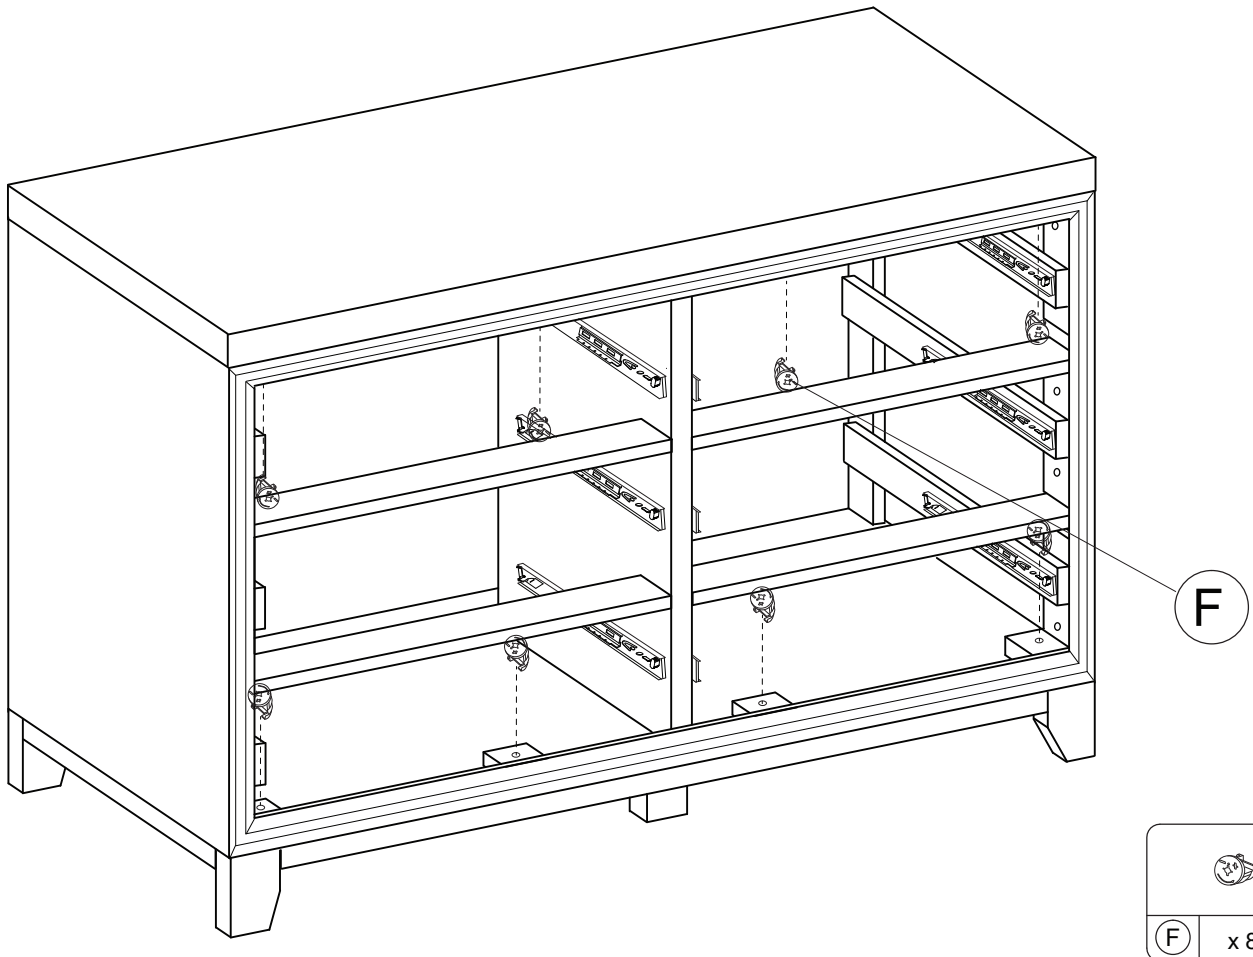


ASSEMBLY INSTRUCTION

STEP 21


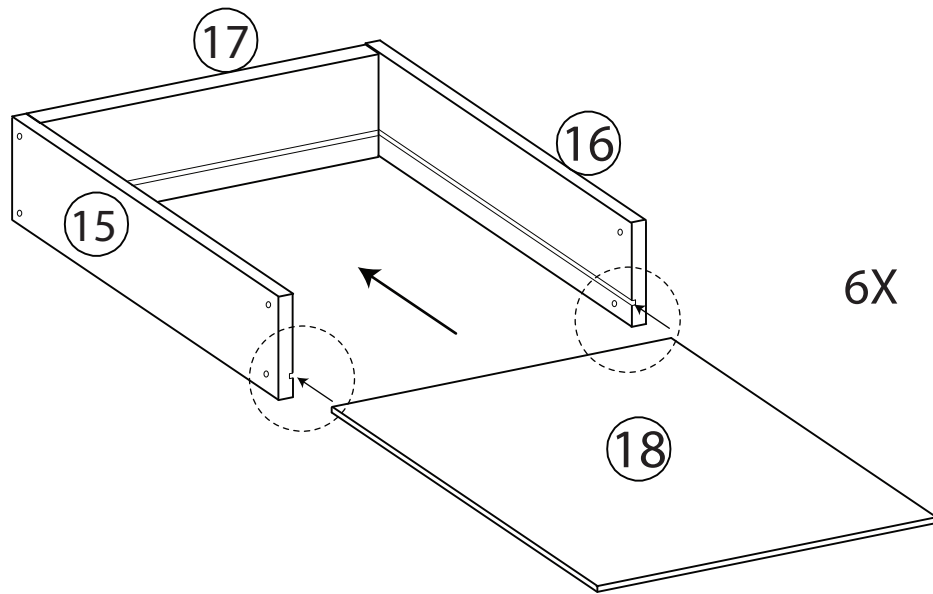


STEP 22



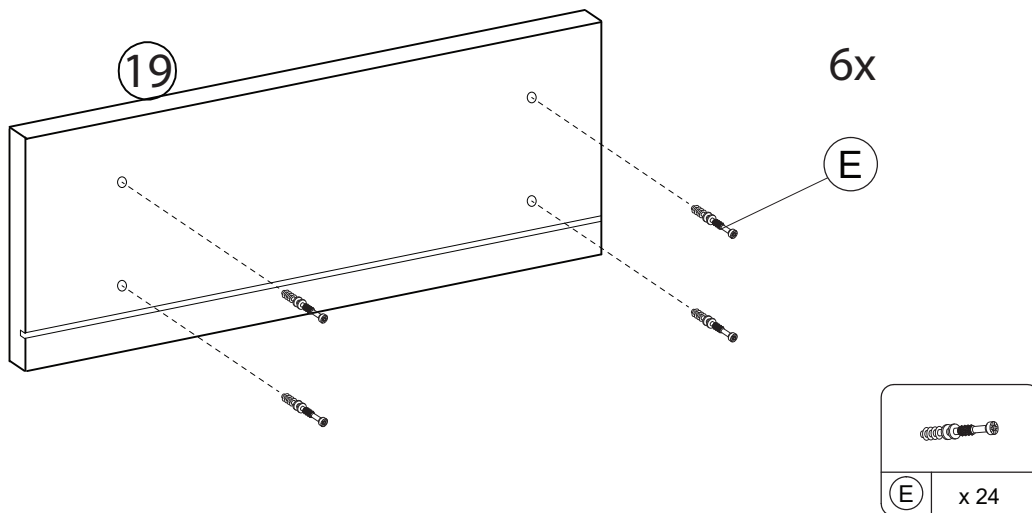


ASSEMBLY INSTRUCTION

STEP 23

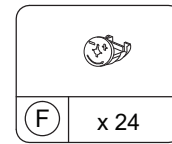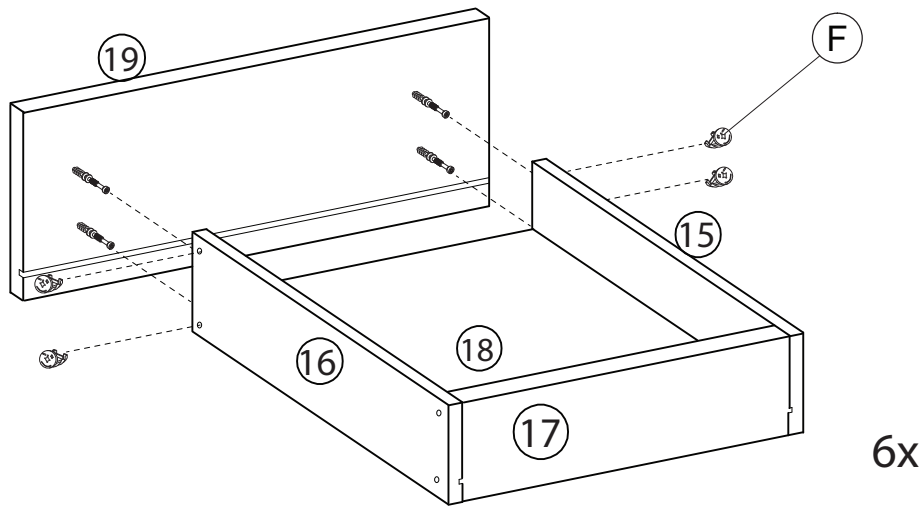


STEP 24

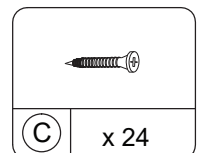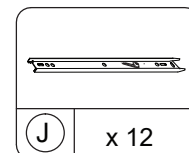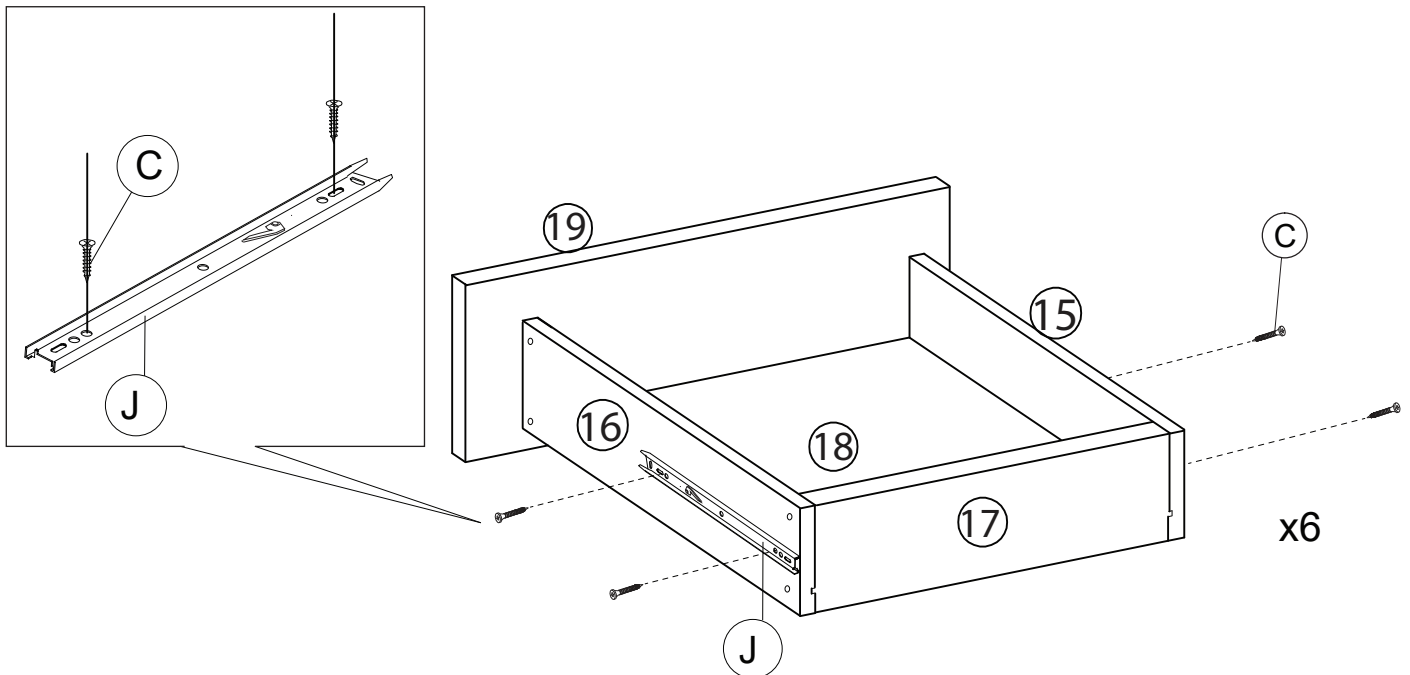


ASSEMBLY INSTRUCTION

STEP 25

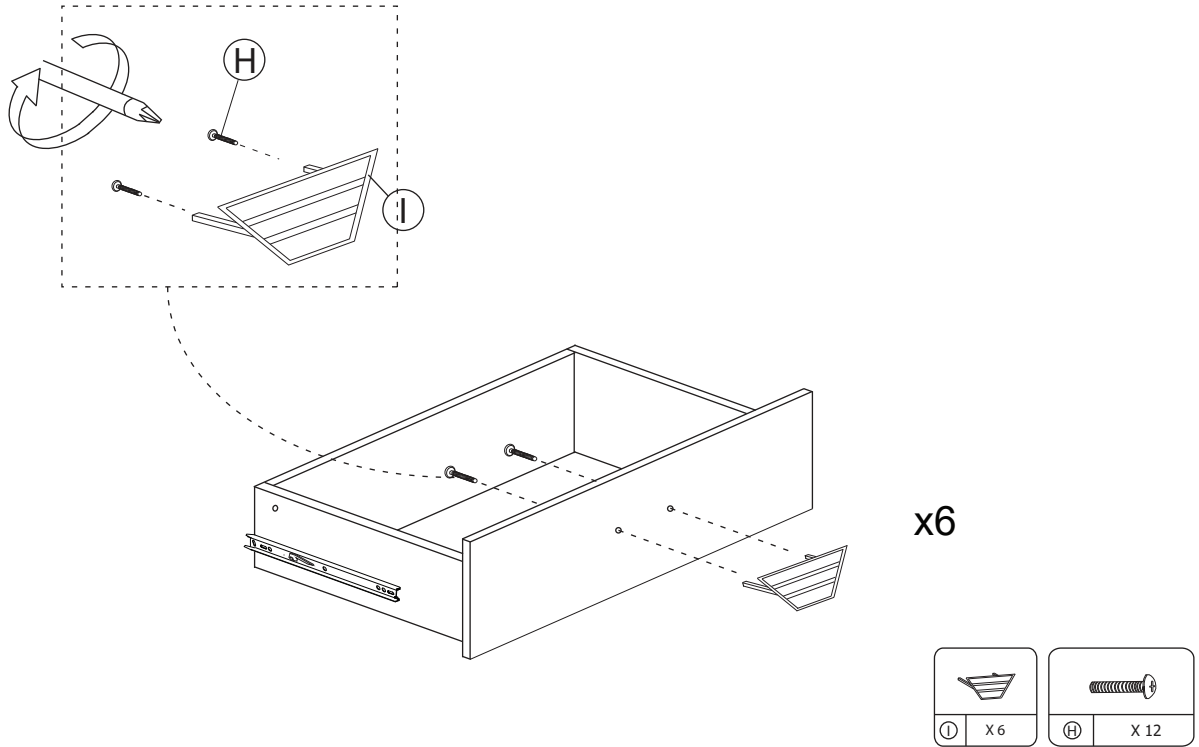

STEP 26

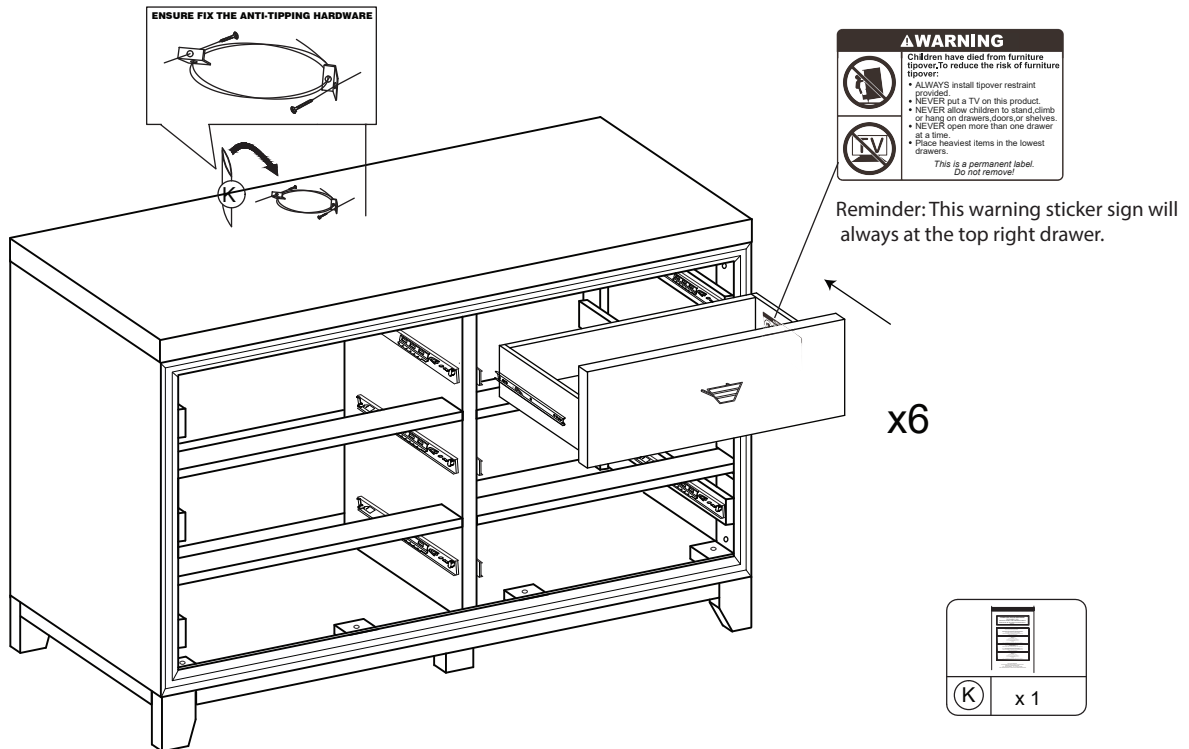

ASSEMBLY INSTRUCTION

STEP 27

