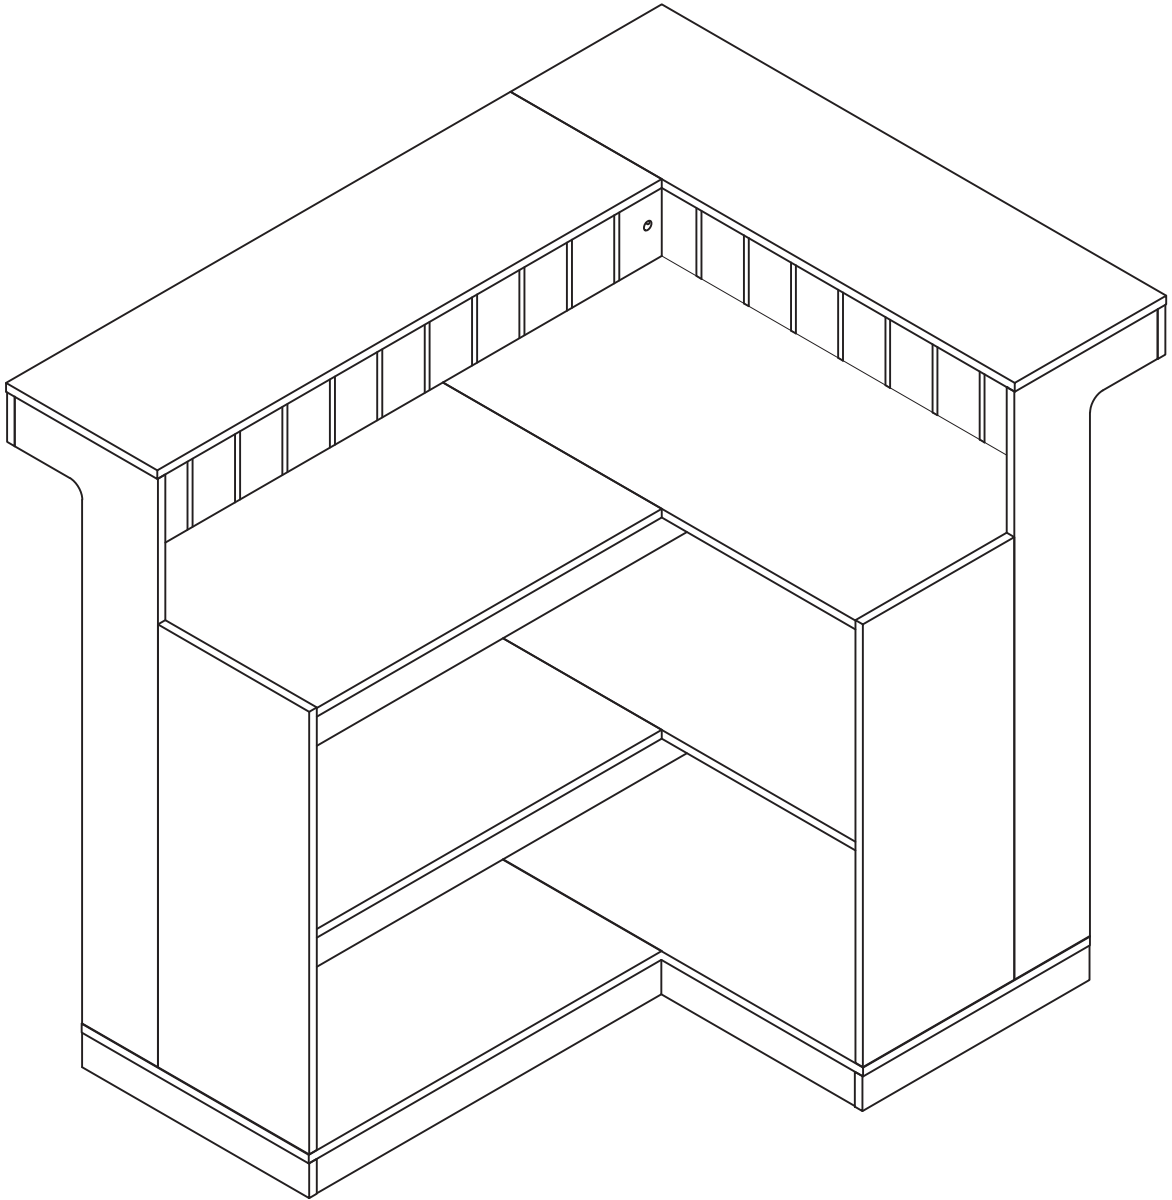


# Assembly Instructions



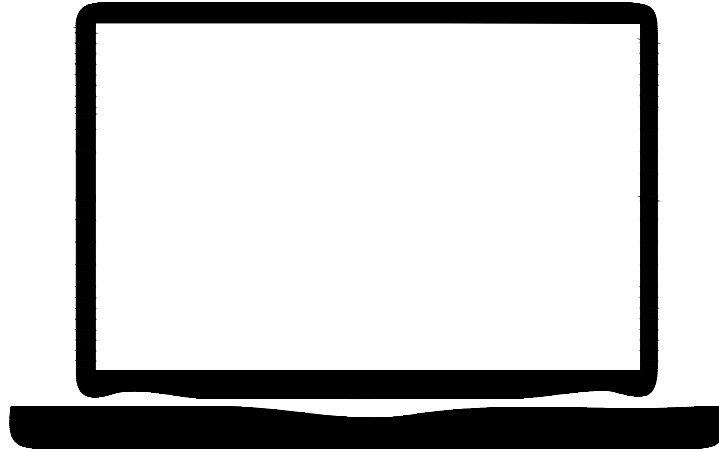
---

**Bar Table**

---

# Contact Us

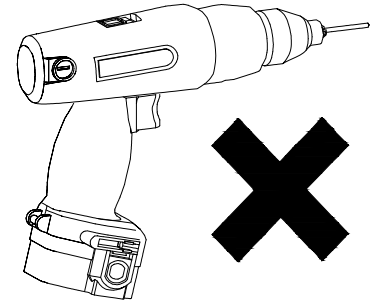
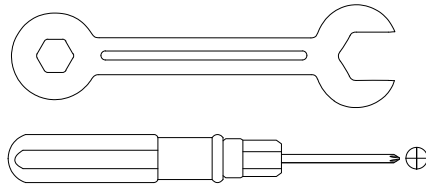
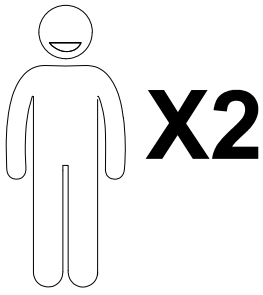
## We're here to help you.



Your satisfaction is our top priority. If you encounter any issues with this product, such as missing or damaged parts, we're here to help. Please retain the original packaging and take photos of the packaging and the product, then contact us as soon as possible.

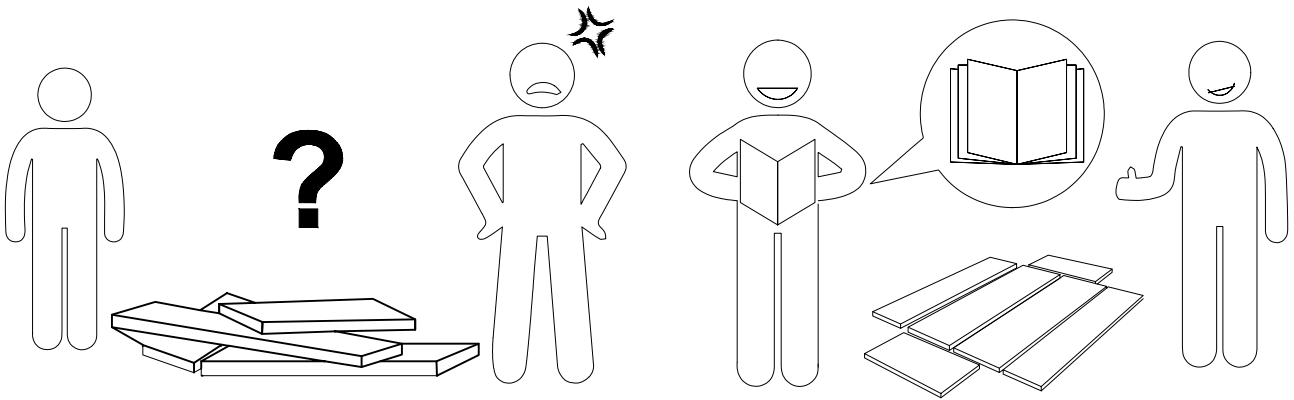
### Warm Tips

1. Carefully read these instructions and keep them for future reference.
2. Check the parts list and confirm everything's there before starting assembly.
3. When assembling, put all parts on a soft, smooth surface like a carpet to avoid scratches.
4. Don't fully tighten screws until all parts are confirmed in place to avoid misalignment.



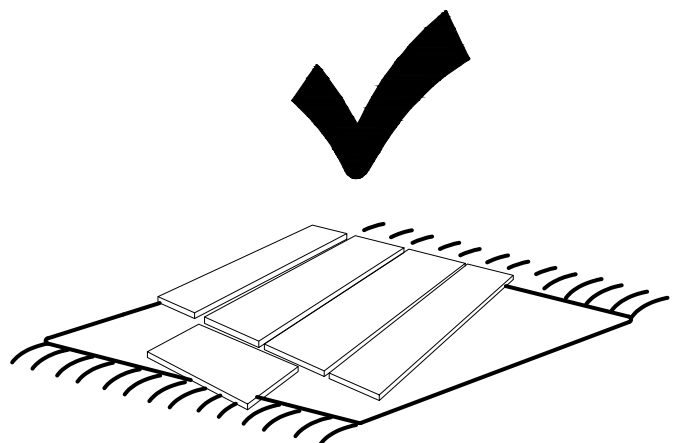
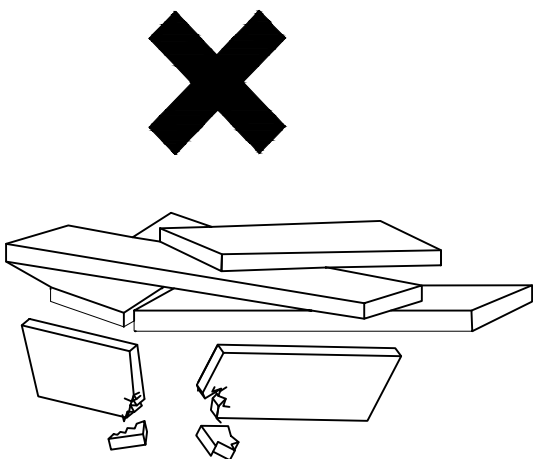
We recommend using hand tools for assembly.

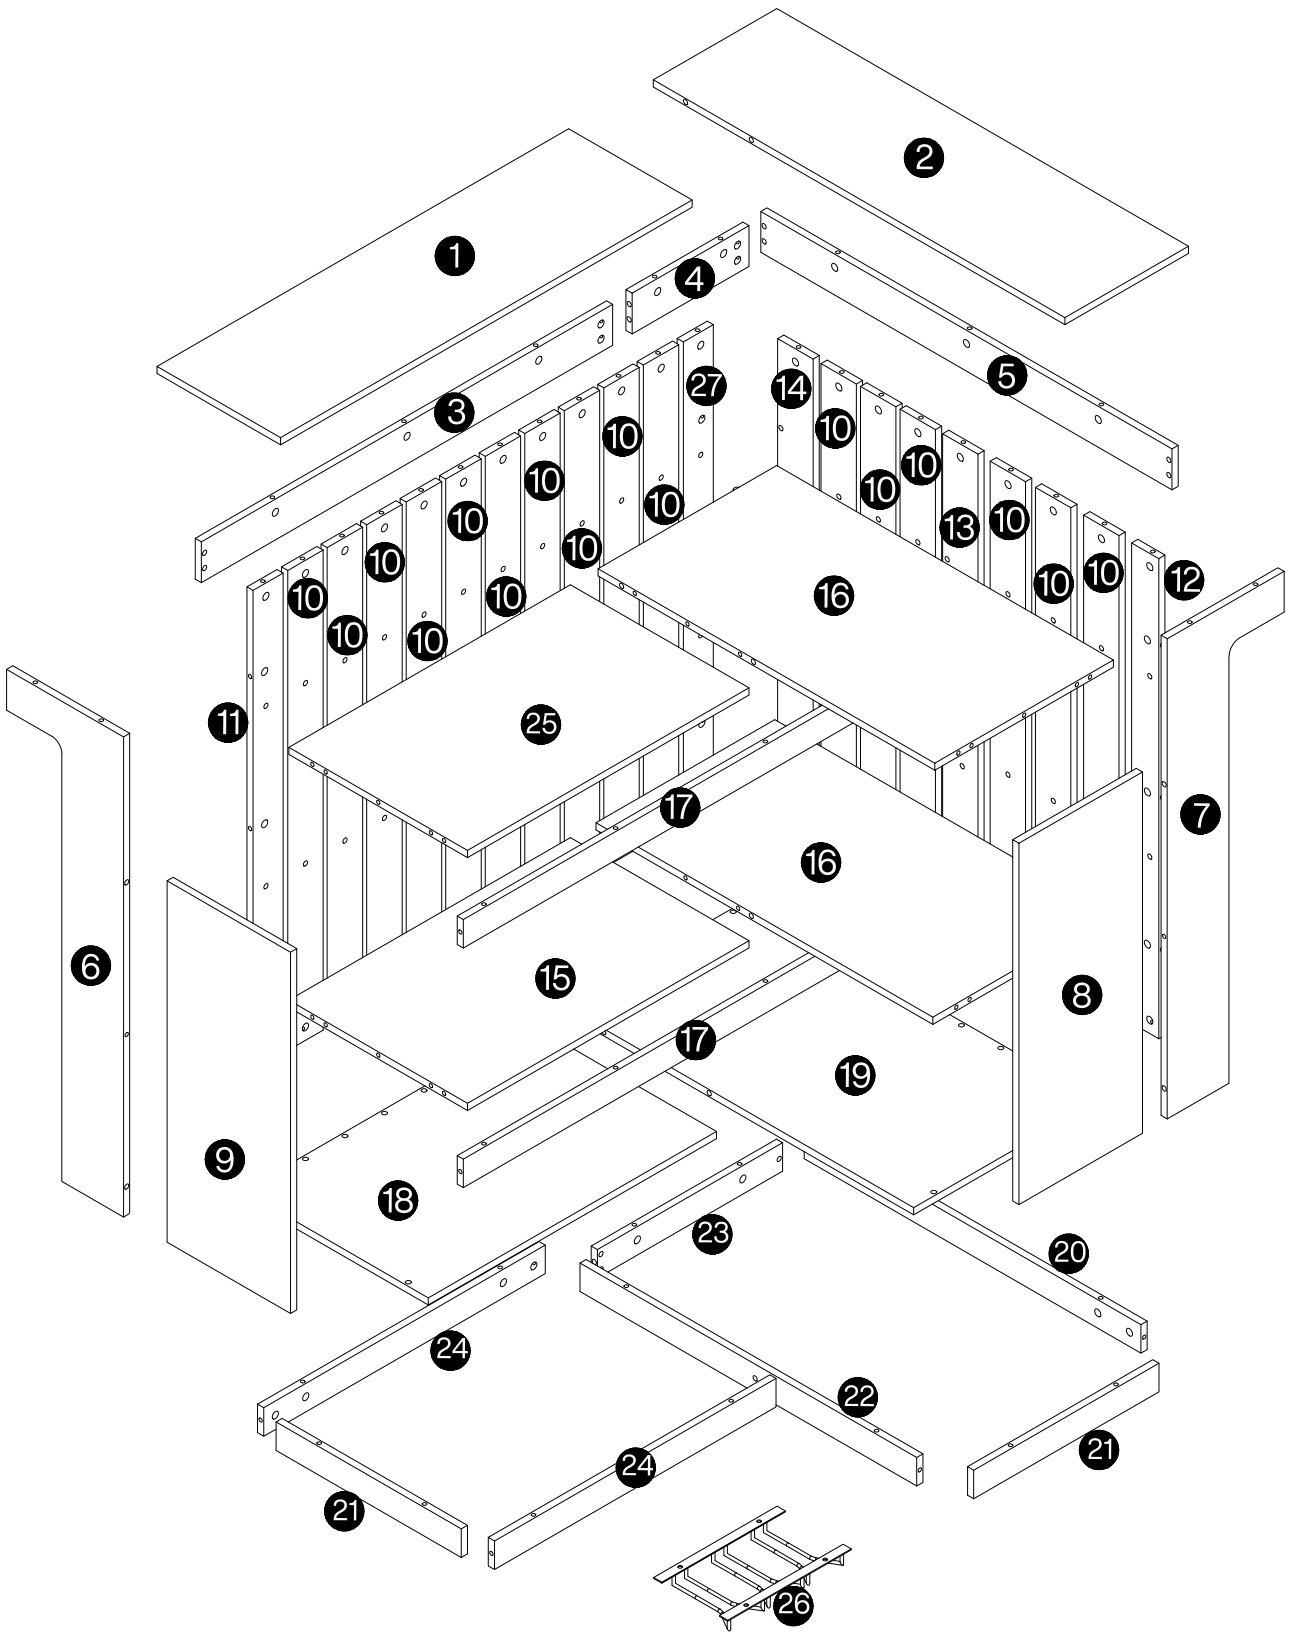
If an electric screwdriver is used, reduce power and torque to avoid damage to the product.



## AVOID SCRATCHES

In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

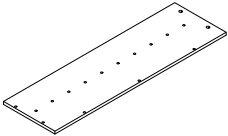
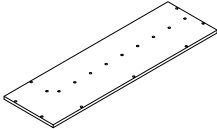
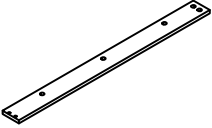

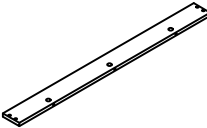
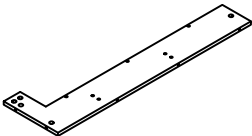
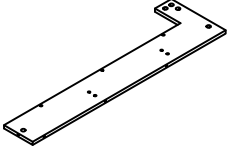
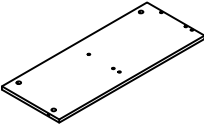
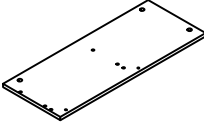
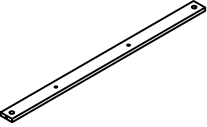
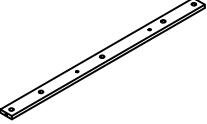
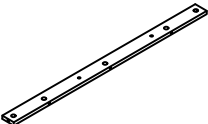
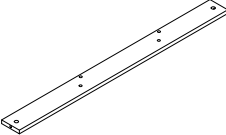
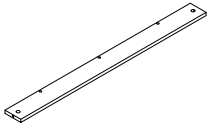
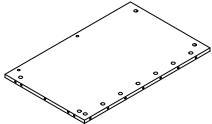
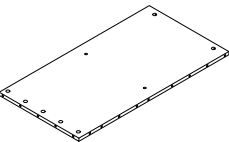
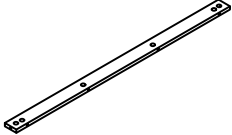
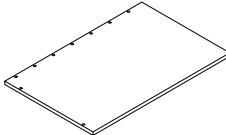
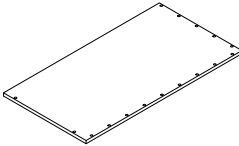
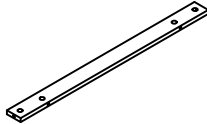

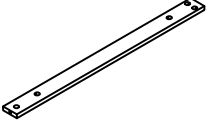

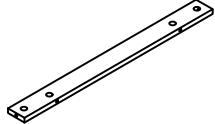
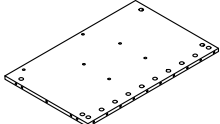

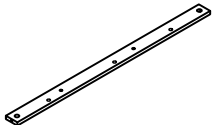




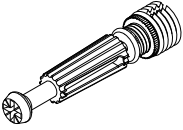





**⚠ Caution**

Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. Contact us for a free replacement if you encounter any damaged or missing parts.

# Parts List

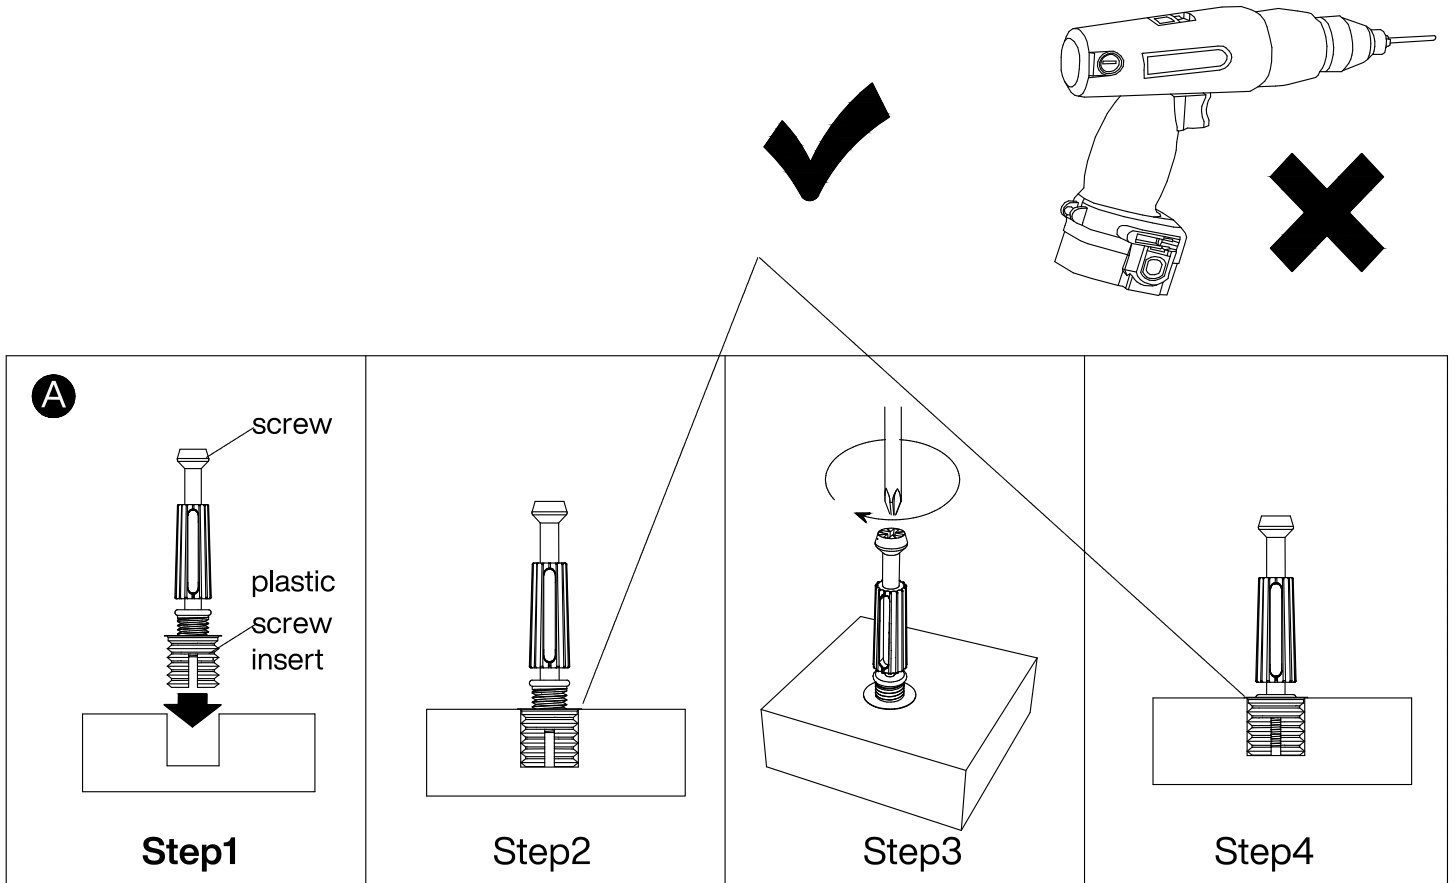
<p><b>1</b></p>  <p>1 pc</p>	<p><b>2</b></p>  <p>1 pc</p>	<p><b>3</b></p>  <p>1 pc</p>	<p><b>4</b></p>  <p>1 pc</p>	<p><b>5</b></p>  <p>1 pc</p>
<p><b>6</b></p>  <p>1 pc</p>	<p><b>7</b></p>  <p>1 pc</p>	<p><b>8</b></p>  <p>1 pc</p>	<p><b>9</b></p>  <p>1 pc</p>	<p><b>10</b></p>  <p>16 pcs</p>
<p><b>11</b></p>  <p>1 pc</p>	<p><b>12</b></p>  <p>1 pc</p>	<p><b>13</b></p>  <p>1 pc</p>	<p><b>14</b></p>  <p>1 pc</p>	<p><b>15</b></p>  <p>1 pc</p>
<p><b>16</b></p>  <p>1 pc</p>	<p><b>17</b></p>  <p>2 pcs</p>	<p><b>18</b></p>  <p>1 pc</p>	<p><b>19</b></p>  <p>1 pc</p>	<p><b>20</b></p>  <p>1 pc</p>
<p><b>21</b></p>  <p>2 pcs</p>	<p><b>22</b></p>  <p>1 pc</p>	<p><b>23</b></p>  <p>1 pc</p>	<p><b>24</b></p>  <p>2 pcs</p>	<p><b>25</b></p>  <p>1 pc</p>
<p><b>26</b></p>  <p>1 pc</p>	<p><b>27</b></p>  <p>1 pc</p>			

# Hardware List

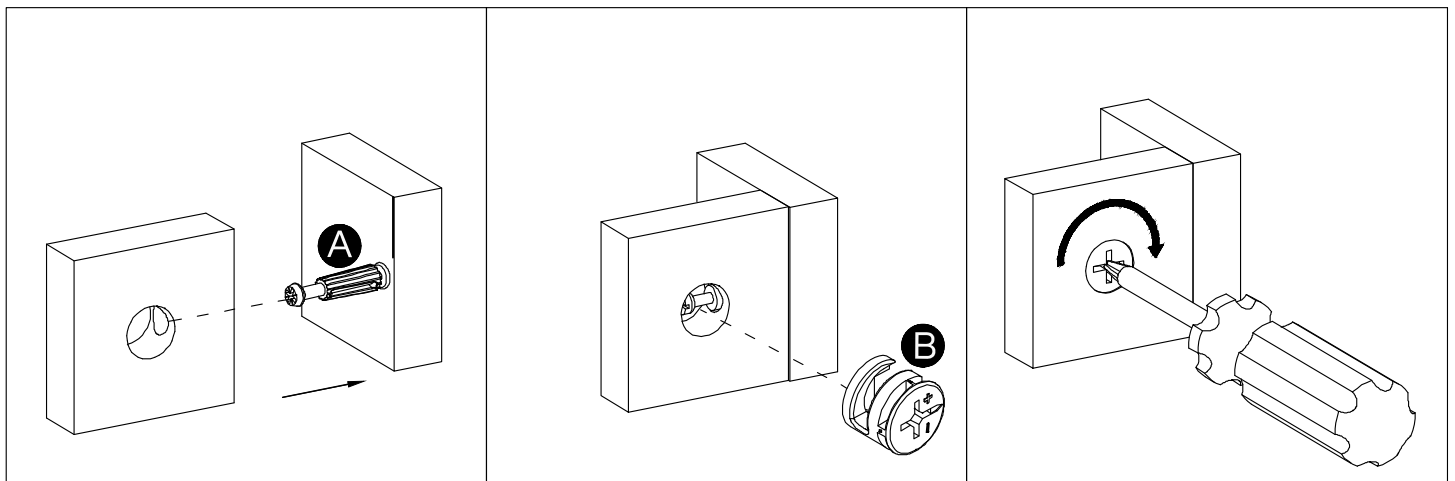
A	B	C	D	E	F
 <p>M6x40mm</p>	 <p>Ø15x12mm</p>	 <p>Ø8x30mm</p>	 <p>Ø6x12mm</p>		
172 pcs	172 pcs	21 pcs	4 pcs	12pcs	1 pc


## Installation of Cams and Pins

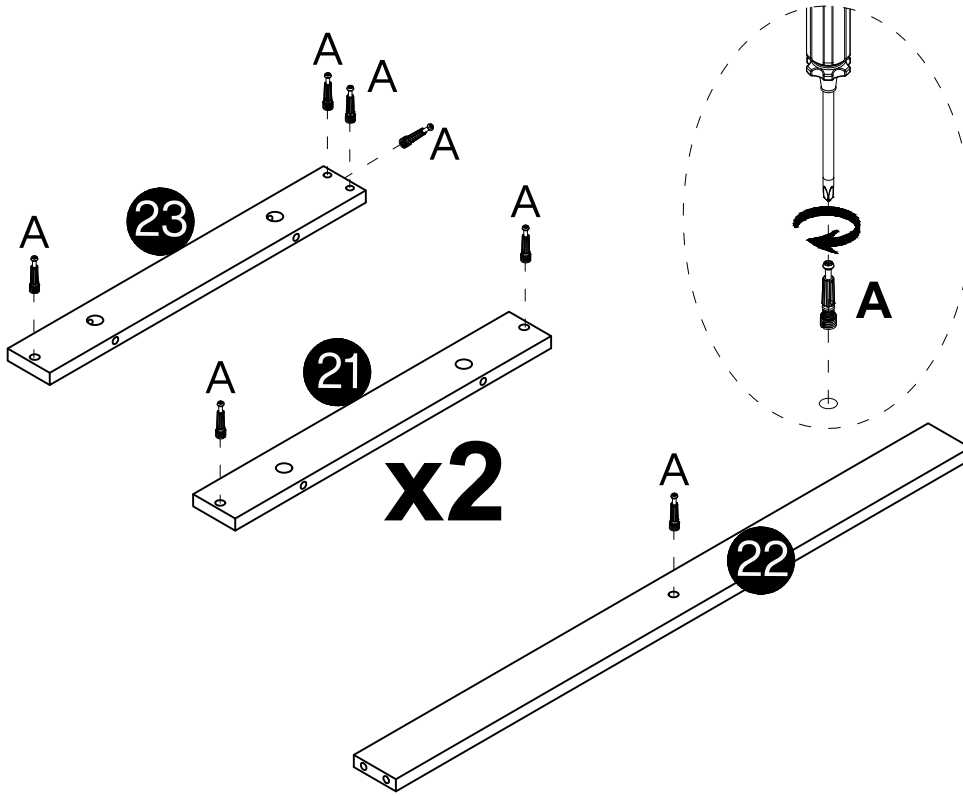
Step 1-2: Align the plastic part with the mounting hole and press it in. If you can't press it in, loosen the screw counter clockwise or completely remove the screw from the plastic part and try again.  
Step 3-4: After pressing the plastic part into place, use a screwdriver to tighten the screw clockwise.




Screw the pin into the hole. Set the cams correctly by aligning the head of the cams with the lock pins. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

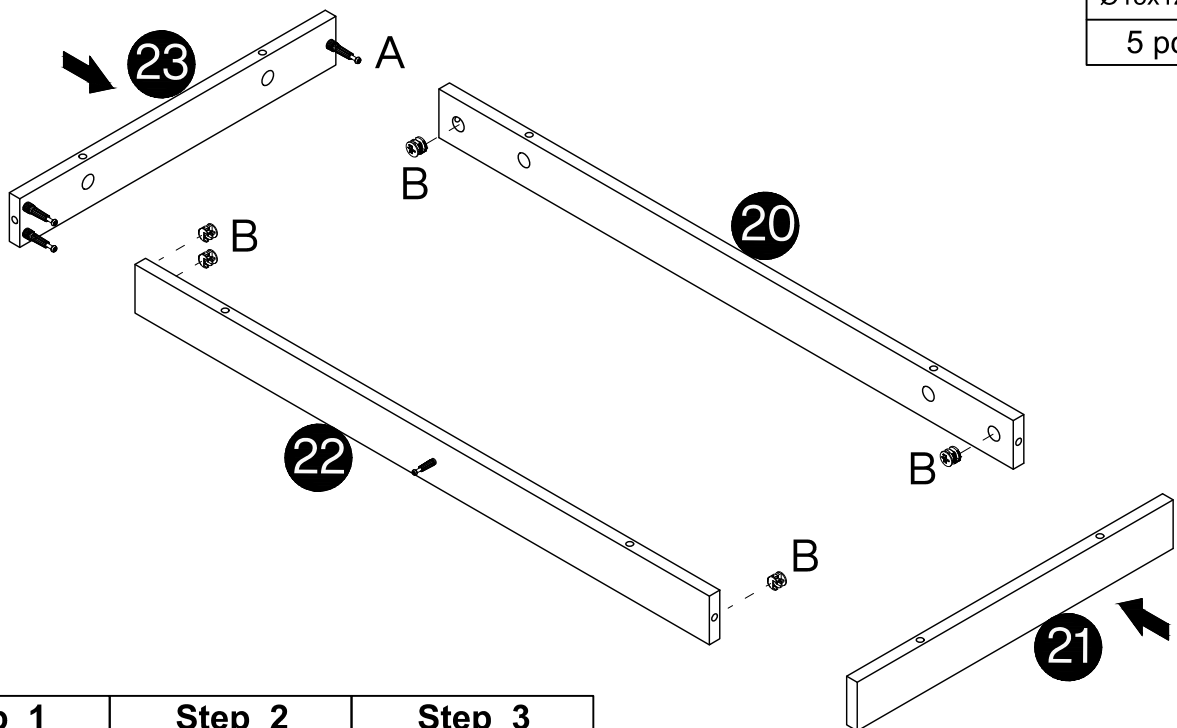



1

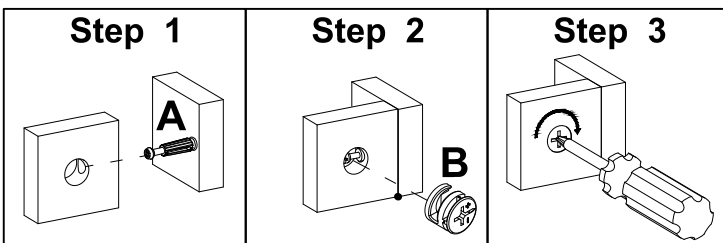


<b>A</b>

M6x40mm
9 pcs

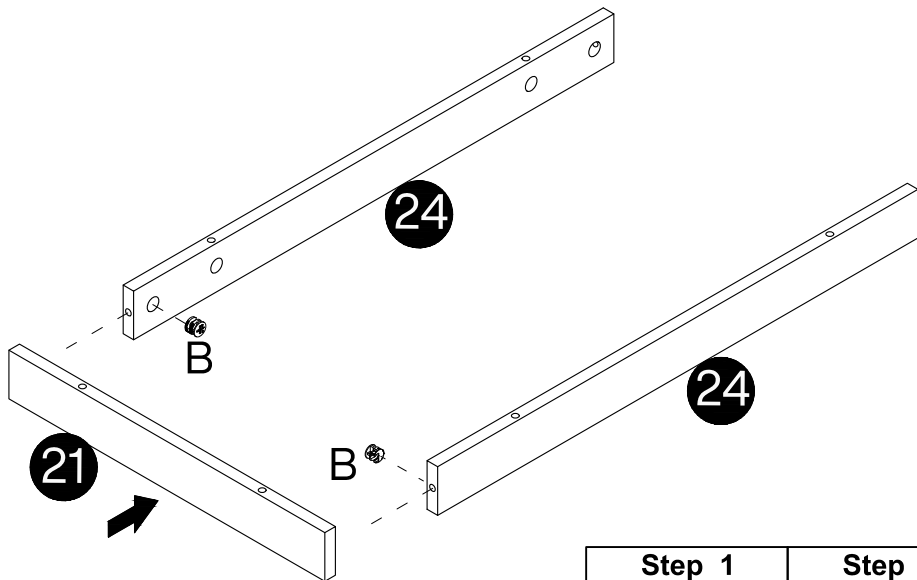
2




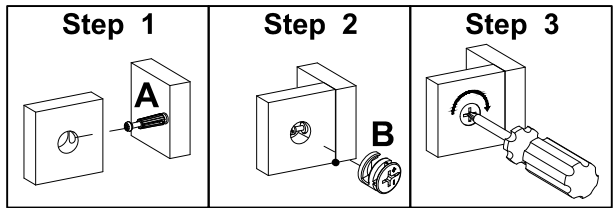
<b>B</b>

Ø15x12mm
5 pcs



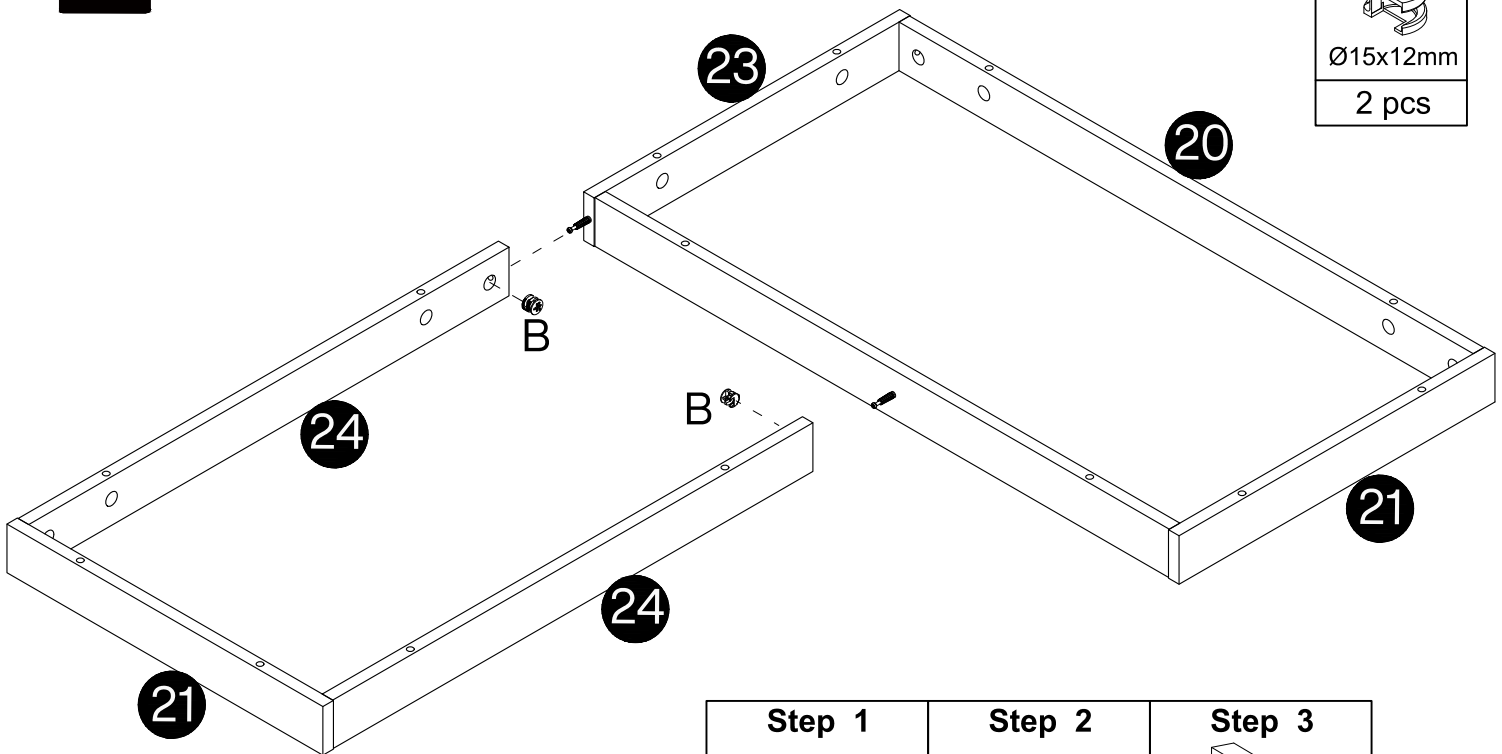
**3**




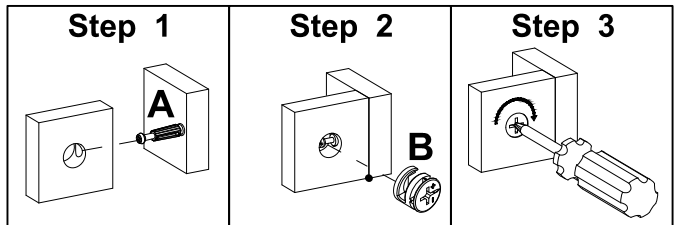
<b>B</b>

Ø15x12mm
2 pcs



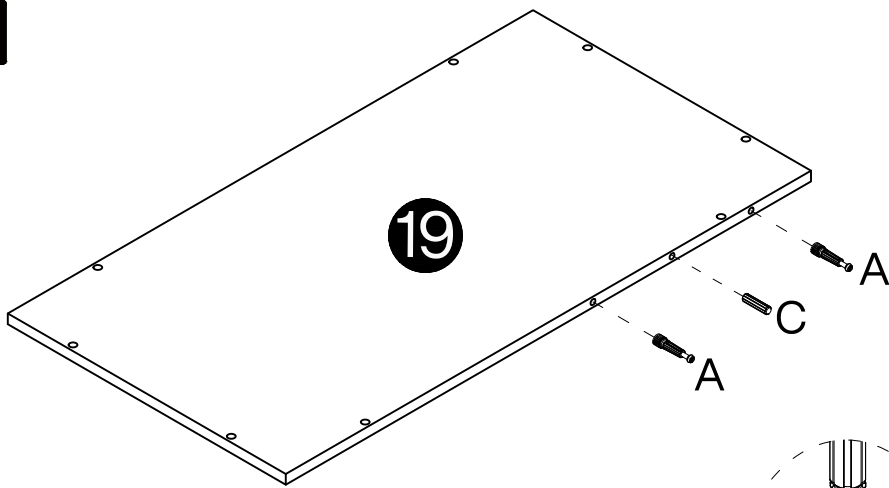
**4**





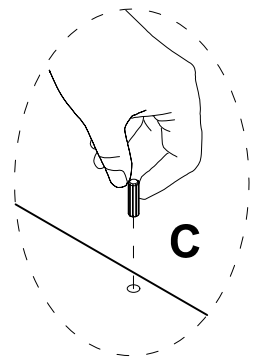
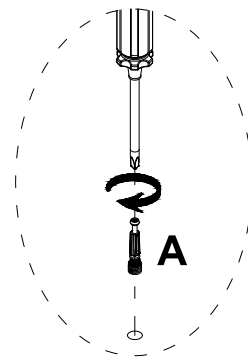
<b>B</b>

Ø15x12mm
2 pcs



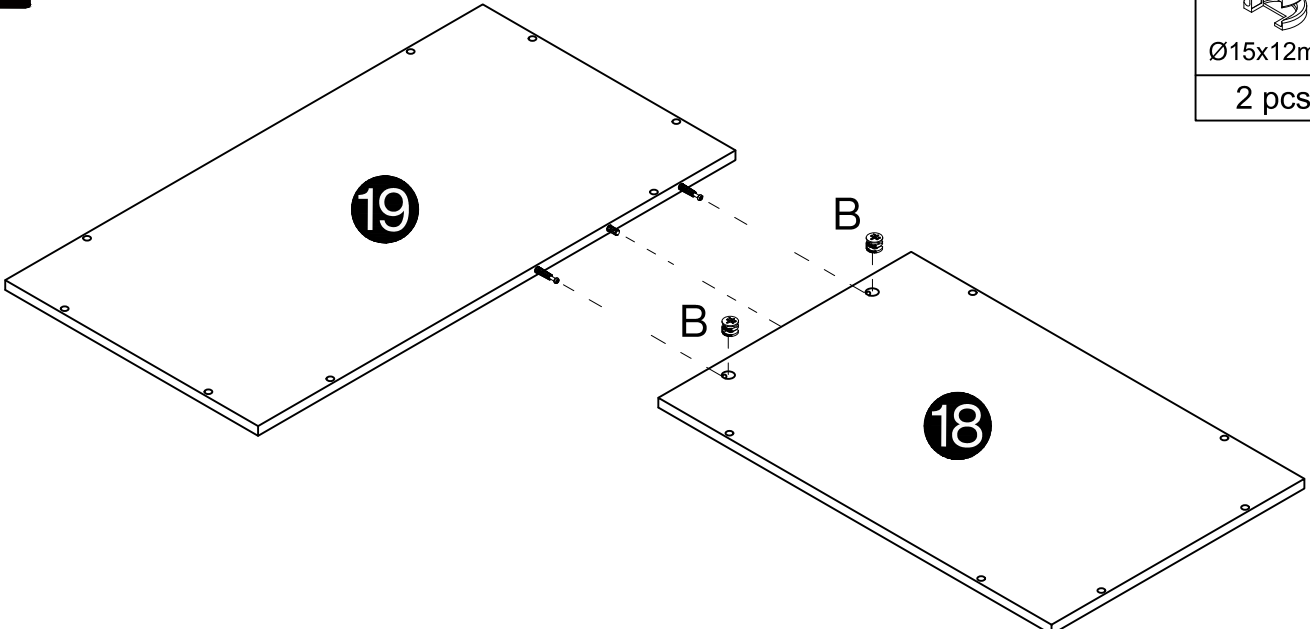
5




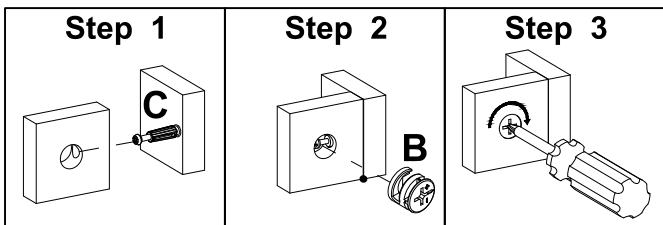
C	A
 Ø8x30mm	 M6x40mm
1 pc	2 pcs



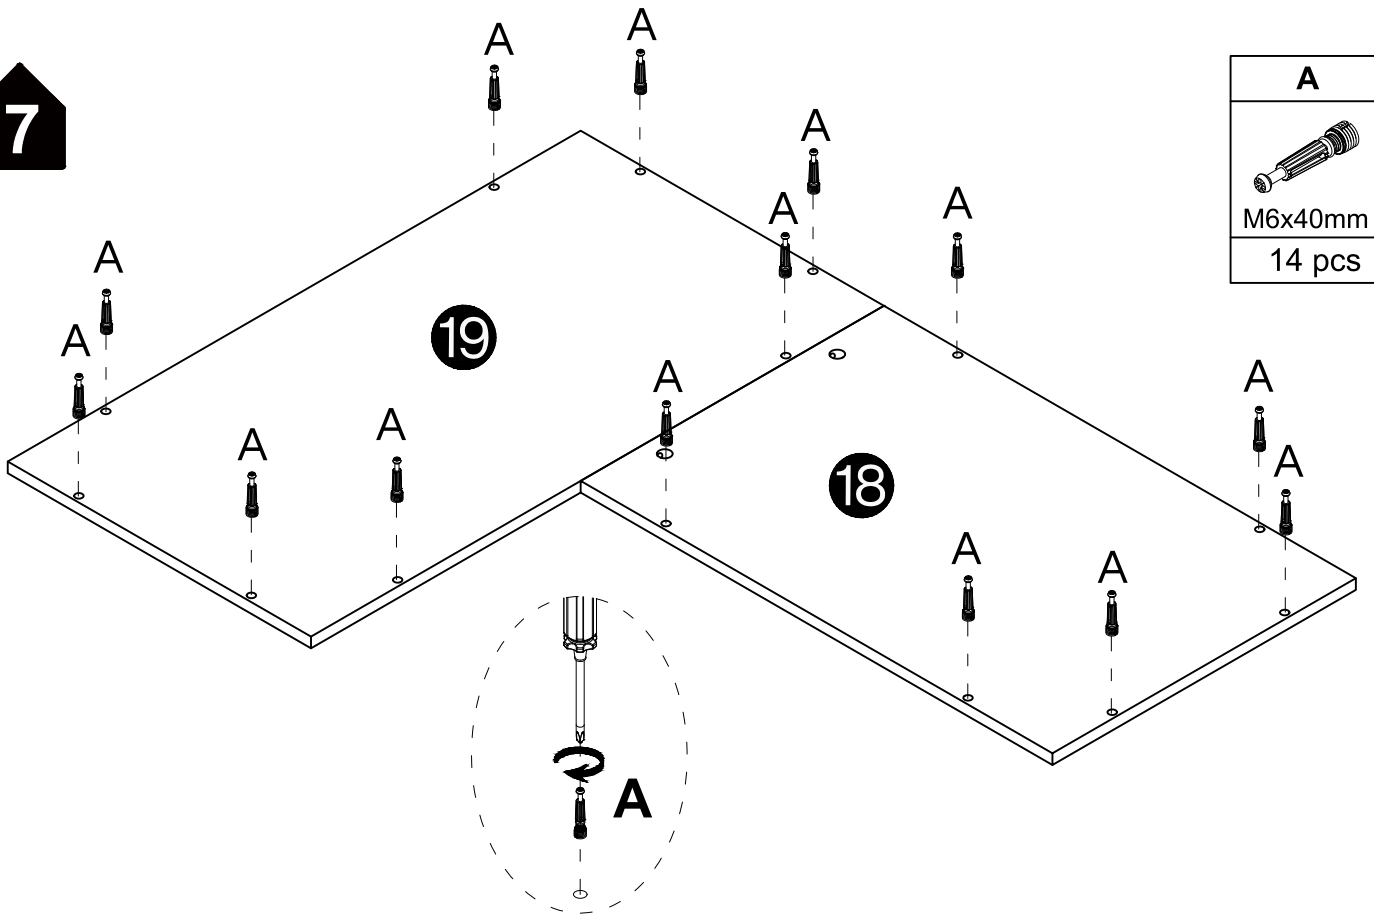
6




B
 Ø15x12mm
2 pcs

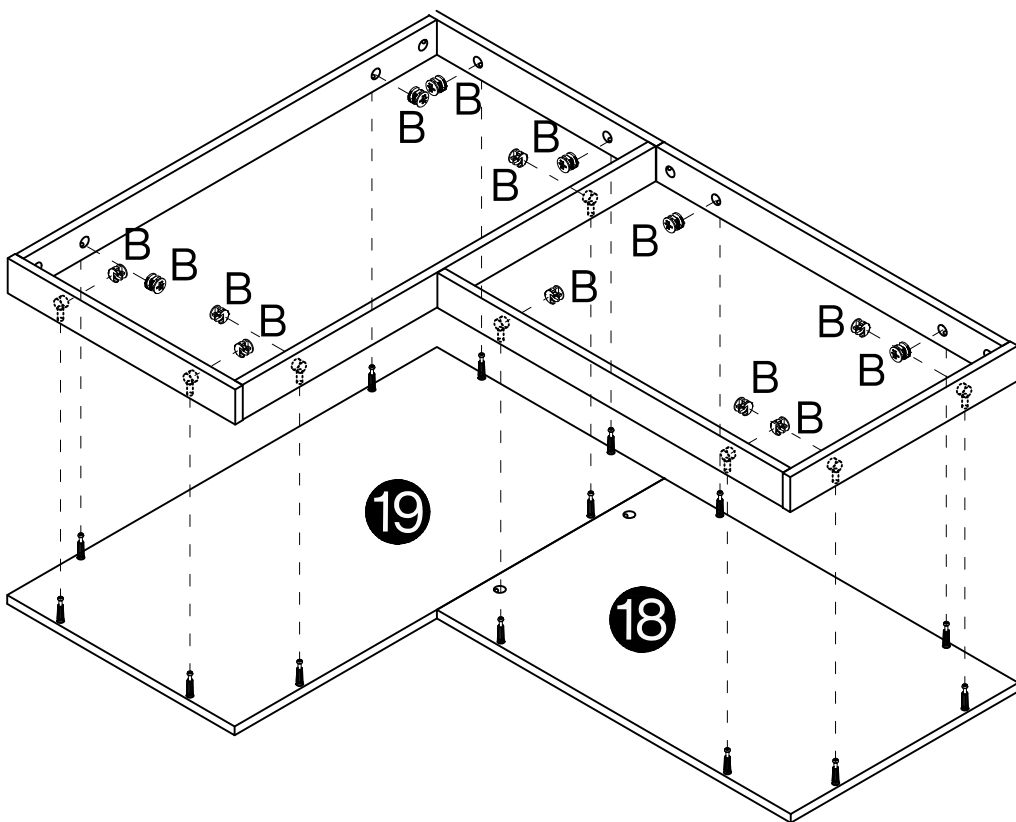



7

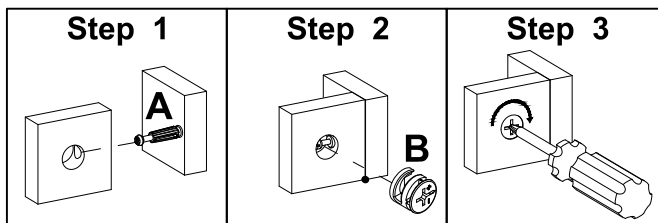


<b>A</b>

M6x40mm
14 pcs

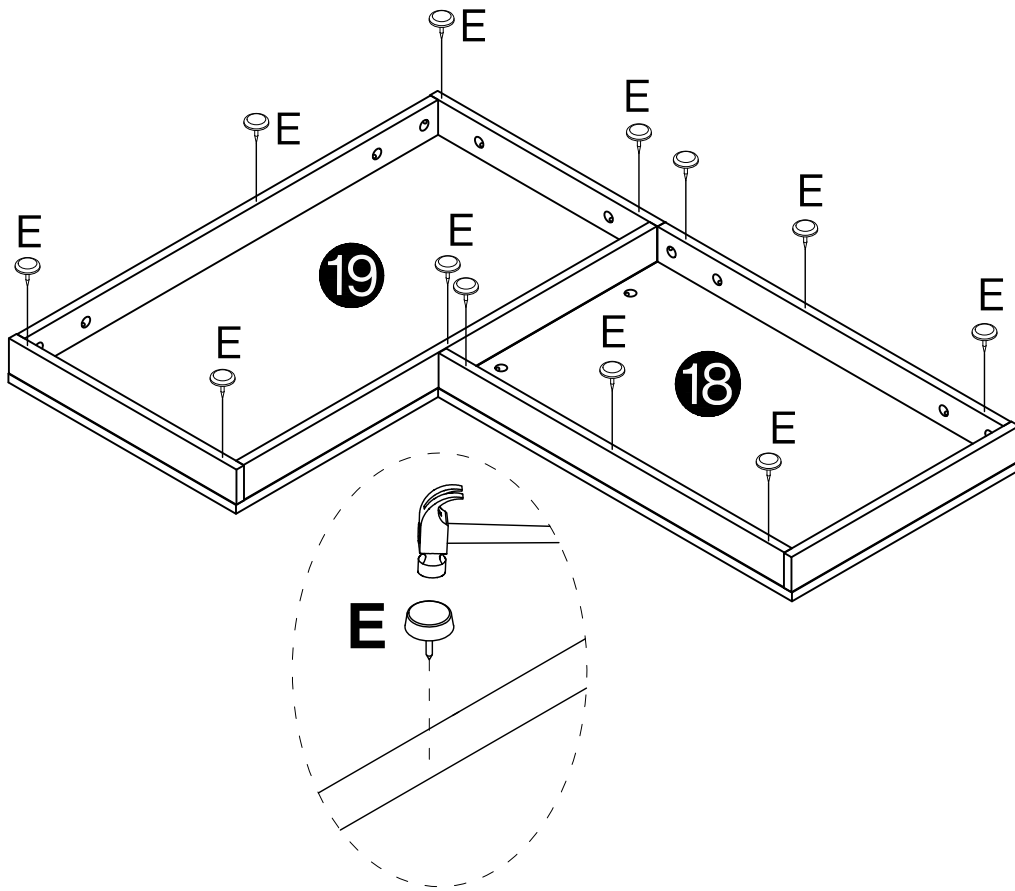
8




<b>B</b>

Ø15x12mm
14 pcs



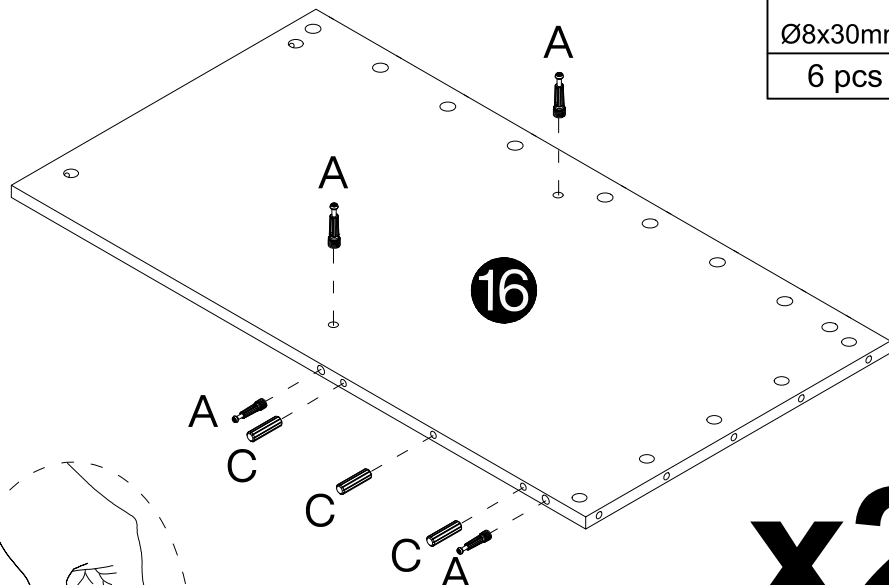
9





E

12 pcs

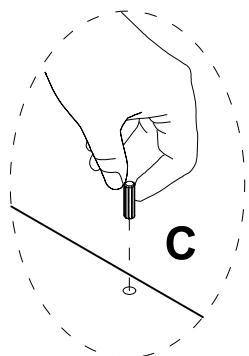
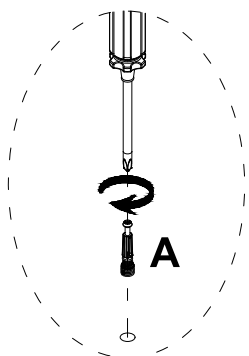
**⚠ Caution! Tap lightly**

10





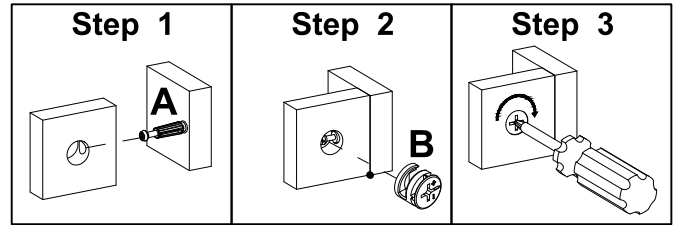
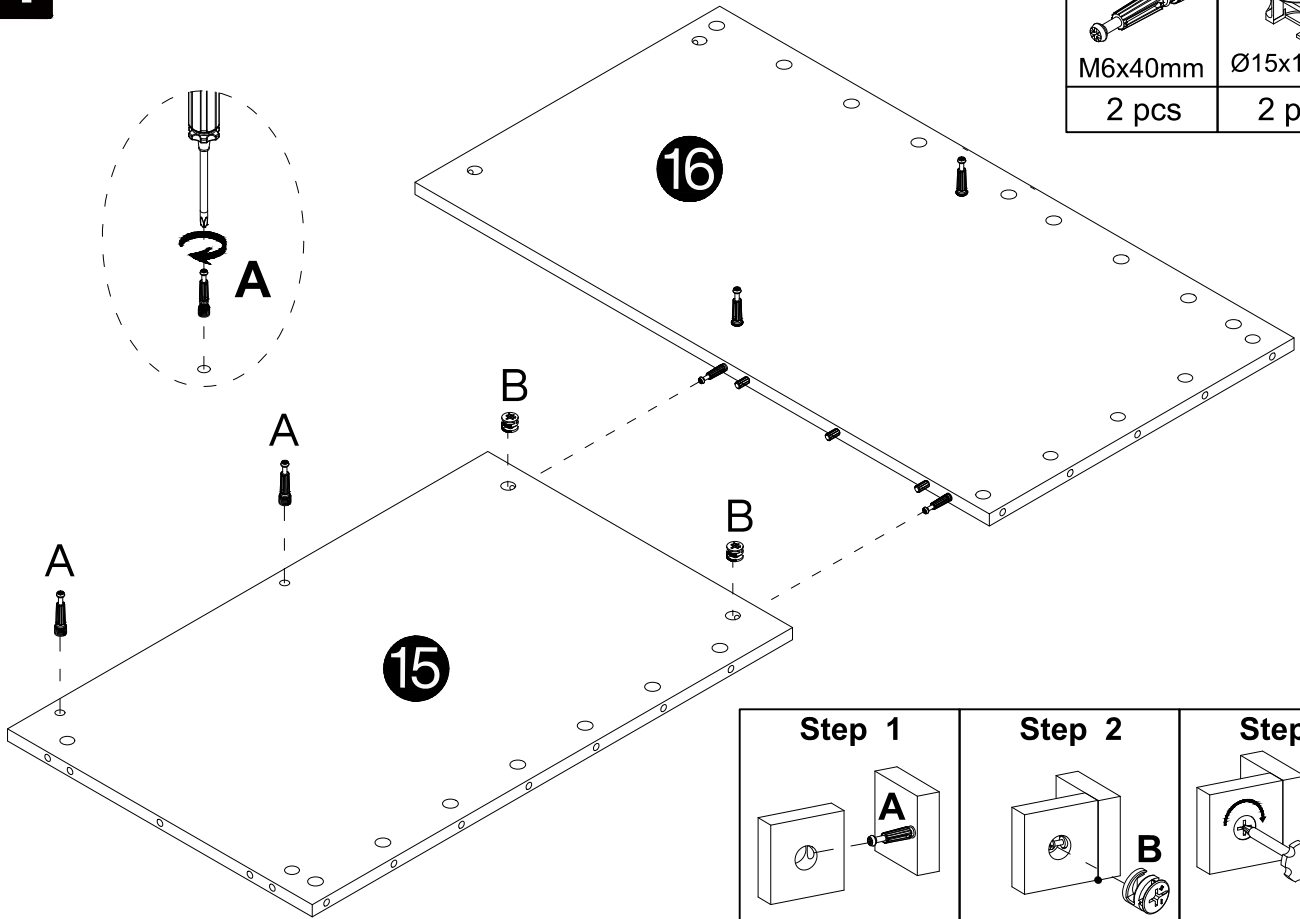
C	A
	
Ø8x30mm	M6x40mm
6 pcs	8 pcs

**x2**




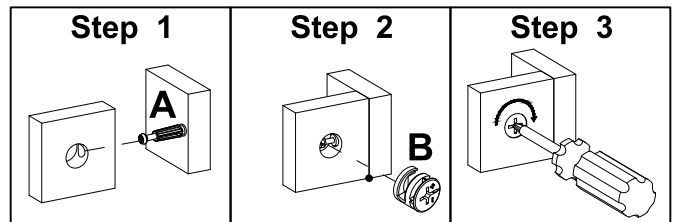
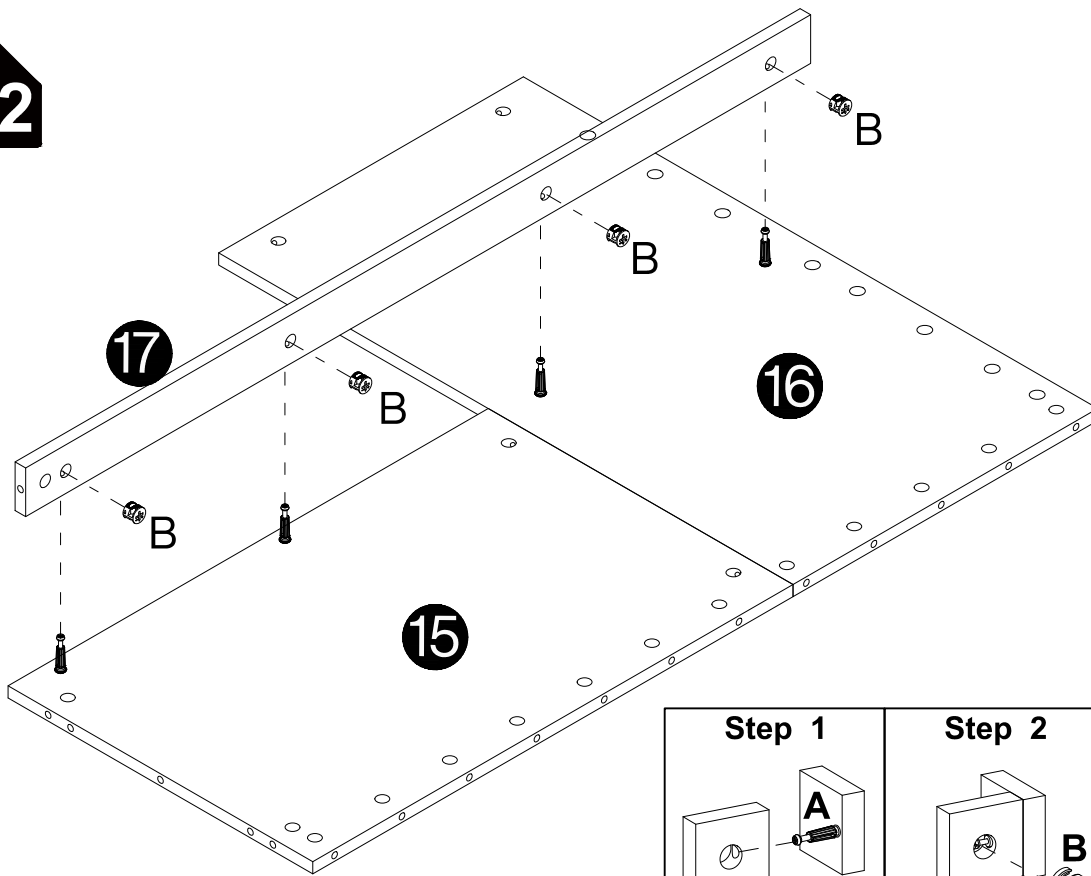
11

A	B
	
M6x40mm	Ø15x12mm
2 pcs	2 pcs





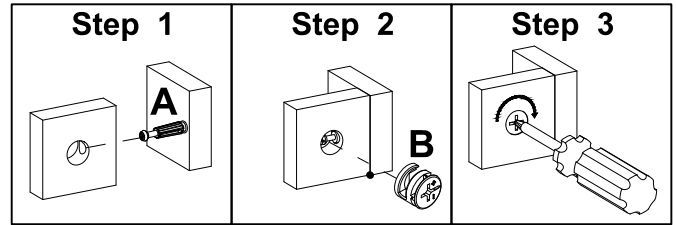
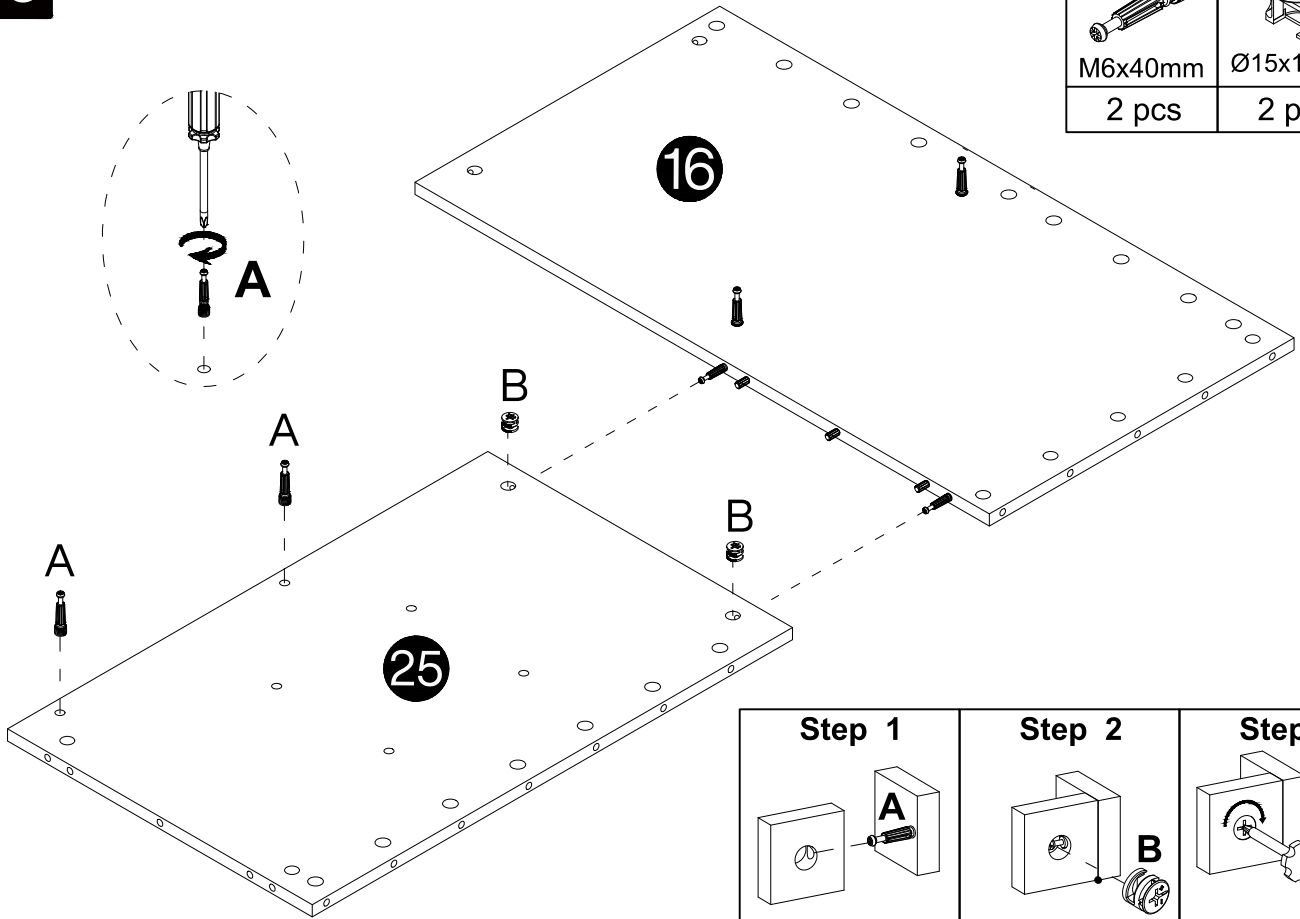
12

B

Ø15x12mm
4 pcs




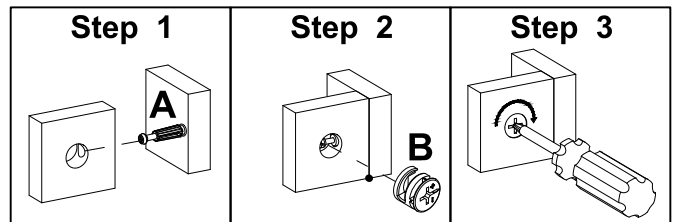
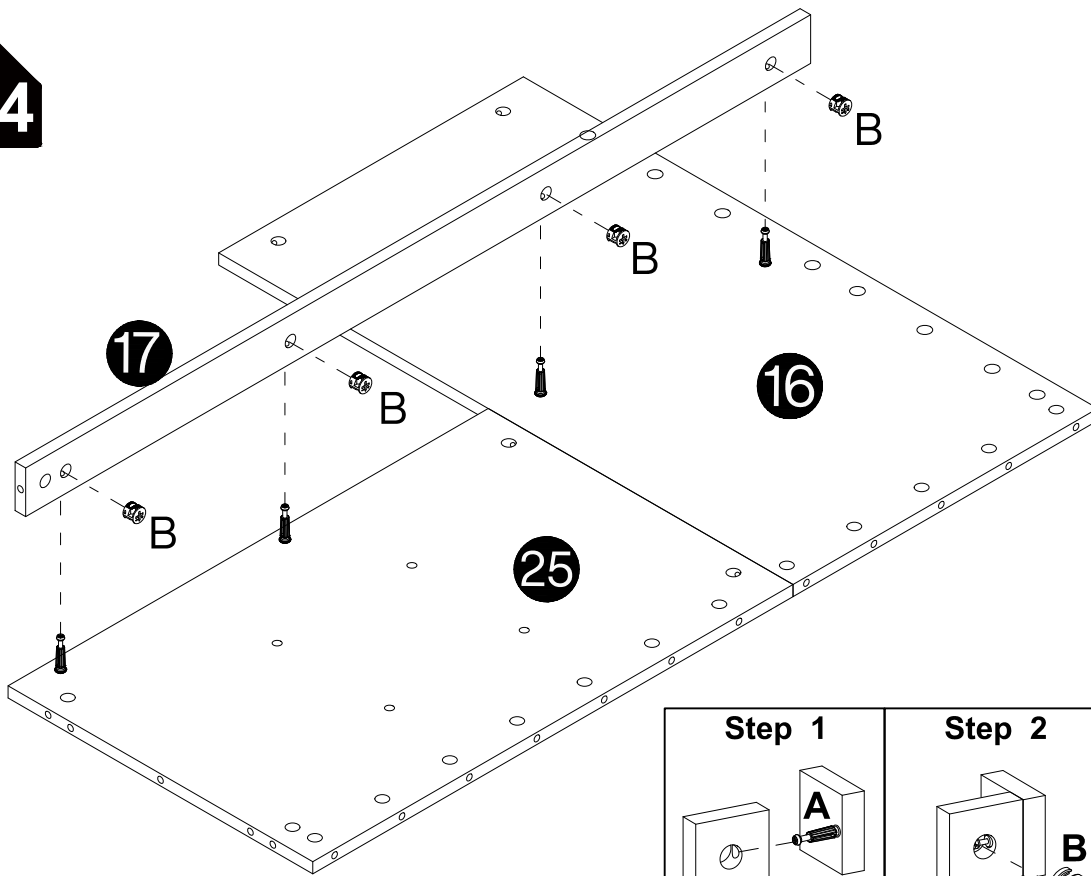
13

A	B
	
M6x40mm	Ø15x12mm
2 pcs	2 pcs





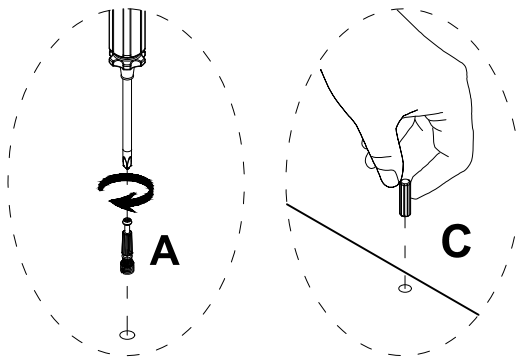
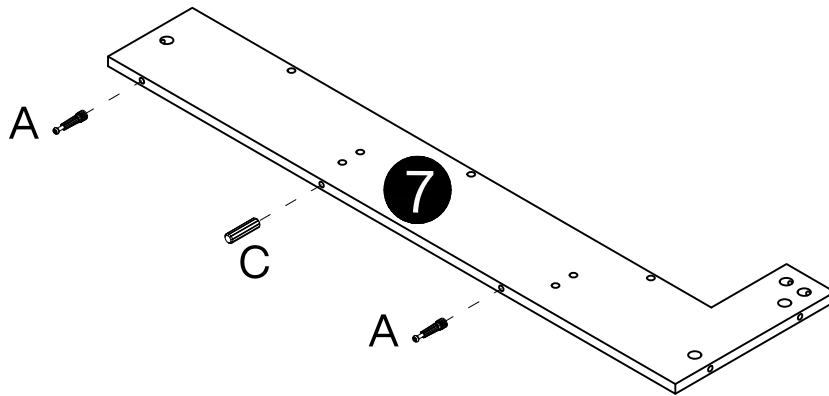
14

B

Ø15x12mm
4 pcs




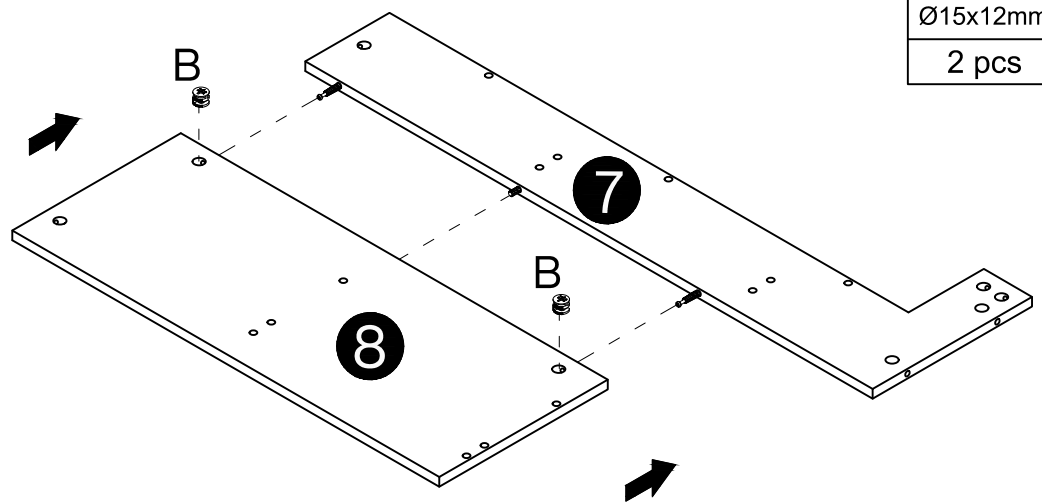
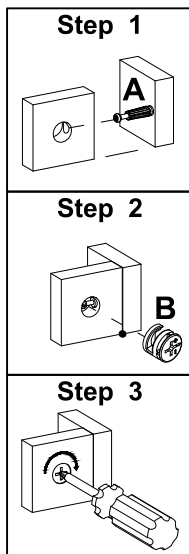
15

C	A
	
Ø8x30mm	M6x40mm
1 pc	2 pcs





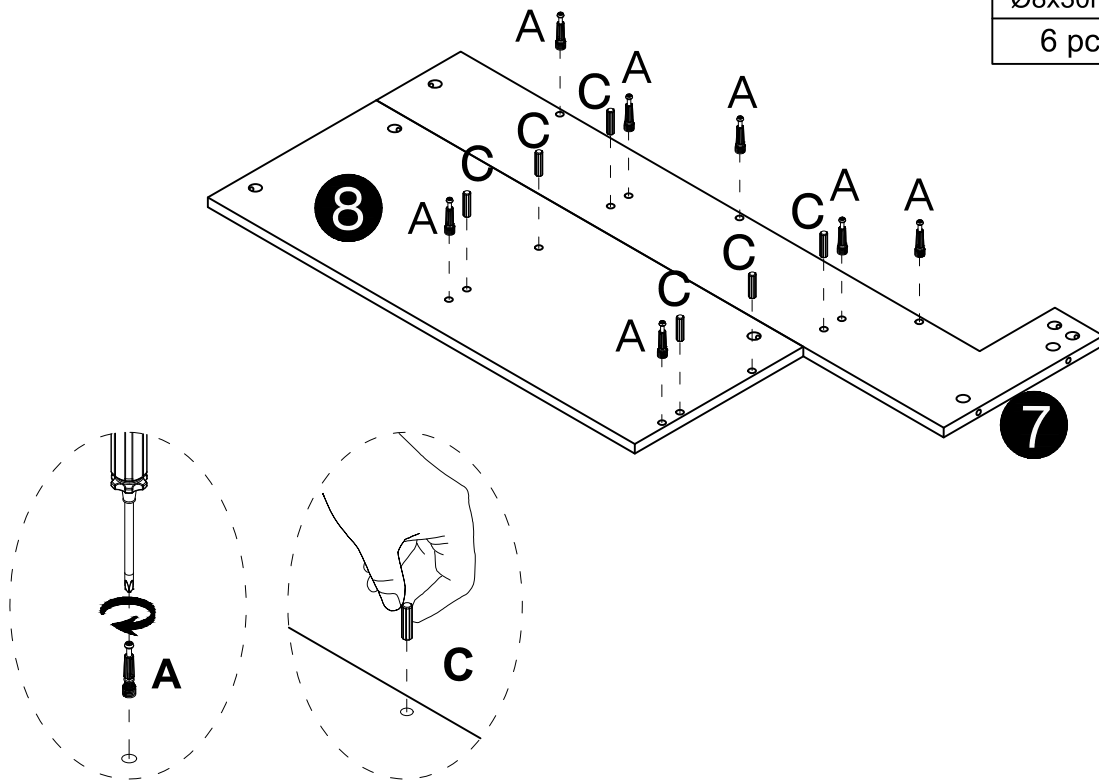
16

B

Ø15x12mm
2 pcs




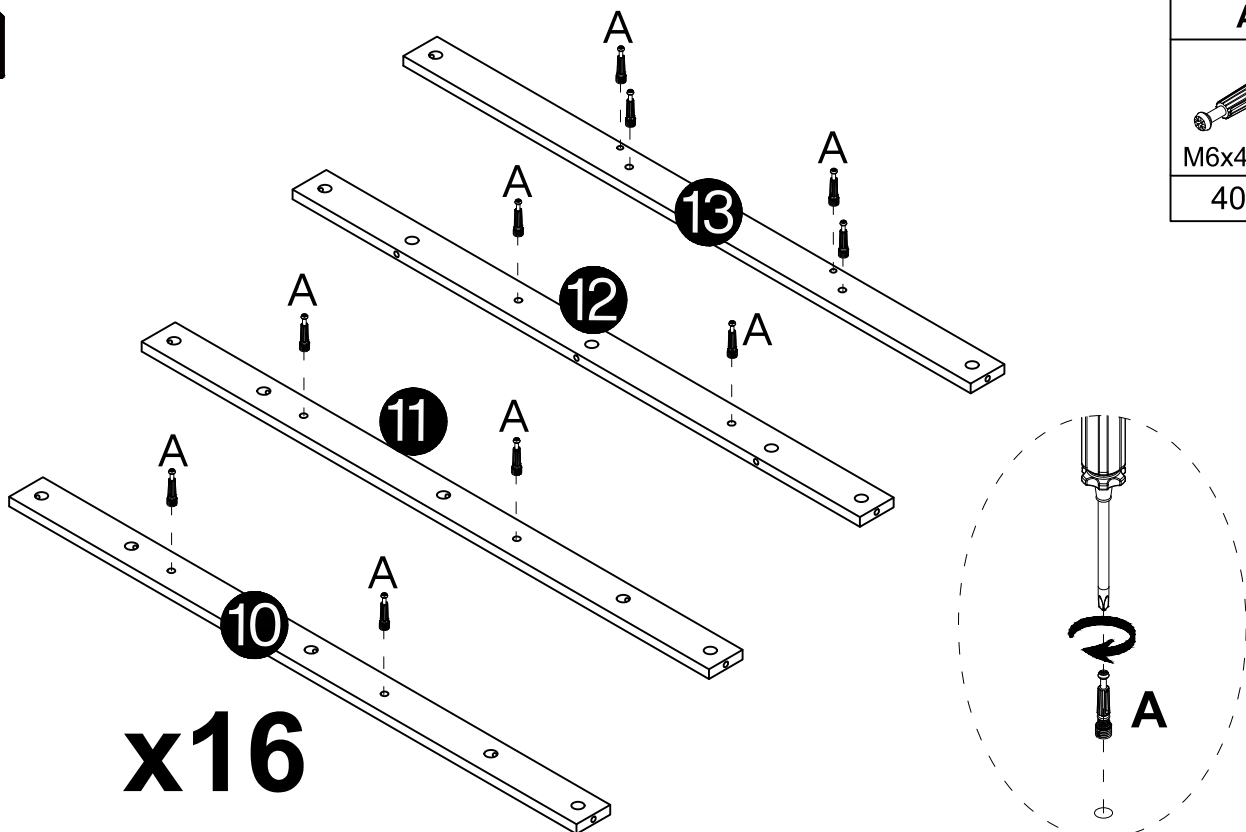
17

C	A
 Ø8x30mm	 M6x40mm
6 pcs	7 pcs

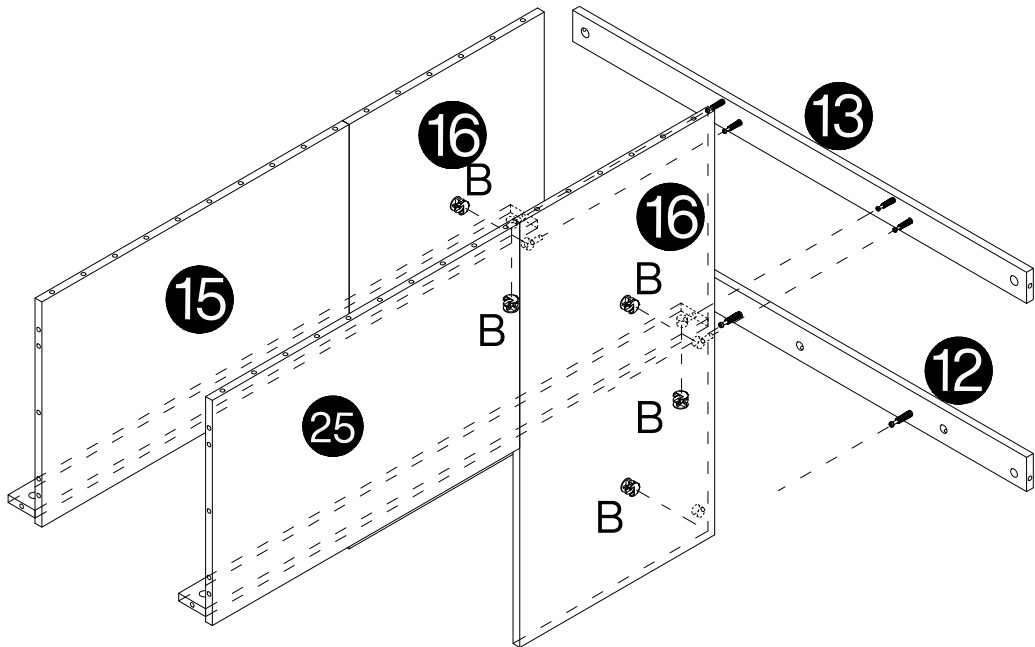



18

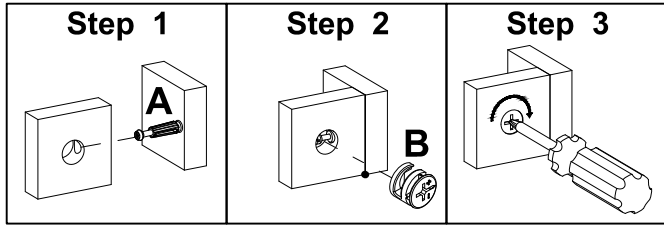
A
 M6x40mm
40 pcs



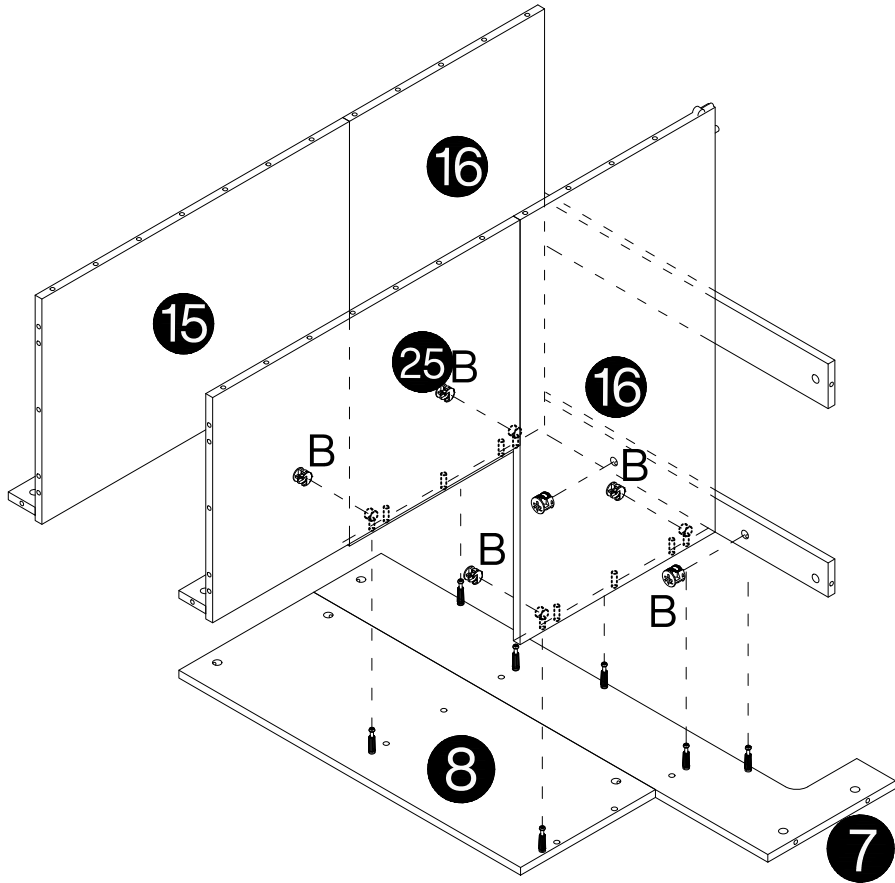
19




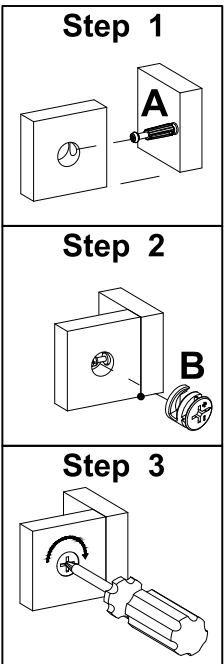
<b>B</b>

Ø15x12mm
6 pcs



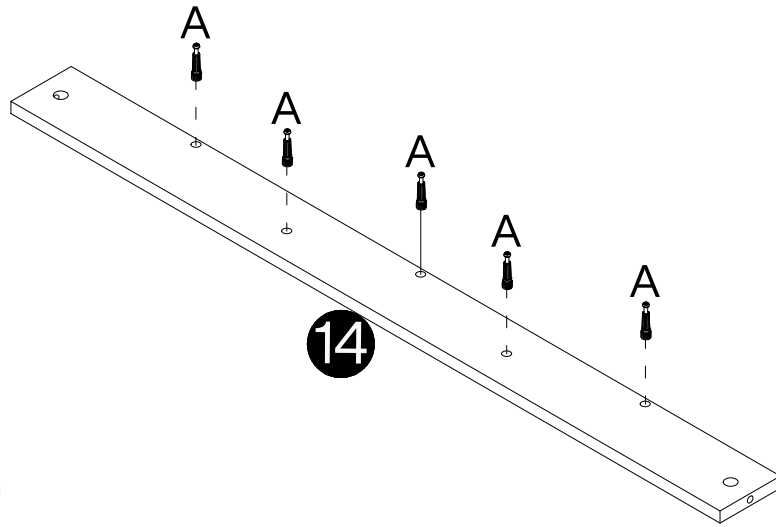
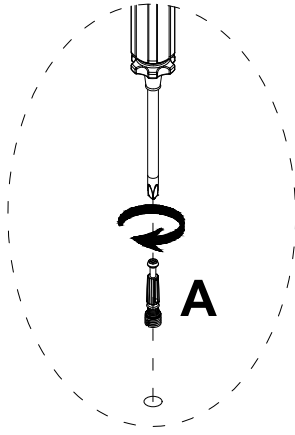
20




<b>B</b>

Ø15x12mm
7 pcs

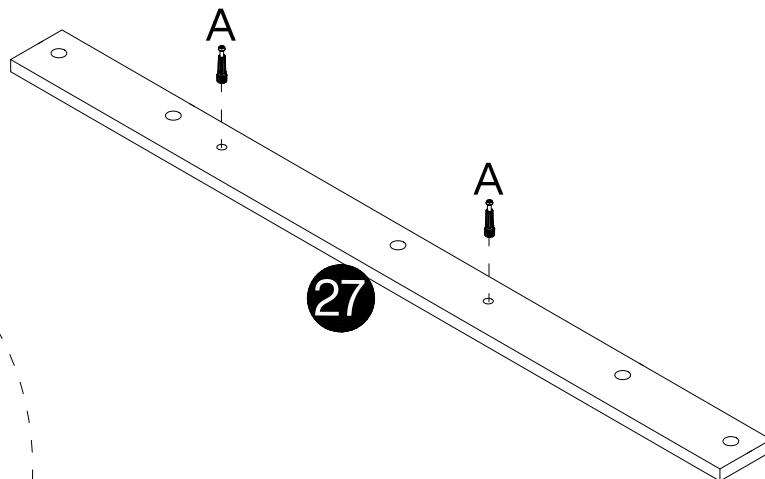
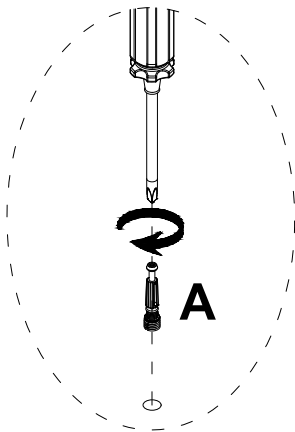



21



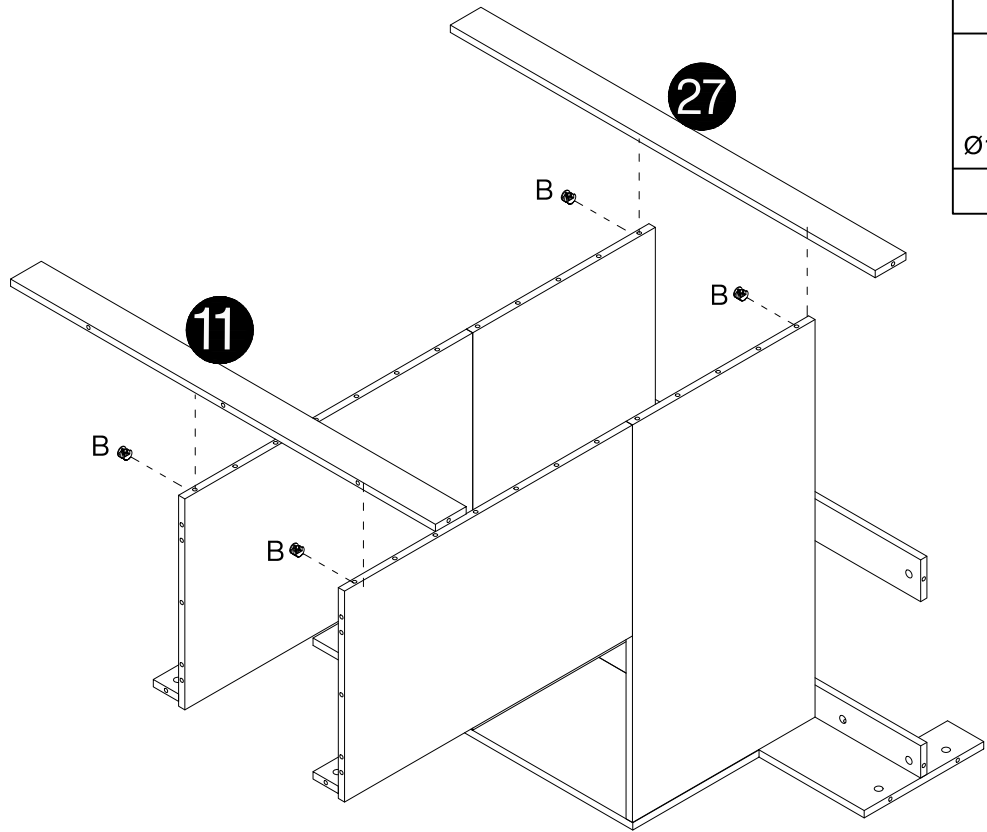
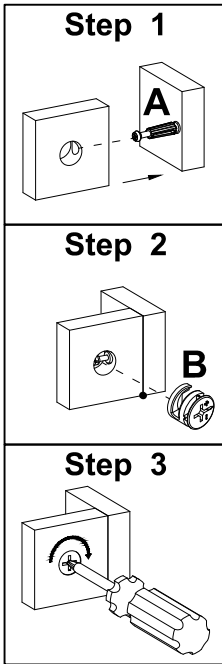
<b>A</b>

M6x40mm
5 pcs


22



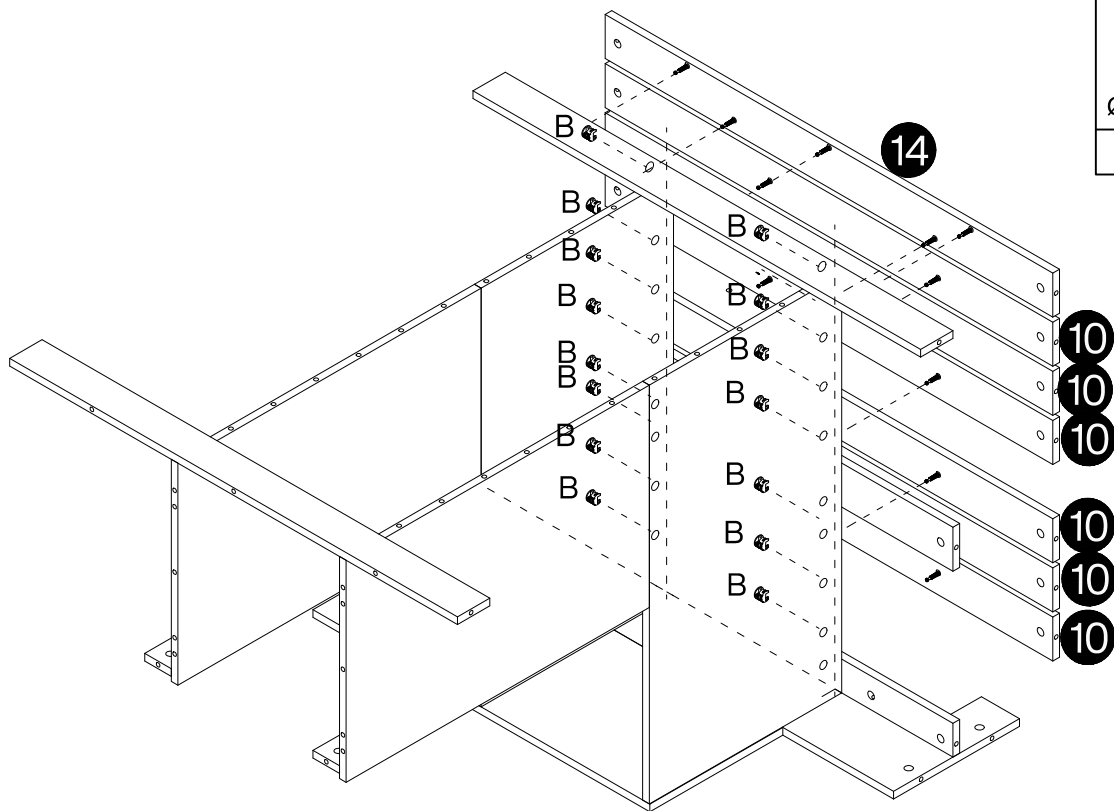
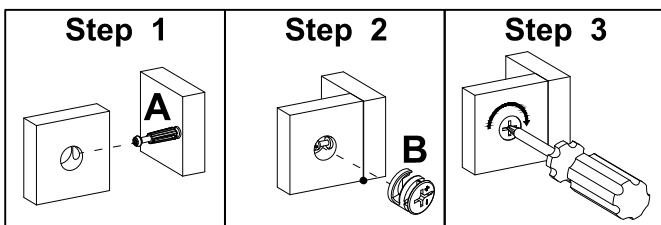
<b>A</b>

M6x40mm
2 pcs


23




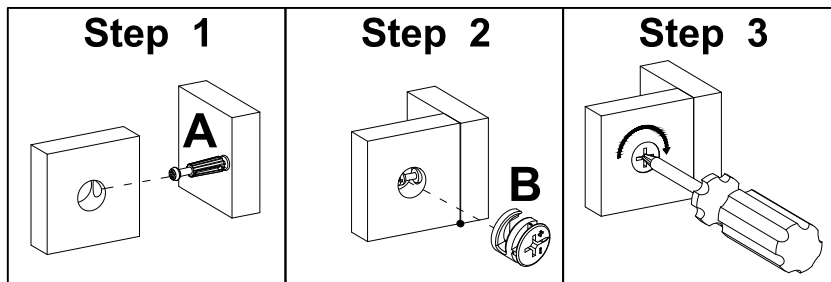
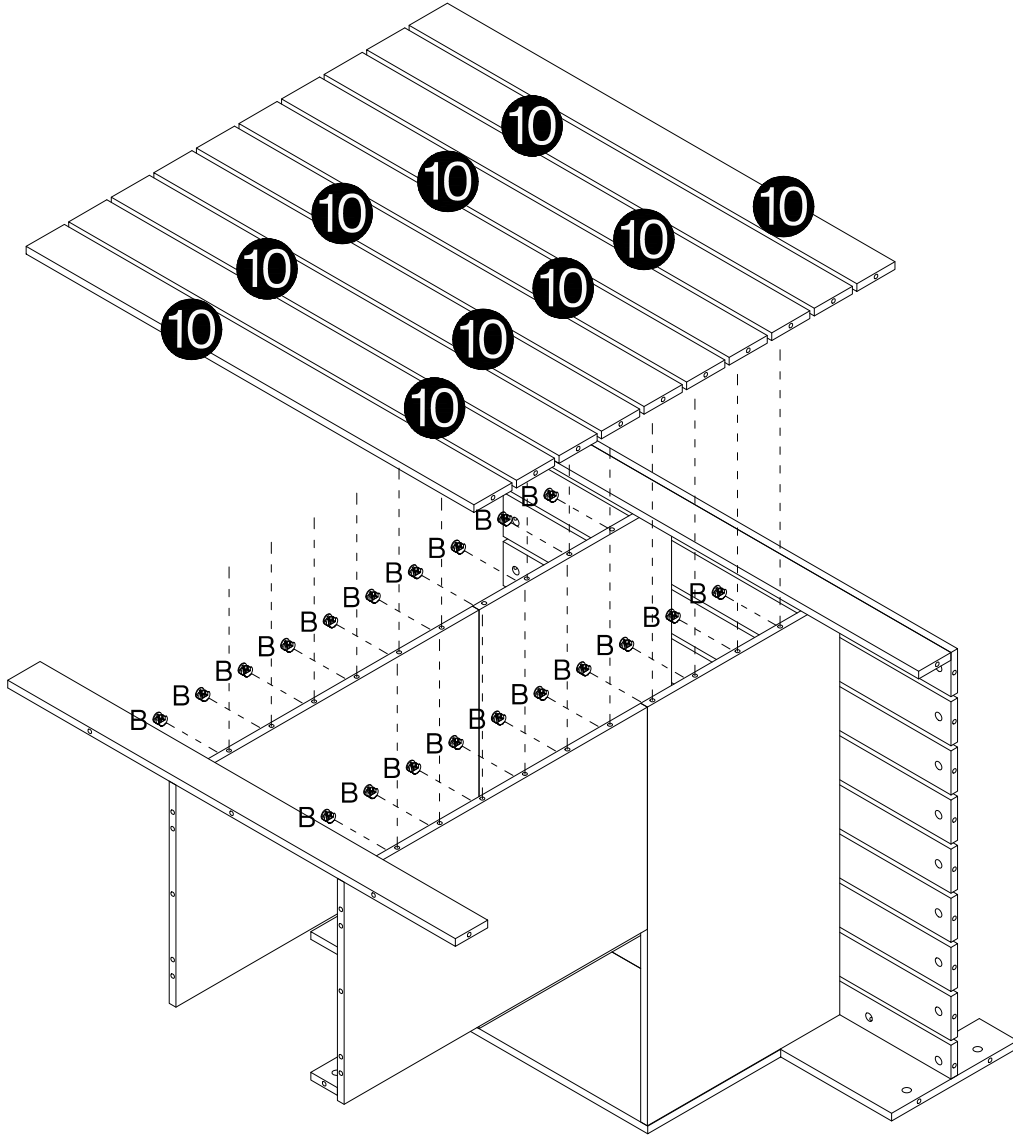
<b>B</b>

Ø15x12mm
4 pcs

24





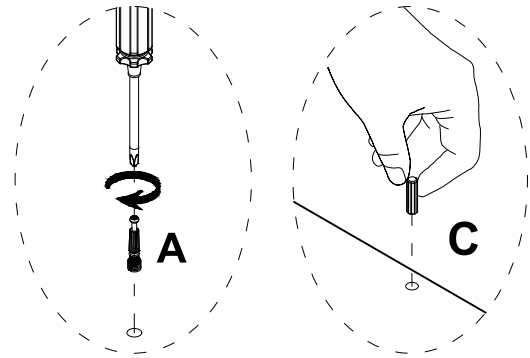
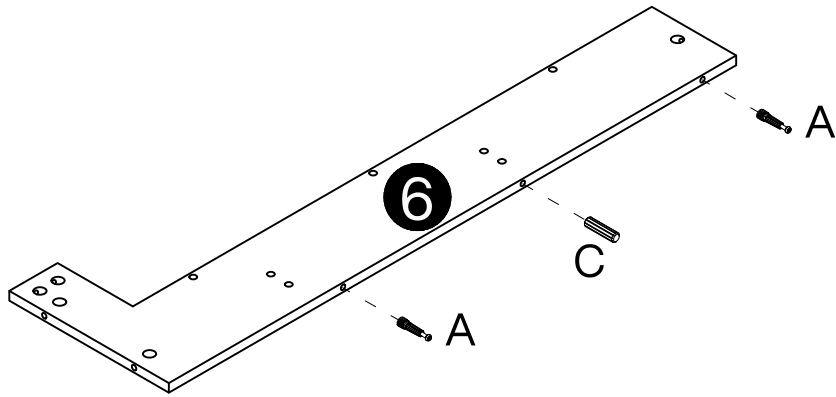
<b>B</b>

Ø15x12mm
17 pcs

<b>B</b>

Ø15x12mm
20pcs




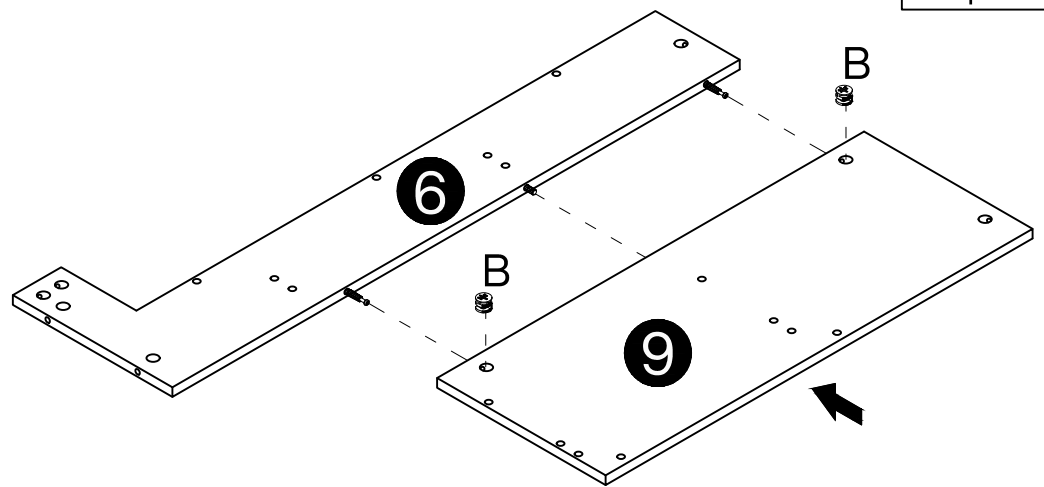
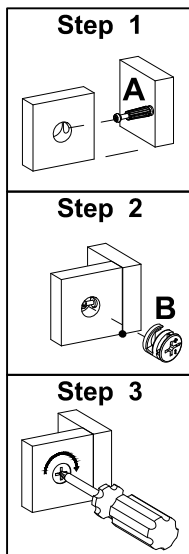
26

C	A
	
Ø8x30mm	M6x40mm
1 pc	2 pcs





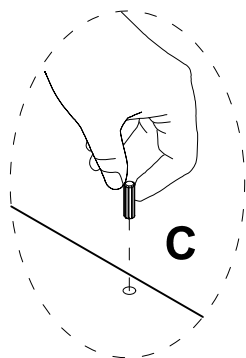
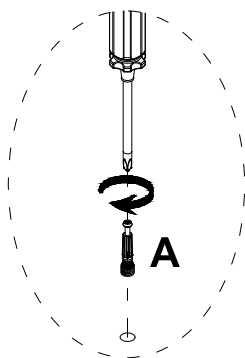
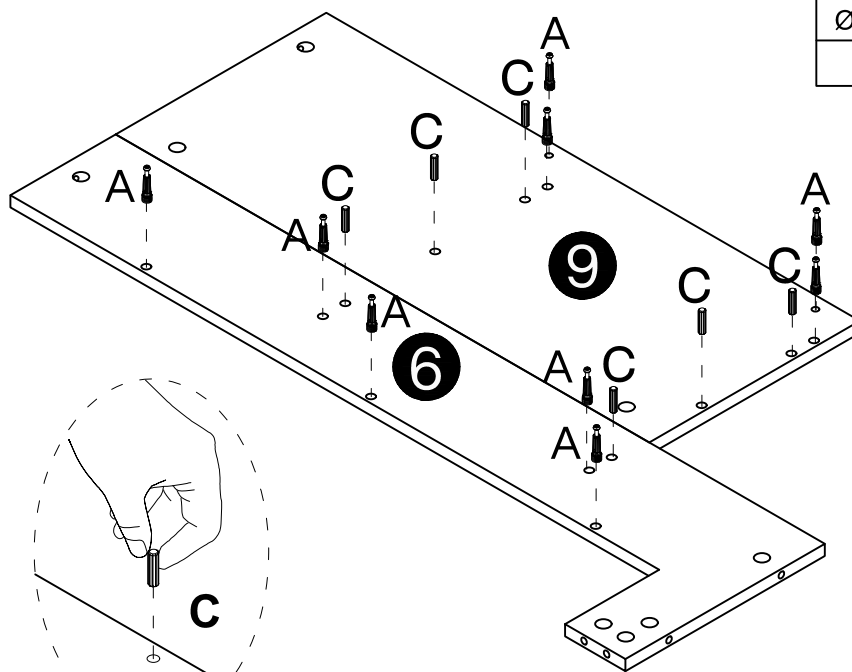
27

B

Ø15x12mm
2 pcs




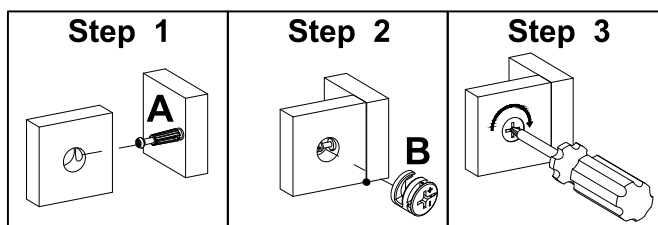
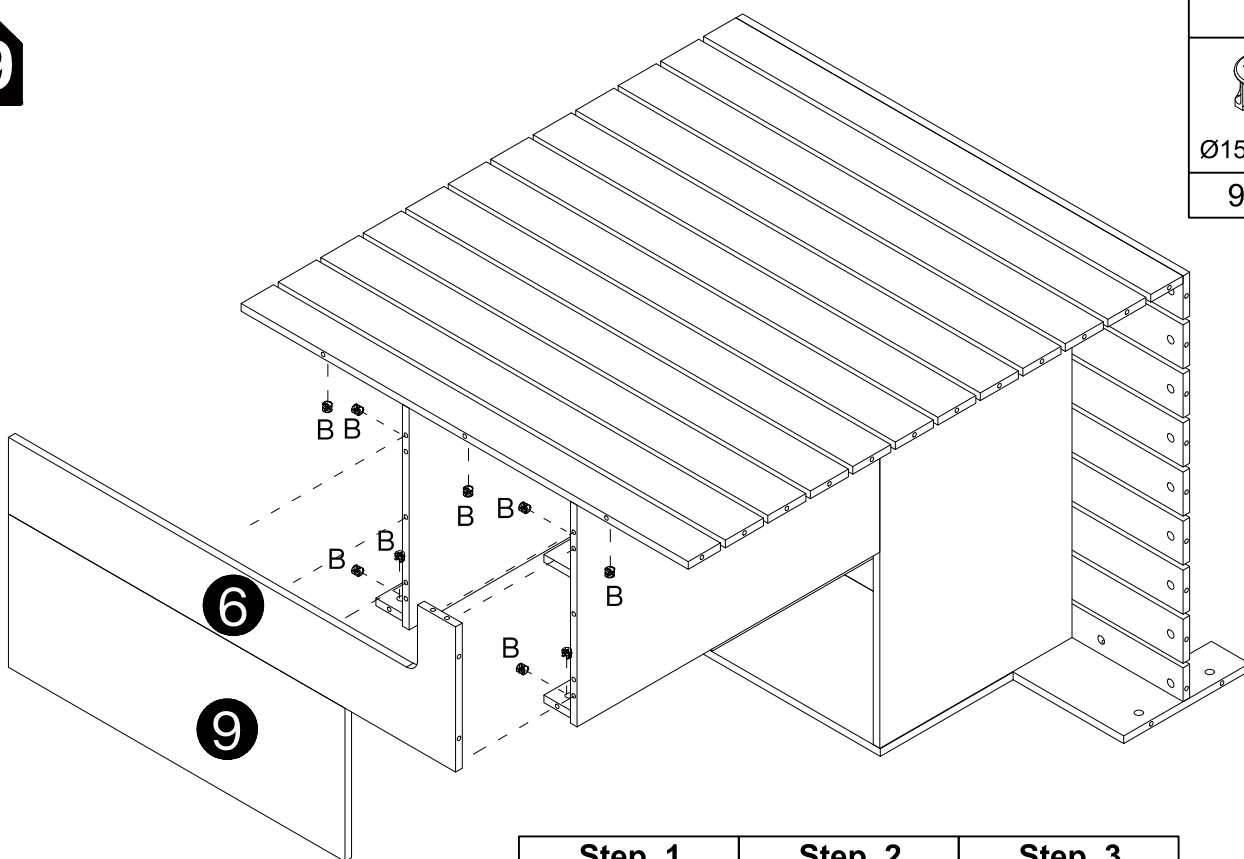
28

C	A
	
Ø8x30mm	M6x40mm
6 pcs	9 pcs

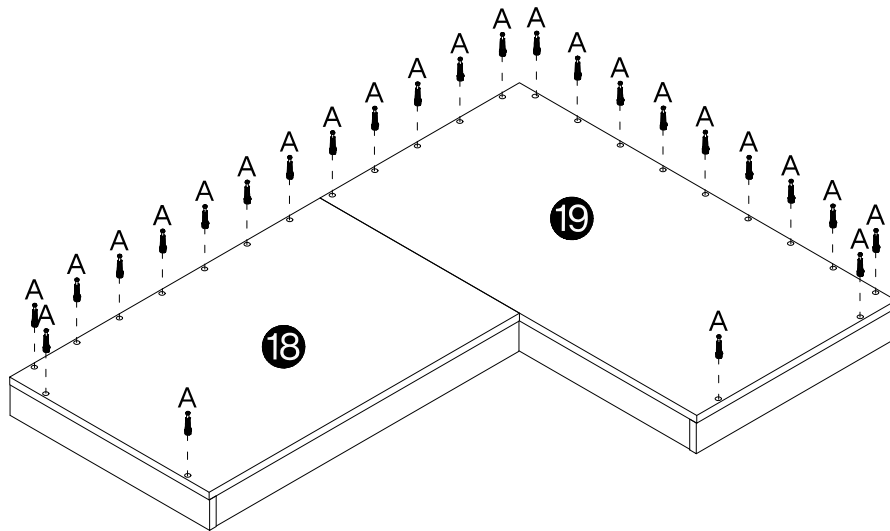



29

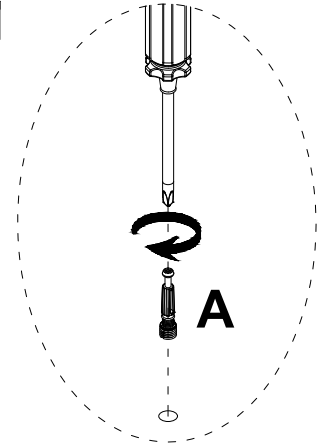
B

Ø15x12mm
9 pcs



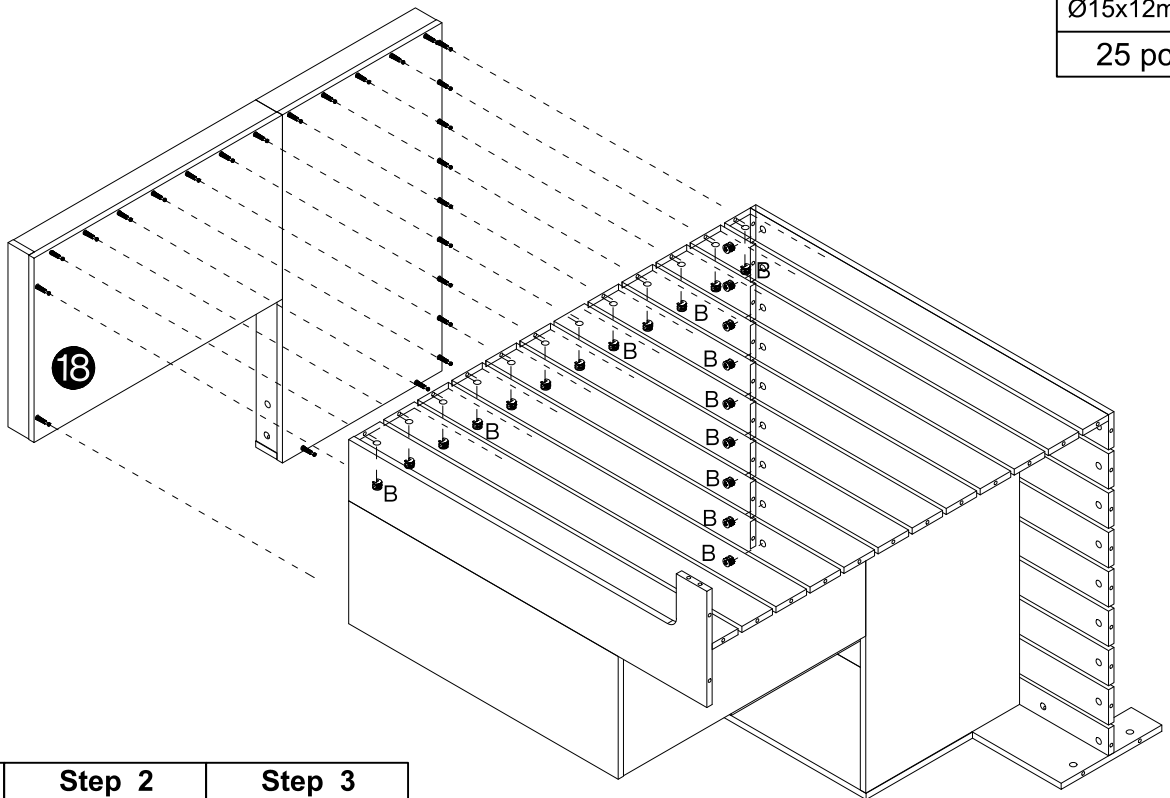
30




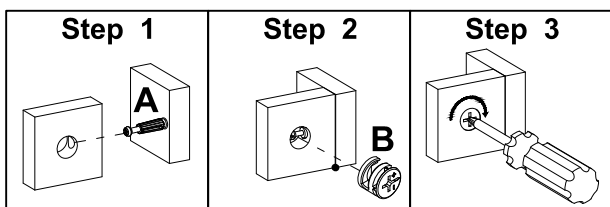
<b>A</b>

M6x40mm
25 pcs




31

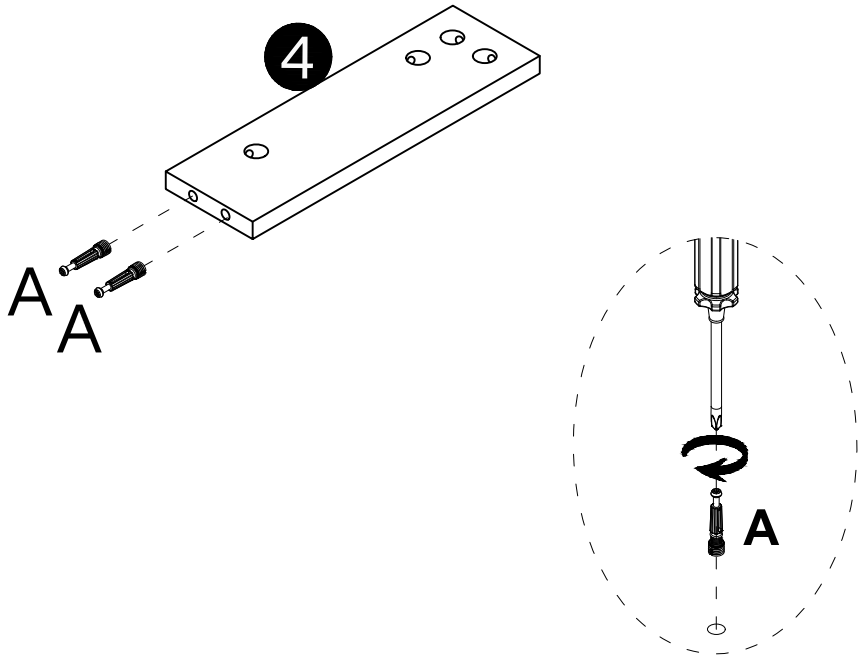


<b>B</b>

Ø15x12mm
25 pcs




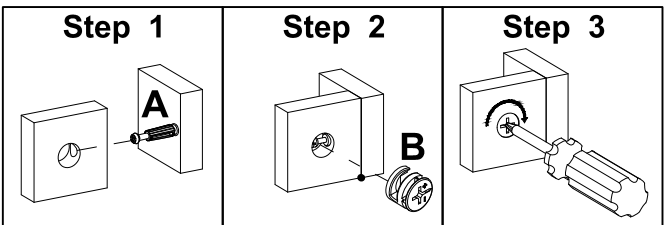
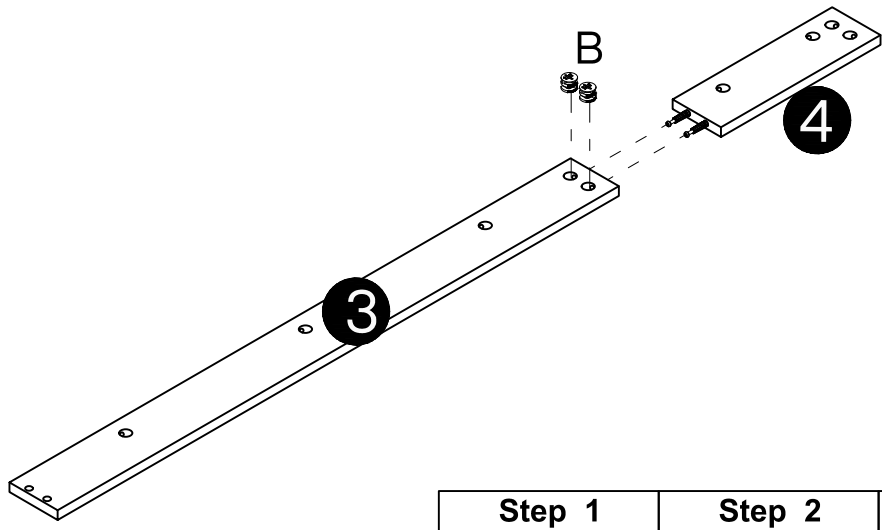
32

<b>A</b>

M6x40mm
2 pcs

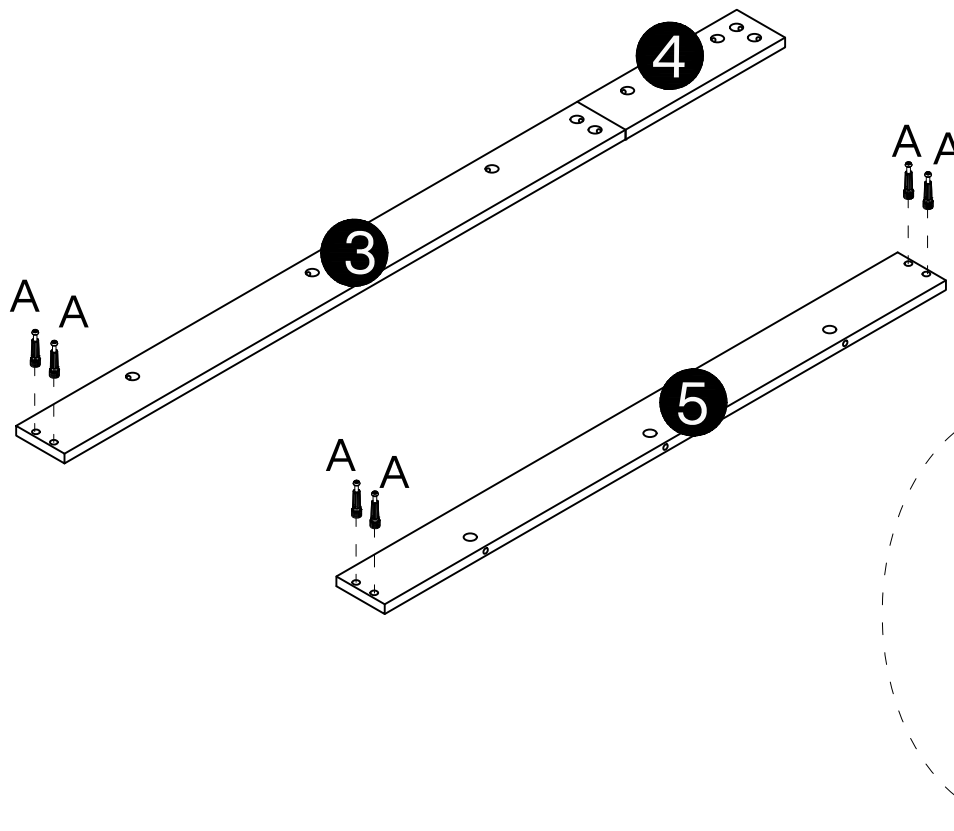



33

<b>B</b>

Ø15x12mm
2 pcs

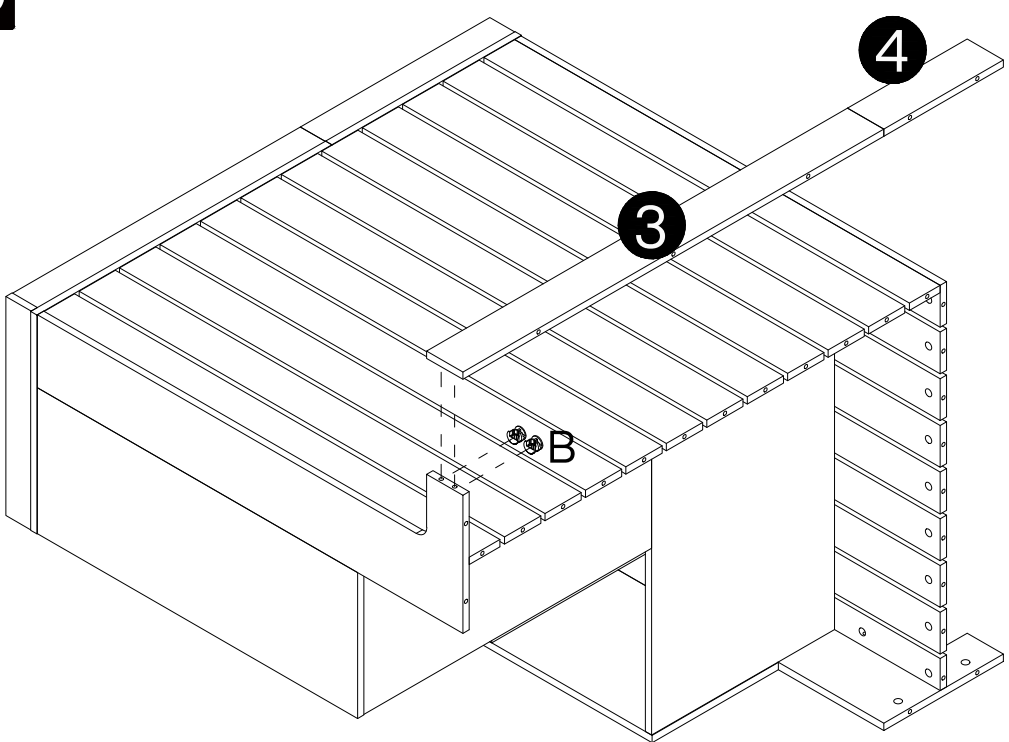



34

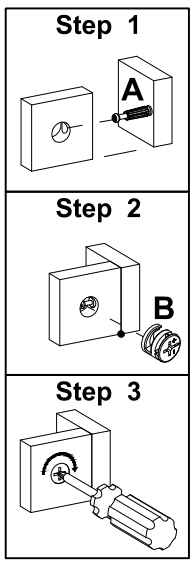


<b>A</b>

M6x40mm
6 pcs

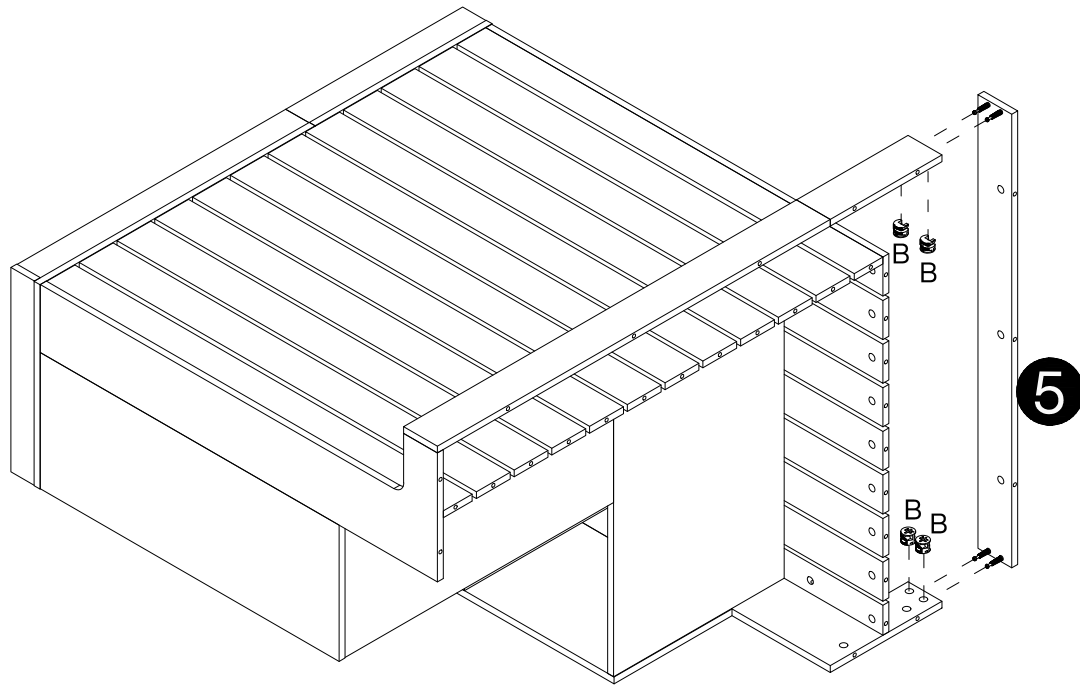
35




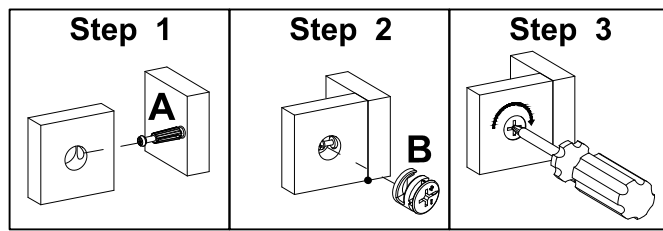
<b>B</b>

Ø15x12mm
2 pcs



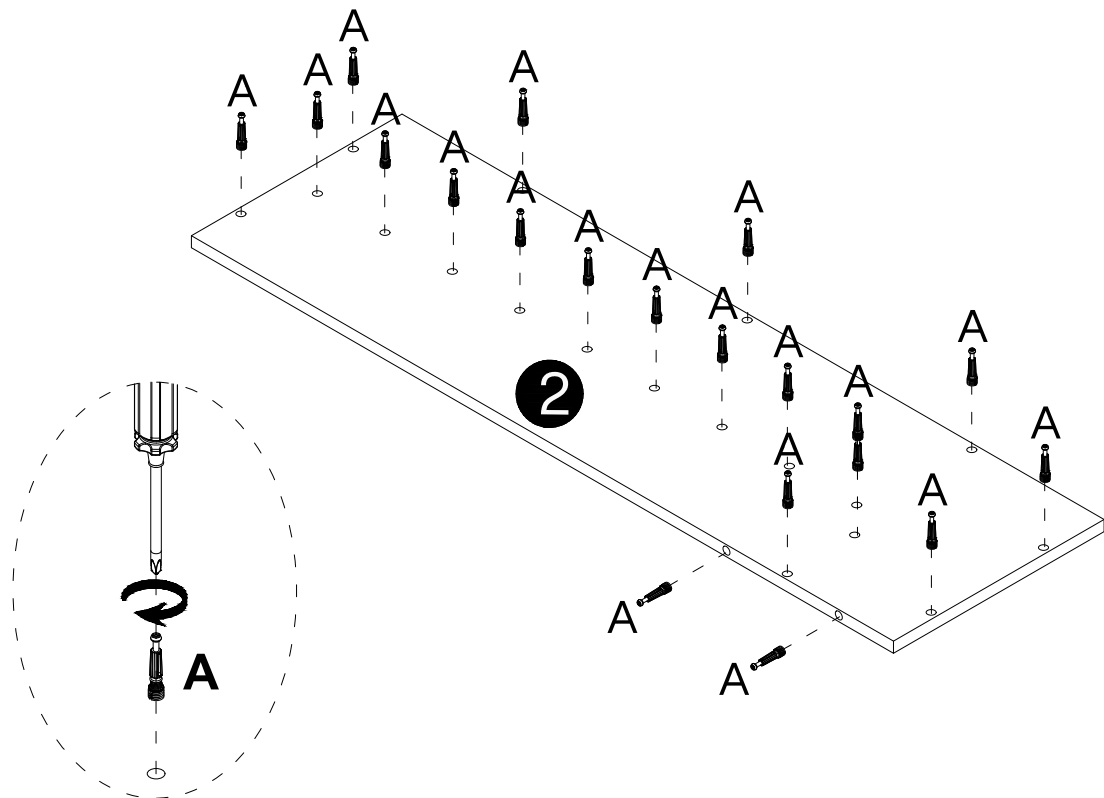
36




<b>B</b>

Ø15x12mm
4 pcs

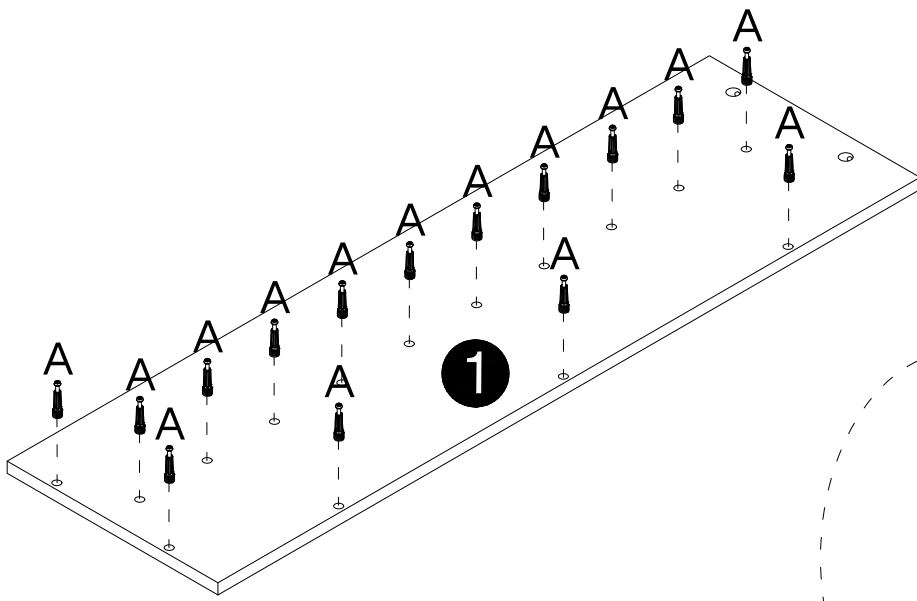



37

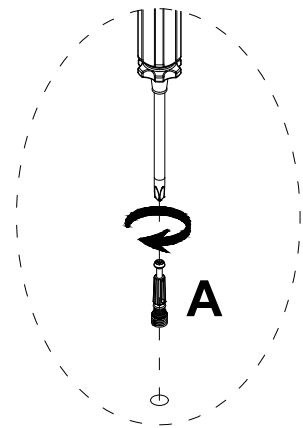


<b>A</b>

M6x40mm
20 pcs

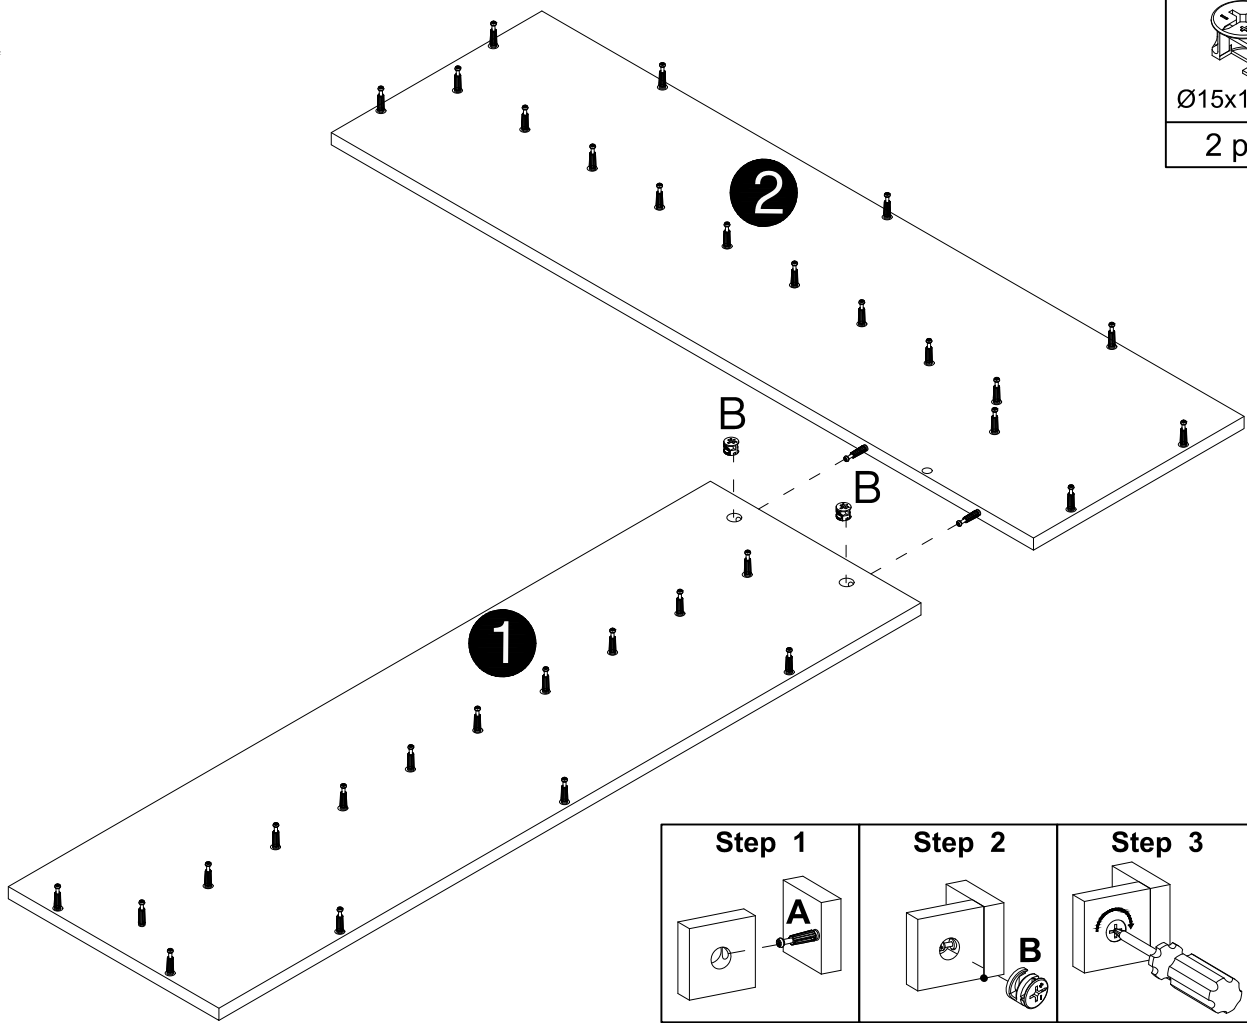
38




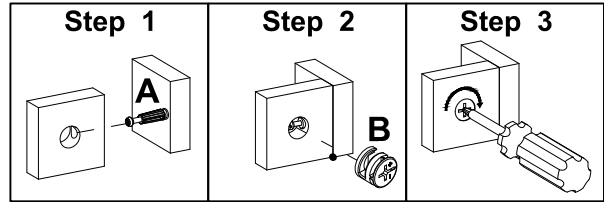
<b>A</b>

M6x40mm
15 pcs




39

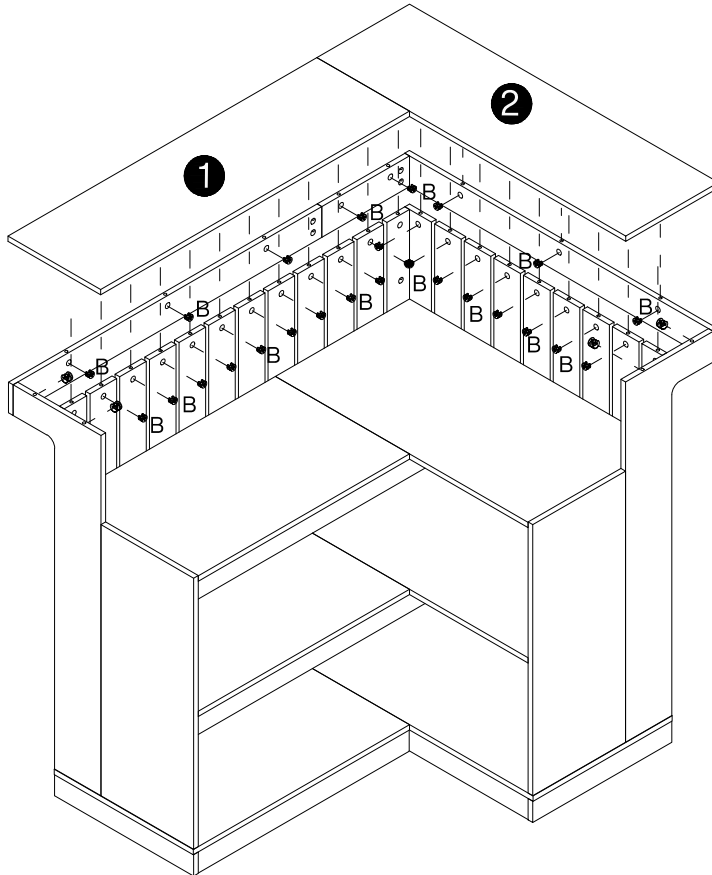
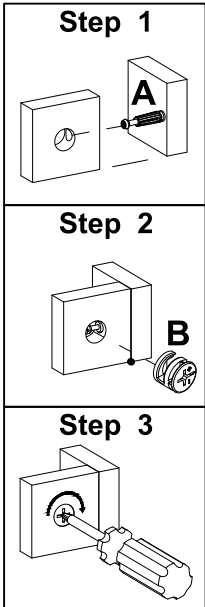


<b>B</b>

Ø15x12mm
2 pcs




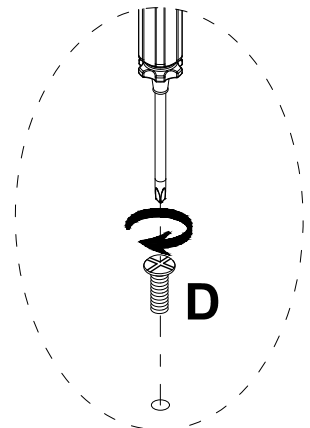
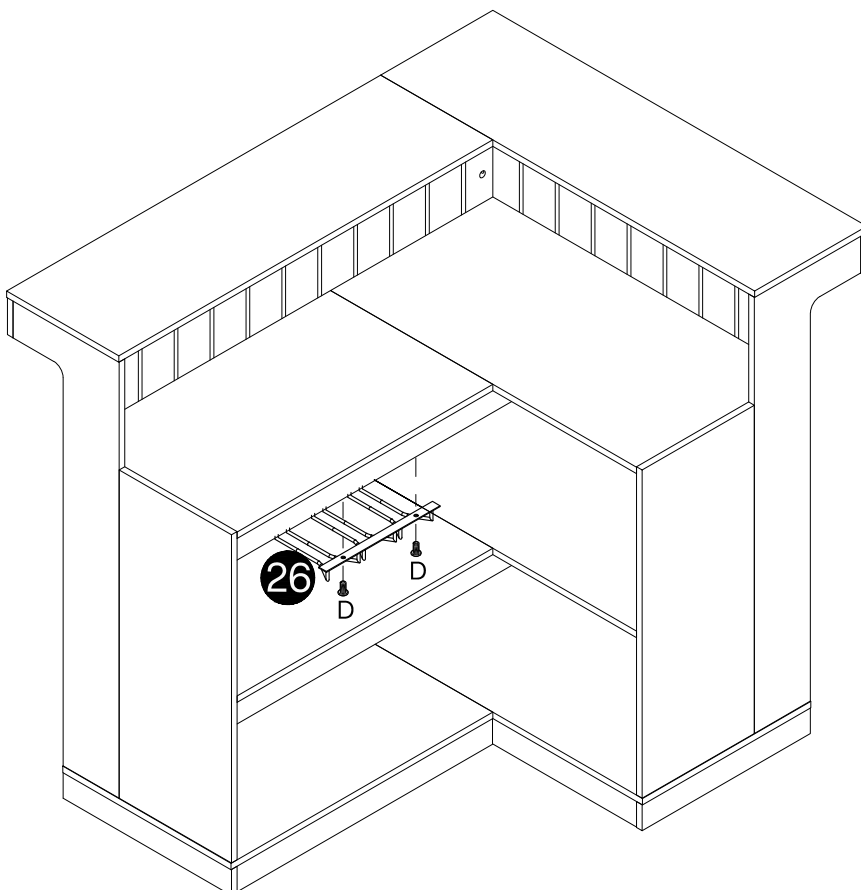
40

<b>B</b>

Ø15x12mm
33 pcs



41

<b>D</b>

Ø6x12mm
4 pcs



**Thank you for your support !**

