


Computer Desk (Black Finish)


IMPORTANT NOTE

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occurring to the wood parts.


We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.

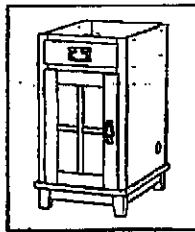


Left Unit

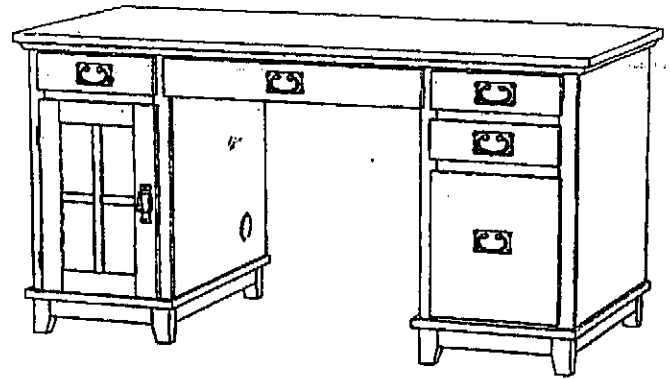

Left Unit Part List

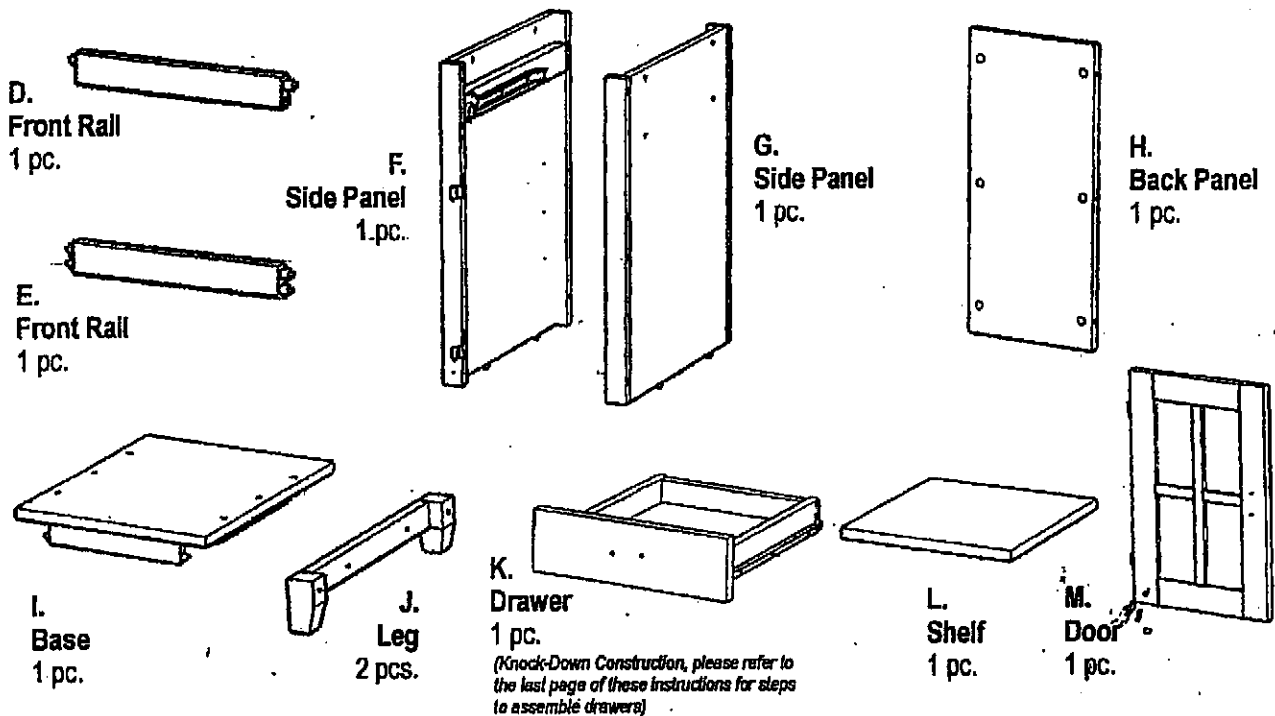

Hardware List

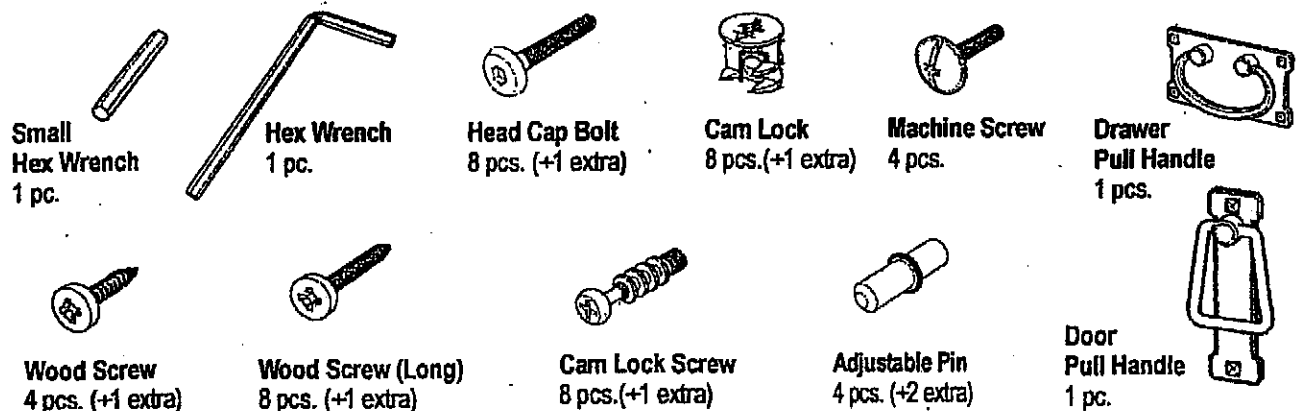


Tools required for assembly: Phillips screwdriver

IMPORTANT


Do not tighten up all the screws until each part is properly assembled.

You should keep Hex Wrench in the safe place as you may need to tighten up the Head Cap Bolts in the future.

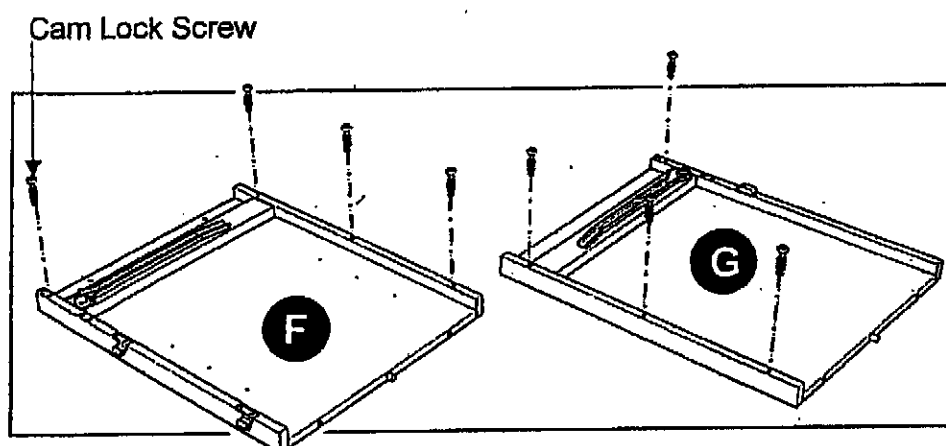

STEP 1

Put Cam Lock Screws into the pre-drilled holes of Side Panel (F),(G) and tighten.

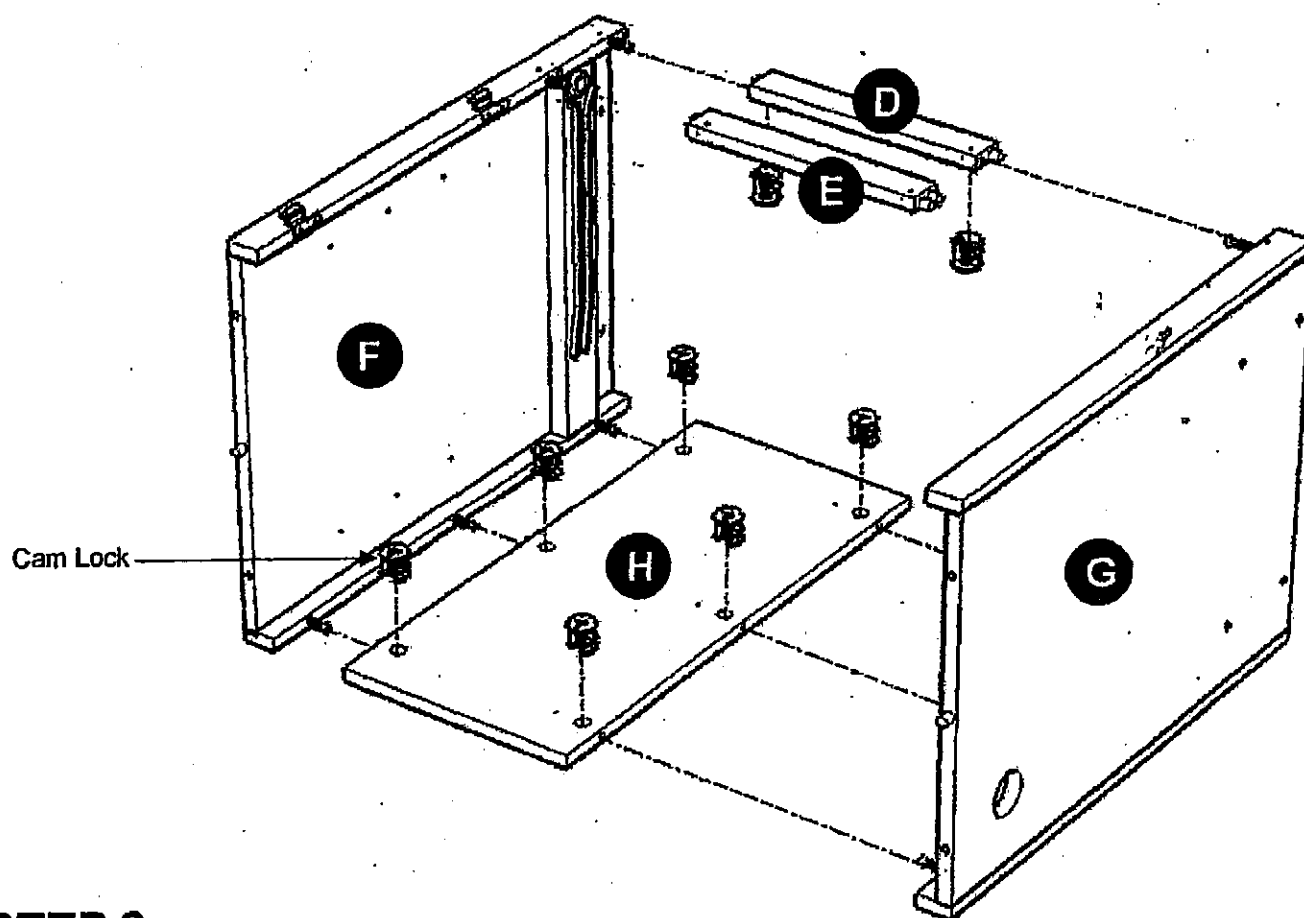

STEP 2


Attach Front Rails (D), (E) and Back Panel (H) to Side Panel (F) using Cam Locks.

Attach Side Panel (G) to the unit using Cam Locks.


STEP 3

Attach Base (I) to the unit with Head Cap Bolts.


Attach Leg (J) to Base (I) with Head Cap Bolts.

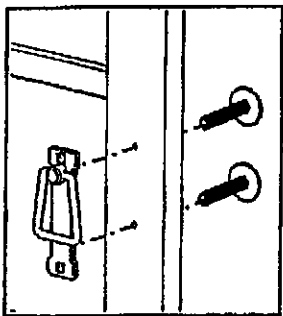

(Figure 1)

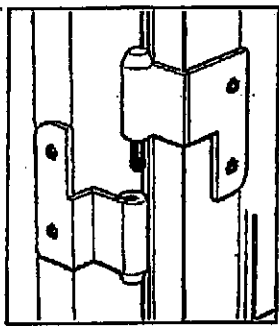

(Figure 2)

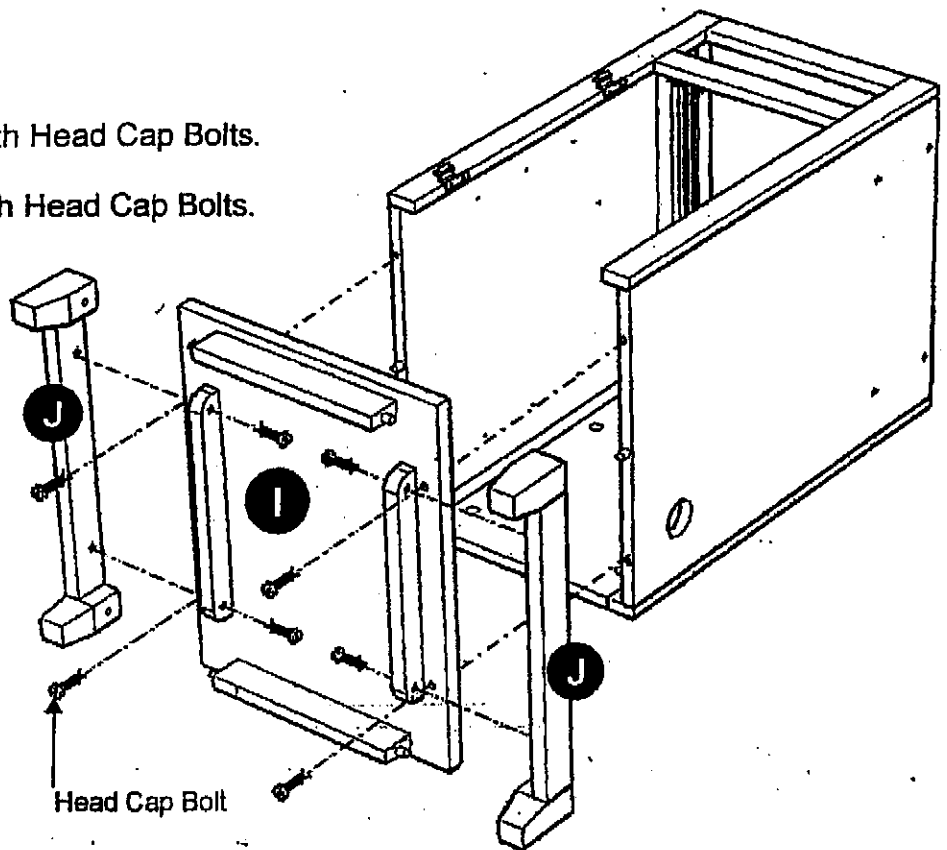

Head Cap Bolt

STEP 4

Turn the unit to its upright position.


Slide Drawer (K) into place.

Insert Adjustable Pins
Into both side panels at
the desired level.

Slide Shelf (L) into place.

Assemble Pull Handle
to Door (M) with Machine Screws.
(see Figure 1)

Attach Door (M) to the side panels
by sliding the door lift hinges into
the side panel lift hinges.
(see Figure 2)

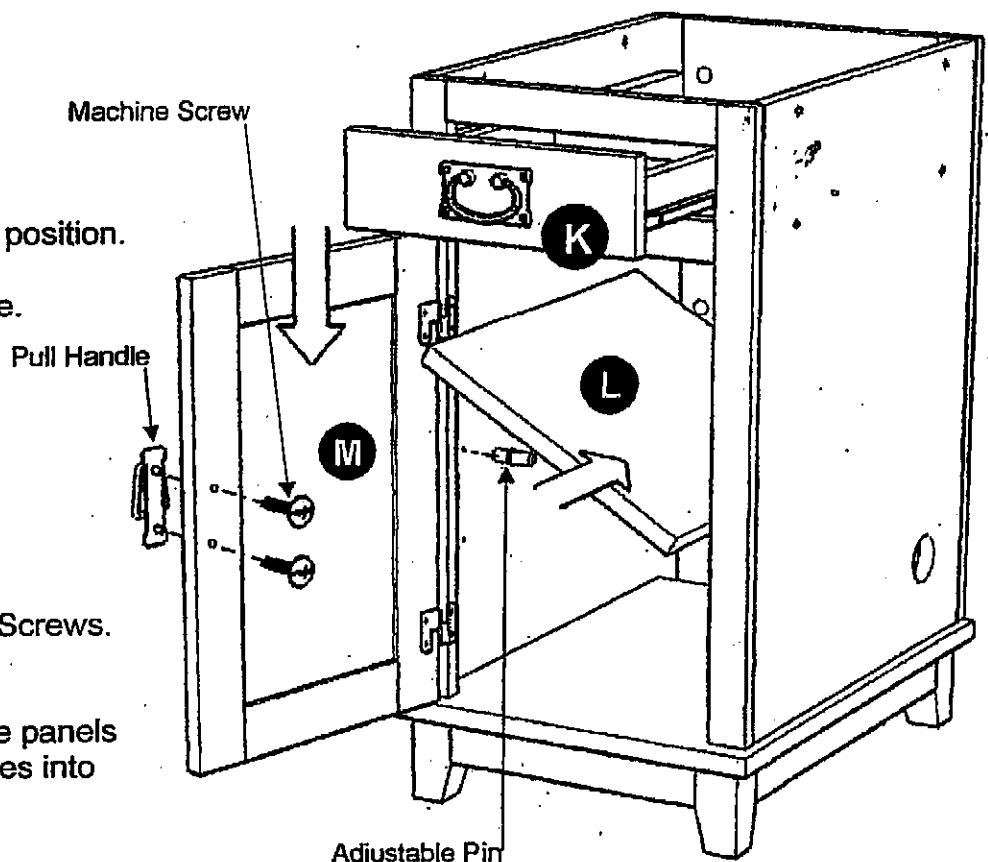

Machine Screw

Pull Handle

Adjustable Pin

Drawer (K)

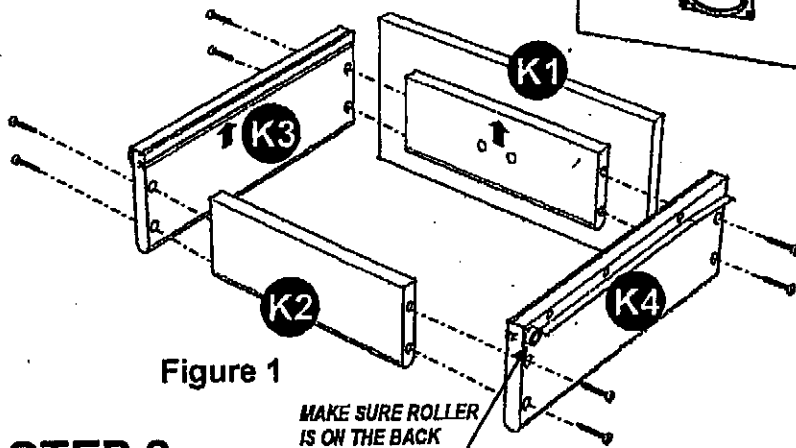


Figure 1

STEP 1

Attach K1 to K3 and K4, using a Phillips screwdriver and long wood screws (4X), tighten halfway.

Attach K2 to K3 and K4 using long wood screws (4X), tighten halfway. (see Figure 1)

STEP 2

Slide K5 into the grooves in K3 and K4. Be sure to push K5 all the way forward so it meets K1. (see Figure 2)

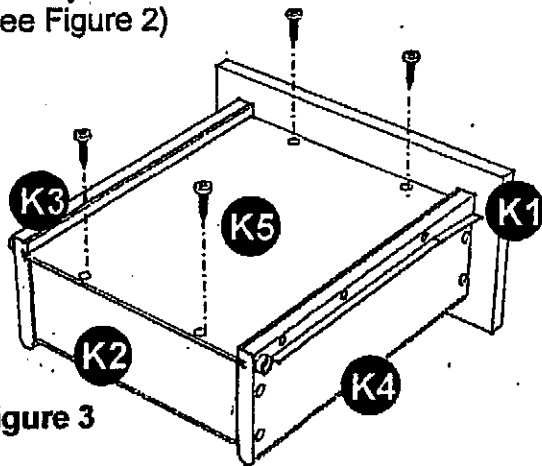


Figure 3

STEP 3

Insert short wood screws (6X) into the pre-drilled holes in K5, tighten screws. (see Figure 3)

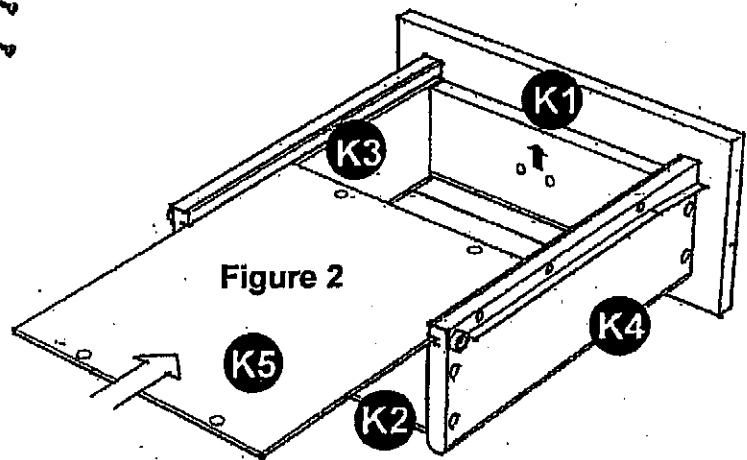


Figure 2

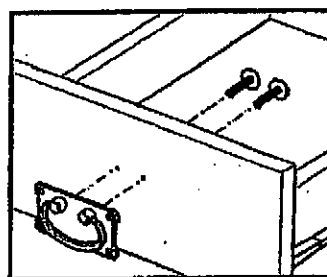



Figure 4

STEP 4


Attach hardware pulls with machine screws. (see Figure 4)

Tighten all screws used in drawer assembly.


Part List

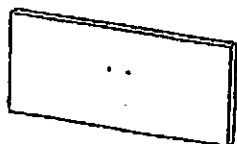


K1:
Front Part
1 pc.

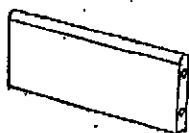

K2:
Back Part
1 pc.

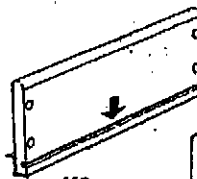

K3:
Side Part
1 pc.

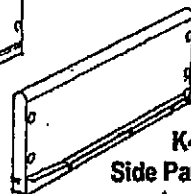

K4:
Side Part
1 pc.



K5:
Base Part
1 pc.

VERY IMPORTANT !!

CARING INSTRUCTIONS

NEVER

USE GLASS CLEANERS ON FINISHED FURNITURE. AMMONIA WILL CHEMICALLY ATTACK THE LACQUER.

NEVER

ALLOW LIQUIDS OF ANY KIND TO REMAIN IN DECORATIVE ROUTE LINES. ABSORPTION CAUSES WOOD TO WARP AND FINISHED TO DE-LAMINATE.

DO NOT
WRITE
DIRECTLY
ON
SURFACE.



**PREVENT
MARKING**

DO NOT
PLACE IN
DIRECT
SUNLIGHT.



**PREVENT
FADING**

DO NOT USE
COMMERCIAL
WAXES AND
POLISHES.



**PREVENT
YELLOWING**

DO NOT
PLACE HOT
KETTLES
POTS, ETC
ON SURFACE.



**PREVENT
DAMAGE TO FINISH!**


DO NOT
USE
RUBBER-
BASED
PLACEMATS
USE CLOTHS!



**PREVENT
DISCOLORING**

TO CLEAN

SIMPLY USE A SOFT CLOTH MOISTENED IN LEMON OIL POLISH OR LUKEWARM SOAP & WATER THEN BUFF WITH A DRY CLEAN CLOTH!

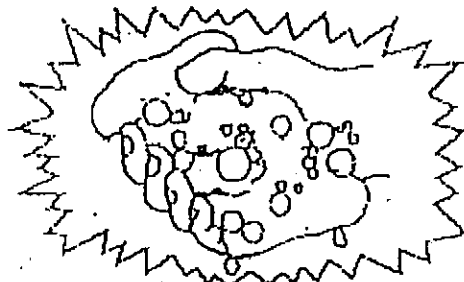


Arts & Crafts Computer Desk (Black Finish)


IMPORTANT NOTE

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occurring to the wood parts.


We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.

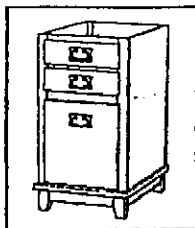


Right Unit

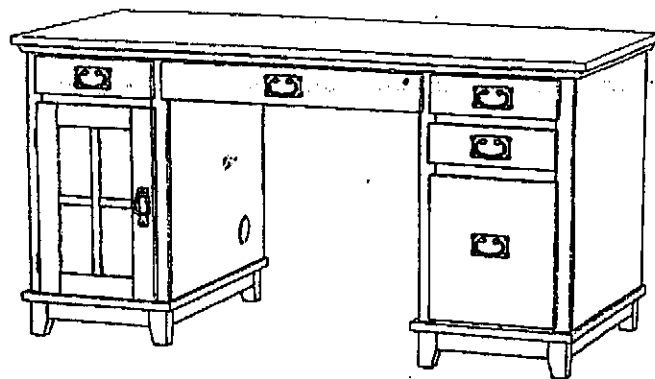

Right Unit Part List

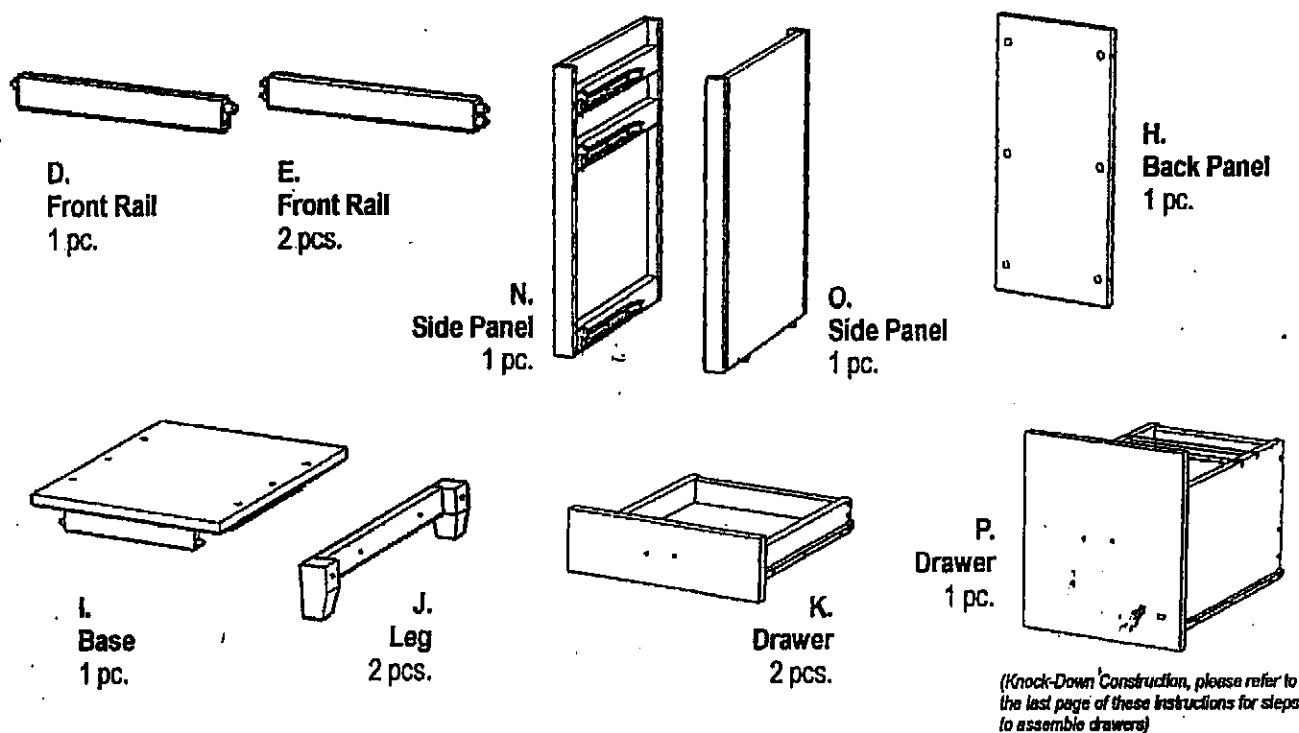

Hardware List

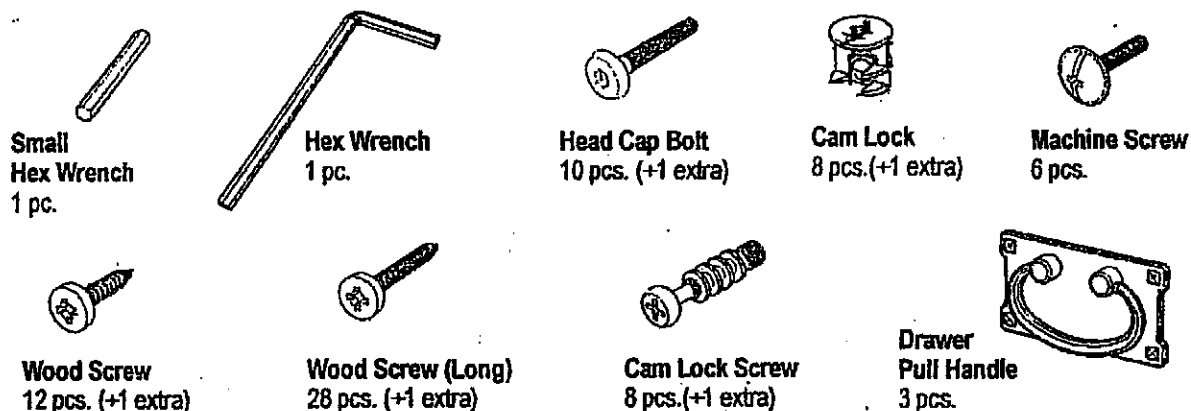


Tools required for assembly: **Phillips** screwdriver

IMPORTANT


Do not tighten up all the screws until each part is properly assembled.

You should keep Hex Wrench in the safe place as you may need to tighten up the Head Cap Bolts in the future.

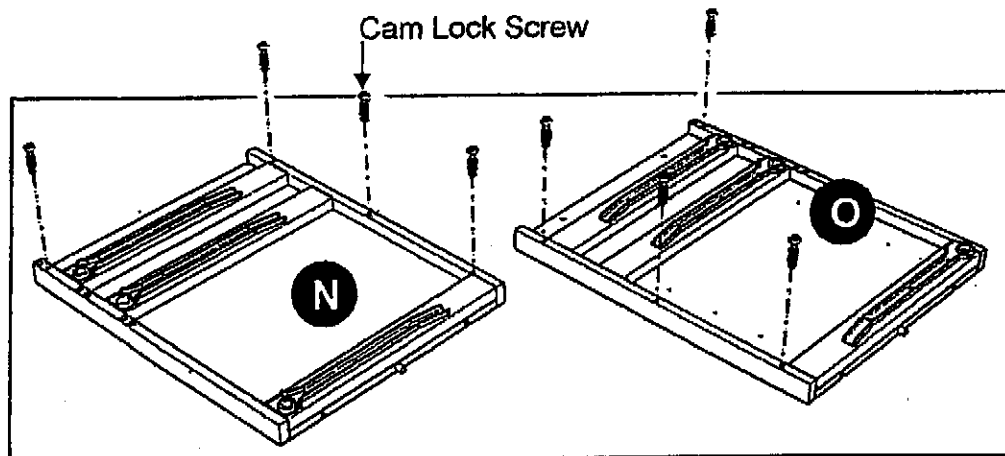

STEP 1

Put Cam Lock Screws into the pre-drilled holes of Side Panel (N), (O) and tighten.

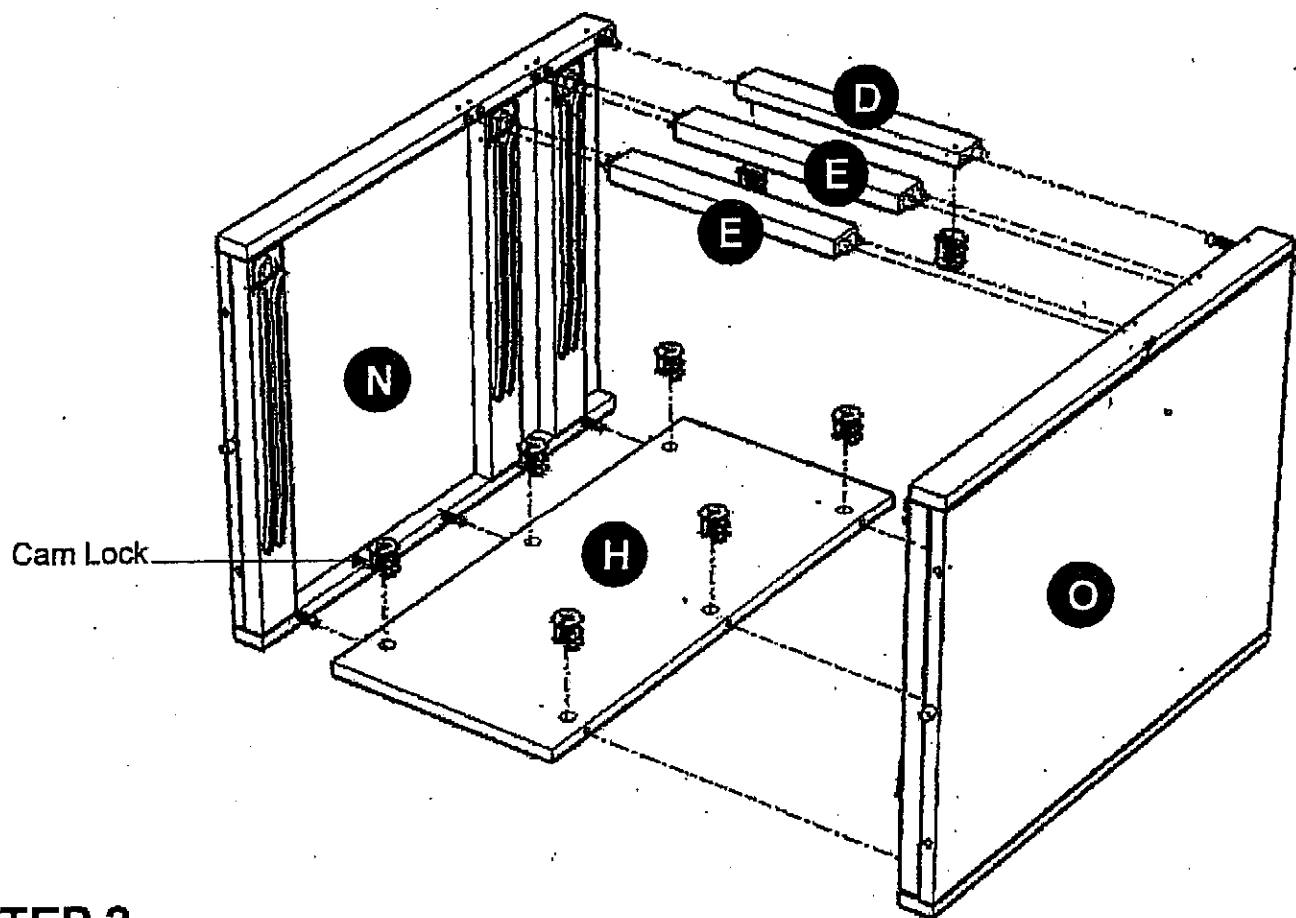

STEP 2



Attach Front Rail (D), (E) Back Panel (H) to Side Panel (N) using Cam Locks.

Attach Side Panel (O) to the unit using Cam Locks.

STEP 3

Attach Base (I) to the unit with Head Cap Bolts.

Attach Leg (J) to Base (I) with Head Cap Bolts.

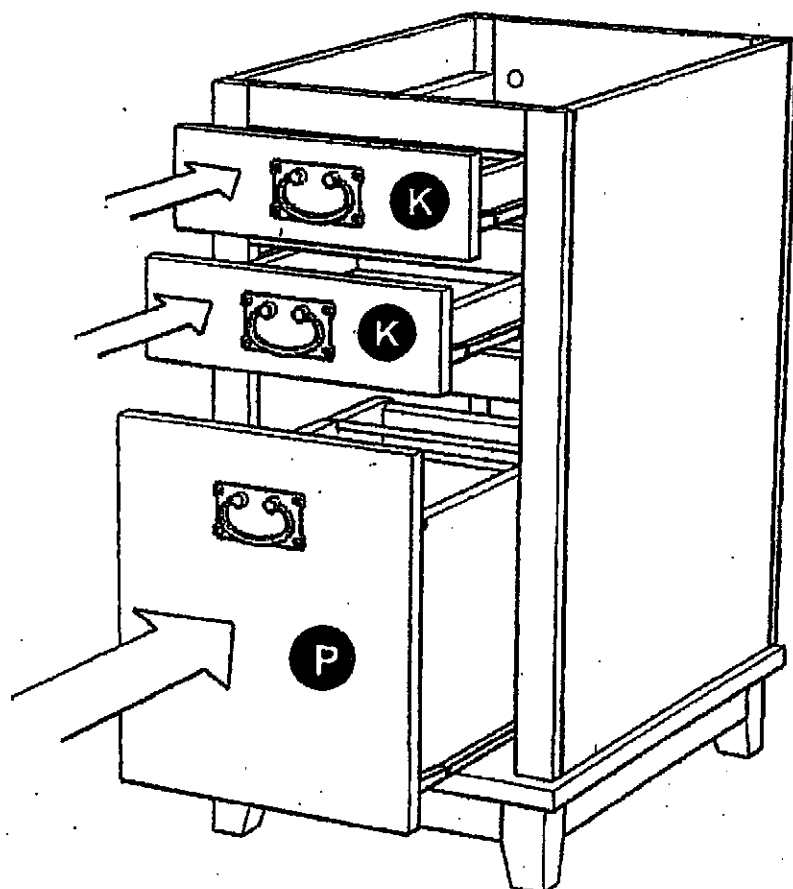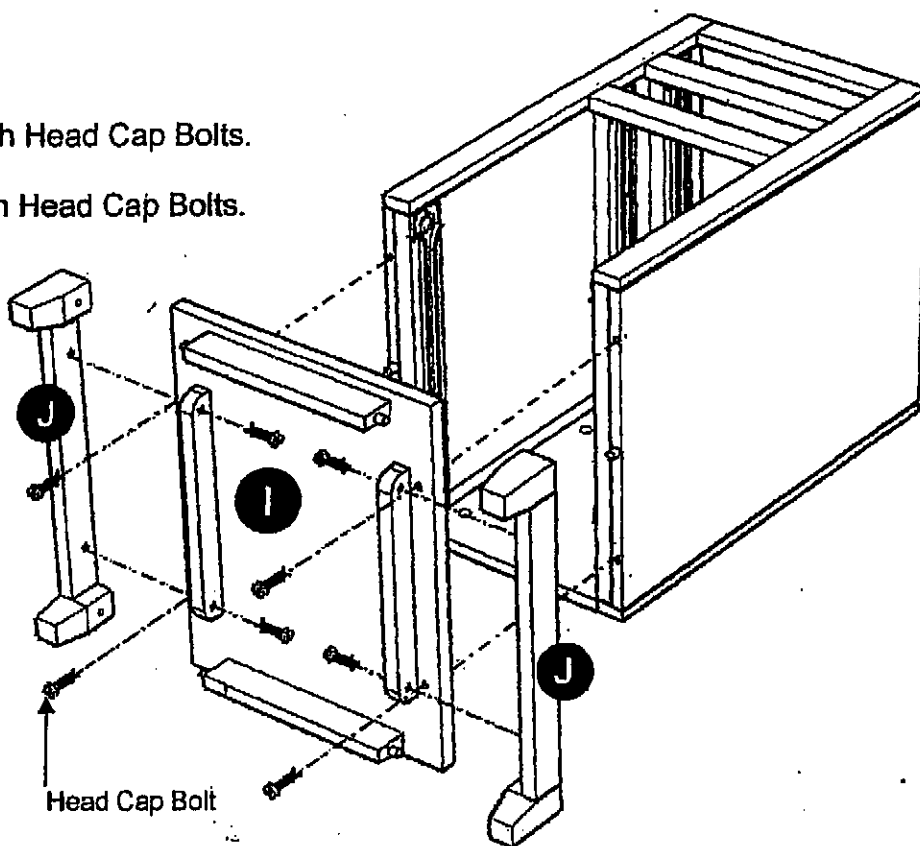

STEP 4

Turn the unit to its upright position.

Slide Drawer (K) and (P) into place.

Drawer (K)

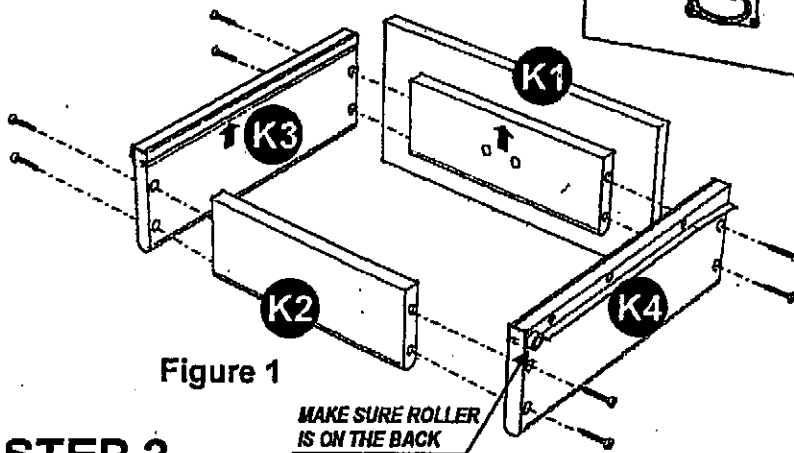


Figure 1

STEP 1

Attach K1 to K3 and K4, using a Phillips screwdriver and long wood screws (4X), tighten halfway.

Attach K2 to K3 and K4 using long wood screws (4X), tighten halfway. (see Figure 1)

STEP 2

Slide K5 into the grooves in K3 and K4. Be sure to push K5 all the way forward so it meets K1. (see Figure 2)

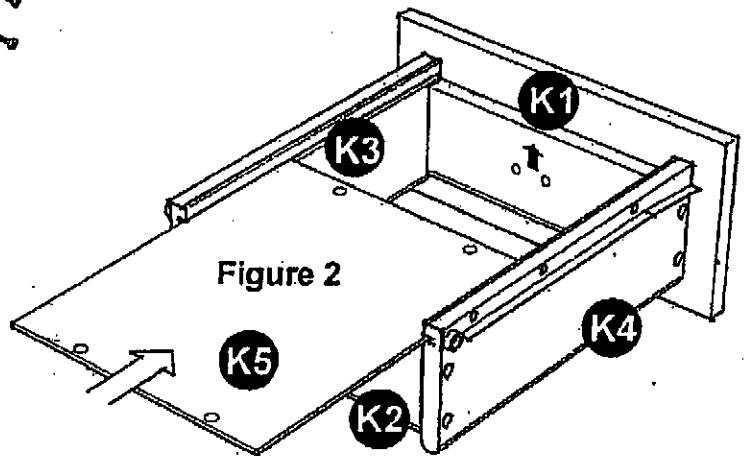


Figure 2

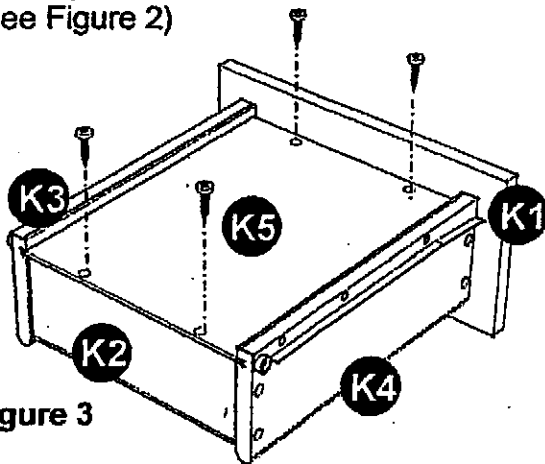


Figure 3

STEP 3

Insert short wood screws (6X) into the pre-drilled holes in K5, tighten screws. (see Figure 3)

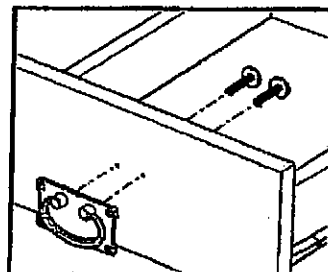



Figure 4

STEP 4


Attach hardware pulls with machine screws. (see Figure 4)

Tighten all screws used in drawer assembly.


Part List

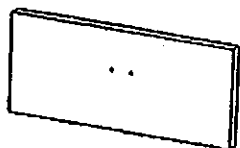


K1.
Front Part
2 pcs.

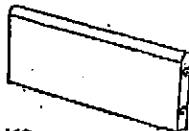


K2.
Back Part
2 pcs.

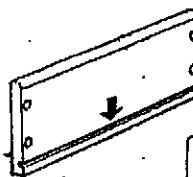

K3.
Side Part
2 pcs.

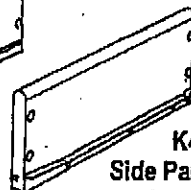

K4.
Side Part
2 pcs.

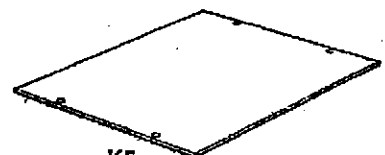

K5.
Base Part
2 pcs.

Drawer (P)

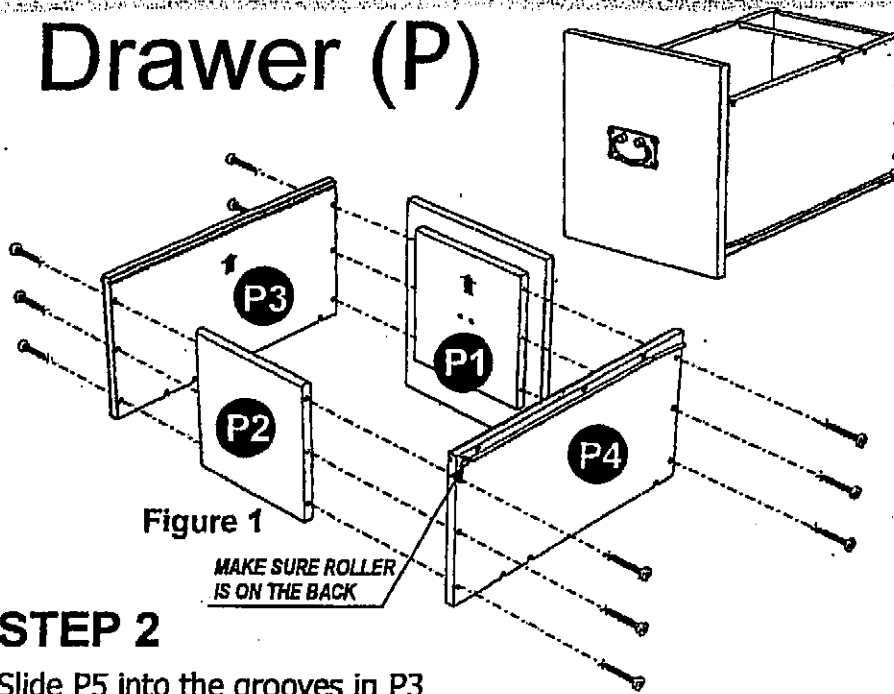


Figure 1

STEP 1

Attach P1 to P3 and P4, using a Phillips screw driver and long wood screws (8X), tighten halfway.

Attach P2 to P3 and P4 using long wood screws (8X), tighten halfway. (see Figure 1)

STEP 2

Slide P5 into the grooves in P3 and P4. Be sure to push P5 all the way forward so it meets P1. (see Figure 2)

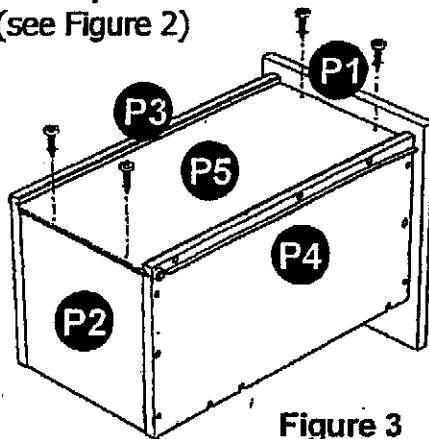


Figure 3

STEP 3

Insert short wood screws (4X) into the pre-drilled holes in P5, tighten screws. (see Figure 3)

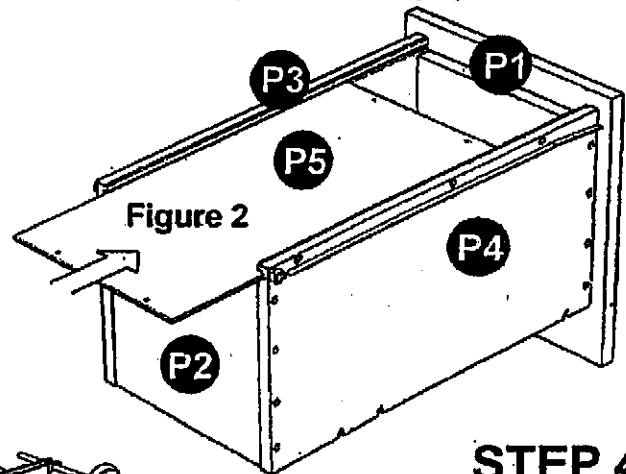


Figure 2

STEP 4

Attach hardware pulls with machine screws.

Remove the tape holding the Metal Strips in place.


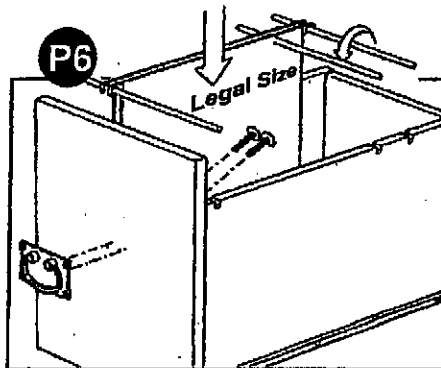


Figure 4


You can adjust the Metal Strip for letter size or legal size file as shown. (see Figure 4)

Tighten all screws used in drawer assembly.


Part List

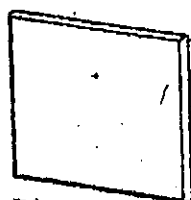


P1.
Front Part
1 pc.

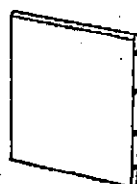

P2.
Back Part
1 pc.

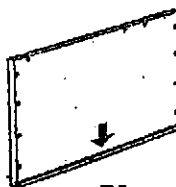


P3.
Side Part
1 pc.

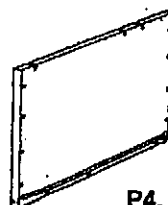

P4.
Side Part
1 pc.



P5.
Base Part
1 pc.



P6.
Metal Strip
2 pcs.

VERY IMPORTANT !!

CARING INSTRUCTIONS

NEVER

USE GLASS CLEANERS ON FINISHED FURNITURE. AMMONIA WILL CHEMICALLY ATTACK THE LACQUER.

NEVER

ALLOW LIQUIDS OF ANY KIND TO REMAIN IN DECORATIVE ROUTE LINES. ABSORPTION CAUSES WOOD TO WARP AND FINISH TO DE-LAMINATE.

DO NOT
WRITE
DIRECTLY
ON
SURFACE.



**PREVENT
MARKING**

DO NOT
PLACE IN
DIRECT
SUNLIGHT.



**PREVENT
FADING**

DO NOT USE
COMMERCIAL
WAXES AND
POLISHES.



**PREVENT
YELLOWING**

DO NOT
PLACE HOT
KETTLES
POTS, ETC
ON SURFACE.



**PREVENT
DAMAGE TO FINISH!**


DO NOT
USE
RUBBER-
BASED
PLACEMATS
USE CLOTHS!



**PREVENT
DISCOLORING.**

TO CLEAN


SIMPLY USE A SOFT CLOTH MOISTENED IN LEMON OIL POLISH OR LUKEWARM SOAP & WATER THEN BUFF WITH A DRY CLEAN CLOTH!

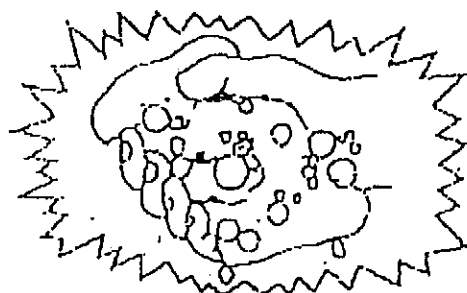

Arts & Crafts Computer Desk



Top Unit

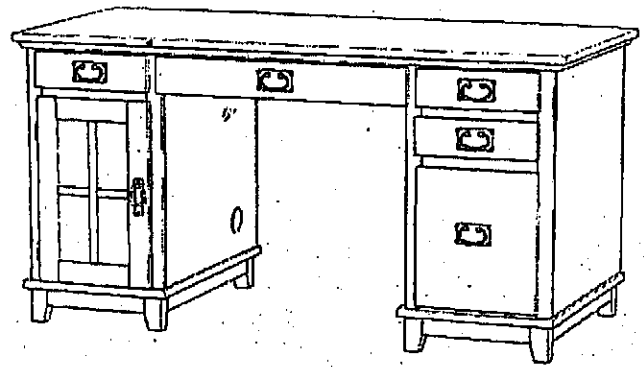


IMPORTANT NOTE


Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occurring to the wood parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.

Top Unit Part List

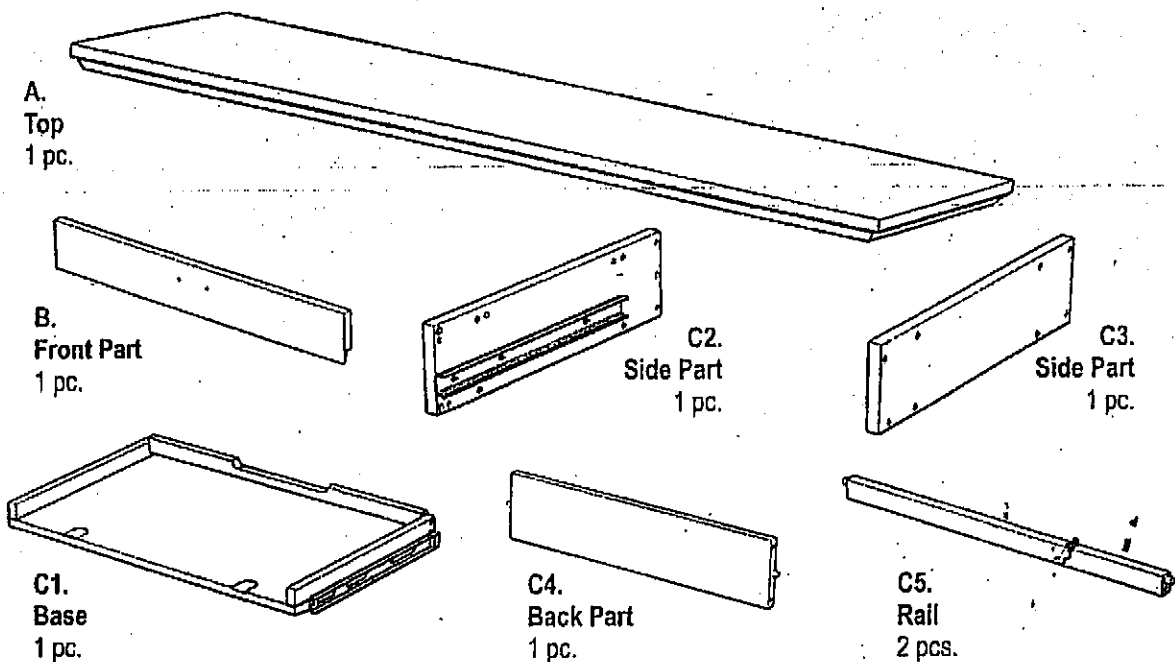

Hardware List

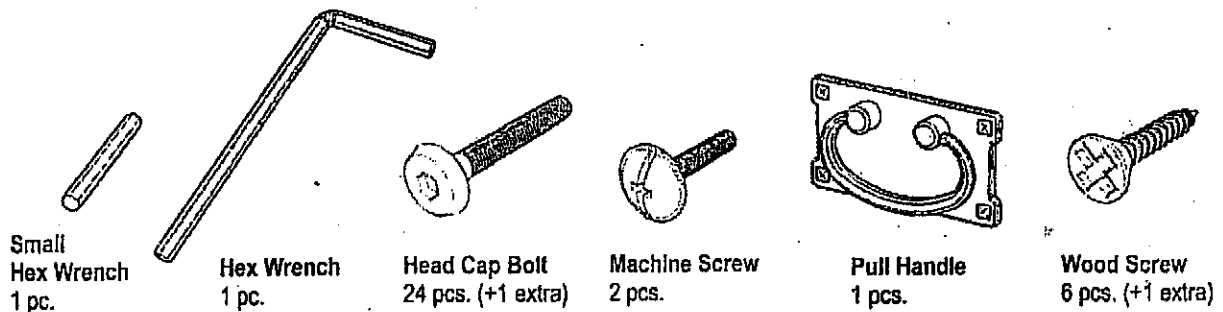

Tools required for assembly: **Phillips** screwdriver

Assembly Instructions 2/2

IMPORTANT




Do not tighten up all the screws until each part is properly assembled.

You should keep Hex Wrench in the safe place as you may need to tighten up the Head Cap Bolts in the future.

STEP 1


Attach Rail (C5) and Back Part (C4) to Side Part (C2) with Head Cap Bolts, then attach Side Part (C3) to the unit with Head Cap Bolts and tighten. (see Figure 1)

Attach assembled drawer box in Step 1 to Left Unit and Right Unit with Head Cap Bolts.

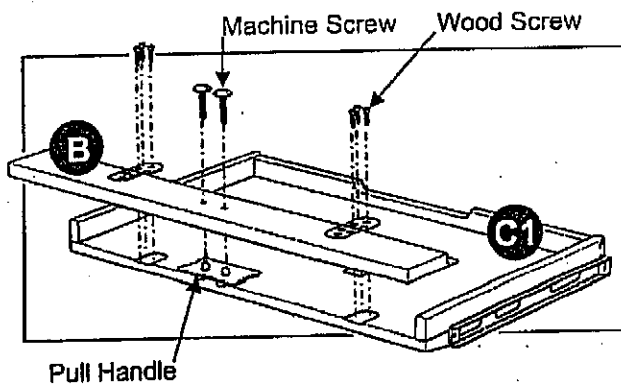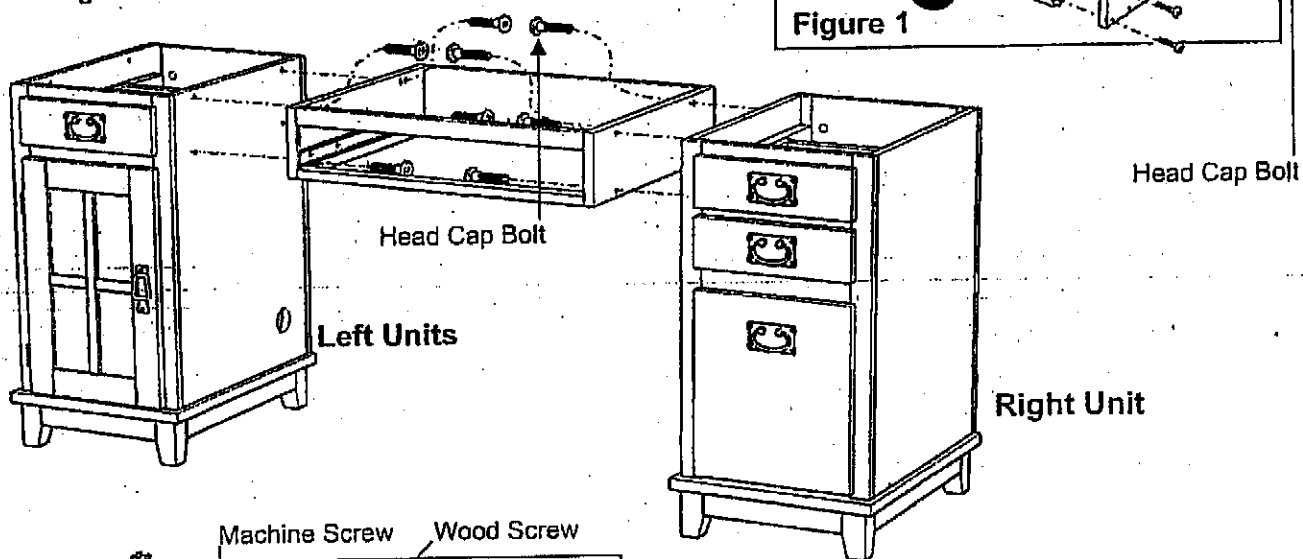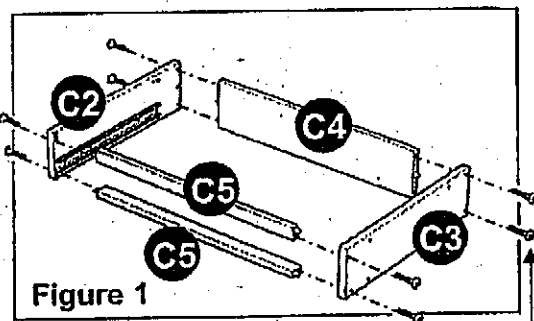

STEP 2

Attach Pull Handle to Front Part (B) with Machine Screws, then attach Front Part (B) to Base (C1) with Wood Screws.

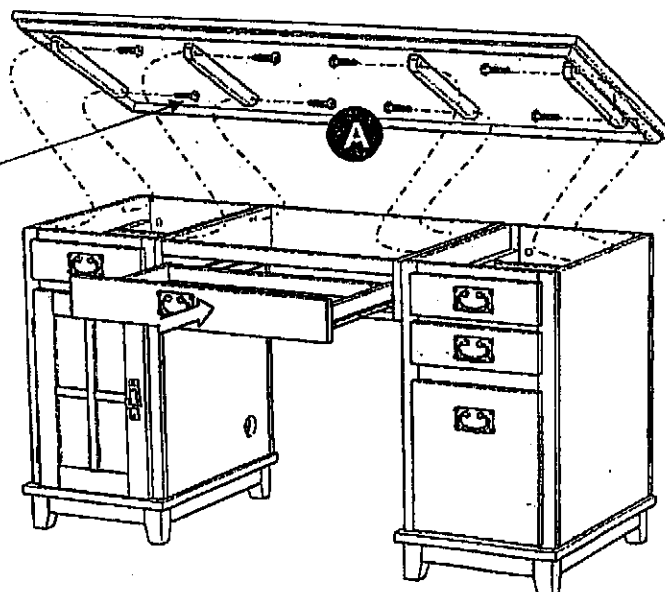

STEP 3

Place Top (A) on the unit with Head Cap Bolts.

Slide drawer assembled in Step 2 into Place.

VERY IMPORTANT !!

CARING INSTRUCTIONS

NEVER

USE GLASS CLEANERS ON
FINISHED FURNITURE. AMMONIA
WILL CHEMICALLY ATTACK THE
LACQUER.

NEVER

ALLOW LIQUIDS OF ANY KIND TO
REMAIN IN DECORATIVE ROUTE LINES.
ABSORPTION CAUSES WOOD TO WARP
AND FINISH TO DE-LAMINATE.

DO NOT
WRITE
DIRECTLY
ON
SURFACE.



**PREVENT
MARKING**

DO NOT
PLACE IN
DIRECT
SUNLIGHT.



**PREVENT
FADING**

DO NOT USE
COMMERCIAL
WAXES AND
POLISHES.



**PREVENT
YELLOWING**

DO NOT
PLACE HOT
KETTLES
POTS, ETC
ON SURFACE.



**PREVENT
DAMAGE TO FINISH**

DO NOT
USE
RUBBER-
BASED
PLACEMATS
USE CLOTHS.



**PREVENT
DISCOLORING**

TO CLEAN

SIMPLY USE A SOFT CLOTH MOISTENED
IN LEMON OIL POLISH OR LUKEWARM
SOAP & WATER THEN BUFF WITH A DRY
CLEAN CLOTH

