

INSTALL YOUR MIRROR THE RIGHT WAY


Professional Z-Bar Mounting in 4 Simple Steps

1



Install the Bottom Z-Bar Bracket

2

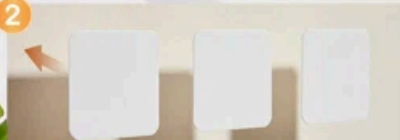

Apply Double-Sided Adhesive Pads

3



Apply Double-Sided Adhesive Pads
⚠ Do NOT push the mirror in horizontally.

4



Secure the Top Z-Bar & Tighten Screws

