


ASSEMBLY INSTRUCTION

IMPORTANT NOTE:


** PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.

** BEFORE YOU BEGIN , KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.


** DO NOT TIGHTEN ALL SCREWS UNTIL THE CHAIR IS FULLY SET-UP.

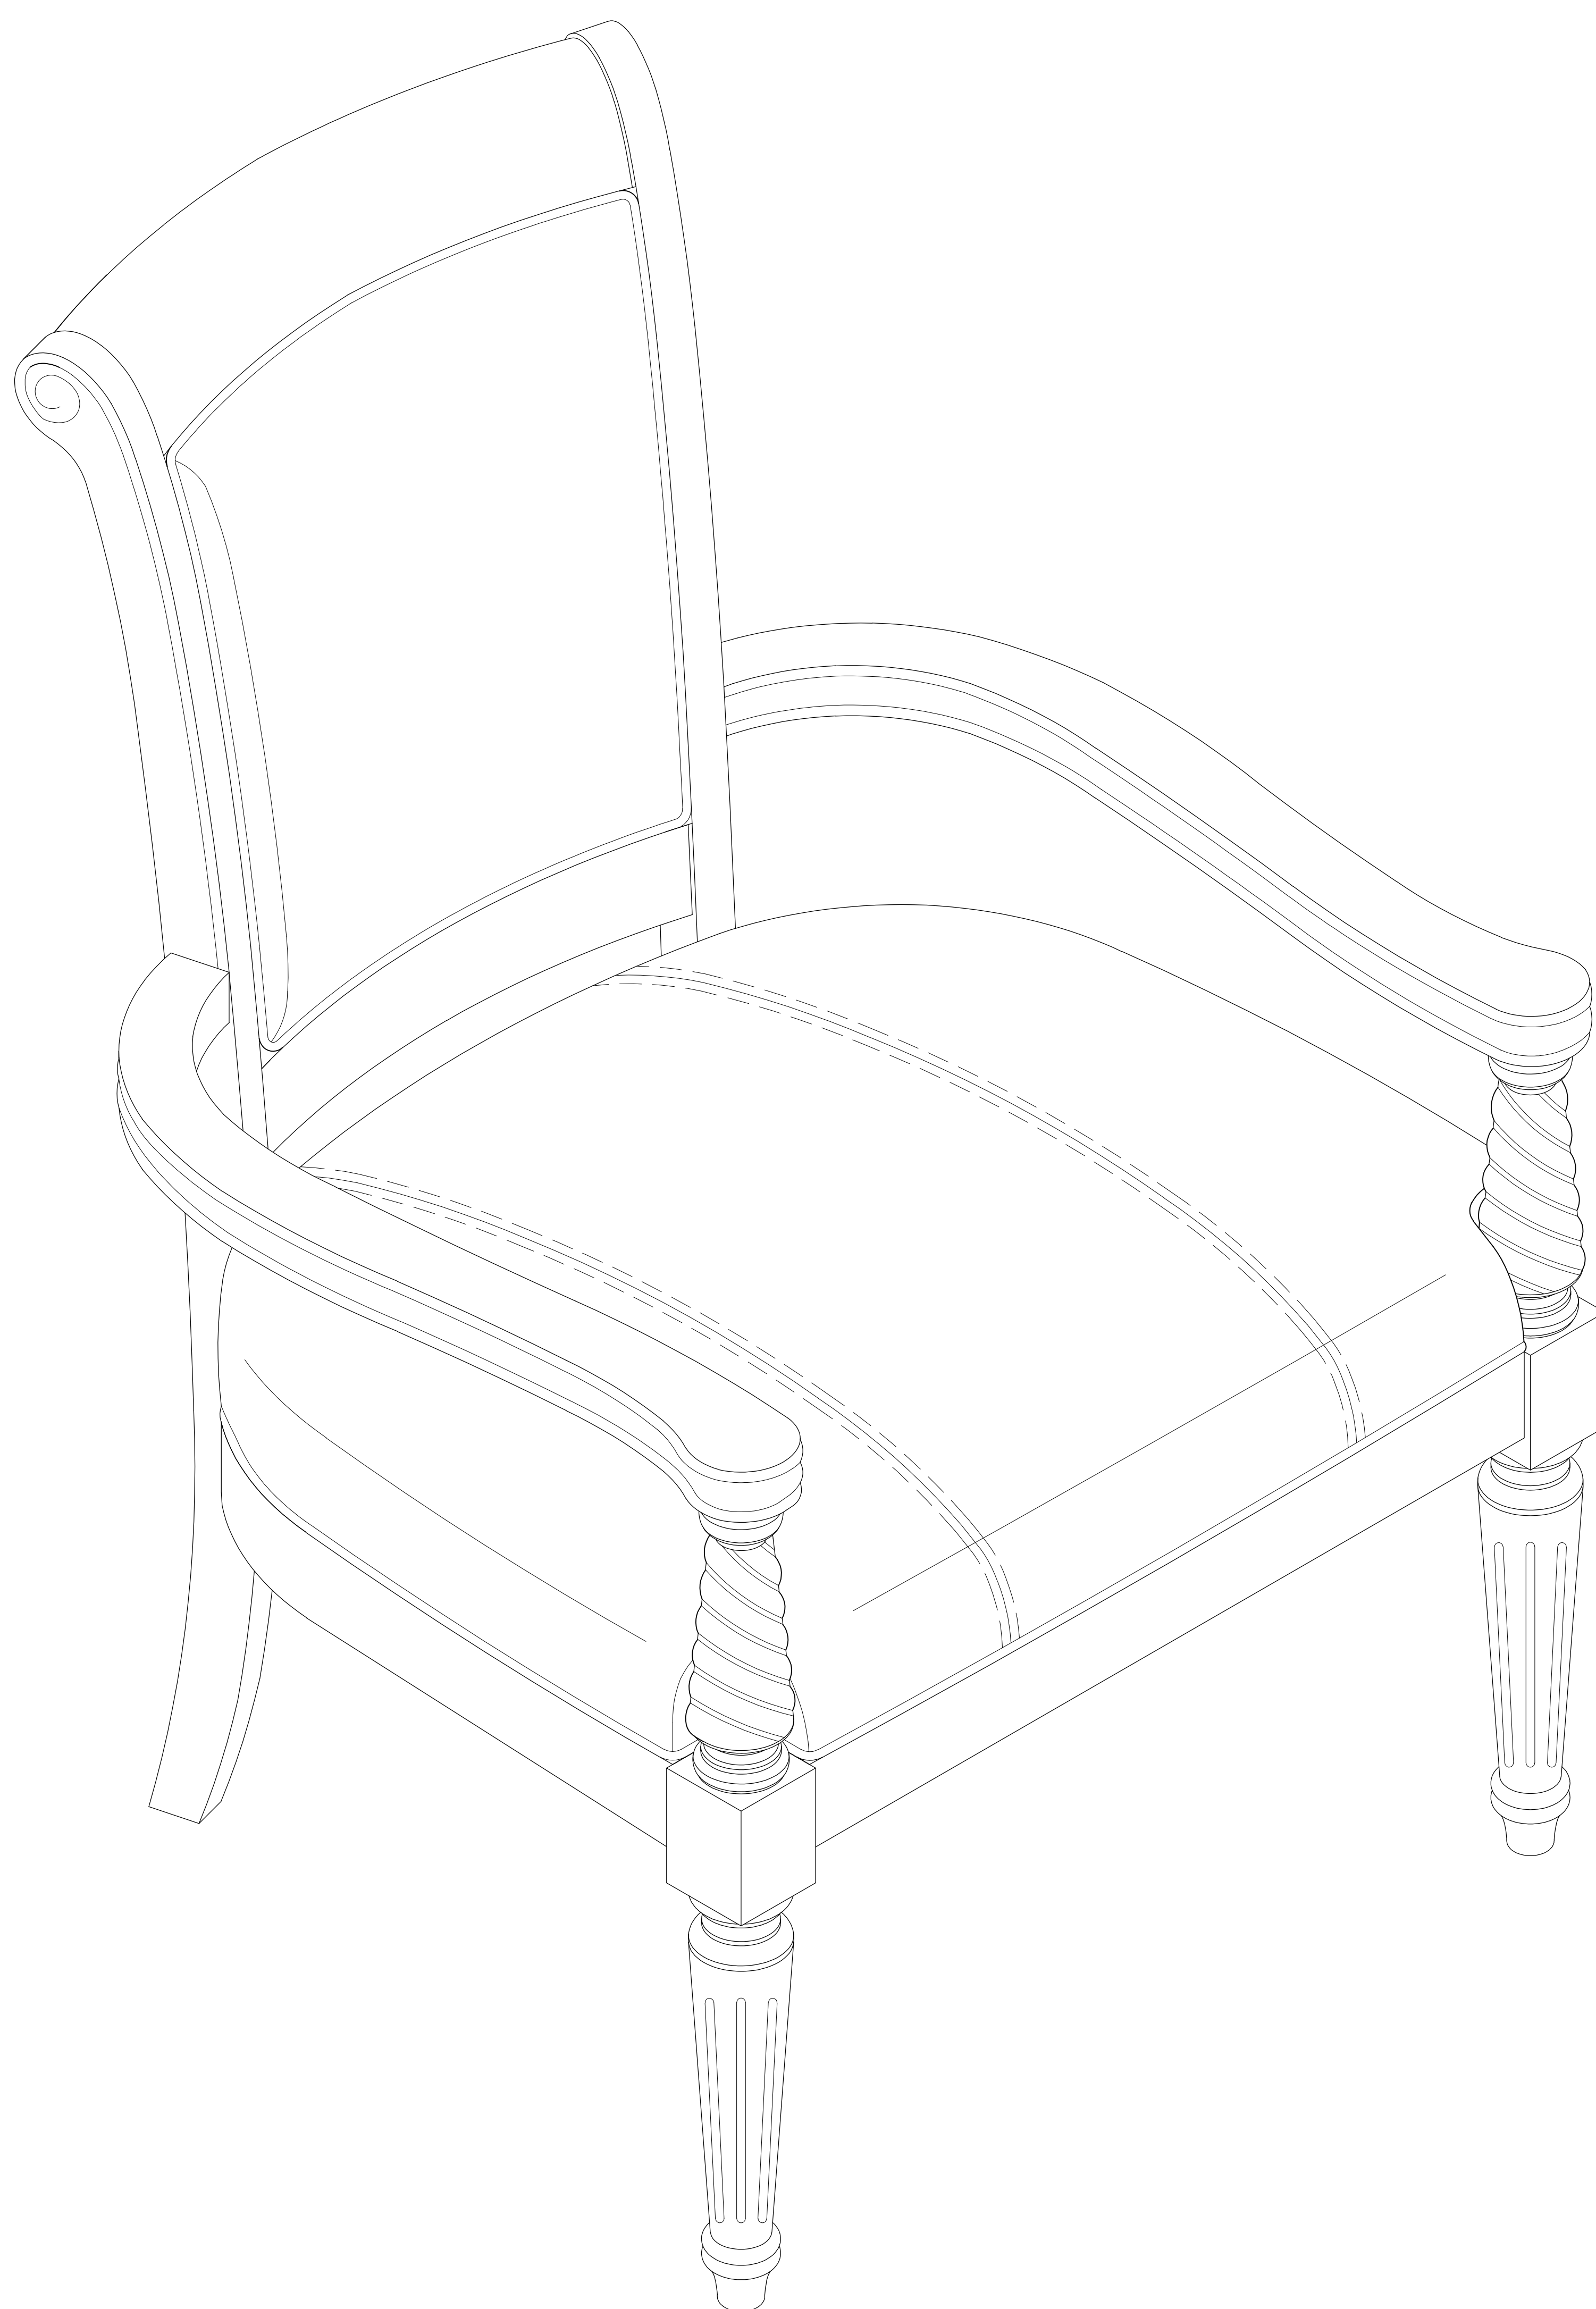


PARTS AND HARDWARE

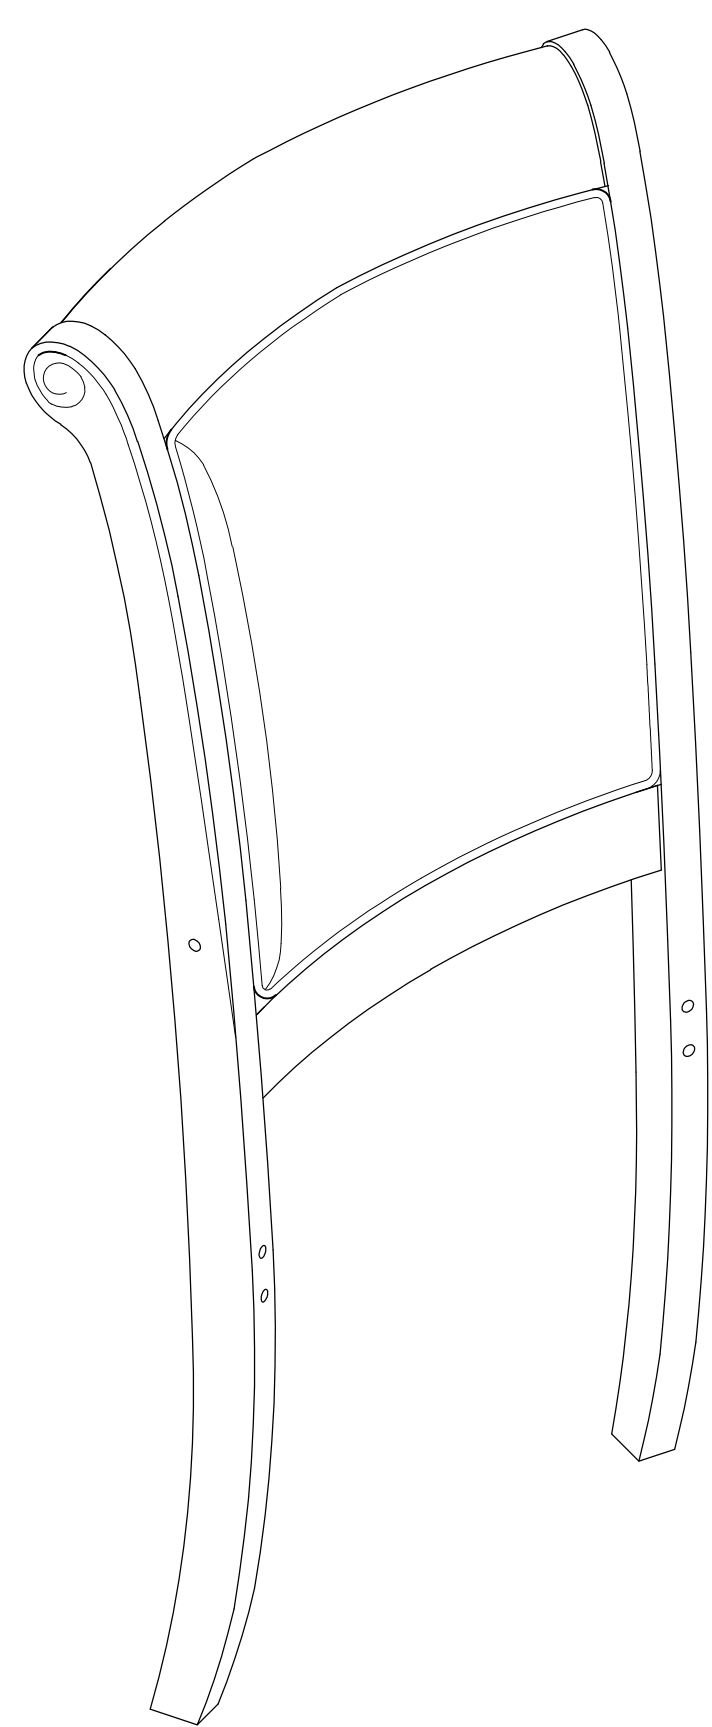


A : CHAIRBACK 1 PC

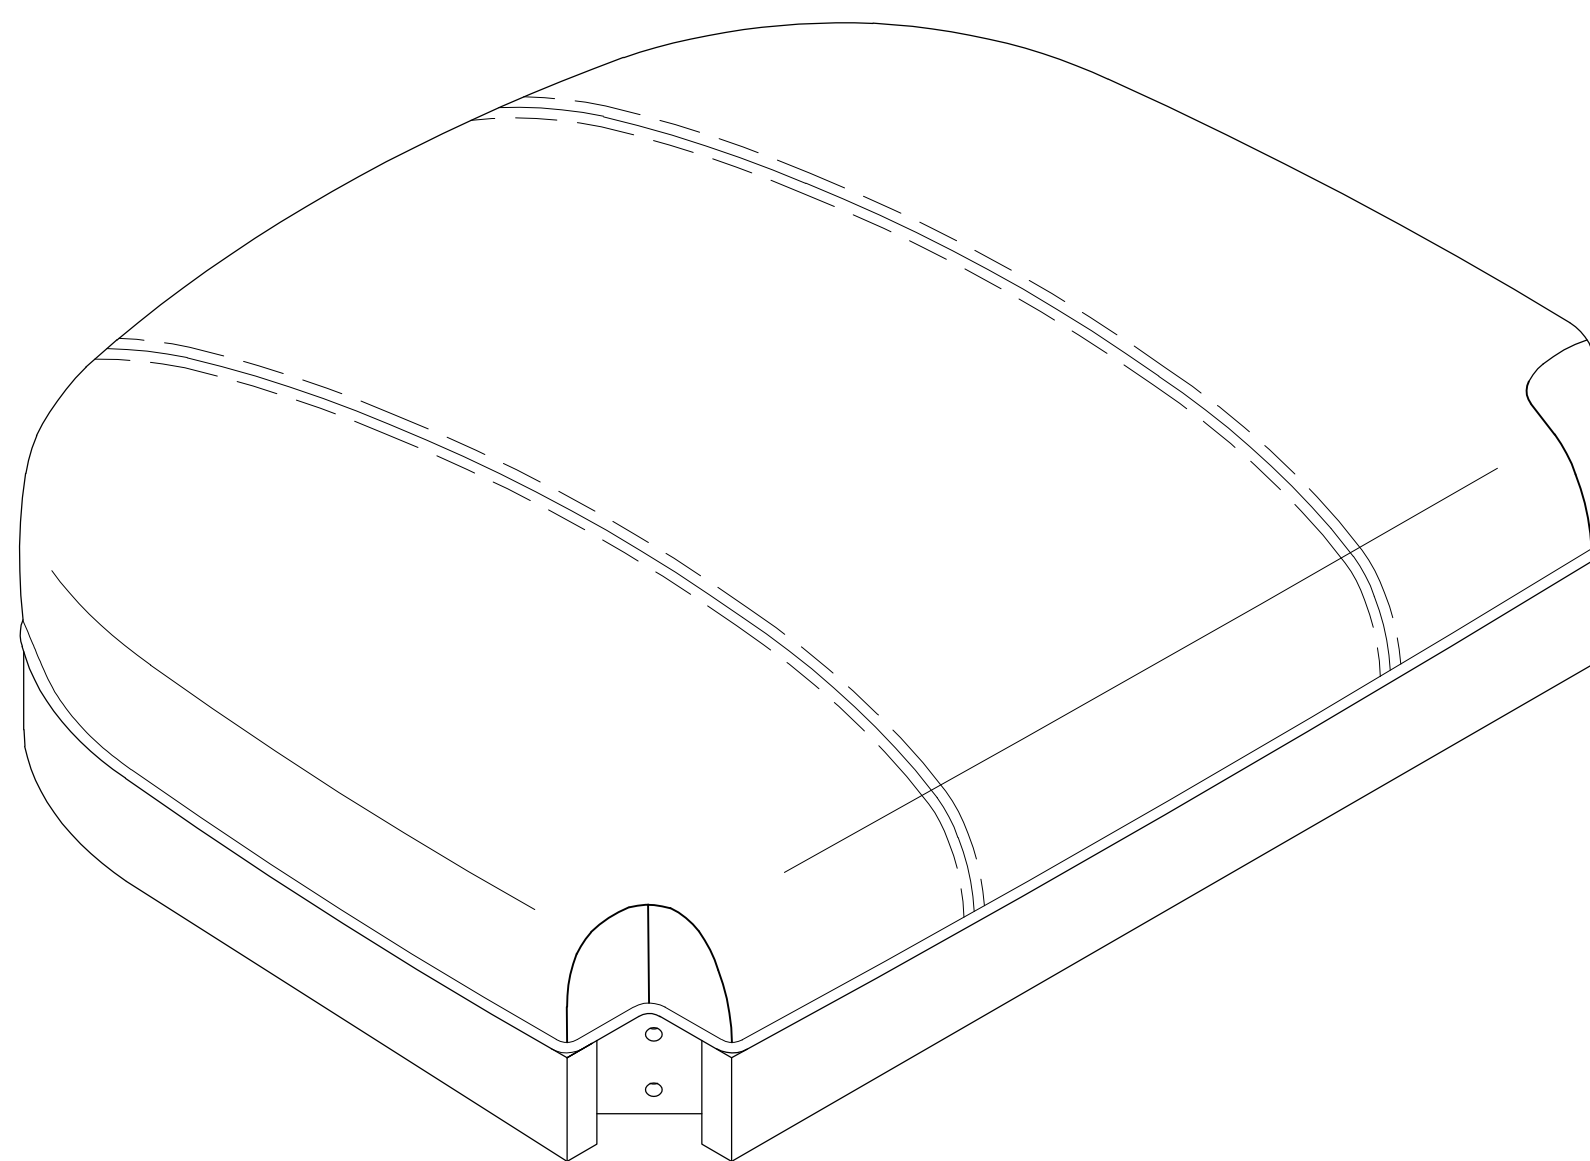


B : SEAT FRAME 1 PC

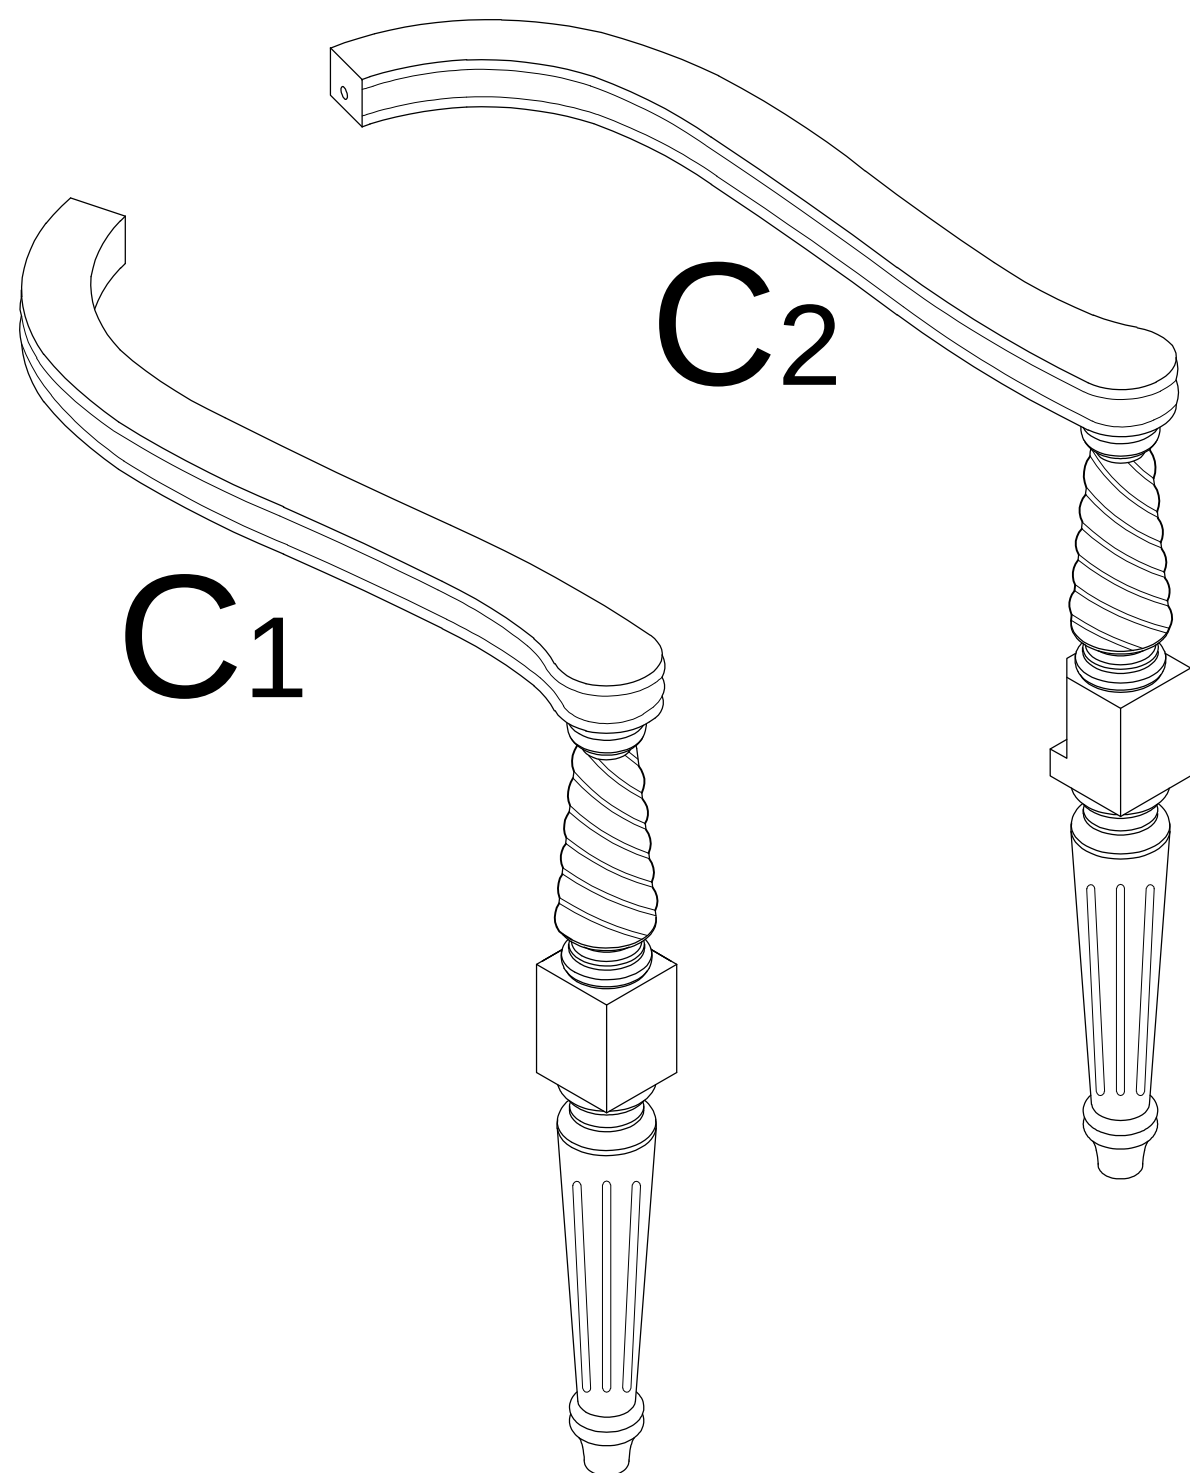


C : ARM 1 PC

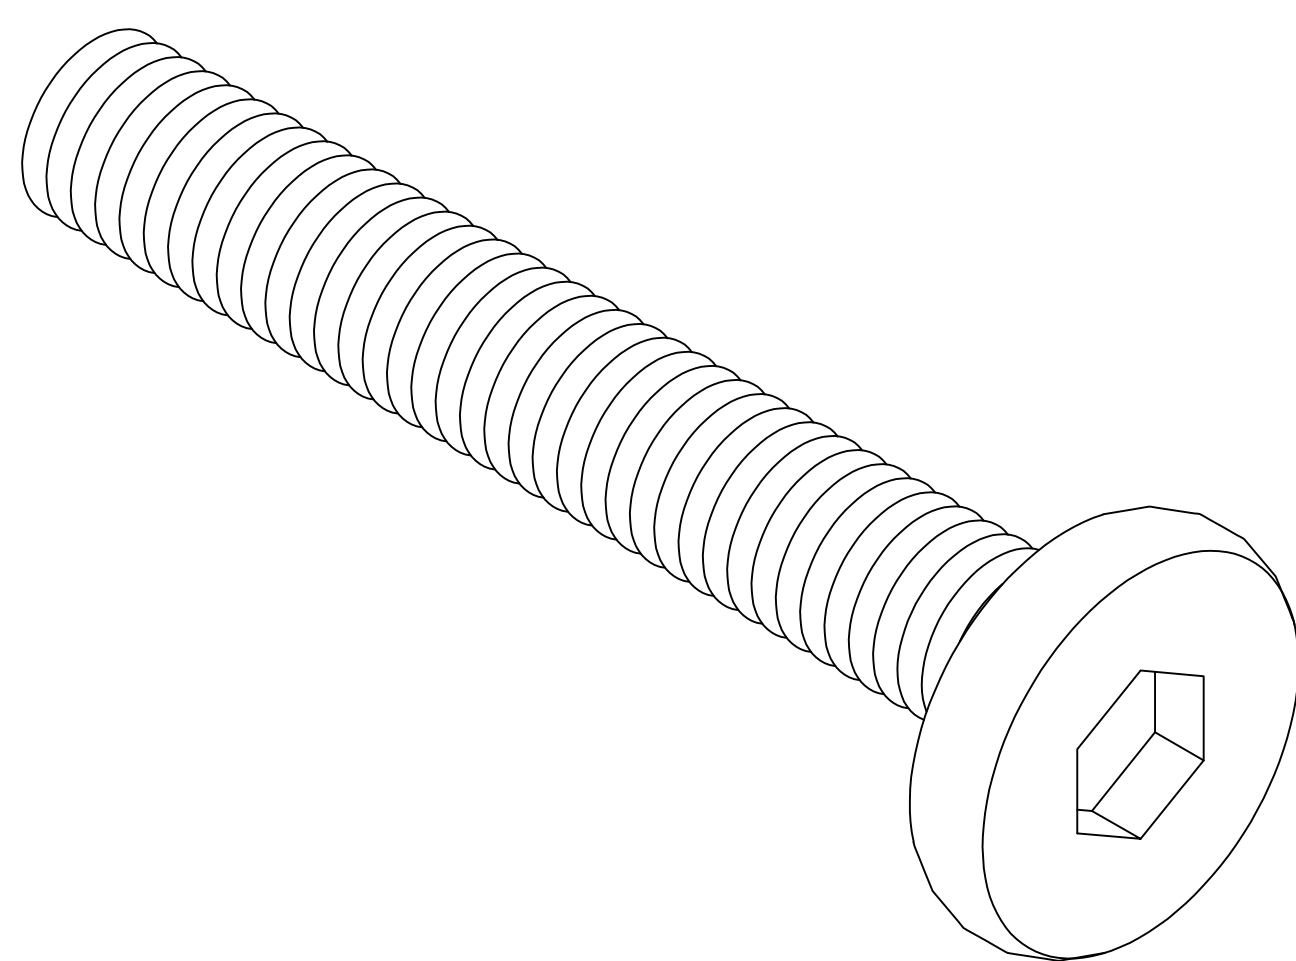


D : BOLT($\frac{5}{16}$ "*3") 4 PCS

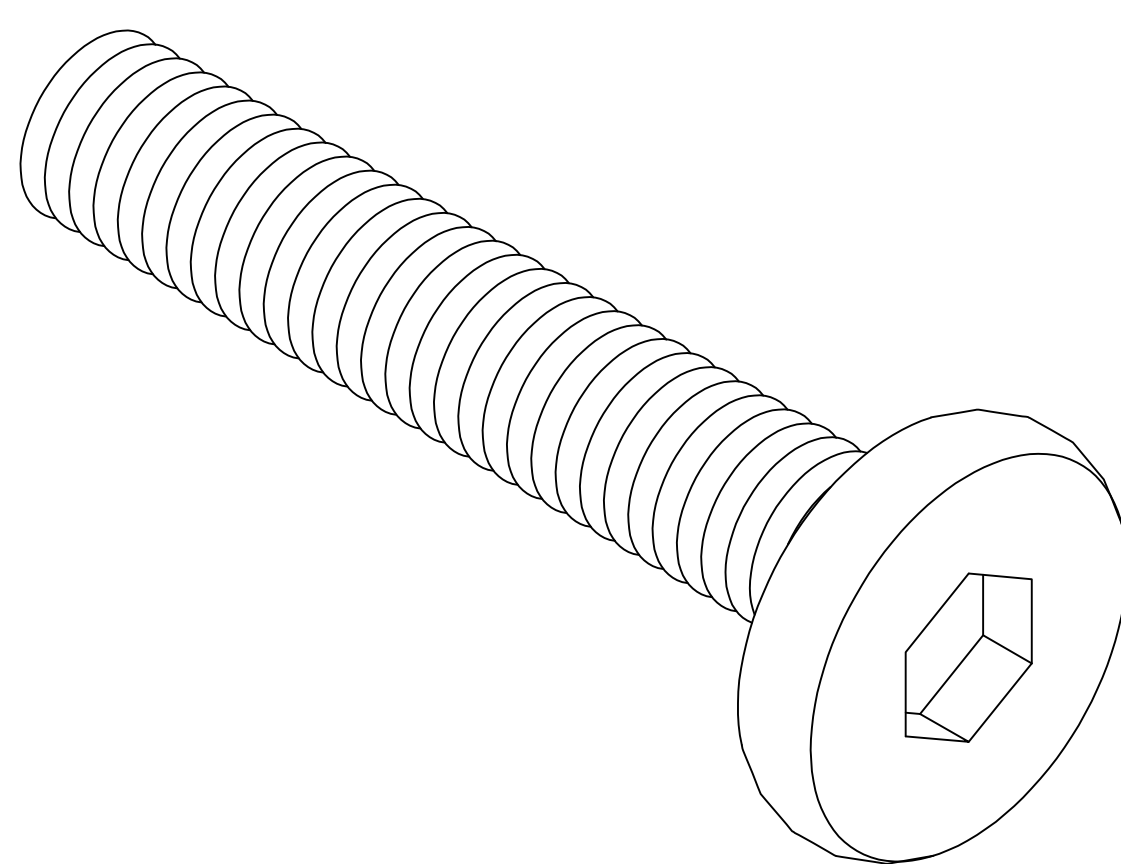


E : BOLT($\frac{5}{16}$ "*2-1/2") 4 PCS

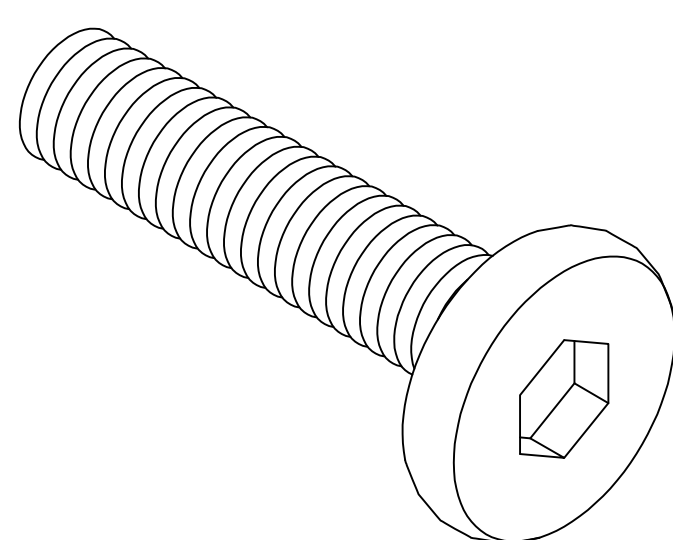


F : BOLT ($\frac{1}{4}$ "*1-3/4") 2 PCS

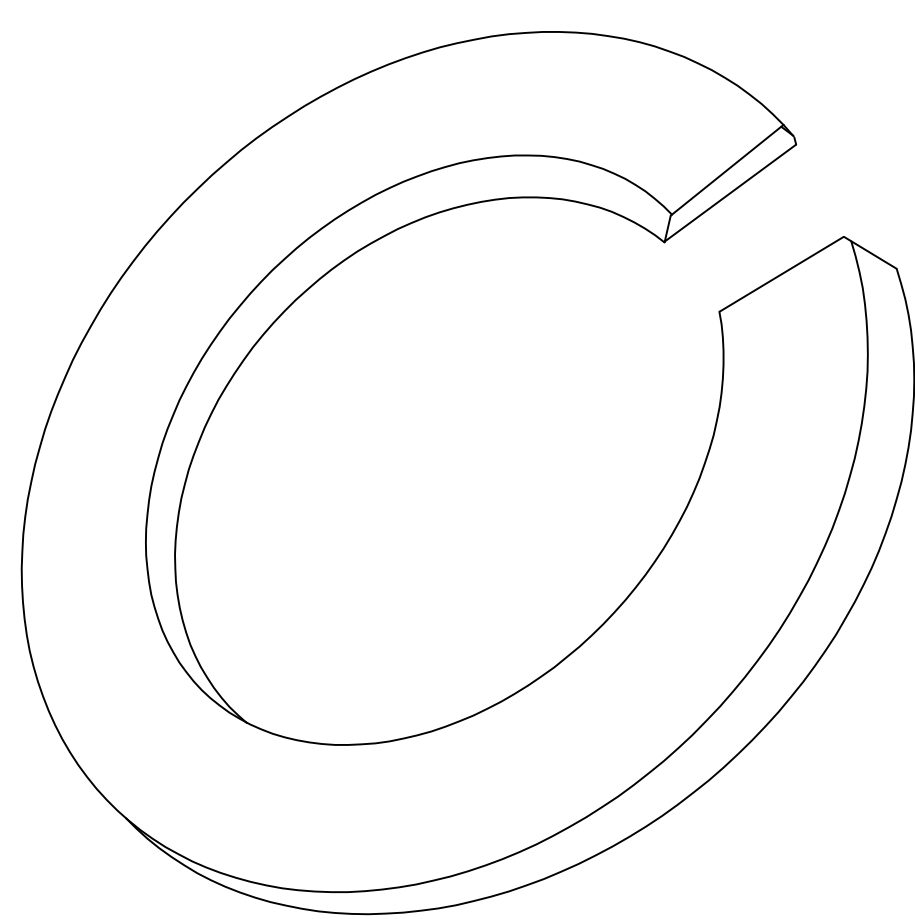


G : LOCK WASHER 8 PCS

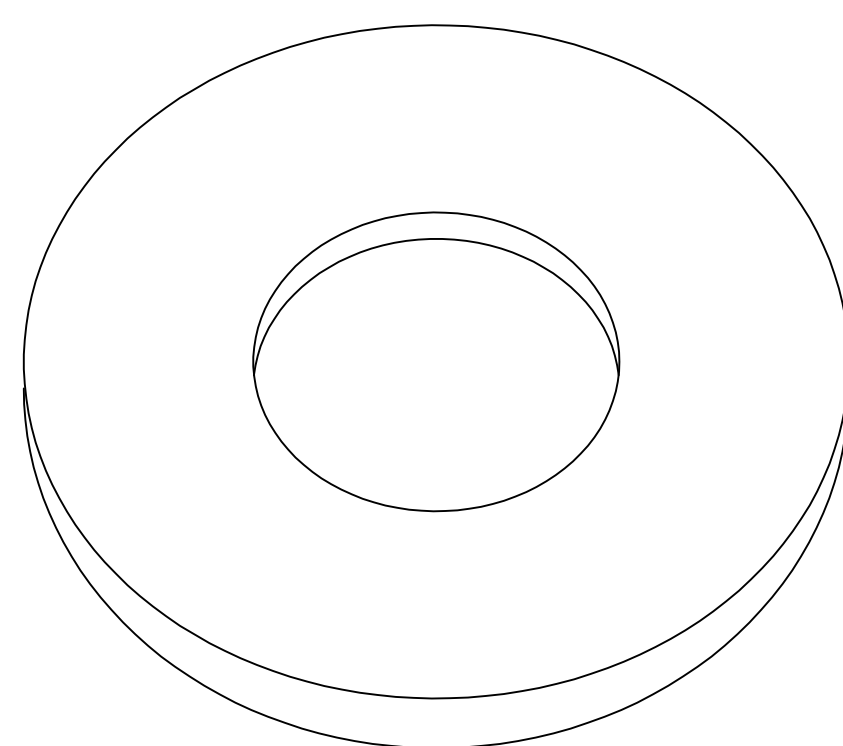

H : FLAT WASHER 8 PCS

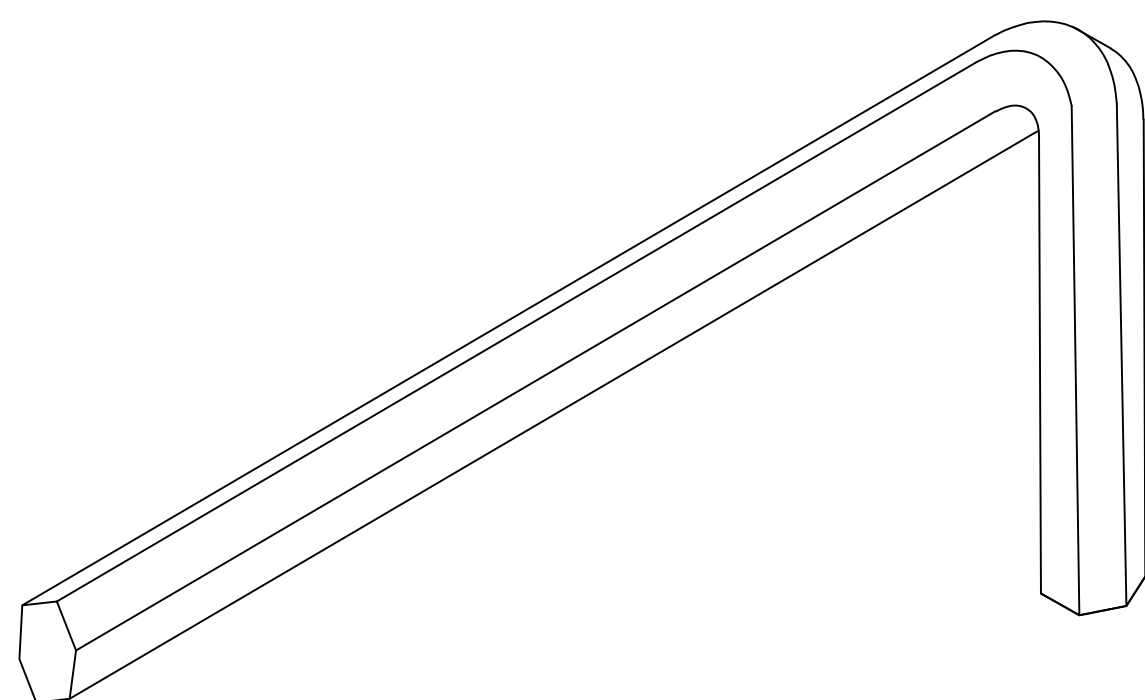


I : ALLEN KEY(5MM) 1 PC

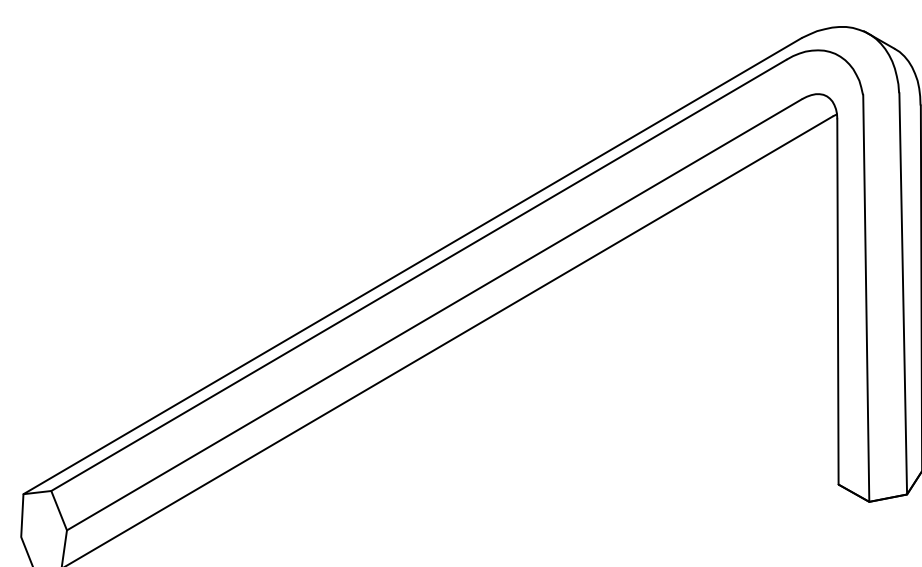


J : ALLEN KEY(4MM) 1 PC

ASSEMBLY INSTRUCTIONS

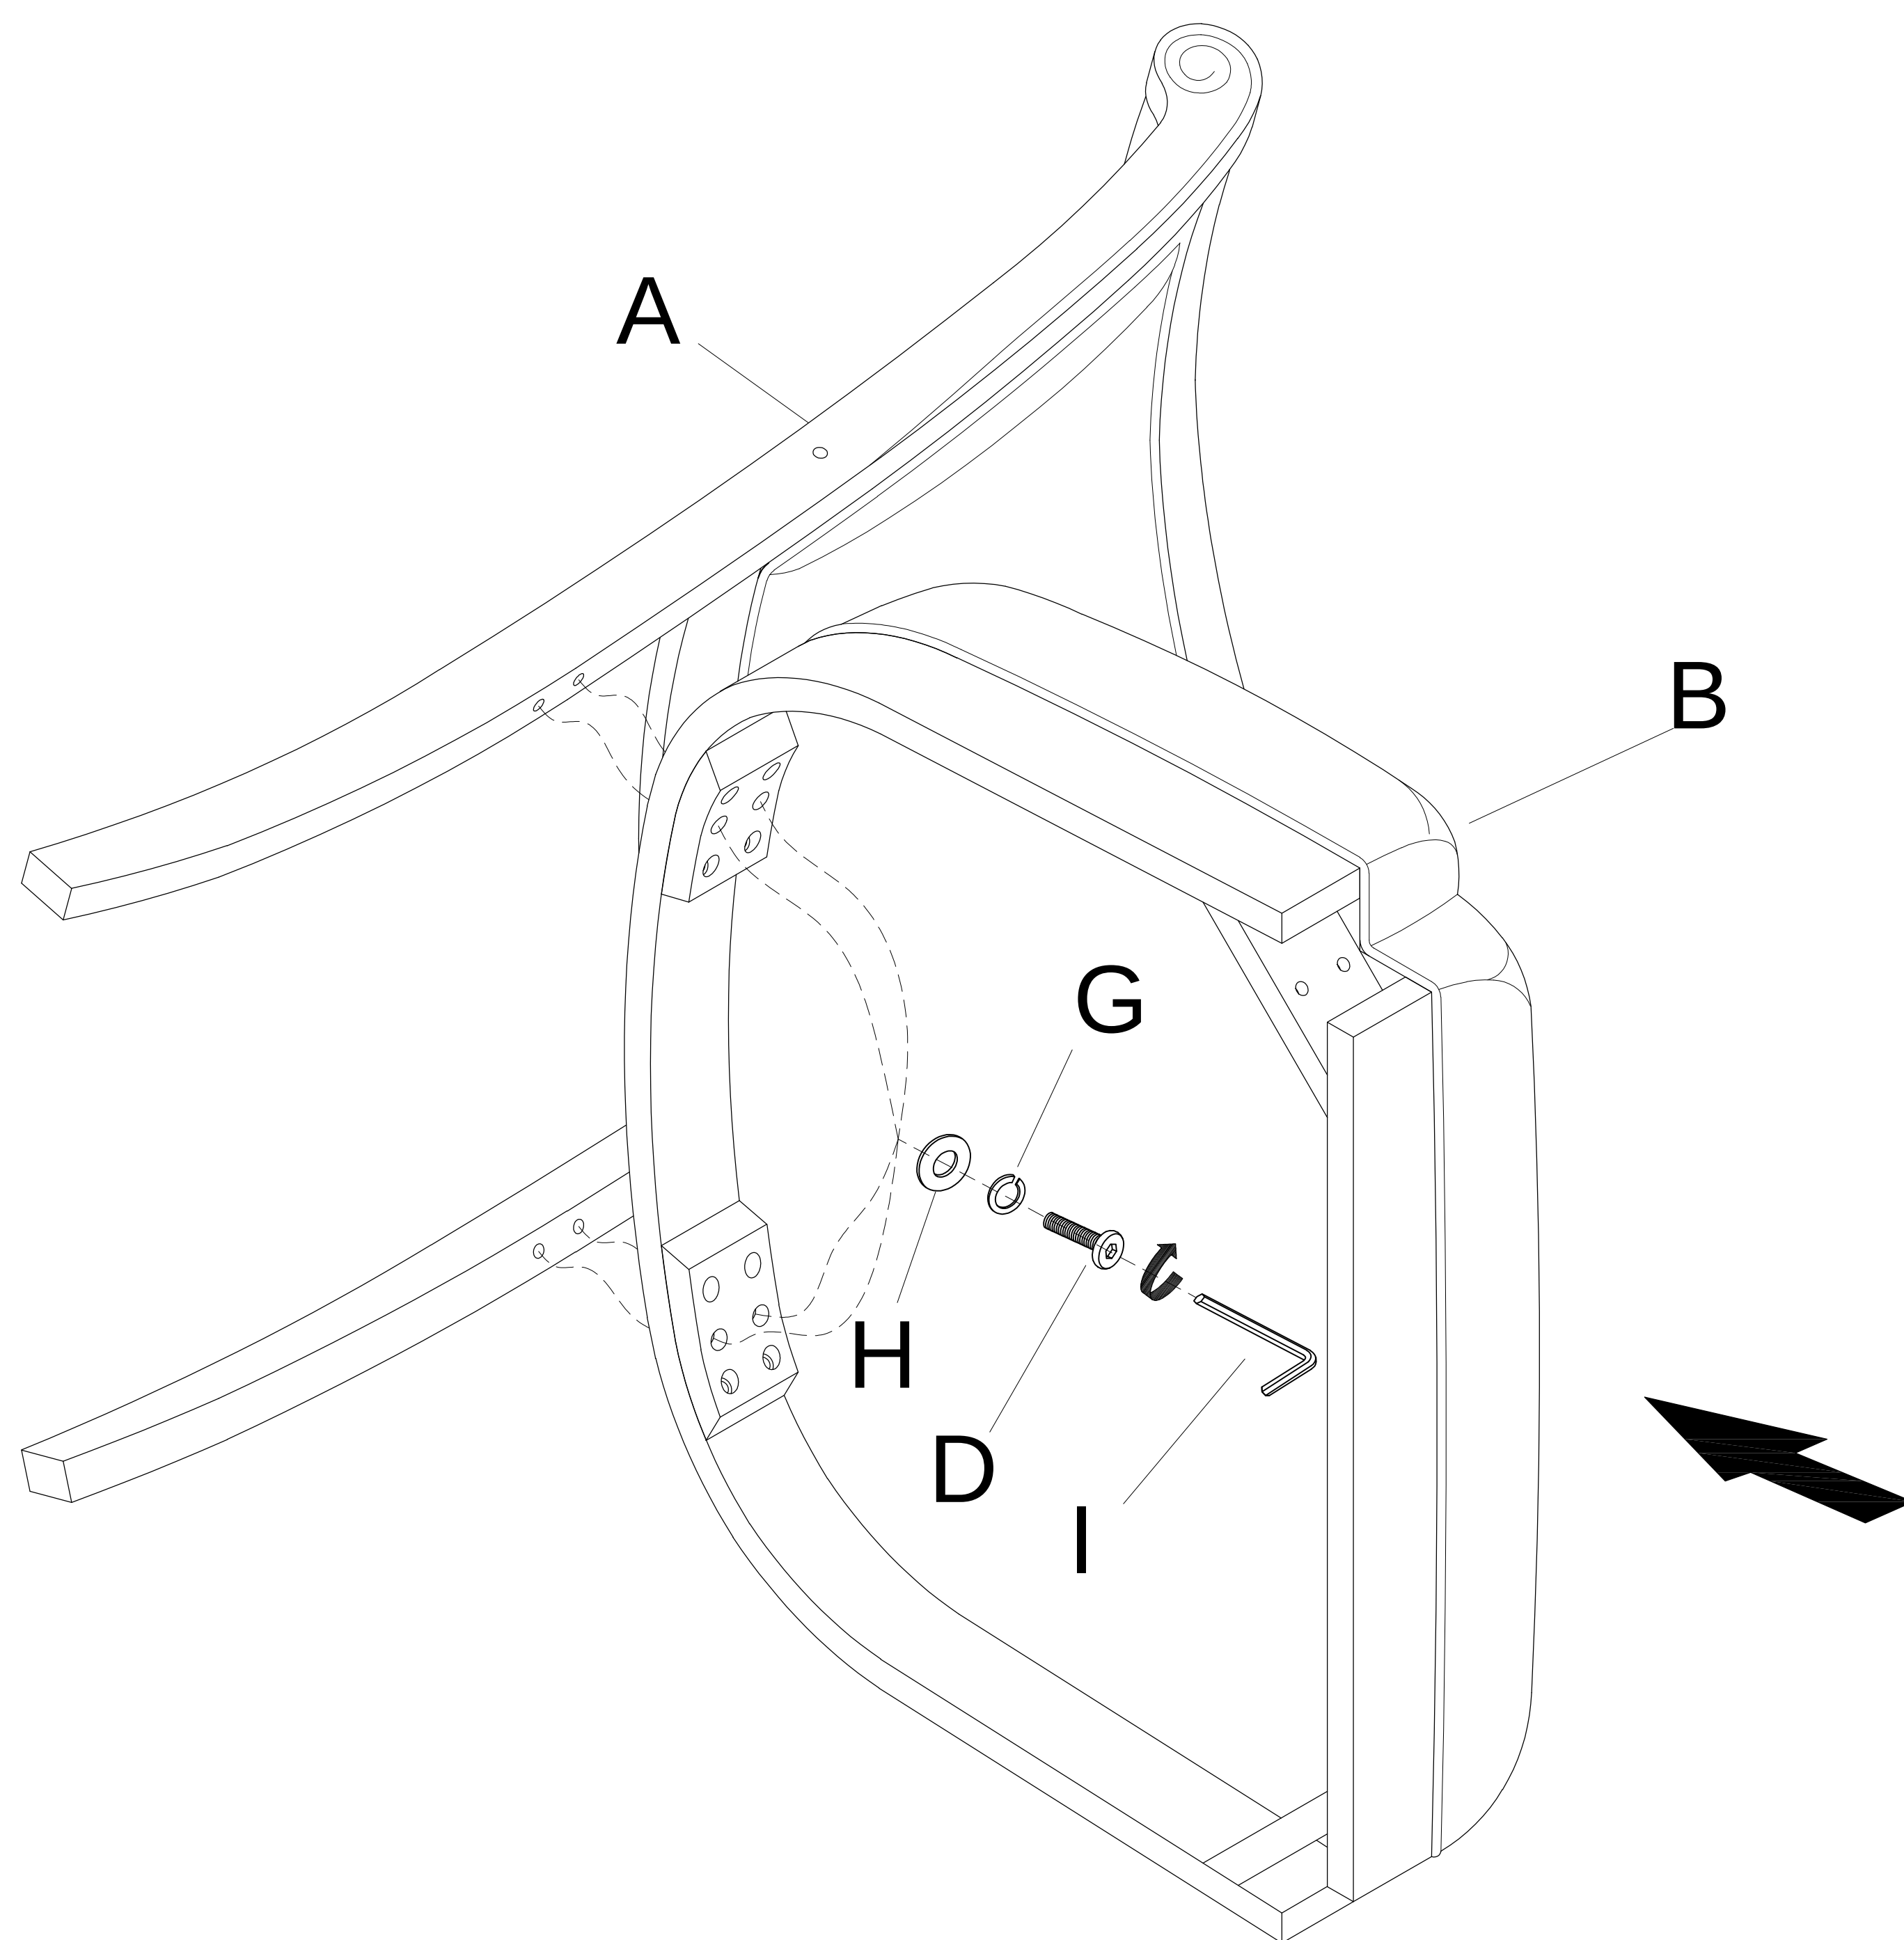

STEP1 :
ATTACH THE SEAT FRAME(B) TO THE CHAIRBACK(A).

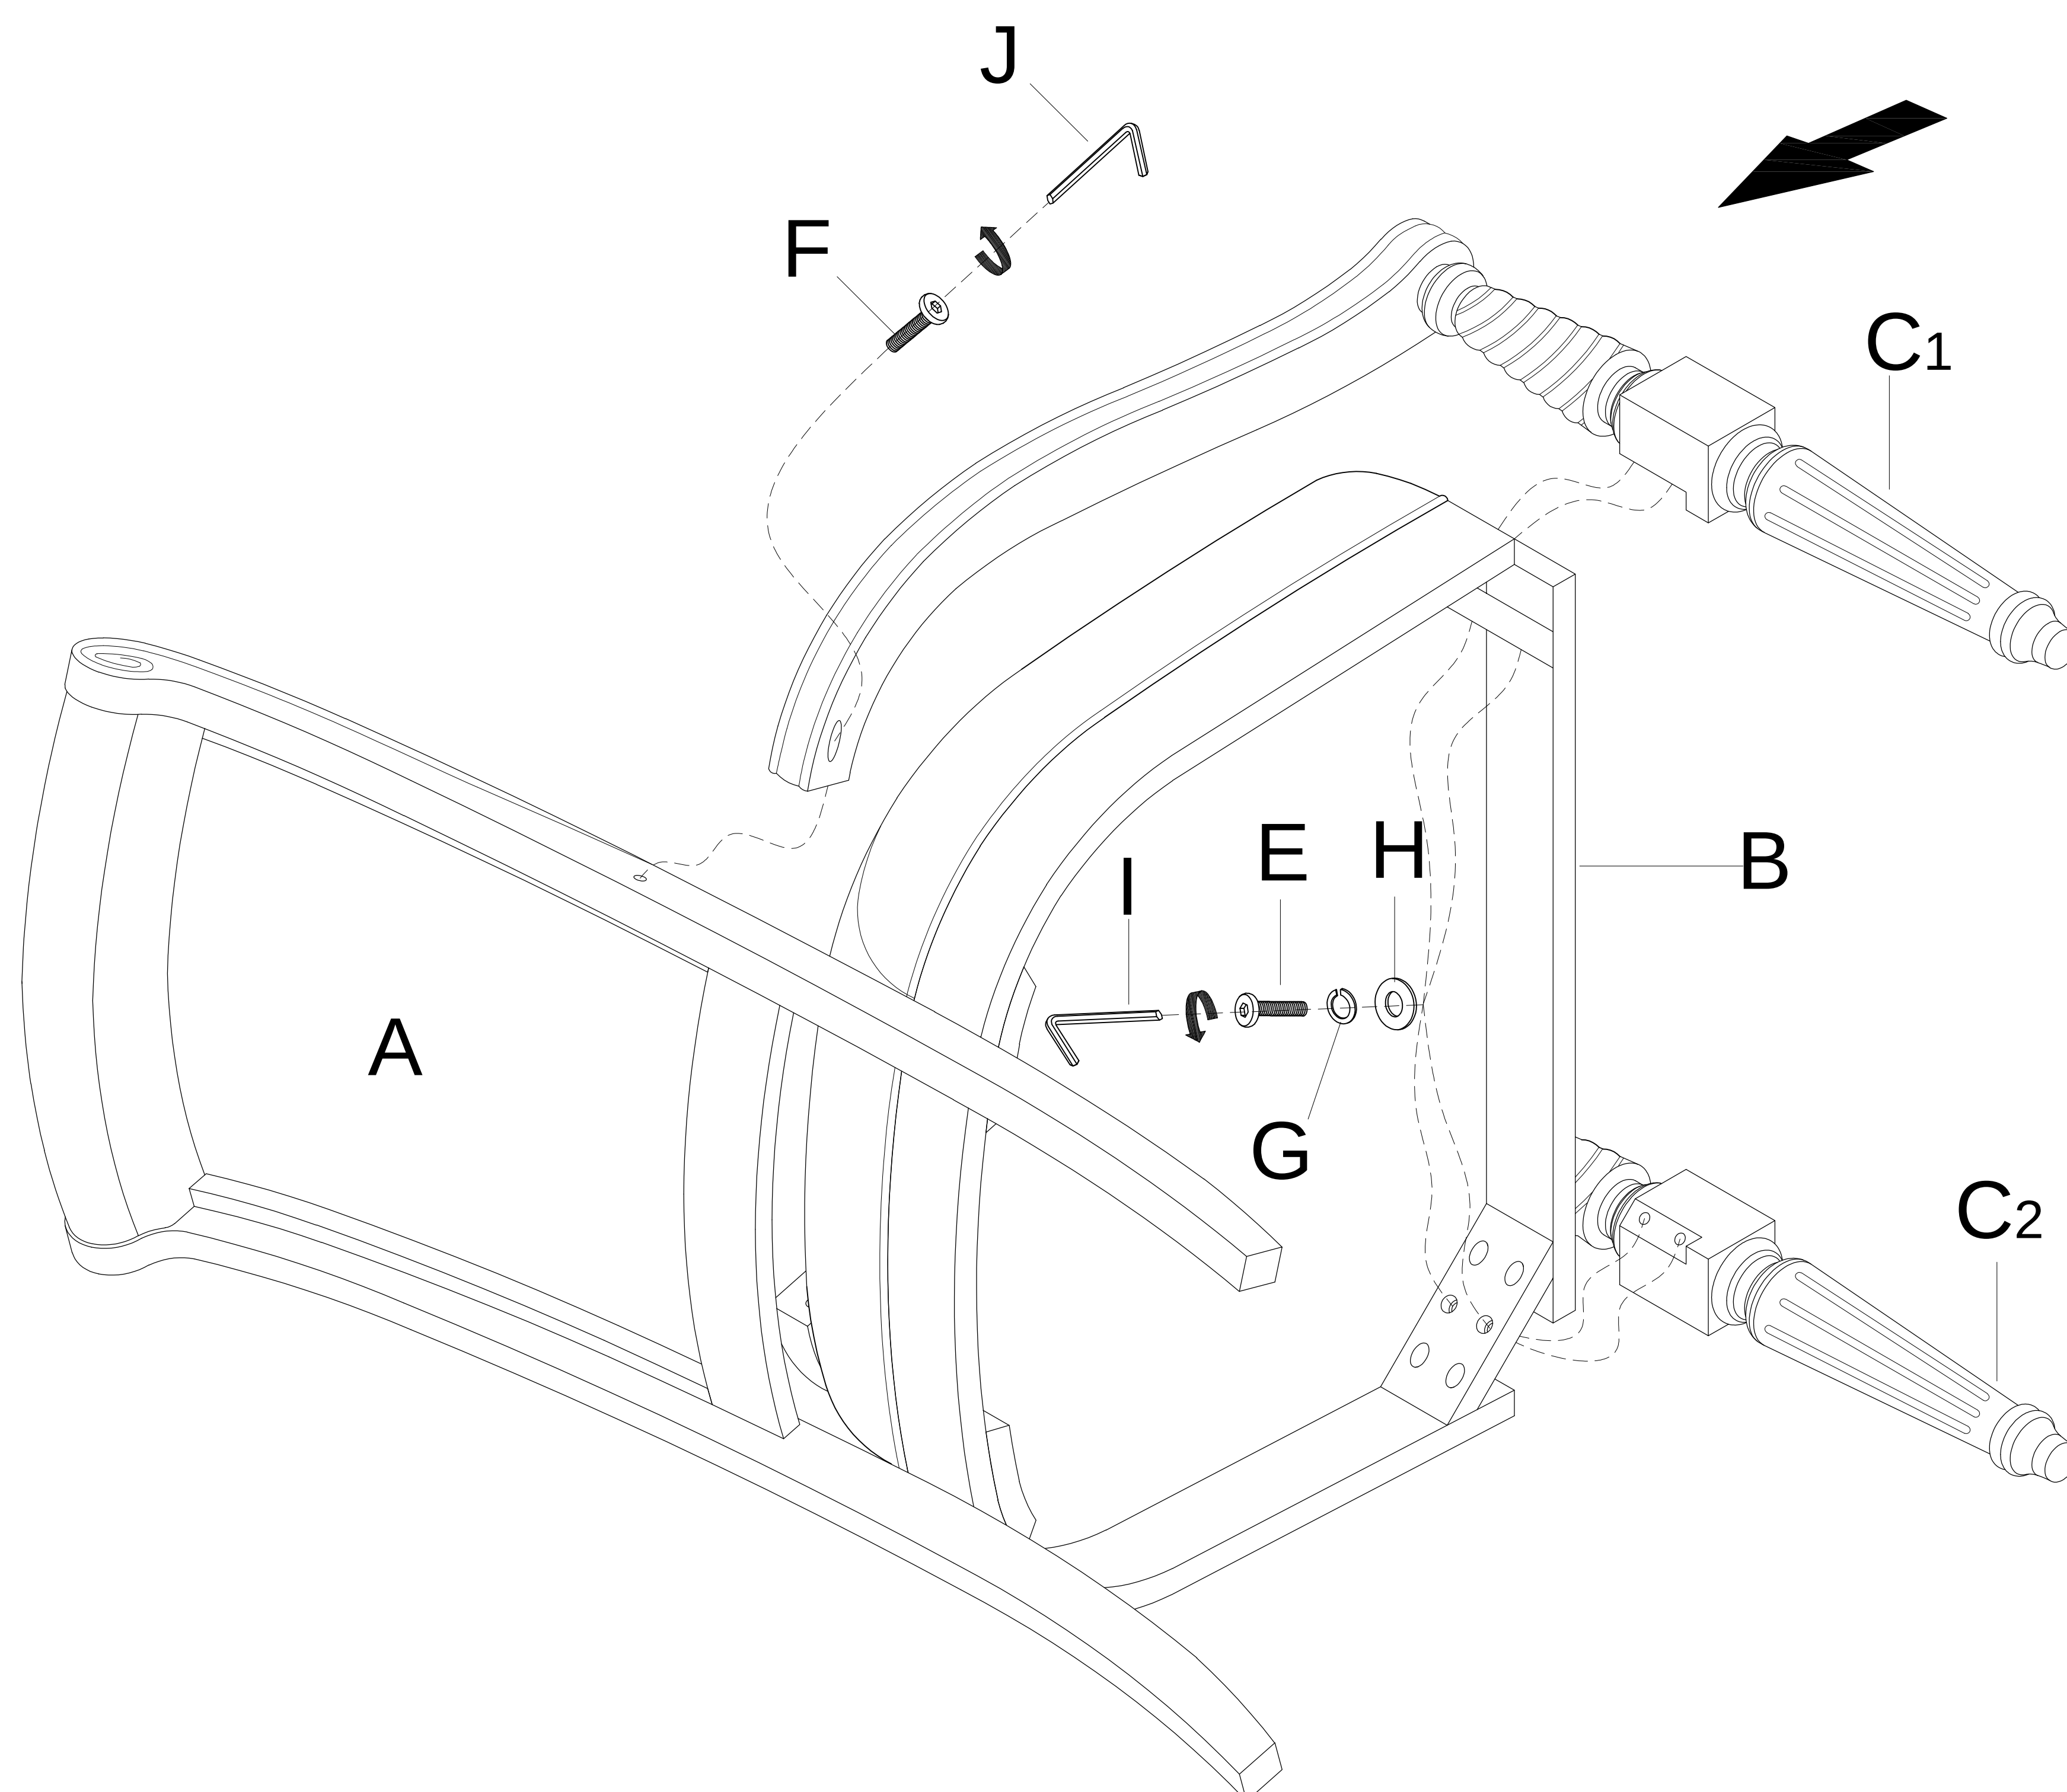

STEP2 :
ATTACH THE ARM(C) TO THE CHAIRBACK(A).