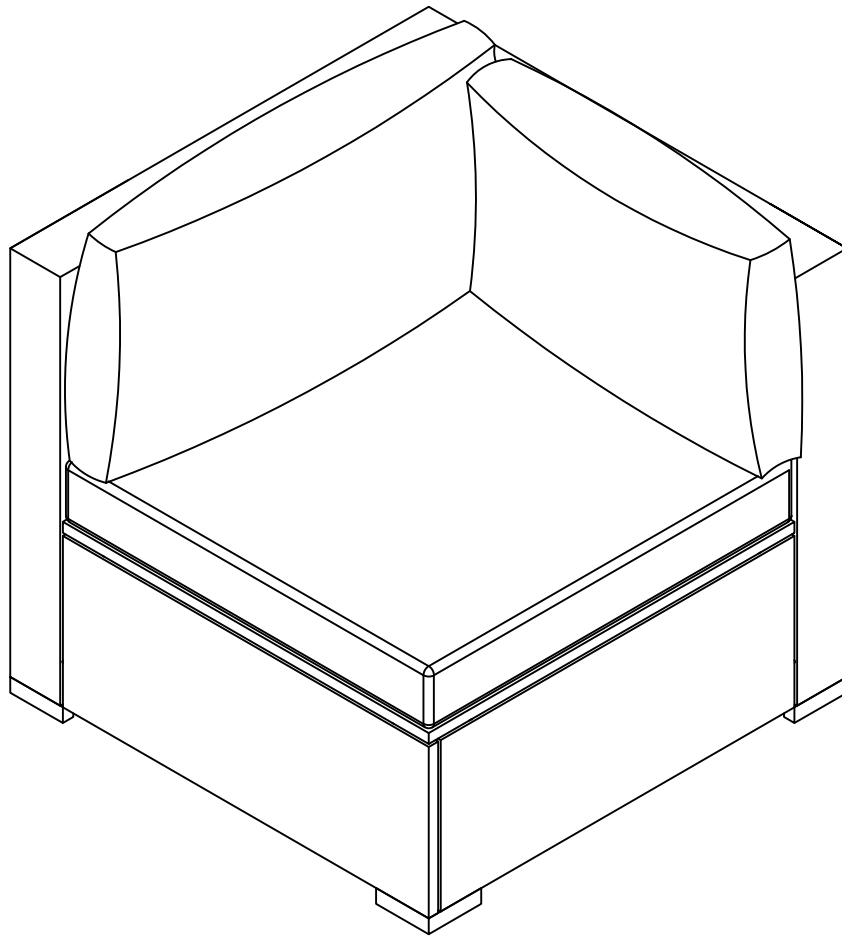


CORNER CHAIR



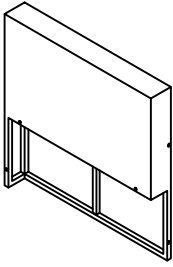
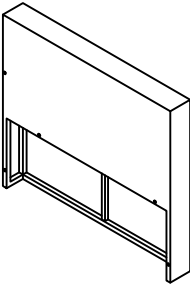
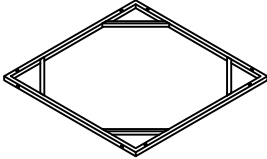
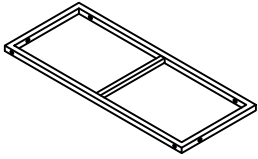
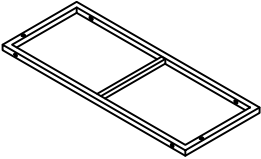
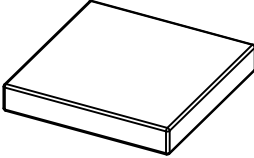
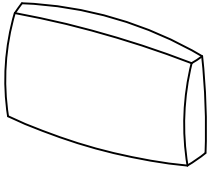
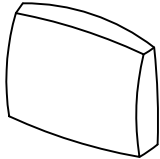


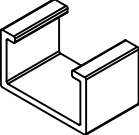
ATTENTION Section:

1. If you encounter any issues, such as missing accessories or damaged parts, please contact us immediately and include pictures



Assembly Instructions:



1. Assembly requires two people to complete.
2. For optimal assembly, we highly recommend using the provided Allen key.
If using a power tool, please set it to a low speed to prevent any damage
3. Do not fully tighten the screws until all screws are properly aligned with their holes.

PARTS LIST OF BOX



A  70cm/27.5in 1pc	B  80cm/31.5in 1pc	C  1pc	D  68cm/26.7in 1pc
E  70cm/27.5in 1pc	N  1pc	O  1pc	P  1pc
G  4pcs	F  M6*35 22pcs	W  M6 14pcs	H  M6 1pc
P  2pcs			

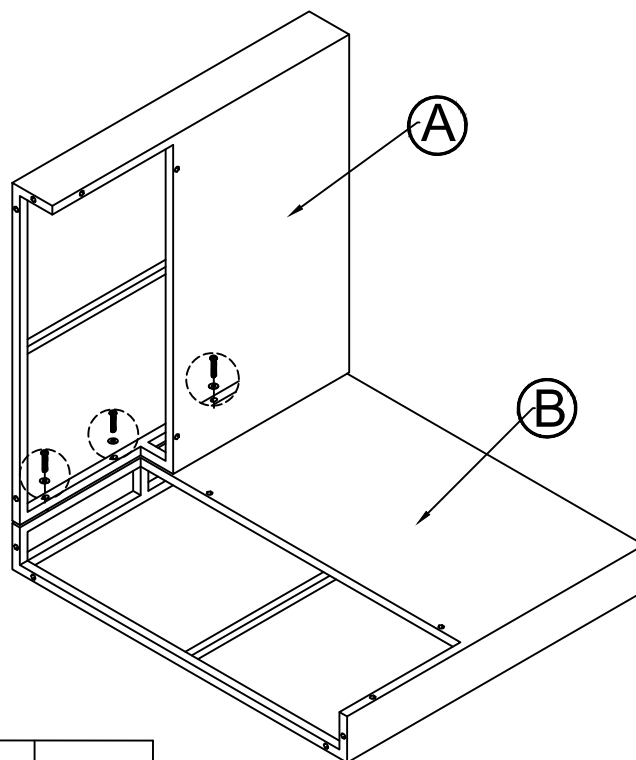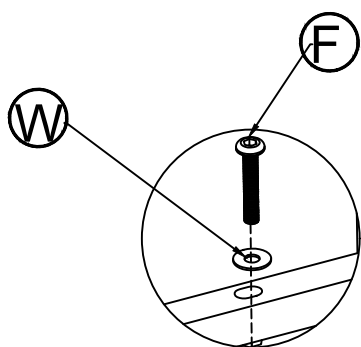STEP 1



A	1pc	B	1pc	F	3pcs	W	3pcs	H	1pc
									
				M6*35		M6		M6	

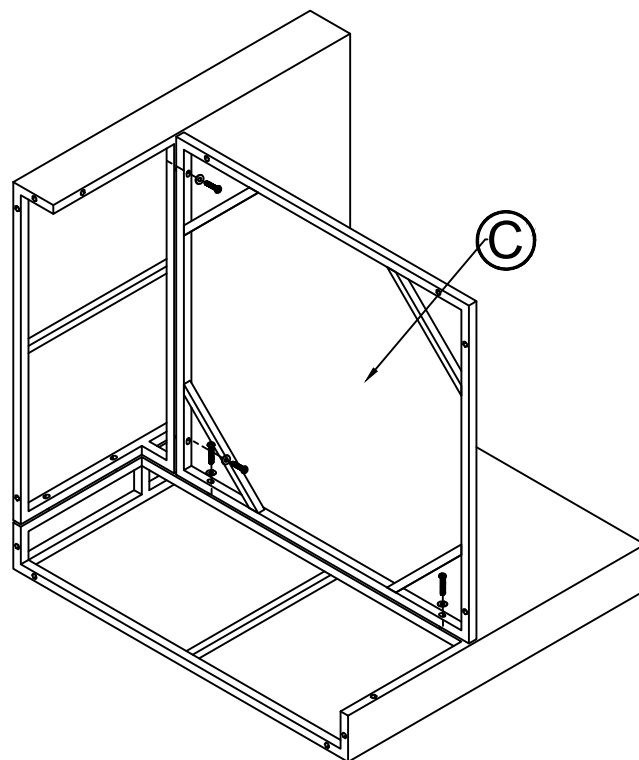
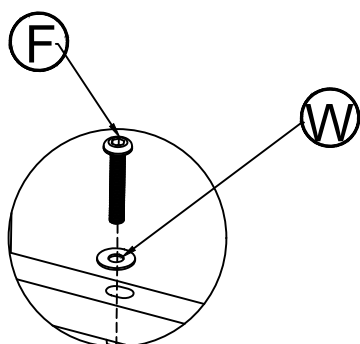
STEP 2



C	1pc	F	4pcs	W	4pcs	H	1pc
							
		M6*35		M6		M6	



Do not fully tighten all screws until assembly is completed.

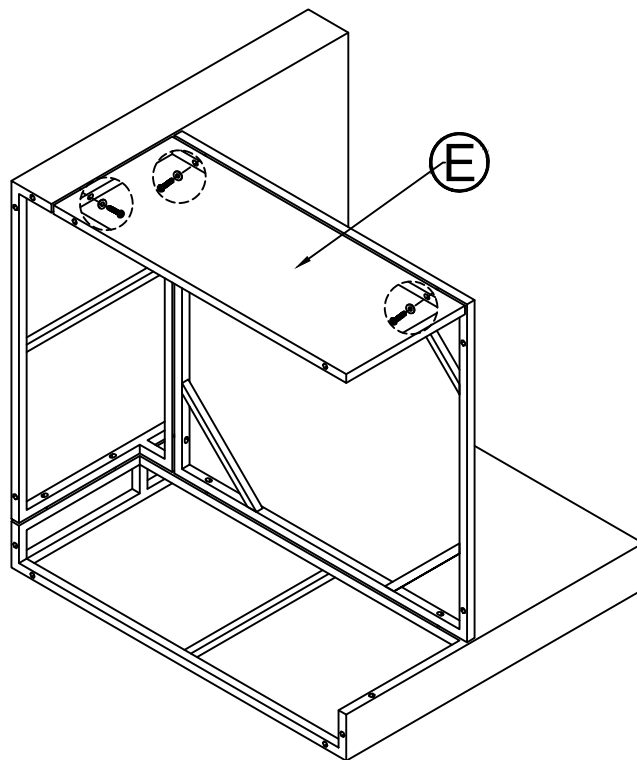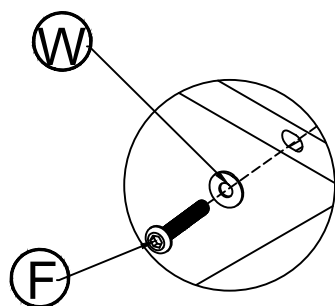STEP 3



E	1pc	F	3pcs	W	3pcs	H	1pc
							
		M6*35		M6		M6	

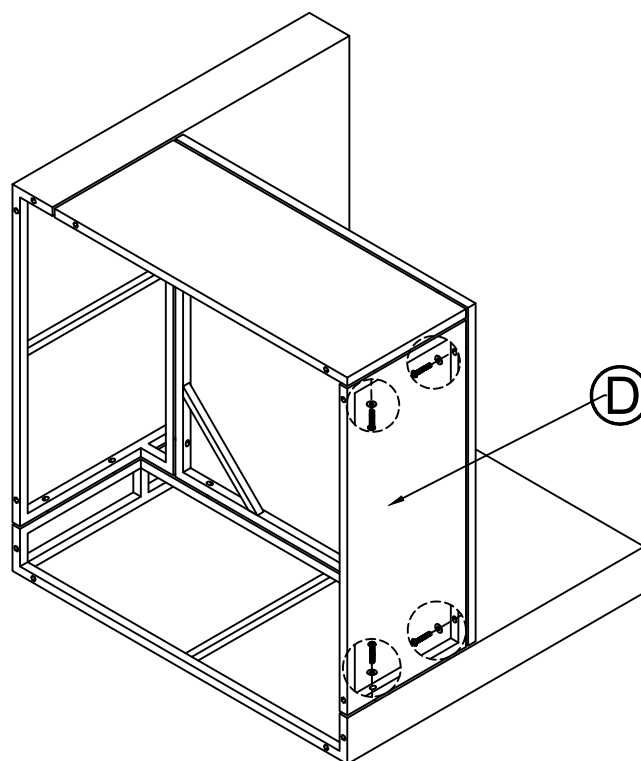
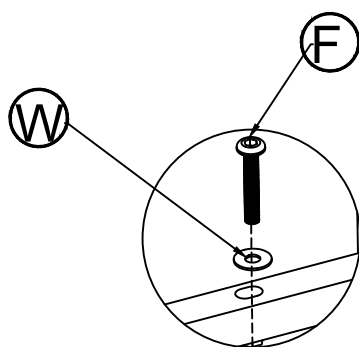
STEP 4




D	1pc	F	4pcs	W	4pcs	H	1pc
							
		M6*35		M6		M6	


Do not fully tighten all screws until assembly is completed.

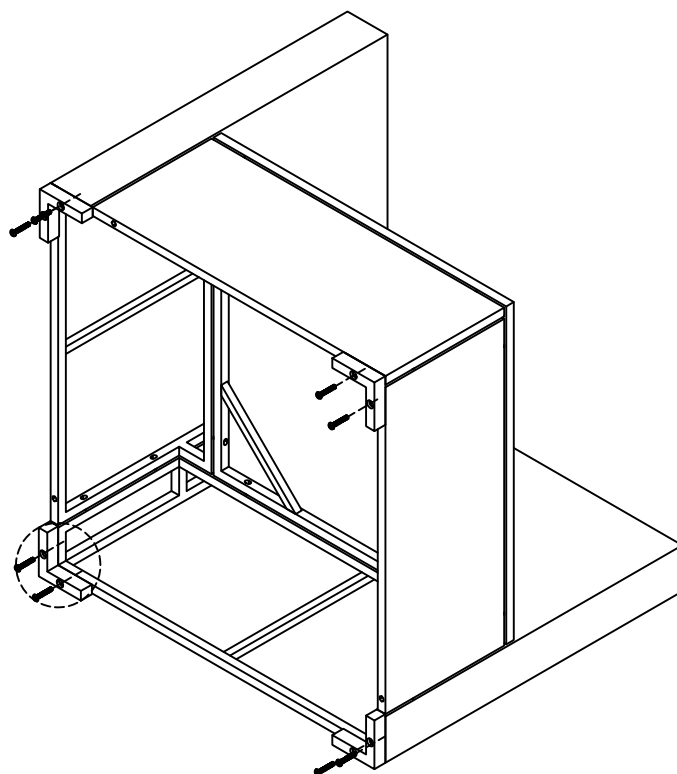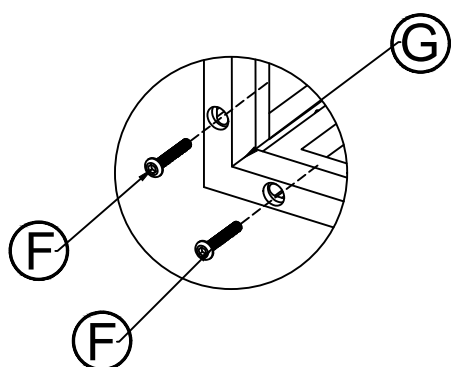STEP 5



G	4pcs	F	8pcs	H	1pc
					
		M6*35		M6	

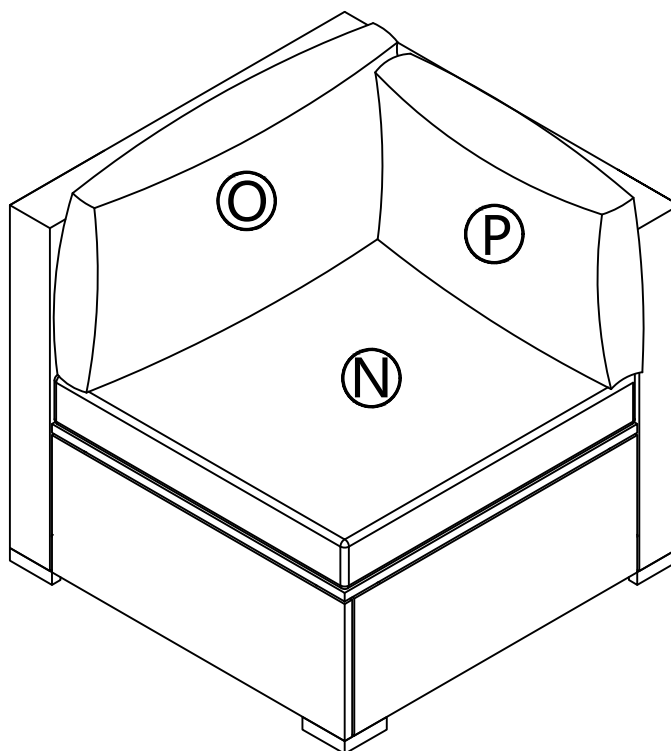
STEP 6



N	1pc	O	1pc	P	1pc
					

Do not fully tighten all screws until assembly is completed.

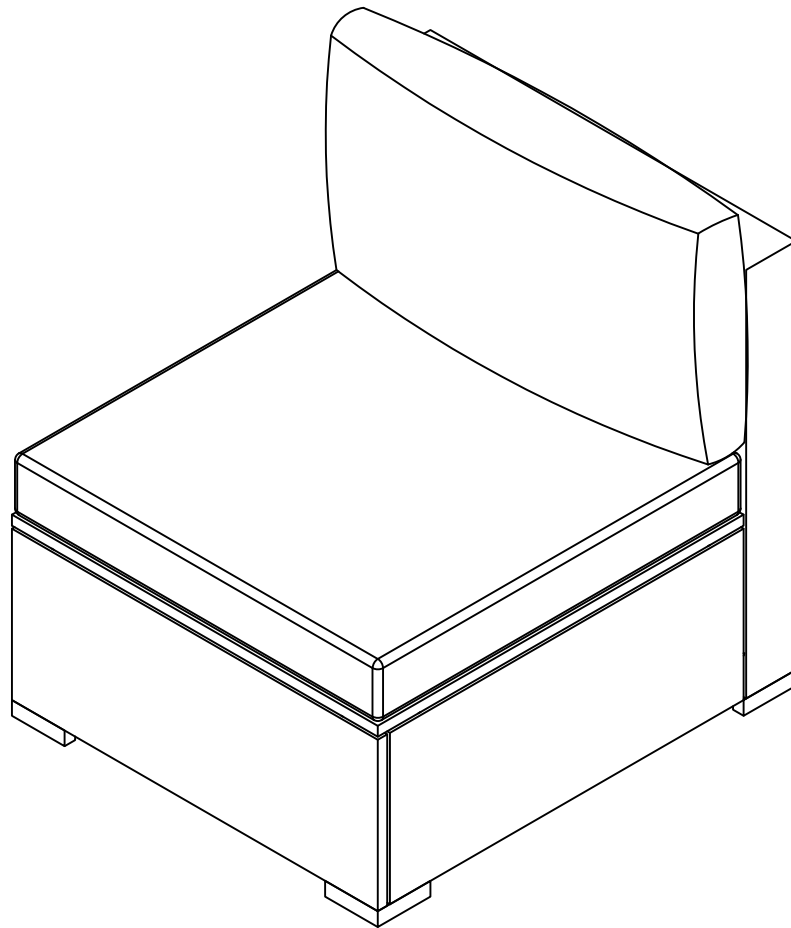ARMLESS CHAIR











ATTENTION Section:

1. If you encounter any issues, such as missing accessories or damaged parts, please contact us immediately and include pictures

Assembly Instructions:


1. Assembly requires two people to complete.
2. For optimal assembly, we highly recommend using the provided Allen key.
If using a power tool, please set it to a low speed to prevent any damage
3. Do not fully tighten the screws until all screws are properly aligned with their holes.

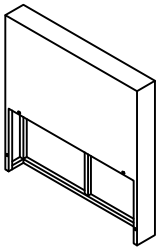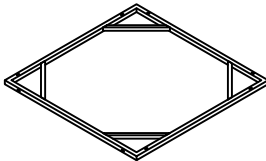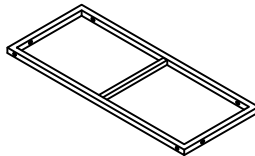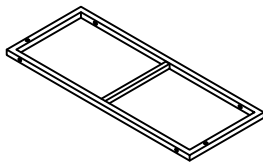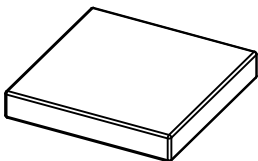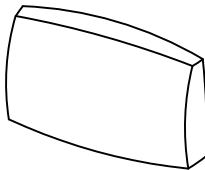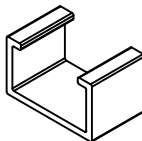PARTS LIST OF BOX

I		J		D		K		
70cm/27.5in	2pcs	2pcs	68cm/26.7in	4pcs	70cm/27.5in	2pcs		
N		O		G		F		
2pcs	2pcs	8pcs	M6*35	40pcs				
W		H		P				
M6	24pcs	M6	2pcs	4pcs				

STEP 1

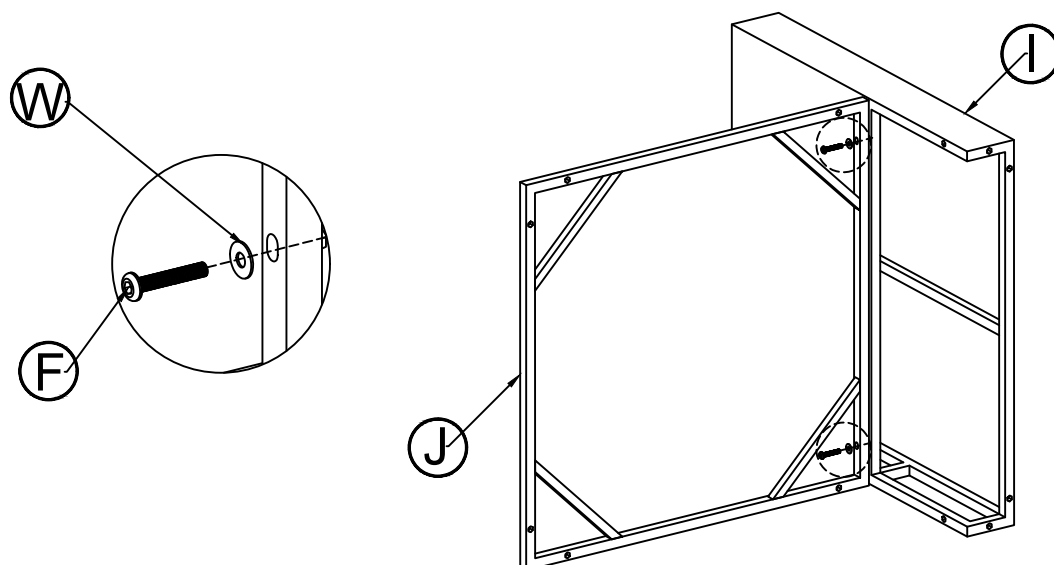
x2



I	1pc	J	1pc	F	2pcs	W	2pcs	H	1pc
				M6*35		M6		M6	

STEP 2

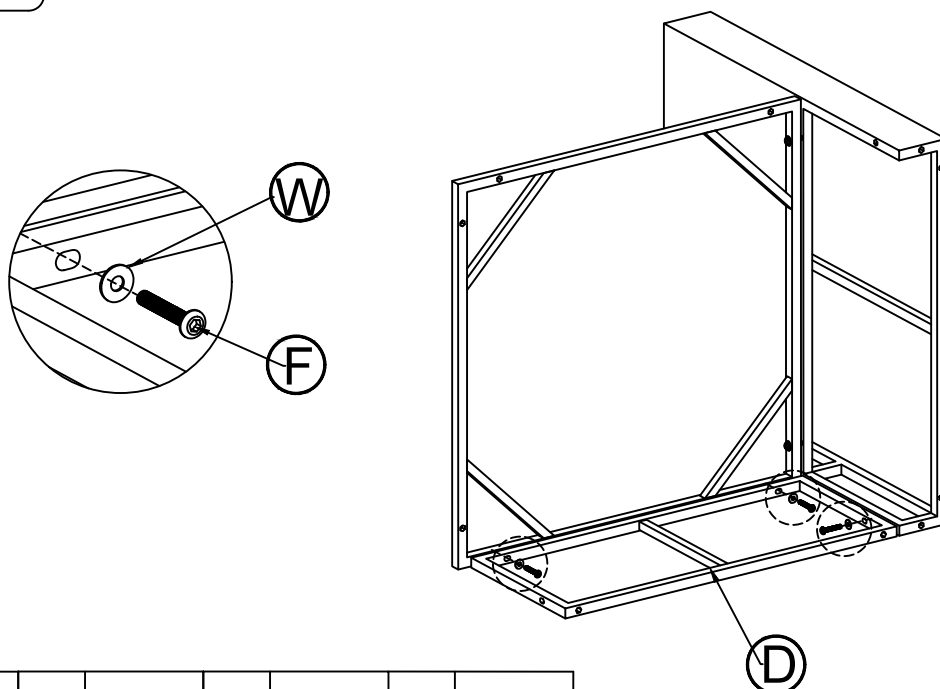x2





D	1pc	F	3pcs	W	3pcs	H	1pc
		M6*35		M6		M6	

Do not fully tighten all screws until assembly is completed.

STEP 3

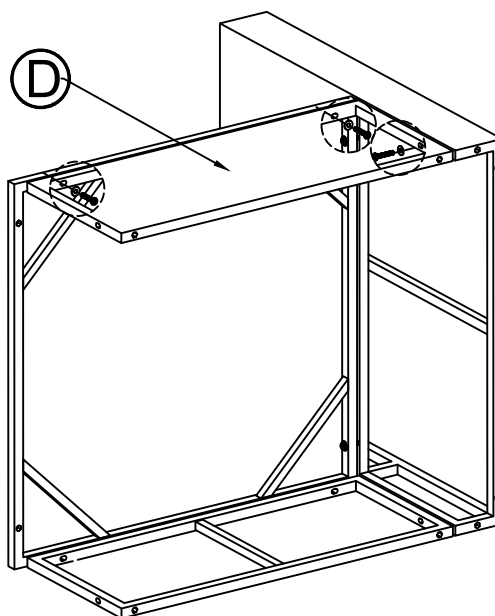
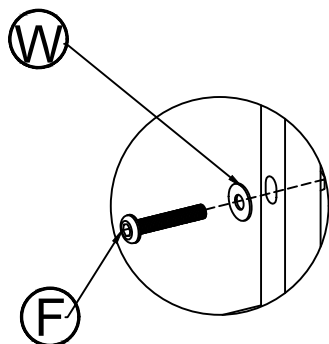
x2



D	1pc	F	3pcs	W	3pcs	H	1pc
							
		M6*35		M6		M6	

STEP 4

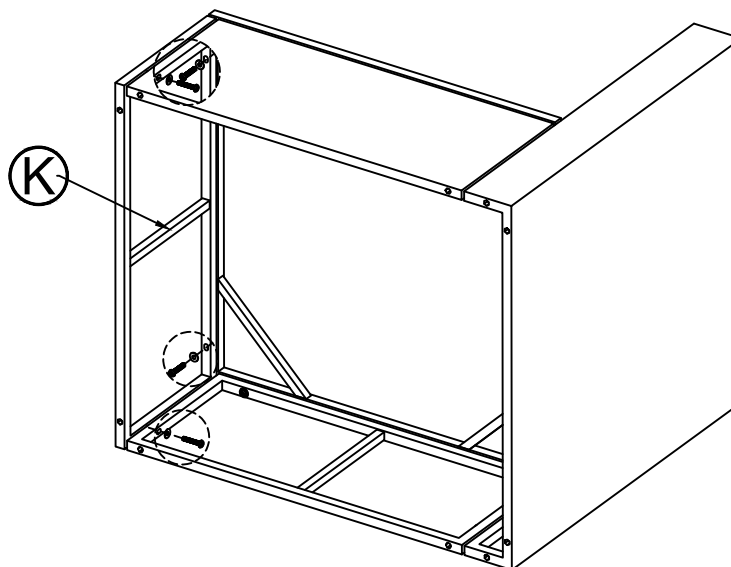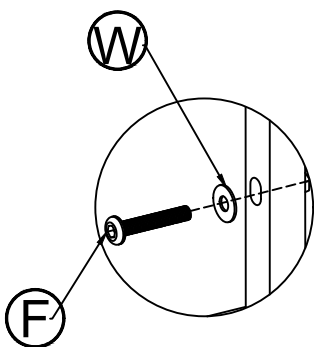x2






K	1pc	F	4pcs	W	4pcs	H	1pc
							
		M6*35		M6		M6	

Do not fully tighten all screws until assembly is completed.

STEP 5

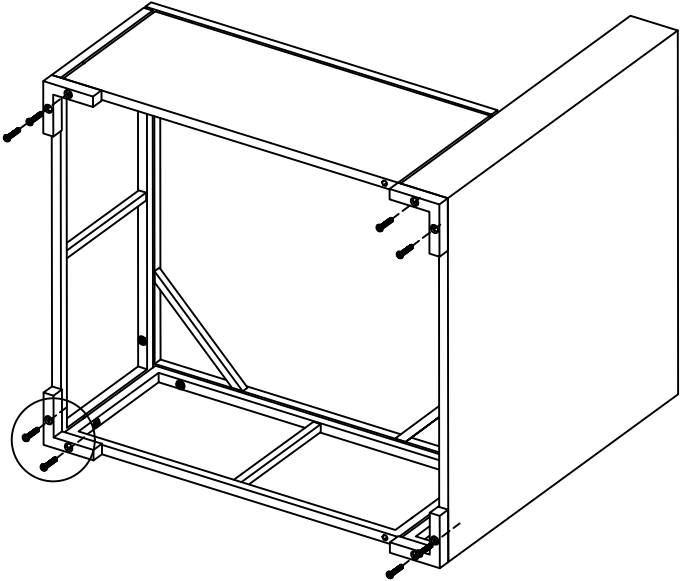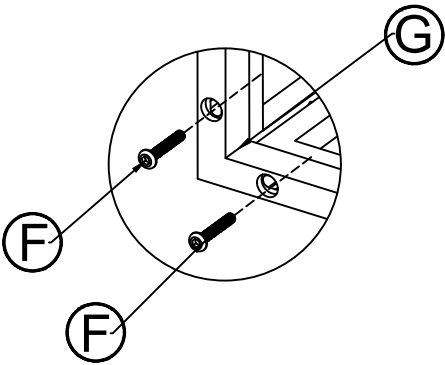
x2



G	4pcs	F	8pcs	H	1pc
					
		M6*35		M6	

STEP 6

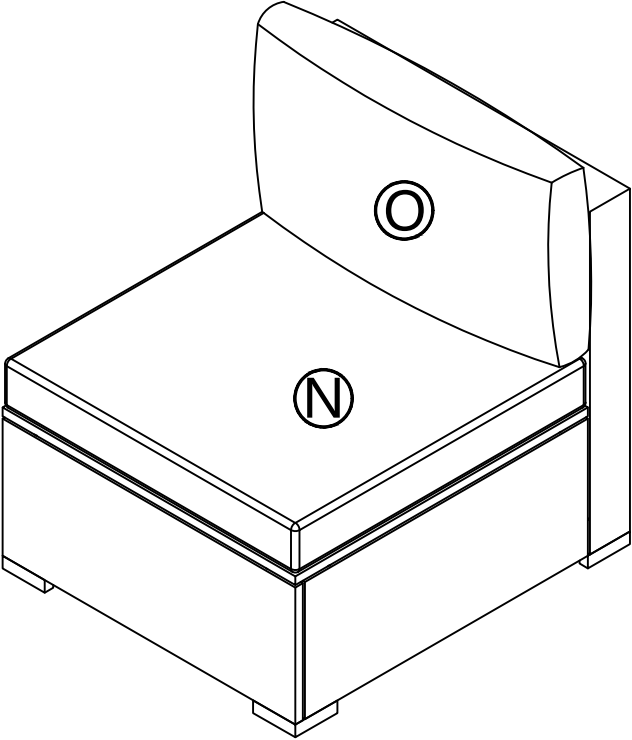x2



N	1pc	O	1pc
			

Do not fully tighten all screws until assembly is completed.