


ASSEMBLY INSTRUCTIONS

36 INCH BATH VANITY - CABINET


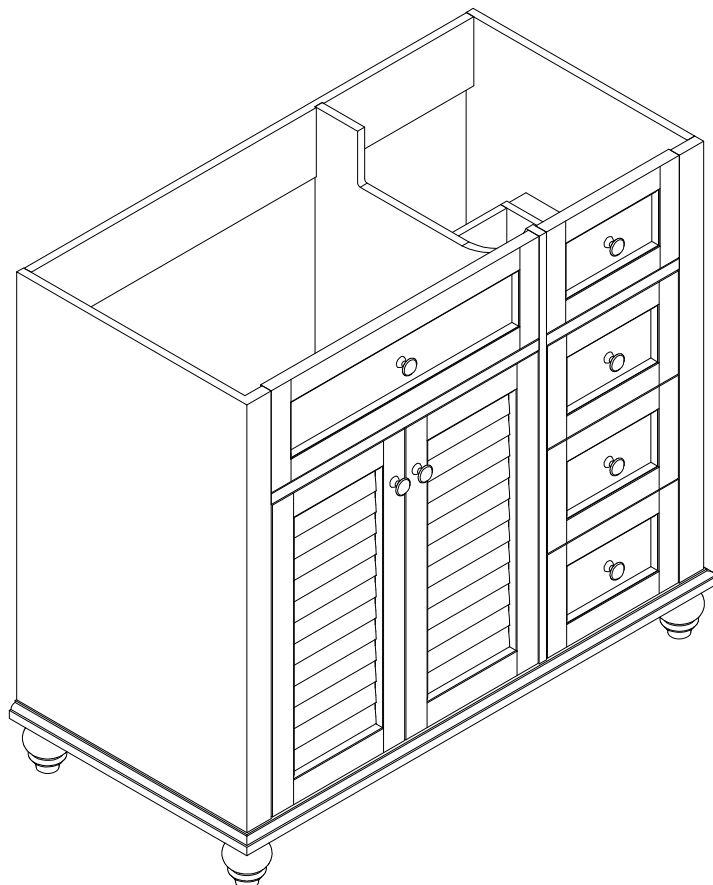


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.


Compare with the parts list to be sure all parts are present.

"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"


*** Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!!**
*** Please assemble on a clean soft surface to avoid damage.**

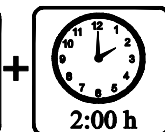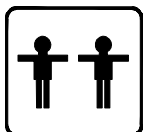

Tools Required



(Not included)



(Not included)

IMPORTANT:

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

PLEASE DO NOT RETURN TO STORE



**Please do not return this product to the retailer!!
We are able to assist you in ANY way**

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.







Before Installation

Important – Please read these instructions fully before starting assembly

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.



Cam Lock Assembly Instructions

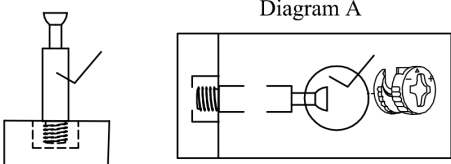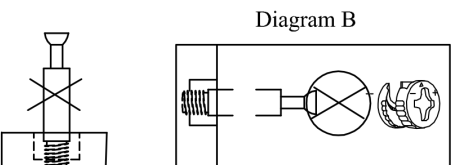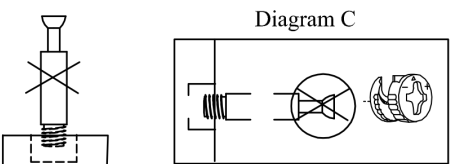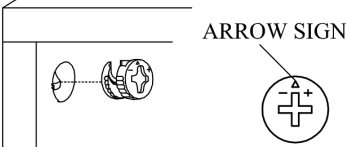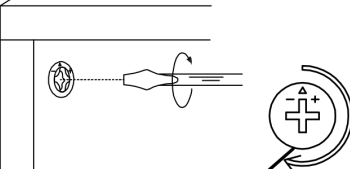	Diagram A Insert Cam Bolt into hole as shown in diagram A.
	Diagram B Make sure not to insert the Cam Bolt: Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.
	Diagram C Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.
	Connect the panels together.
	Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.
	To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver. <i>*Do not use an automatic screwdriver as it may bend or break if too much power is imposed.</i>

Before installing the slide, separate the cabinet member and the drawer member.


**Pay attention when connecting !
The sliding module must be at the front end.**

STEP 1 : Extend Slide

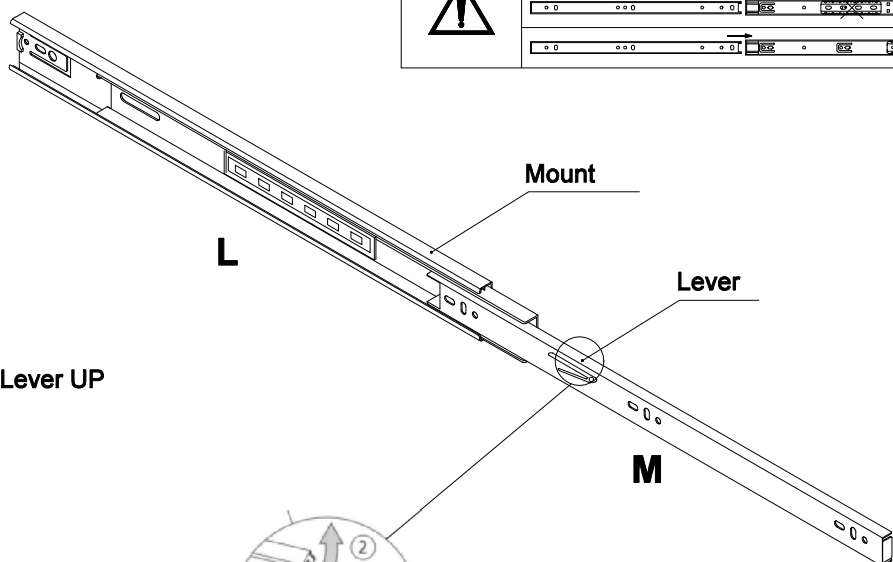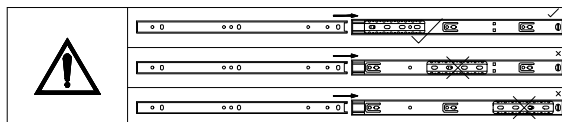


STEP 2: Push Lever UP

**Push lever for the left of drawer ,
press the lever for the right of drawer.**

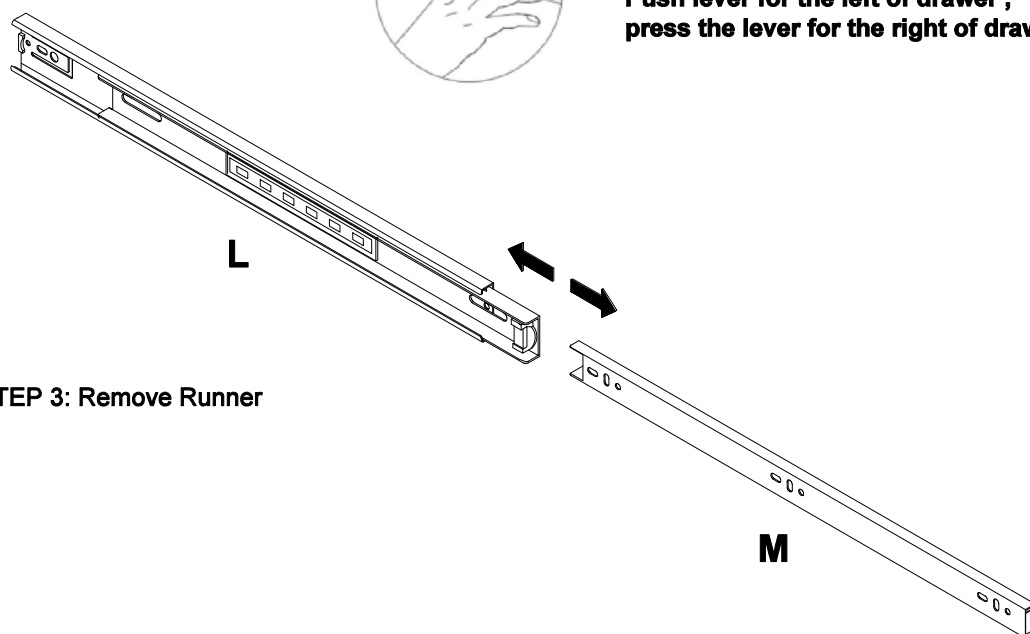















STEP 3: Remove Runner

Detail View - CABINET






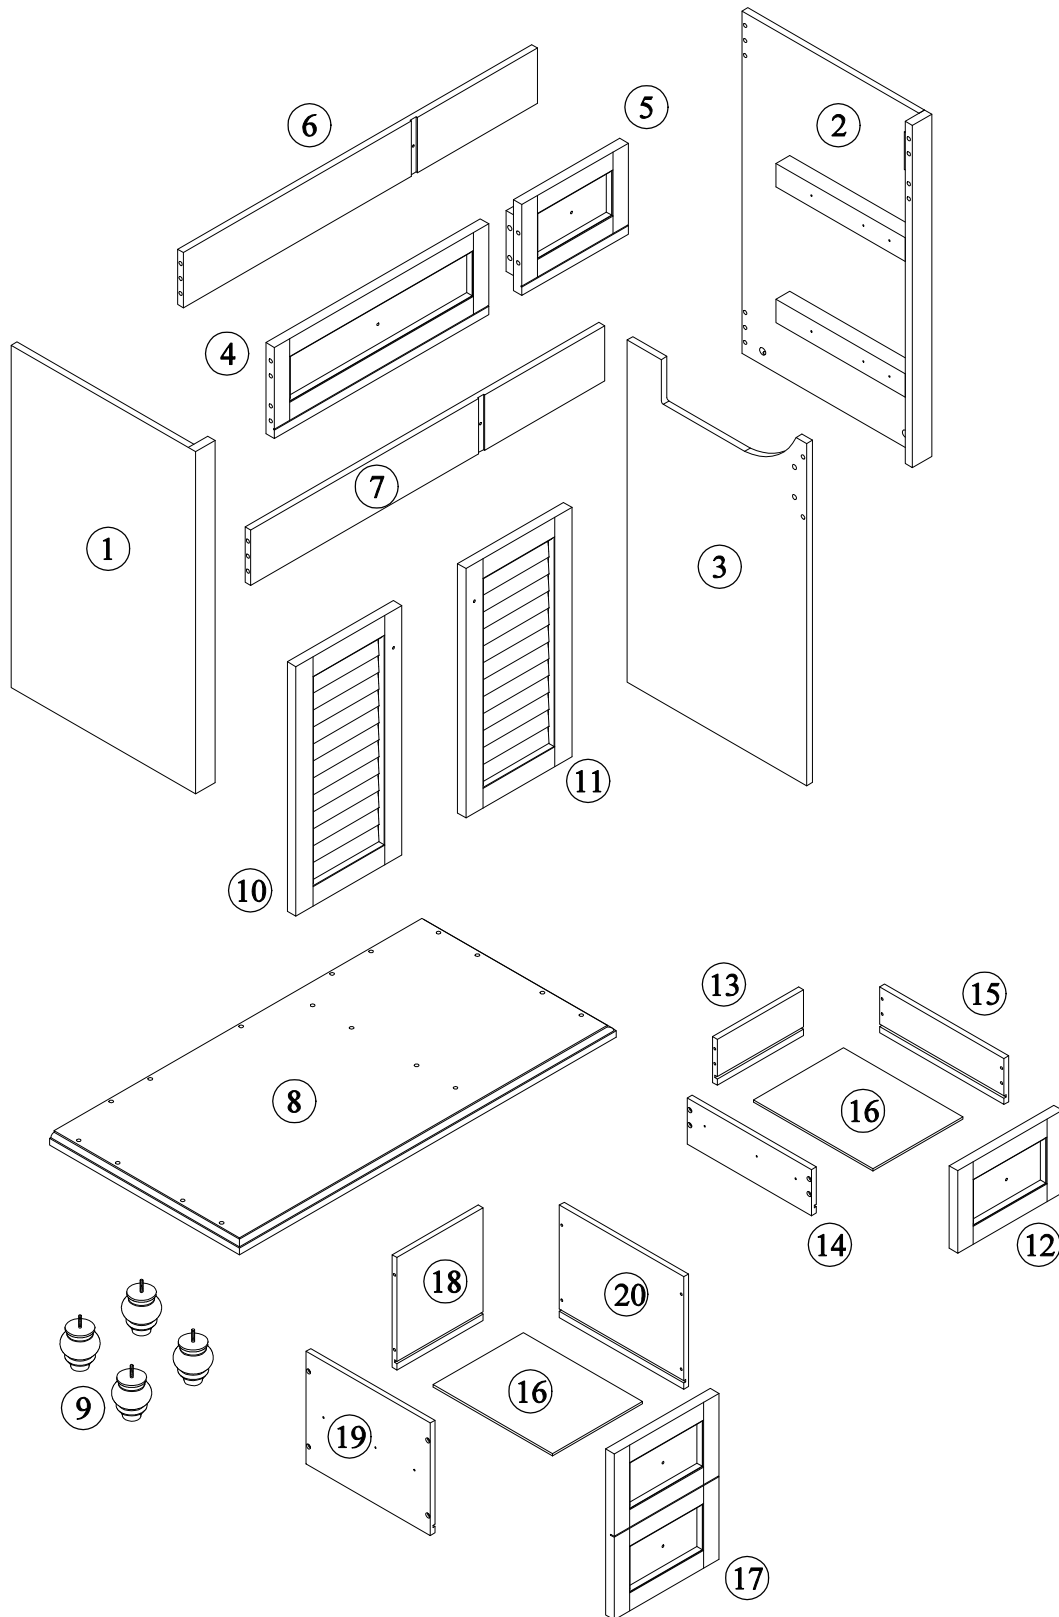


Identifying the Hardware-Identify the hardware using the illustrations below.







Part List

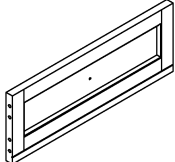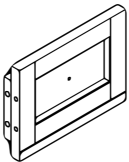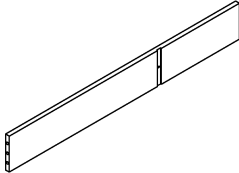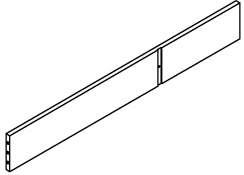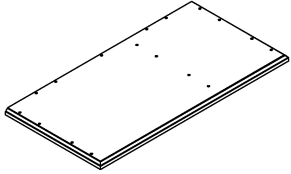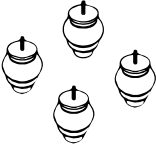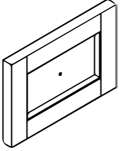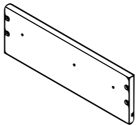1		2	
	Side Panel (L) - 1pc		Side Panel (R) - 1pc
3		4	
	Mid Panel - 1pc		Top Panel Front (L) - 1pc
5		6	
	Top Panel Front (R) - 1pc		Top Panel Rear - 1pc
7		8	
	Bottom Panel Rear - 1pc		Bottom Frame - 1pc
9		10	
	Cabinet Feet - 4pcs		Cabinet Door (L) - 1pc
11		12	
	Cabinet Door (R)- 1pc		Top Drawer Face - 1pc
13		14	
	Top Drawer Panel Rear - 1pc		Top Drawer Panel Side(L) - 1pc

Part List

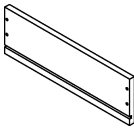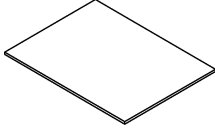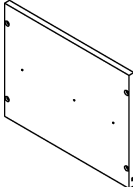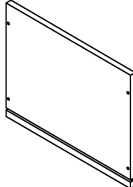
15	 Top Drawer Panel Side(R) - 1pc	16	 Bottom Drawer Panel - 2pcs
17	 Bottom Drawer Face - 1pc	18	 Bottom Drawer Panel Rear - 1pc
19	 Bottom Drawer Panel Side(L) - 1pc	20	 Bottom Drawer Panel Side(R) - 1pc

Hardware List





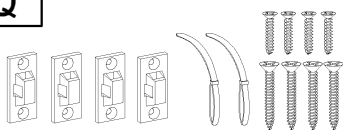
A  $\varnothing 13 \times 1/4" \times 50 \text{mm}$ Hex-Head bolts (2pcs)	B  $\varnothing 1/4" \times 16 \times 1 \text{mm}$ Washer (2pcs)	C  $\varnothing 6 \times 35 \text{mm}$ Three in one bolts (21pcs)
D  $\varnothing 14.5 \times 12 \text{mm}$ Three in one lock (21pcs)	E  $\varnothing 8 \times \varnothing 4 \times 25 \text{mm}$ Round head screw (2pcs)	F  $\varnothing 8 \times \varnothing 4 \times 32 \text{mm}$ Round head screw (16pcs)
G  Handle (7pcs)	H  $\varnothing 5/32" \times 20 \text{mm}$ Handle screw (2pcs)	I  $\varnothing 5/32" \times 28 \text{mm}$ Handle screw (5pcs)
J  Damping hinge (4pcs)	K  $\varnothing 7 \times \varnothing 3.5 \times 15 \text{mm}$ Flat head screw (24pcs)	L  $\varnothing 300 \times 35 \text{mm}$ Slide rails (4pcs)
M  $\varnothing 298 \times 18 \text{mm}$ Slide rails (4pcs)	N  $\varnothing 6 \times \varnothing 3 \times 12 \text{mm}$ Flat head screw (24pcs)	O  $\varnothing 8 \times 30 \text{mm}$ Wood dowel (20pcs)
P  4mm Allen key (1pc)	Q  Anti fall hardware (1set)	

STEP: 1

C



12PCS

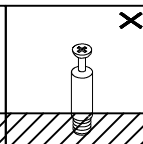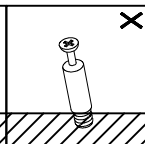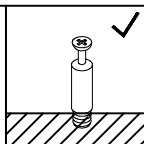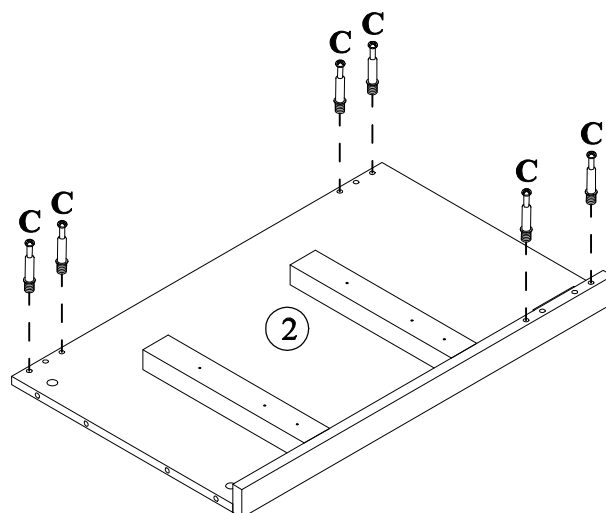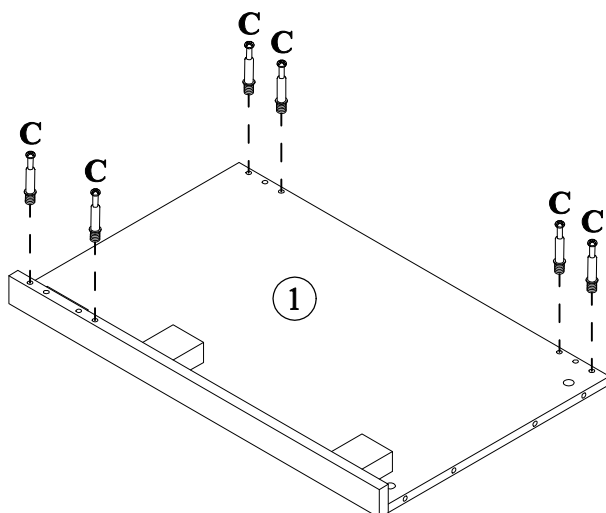

STEP: 2

L





4PCS

N



12PCS

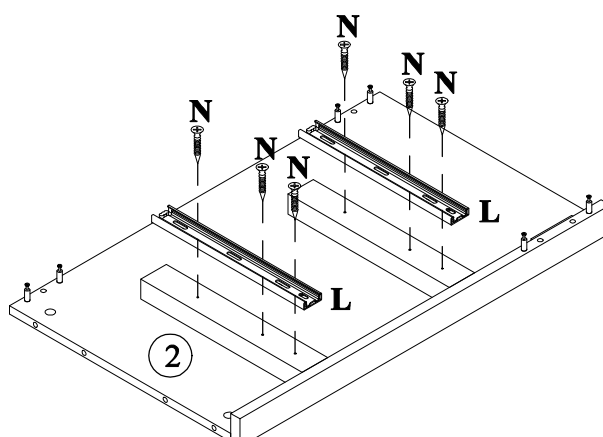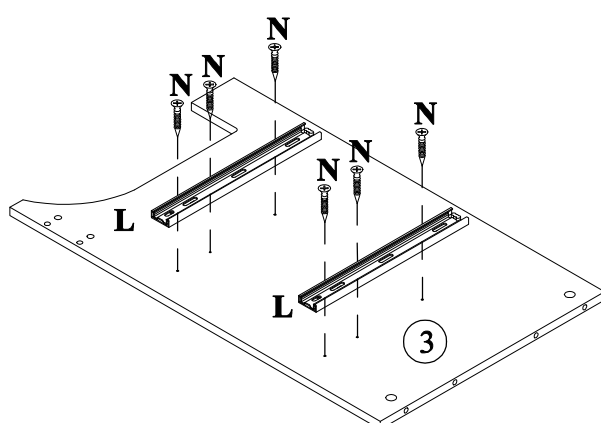

POSITION OF SCSEW





1

2


1



STEP: 3

A	B	O
		
2PCS	2PCS	4PCS

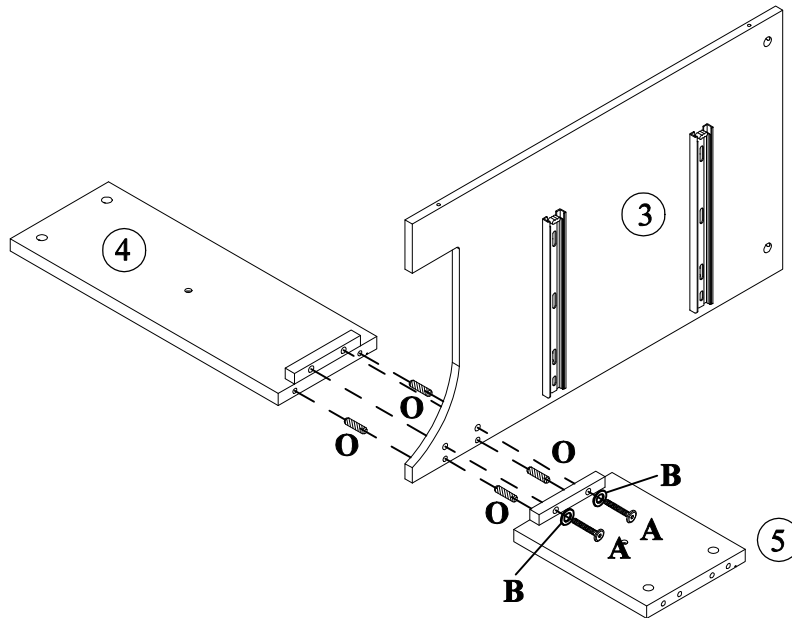


STEP: 4

E	D	O
		
2PCS	12PCS	8PCS

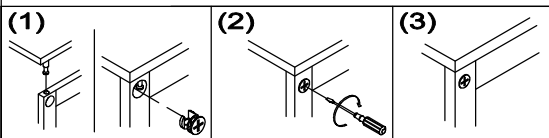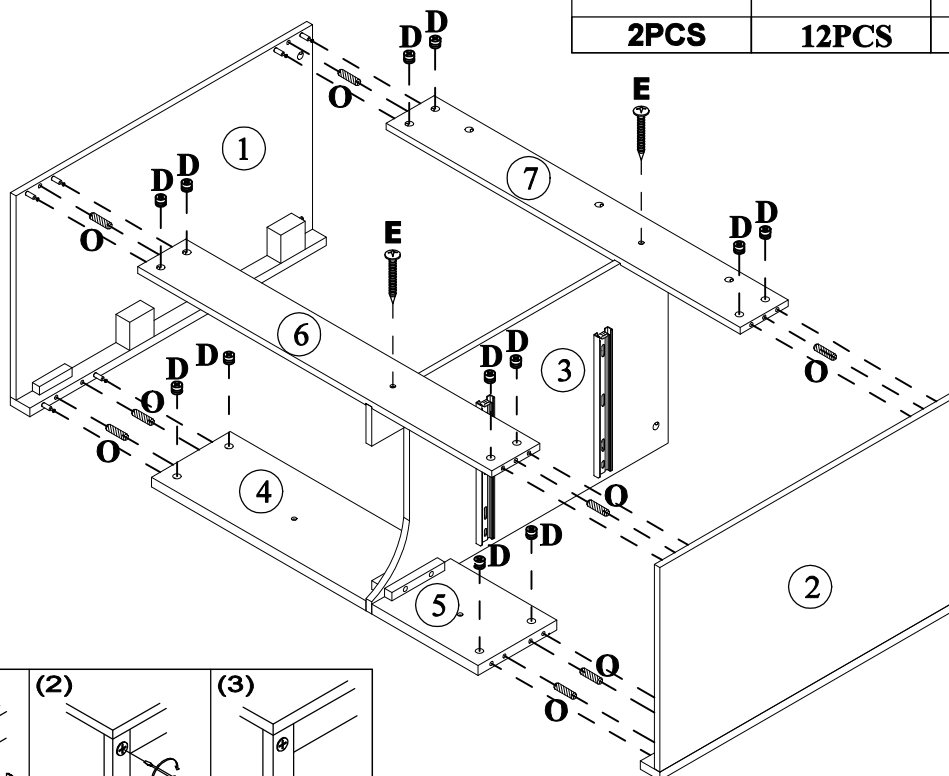


STEP: 5

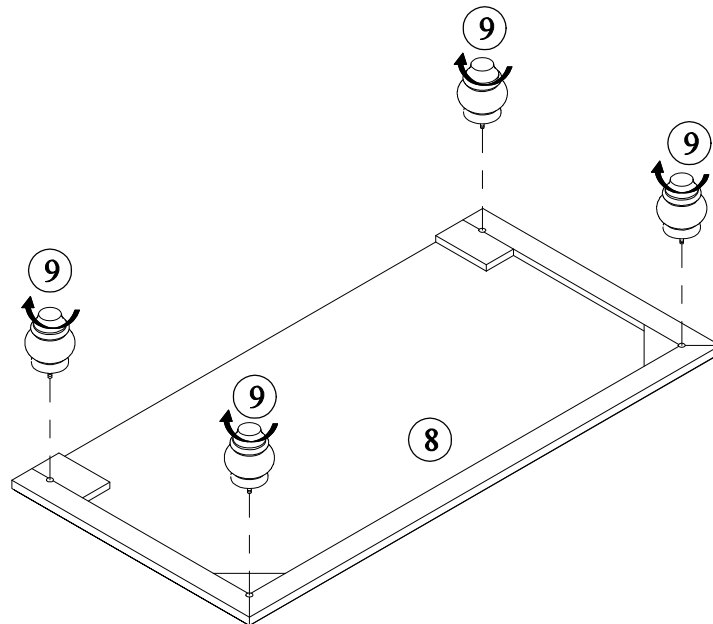


STEP: 6

C







9PCS

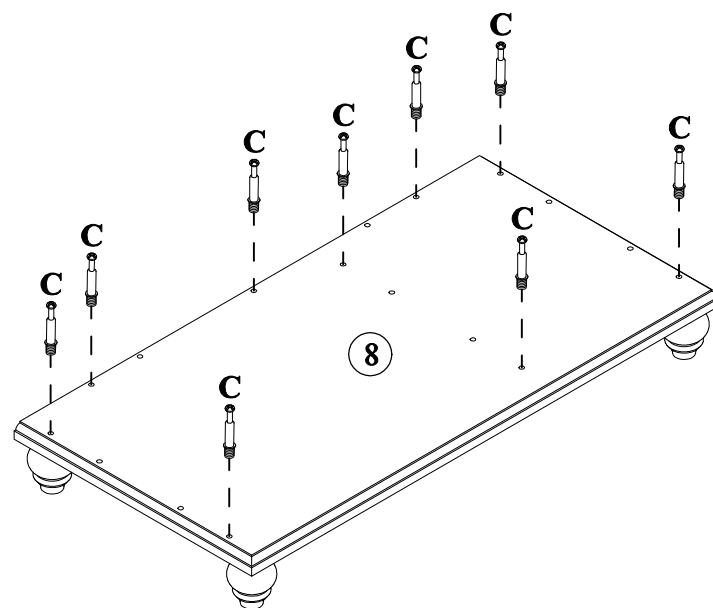


STEP: 7

D		O	
9PCS		8PCS	

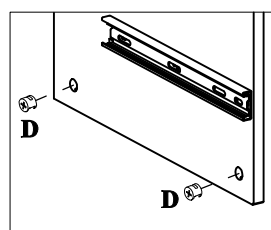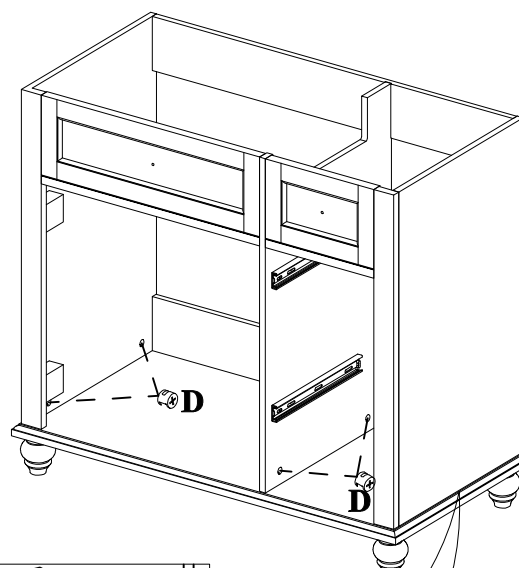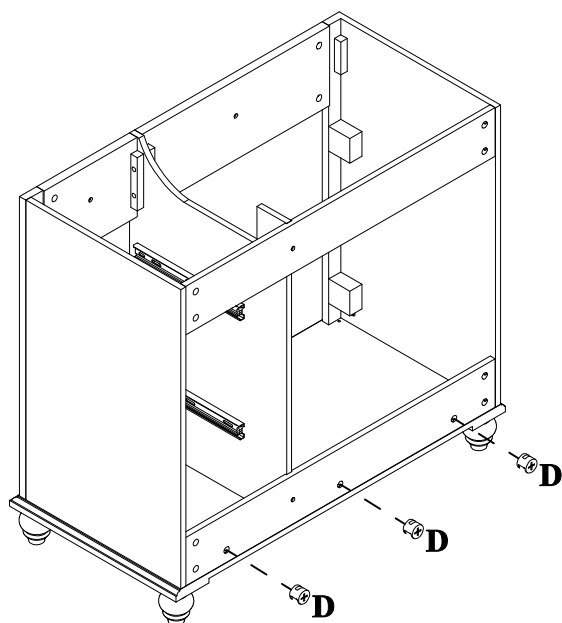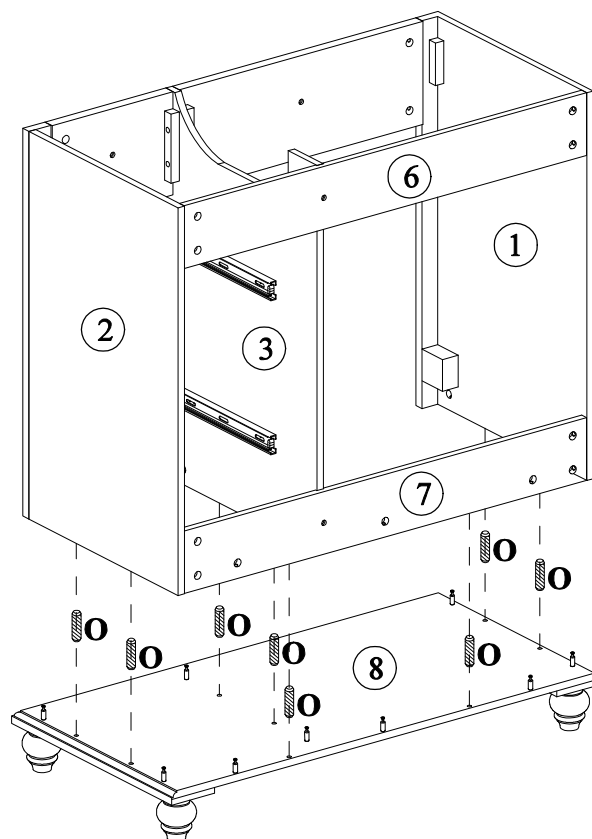




STEP: 8

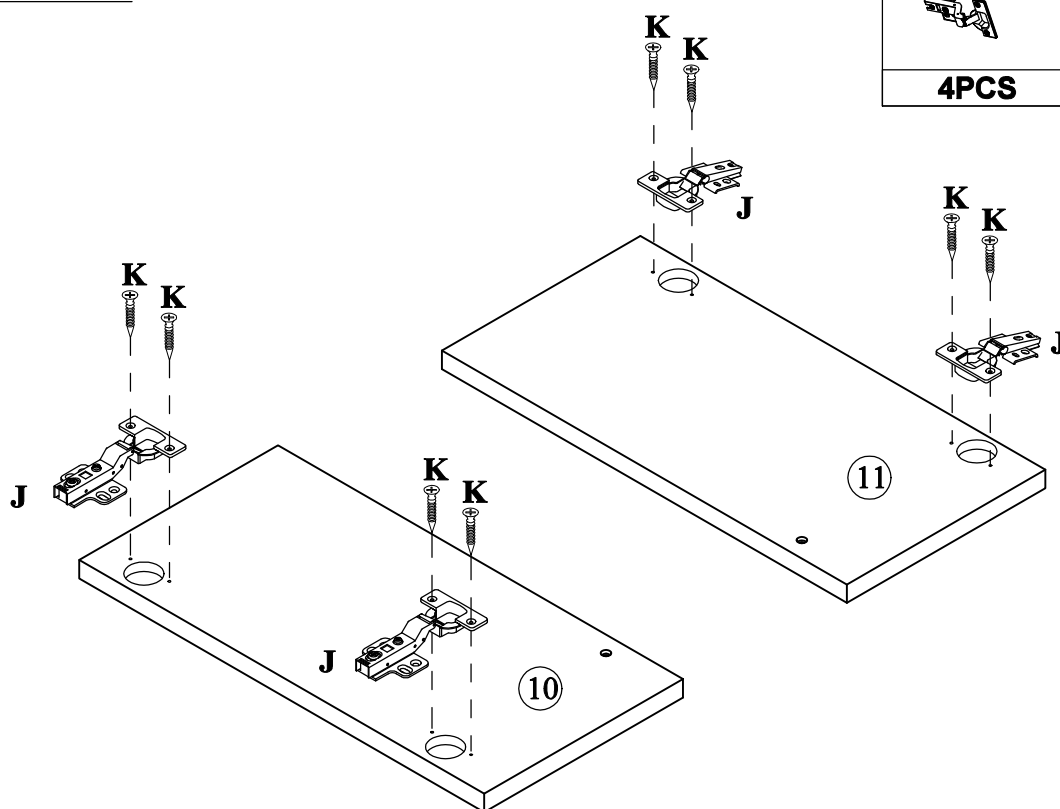

J	K
	
4PCS	8PCS

STEP: 9

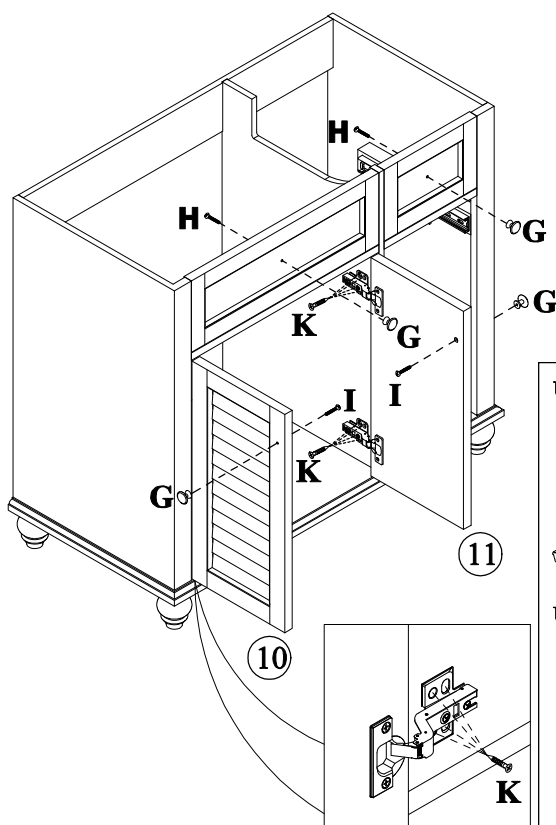



G	H	I
		
4PCS	2PCS	2PCS

K

16PCS



Use the screws to adjust up or down

Use the screws to permanent

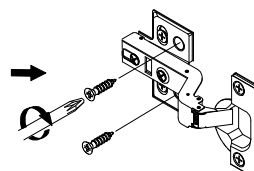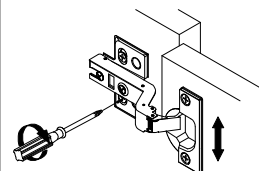






Use the screws to adjust left or right

Use the screws to adjust in or out

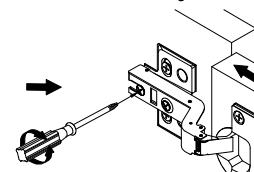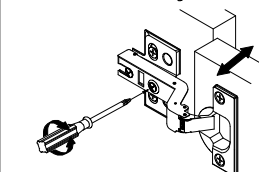


STEP: 10



F	G	I	M	N
				
8PCS	1PC	1PC	2PCS	6PCS


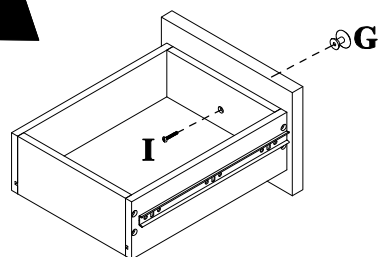
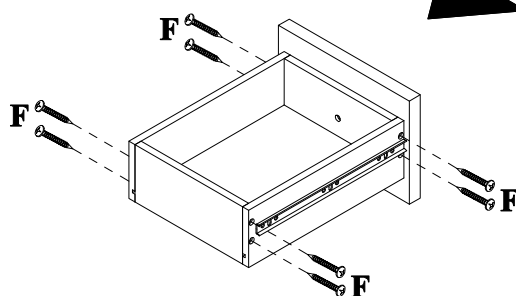
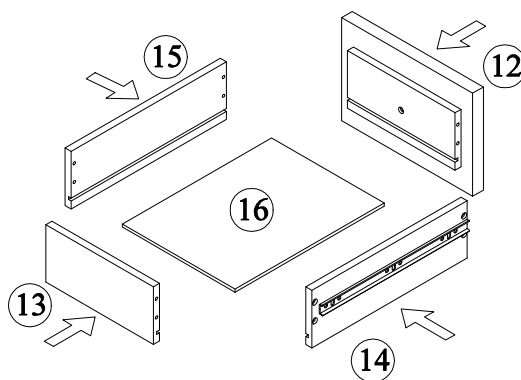
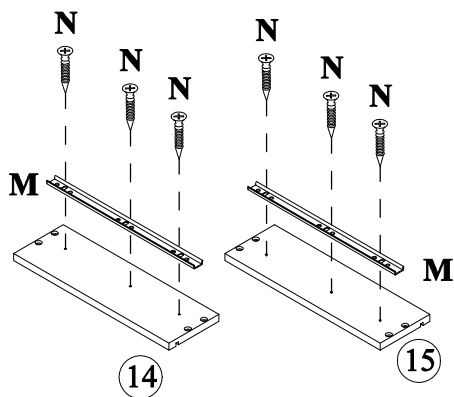


POSITION OF SCREW

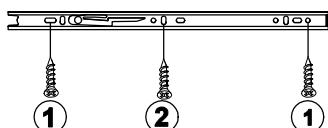


STEP: 11


F	G	I	M	N
				
8PCS	2PCS	2PCS	2PCS	6PCS

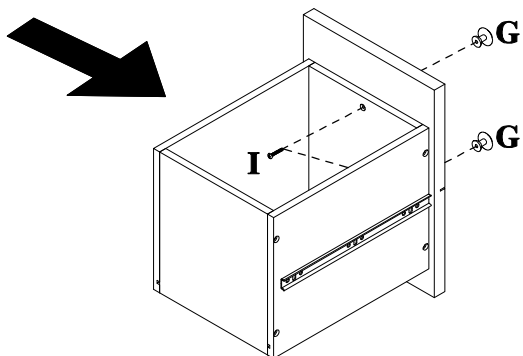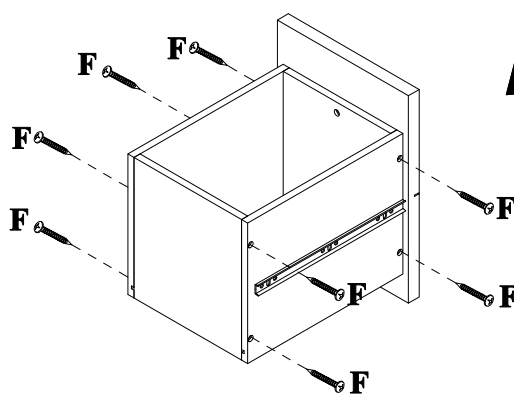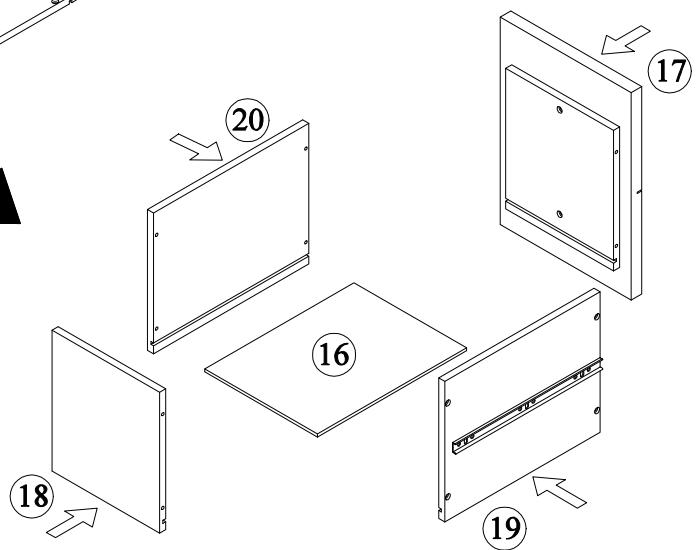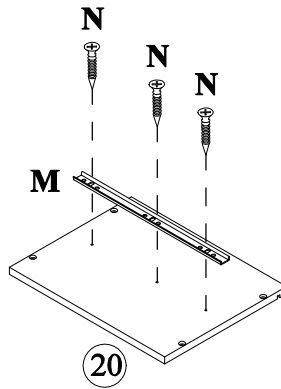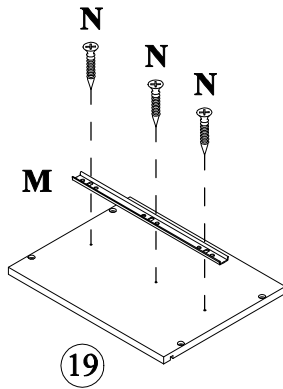



POSITION OF SCREW

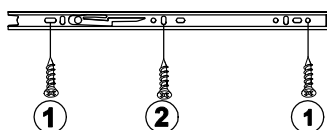

STEP: 12

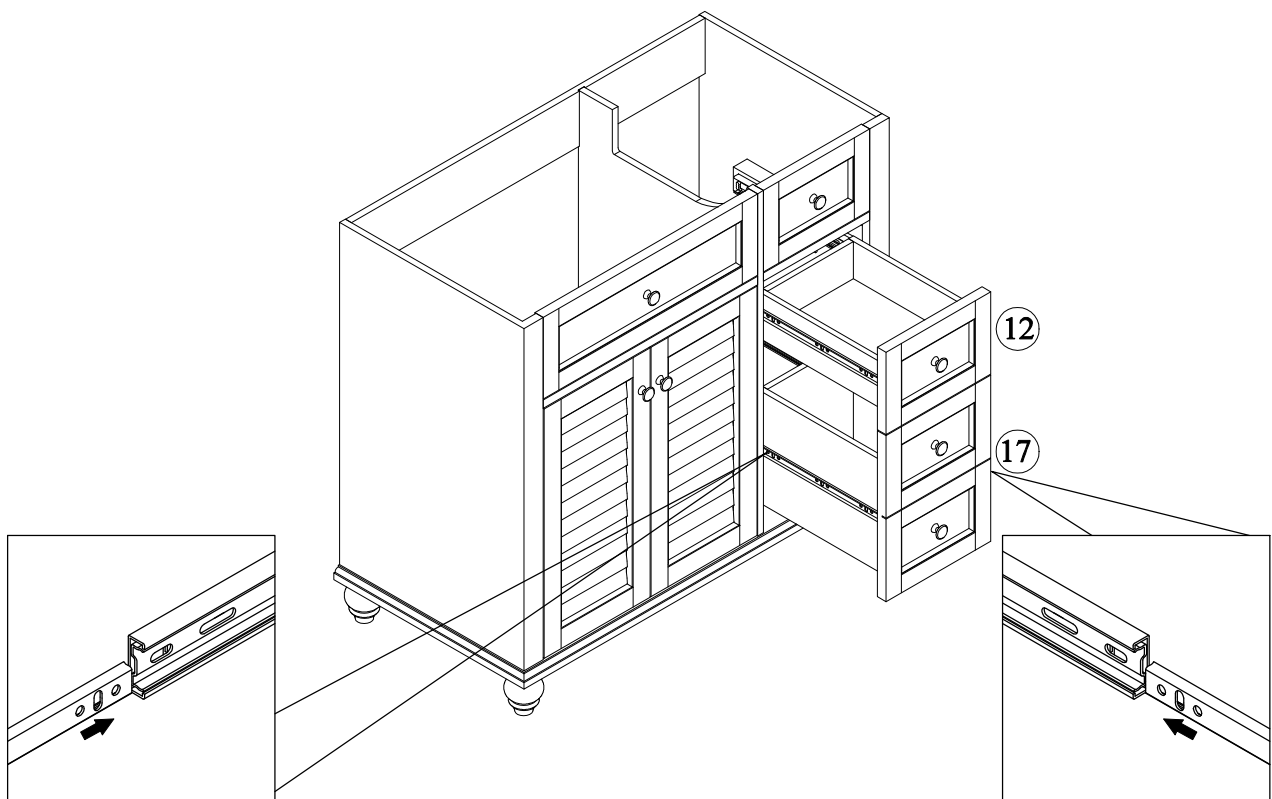


STEP: 13

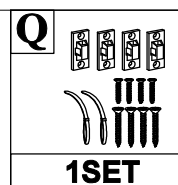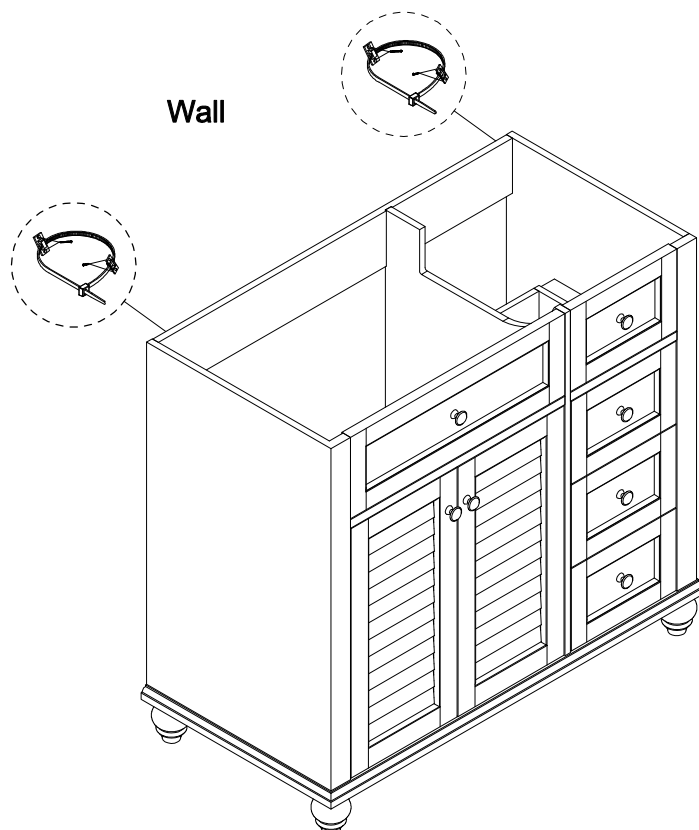


STEP: 14

**Install the sink on the cabinet with glue.
Let stand for 24 hours**

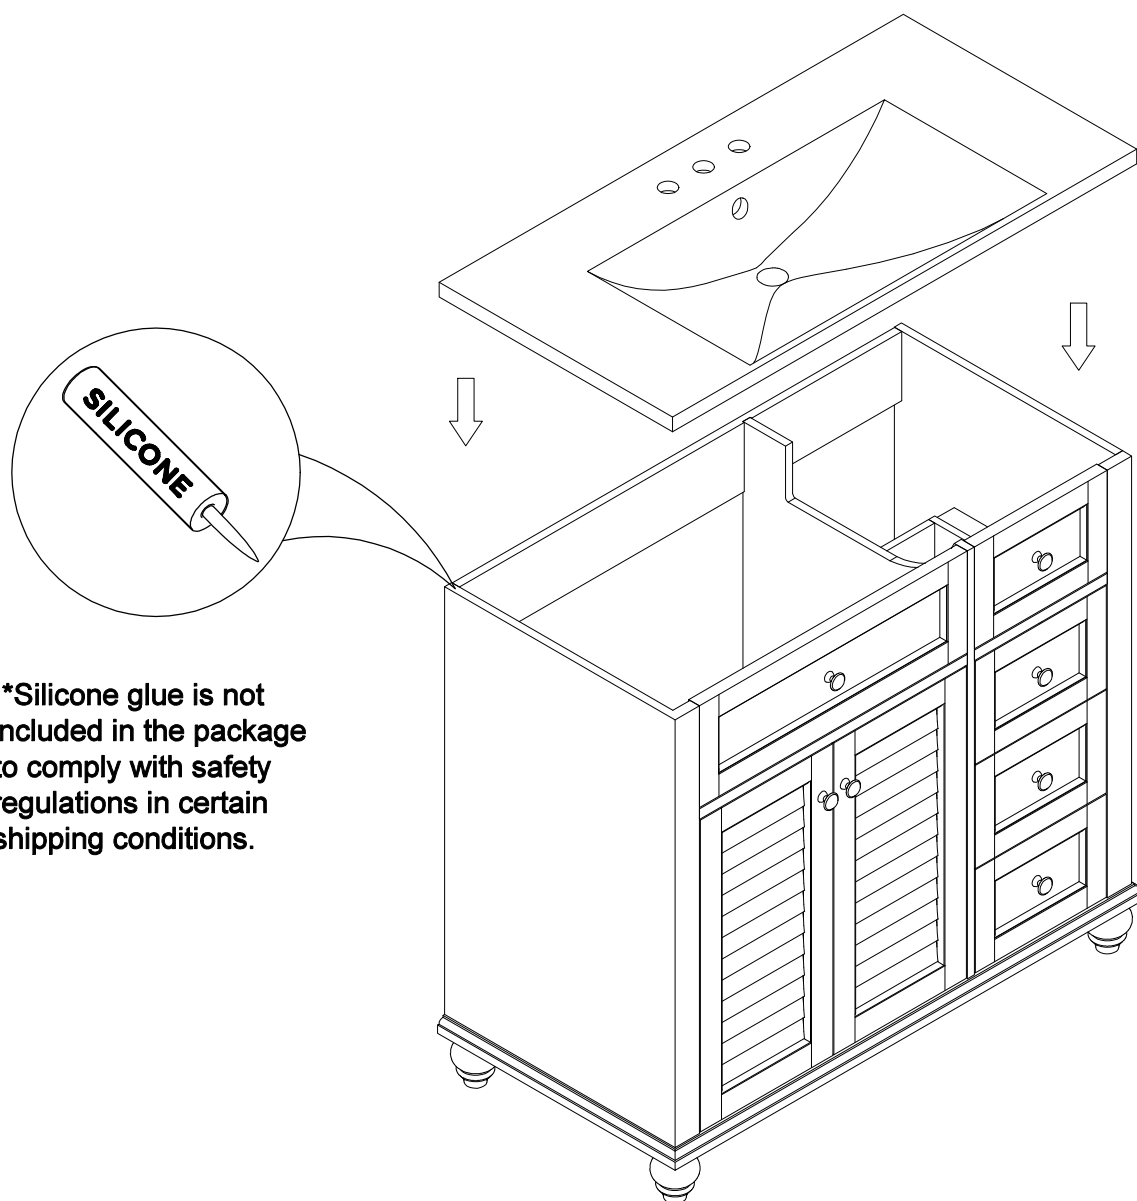


***Silicone glue is not included in the package to comply with safety regulations in certain shipping conditions.**

STEP: 15

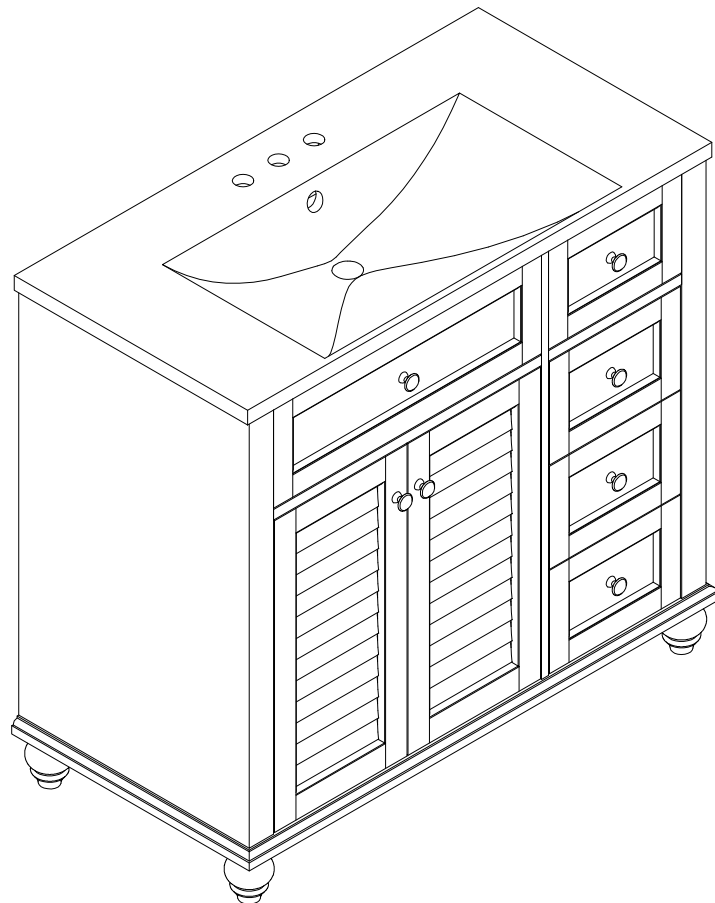

HINGE ADJUSTMENTS

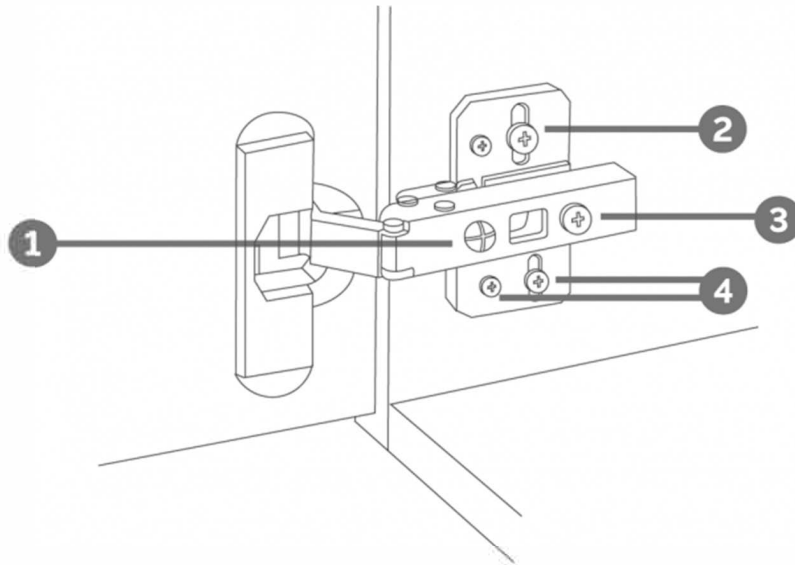


① Sideways / Tilt adjustment

Turn the screw

clockwise to move the door further away from the side of the cabinet

anticlockwise to move the door closer to the side of the cabinet

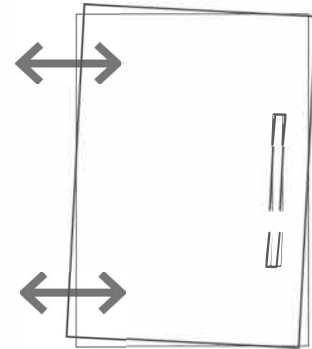


② ④ Height adjustment

While supporting the weight of the door, turn the screws

clockwise to move the door up

anticlockwise to move the door down

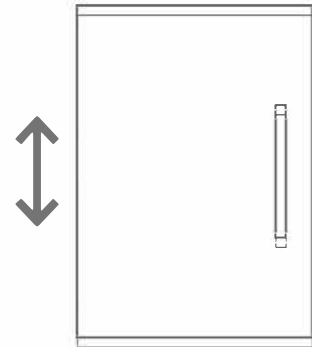

③ Forward and back adjustment

If the gap between the back of the door and the cabinet is too small, and the door may not close fully. Turn the screw

clockwise to decrease the gap between the door and the cabinet

anticlockwise to increase the gap between the door and the cabinet

