


WOODEN WINE STORAGE CABINET

Assembly Instructions-Please keep for future reference

SKU:N728P511479
N728P511480

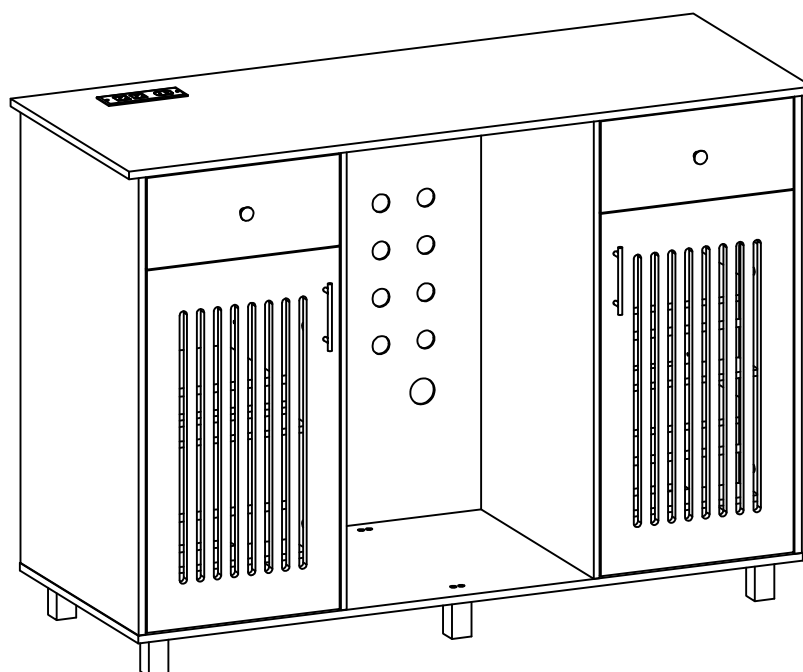

! WARNING	
	This product is NOT a Clothing Storage Unit (CSU). DO NOT use it for clothing storage. Improper use may cause furniture tipover.

Important -Please read these instructions fully before starting assembly




Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- . Check you have all the components and tools listed on the following pages.
- . Remove all fittings from the plastic bags and separate them into their groups.
- . Keep children and animals away from the work area, small parts could choke if swallowed.
- . Make sure you have enough space to layout the parts before starting.

- . During assembly do not stand or put weight on the product, this could cause damage.
- . Assemble the item as close to its final position (in the same room) as possible.
- . Assemble on a soft level surface to avoid damaging the unit or your floor.
- . Parts of the assembly will be easier with 2 people.

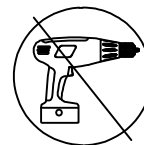

power drill is set on a low torque setting.

- . To reduce the likelihood of damaging your product please ensure that your

Care and maintenance

- . Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.

- . From time to time check that there are no loose screws on this unit.

- . This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- . Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts

- . Regularly check and ensure That all bolts and fittings are tightend properly.

WARNING

In order to help prevent overturning - please follow these instructions

To help prevent product toppling over please follow the below steps:-













If anti-tip hardware accessories are supplied, fasten the unit to the wall.
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

This product is supplied with anti-tip hardware; please install it.

Components - Fittings N728P511480

Please check you have all the panels listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

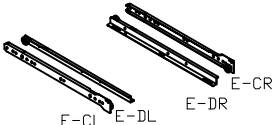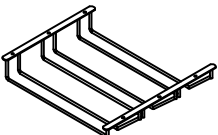A x64  M6X33mm	B x64  $\varnothing 12 \times 10 \text{mm}$	C x12  M6X25mm	D x4  $\varnothing 35$
E x2  350mm	F x20  M3.5*12mm	G x50  M3.5*14mm	H x2  M3.5*14mm
I x1 	J x6  M4*18mm	K x2  96mm	L x2 
M x6  35*35*2mm	N x1  325*340*55mm	O x12 	P x18 
Q x3  $\varnothing 50 \text{mm}$	R x2  R1 R2 R3	S x76  $\varnothing 20 \text{mm}$	T x1 
(23) x6 			


Using Camlocks

Step 1

Connect the camlock as directed in the assembly Instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.
NE PAS SERRER EXCESSIVEMENT.

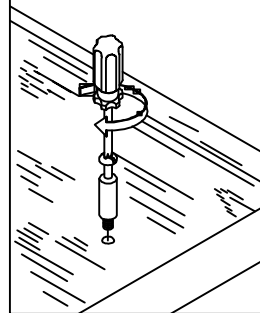

Step 2

Push the male camlock into the entry hole.

2

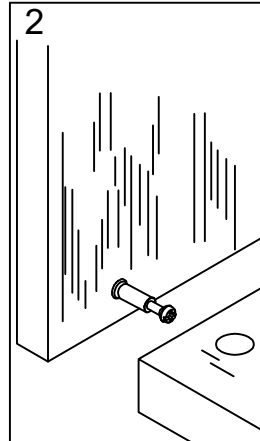


Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

3

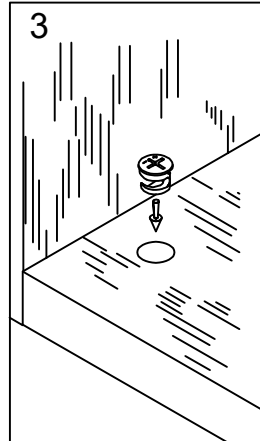


Step 4

Turn the female camlock clockwise with a screwdriver.


You should feel a click when the camlock is locked in place.

The joint is now secure.


4

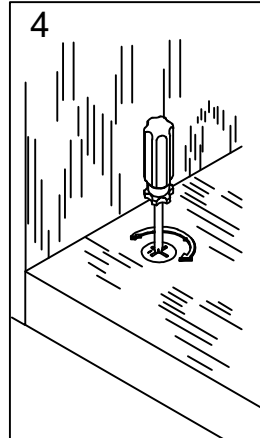


Parts list

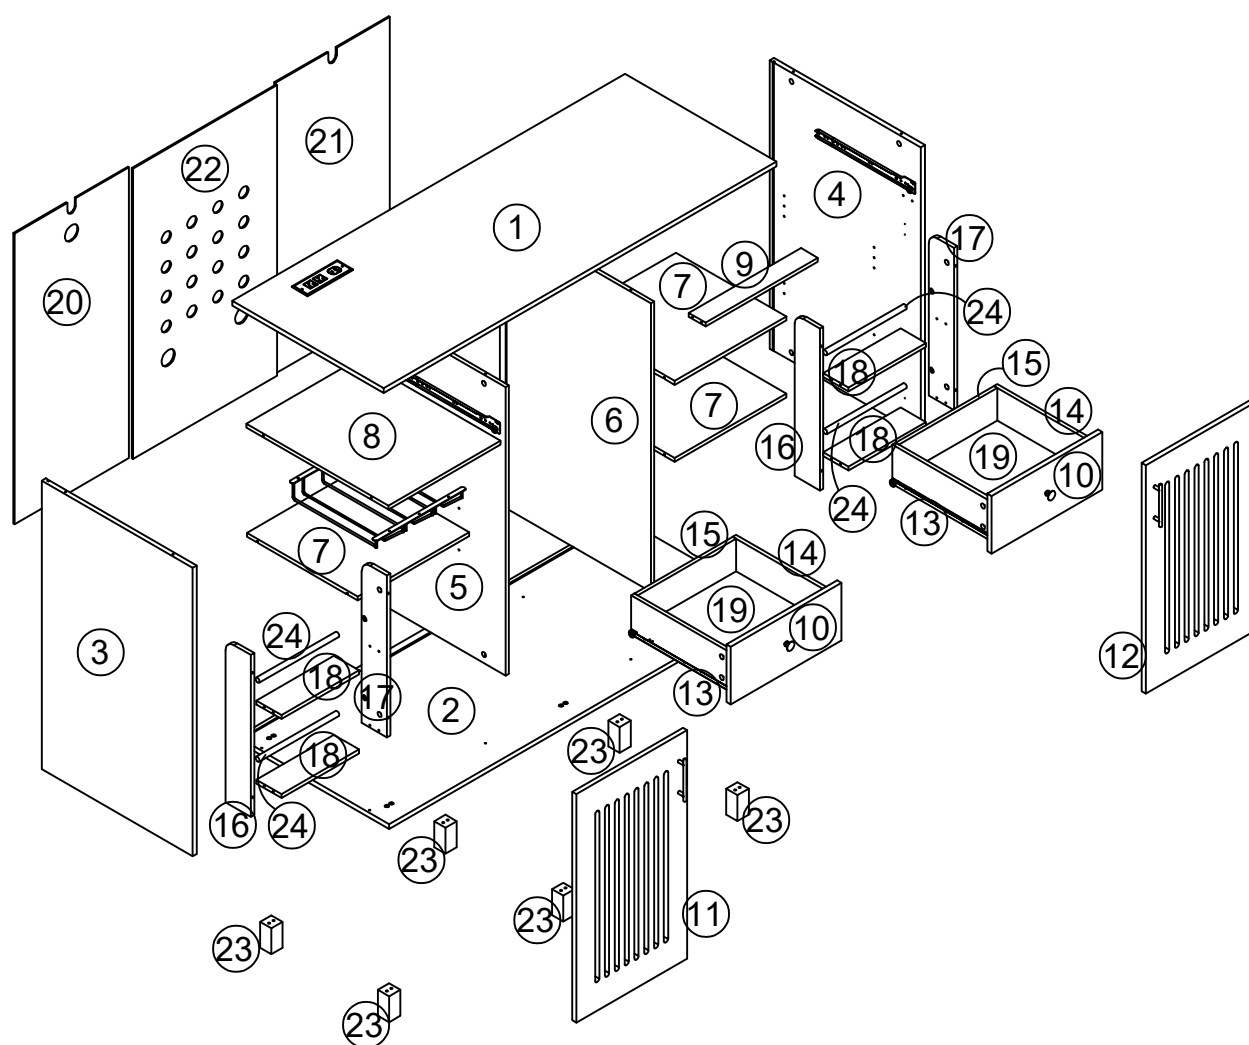













N728P511479

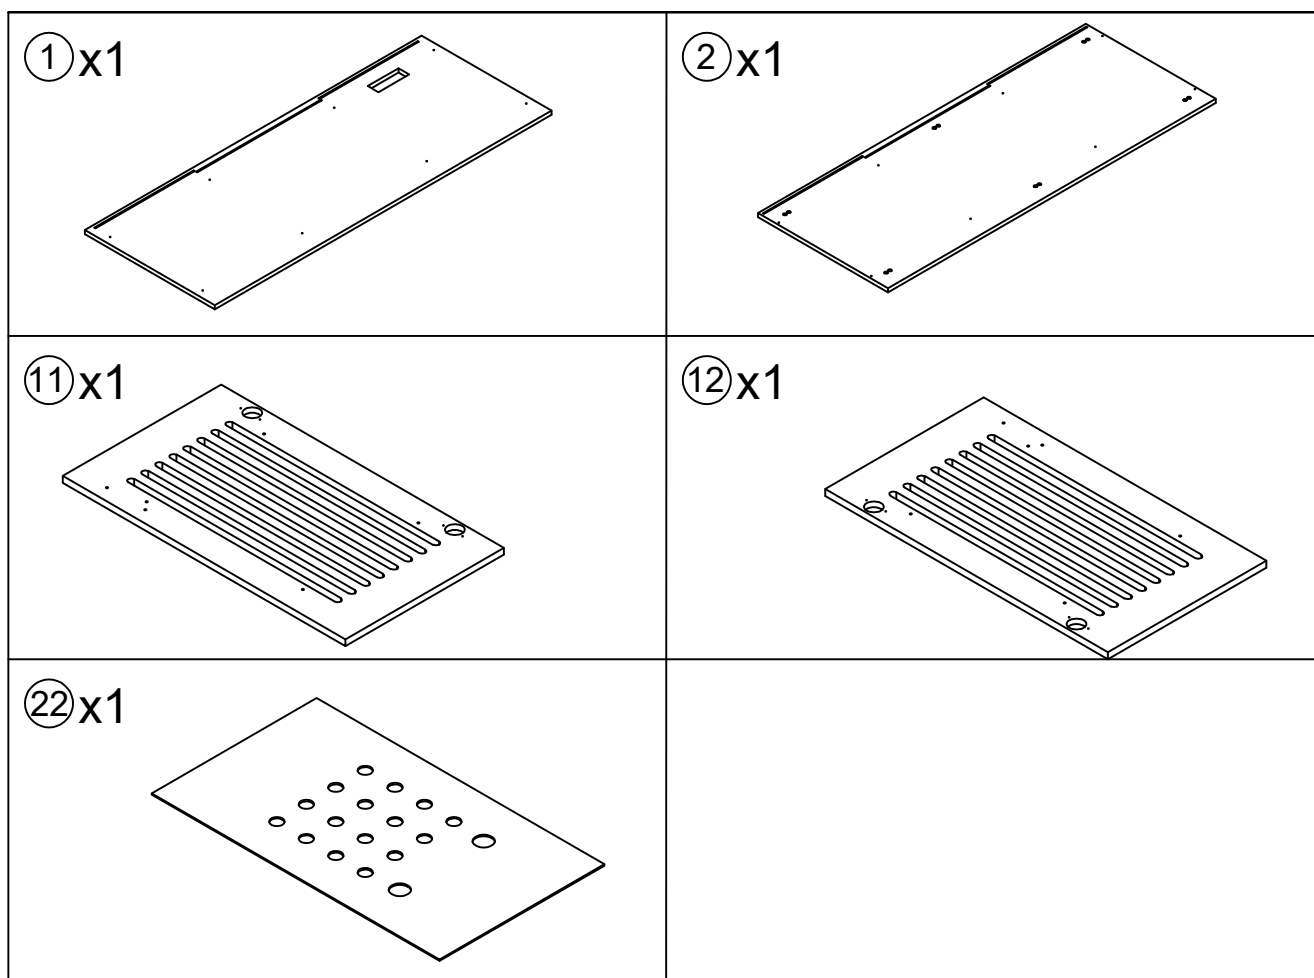


N728P511480

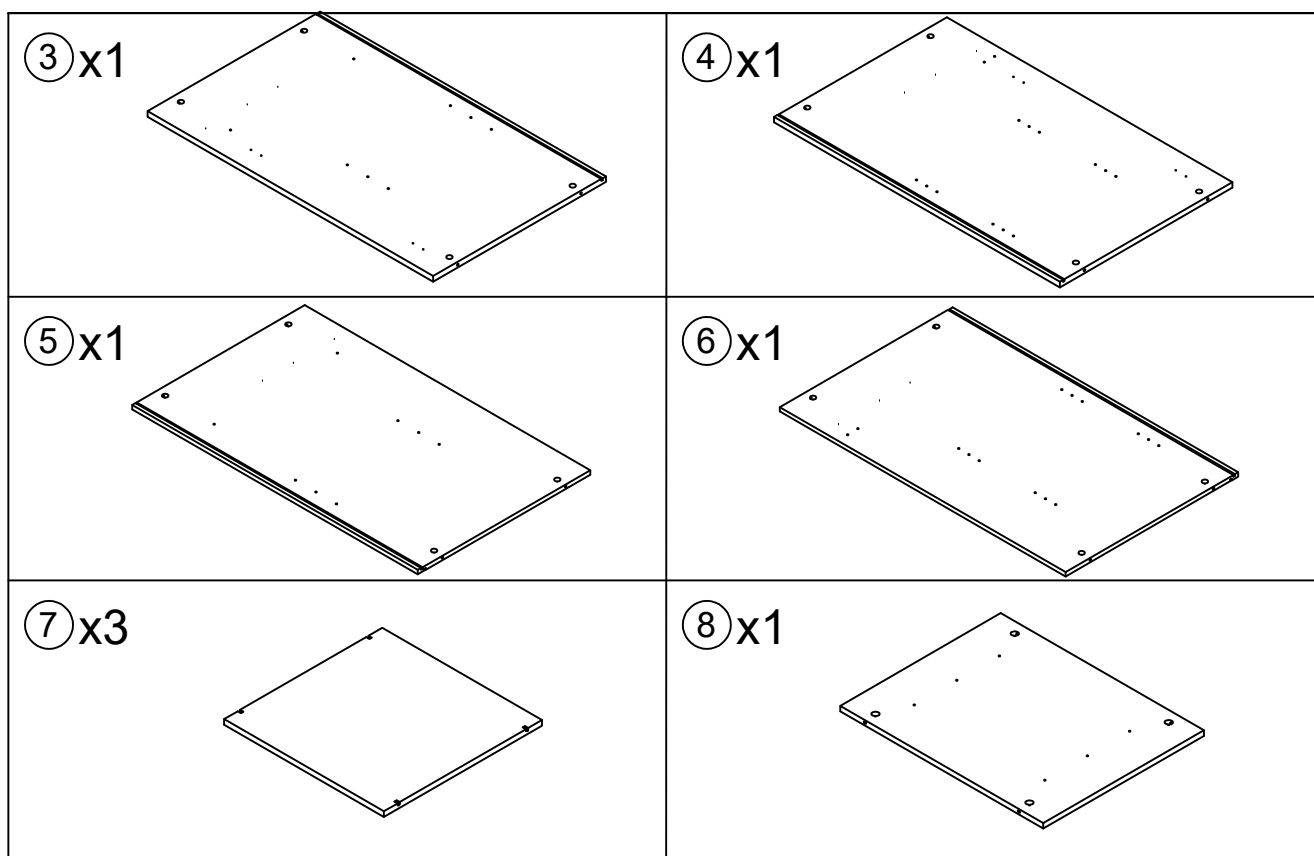


N728P511480

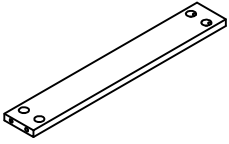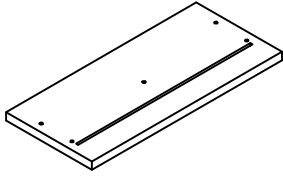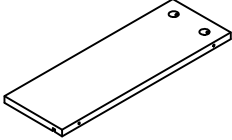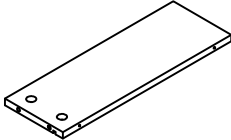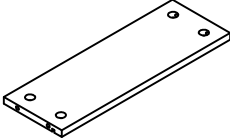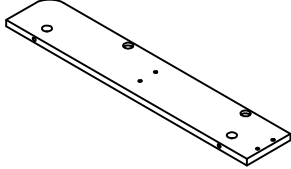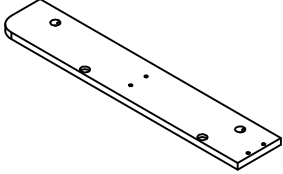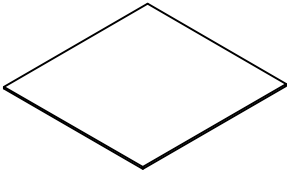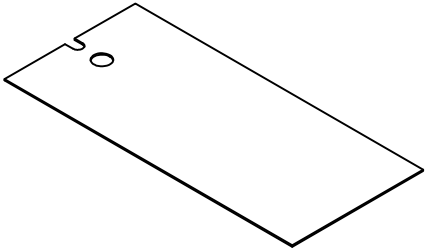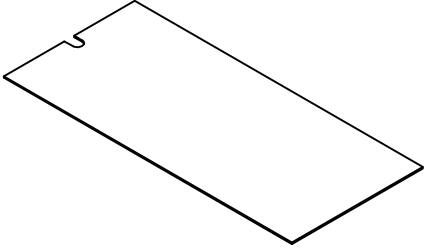
⑨x1 	⑩x2 
⑬x2 	⑭x2 
⑮x2 	⑯x2 
⑰x2 	⑱x4 
⑲x2 	⑳x1 
㉑x1 	㉔x4 

1

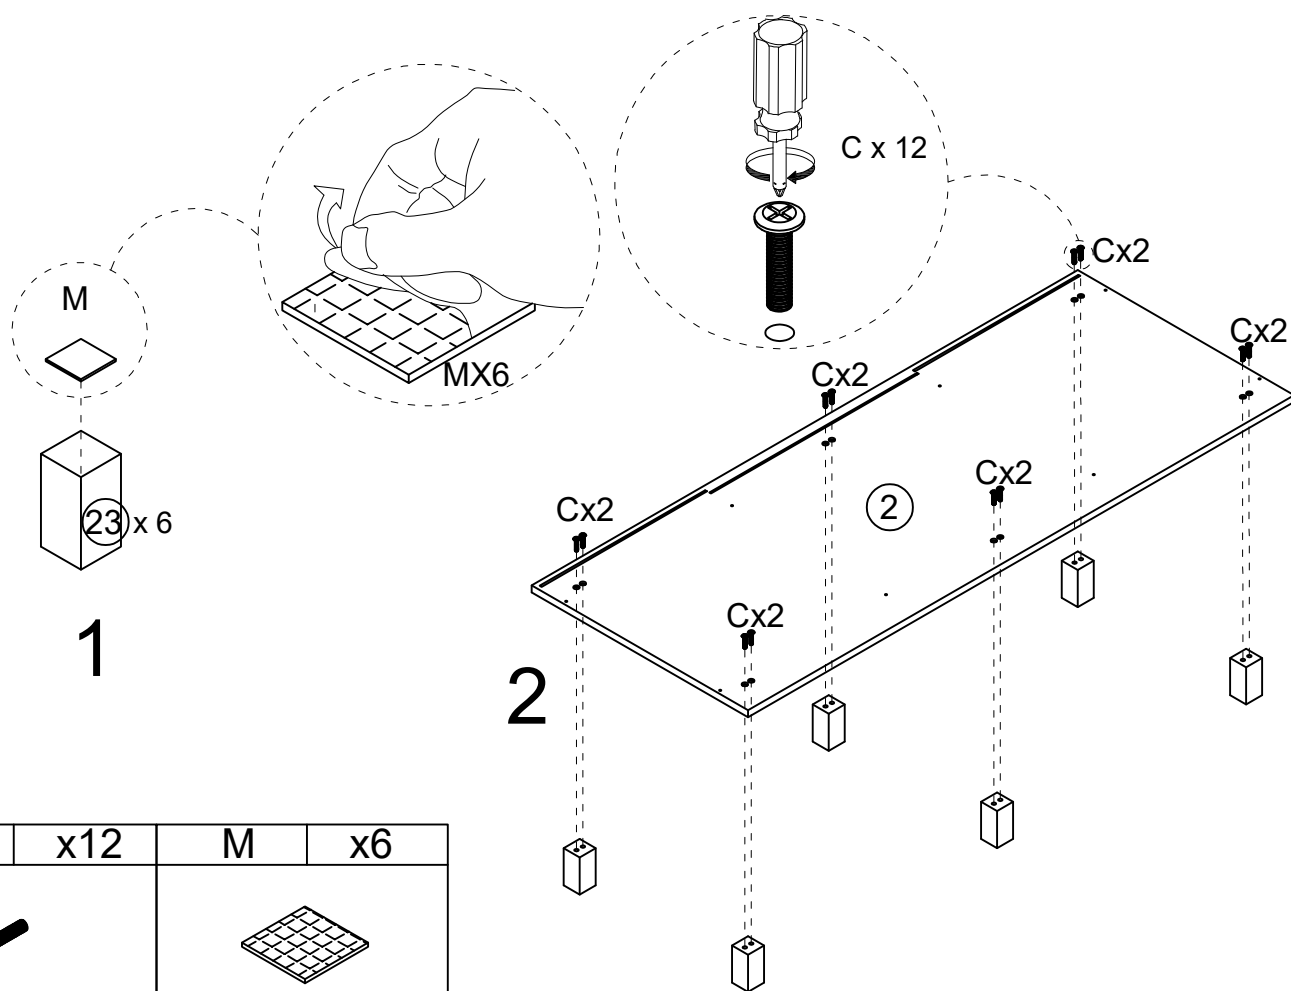




C	x12	M	x6
			
M6X25mm		35*35*2mm	



2

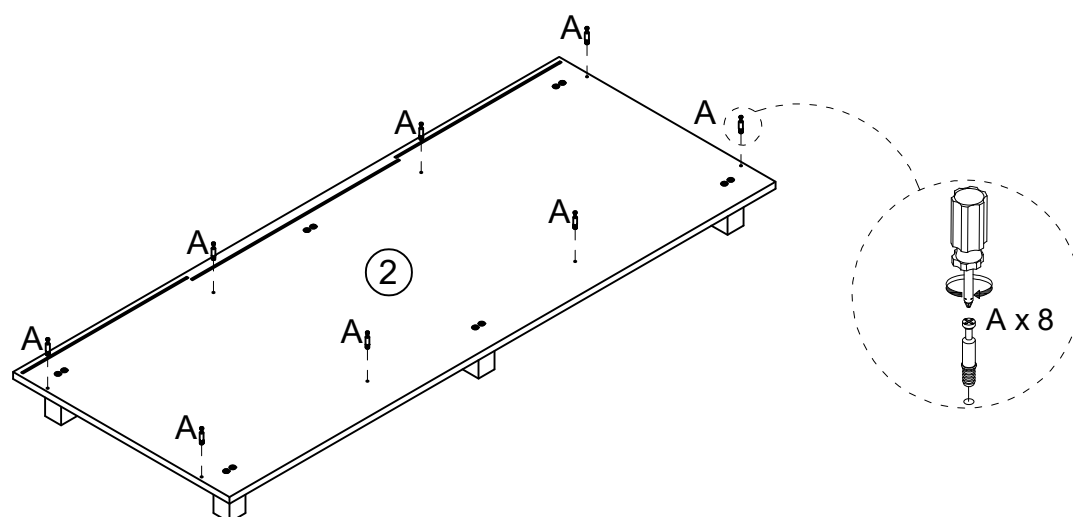





A	x8
	
M6X33mm	



3

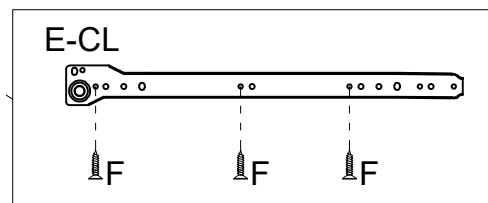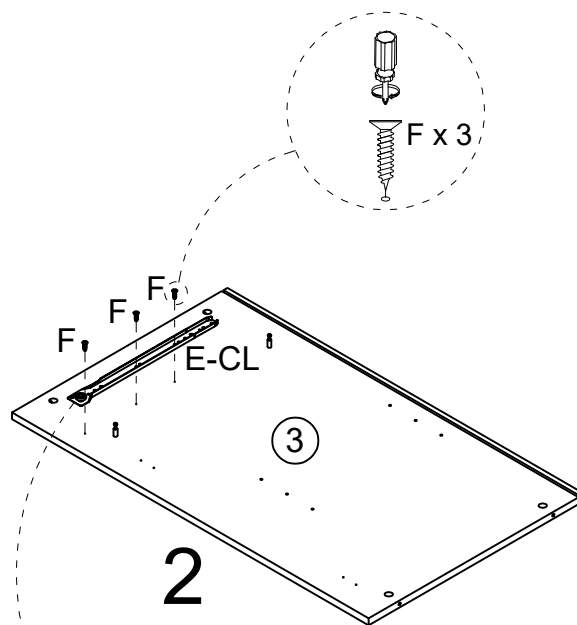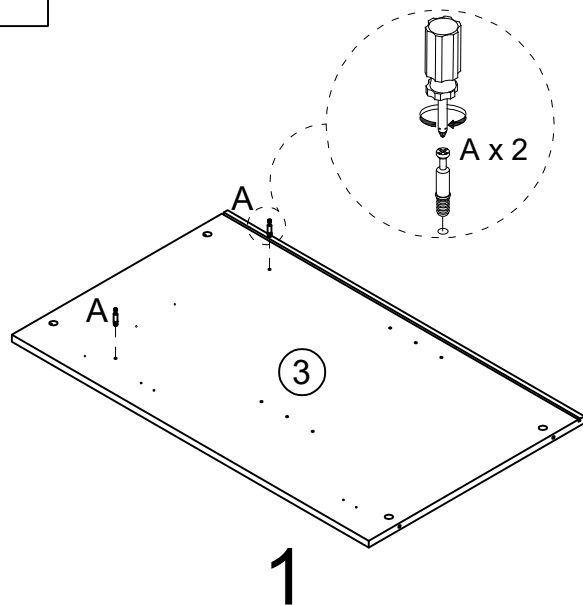

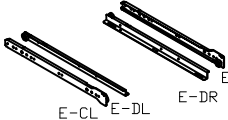
A	x2	E	x1	F	x3
					
M6X33mm		350mm		M3,5*12mm	

4

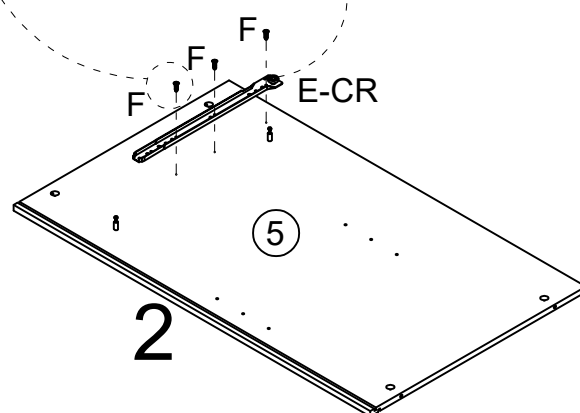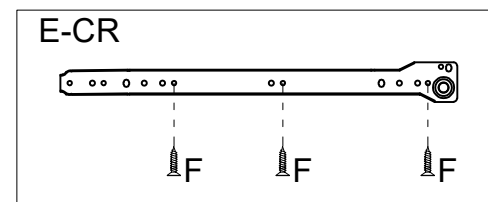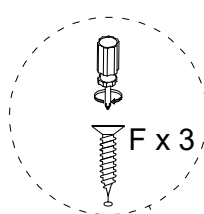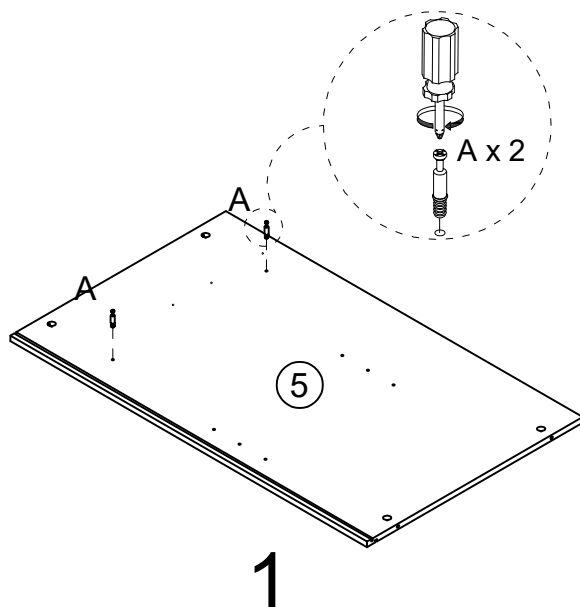


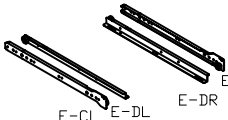A	x2	E	x1	F	x3
					
M6X33mm		350mm		M3,5*12mm	



5

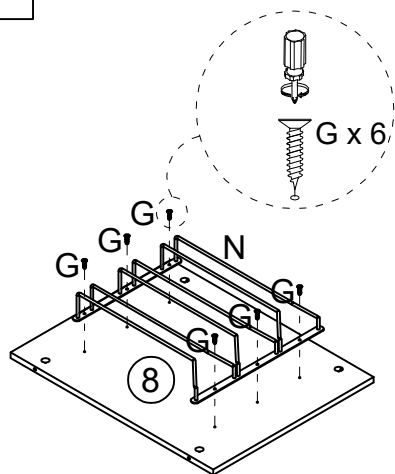


1

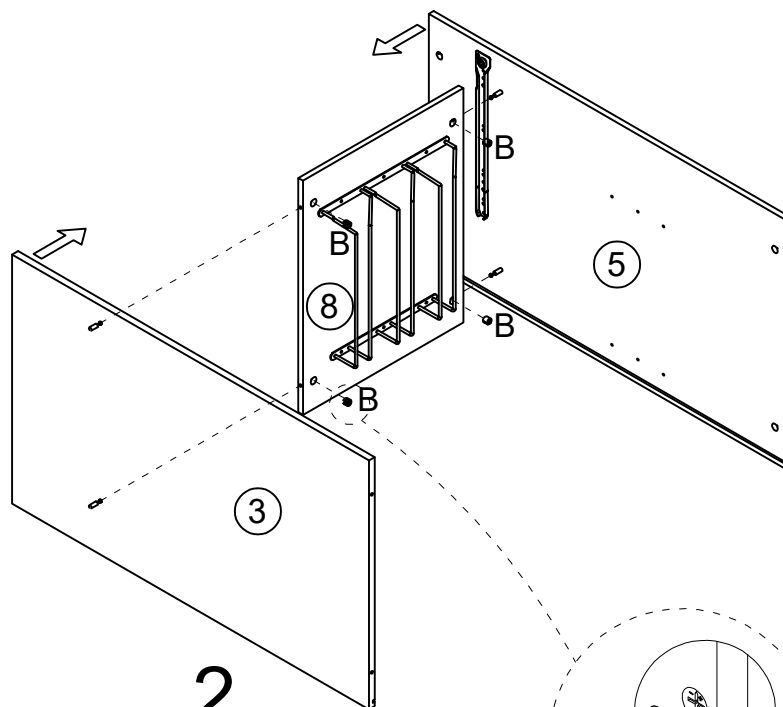


2

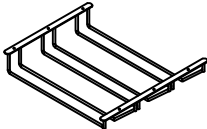B	x4	G	x6	N	x1
					
ø12X10mm		M3.5*14mm		325*340*55mm	




6

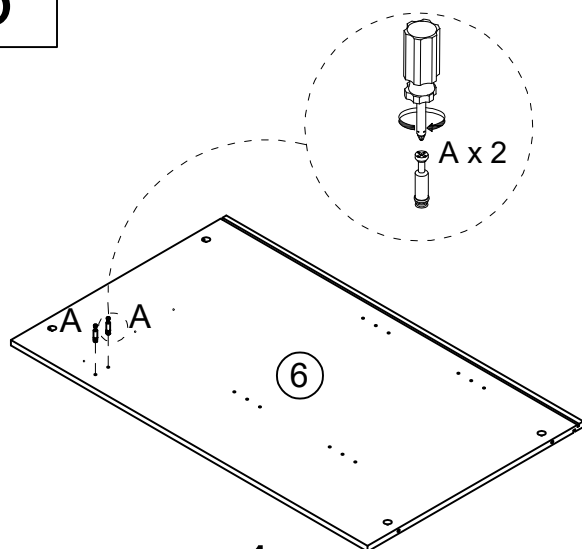


1

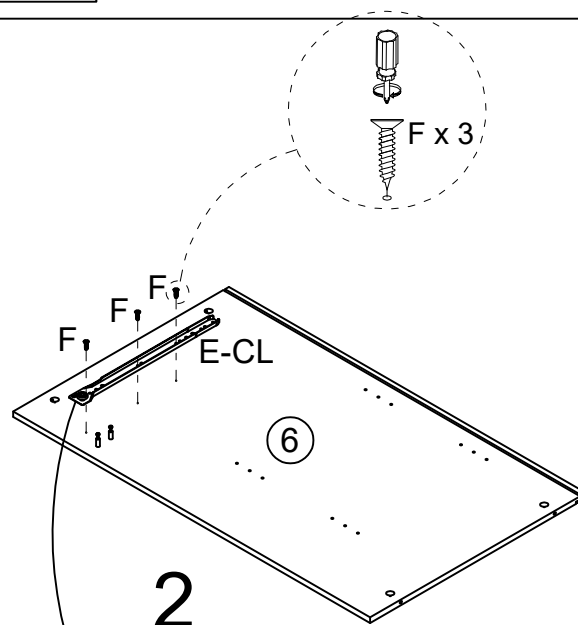




2

A	x2	E	x1	F	x3
					
M6X33mm		350mm		M3.5*12mm	

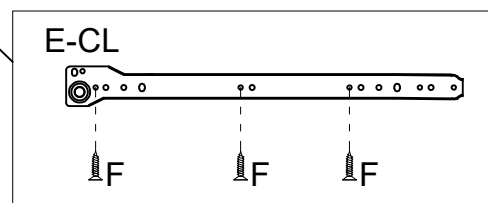


7

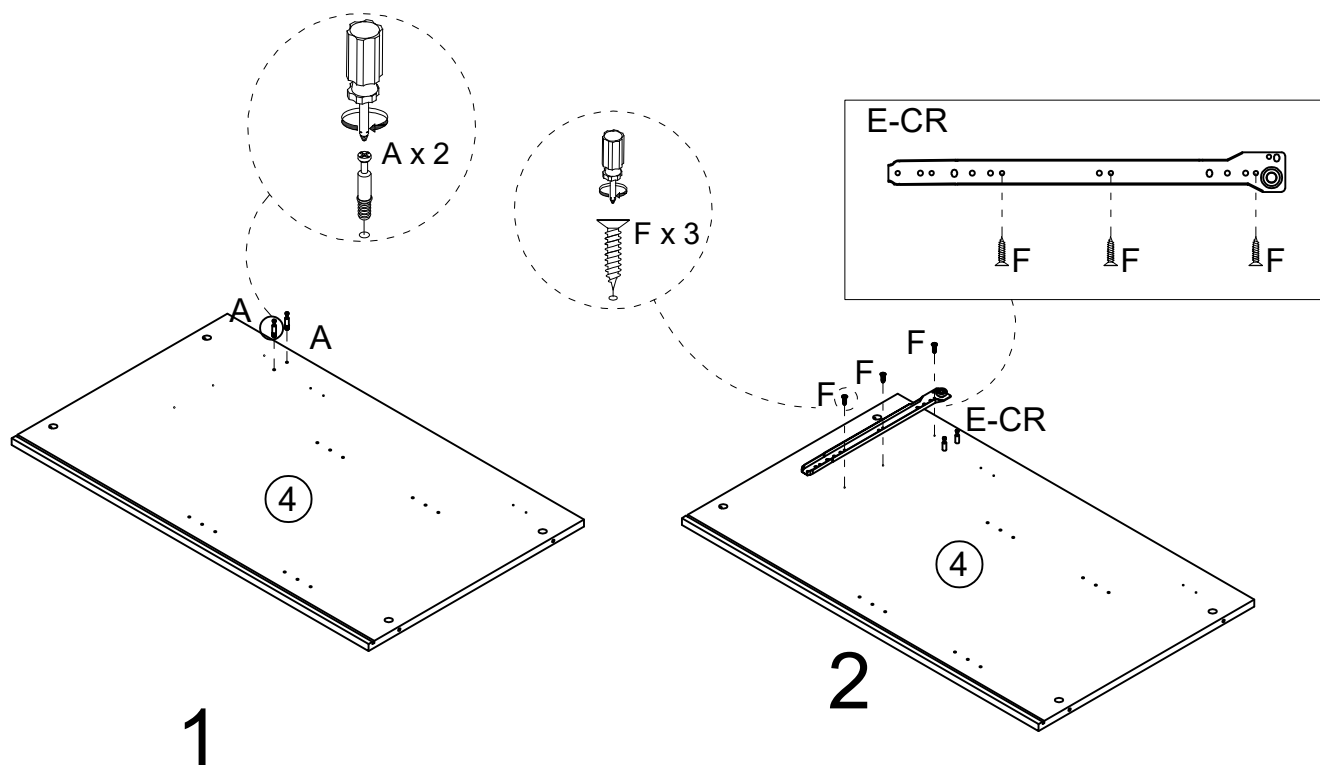

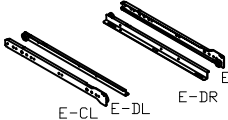
A	x2	E	x1	F	x3
					
M6X33mm		350mm		M3.5*12mm	

8

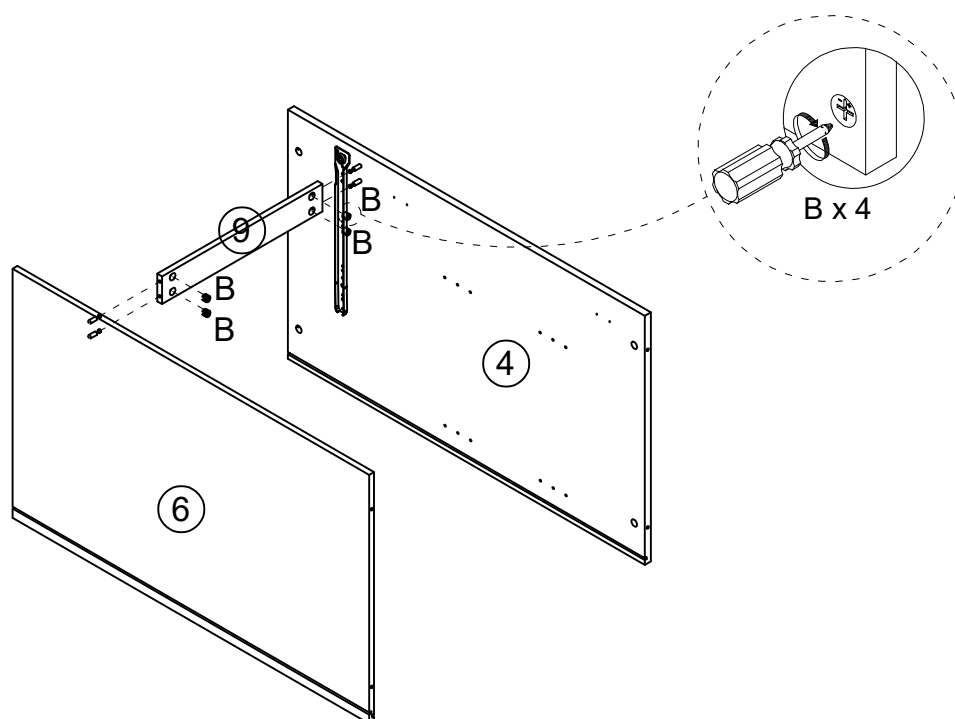


B	x4
	
Ø12X10mm	

9

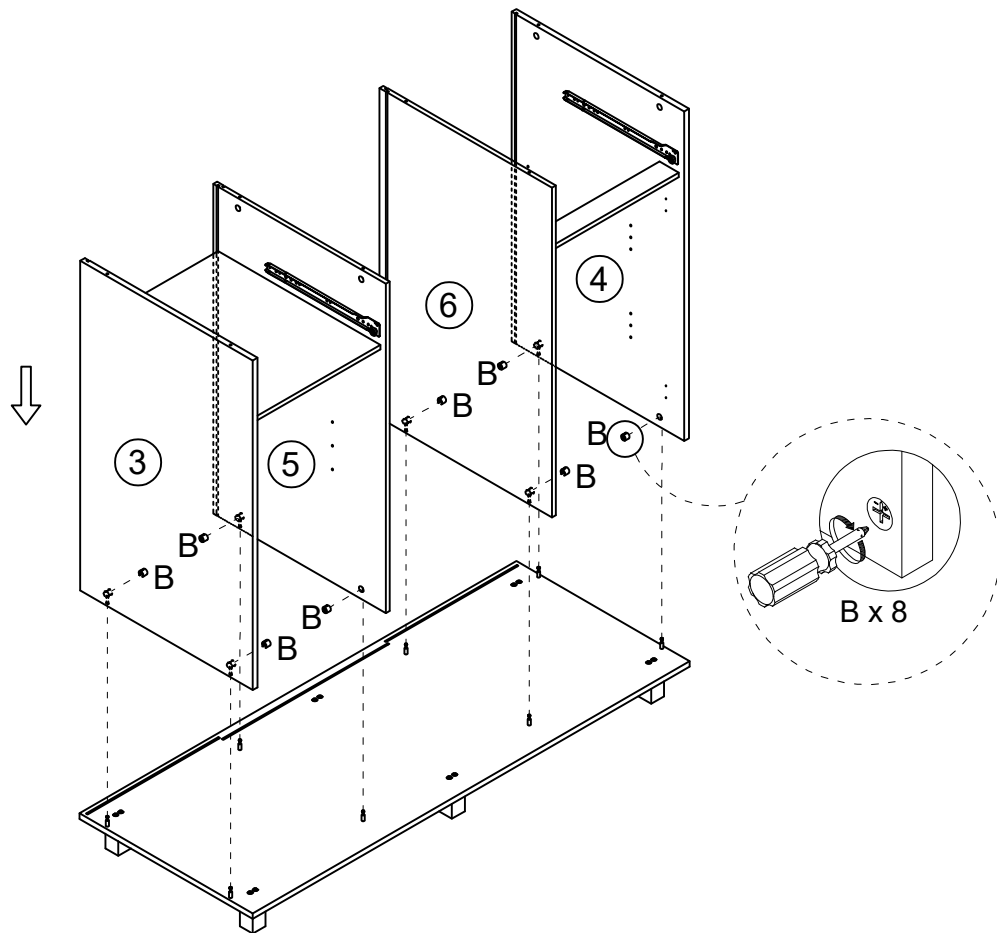


B	x8
	
Ø12X10mm	

10

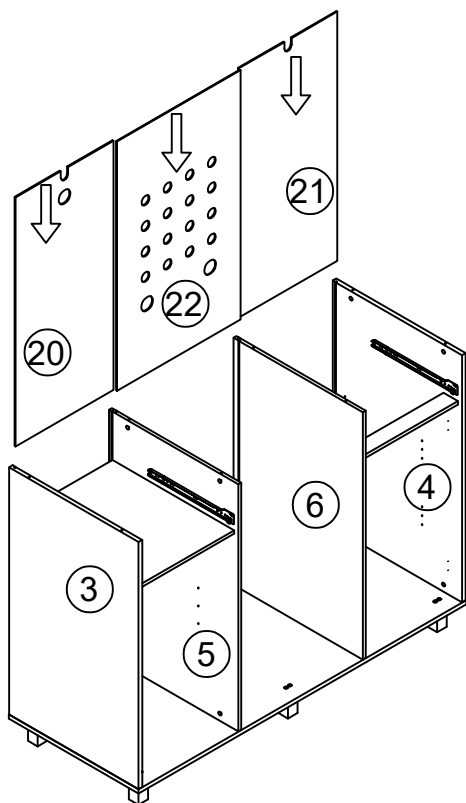


1


Q	x3
	
Ø50mm	

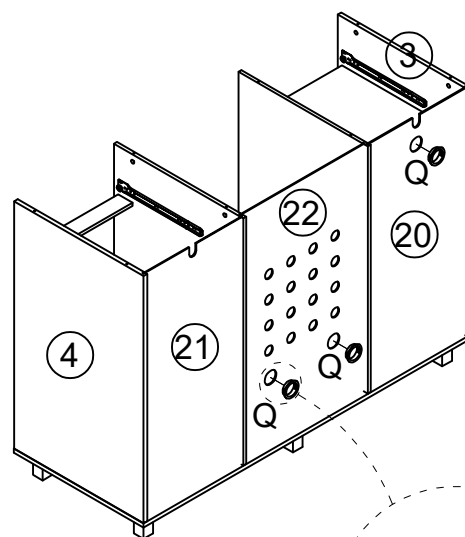



2

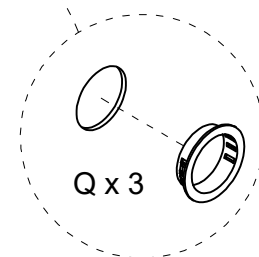

11

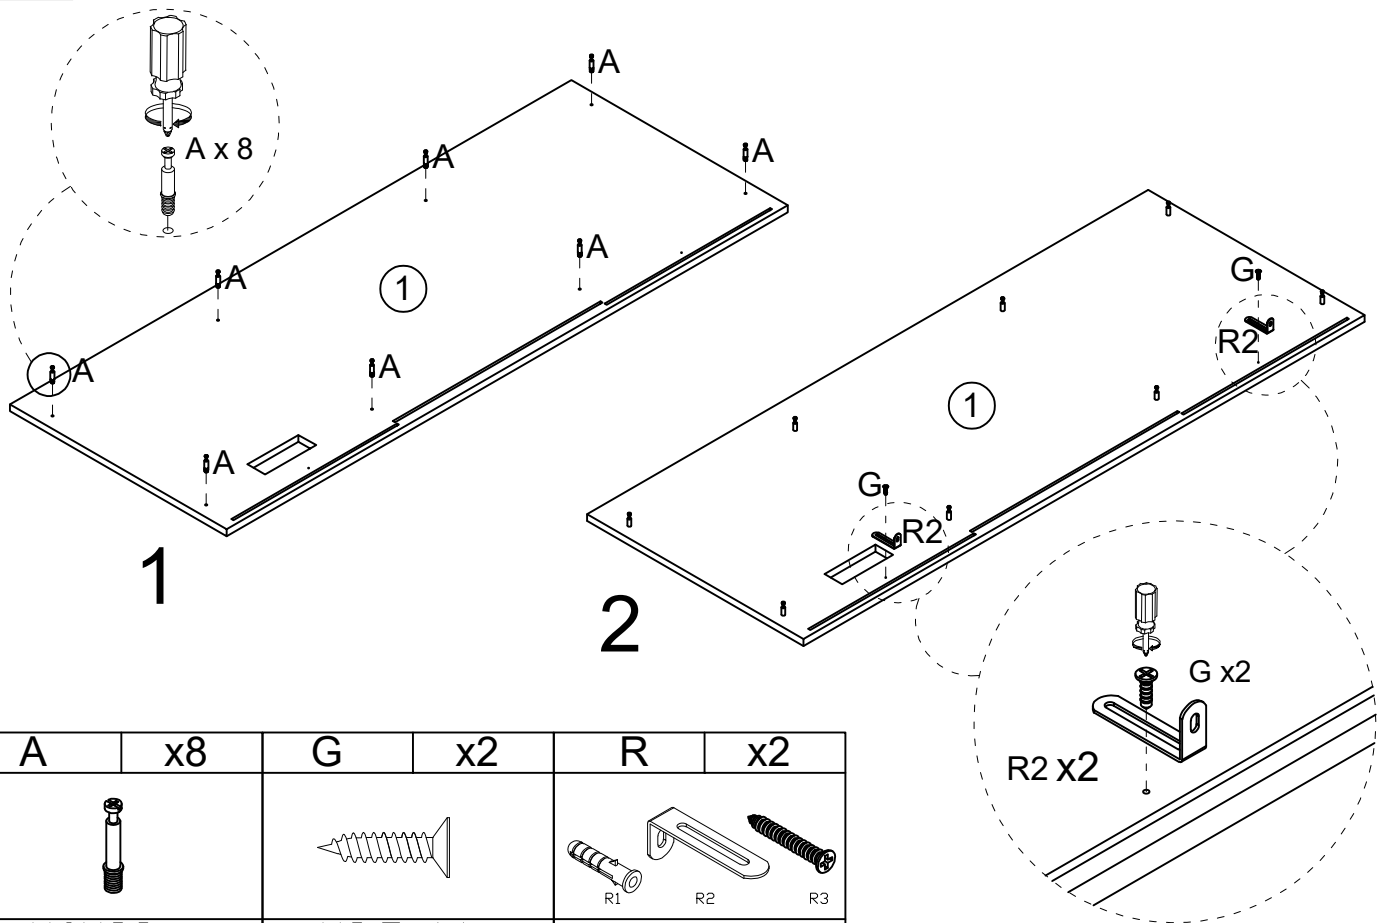



12

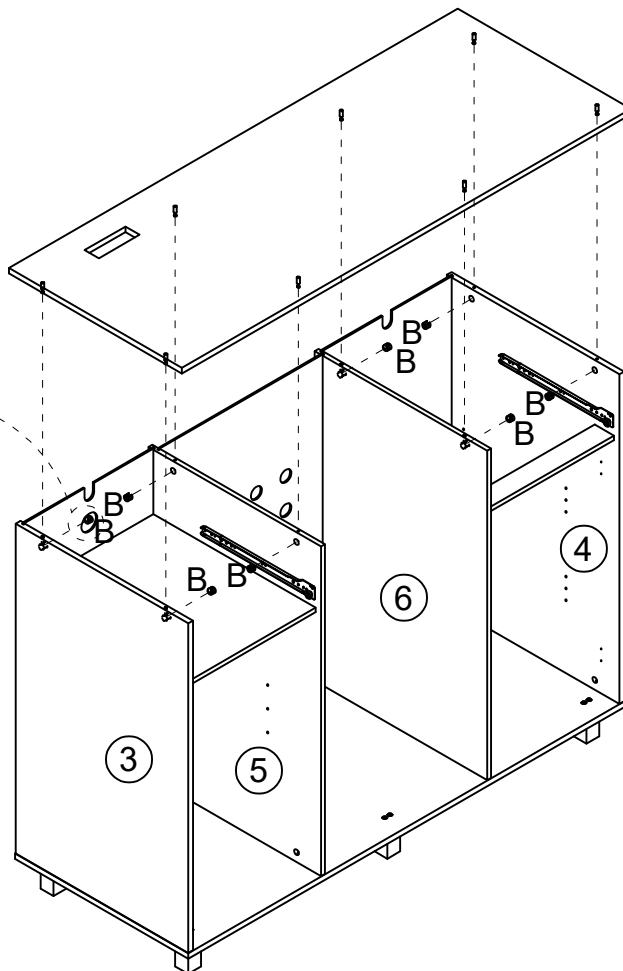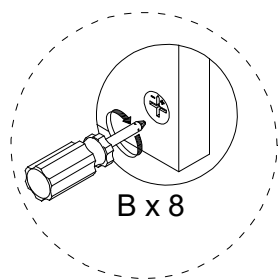


B	x8
Ø12X10mm	


13

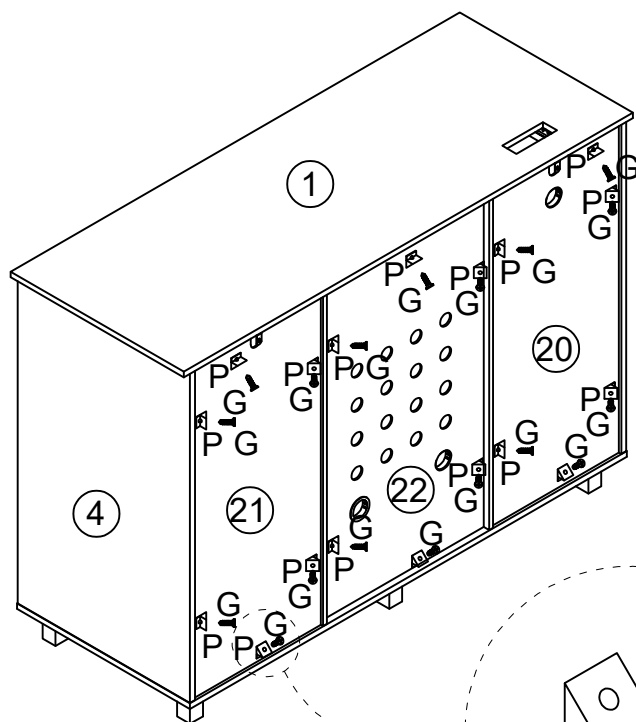




G	x18	P	x18
			
M3.5*14mm			

14



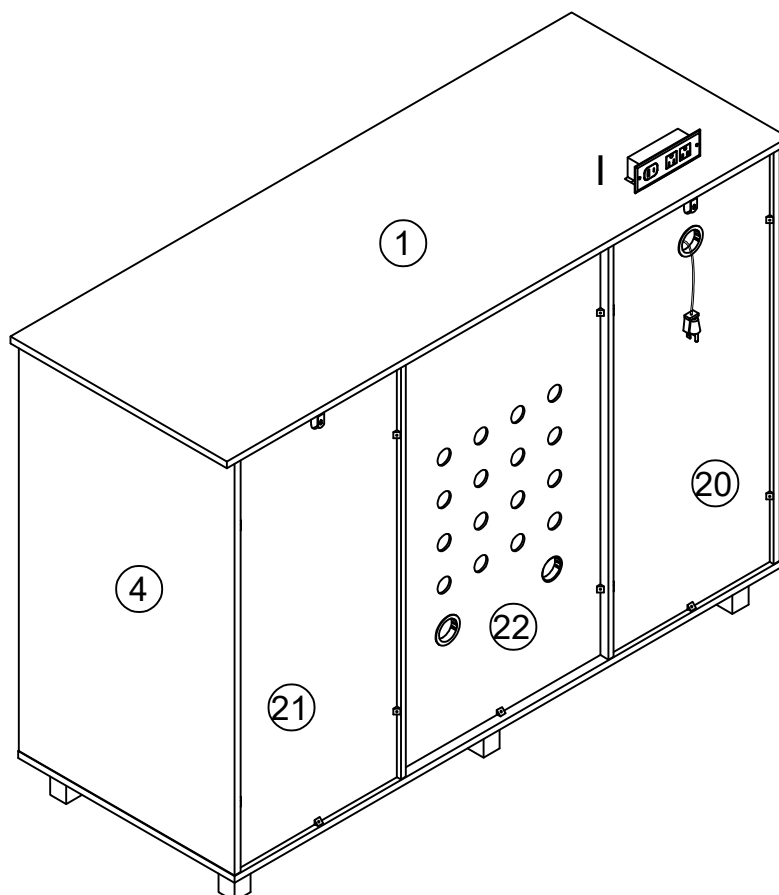



I	x1
	


1

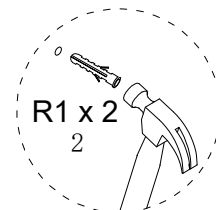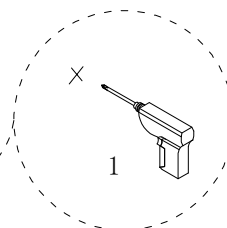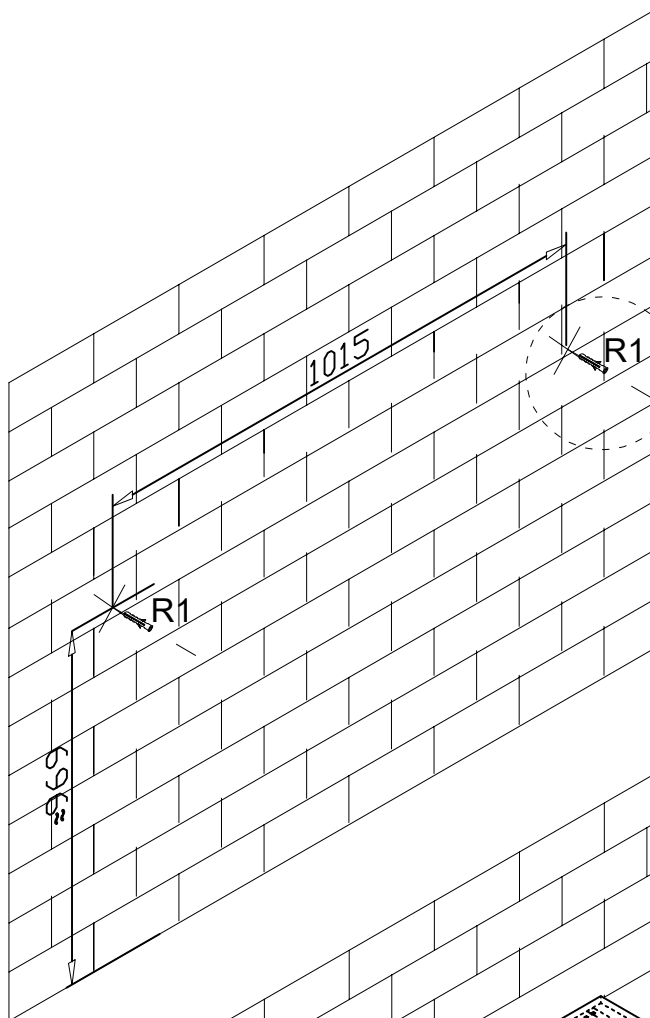

2


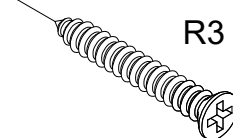
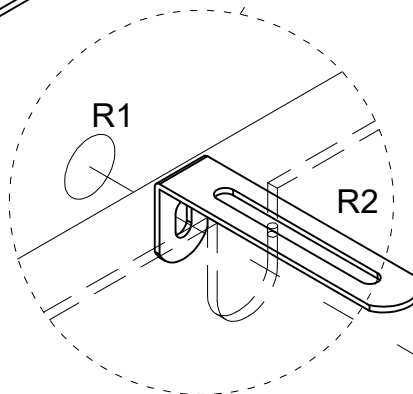
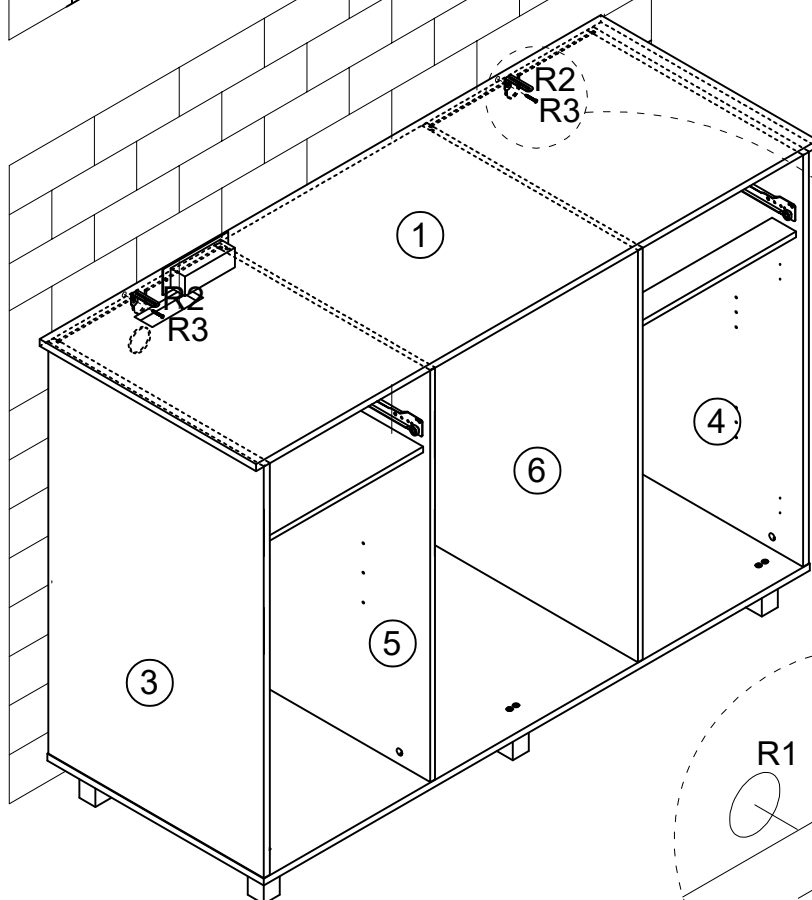


R	x2
	
R1	R2
	
	R3

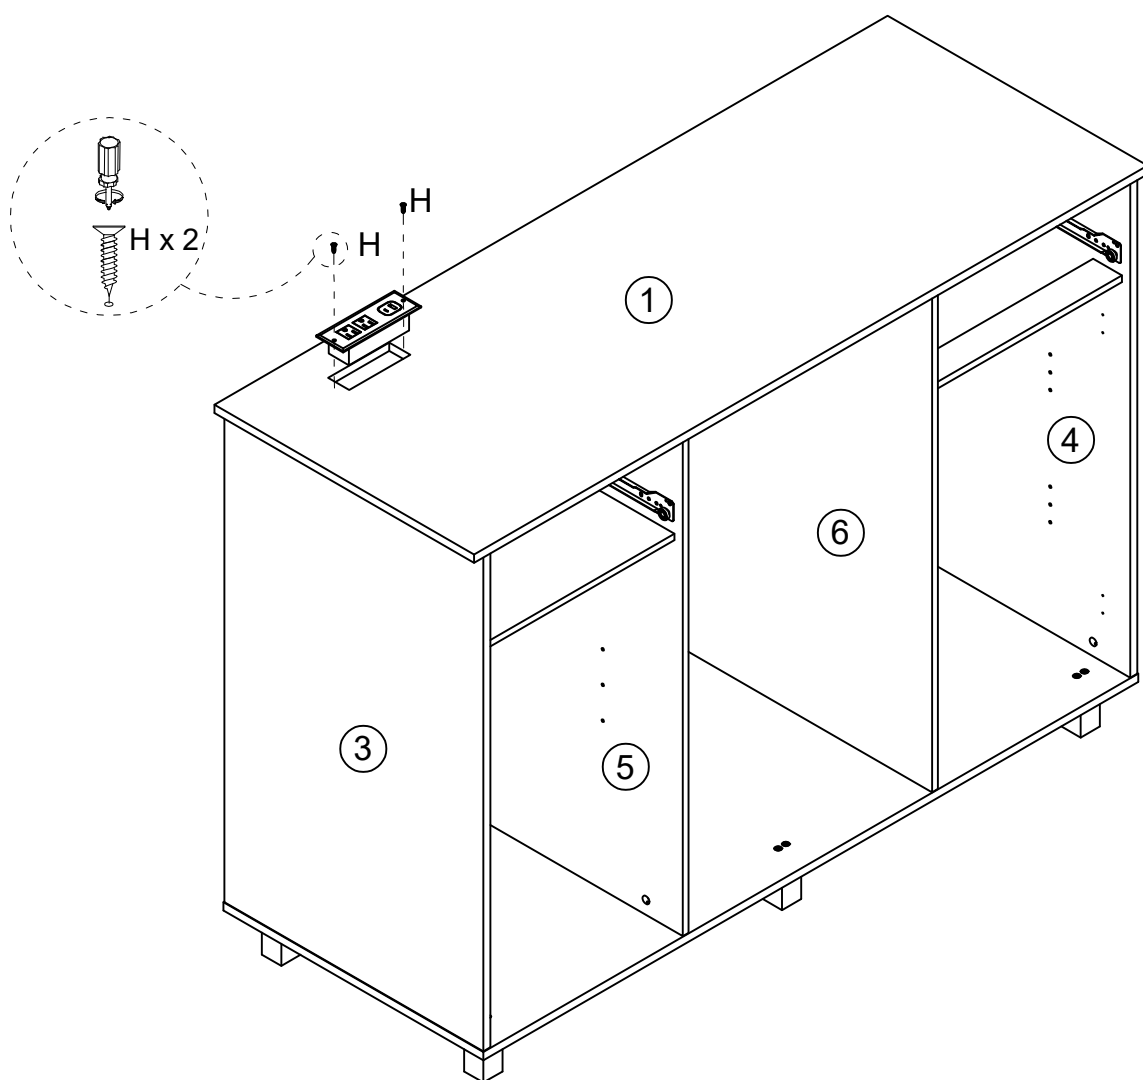



H	x2
M3.5*14mm	

17

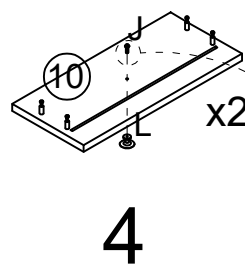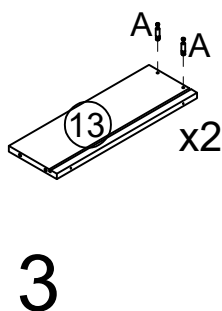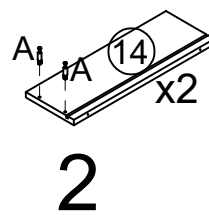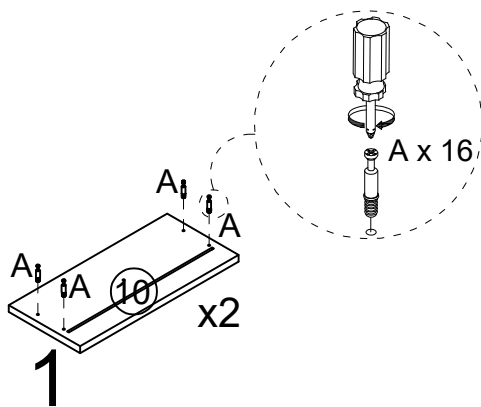




A	x16	J	x2	L	x2
					
M6X33mm		M4*18mm			

18

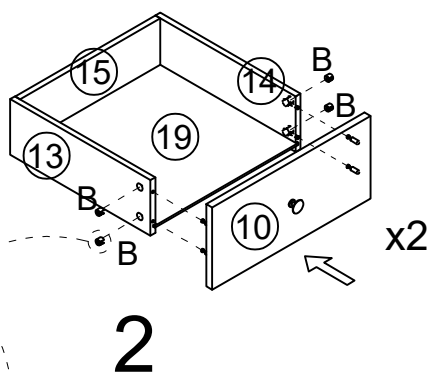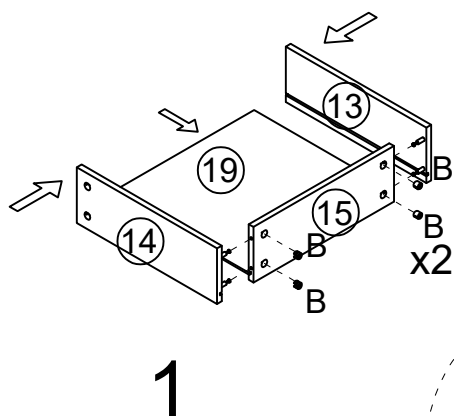



B	x16
	
Ø12X10mm	

19

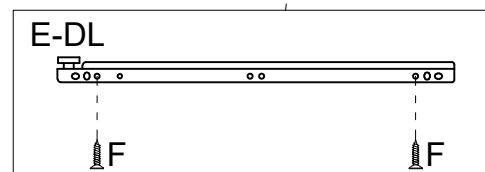
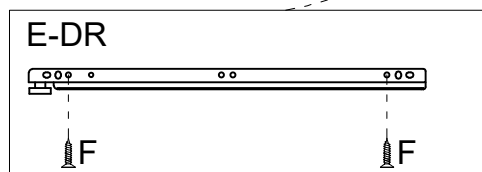
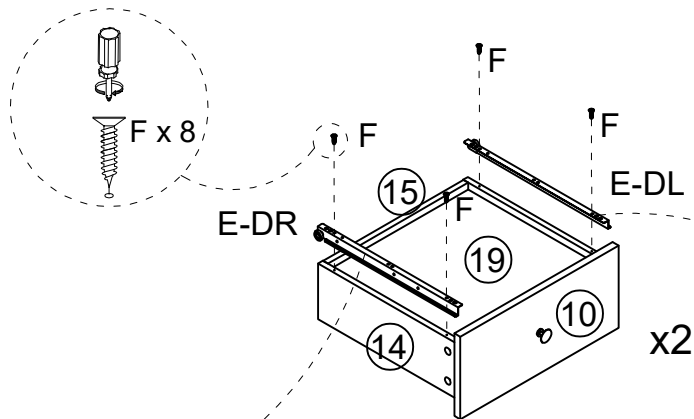


E	x2	F	x8
350mm		M3.5*12mm	



20

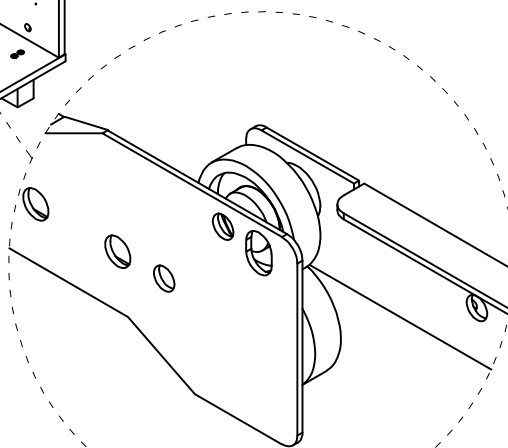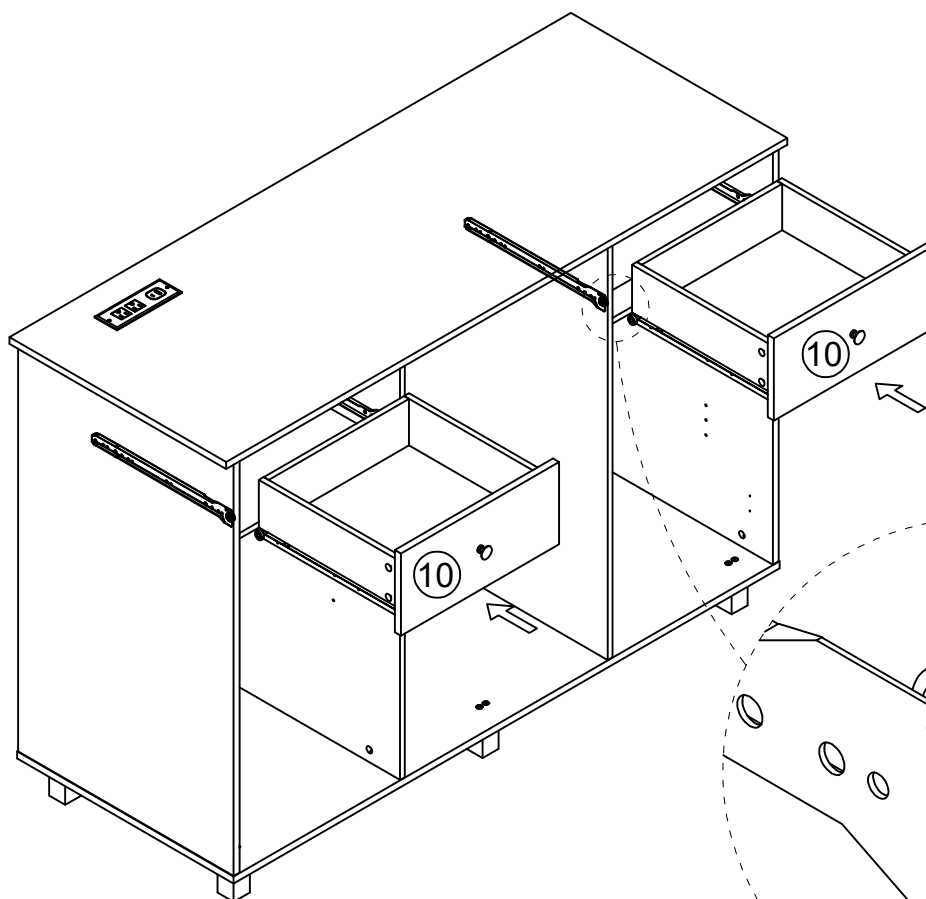


21

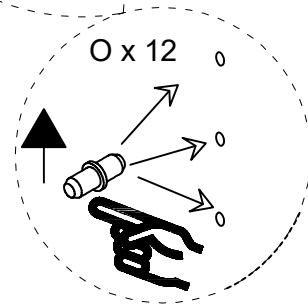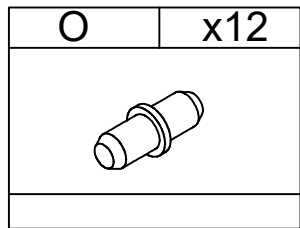
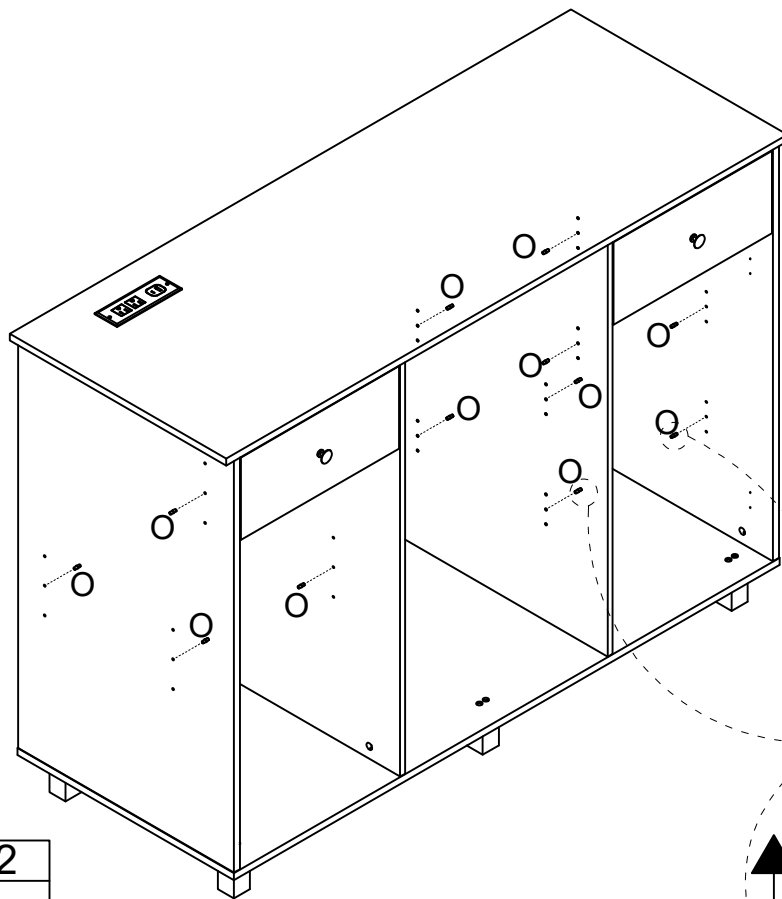


22

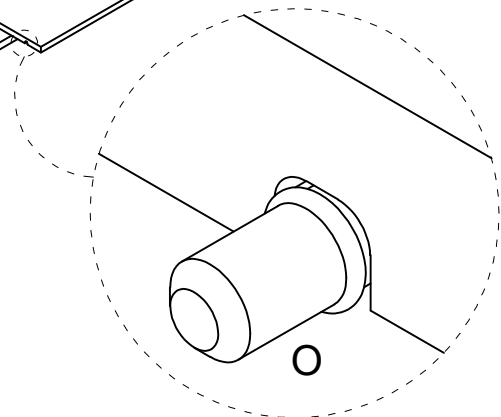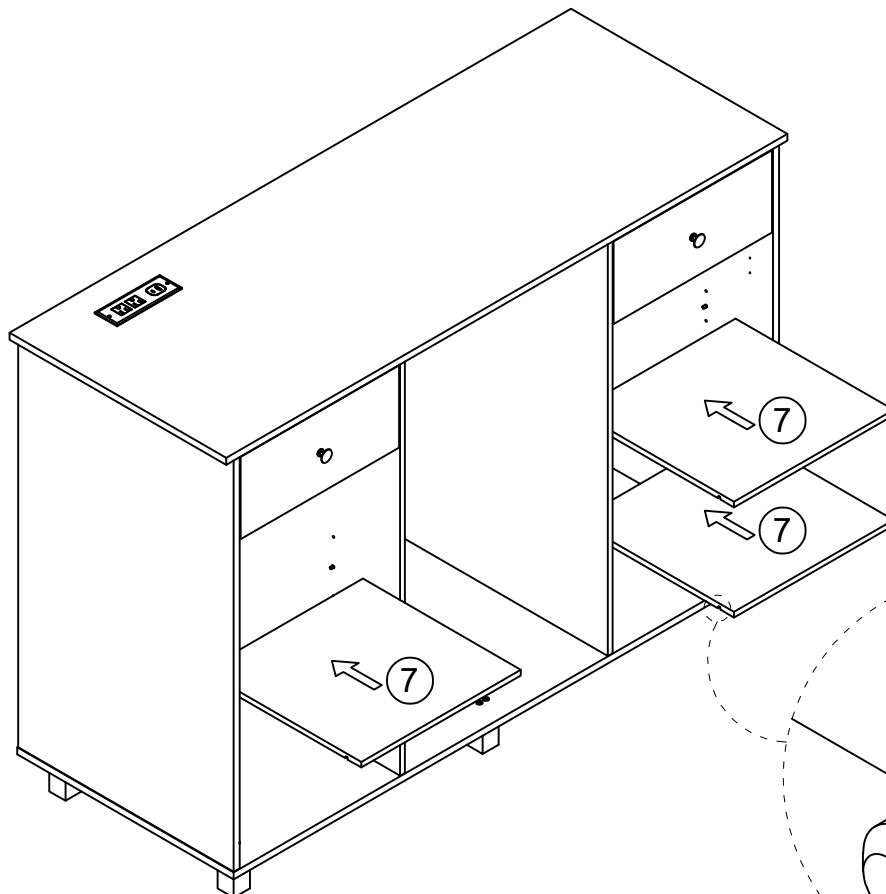





23

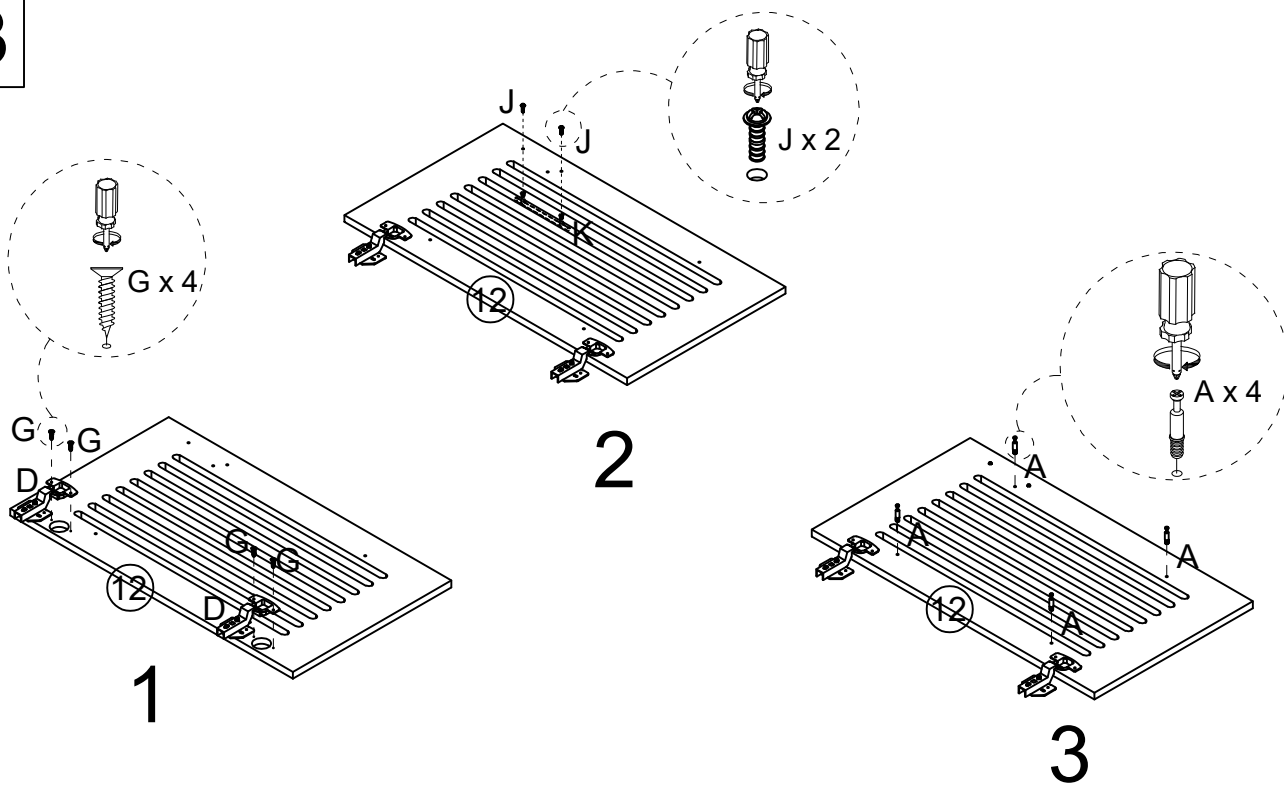


A	x4	D	x2	J	x2	K	x1	G	x4
									
M6X33mm		ø35		M4*18mm		96mm		M3.5*14mm	

24

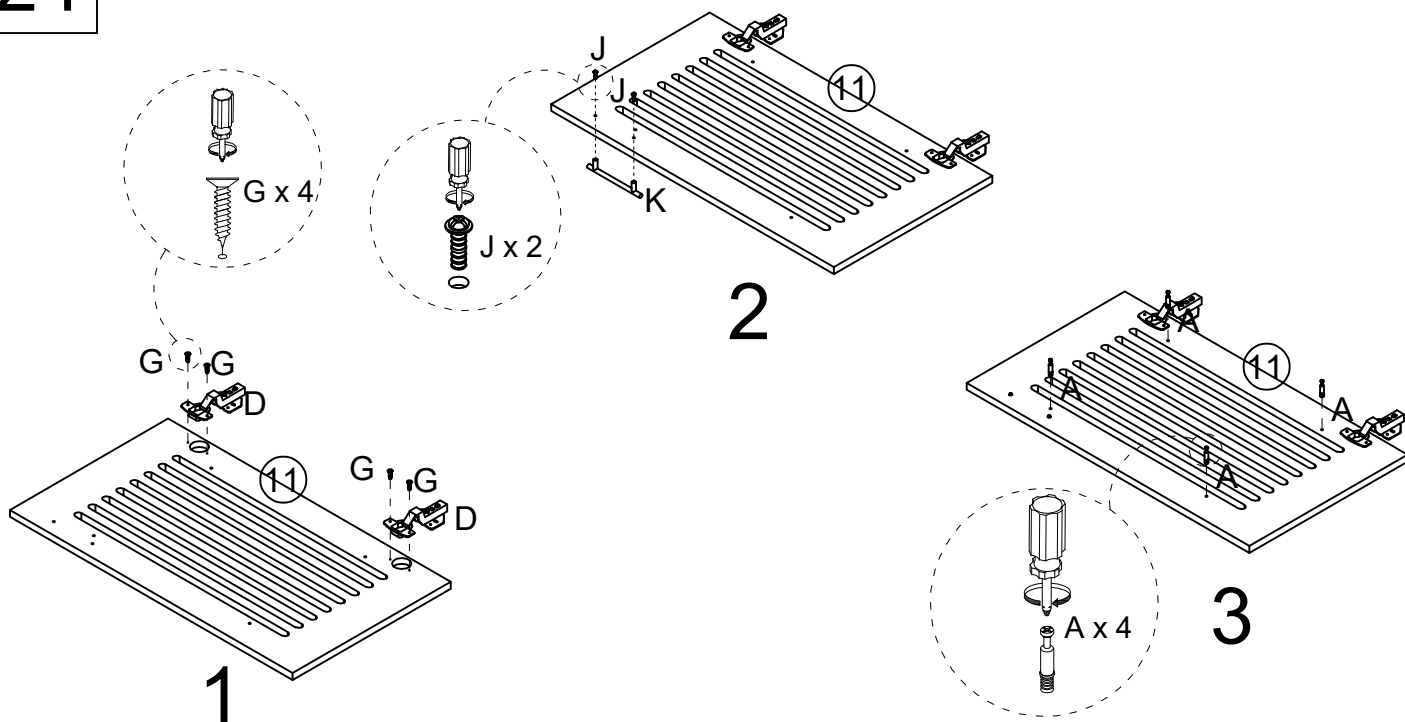


A	x4	D	x2	J	x2	K	x1	G	x4
									
M6X33mm		ø35		M4*18mm		96mm		M3.5*14mm	

25

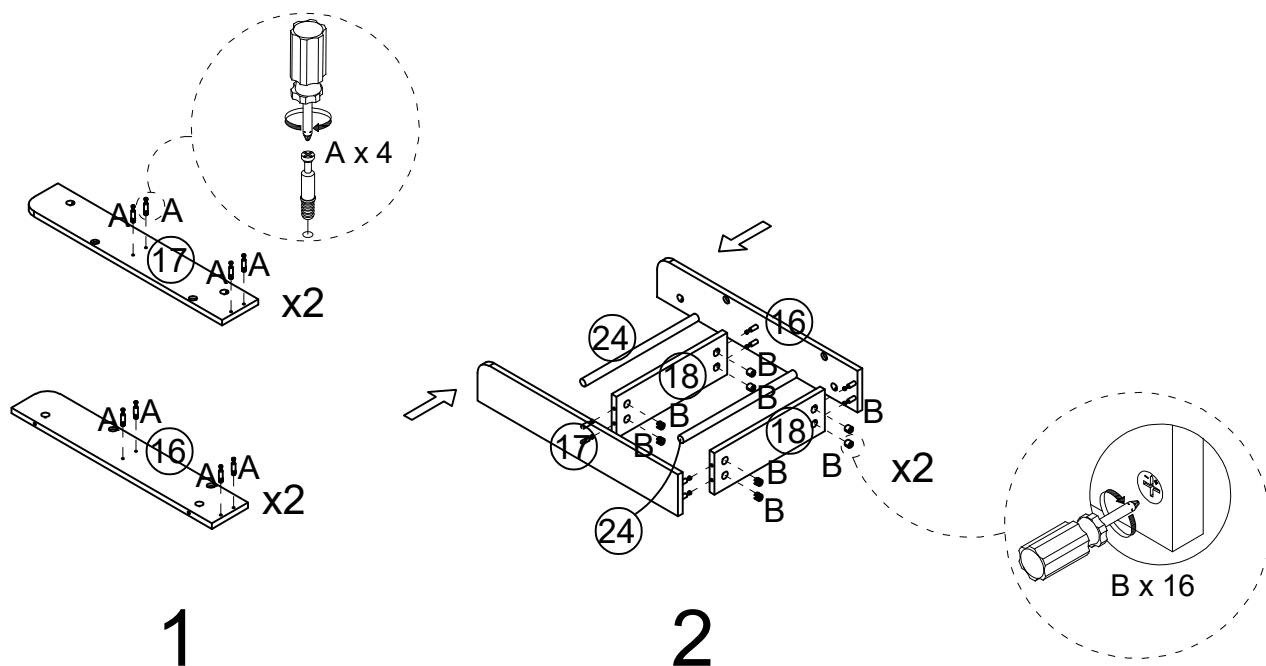





A	x16	B	x16
			
M6X33mm		Ø12X10mm	


26

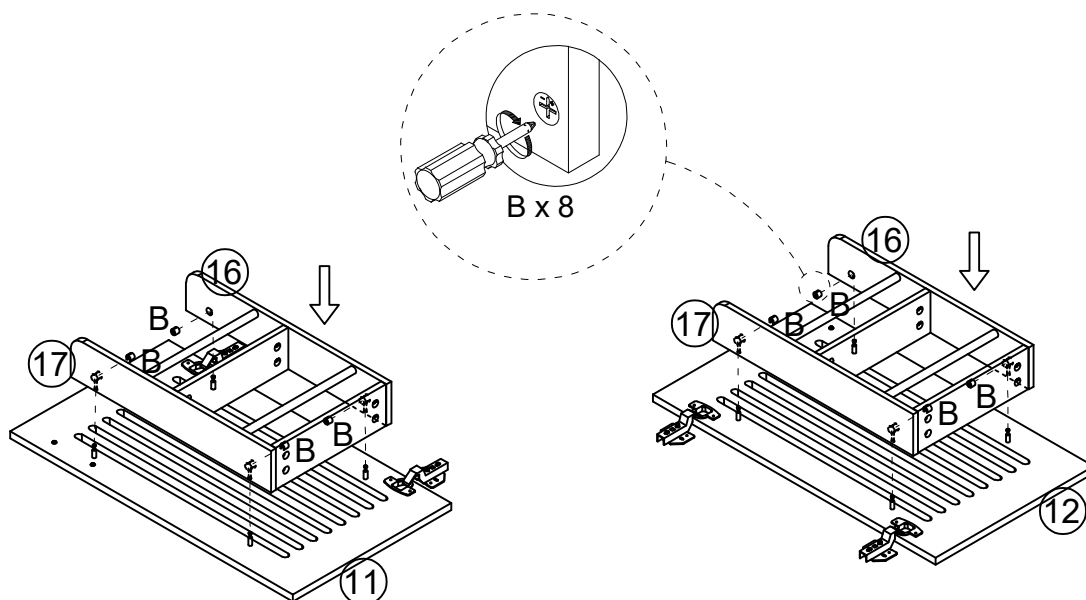





B	x8
	
Ø12X10mm	


27

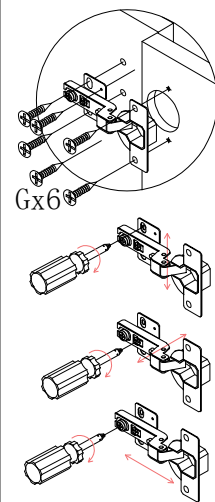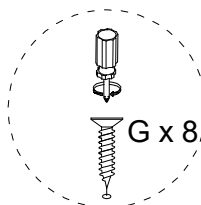
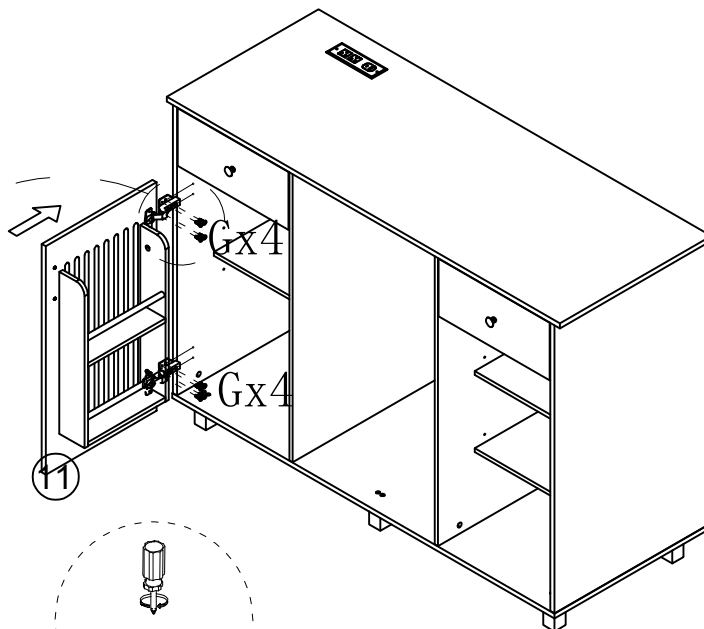
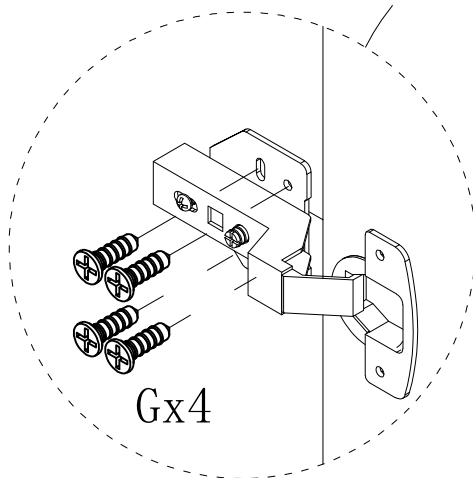


G	x8
	
M3.5*14mm	

28

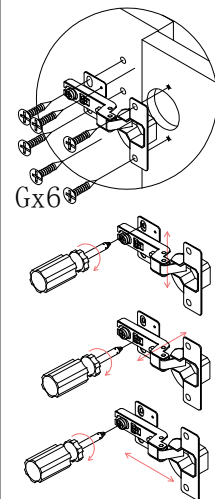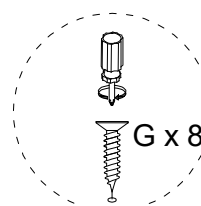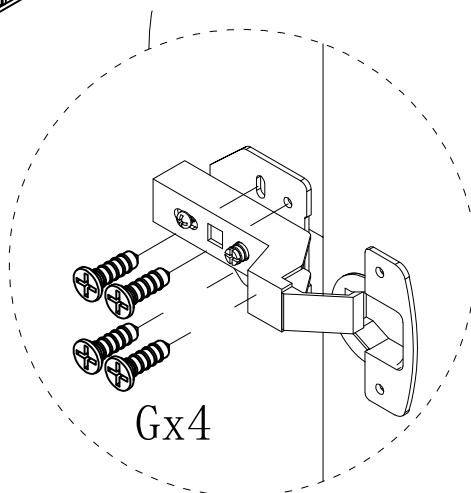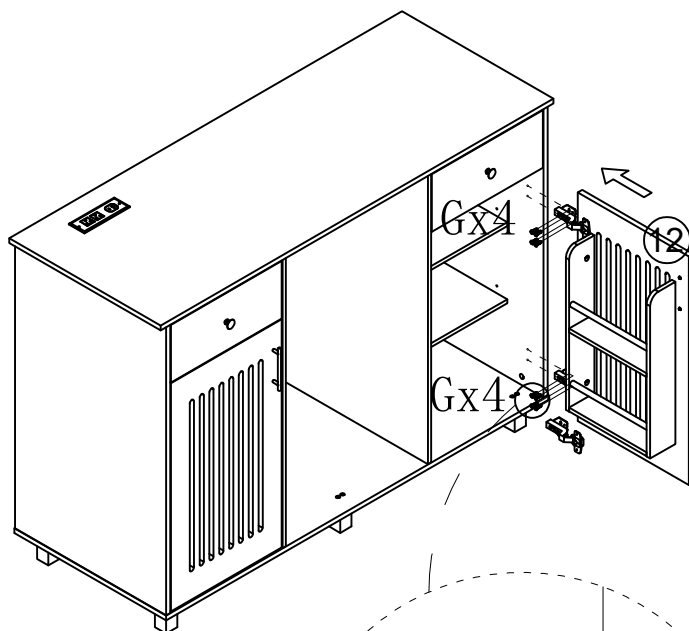

G	x8
	
M3.5*14mm	

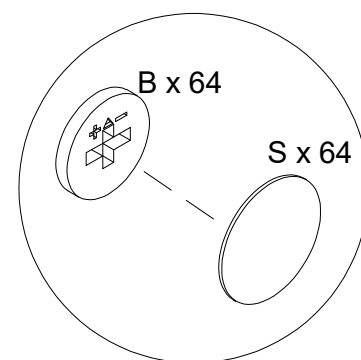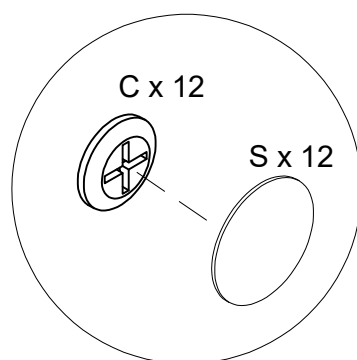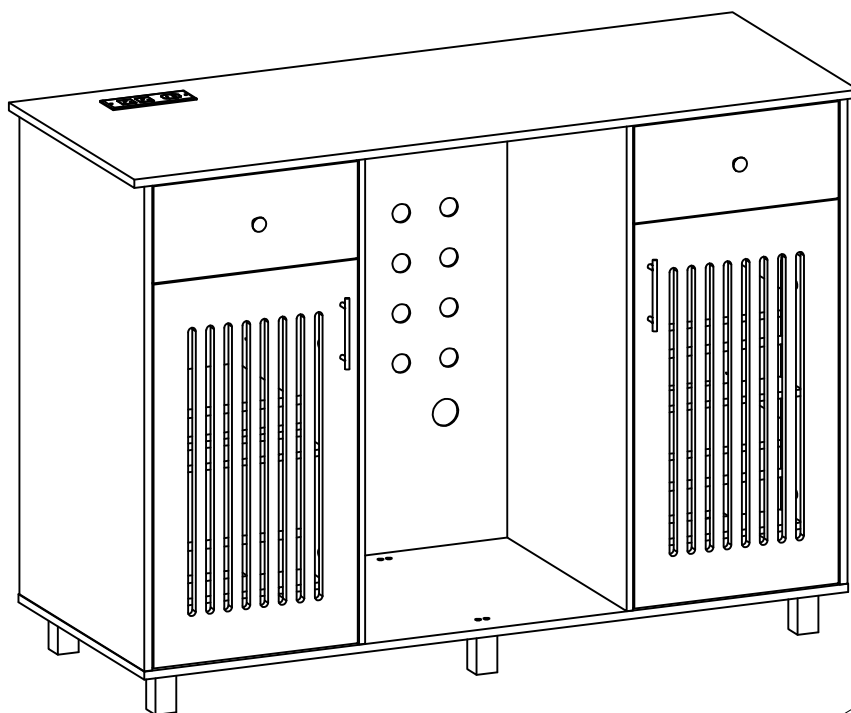

EN: In order to make the product more beautiful, please paste hardware S on the exposed holes.

FR: Afin de rendre le produit plus beau, s'il vous plaît coller le matériel S sur les trous exposés.

S	x76
	
Ø20mm	

Shenzhen ZKT Technology Co., Ltd.
1/F, No. 101, Building B, No. 6, Tangwei Community Industrial Avenue,
Fuhai Street, Bao'an District, Shenzhen, China



SUPPLIER'S DECLARATION OF CONFORMITY

Certificate Number: ZKT-260114L0994C

Certificate's Holder : Guangdong Zhangong Electric Technology Co., LTD
701, Building 29, zhifuyuan Industrial Zone, Xingtian town, Shunde District, Foshan City, Guangdong Province

Manufacturer : Guangdong Zhangong Electric Technology Co., LTD
701, Building 29, zhifuyuan Industrial Zone, Xingtian town, Shunde District, Foshan City, Guangdong Province

Trade Mark : /

Product : Furniture socket

Model(s) : ZG-JJM-A2
ZG-JJM-A2-A, ZG-JJM, ZG-JJM/12A/15A

Test Standard : 47CFR Part 15 Subpart B
ANSI C63.4:2014

This Attestation of Compliance is issued on a voluntary basis for electrical equipment below the voltage limits of FCC standard. The essential requirement are fulfilled accordingly based on the technical specifications applicable at the time of issuance. See also notes overleaf. It is only valid in connection with the test report number: ZKT-260114L0994E.



This Certificate of Conformity is based on single evaluation of the submitted sample(s) of the above mentioned product. It does not imply an assessment of the whole product and relevant Directives to be observed.

+86-400 000 9970 +86-755-22336688 zkt@zkt-lab.com www.zkt-lab.com