

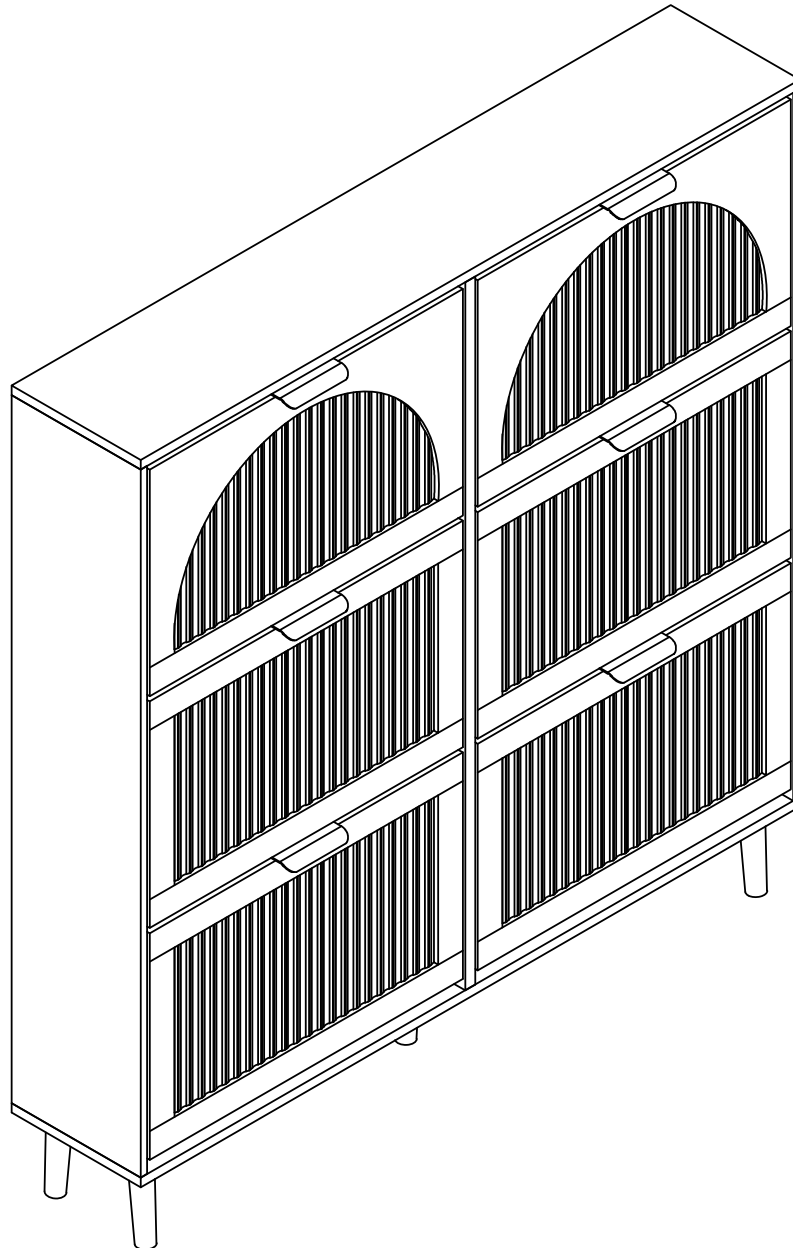
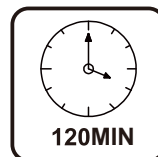


Installation & Assembly

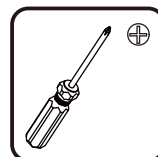


IT IS RECOMMENDED
TO USE POWER TOOLS

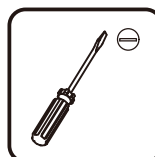


120MIN




EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

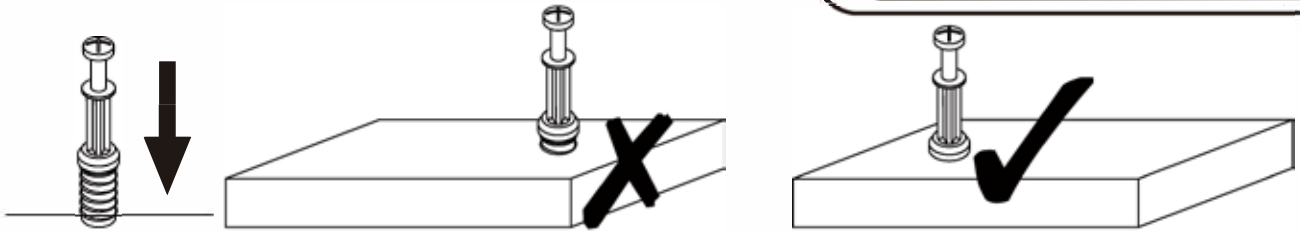


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

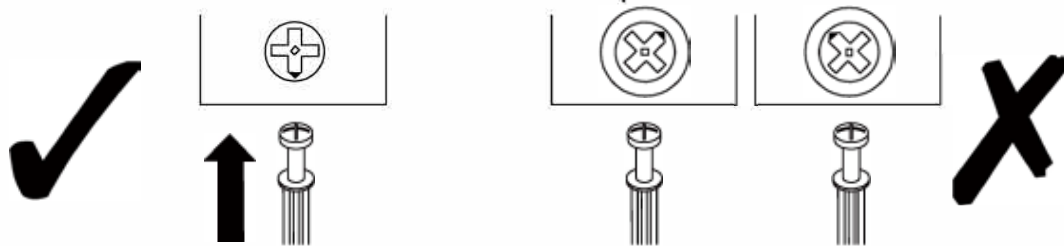











EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.




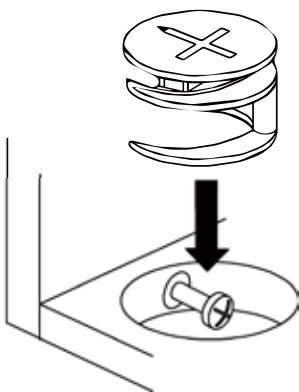





EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.









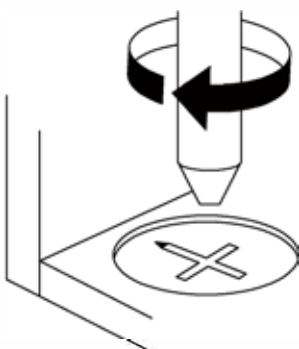




EN_Turn cam lock clockwise to tighten.

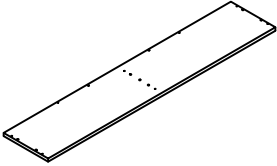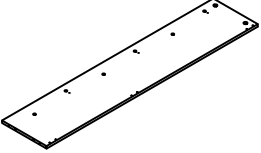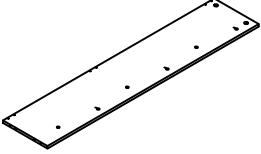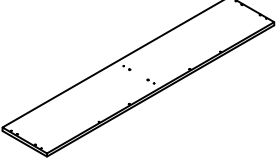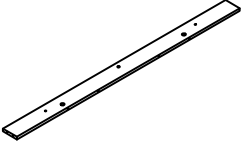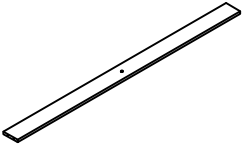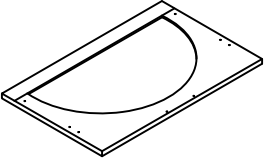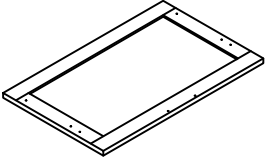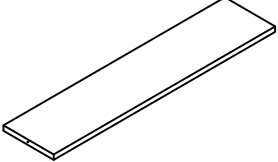NO.	PARTS	QTY	SPARE
①		x1	
②		x1	
③		x1	
④		x1	
⑤		x1	
⑥		x1	
⑦		x4	
⑧		x2	
⑨		x4	
⑩		x6	

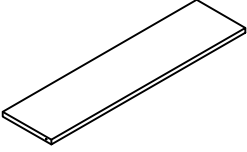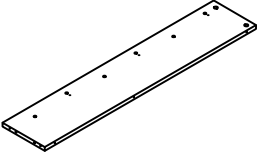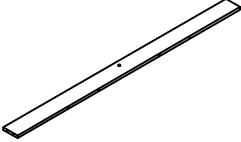NO.		QTY	SPARE
⑪		x12	
⑫		x1	
⑬		x1	
⑭		x1	
	 Hardware Kit	x1	

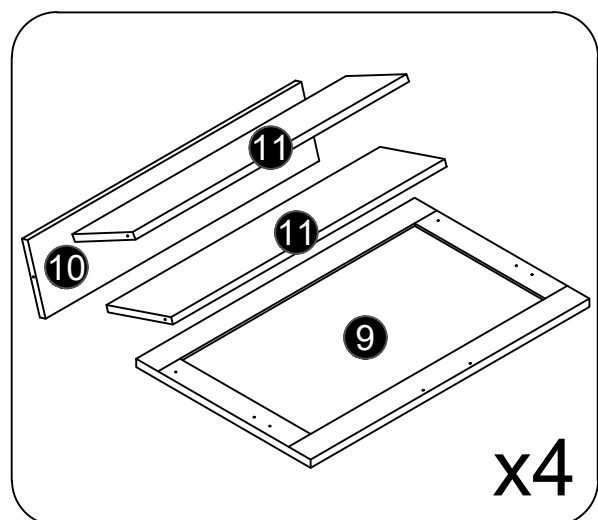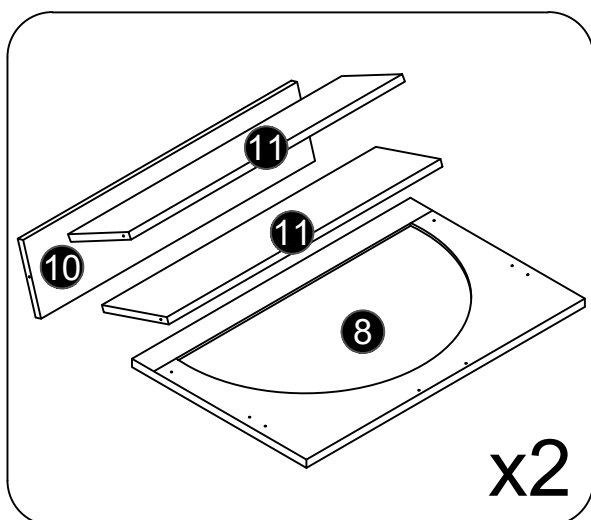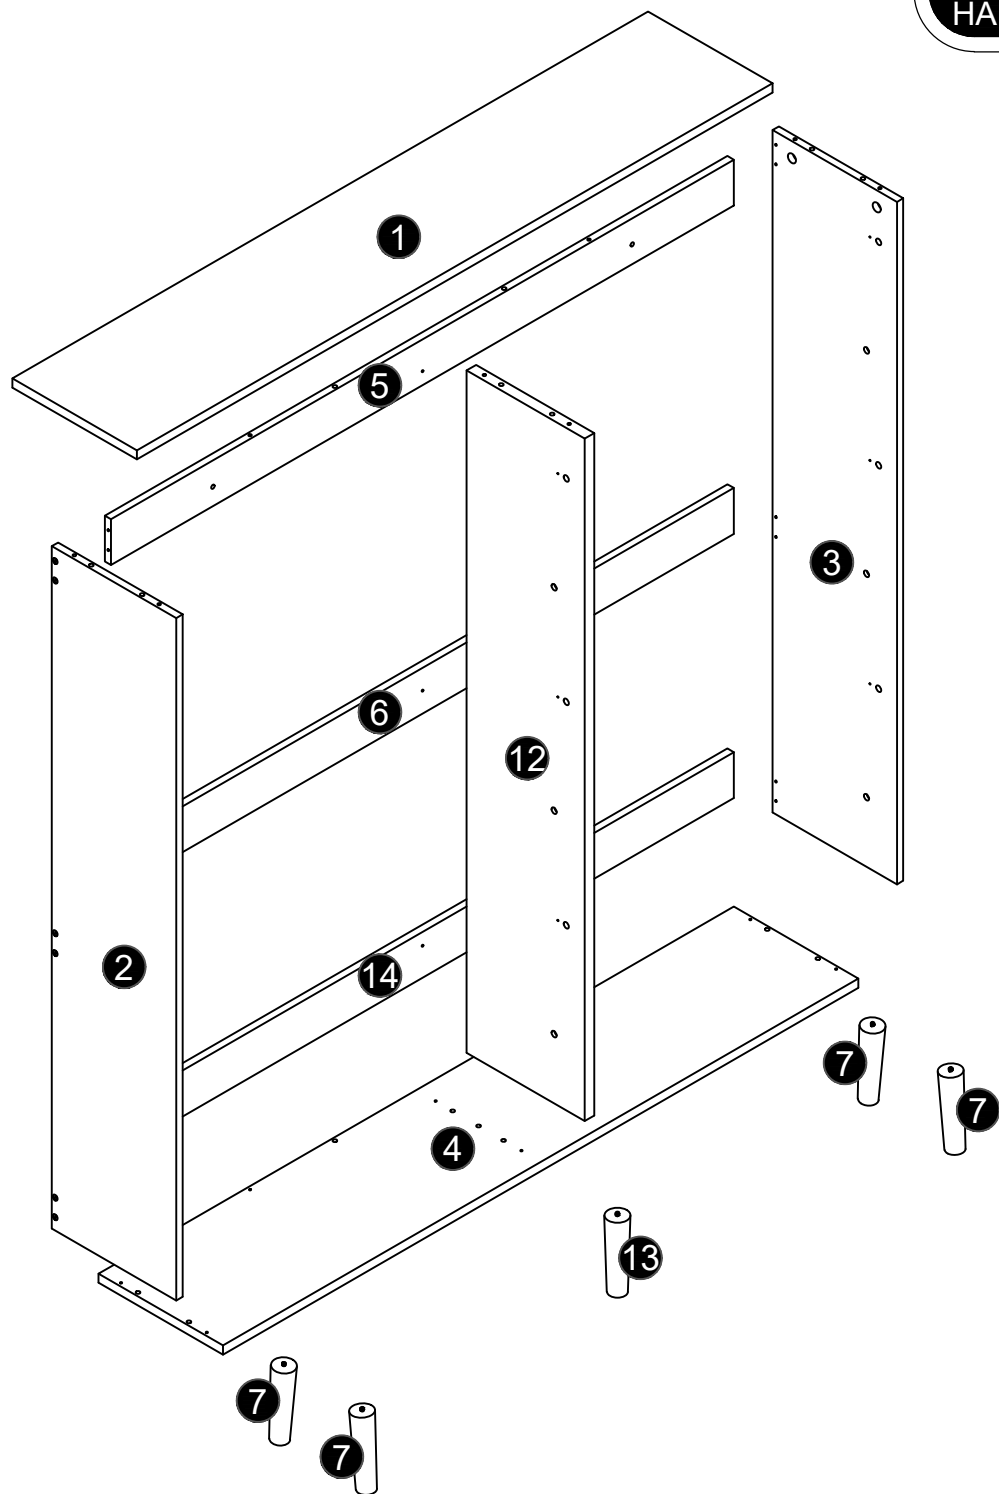

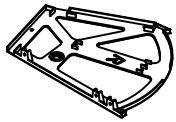 A x8 Ø6x35mm	 B x8 Ø15x10mm	 C x16 Ø6x30mm	 D x23 Ø4x35mm +2(spare)	 E x84 Ø3.5x12mm +2(spare)	 F x12 +1(spare)
 G x12 +1(spare)	 H x6 Ø6x12mm +1(spare)	 I x1	 J x4	 K x20 Ø4x14mm +2(spare)	 L x6
 M x4	 N x6	 O-1 O-2	 P x12 +2(spare)	 Q x12	 R x6
 S x1	 T x6 Ø6x14mm +1(spare)				

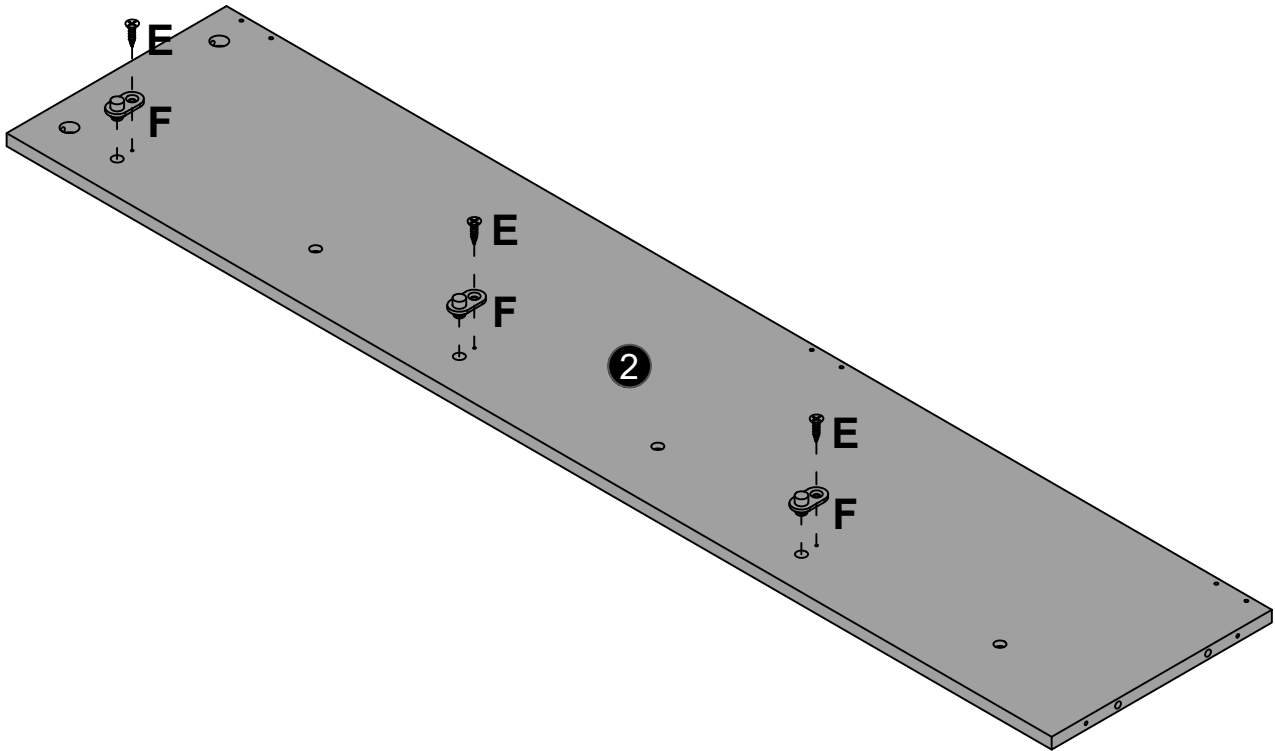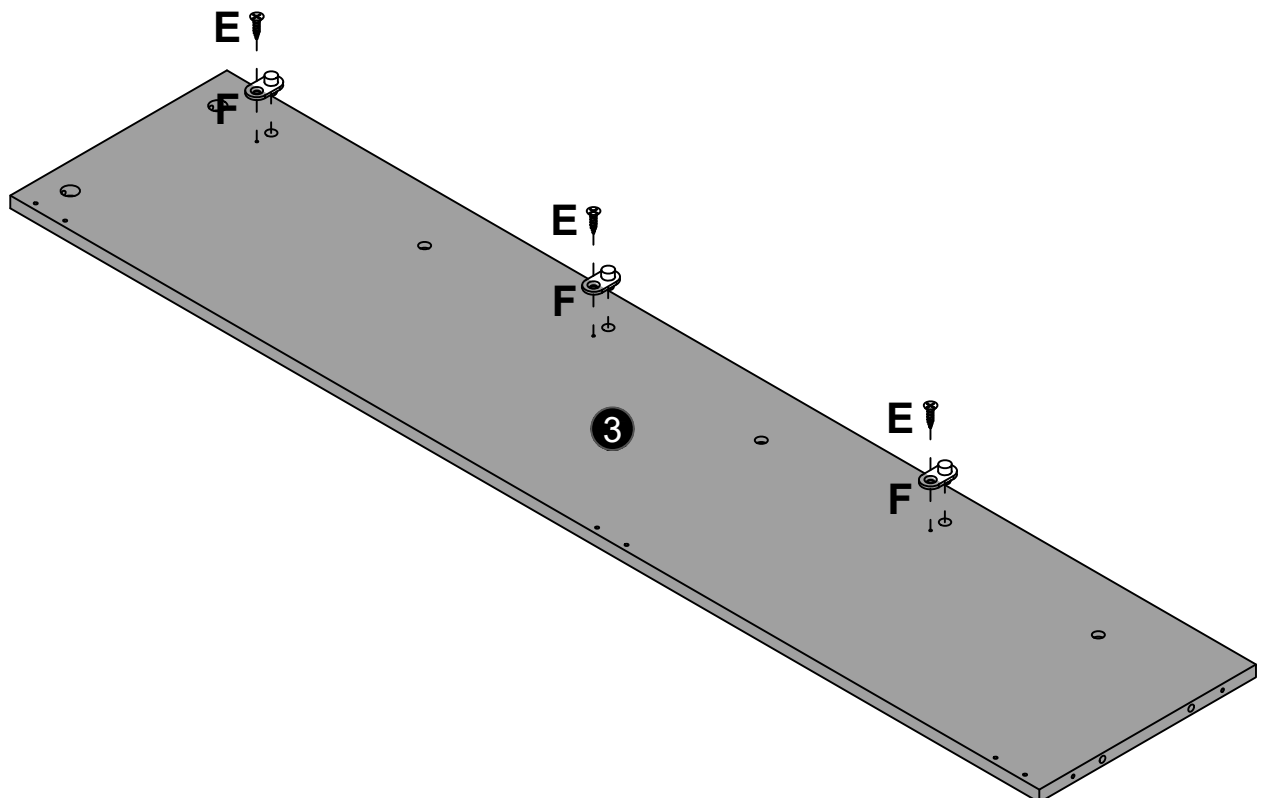01**E** x3**F** x3**02****E** x3**F** x3

E x6




F x6






03

Notice

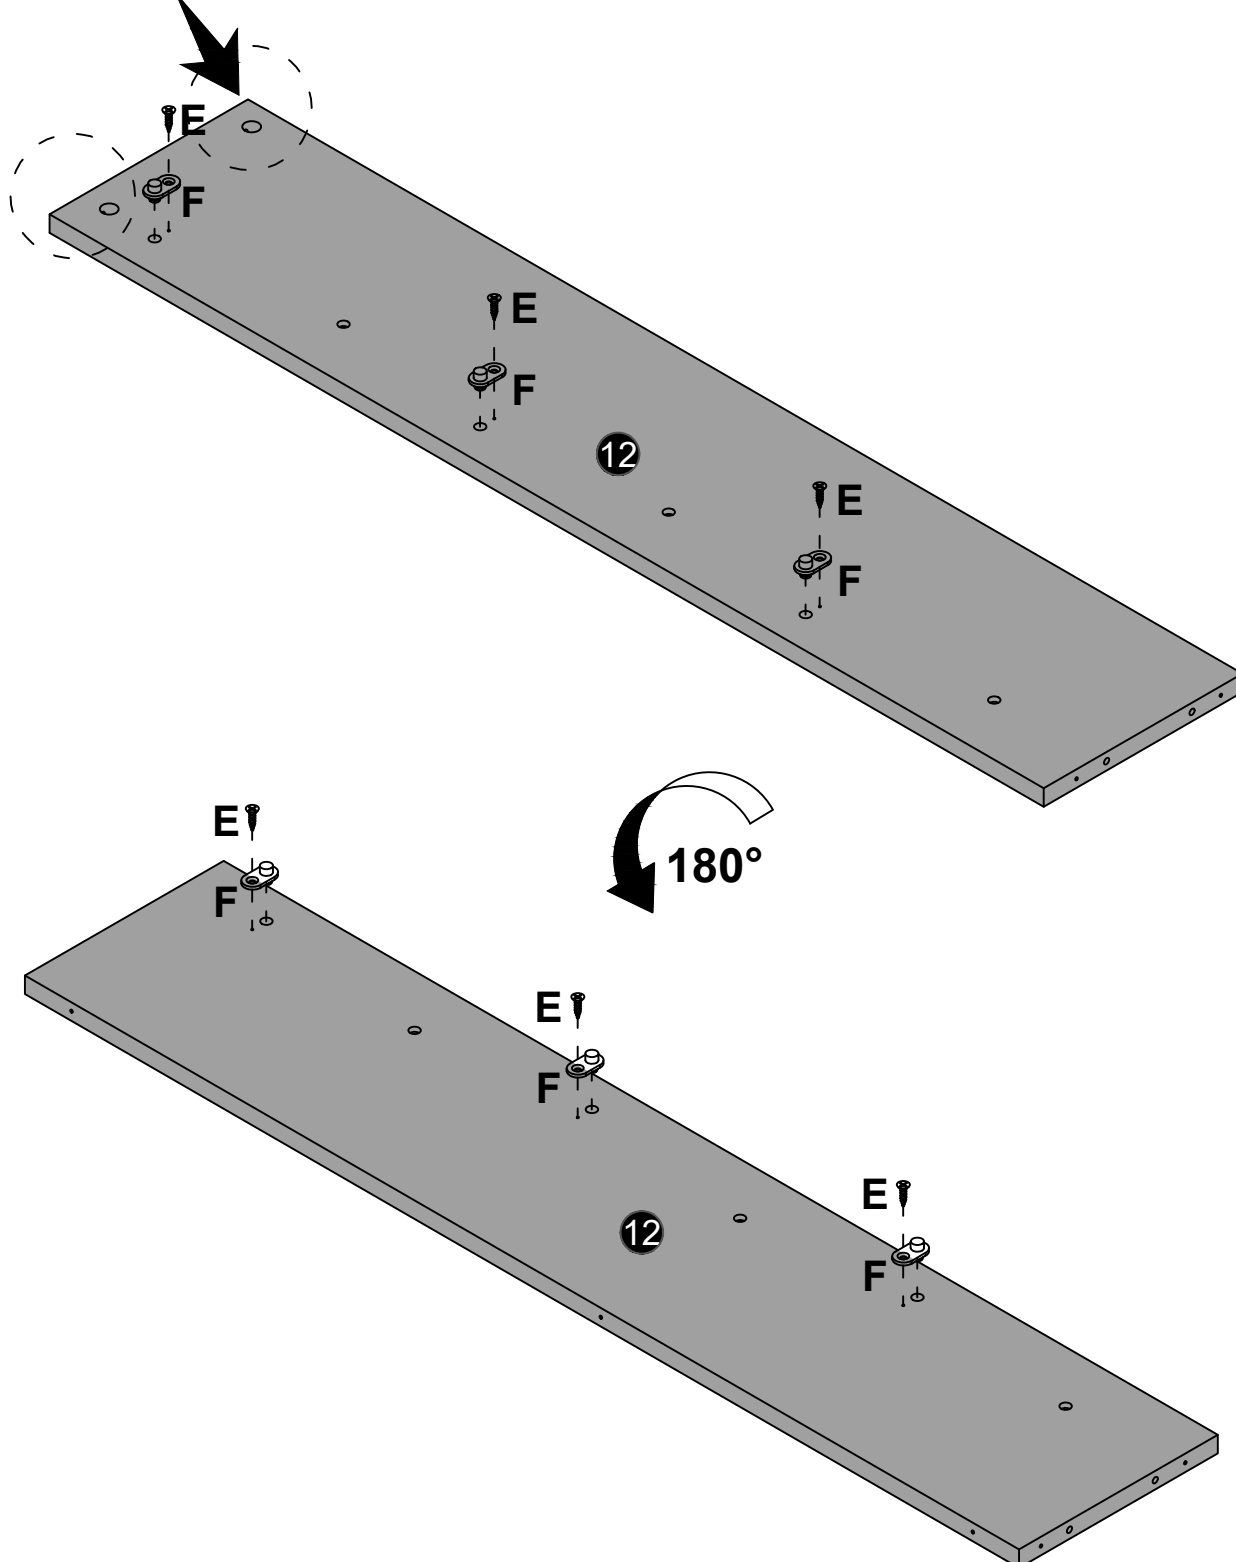

D x3




04

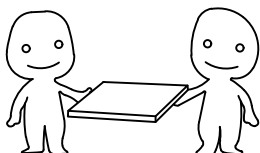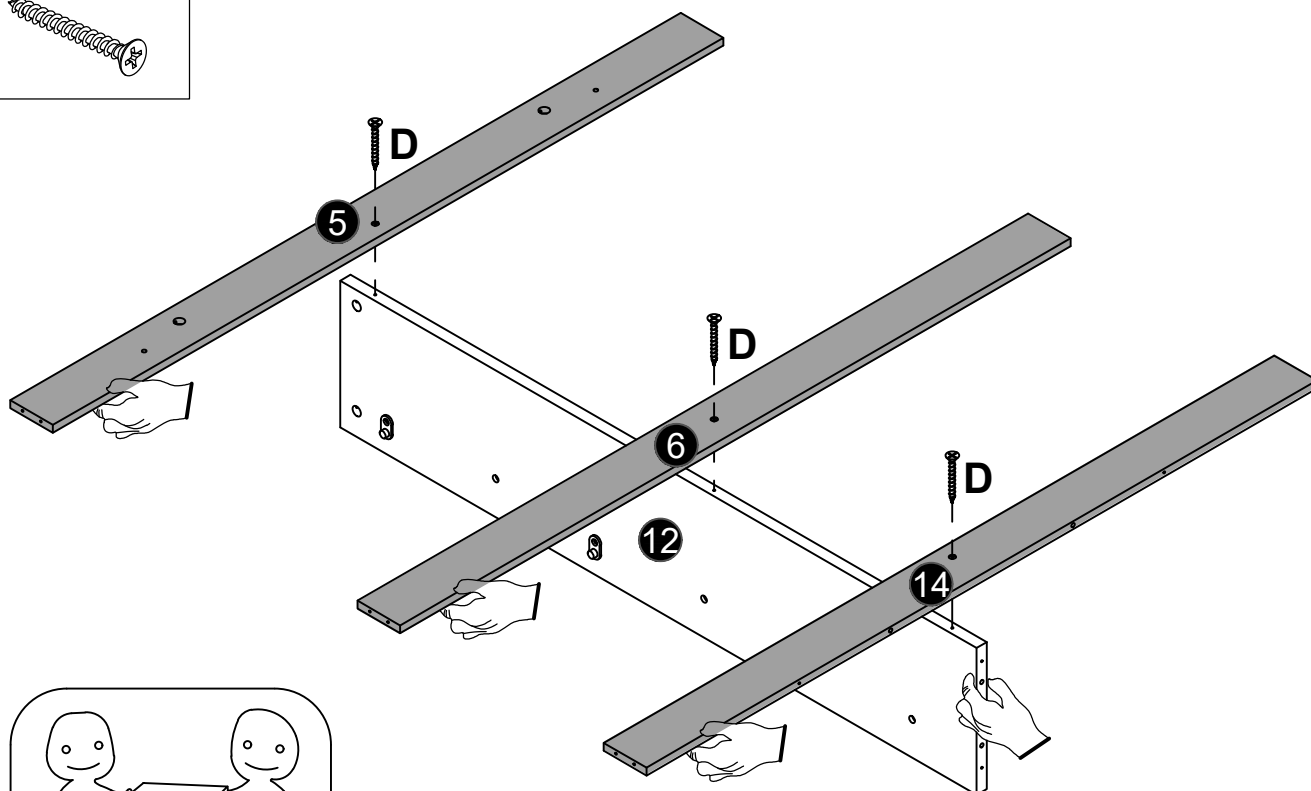



Need Two or More
People To Complete

D x6


05

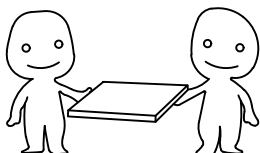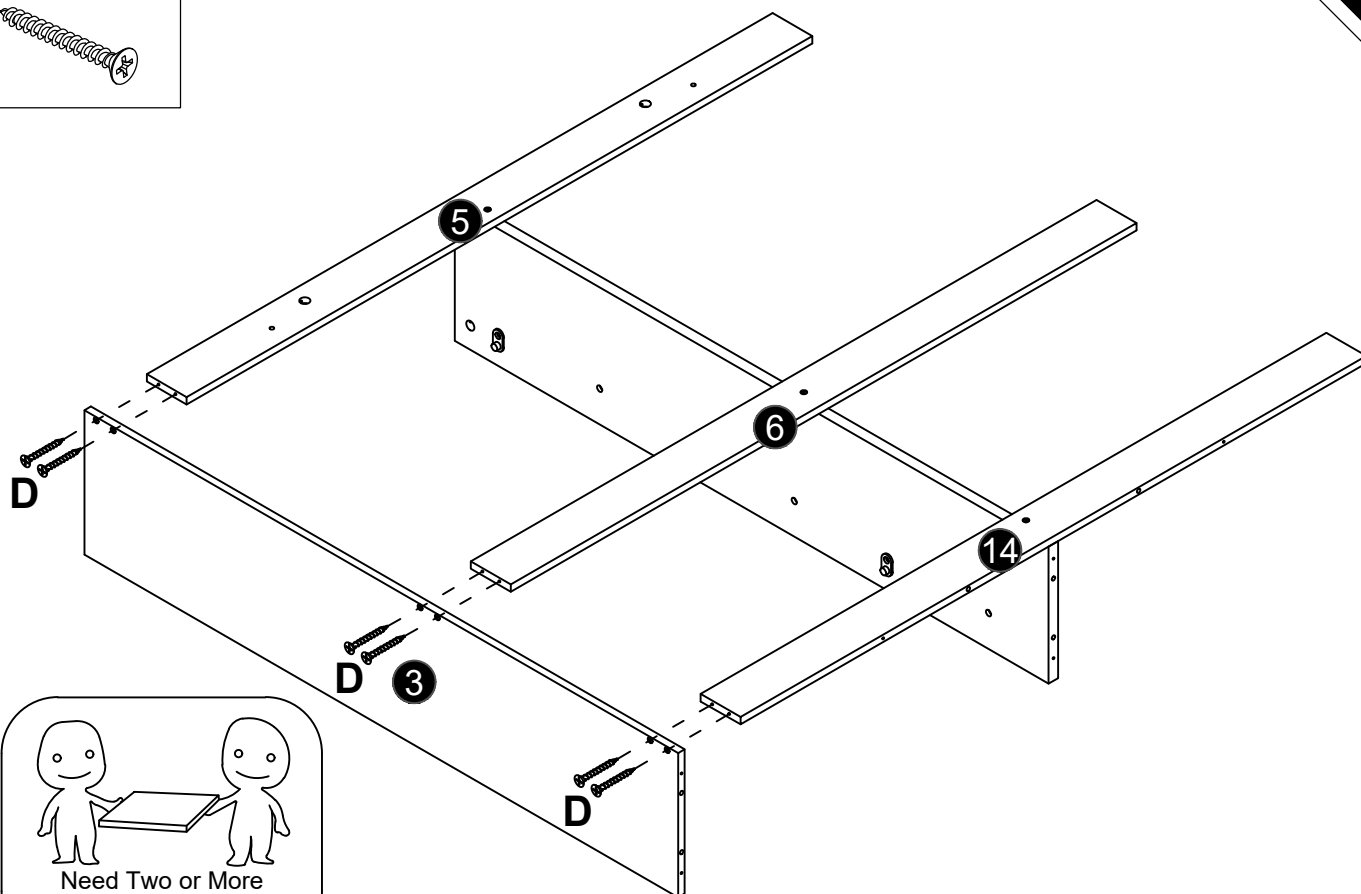



Need Two or More
People To Complete

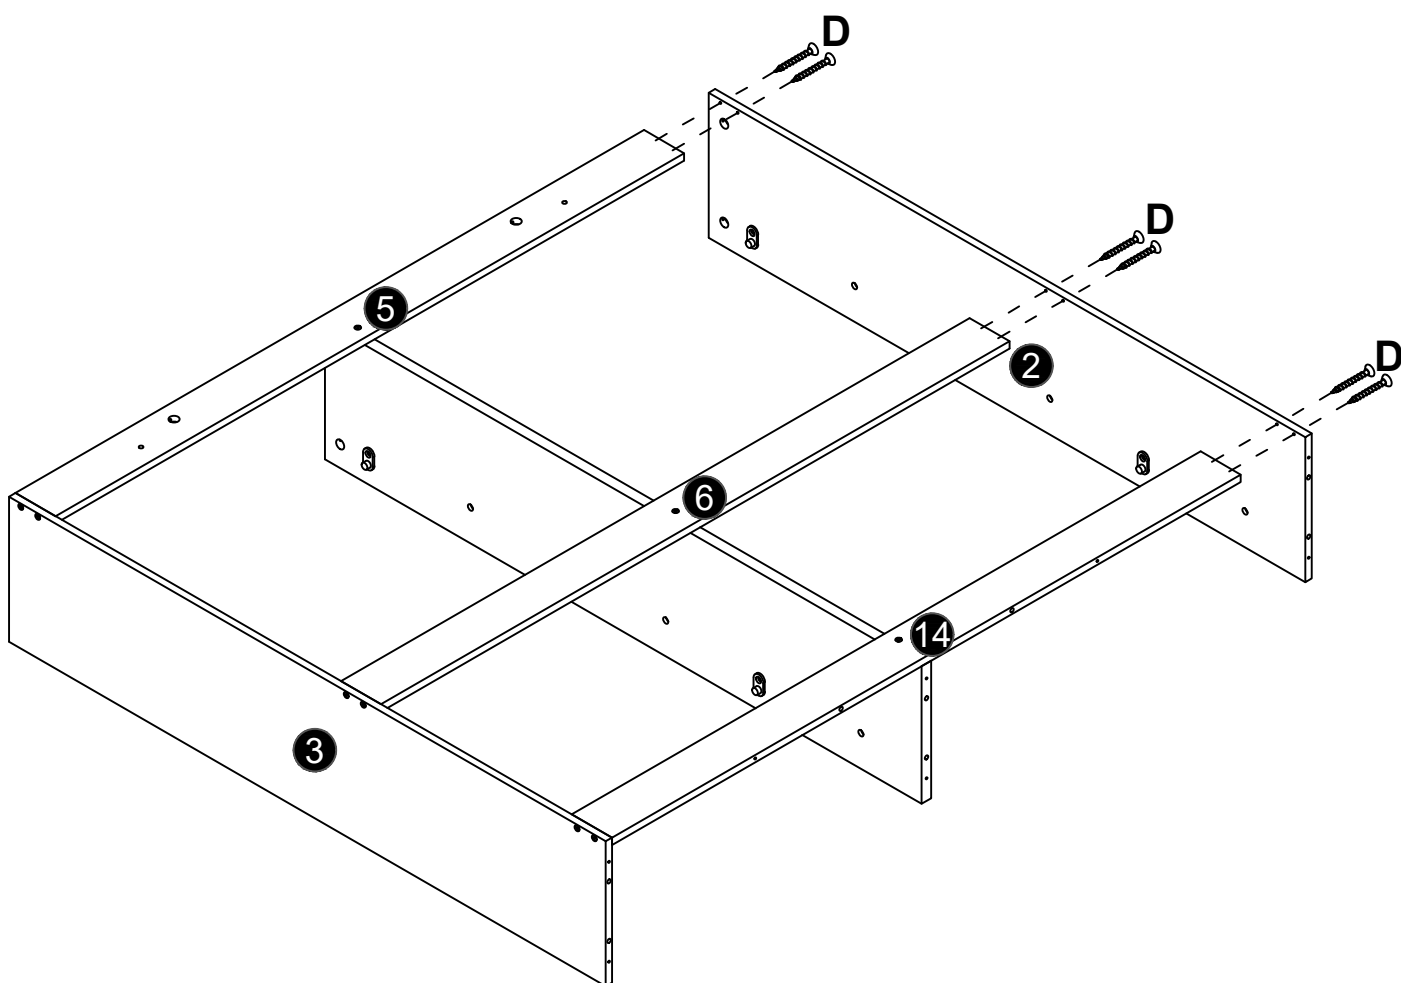


C x8




D x8

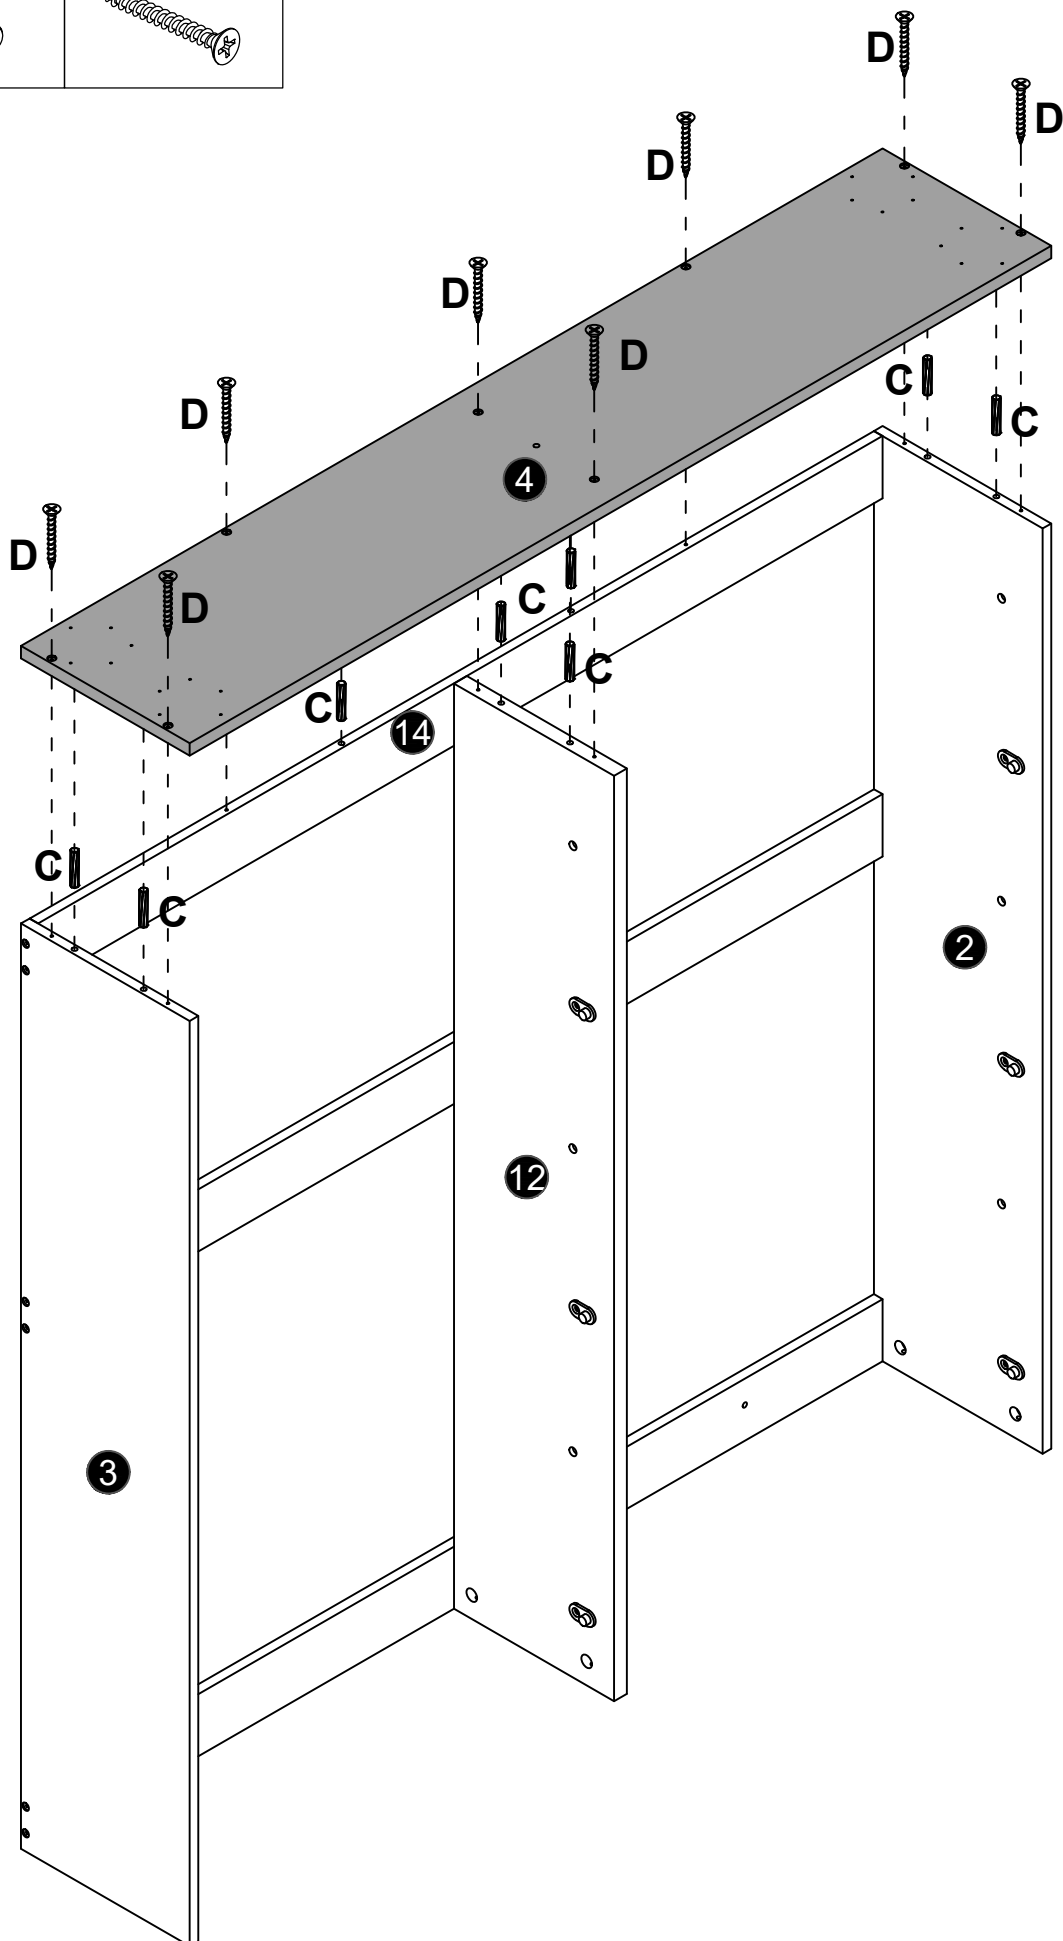

J x4



K x20

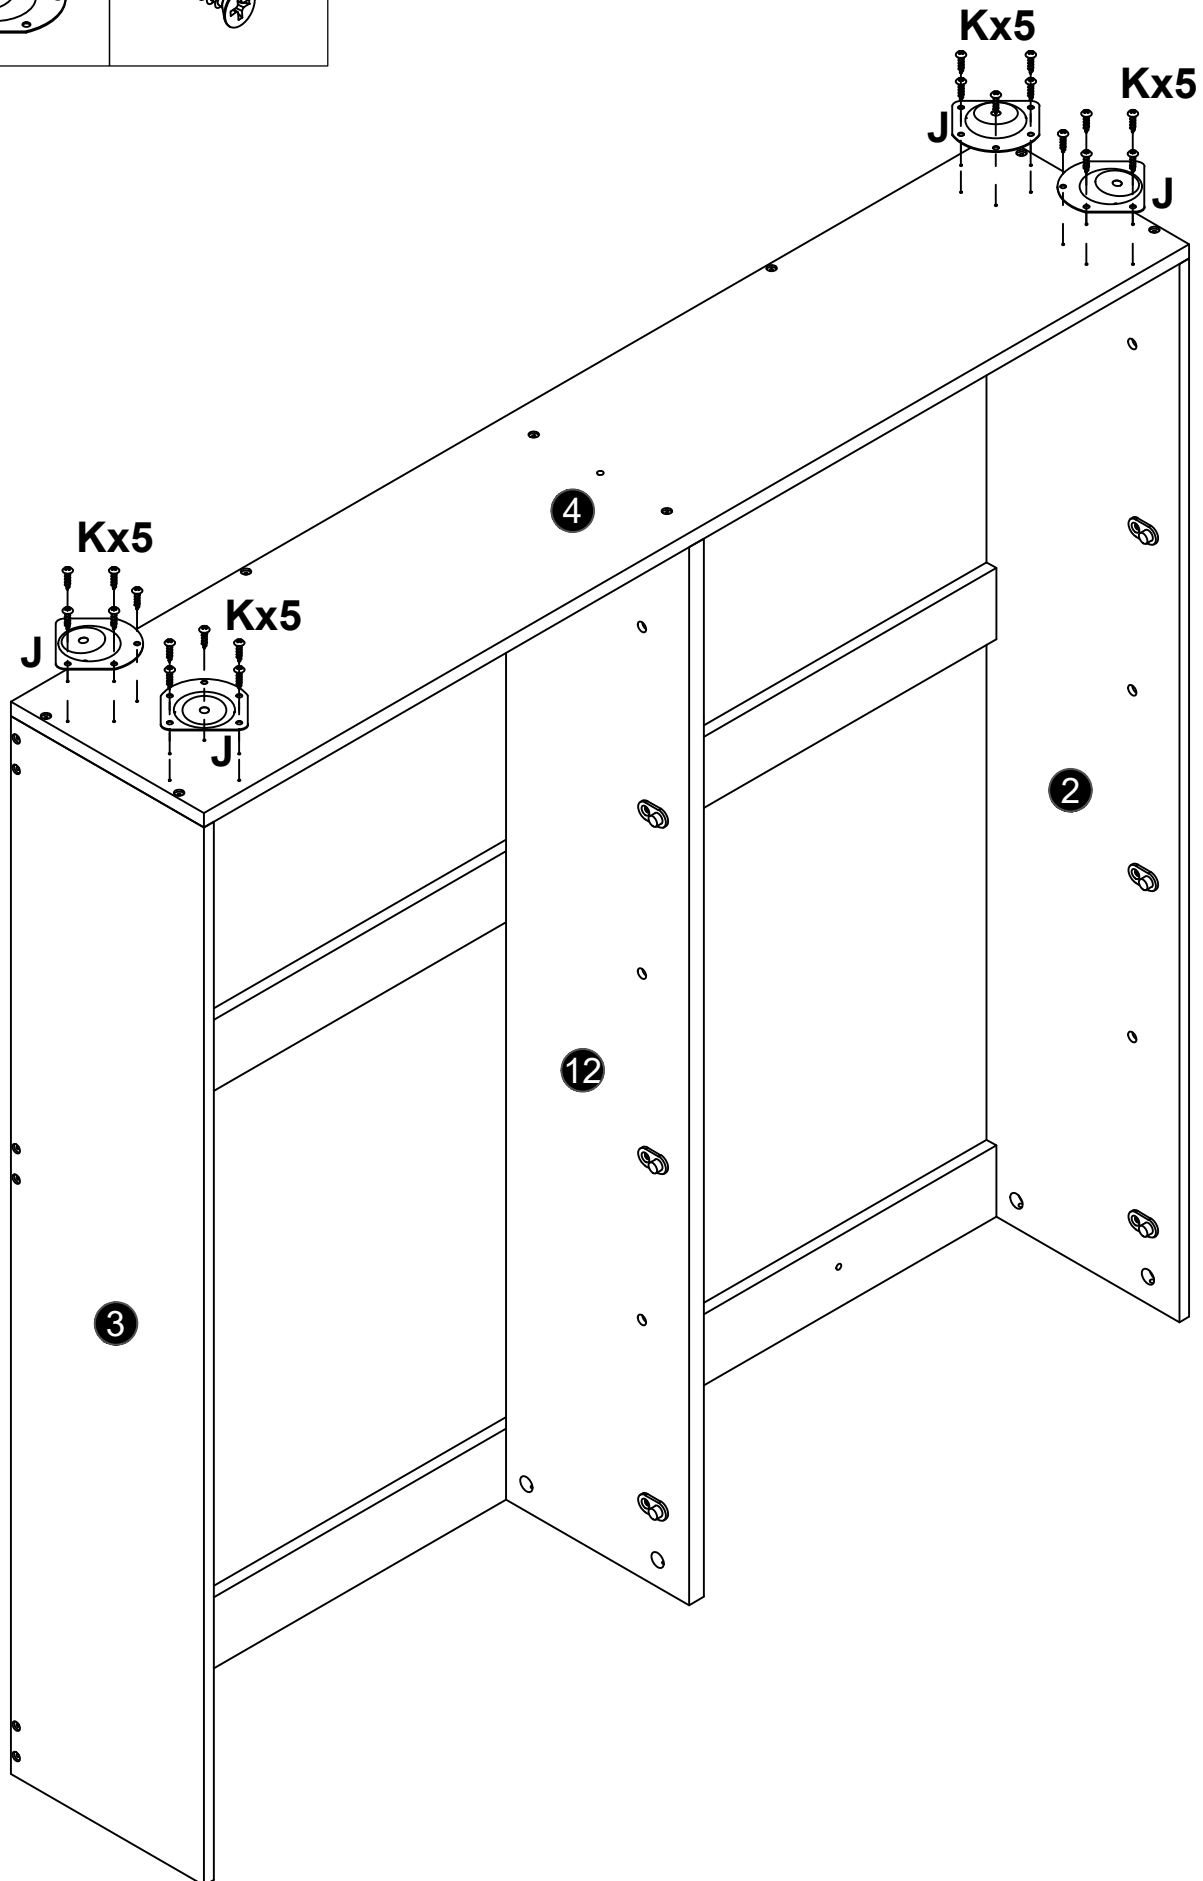


M x4




S x1




09

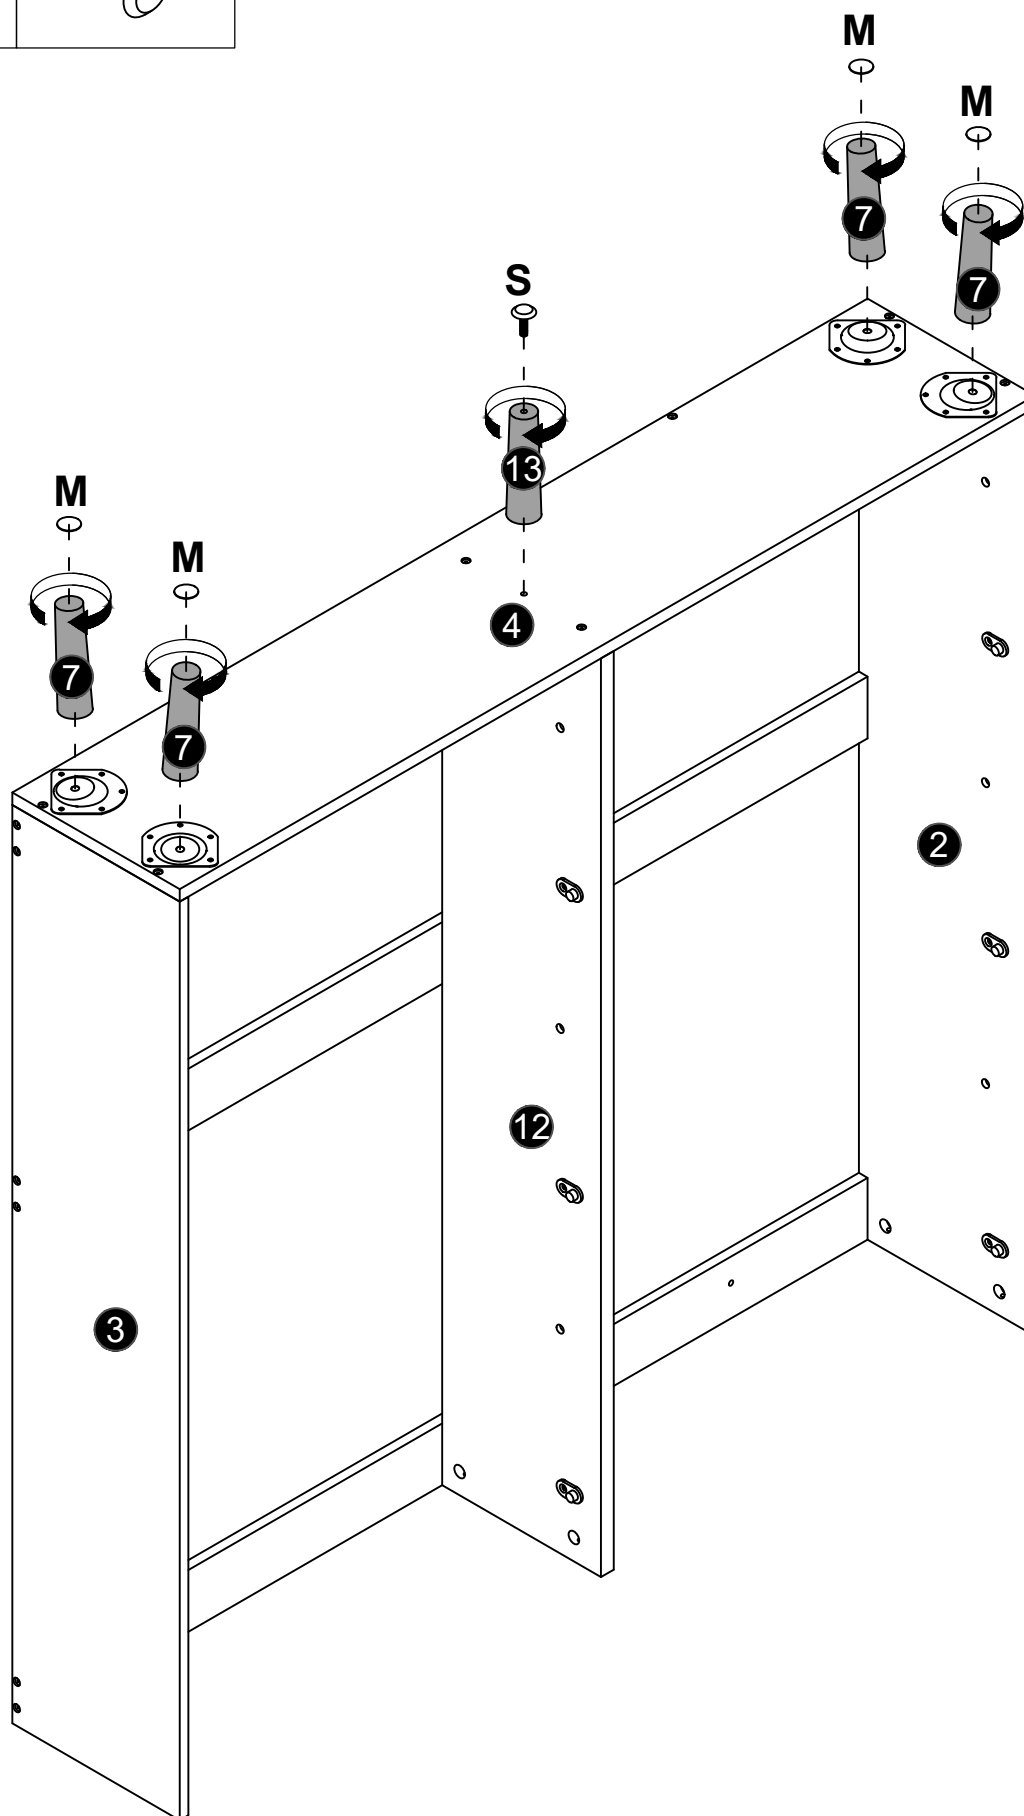

A x8



10

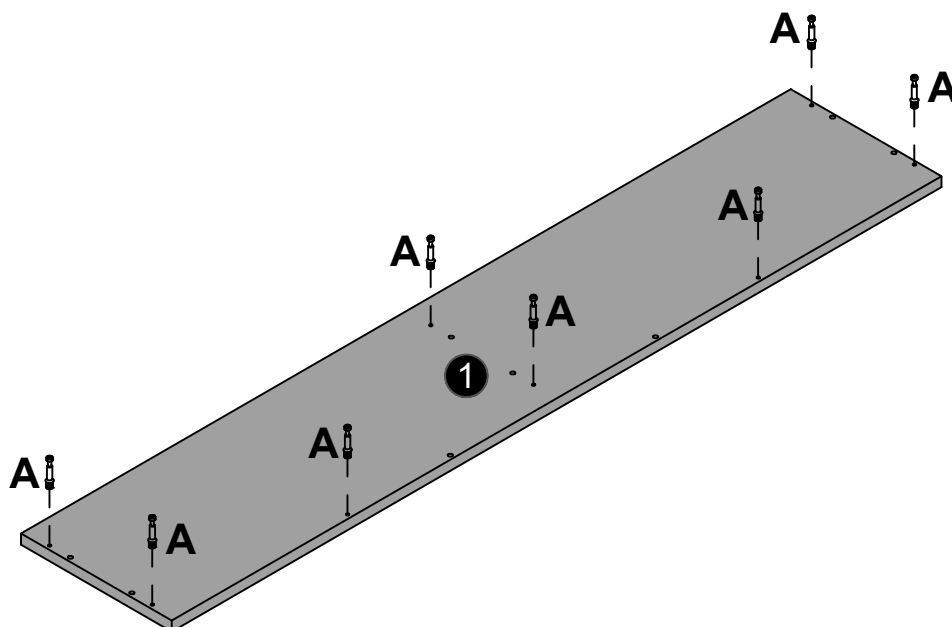


B x8



C x8




11

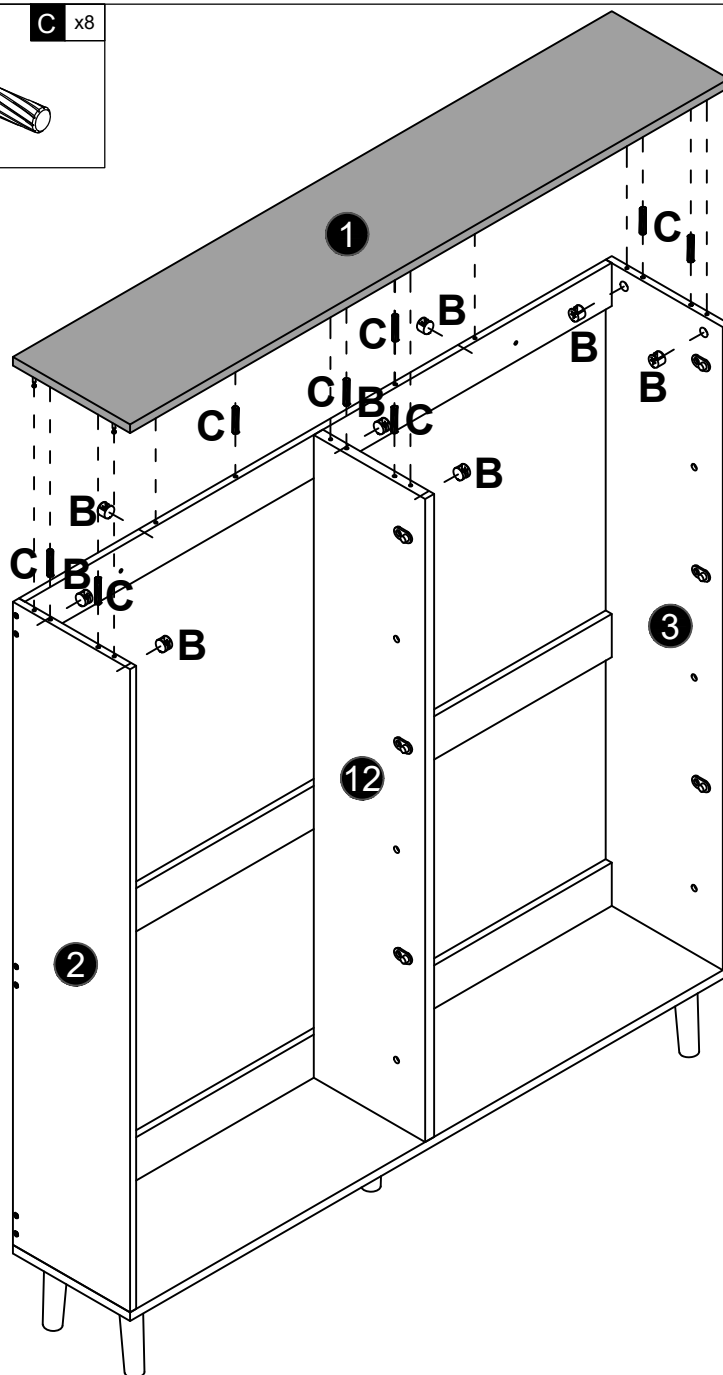

O x2



O-1 O-2

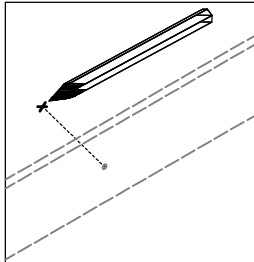

(1)x2

WALL

 +
drilling hole
Ø6x30mm

(2)x2




First fix the anti-rewind screw in the reserved hole of the product.

Then use a tape drill to make holes in the wall that are suitable for the product screws.

WALL

O-1


(3)x2

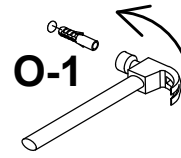

WALL


O-1

(4)x2

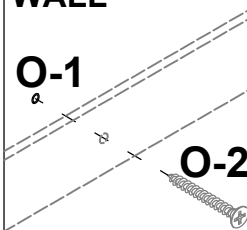

Then, put the expansion bolt into the hole




Finally, pass the matching screws through the "anti-rewind" and tighten them to fix them on the wall.

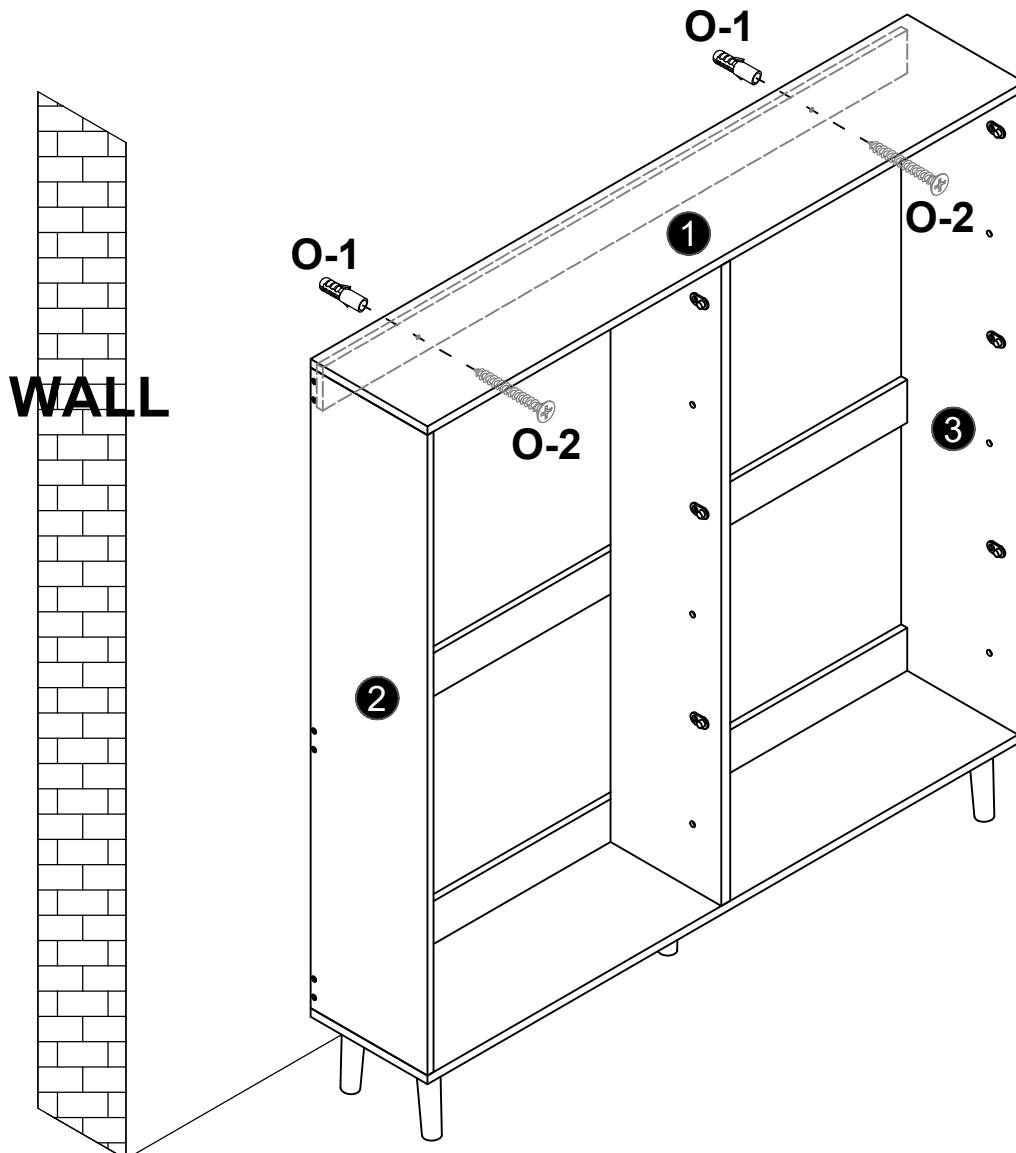

E x12

L x2

R x2

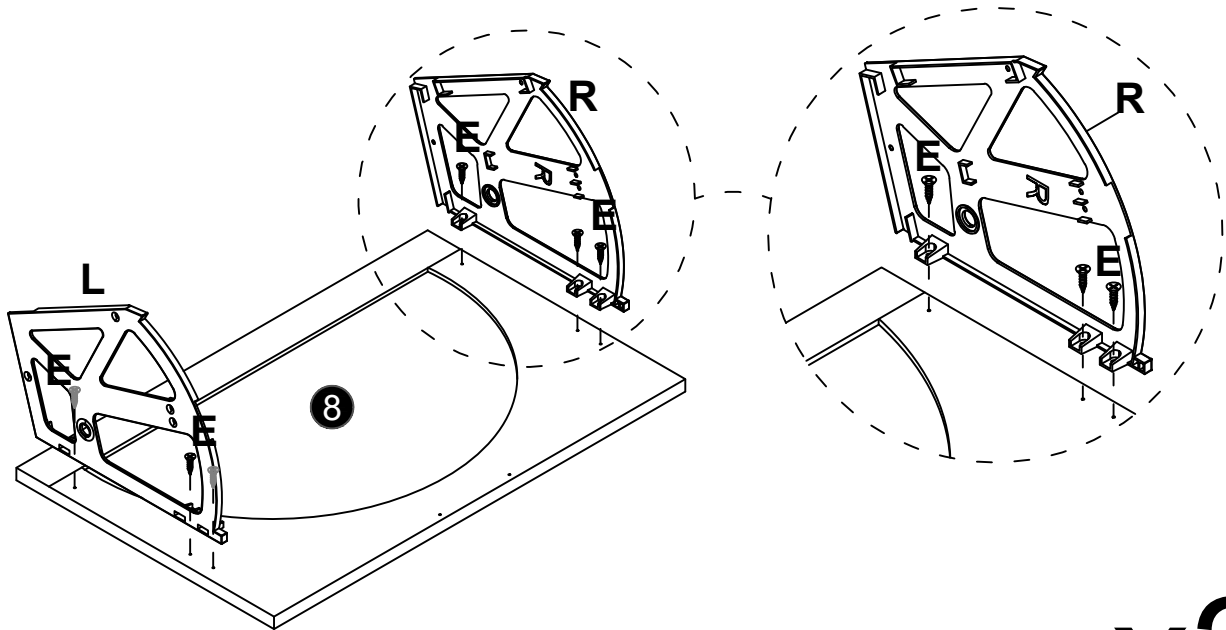


x2

E x4





Please push the shoe racks L and R slightly with your hands .As shown in the figure, facing towards both sides,Place the 10th back panel into the back panel slot As shown in the figure.

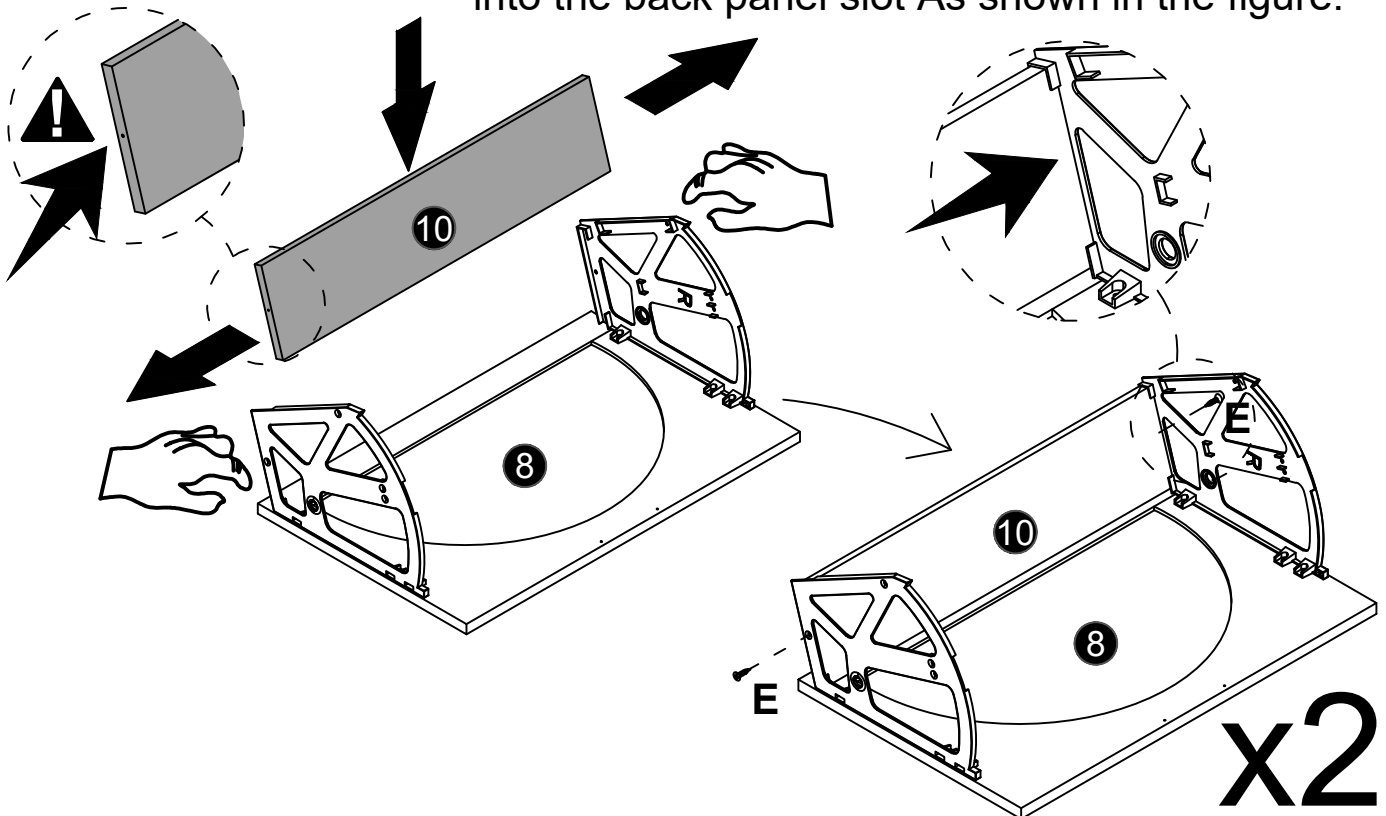

x2

E x4**15**




Please push the shoe racks L and R slightly with your hands .As shown in the figure, facing towards both sides,Place the 11th back panel into the back panel slot As shown in the figure.

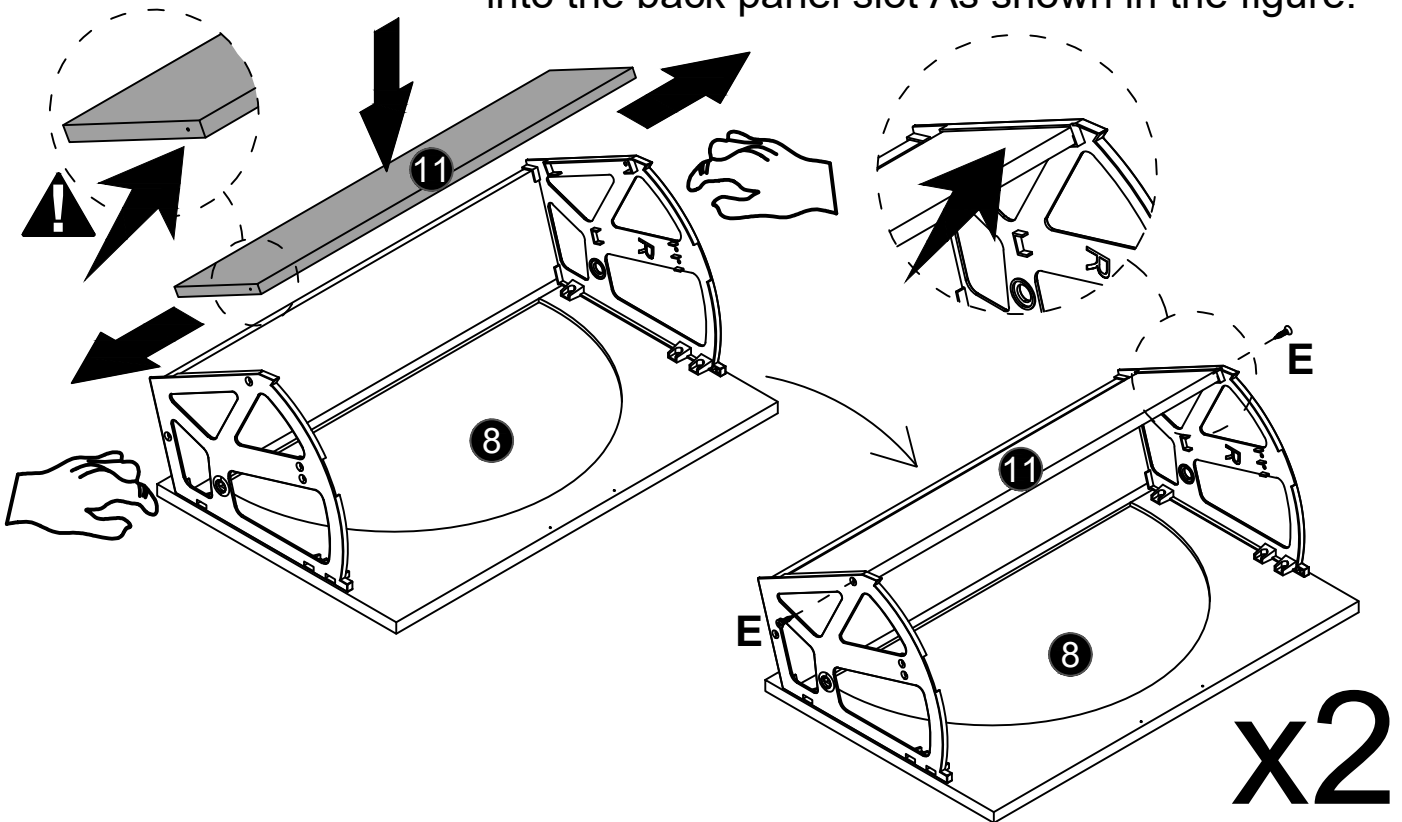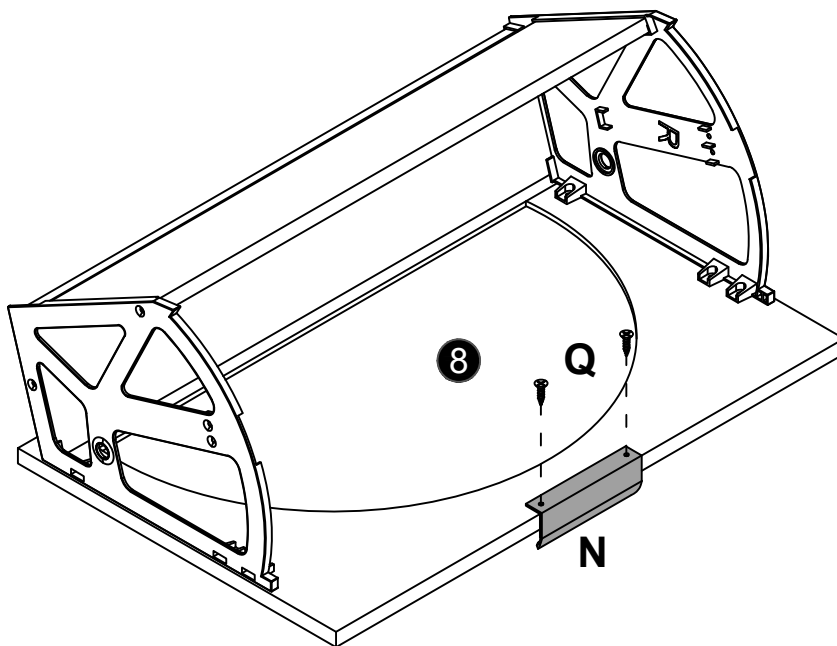**N** x2**Q** x4**16****x2**

E x24

L x4

R x4

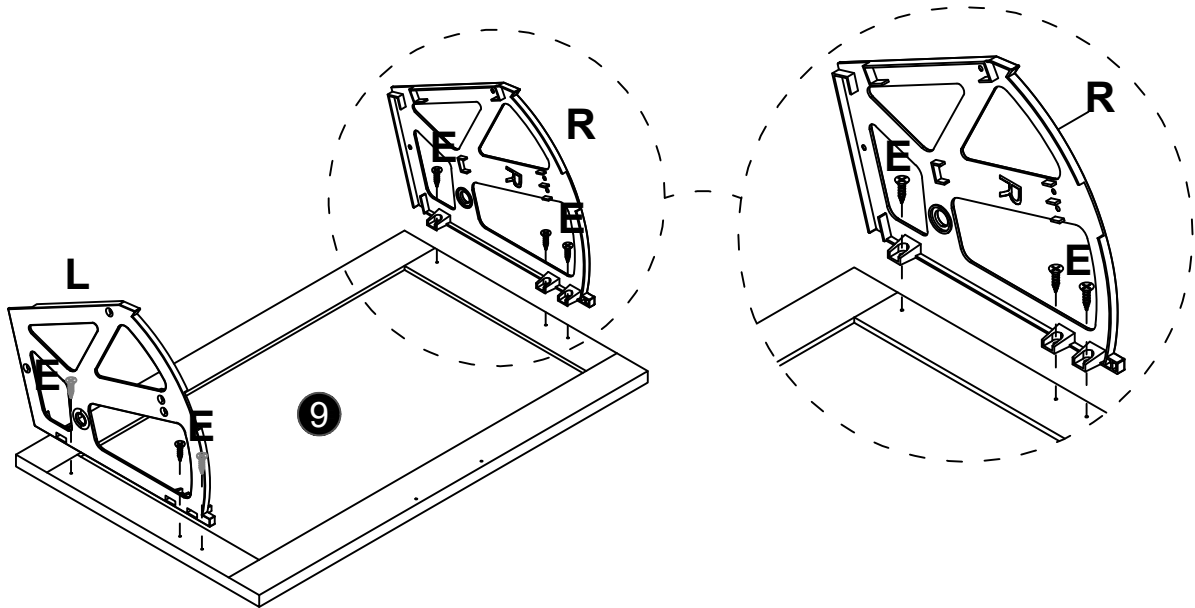


x4

E x8



Please push the shoe racks L and R slightly with your hands .As shown in the figure, facing towards both sides,Place the 10th back panel into the back panel slot As shown in the figure.

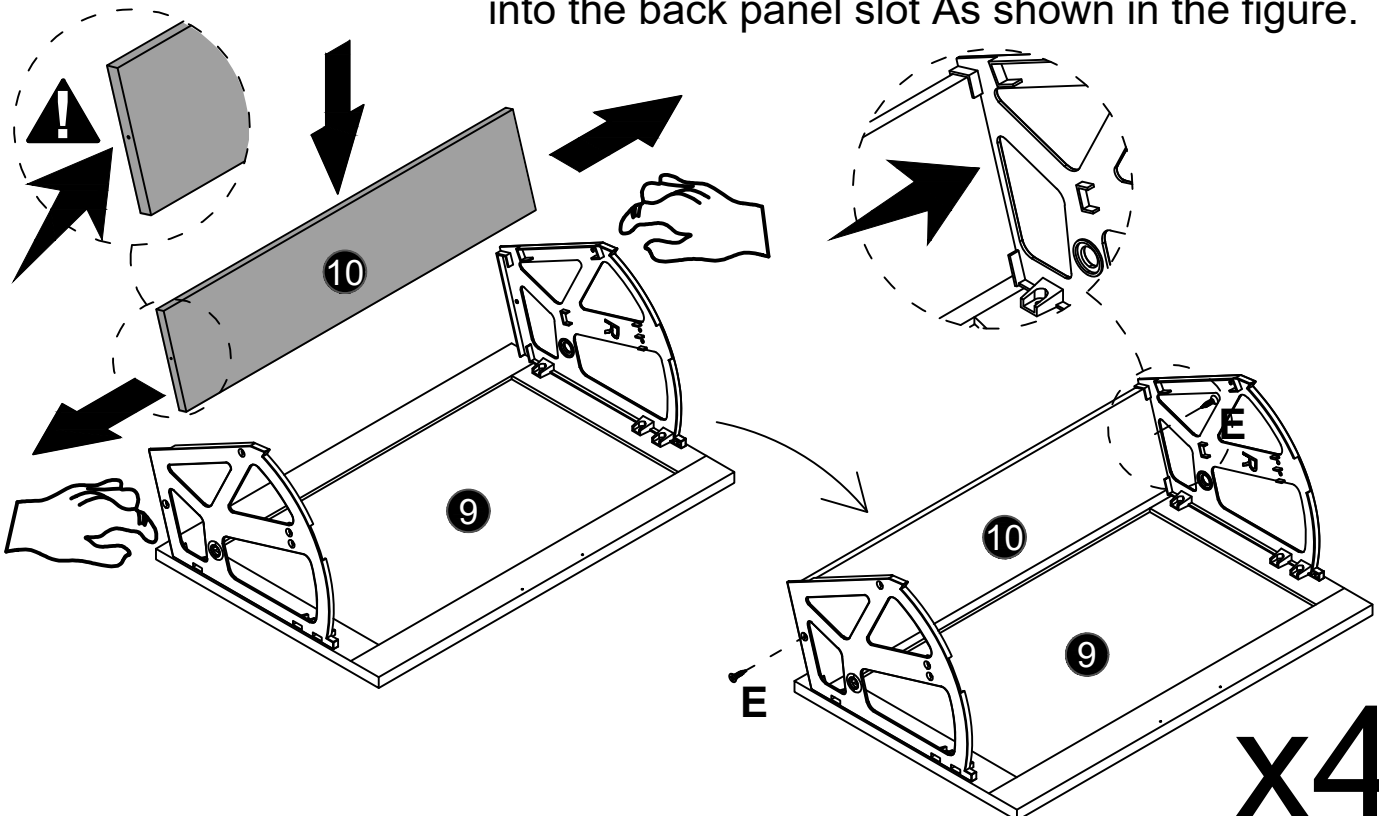


x4

E x8

19


Please push the shoe racks L and R slightly with your hands .As shown in the figure, facing towards both sides,Place the 11th back panel into the back panel slot As shown in the figure.

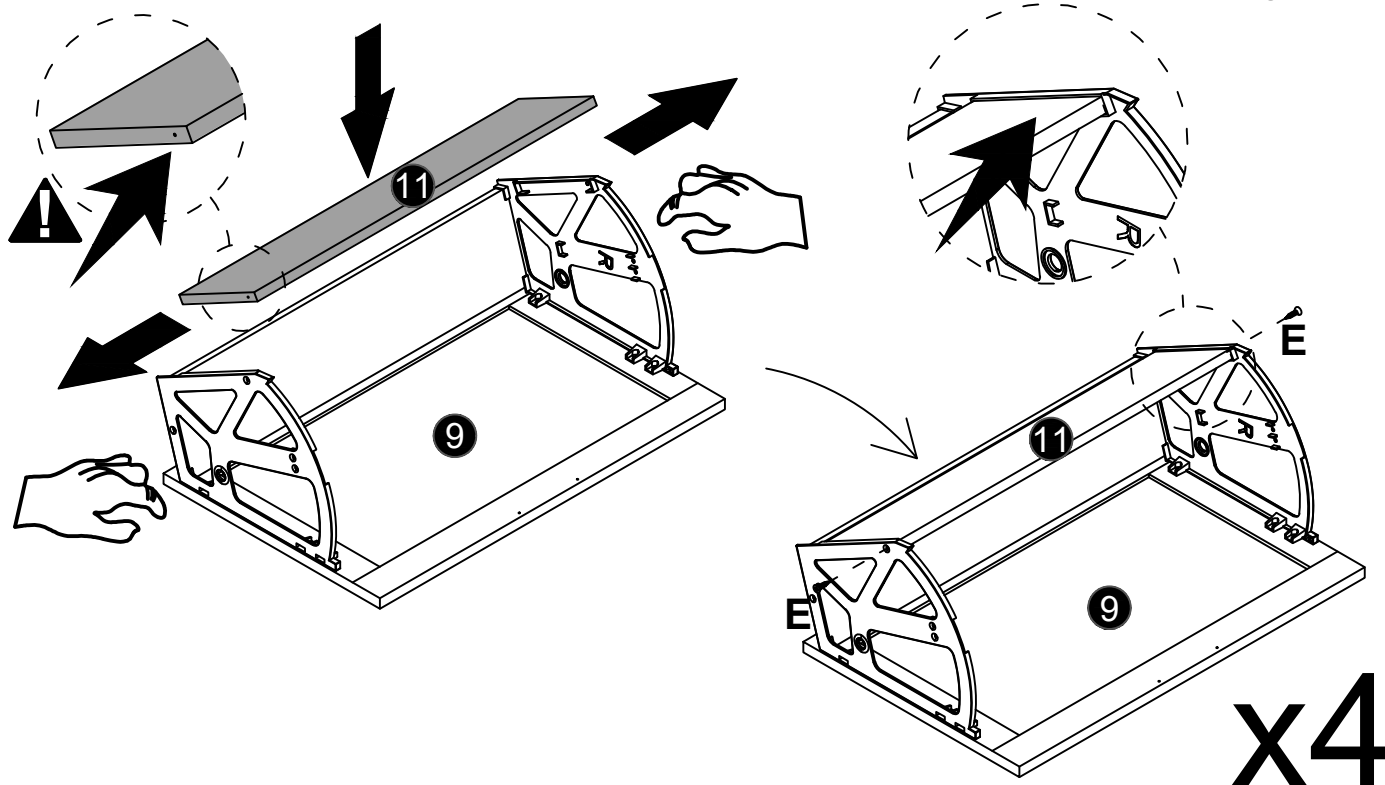





N x4

Q x8



20

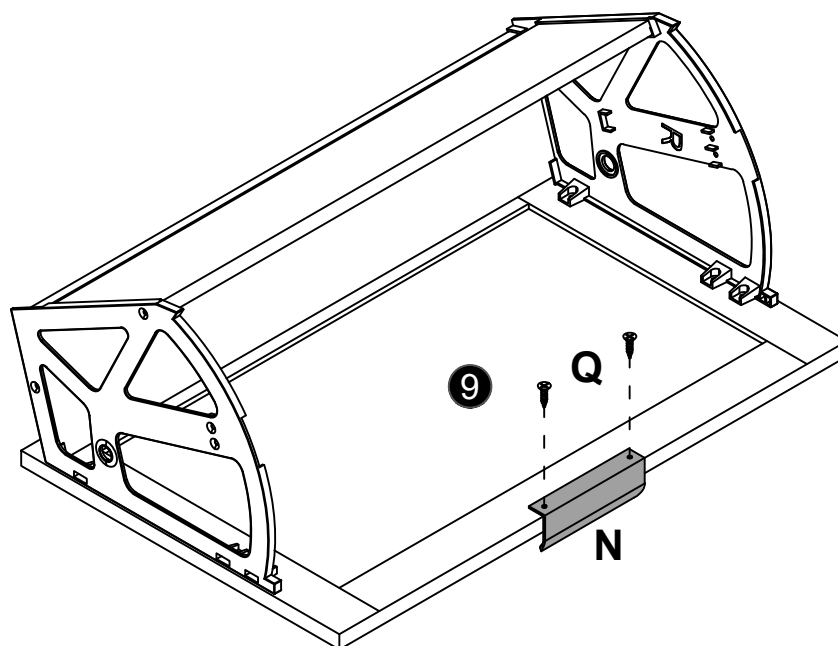


x4

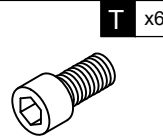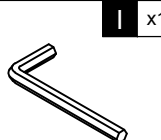
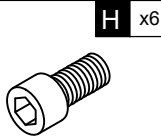
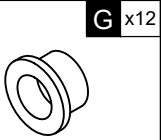



1. Before installation, please check if the position is correct to avoid installation errors.
2. Please pay attention to distinguishing the corresponding installation positions of H and T.

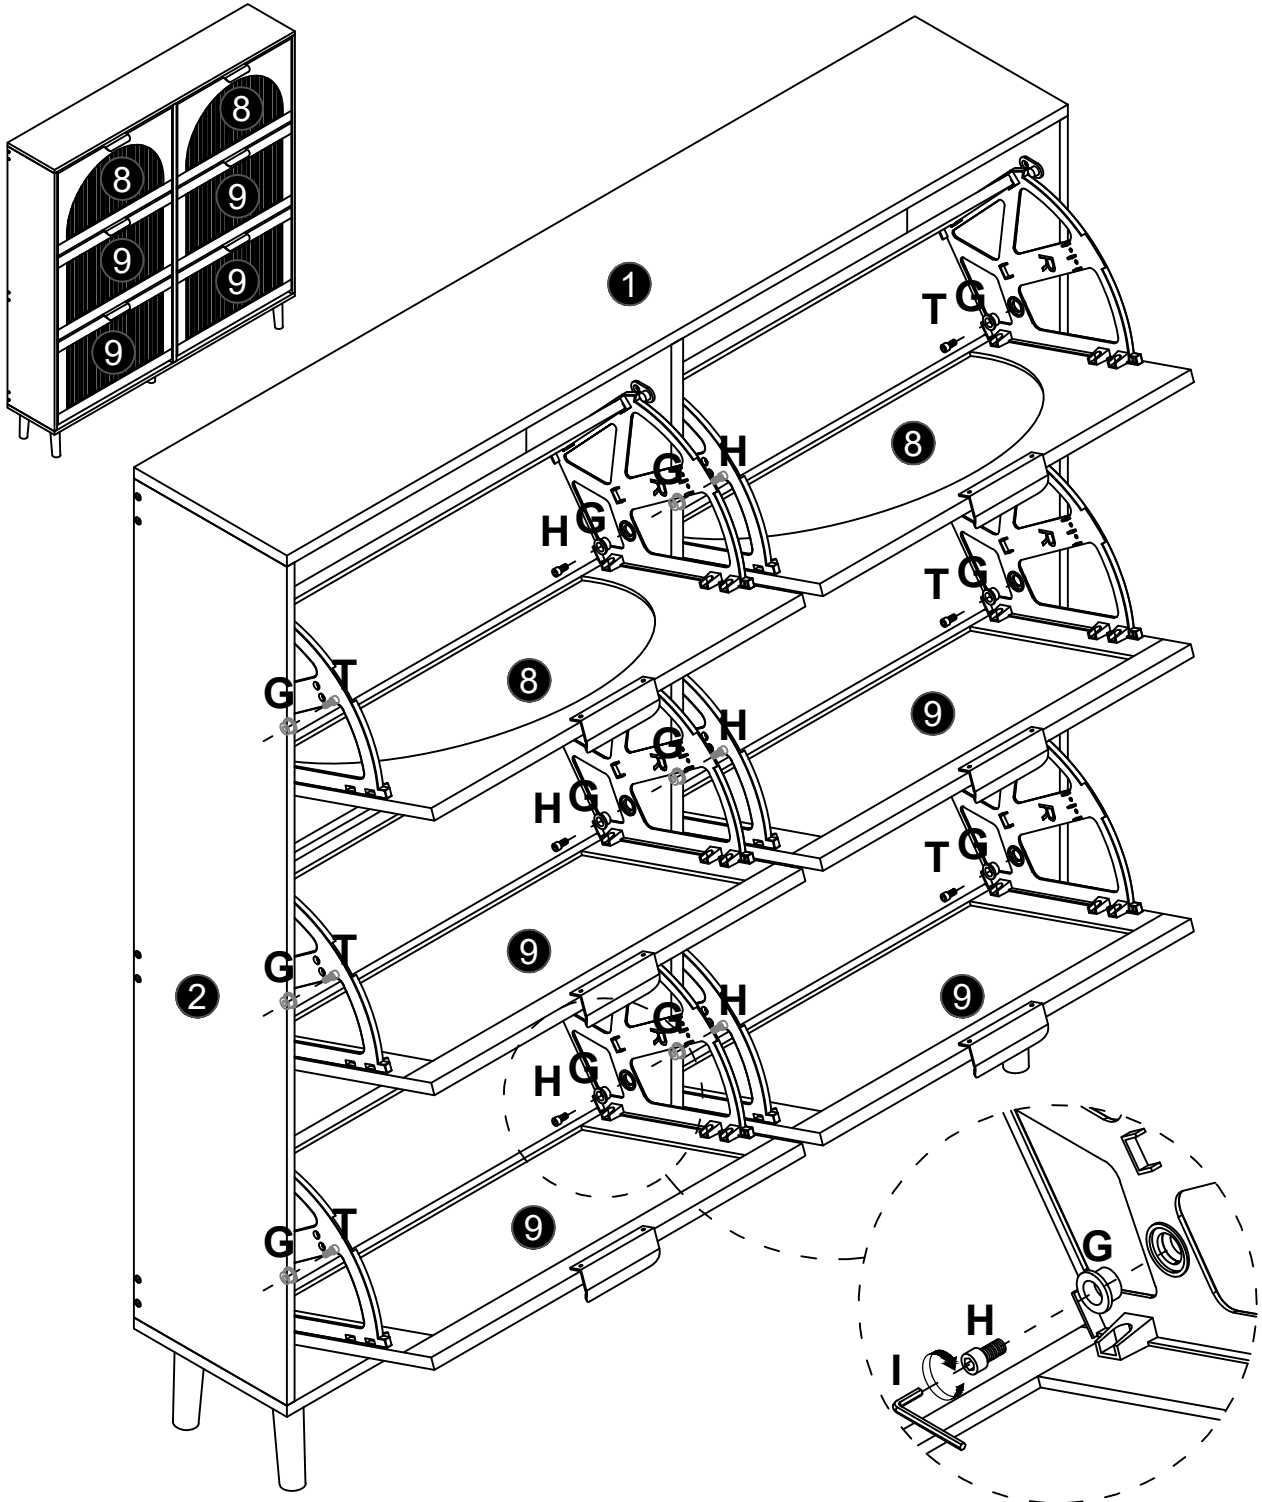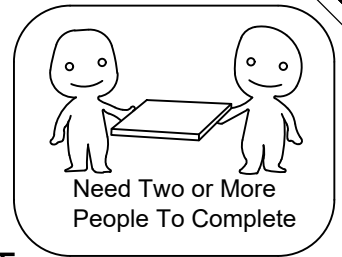


Note: When installing H or T, it is sufficient to reach 90% progress. Installing 100% may cause damage to G.

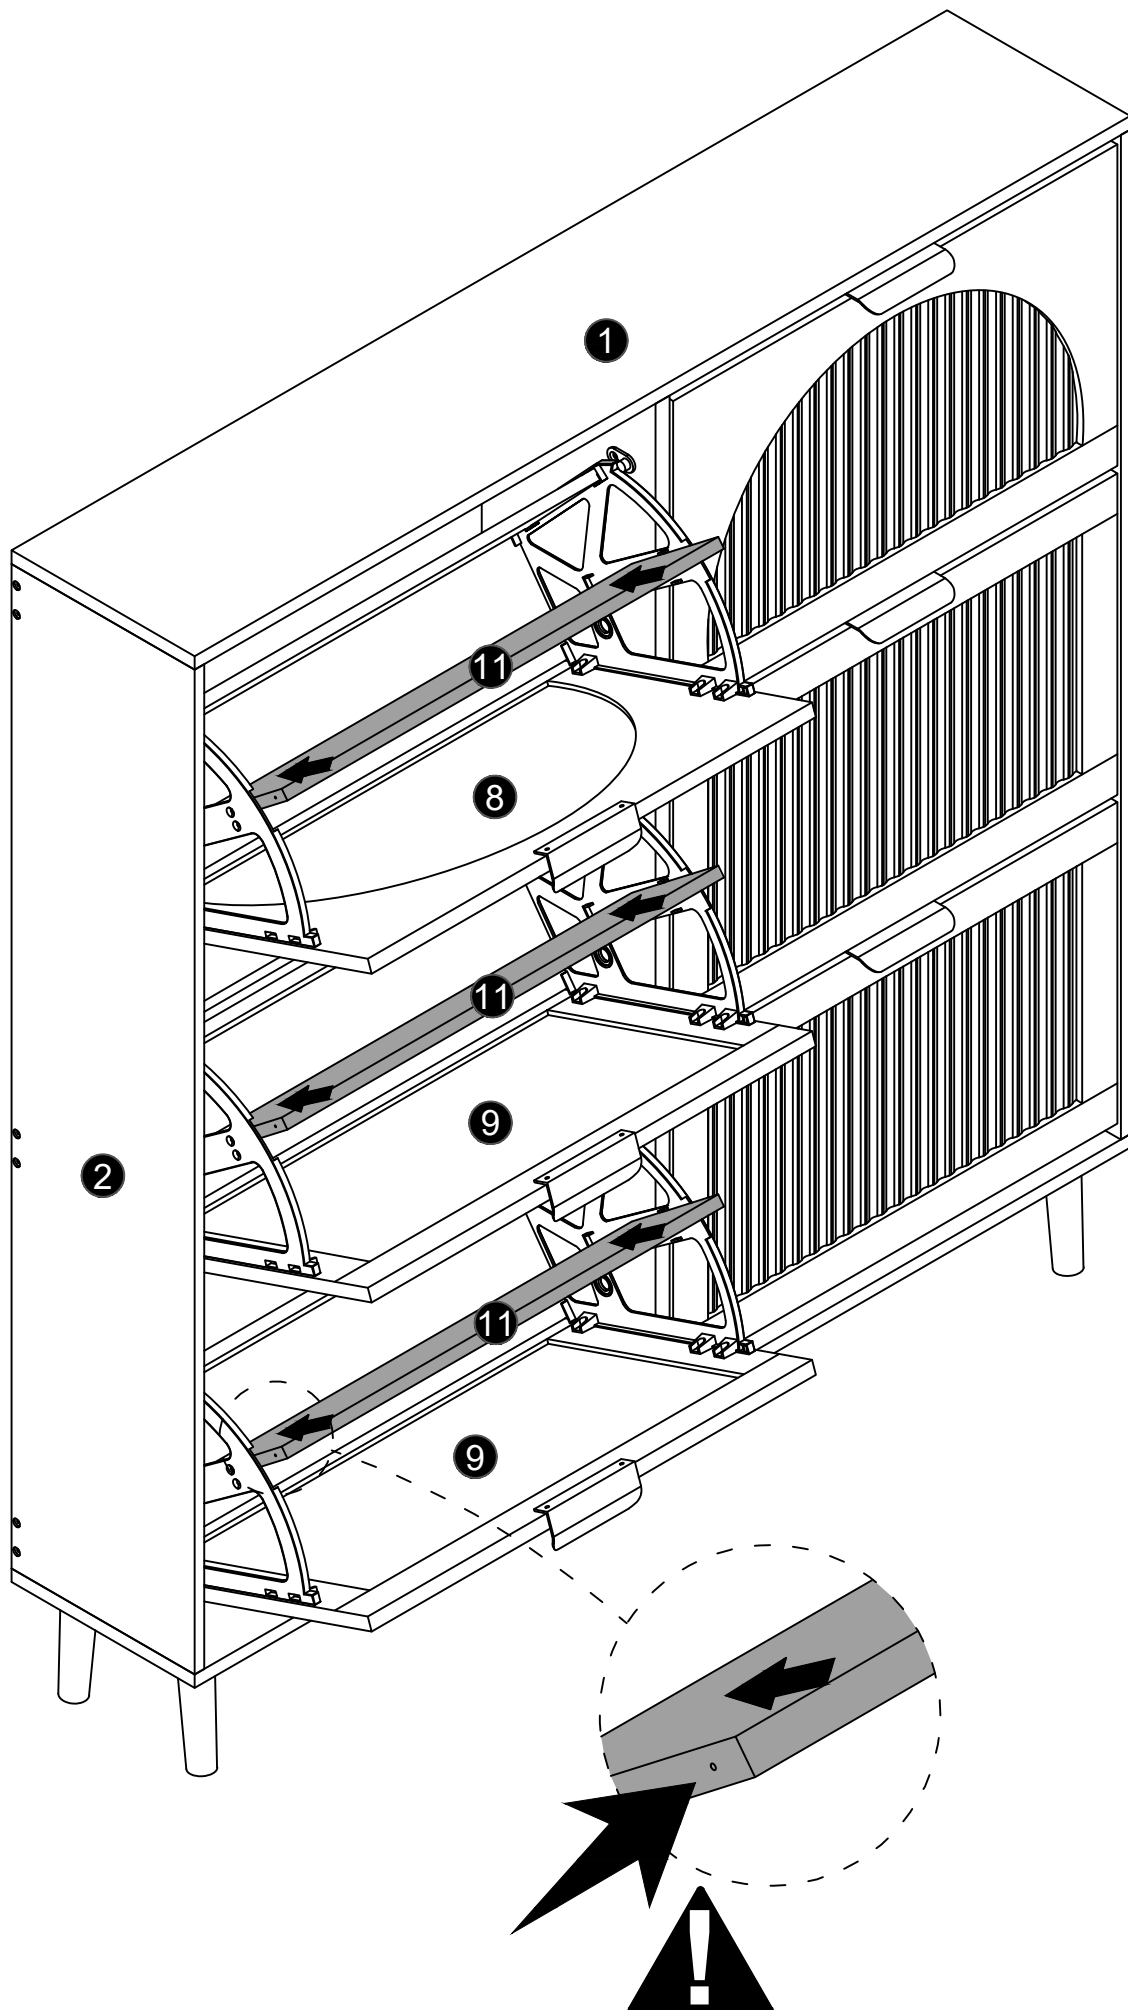


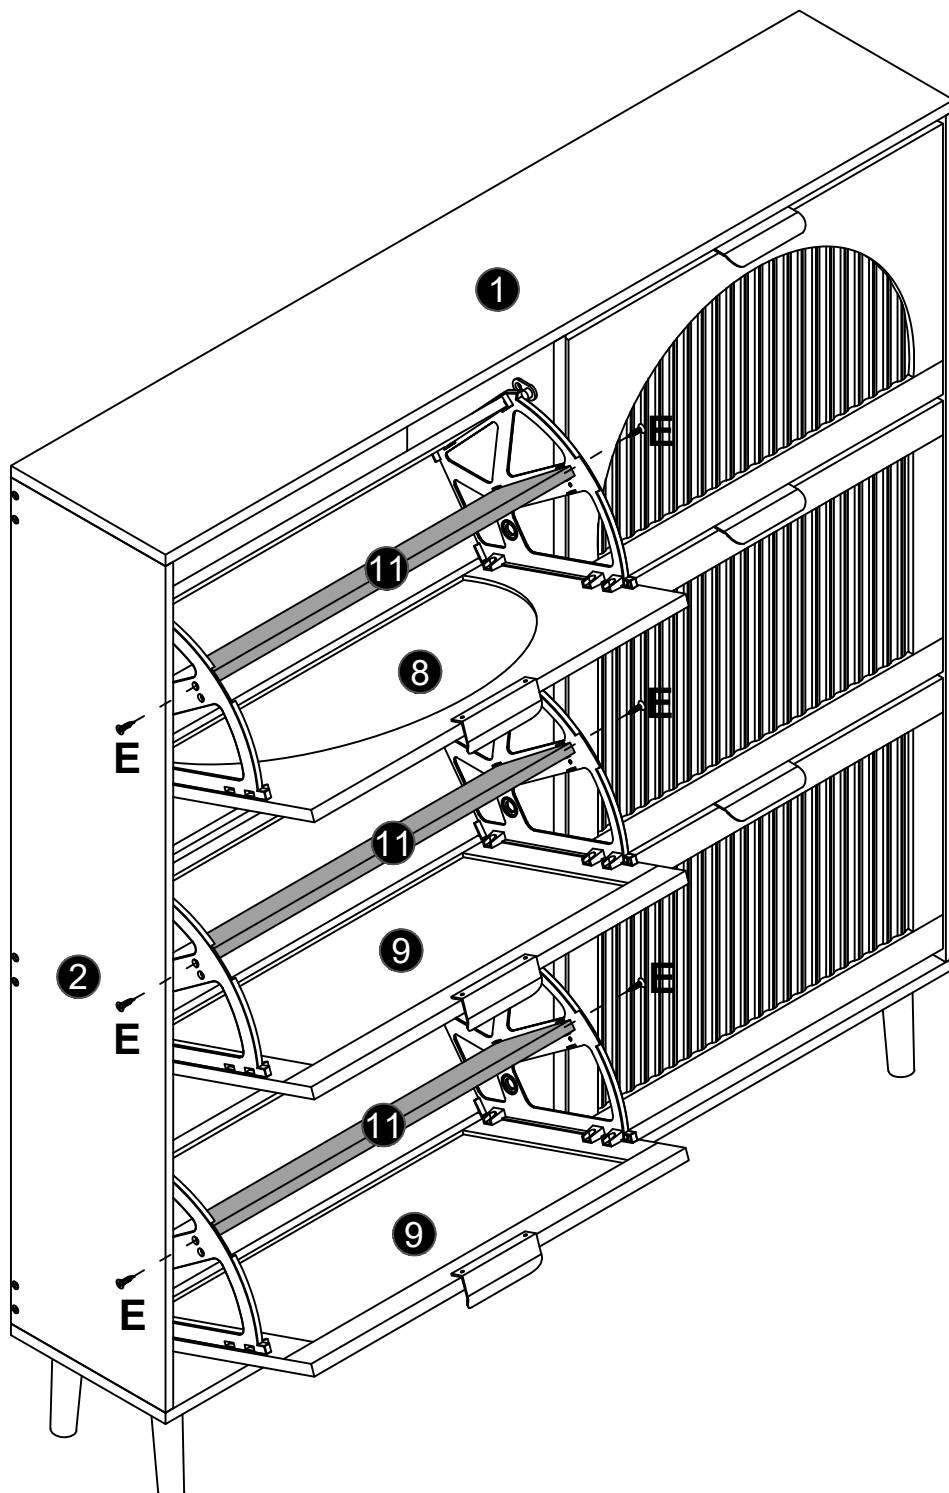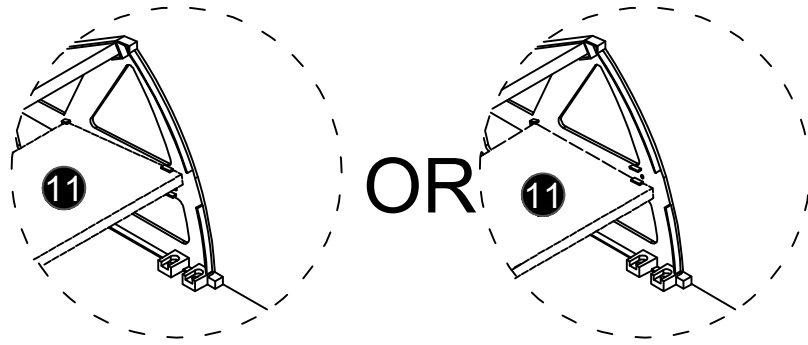

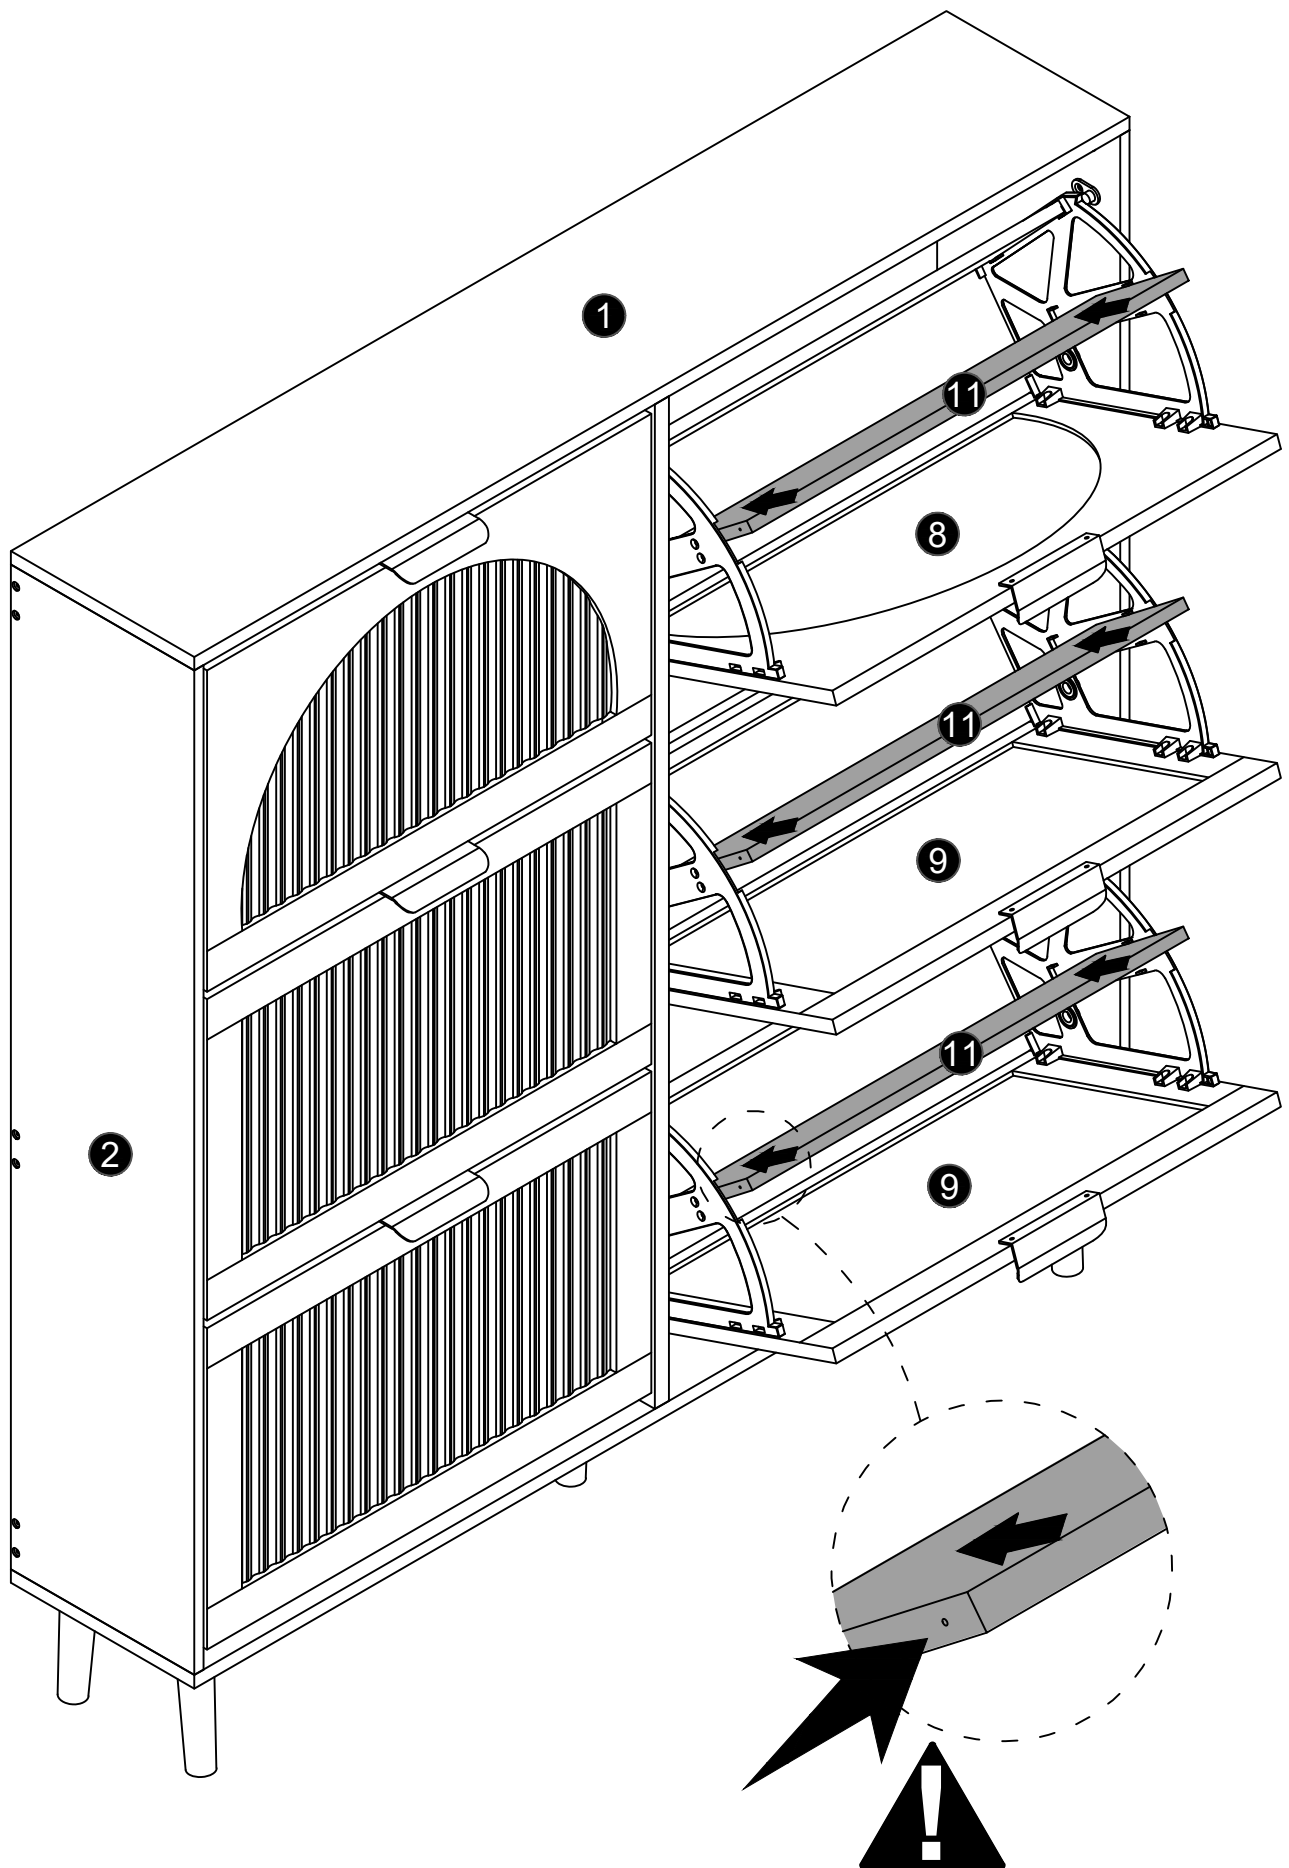




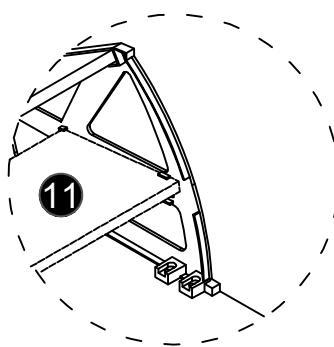


OR

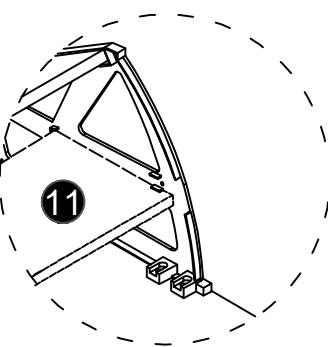

Adjustments can be made
according to your own needs.

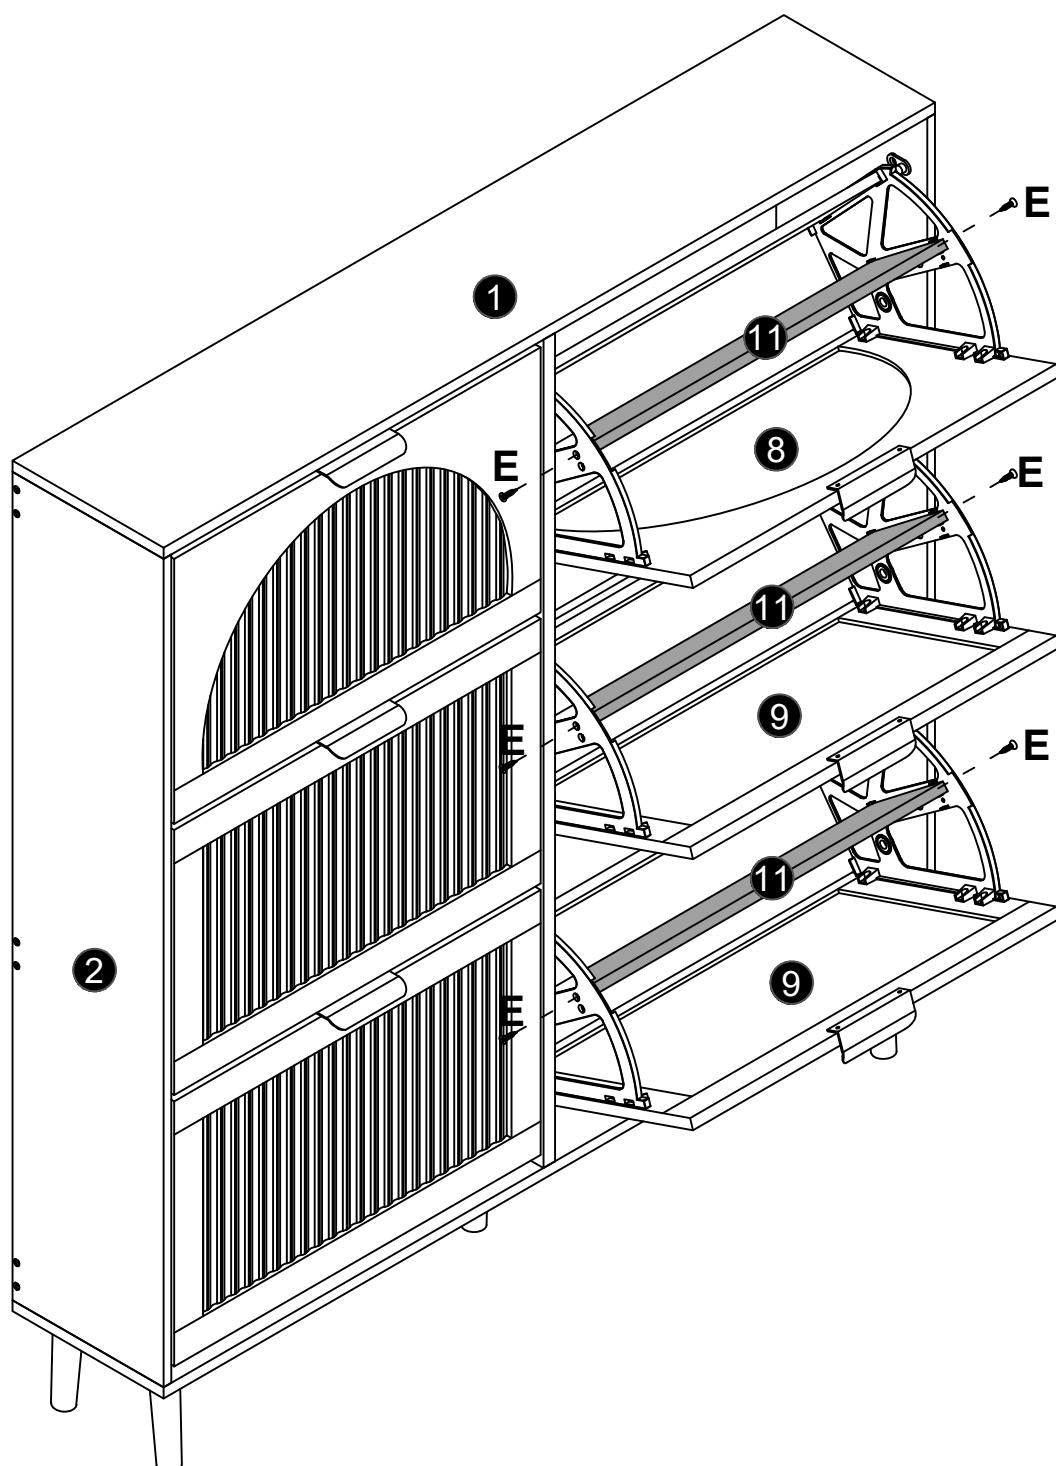

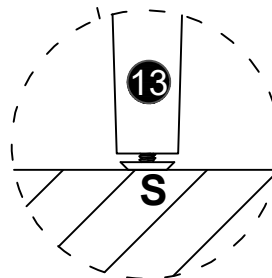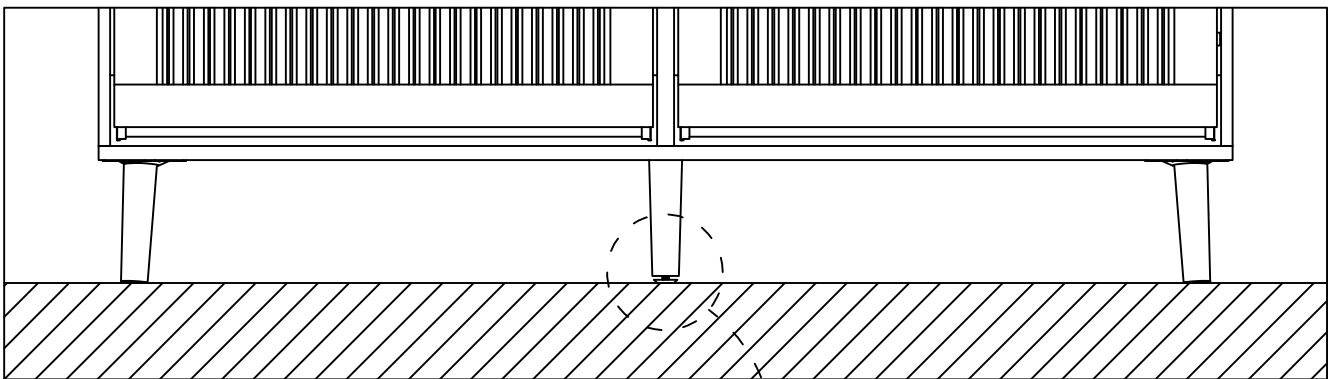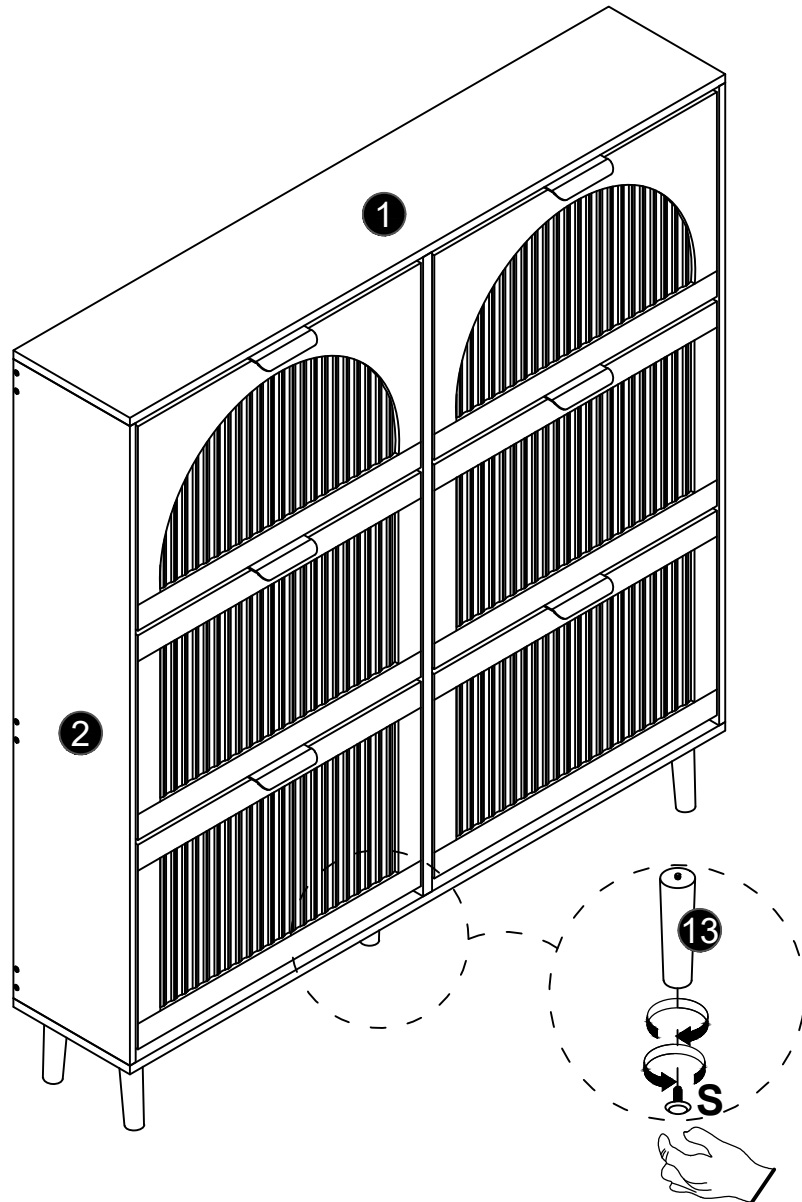

If the cabinet is unstable on the ground, please rotate the No. S adjustment foot pad on the No. 13 support leg.

P x12

Done

