


ASSEMBLY INSTRUCTIONS



PARTS IDENTIFICATION



ITEM	DESCRIPTION	QTY
#1	BACK	01
#5	FRONT LEG	02
#6	BACK LEG	02
#7	BOTTOM SUPPORT RING	01
#8	CUSHION	01

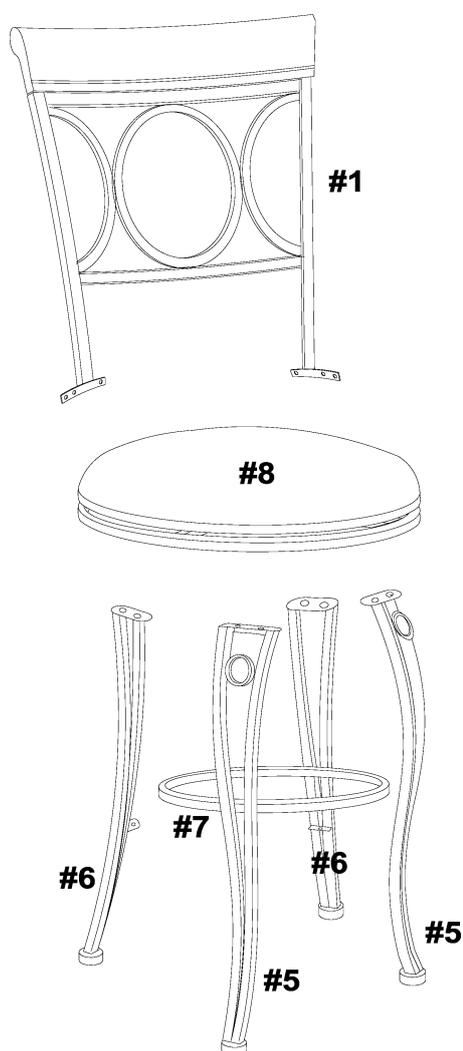



For ease of identification all parts are labeled to correspond to the Step number in which the part is used.

HARDWARE IDENTIFICATION



Please line up the hardware with the correct full size image to make sure you are installing the hardware correctly.

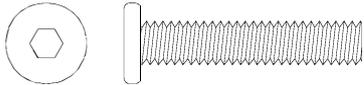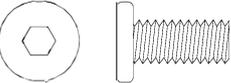ITEM	PICTURE	DESCRIPTION	QTY
B	 (Ø1/4"x1-3/16"L) Full size	LONG BOLT	06
D	 (Ø1/4") Full size	FLAT WASHER	12
F	 (Ø1/4") Full size	NUT	06
G	 (4mm) Not to Scale	ALLEN WRENCH	01
H	 Not to Scale	OPEN WRENCH	01
I	 (Ø1/4"x1/2"L) Full size	NYLOK BOLT	12

STEP 1.

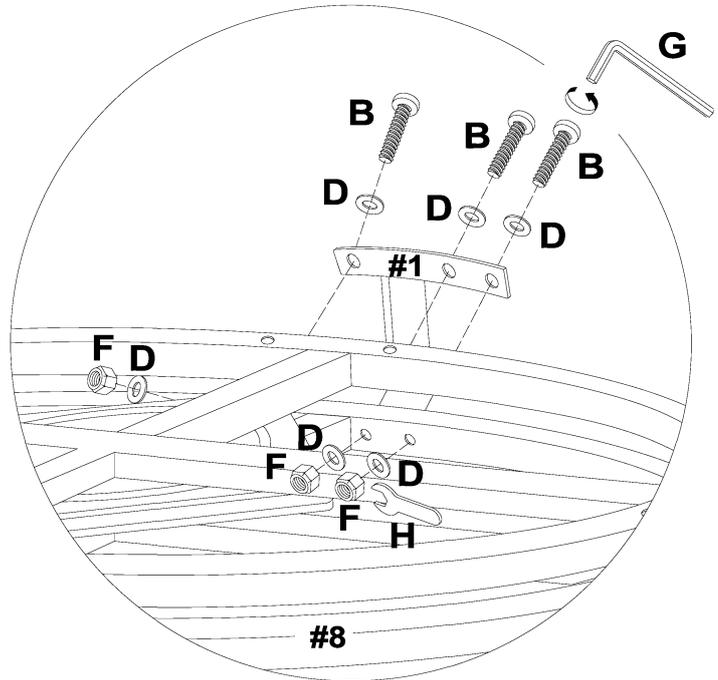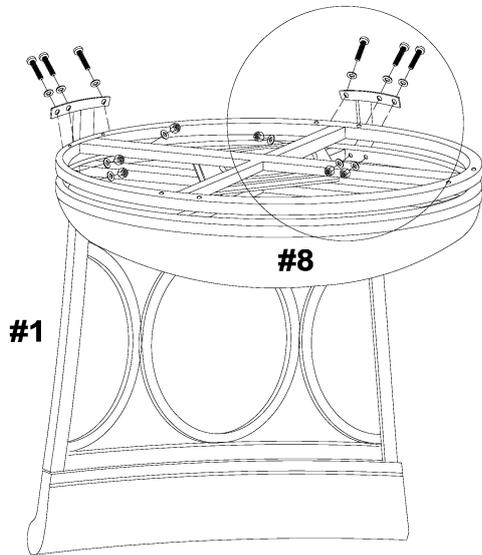



STEP 2.

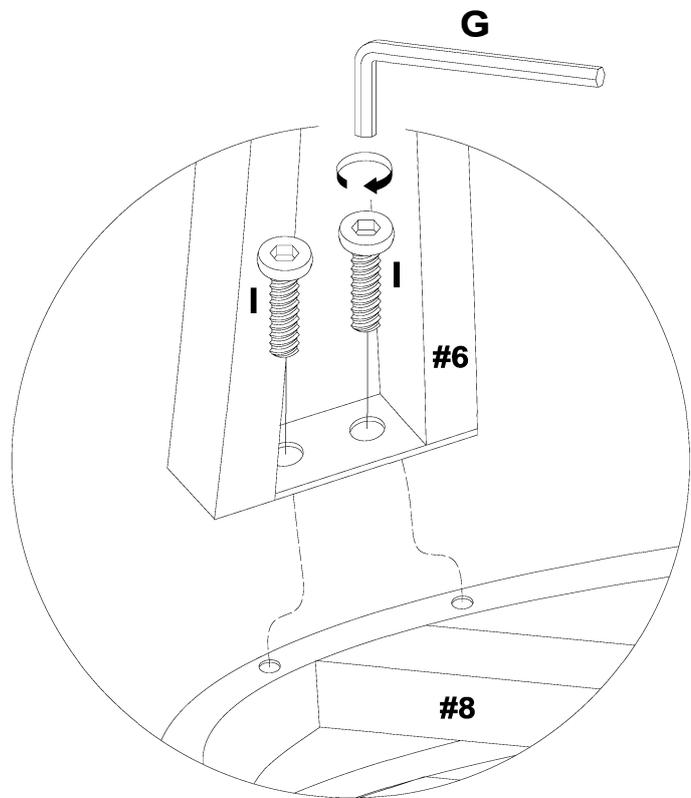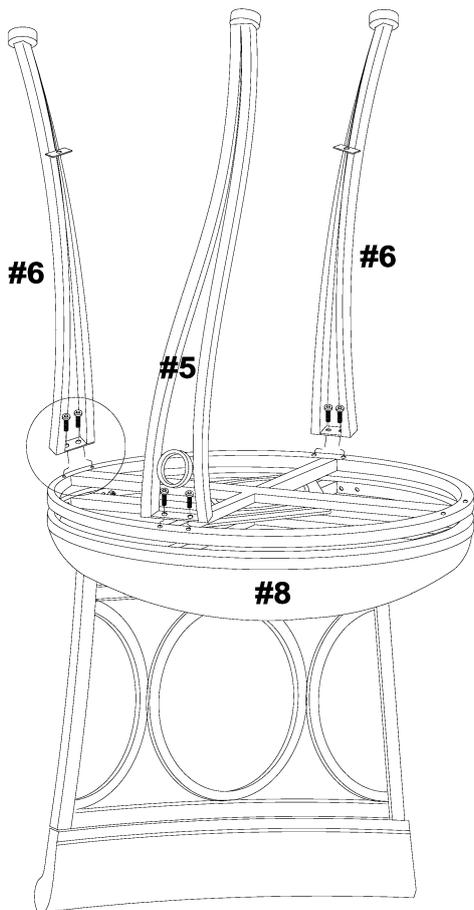



IMPORTANT:


1. DO NOT TIGHTEN BOLTS COMPLETELY UNTIL ALL BOLTS ARE COMPLETELY LINED UP AND INSERTED INTO HOLES / NUTS.
2. DO NOT OVER TIGHTEN SCREWS AND BOLTS TO AVOID STRIPPING.

STEP 3.

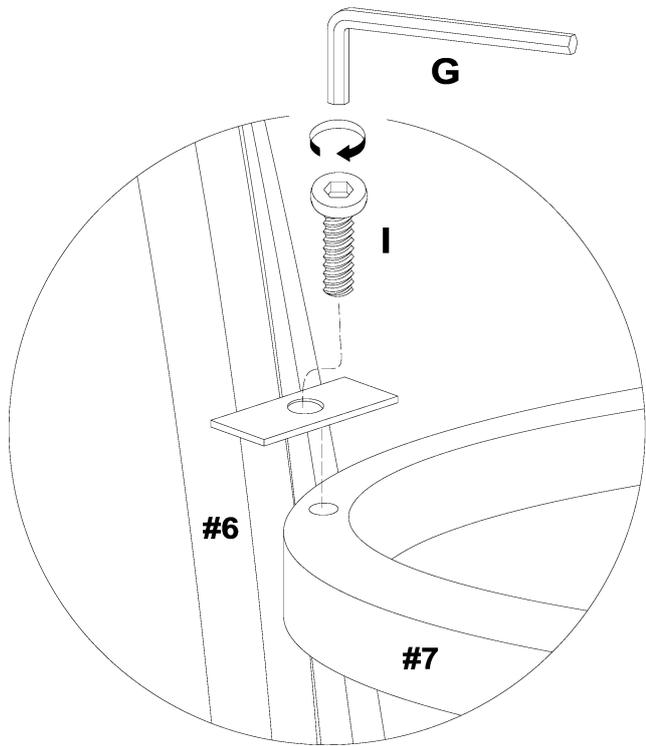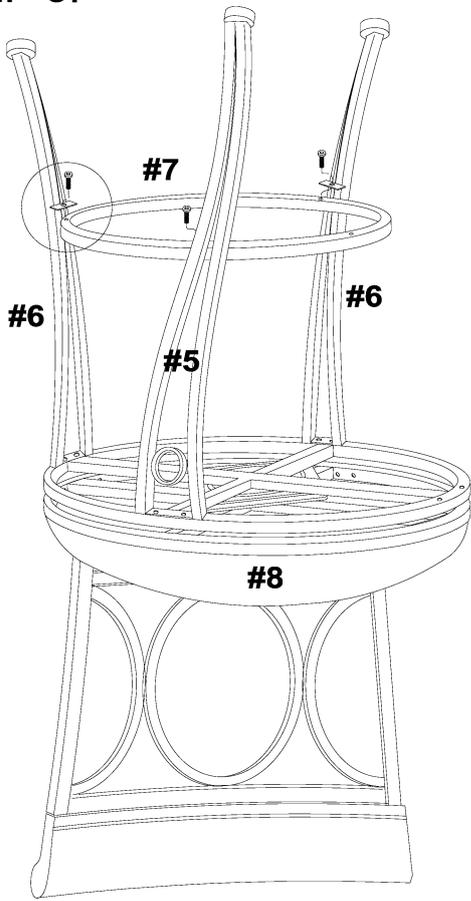

STEP 4.

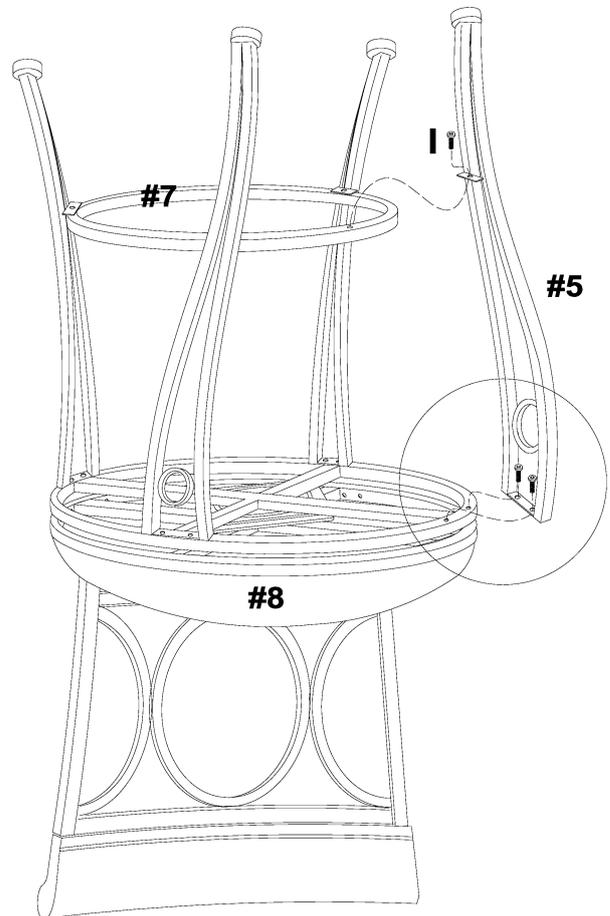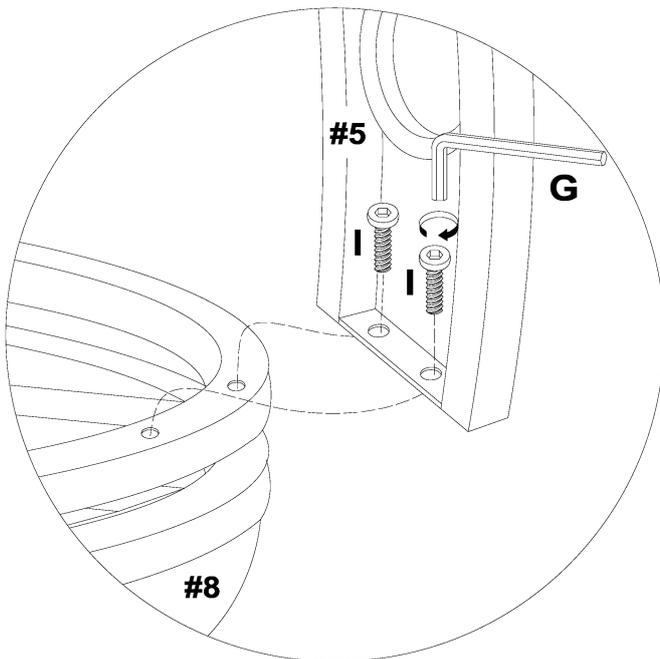

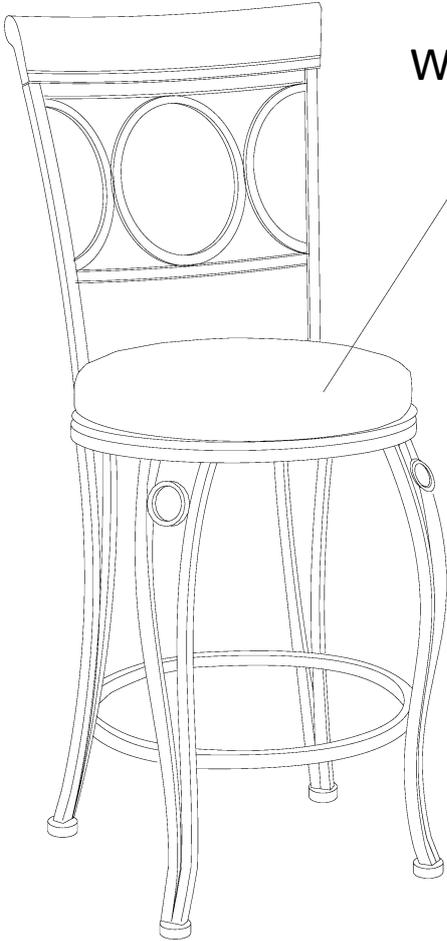

Weight Limit 275 LBS