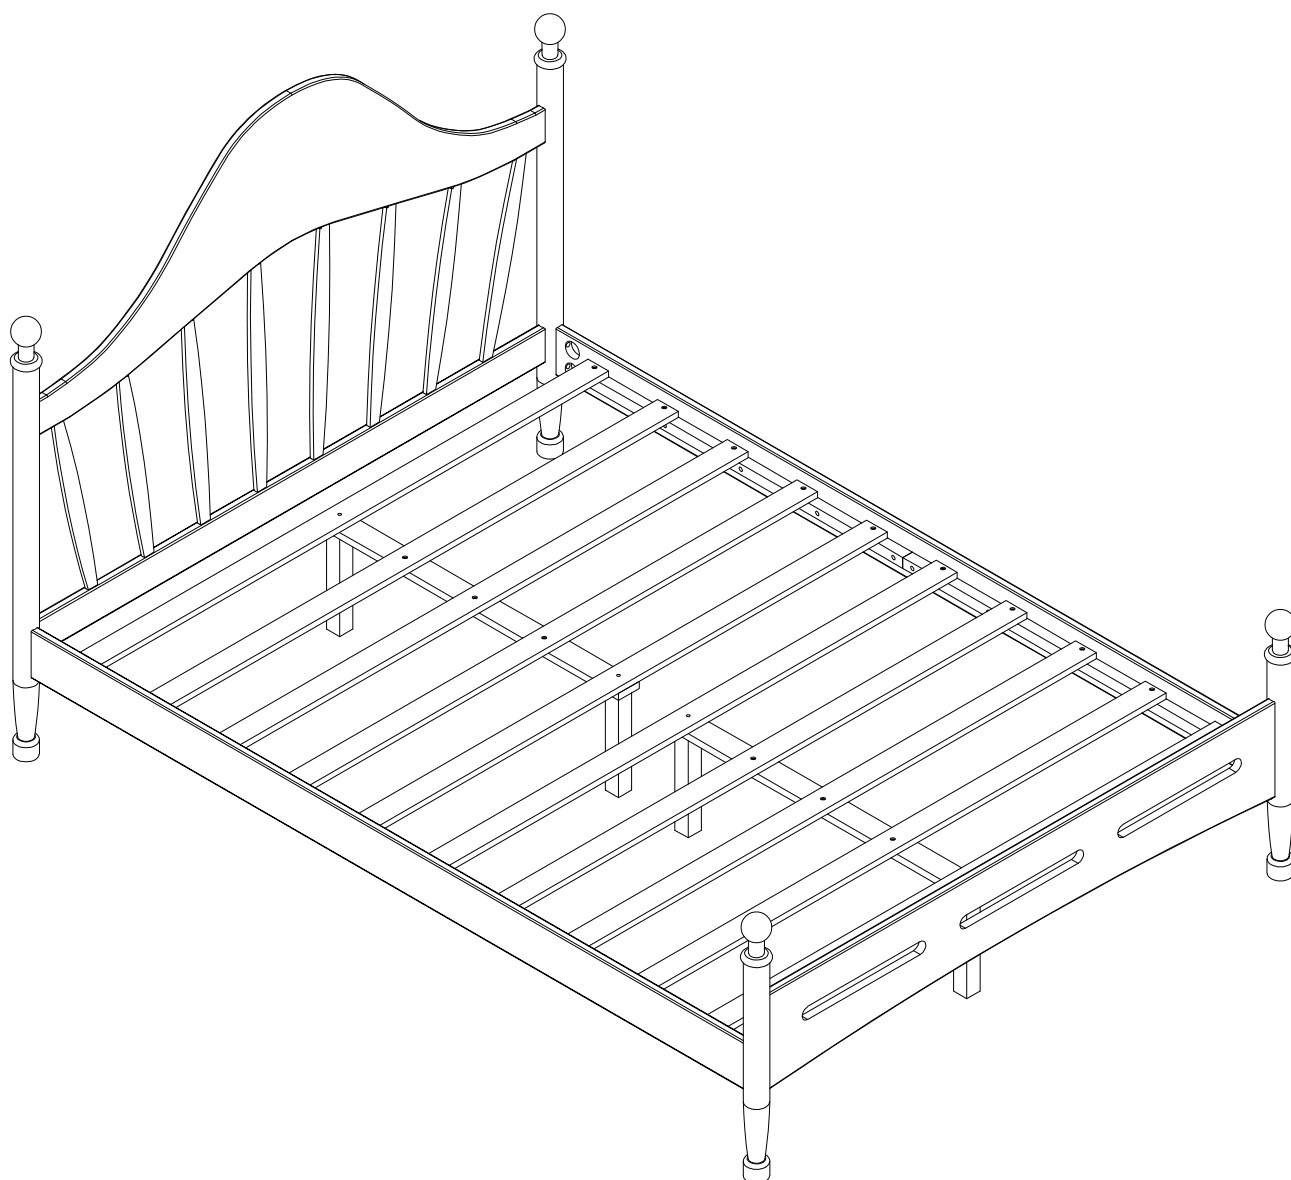
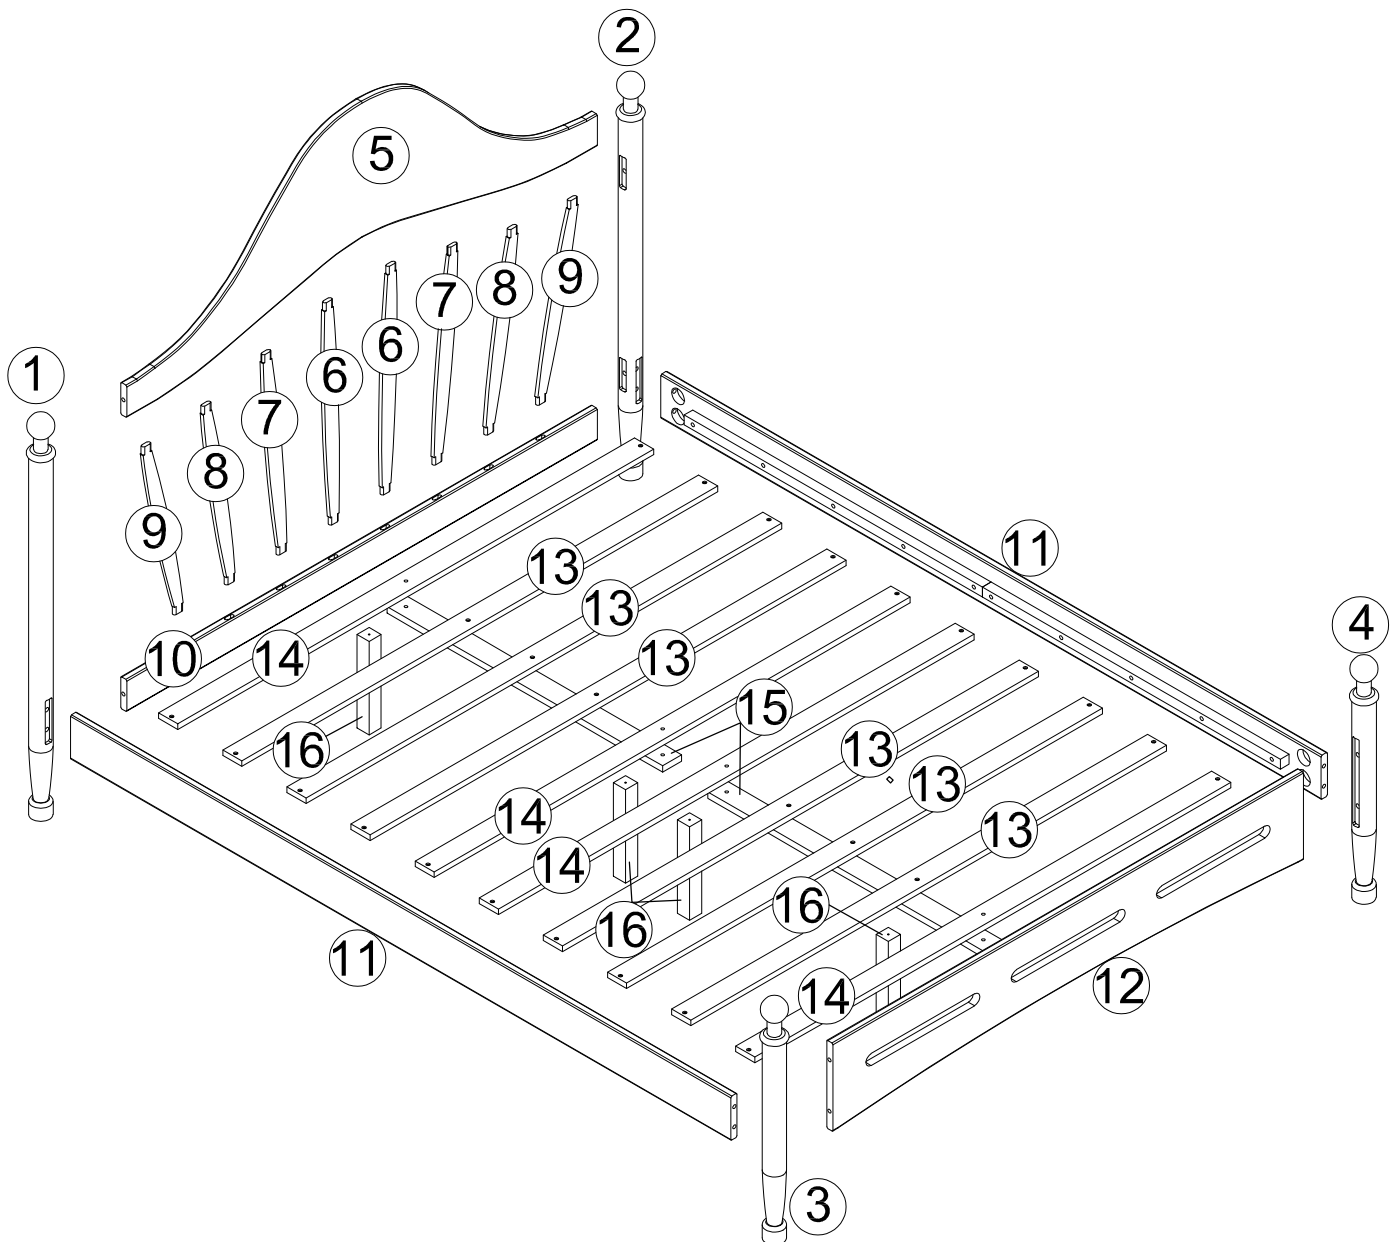


ASSEMBLY INSTRUCTIONS

ITEM CODE / RH00093








PRODUCT DETAILS



BOX : 1 OF 2



PARTS LIST

①		Q'ty :	1pc
③		Q'ty :	1pc
⑥		Q'ty :	2pcs
⑧		Q'ty :	2pcs
⑪		Q'ty :	2pcs
⑫		Q'ty :	4pcs



②		Q'ty :	1pc
④		Q'ty :	1pc
⑦		Q'ty :	2pcs
⑨		Q'ty :	2pcs
⑮		Q'ty :	2pcs

BOX : 2 OF 2

⑤		Q'ty :	1pc
⑫		Q'ty :	1pc
⑭		Q'ty :	4pcs

⑩		Q'ty :	1pc
⑬		Q'ty :	6pcs

HARWAER LIST

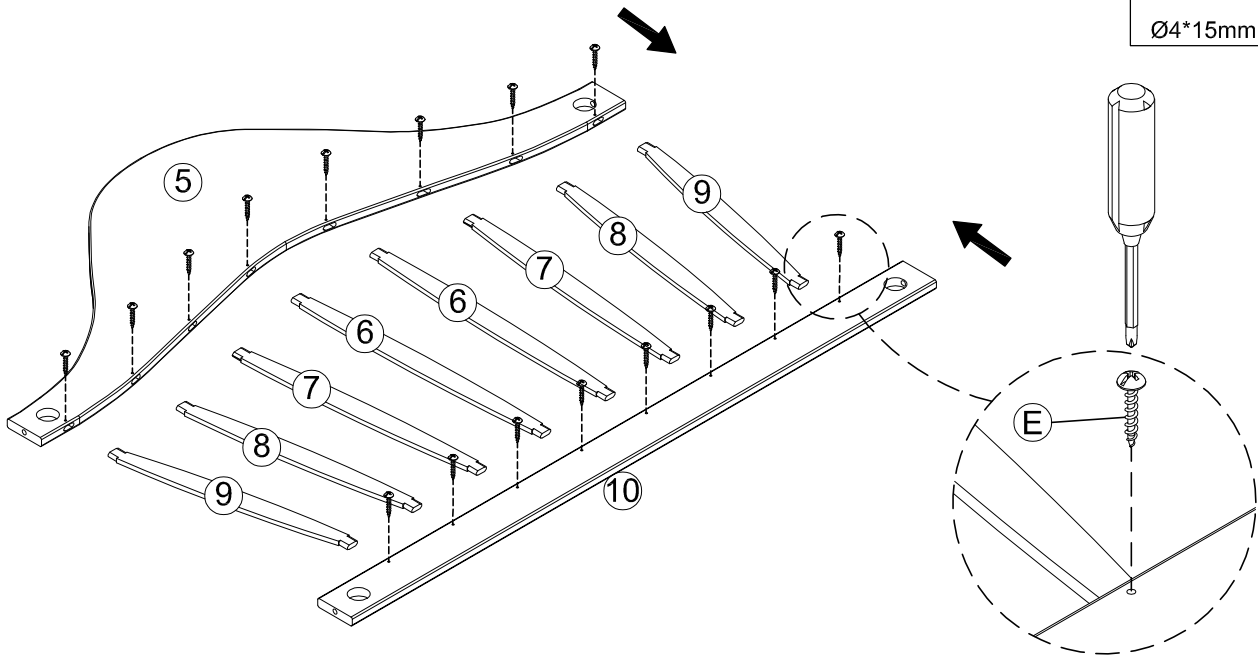
Ⓐ	 Insert nut Ø5/16*70mm	16 pcs
Ⓑ	 Hex nut Ø5/16*6mm	16 pcs
Ⓒ	 Half moon washer Ø5/16*7mm	16 pcs
Ⓓ	 Wood screws Ø4*30mm	20 pcs
Ⓔ	 Wood screws Ø4*15mm	16 pcs
Ⓕ	 Open wrench 90 x 12mm	1 pc
Ⓖ	 Allen key K4	1 pc
Ⓗ	 Bolt Ø1/4 x 80mm	4 pcs
Ⓘ	 Leveler Ø4*25mm	4 pcs
Ⓙ	 Wood screws Ø4*25mm	6 pcs



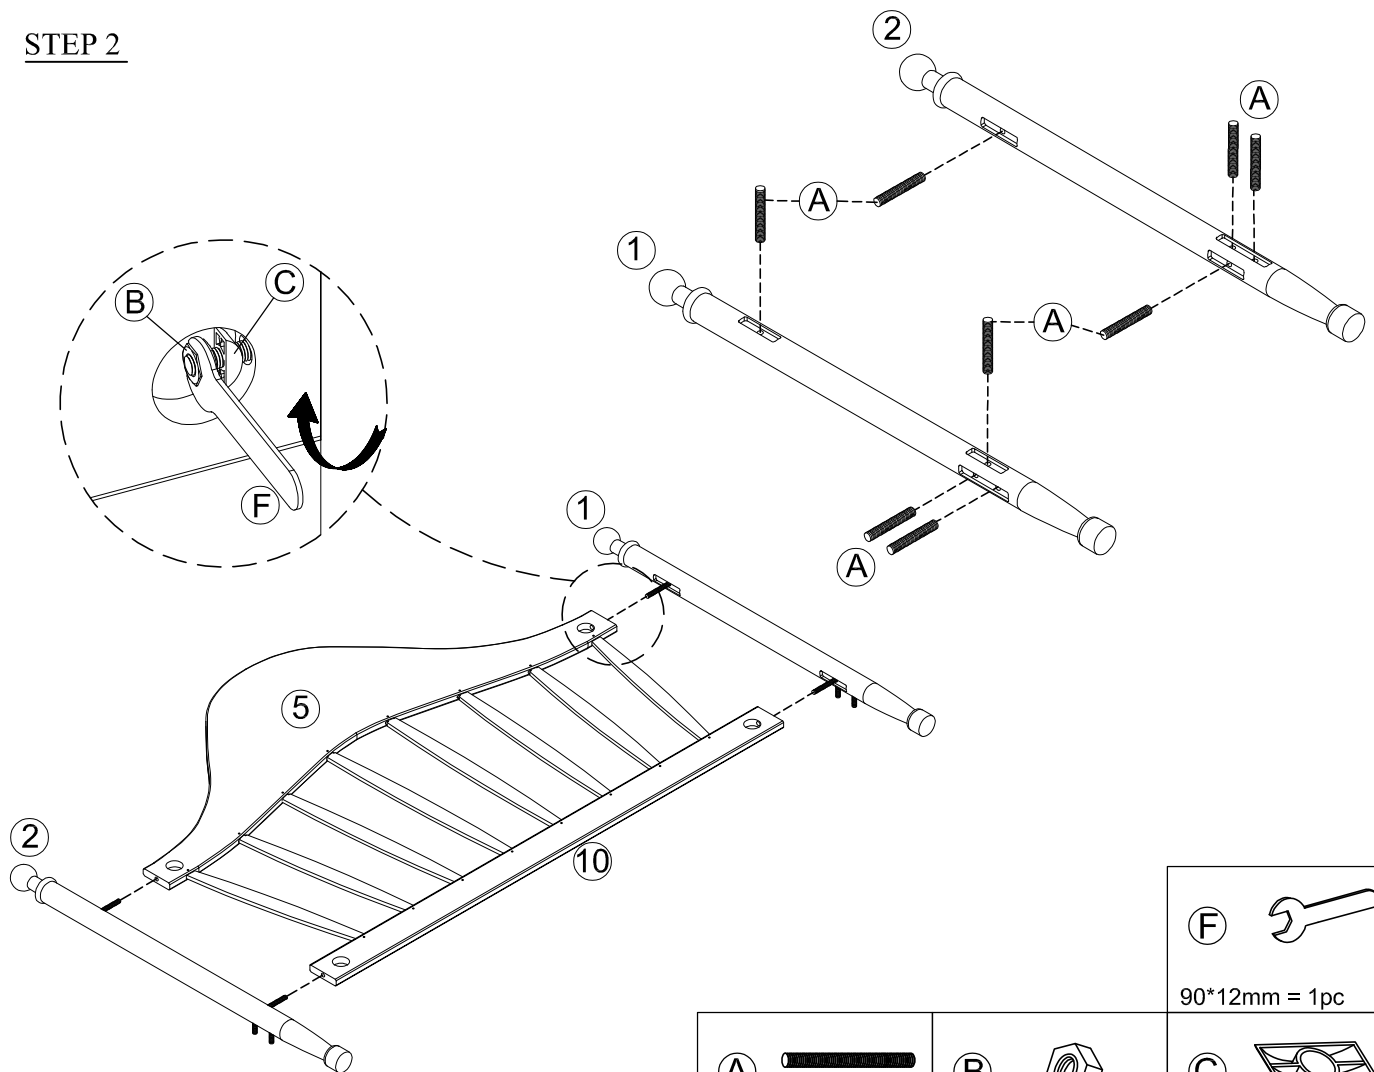
Assembly Tools Required (Not Included)

STEP 1

(E) 
Ø4*15mm = 16pcs



STEP 2



(F) 
90*12mm = 1pc

(A) 
Ø5/16*70mm = 8pcs

(B) 
Ø5/16*6mm = 4pcs

(C) 
Ø5/16*7mm = 4pcs

STEP 3

A



Ø5/16*70mm = 8pcs

B



Ø5/16*6mm = 4pcs

C

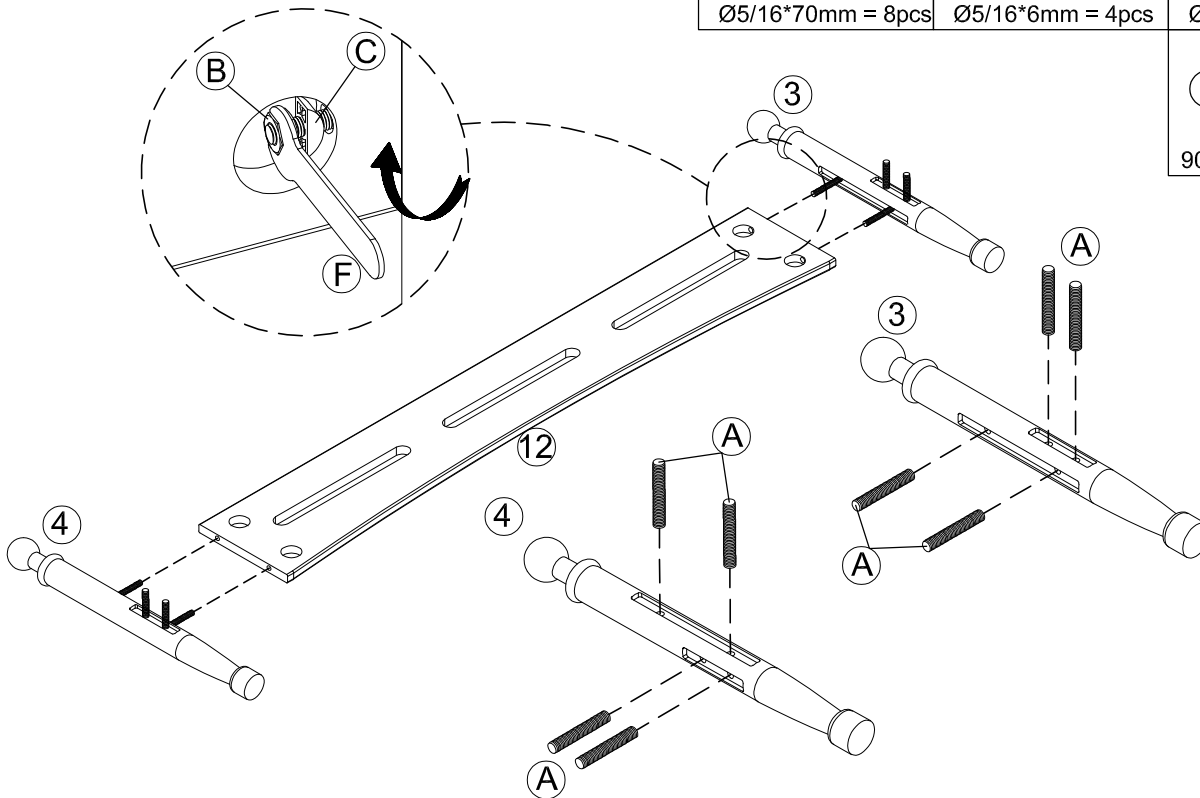


Ø5/16*7mm = 4pcs

F



90*12mm = 1pc



STEP 4

F



90*12mm = 1pc

B

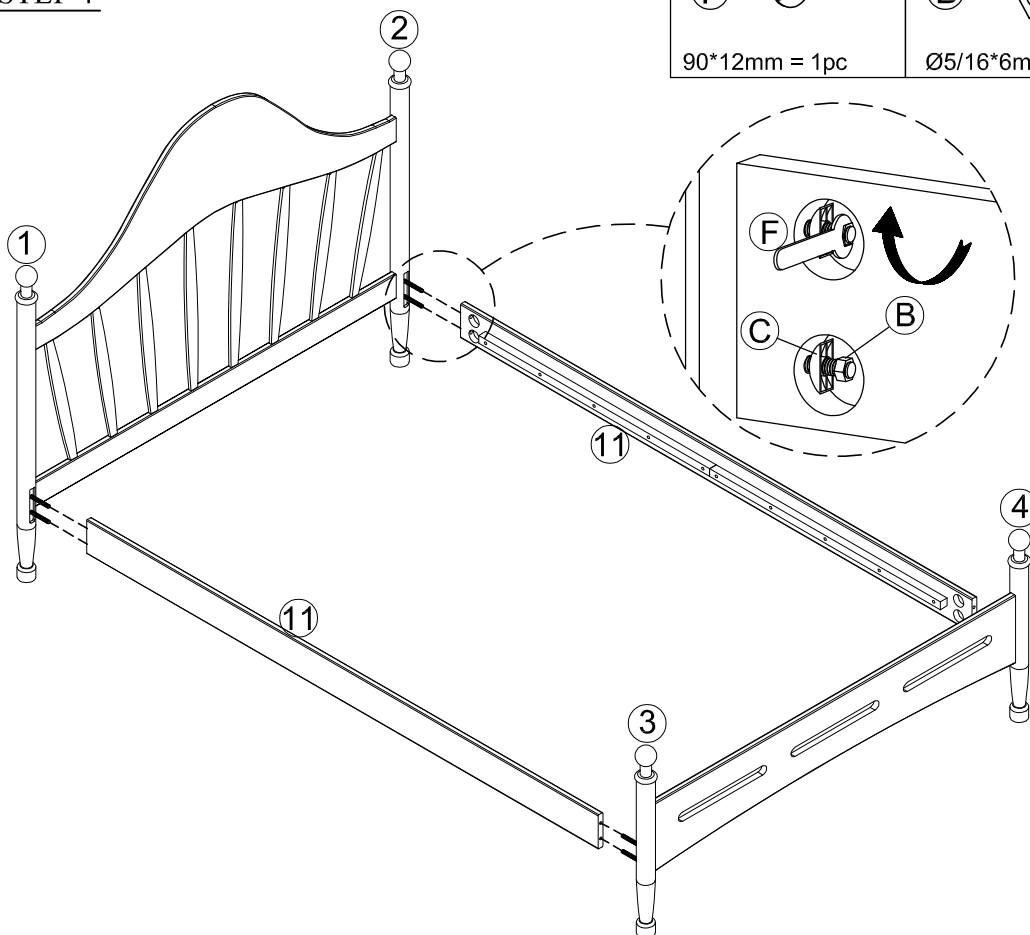


Ø5/16*6mm = 8pcs

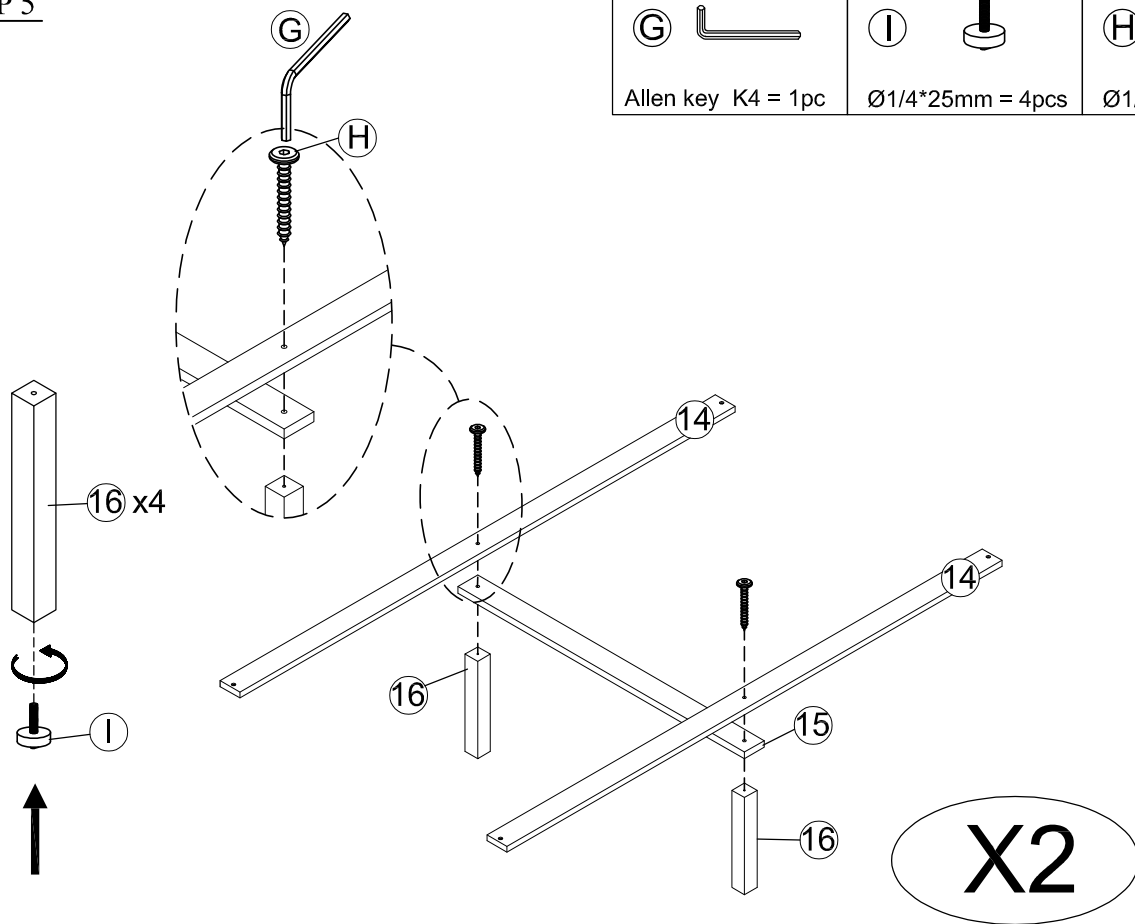
C



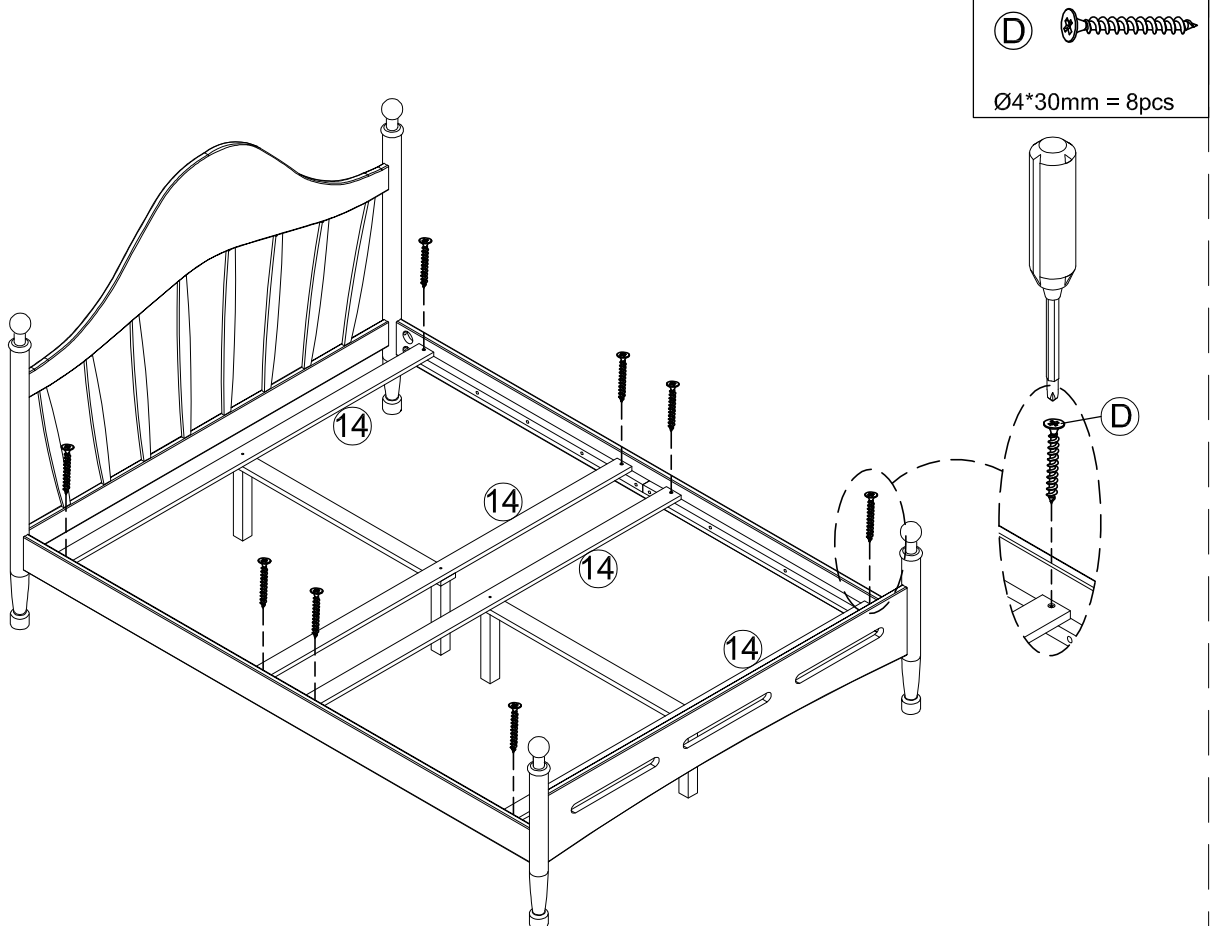
Ø5/16*7mm = 8pcs



STEP 5



STEP 6



STEP 7

J



Ø4*25mm = 6pcs

D



Ø4*30mm = 12pcs

