

Twin Slipcovered Headboard Instruction Sheet

Checklist of Items Included for Assembly:

- 1.) Frame: Panel (1)
- 2.) Phillips Head 2.1/2" Bed Frame Screws (4)
- 3.) Bed Frame Washers (4)
- 4.) Nuts (4)
- 5.) Padding Cover
- 6.) Foot Glides (2)
- 7.) Slipcover (sold separately)

Step 1

Prop your Headboard upright and align your Bed Frame (NOT Included) up to the holes. Use the Bed Frame Screws, Washers and Nuts to secure the Frame to the Headboard.


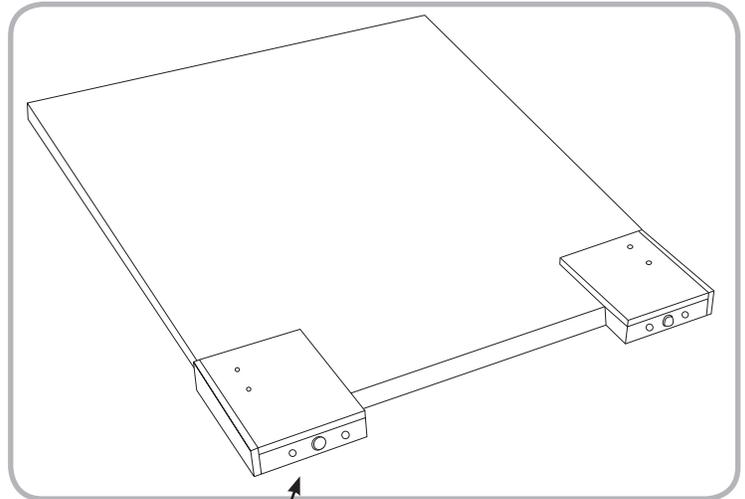


Illustration A

Step 2

Once your Headboard and Frame are secure, slip the padding cover over the top of the Headboard. Finally, slide your Slipcover (sold separately) over the padding.

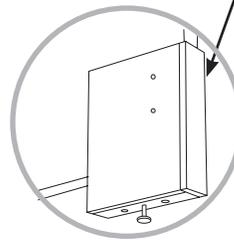

If your Headboard is sitting on an uneven surface, use the Foot Glides provided to adjust the height of your Headboard so that it is even.

