




# 1.STEP

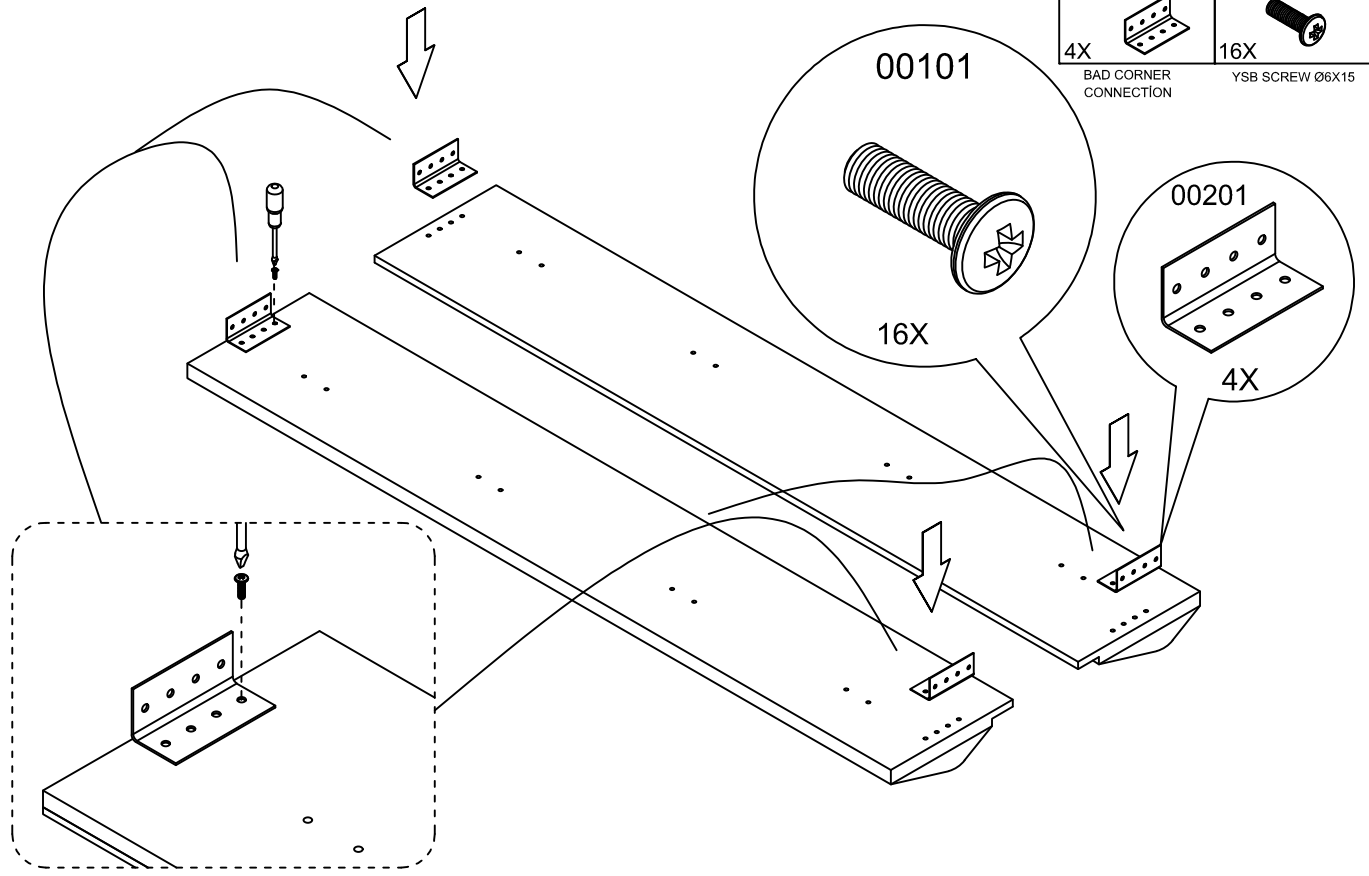


# 2.STEP

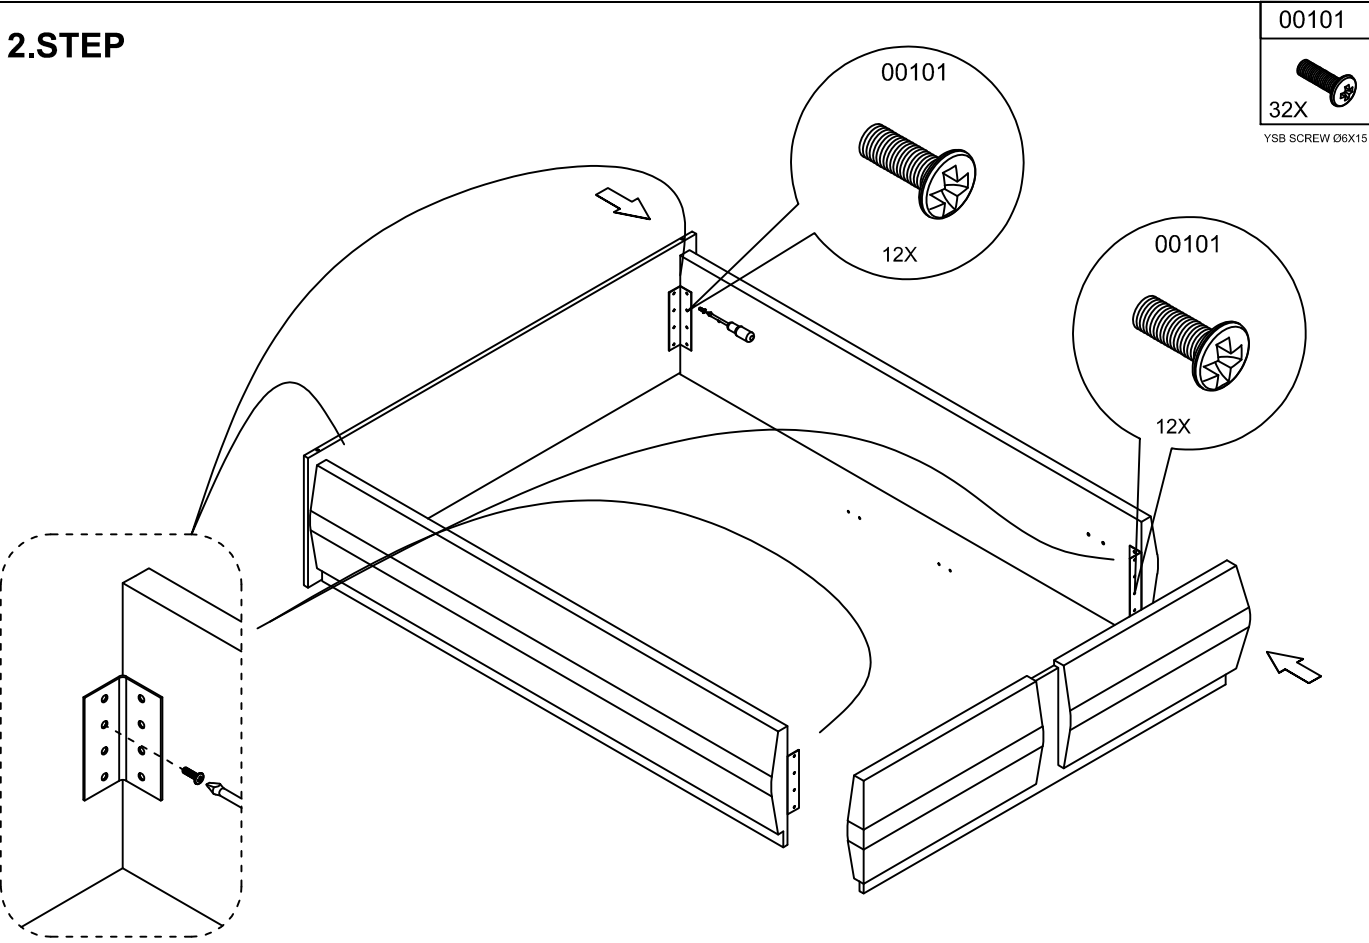

### 3.STEP

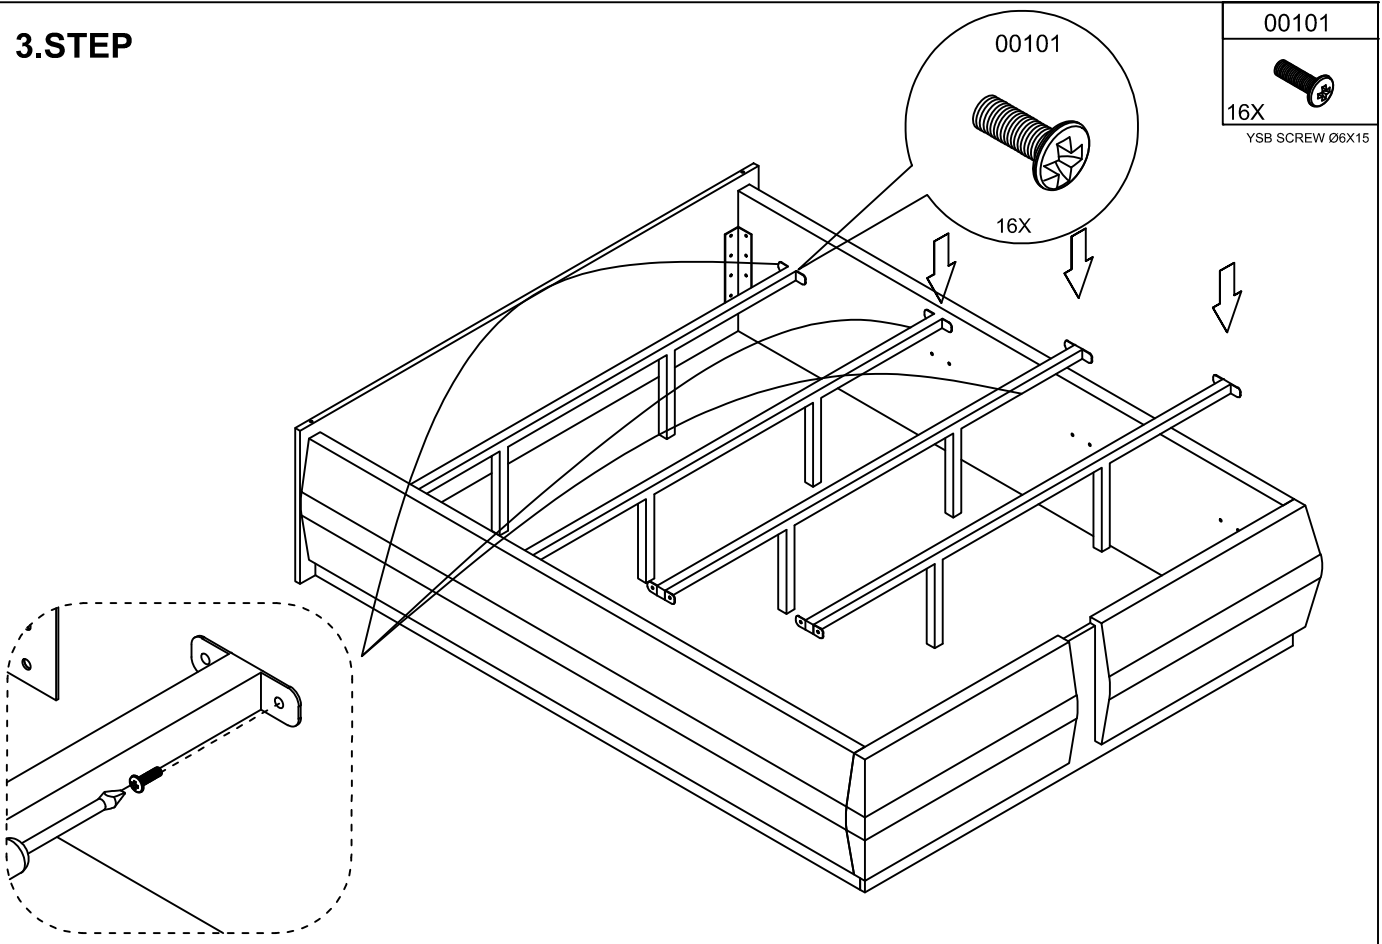

### 4.STEP

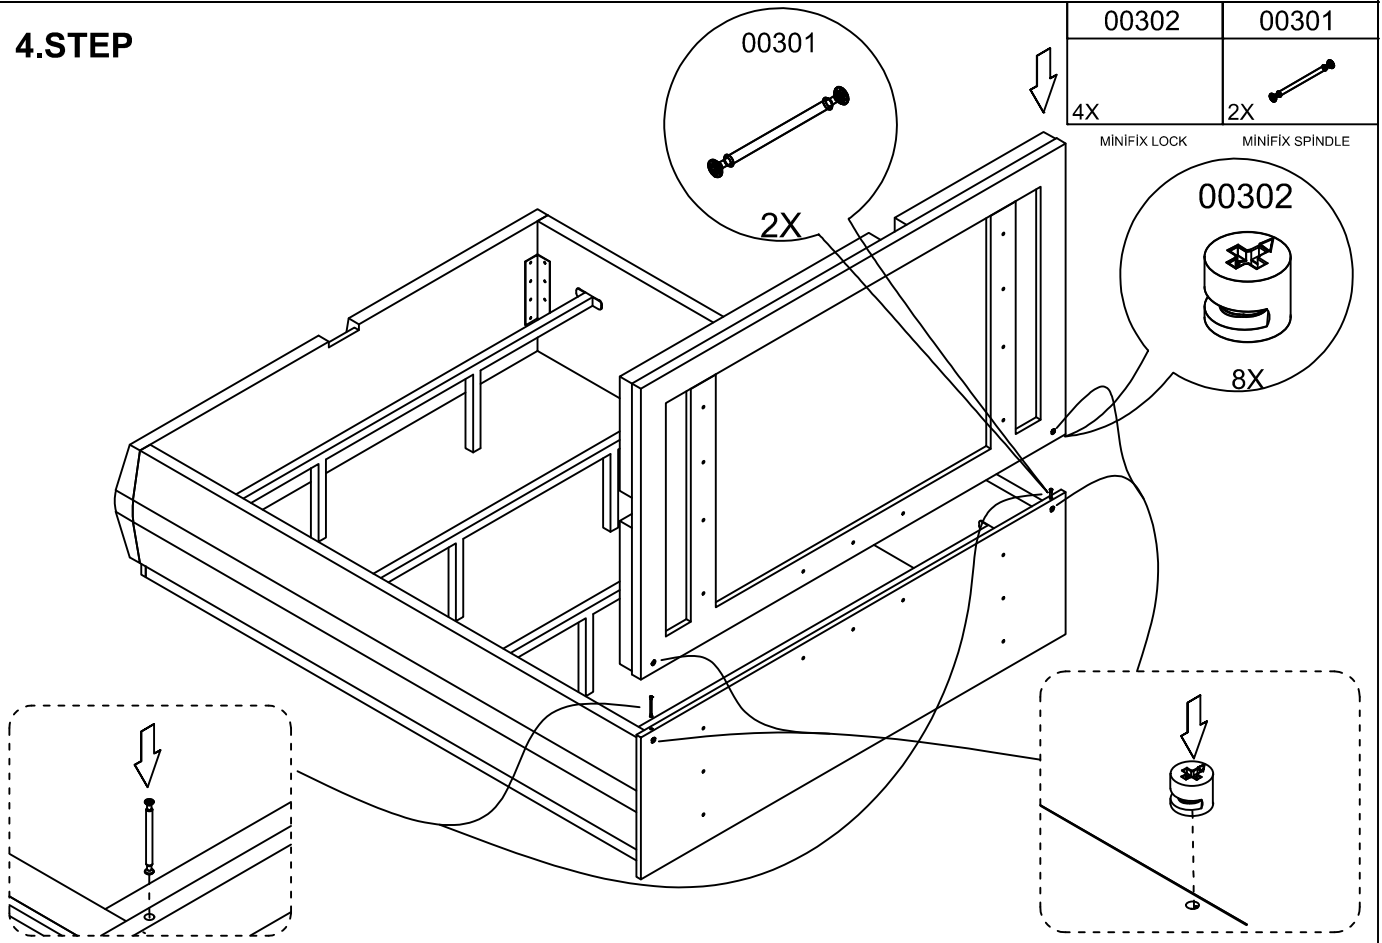


**5.STEP**

00102




20X

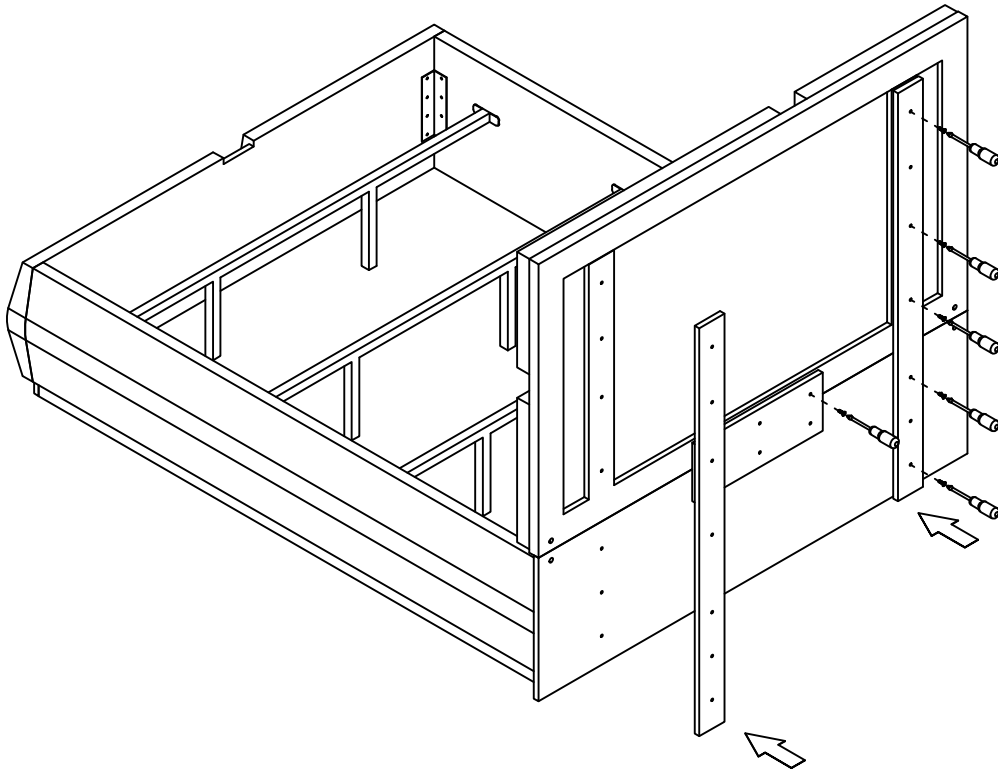

YSB SCREW Ø6X30


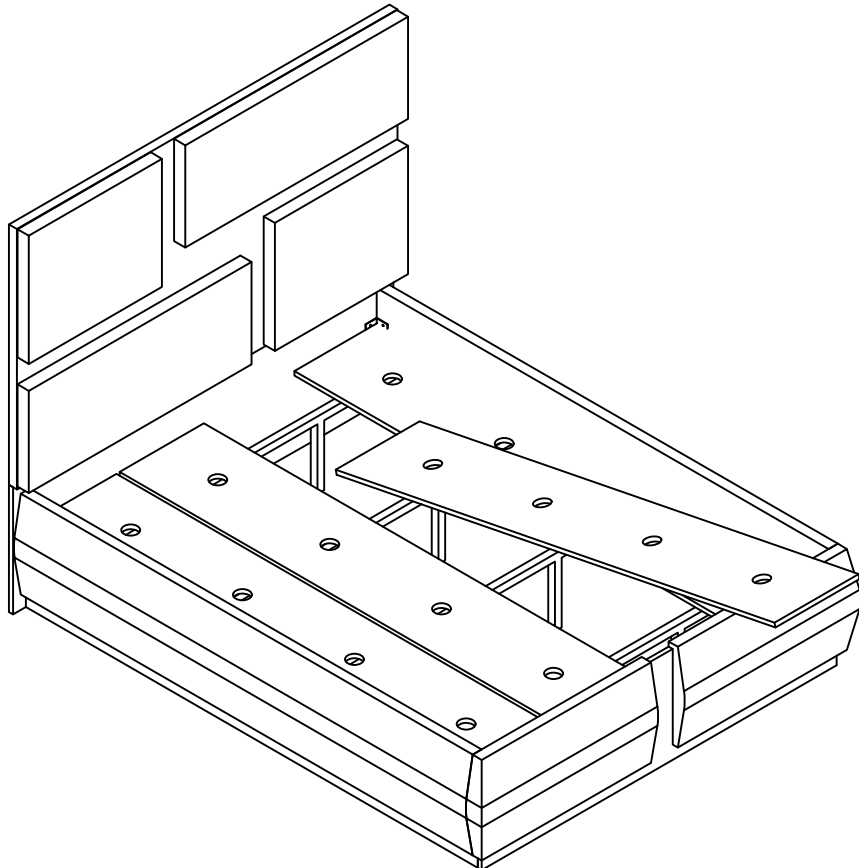


**6.STEP**






LORENZA / DRESSER MIRROR

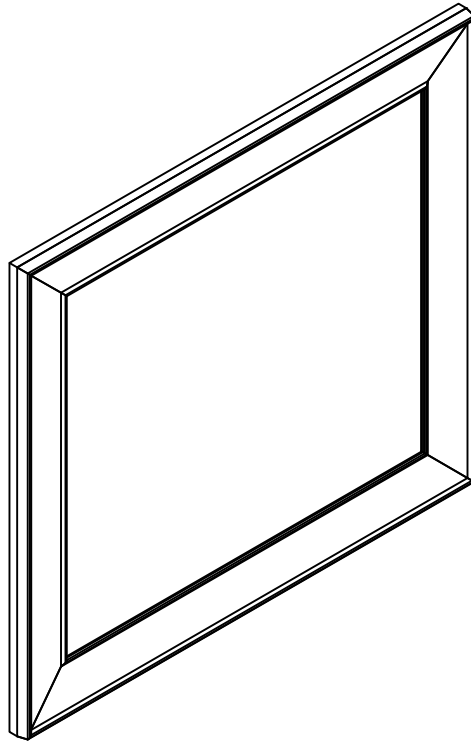 2X AYNA DEMİRİ	 8X YSB VIDA Ø6X20
--	---







1.STEP

 2X AYNA DEMİRİ	 8X YSB VIDA Ø6X20
--	---

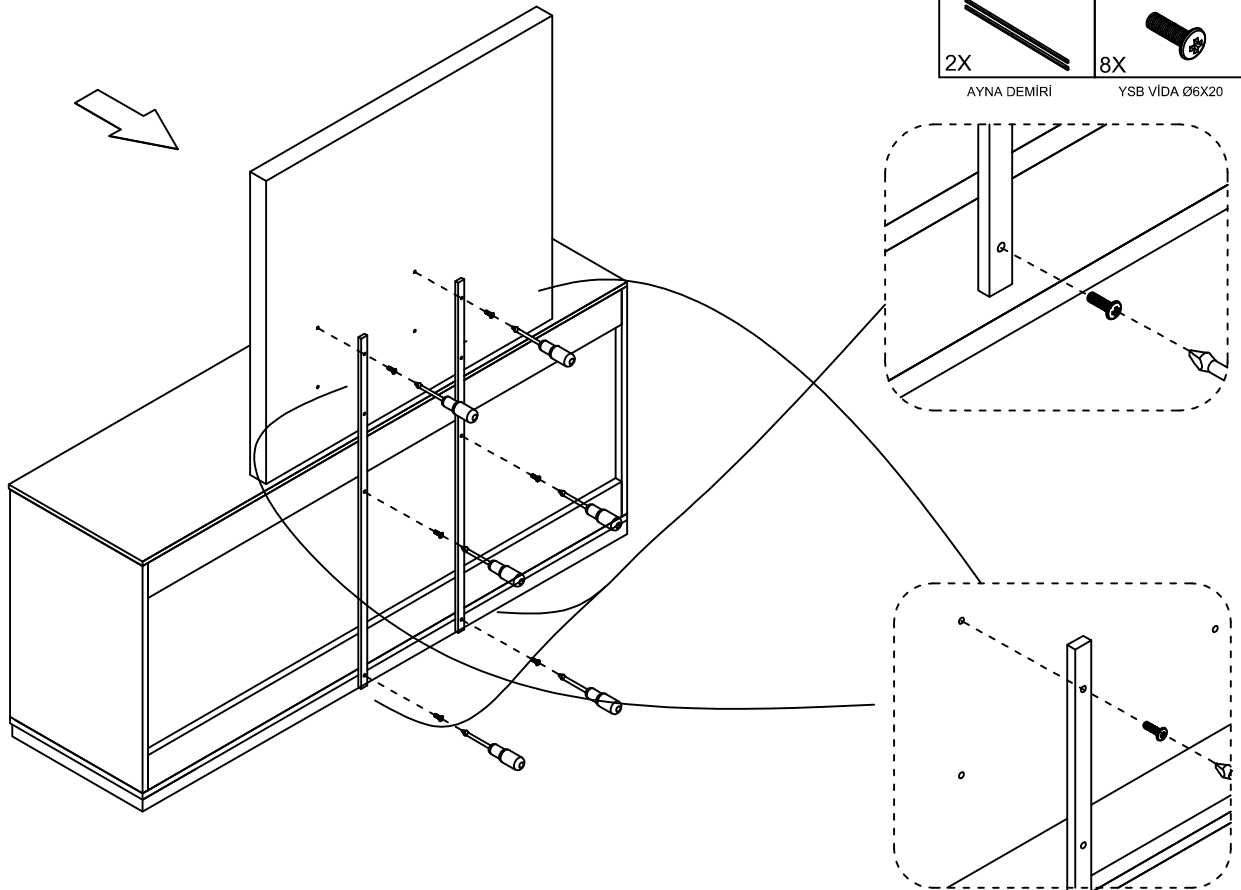

LORENZA / BED

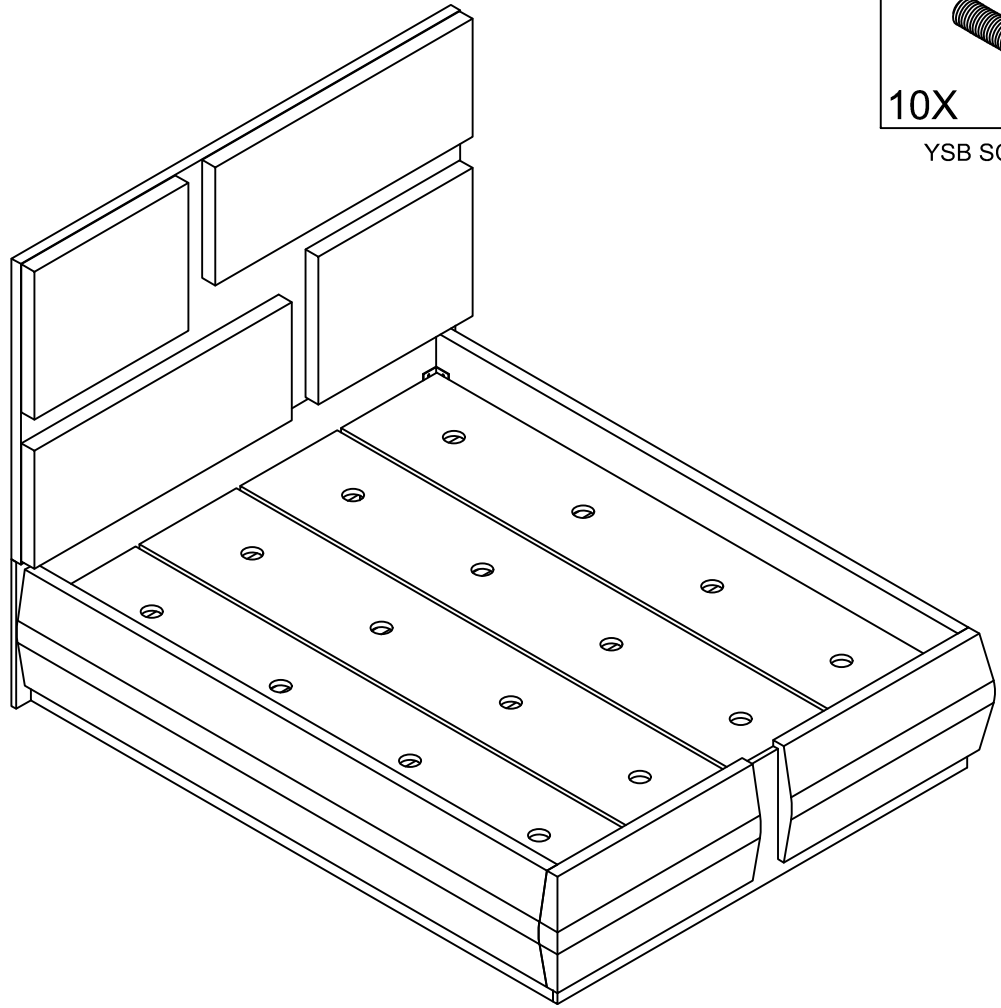



00102	00201	00101
		
10X	4X	48X

YBS SCREW Ø6X30


BAD CORNER CONNECTION

YBS SCREW Ø6X15

00302	00301
	
4X	2X

BAD CORNER CONNECTION

YBS SCREW Ø6X15



1X



2X