


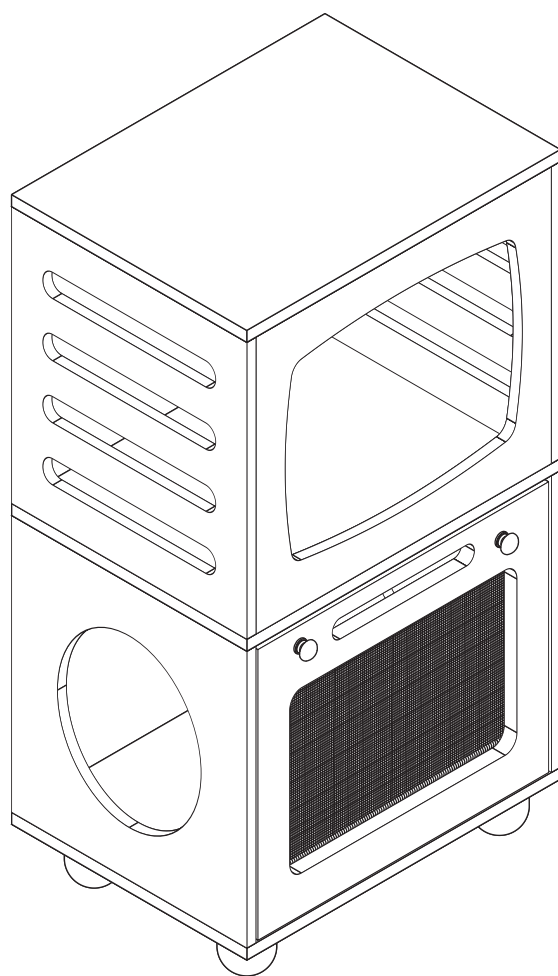


INSTRUCTION MANUAL

TOOLS REQUIRED




**PHILLIPS
SCREWDRIVER**

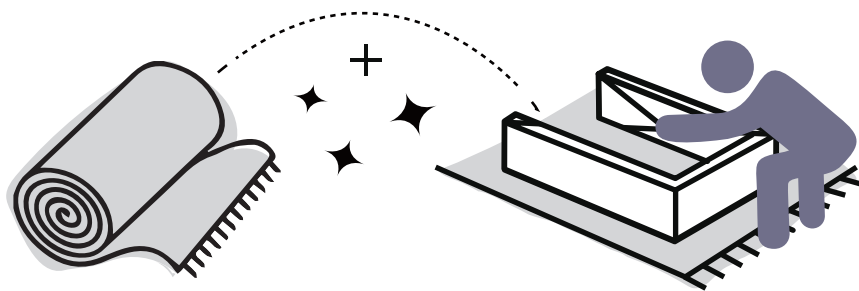

PARTS

1


Base plate

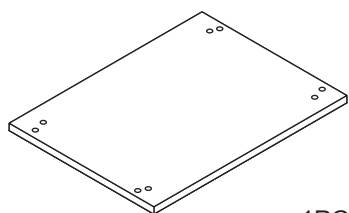

1PC

2


Lower left side panel

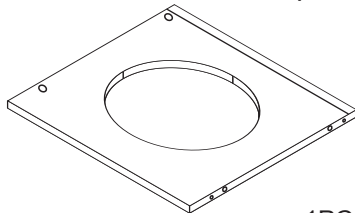

1PC

3


Lower right side panel

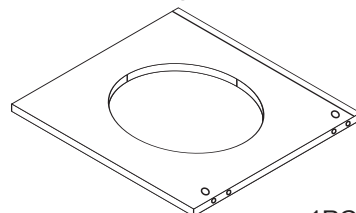

1PC

4


Laminate

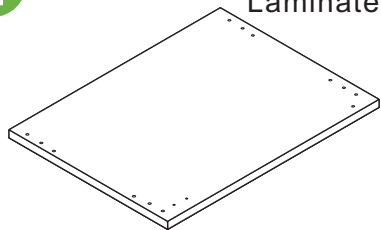

1PC

5


Upper left side panel

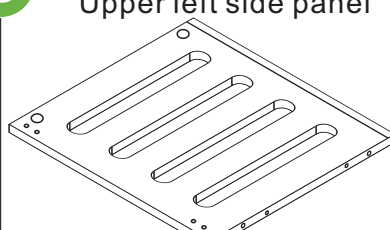

1PC

6


Upper door panel

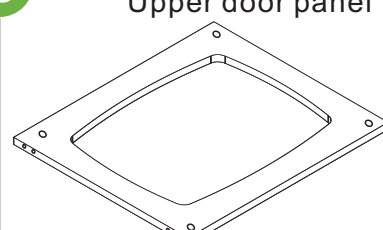

1PC

7


Upper right side panel

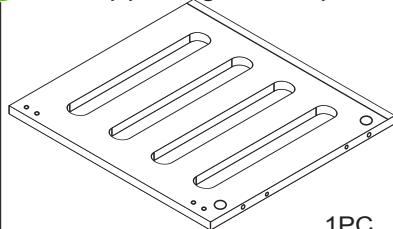

1PC

8


Top Panel

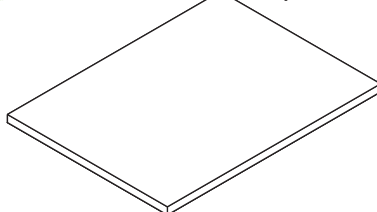

1PC

9


Lower door panel

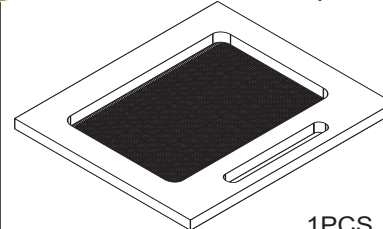

1PCS

10

Backplane

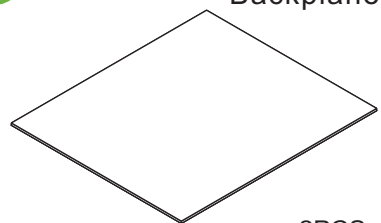

2PCS

11


Stool leg



4PCS

12

Cushion

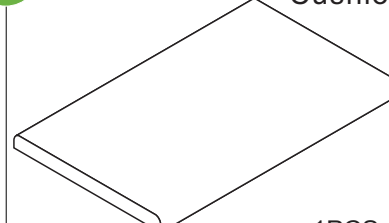


1PCS

HARDWARE

A

Cam bolt



12PCS

B

Cam lock



12PCS

C

Wooden dowel



M6X30mm

20PCS

D

Screw



M4X35mm

8PCS

E

Screw



M3x12mm

5PCS

F


Washers



1PCS

G


Door catchh



1PCS

H

Screw



M3X14mm

2PCS

I


Knob



2PCS

J

Screw




M4X25mm

2PCS

K

Pivot hinge




1PCS

! NOTICE


Please retain these instructions for future reference.

- Make sure that all screws are tightened. Check these regularly. Do not overtighten the screws!
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- If any parts are missing, broken, damaged, or worn, stop using this item until repairs are made and/or factory replacement parts are installed.
- When cleaning do not use any abrasive or caustic agents or hard brushes etc.
- Clean the surfaces with a damp, lint-free cloth and wipe with a dry cloth.
- Carefully remove all packing material and discard it sorted. Make sure that you do not accidentally throw away mounting material.
- Any question or problem, please contact us freely!

PRODUCT ASSEMBLY

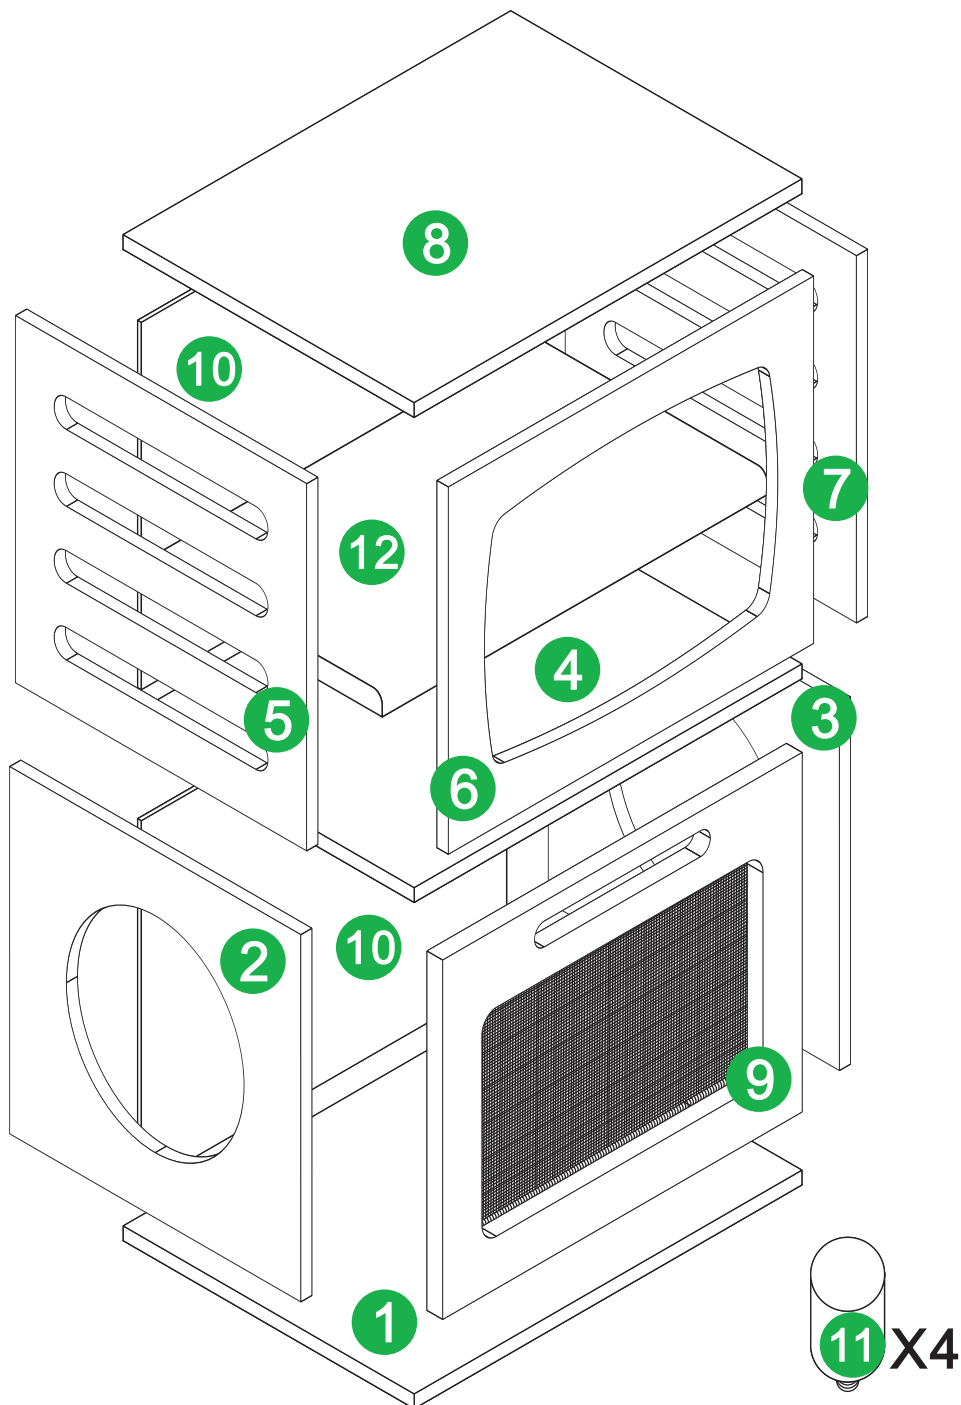


1

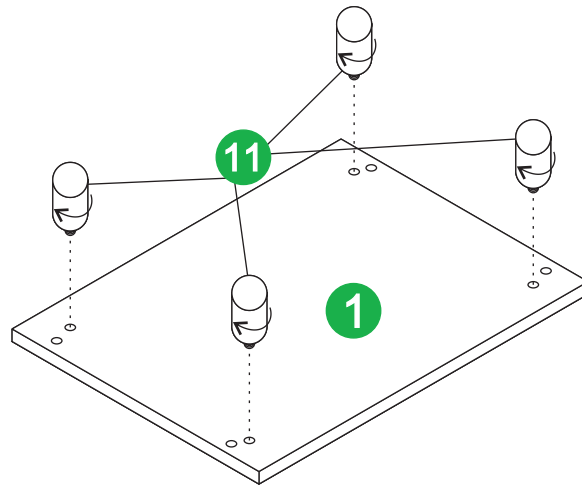

Insert four #11 legs into #1 base plate

2

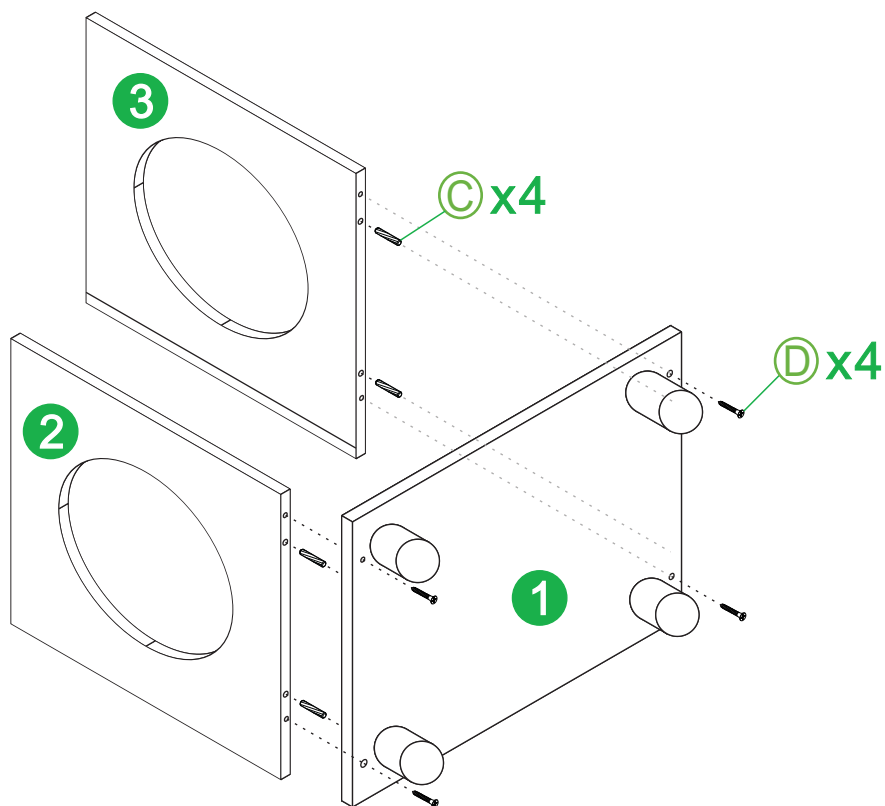


Insert four wooden dowels C into #1 Base Plate Connection #2 #3 Side Plate and secure with screws D.

 Cx4


 Dx4

3

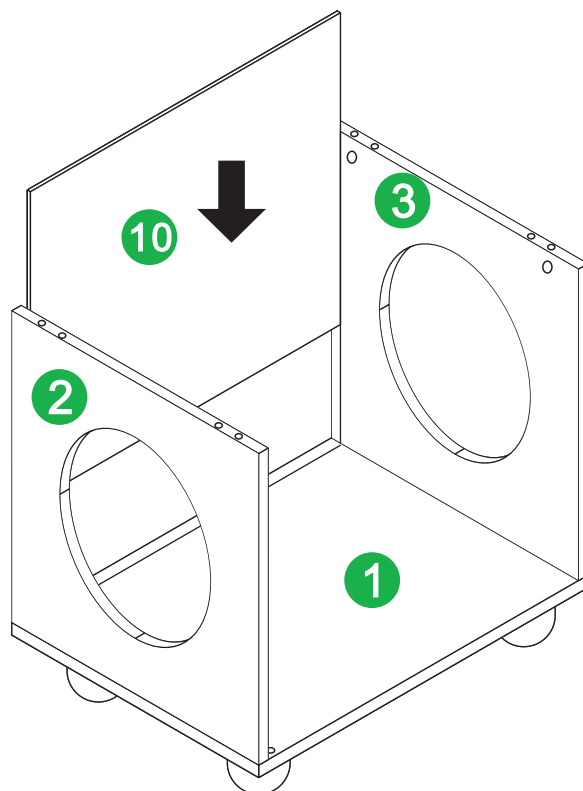


Insert backplane #10 as shown

4

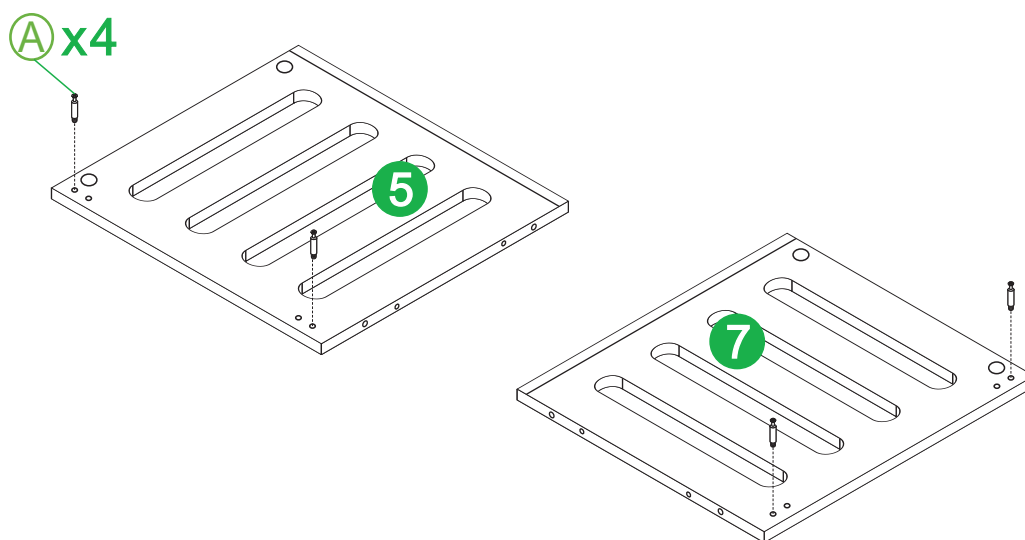


Insert four cam bolts A into the # 5 # 7 side panels, with two bolts per



Ax4

5

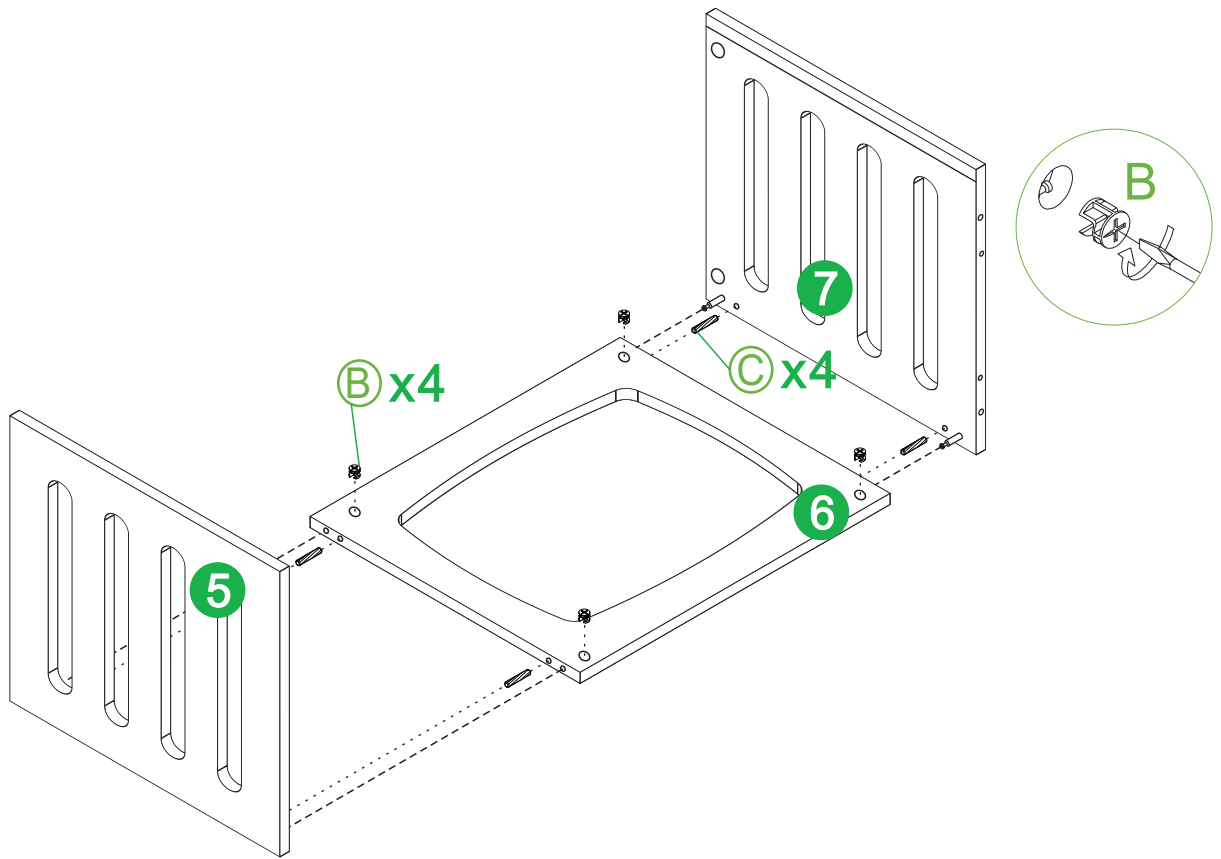

Insert four wooden dowels C into #6 door panel and attach #5#7 side panels, then secure with four cam locks B





Bx4



Cx4

6

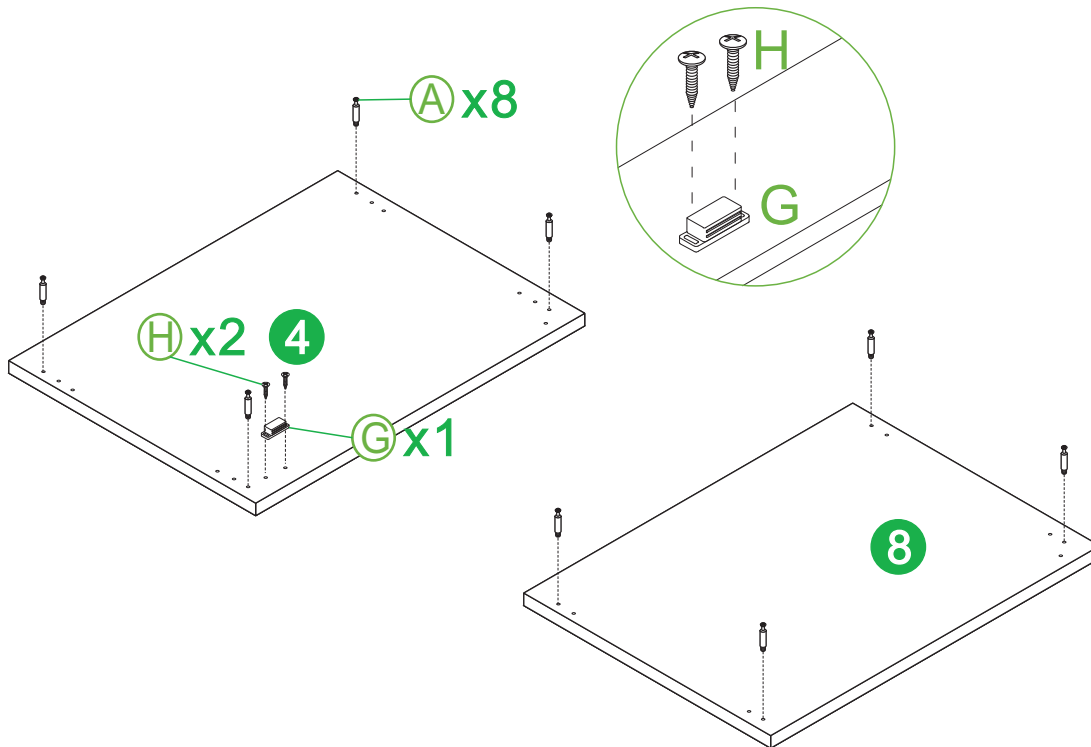

Ax8



Gx1




Hx2

Install eight cam bolts A to panels #4 #8, four bolts per panel

Install door clasp G to #4 ply and secure with two screws H.

7

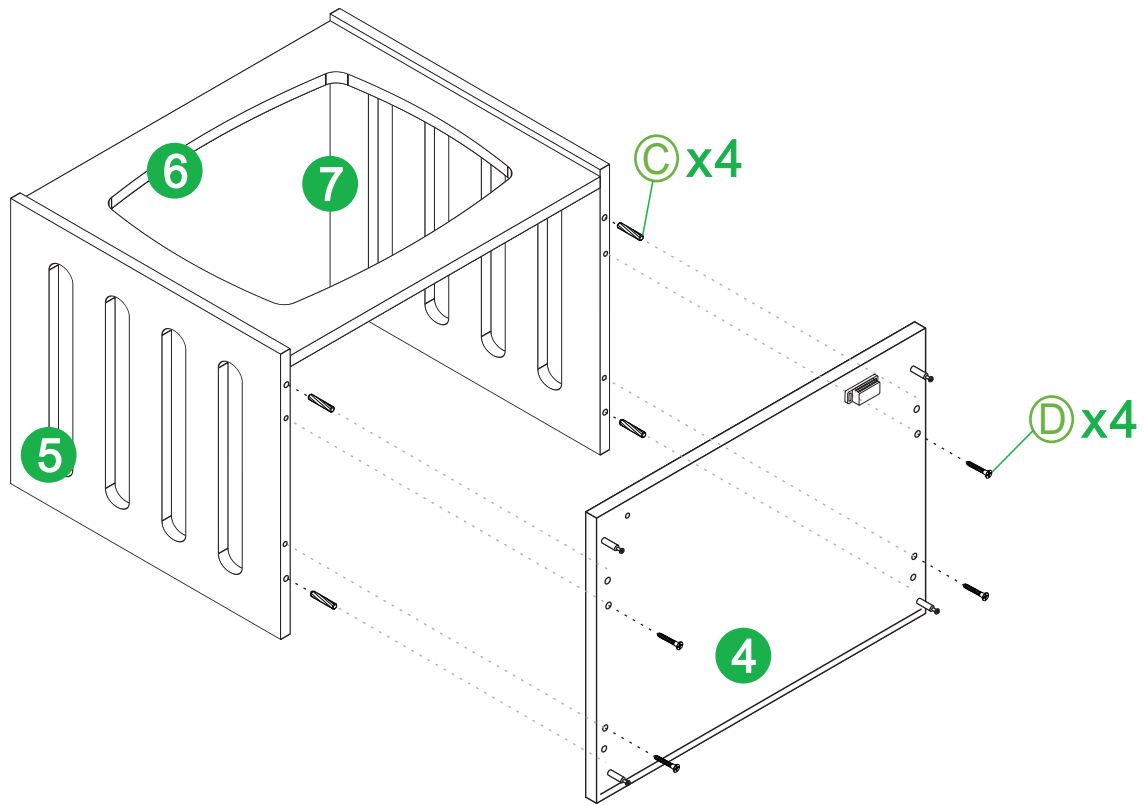


Insert the four wooden dowels C into the #5 frame connection #4 panel and then secure with screws D.

 Cx4

 Dx4

8

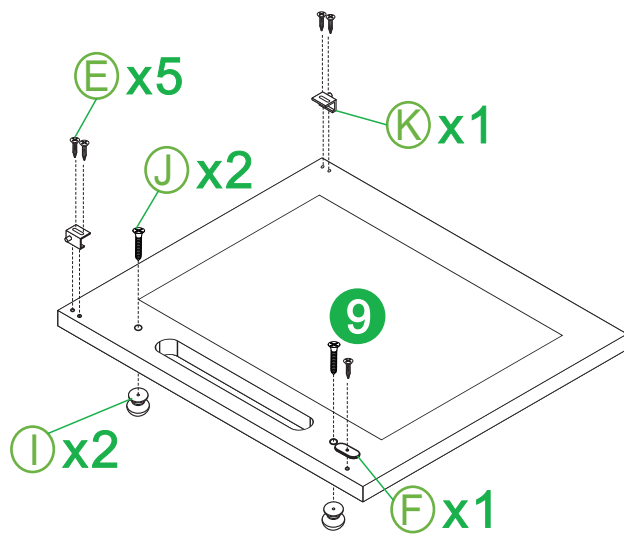

 Ex5


 Kx1

 Fx1

 Jx2

 Lx1

Attach bottom bracket K to #9 door panel with four screws E
Attach washer F to #9 door panel with screws E
Secure door knob L to #9 door panel with two screws J

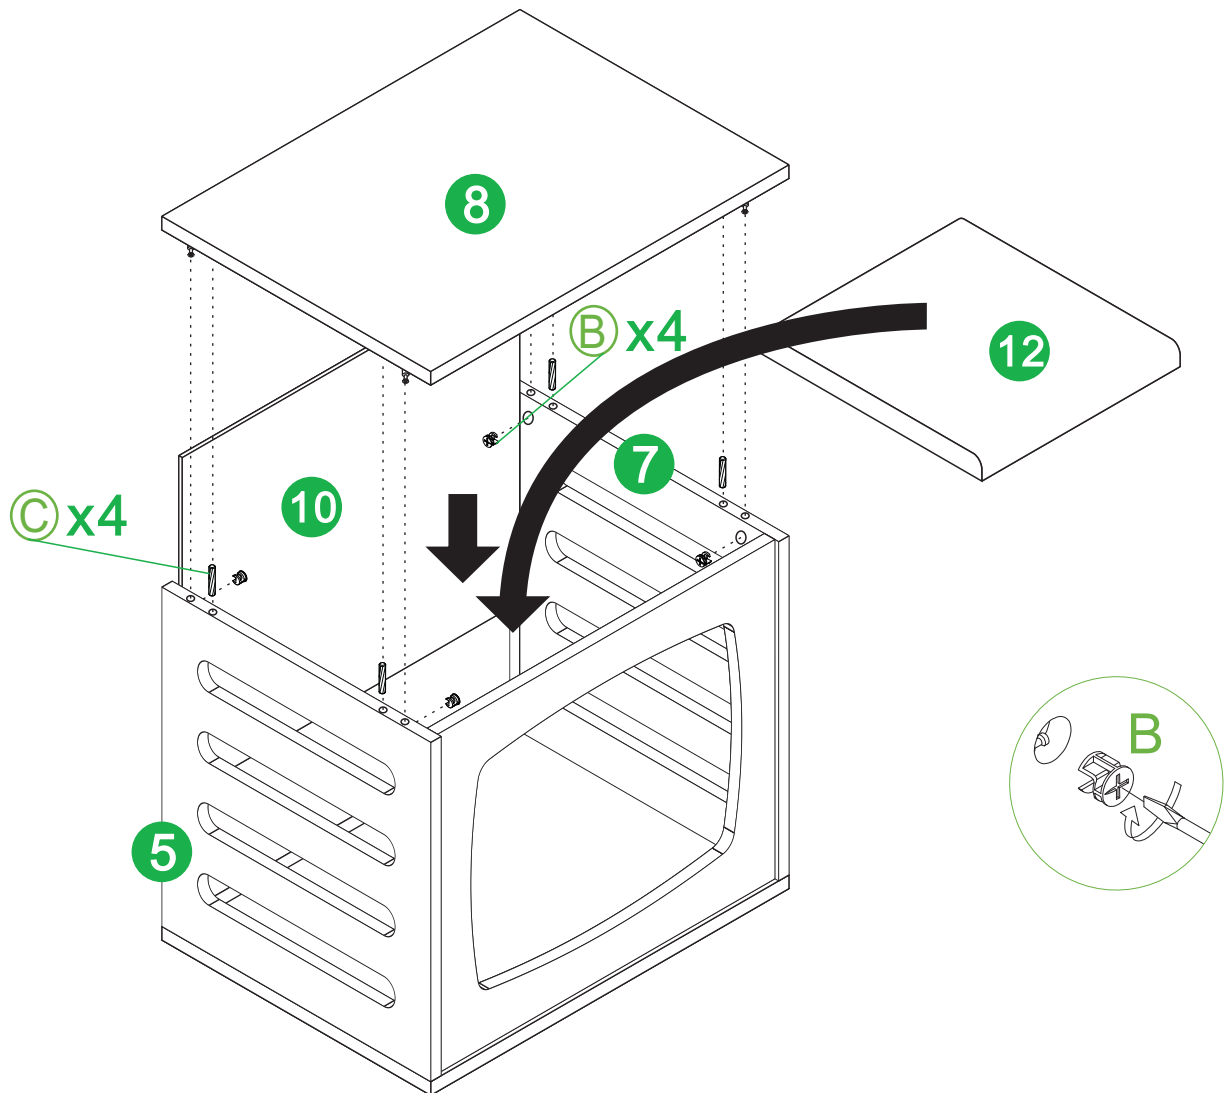


As shown,
First place the #12 seat cushion into the frame and install the four cam locks B.
Then insert the four wooden dowels C into the #5 frame to attach the #8 top plate.



Bx4



Cx4

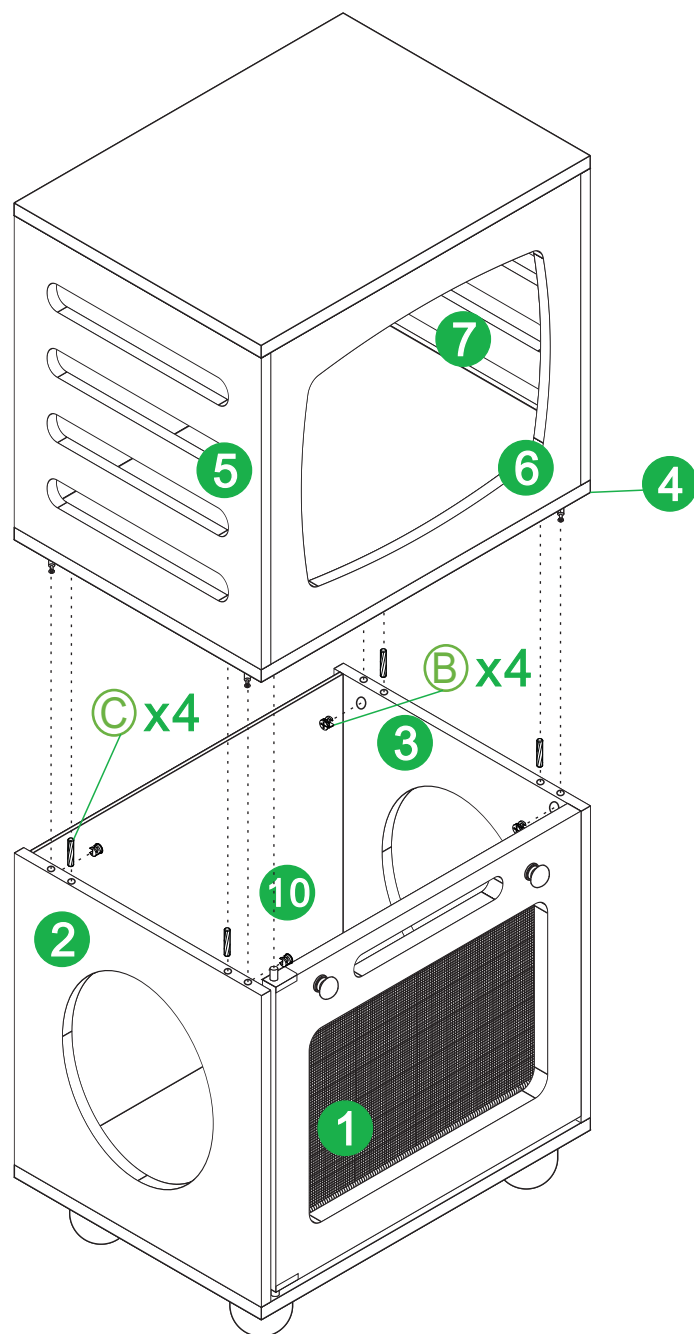

Install four cam locks B onto the # 2 # 3 side panels

Insert four wooden dowels Cs into #2#3 side panels and attach #5#7 frames



Bx4



Cx4

