



# Installation Instructions

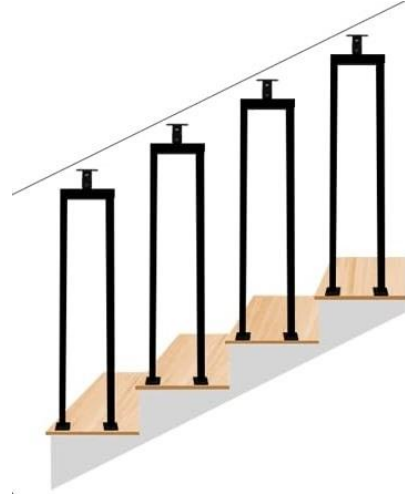

**Step1:** star at the top step and another one at the bottom step. Draw a straight line with a string at the top.

**Step 2:** Position the middle balusters, ensuring that the tops of all the balusters are aligned on the same straight line.

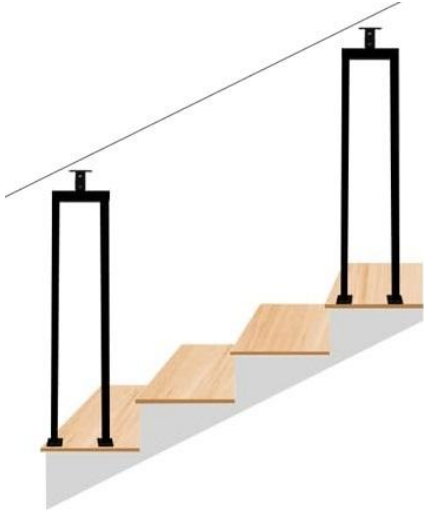

**Step3:** Securely install the posts using eight screws and anchors for each on the ground, making sure they're vertical. If the floor is uneven, please use a shim.

**Step 4:** Lock the accessories onto the armrest wooden board with screws



**Step5:** Connect the handrail and fence together with screws

**Step6:** installation is complete