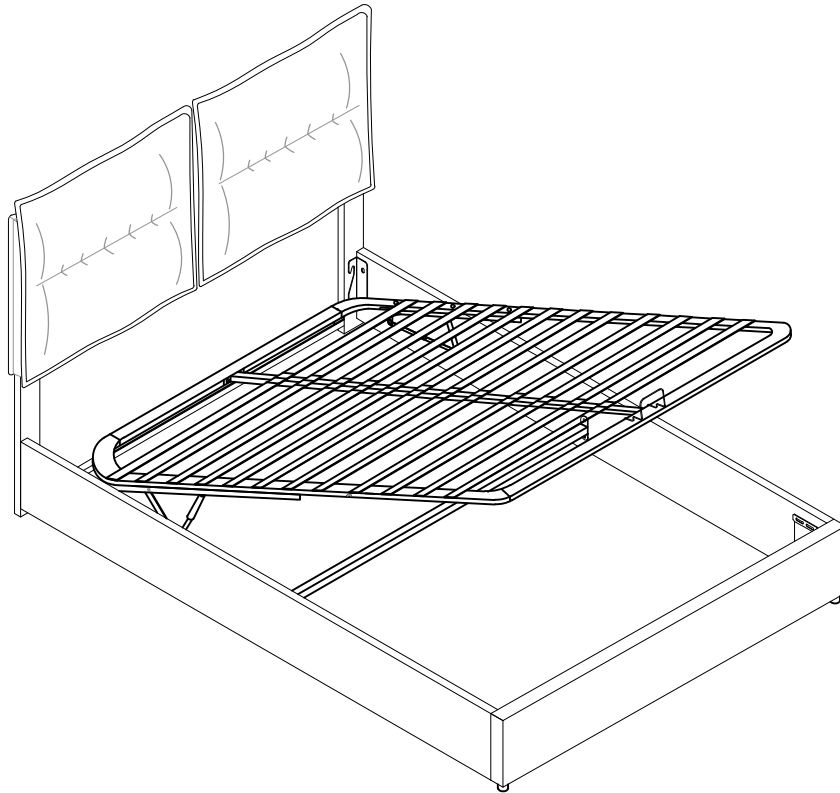
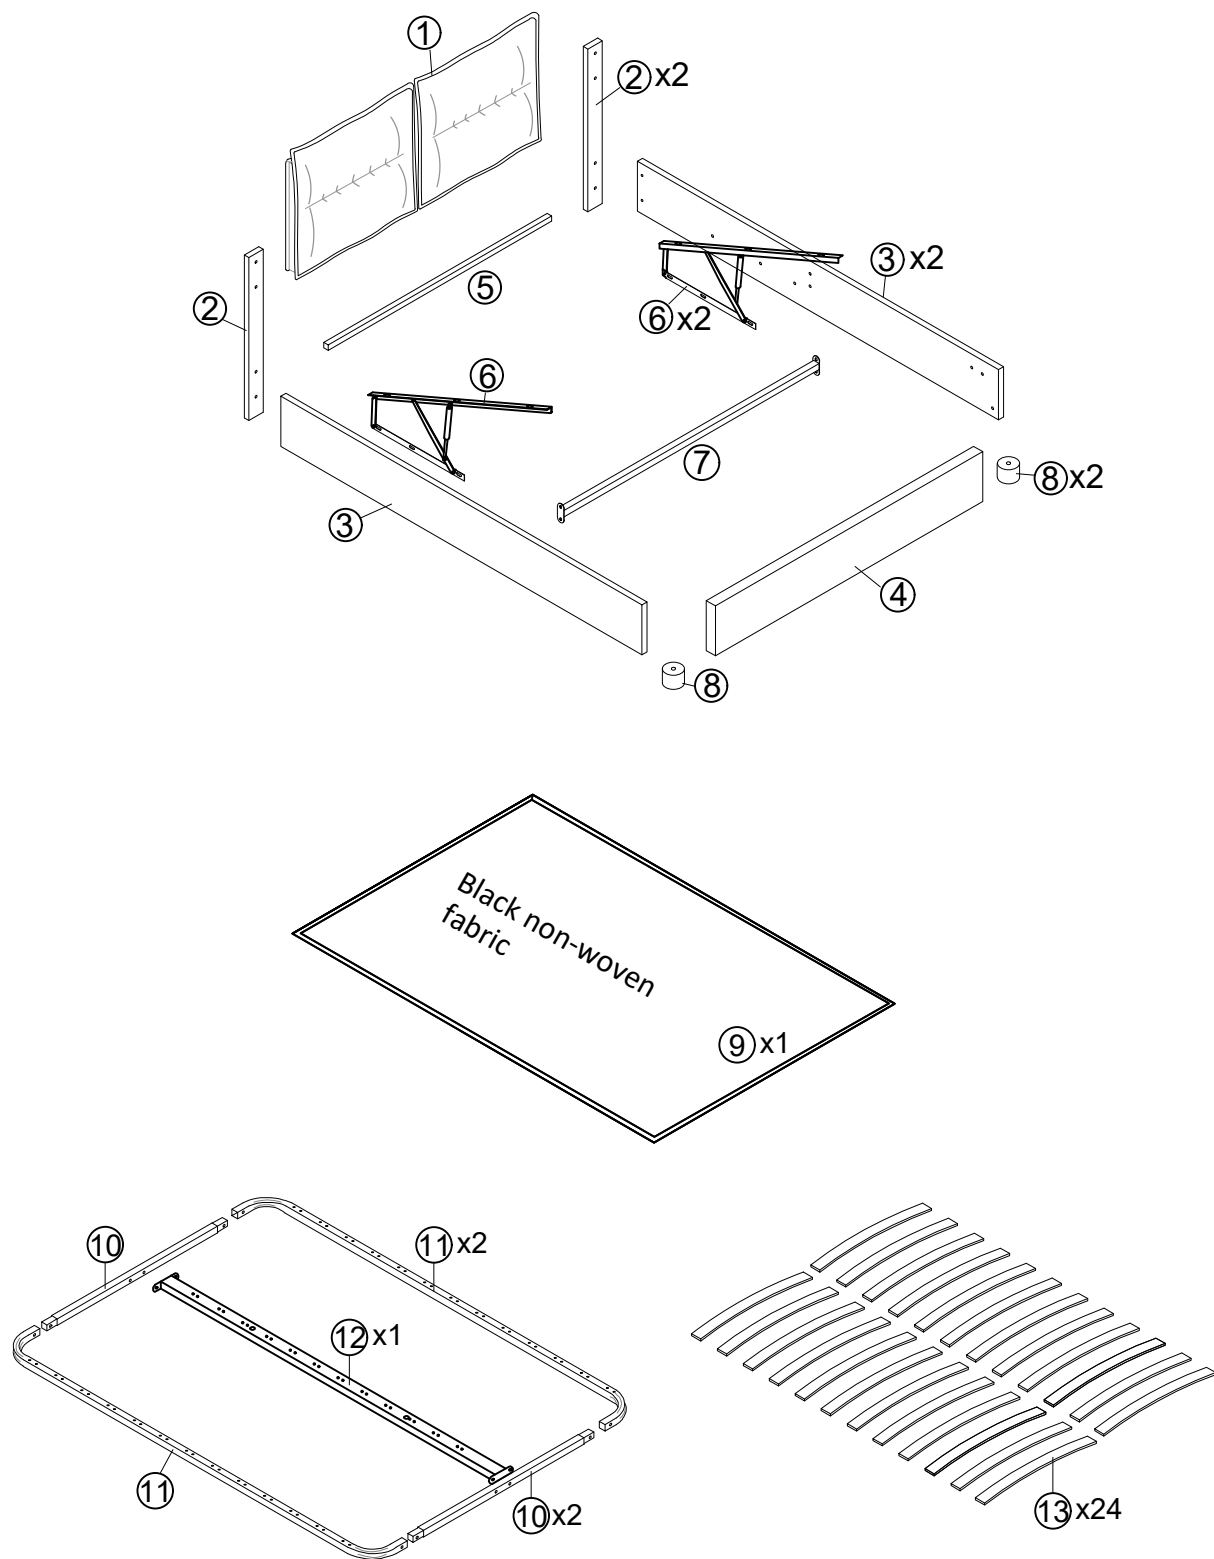





ASSEMBLY INSTRUCTION











Detail View




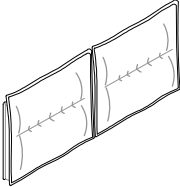

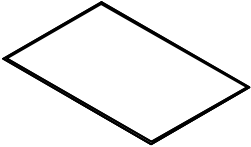
Part List

1  Head board-1pc	2  Head board leg-2pcs	6  Gas lift -2pcs
9  Black non-woven fabric-1pc		

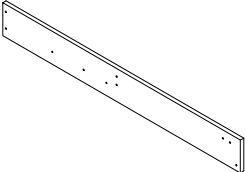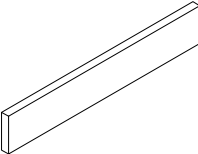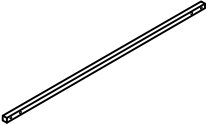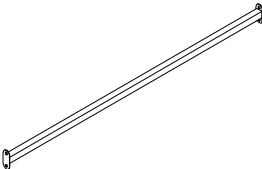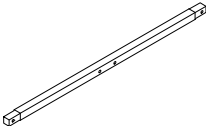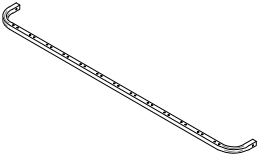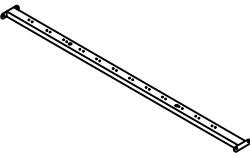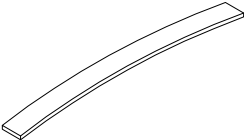Hardware List

3  Side rails-2pcs	4  Foot board -1pc	5  Head board cross bar-1pc
7  Cross bar-1pc	8  Legs-2pcs	10  Metal frame cross bar-2pcs
11  Metal frame side bar-2pcs	12  Metal frame middle bar-1pc	13  Slat-24pcs


Hardware List

A	 20*70mm	B	 Ø8*45mm	C	 156*24*2mm
Allen Key(1pc)		Bolts(18pcs)		Three hole iron(2pcs)	
D	 Ø8*18mm	E	 Ø15mm	F	 35*47*47mm
Bolts(38pcs)		Nuts(14pcs)		Little "7" Connector(2pcs)	
G		H	 Ø4*50mm	I	 Ø12mm
Metal Corner(2pcs)		Nails(2pcs)		Nuts(4pcs)	
J	 70*23mm	K	 150*40mm	L	 75*33*33mm
Spanner(1pc)		Hinge(2pcs)		"7" Connector(1pc)	
N	 55*52*11mm	O	 55*27*11mm	P	 140*118mm
Middle slats cap(12pcs)		End slats cap(24pcs)		Stopper(1pc)	

Attention: Do not tighten the screws before completing the entire installation. If you have any difficulty with the installation process, please feel free to contact us.


Step 1x2

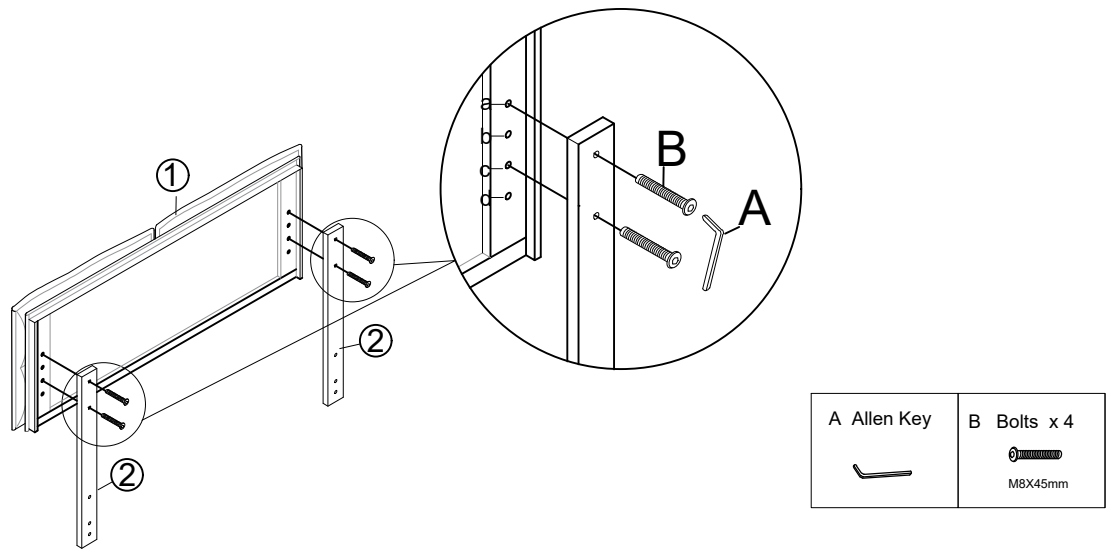Fix the Headboard legs②to the headboard ①with Bolts B by using Allen key A,You can chose the hole a and c ,or b and d.




Step 2x2

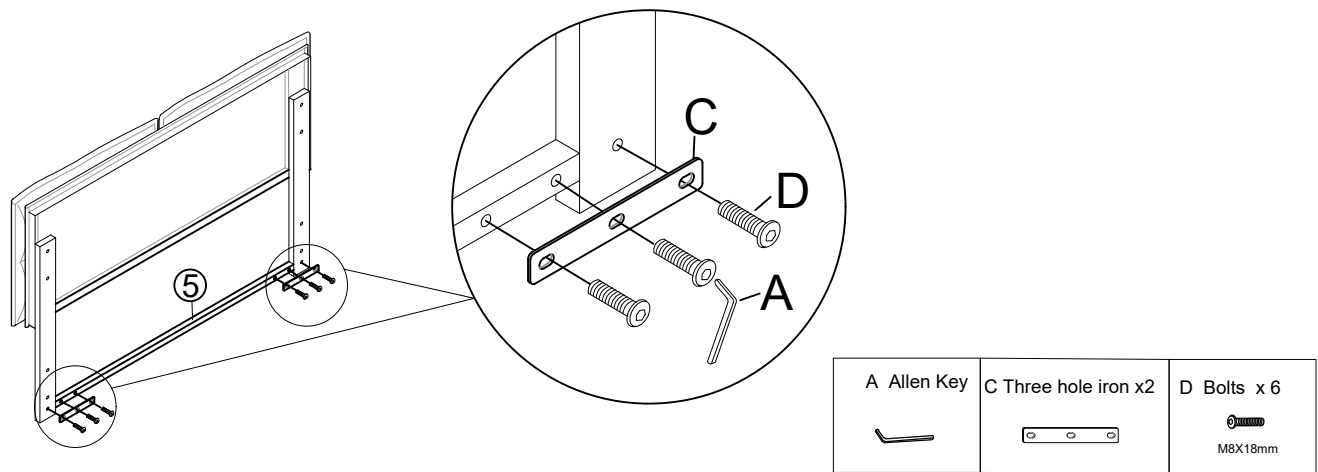Fix the Headboard cross bar ⑤to the Headboard legs ②with Bolt D and Three hole iron C by using Allen key A.




Step 3 x2

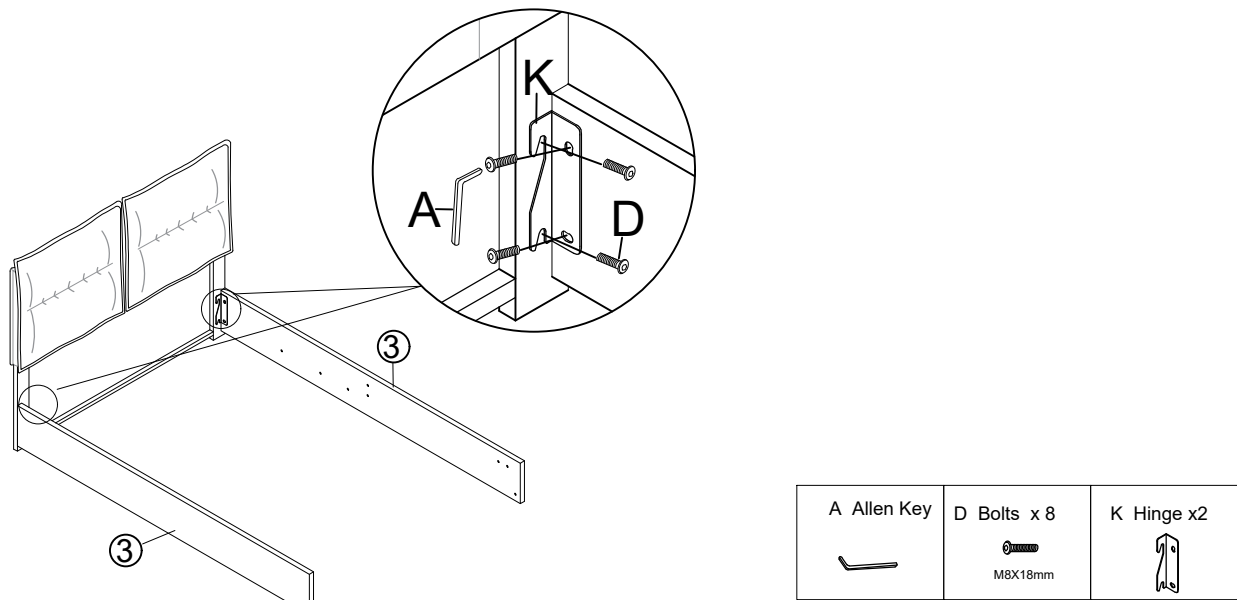Fix the side rails③to the side head board legs ②with Bolts D and Hinges K by using Allen key A




Step 4 x2

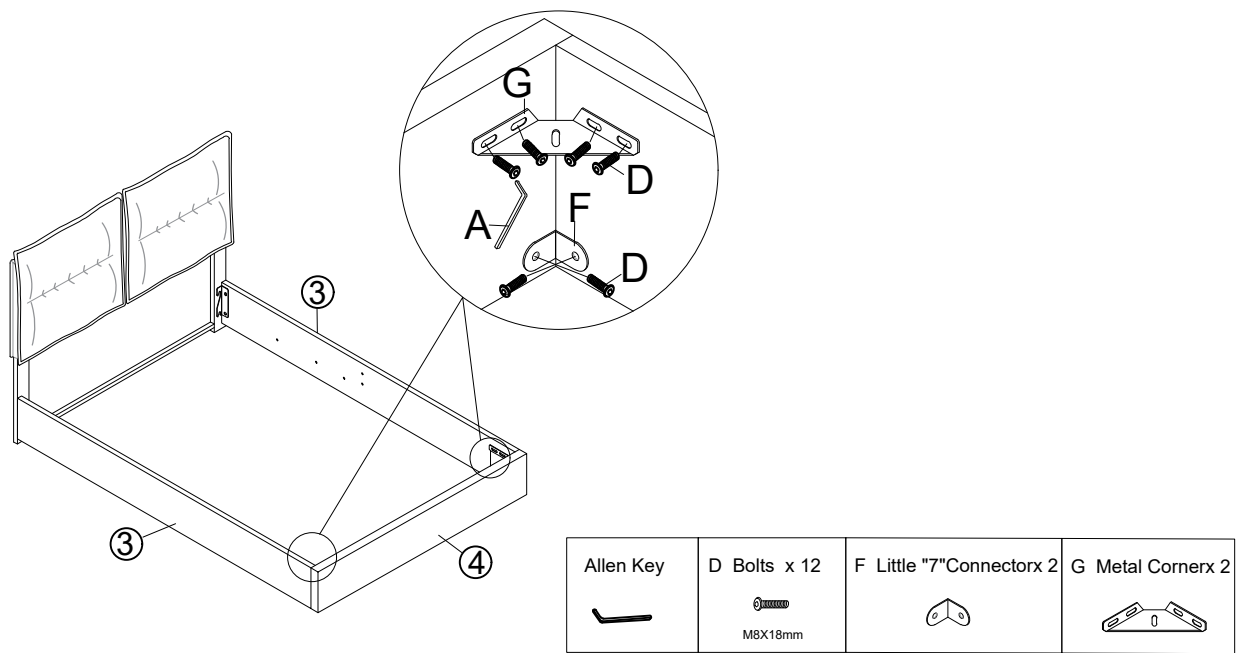Fix the Siderails ③ to the footboard ④ with Metal corner G, Little "7"Connector F and Bolt D by using Allen key A.




Step 5

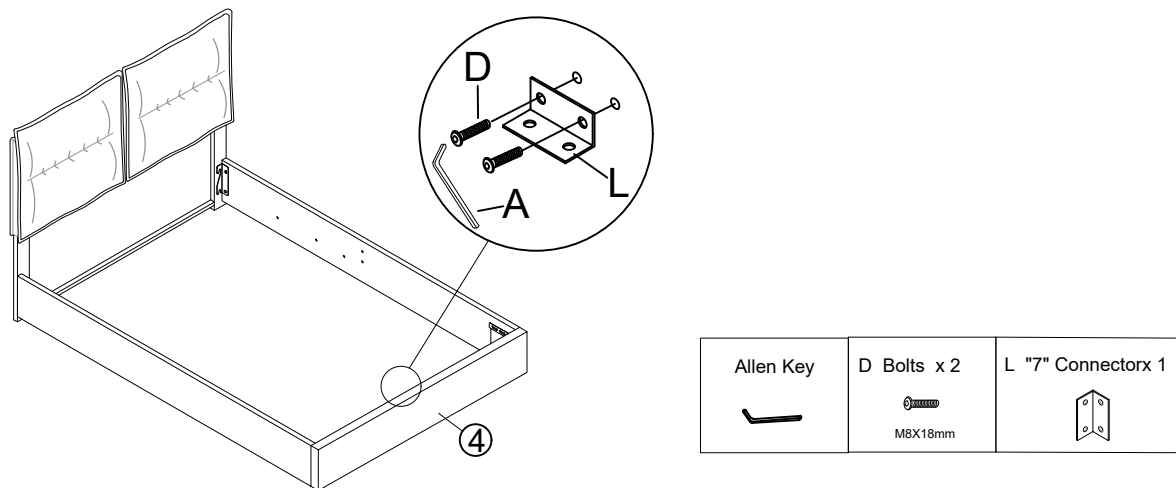Fix the "7" Connector L to the footboard ④ with Bolt D by using Allen key A.




Step 6

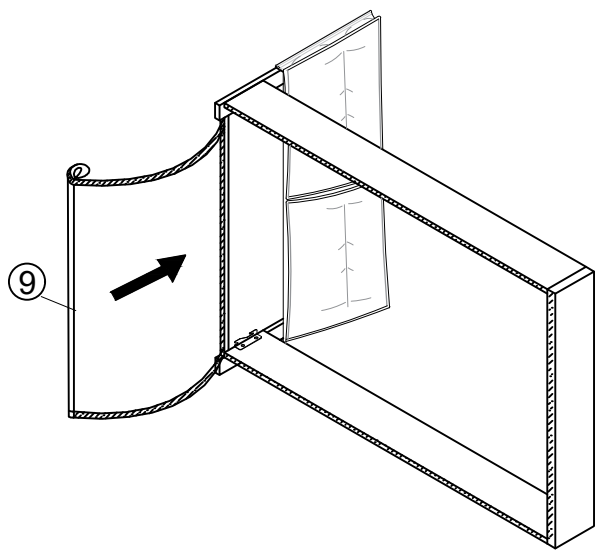Stick the black non-woven fabric ⑨ To the bottom of bed




Step 7 x2

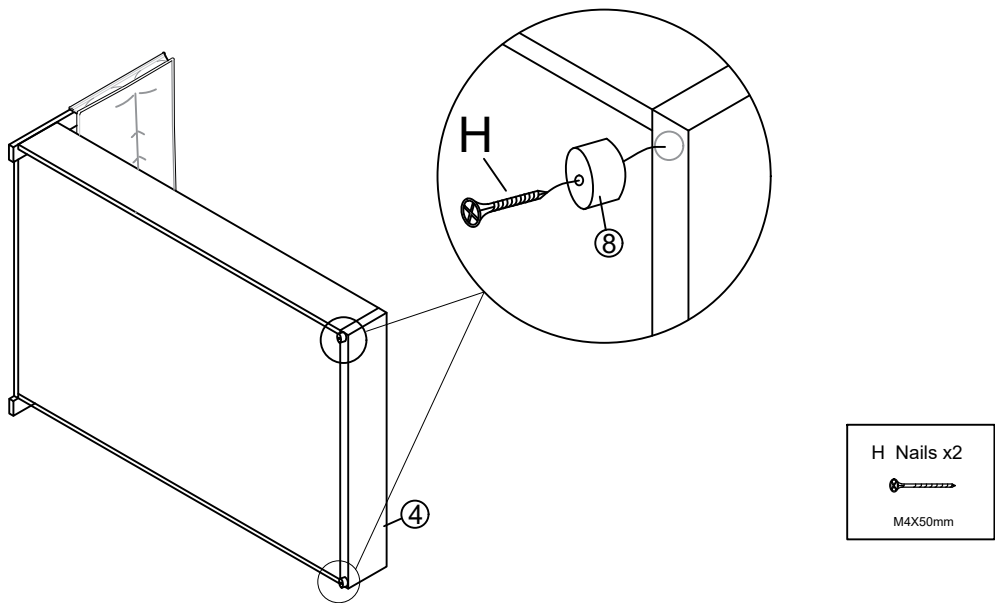Fix the legs⑧to the footboard ④with nails H by using electric drill or screw driver




Step 8

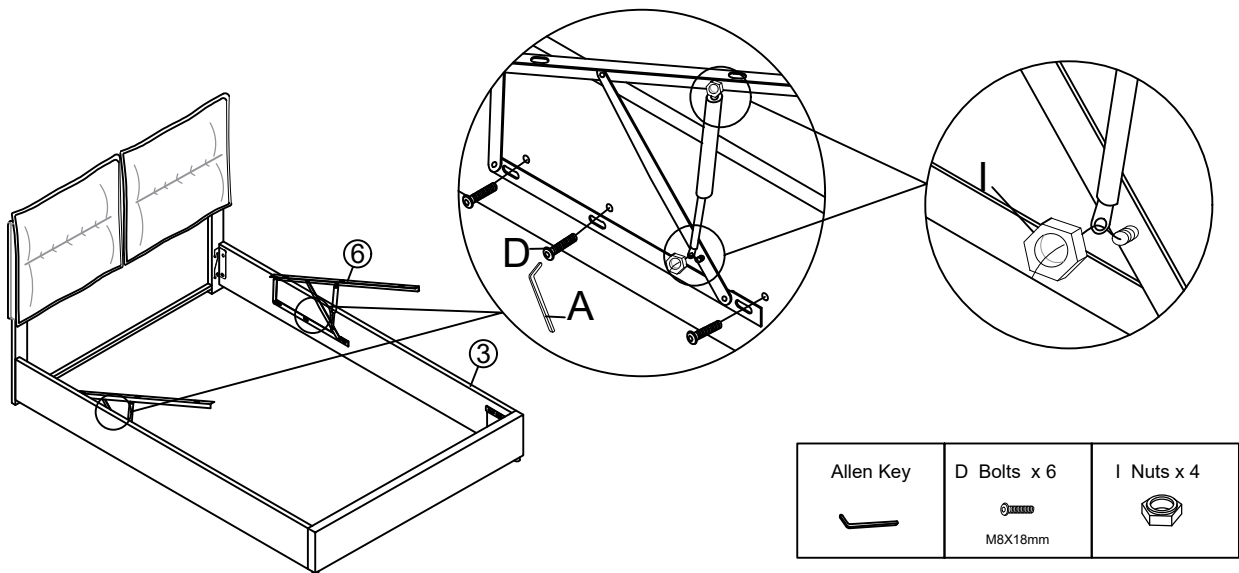Fix the gas lifts⑥to the Siderails ③with Blots D by using Allen Key A or electric drill,fix the gas bar to the gas lifts⑥ with nuts I .




Step 9

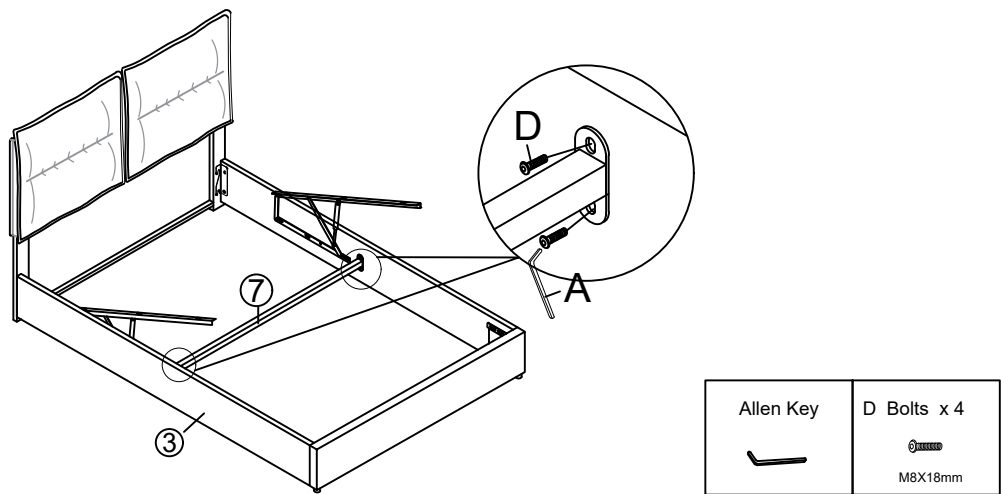Fix the cross bar⑦to the side rails ③with bolts D by using Allen Key A or screw driver.




Step 10

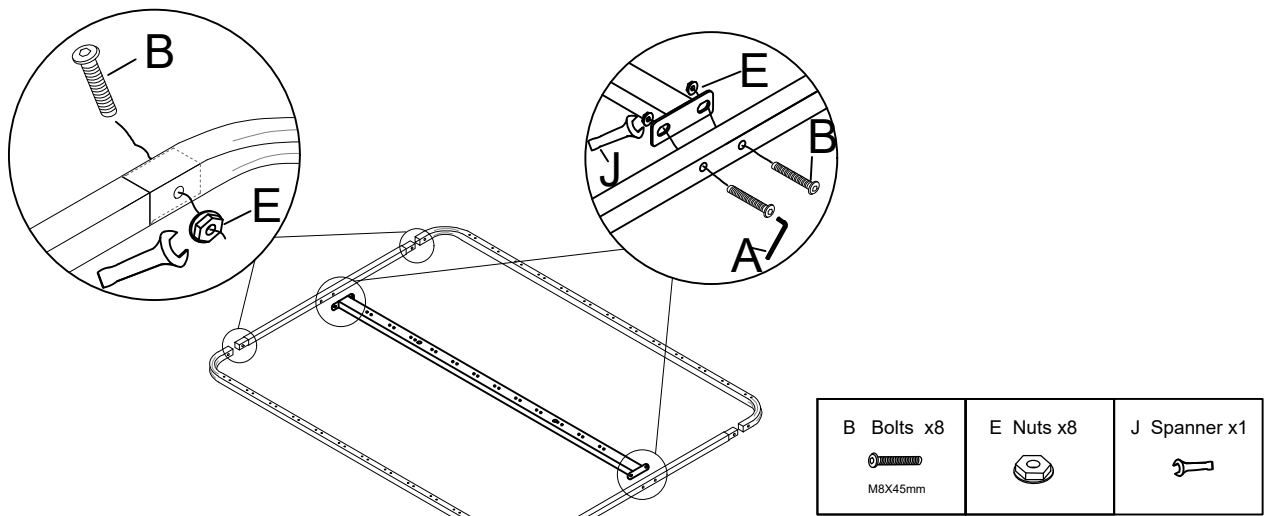Assemble the slats frame with bolts B and nuts E by using Spanner J



Step 11

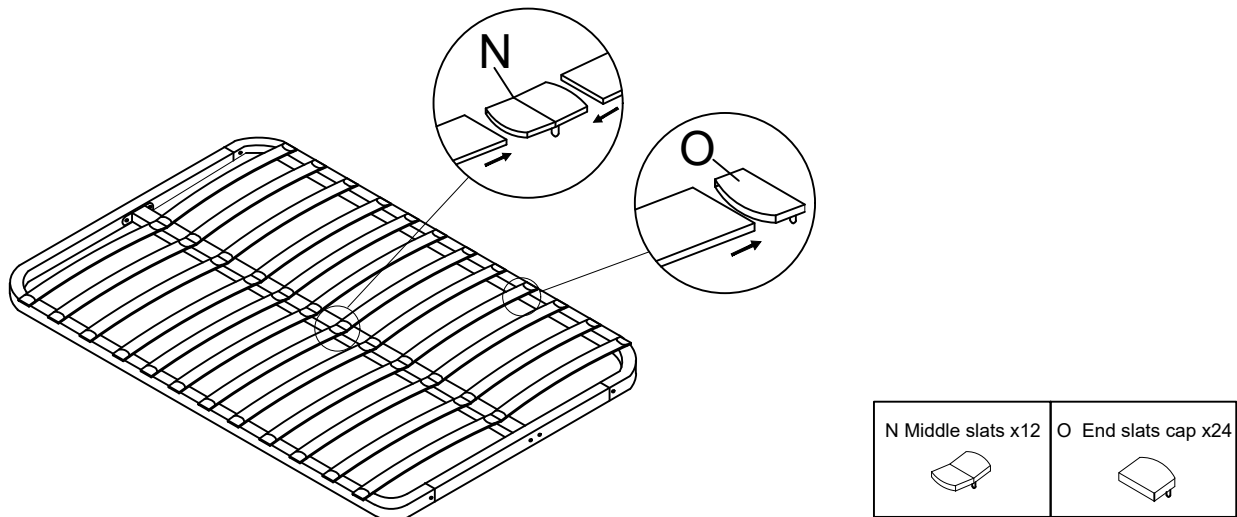Assemble the slats into the assembled slats frame with middle slats cap N and end slats cap O



Step 12

Assemble the slats frame to the gas lifts ⑥ with bolts B and nuts E, put the stopper P in the end of the slat frame, then assemble is finished, now please tighten all hardware and enjoy the bed

