




ASSEMBLY INSTRUCTIONS


A x1 	B x1 	C x3 	D x1 	E x1 
F x6  M8*45mm	G x6  M8	H x6 	I x14 	J x1  M8

1

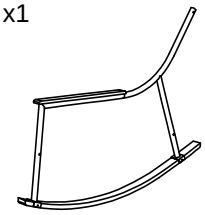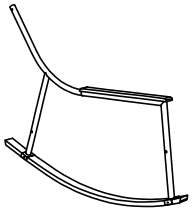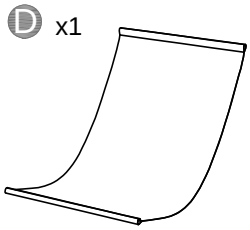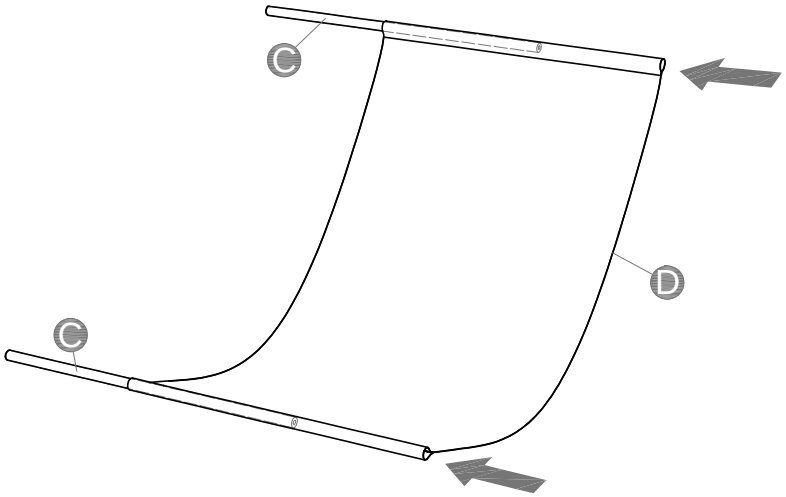


2

Velcro location: Rear side of backrest (facing up)

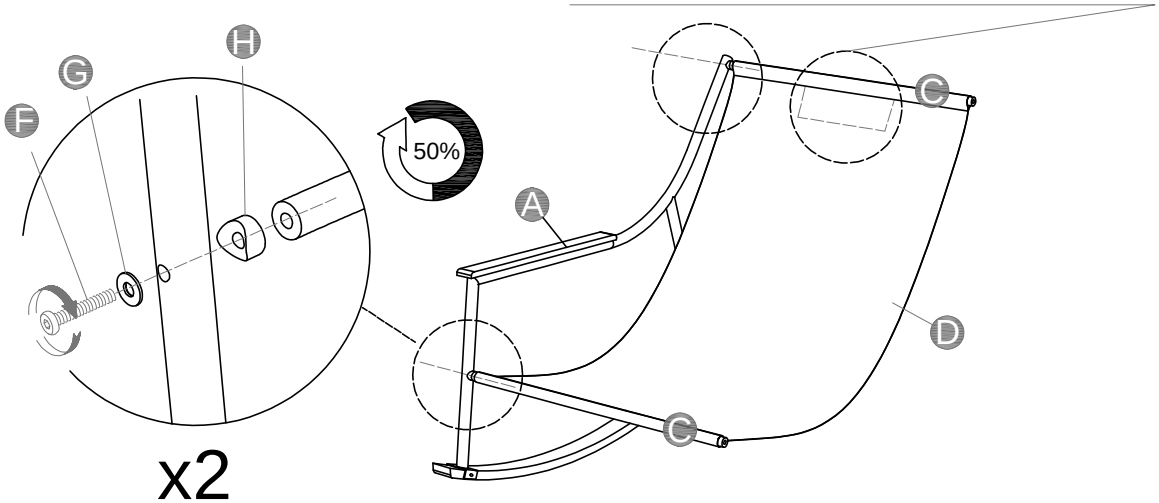


x2

3

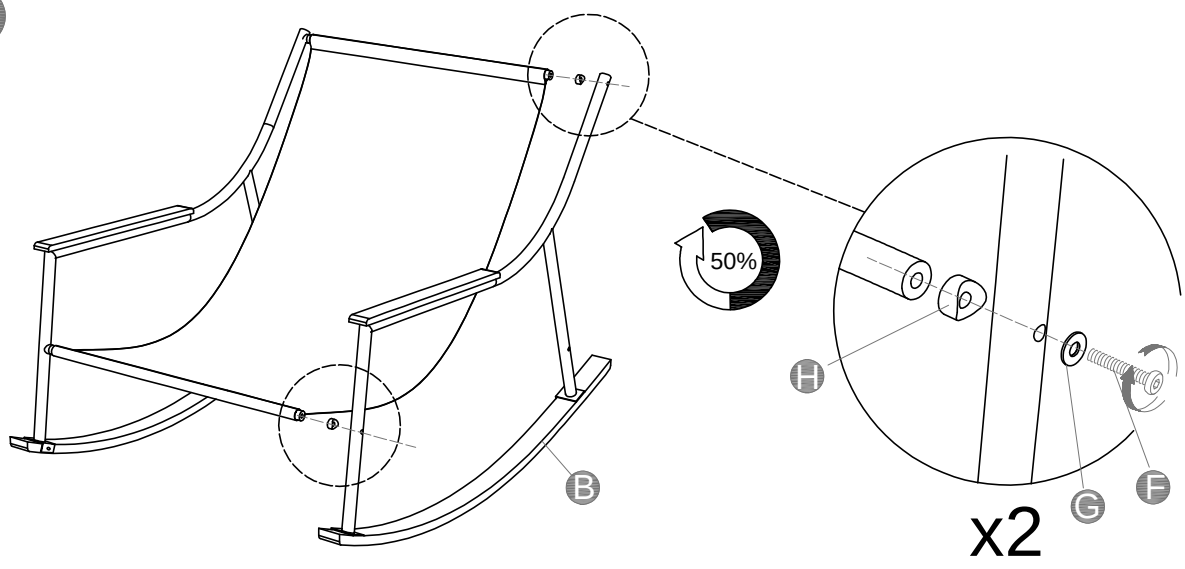



4

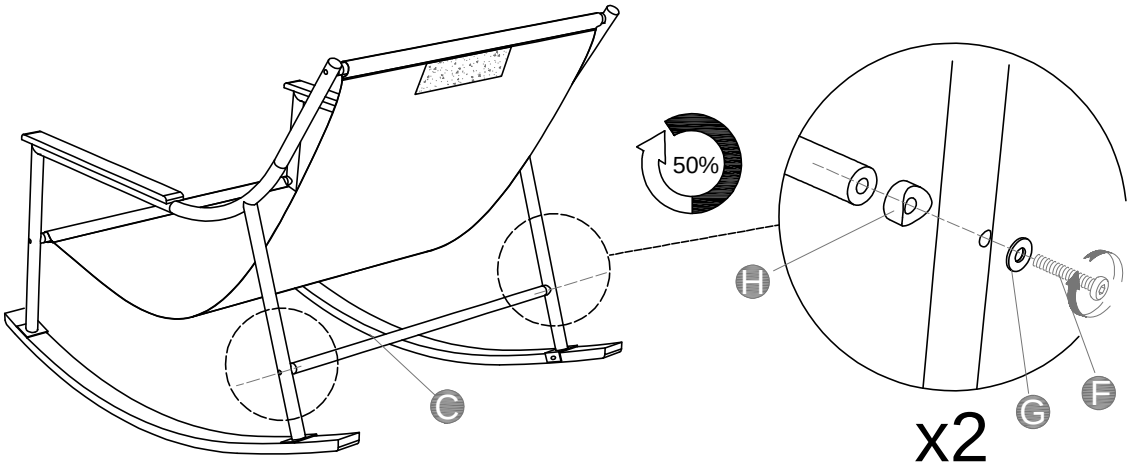


5

After all the screws are properly fixed,then 100% fasten up.

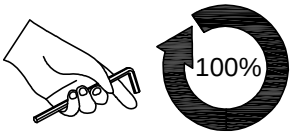

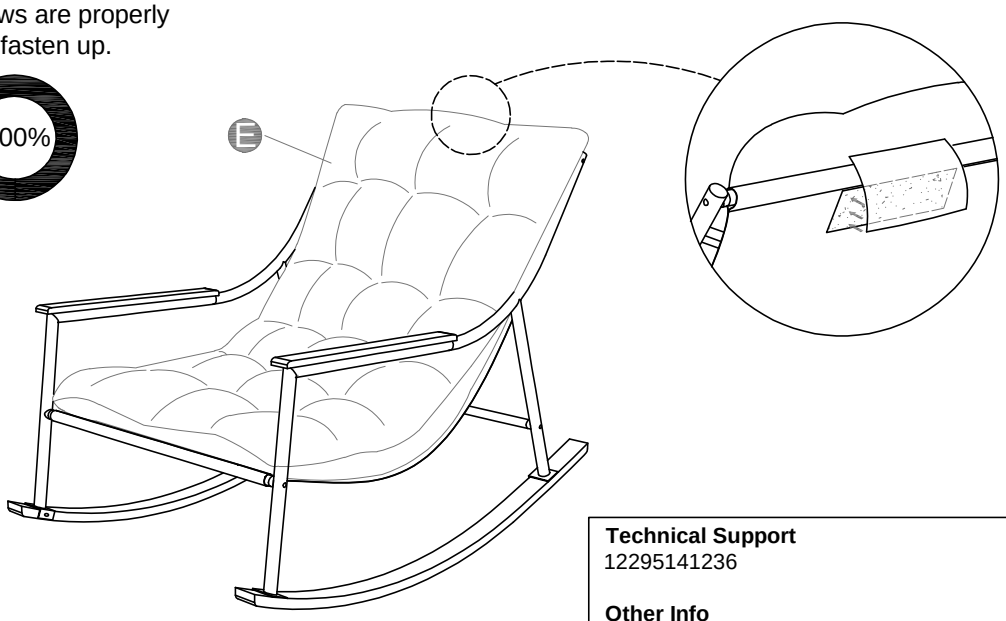

Cover all the plastic lids

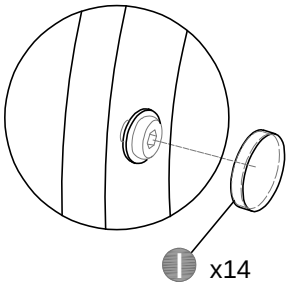

Technical Support
12295141236

Other Info
toquickservice1@gmail.com

Thank you for choosing this product. We strive to provide you with the best quality products and services in the industry. Should you haveany issues, please don't hesitate to contact us.