




ASSEMBLY INSTRUCTIONS



SAFETY TIPS: Static charge may cause dust on foam – clean with a dry or damp cloth. Small foam strands may be present – handle gently and dispose of properly. Do not burn or incinerate. Check local recycling guidelines.

Before You Start


1. Read through each step carefully and follow the proper order.
2. Separate and count all your parts and hardware.
3. Give yourself enough room for the assembly process.
4. Assemble this product on the empty carton or carpet to avoid scratching.
5. Two people are recommended for ease in the assembly of this product.
6. Keep all small parts of this product away from children. They may cause serious injury.
7. Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer.

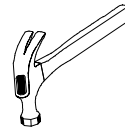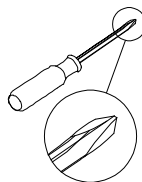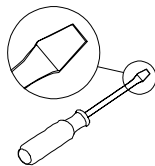


8. Note: Power tools should not be recommended to assemble this product. If using a power drill or power screwdriver for screwing, please be aware to slow down and stop when the screw is tight. Failure to do so may result in stripping the screw.

HOW THE KNOCK DOWN (KD) ASSEMBLY SYSTEM WORKS

1. Screw the Cam Bolt into the pre-drilled hole on the panel. Make sure the Cam Bolt goes into the pre-drilled hole on the end of the panel for the Cam Lock.
2. Insert the Cam Lock into the pre-drilled large hole on the panel. Make sure the arrow on the face of the Cam Lock points towards the Cam Bolt.
3. Take a Phillips screwdriver and rotate the Cam Lock clockwise to lock the Cam Bolt.
4. Use the sticker to conceal the Cam.

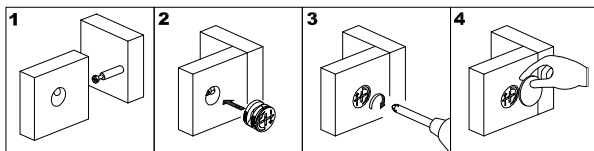


The provided glue is to secure wood dowels in place. When first inserting dowels, locate the appropriate hole for the dowel, place a small amount of glue in the hole and insert the dowel. Wipe away excess glue immediately.





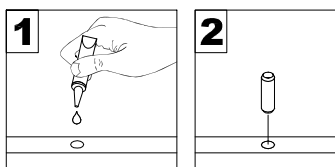


In future assembly steps when dowels are necessary to attach assembly parts together, place a small amount of glue on the end of the dowel before attaching parts together. Wipe away excess glue immediately.

PARTS LIST

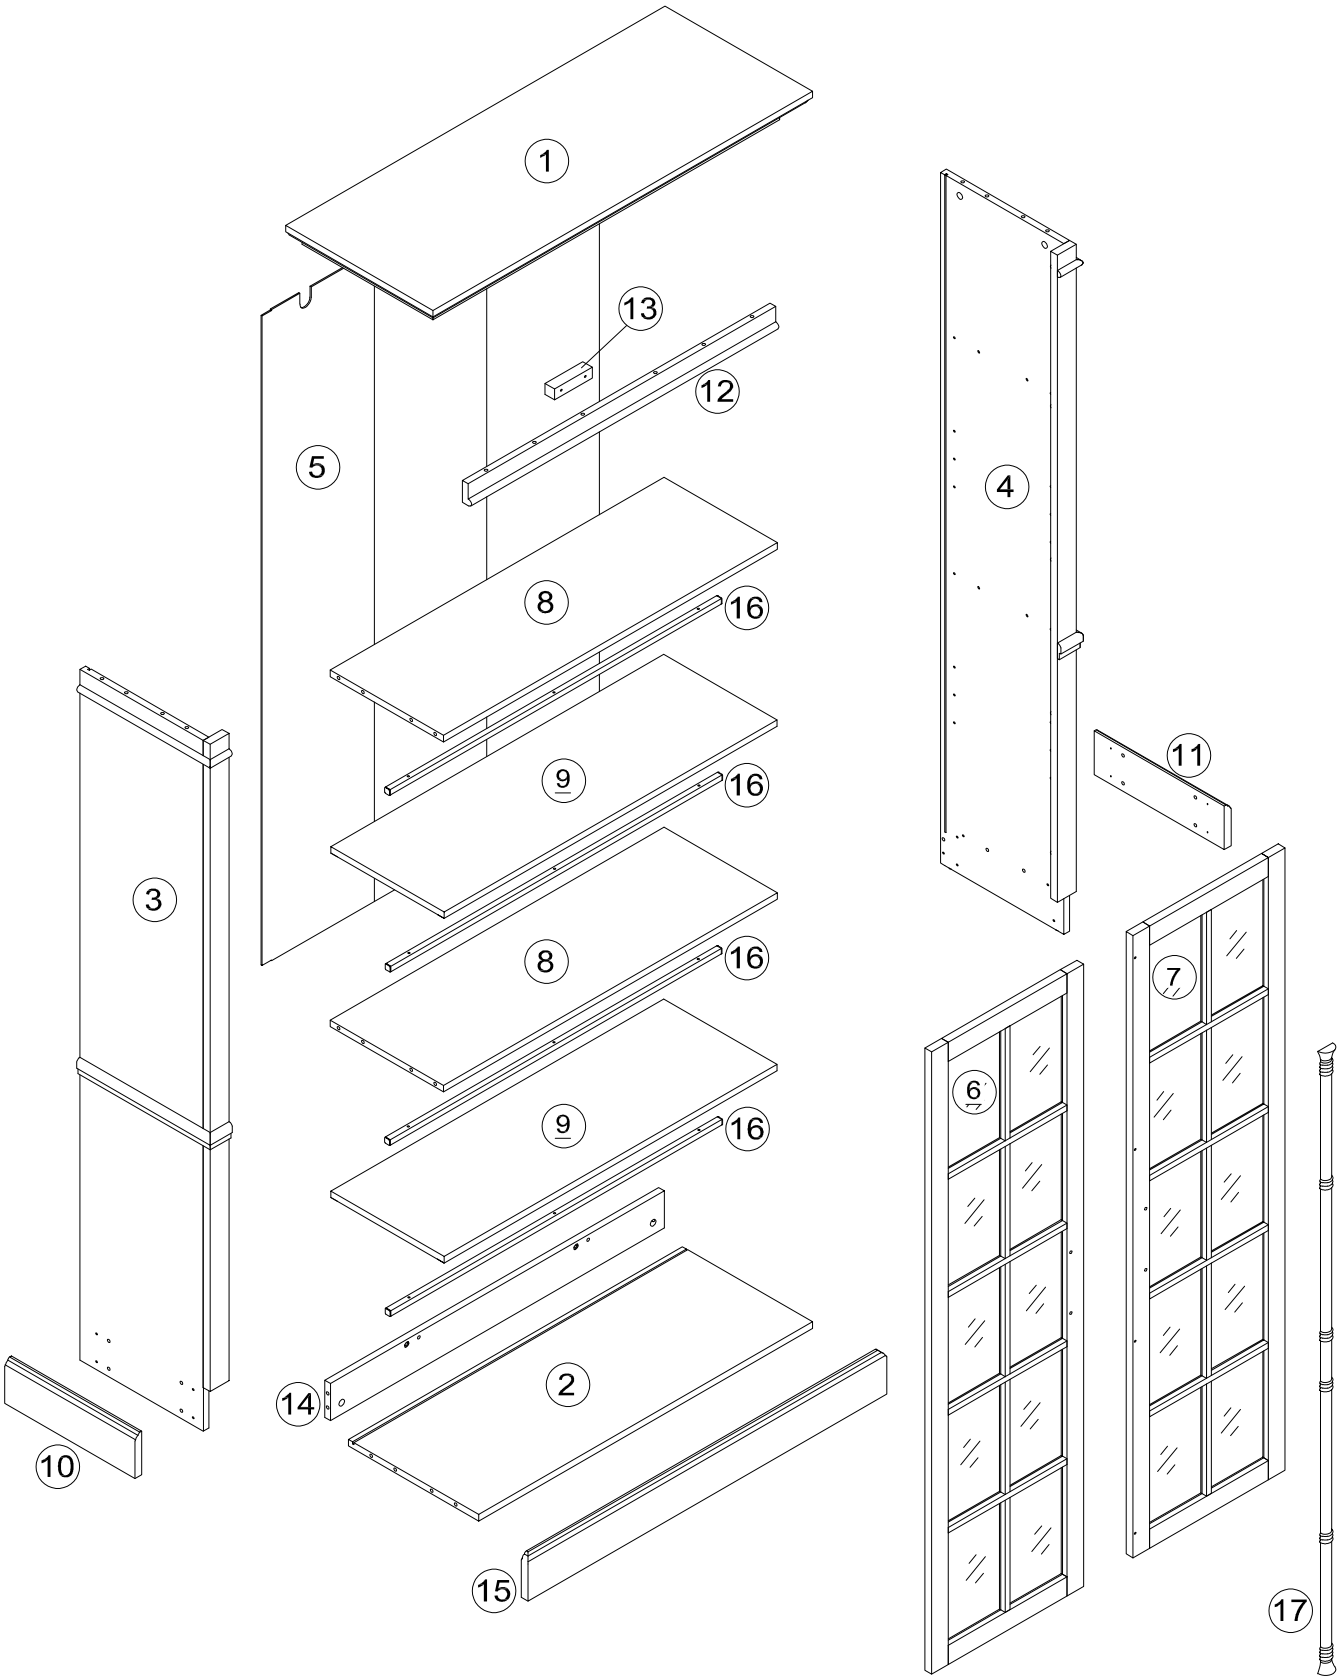


HARDWARE LIST

A		Ø6x35mm	Cam bolt	22 pcs
B		Ø15x11mm	Cam lock	22 pcs
C		Ø20mm	Cam cover	22 pcs
D		Ø8x30mm	Long wooden dowel	20 pcs
E		Ø8x20mm	Short wooden dowel	8 pcs
F		Ø4x16mm	Handle bolt	4 pcs
G		Ø4x25mm	Screw	10 pcs
H			Hinge	6 pcs
I		Ø3.5x15mm	Screw	28 pcs
J		Ø4x19mm	Handle bolt	4 pcs
K		Ø6x13mm	Bolt	10 pcs
L		30x20mm	Metal plate	2 pcs
M			Magnetic catch	1 pc
N		57x20x20mm	Connector	5 pcs
O			Plastic wedge	16 pcs
P		Ø3x17mm	Flat-head screw	16 pcs
Q			Shelf support	8 pcs
R			Handle	2 pcs
S			Tipping restraint	2 set
T		35x35x16mm	Connecting iron sheet	2 pcs
U		Ø3.5x14mm	Screw	12 pcs
V		Ø3x15mm	Screw	4 pcs
W		Ø6x22mm	Bolt	12 pcs
X			Glue tube	1 pc




STEP 1


Kx7


Nx5

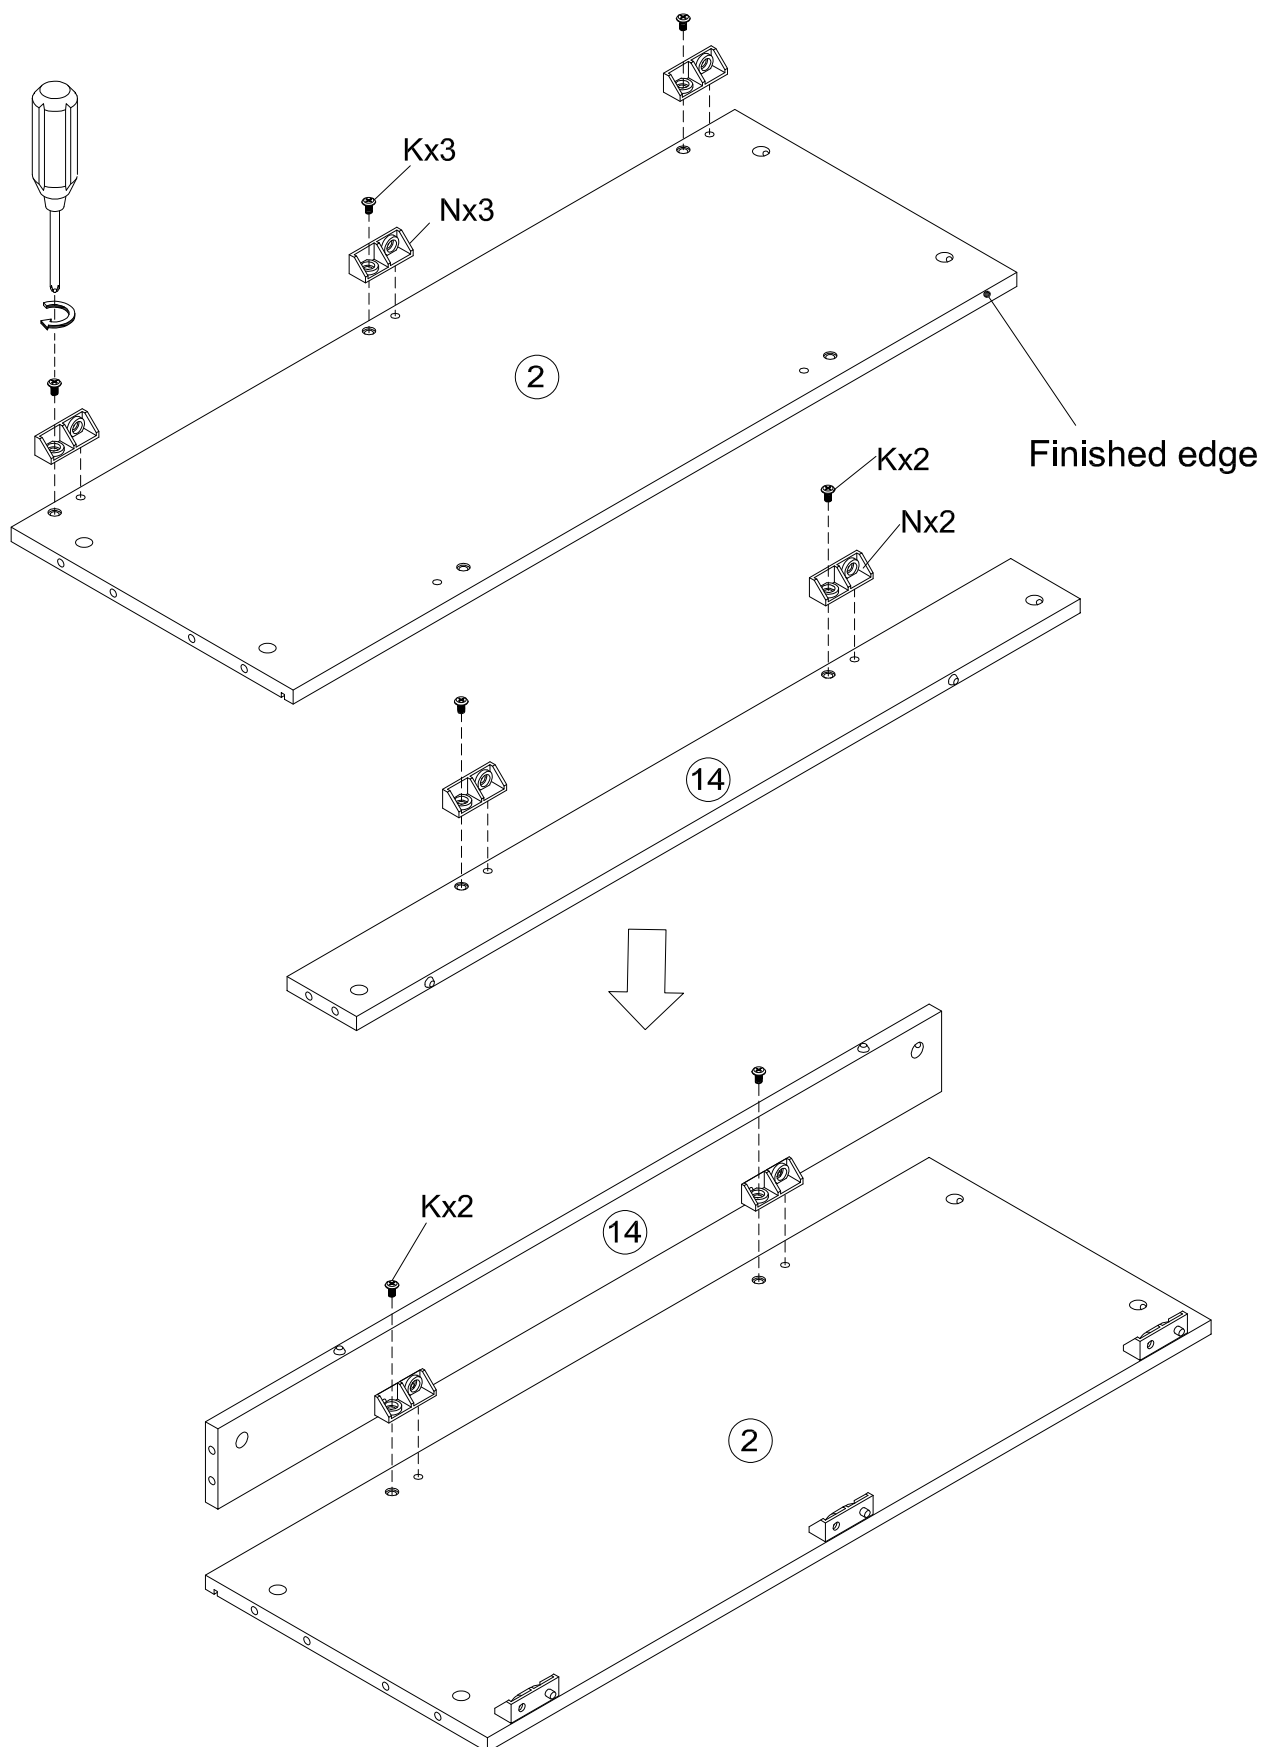


STEP 2

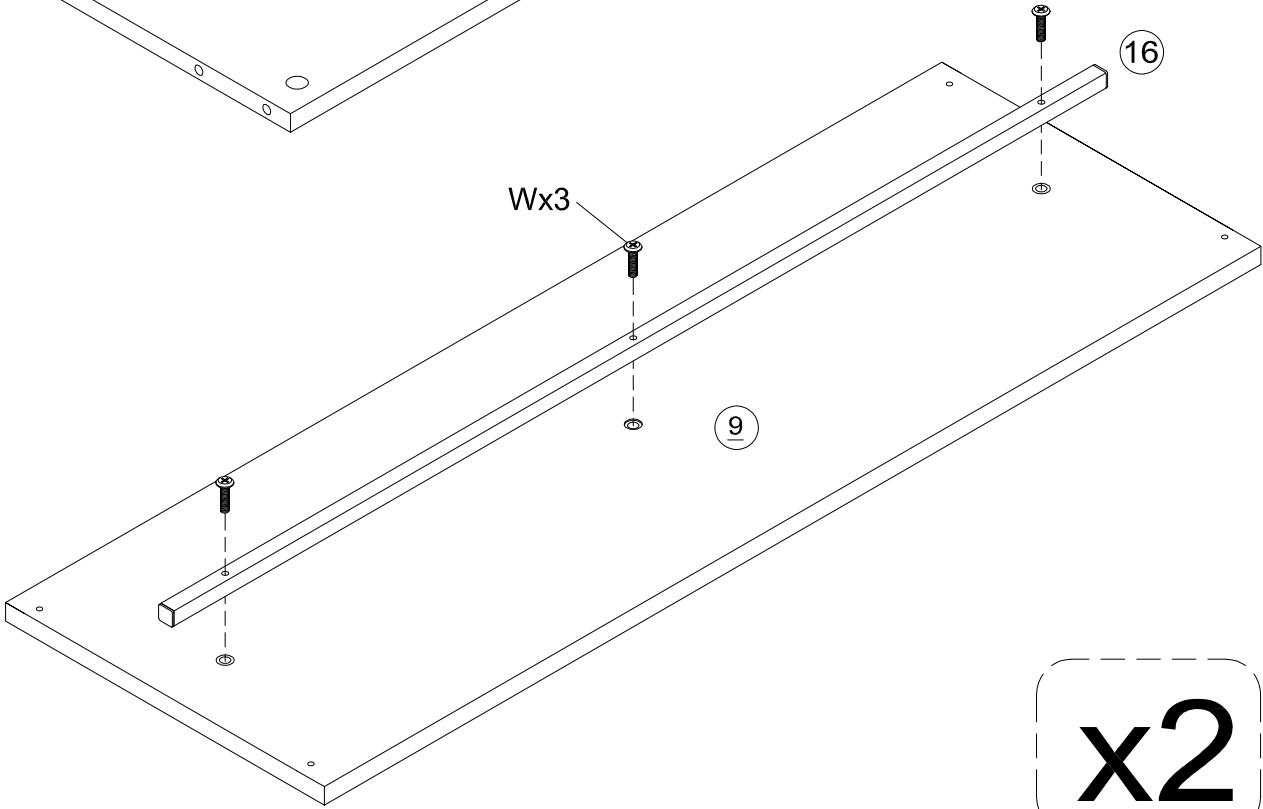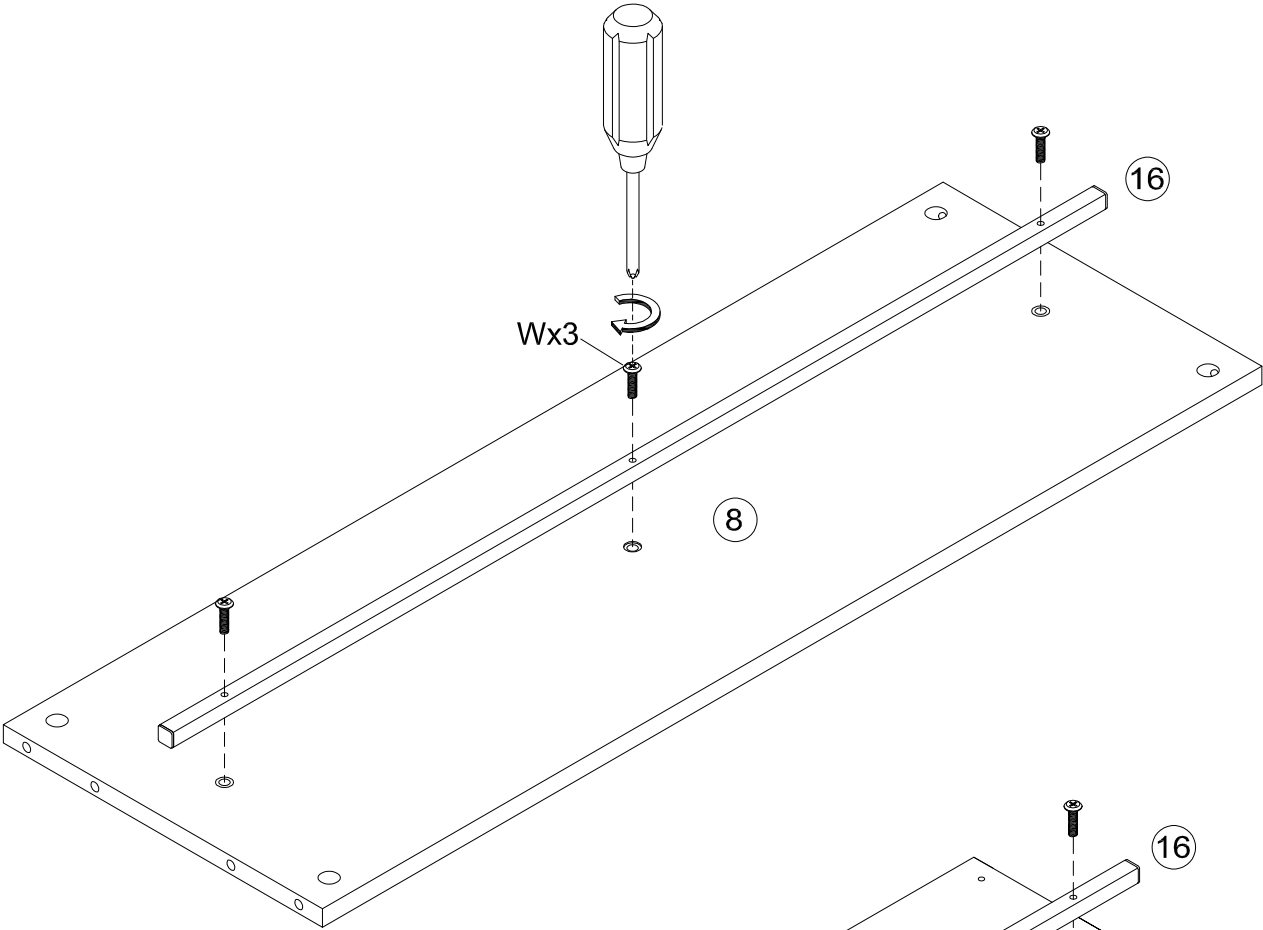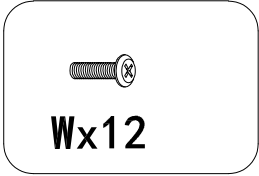

x2

STEP 3



Ax7



Ex4





Gx4



Ix6



Hx3

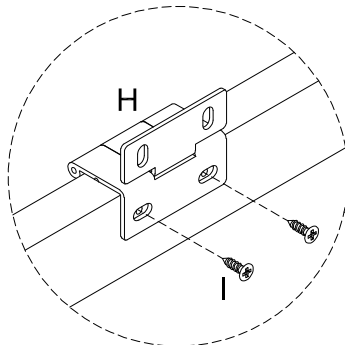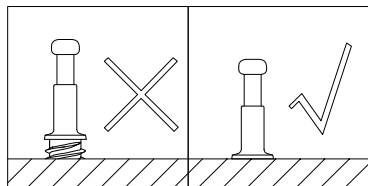


Hx3

Ix6

Ax7

3



3

Gx4



Ex4

Short Wooden dowel

10

Finished edge

The beveled profile faces upward

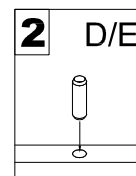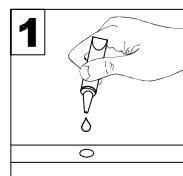


1

2

D/E


STEP 4



Ax7



Ex4




Gx4





Ix6



Hx3

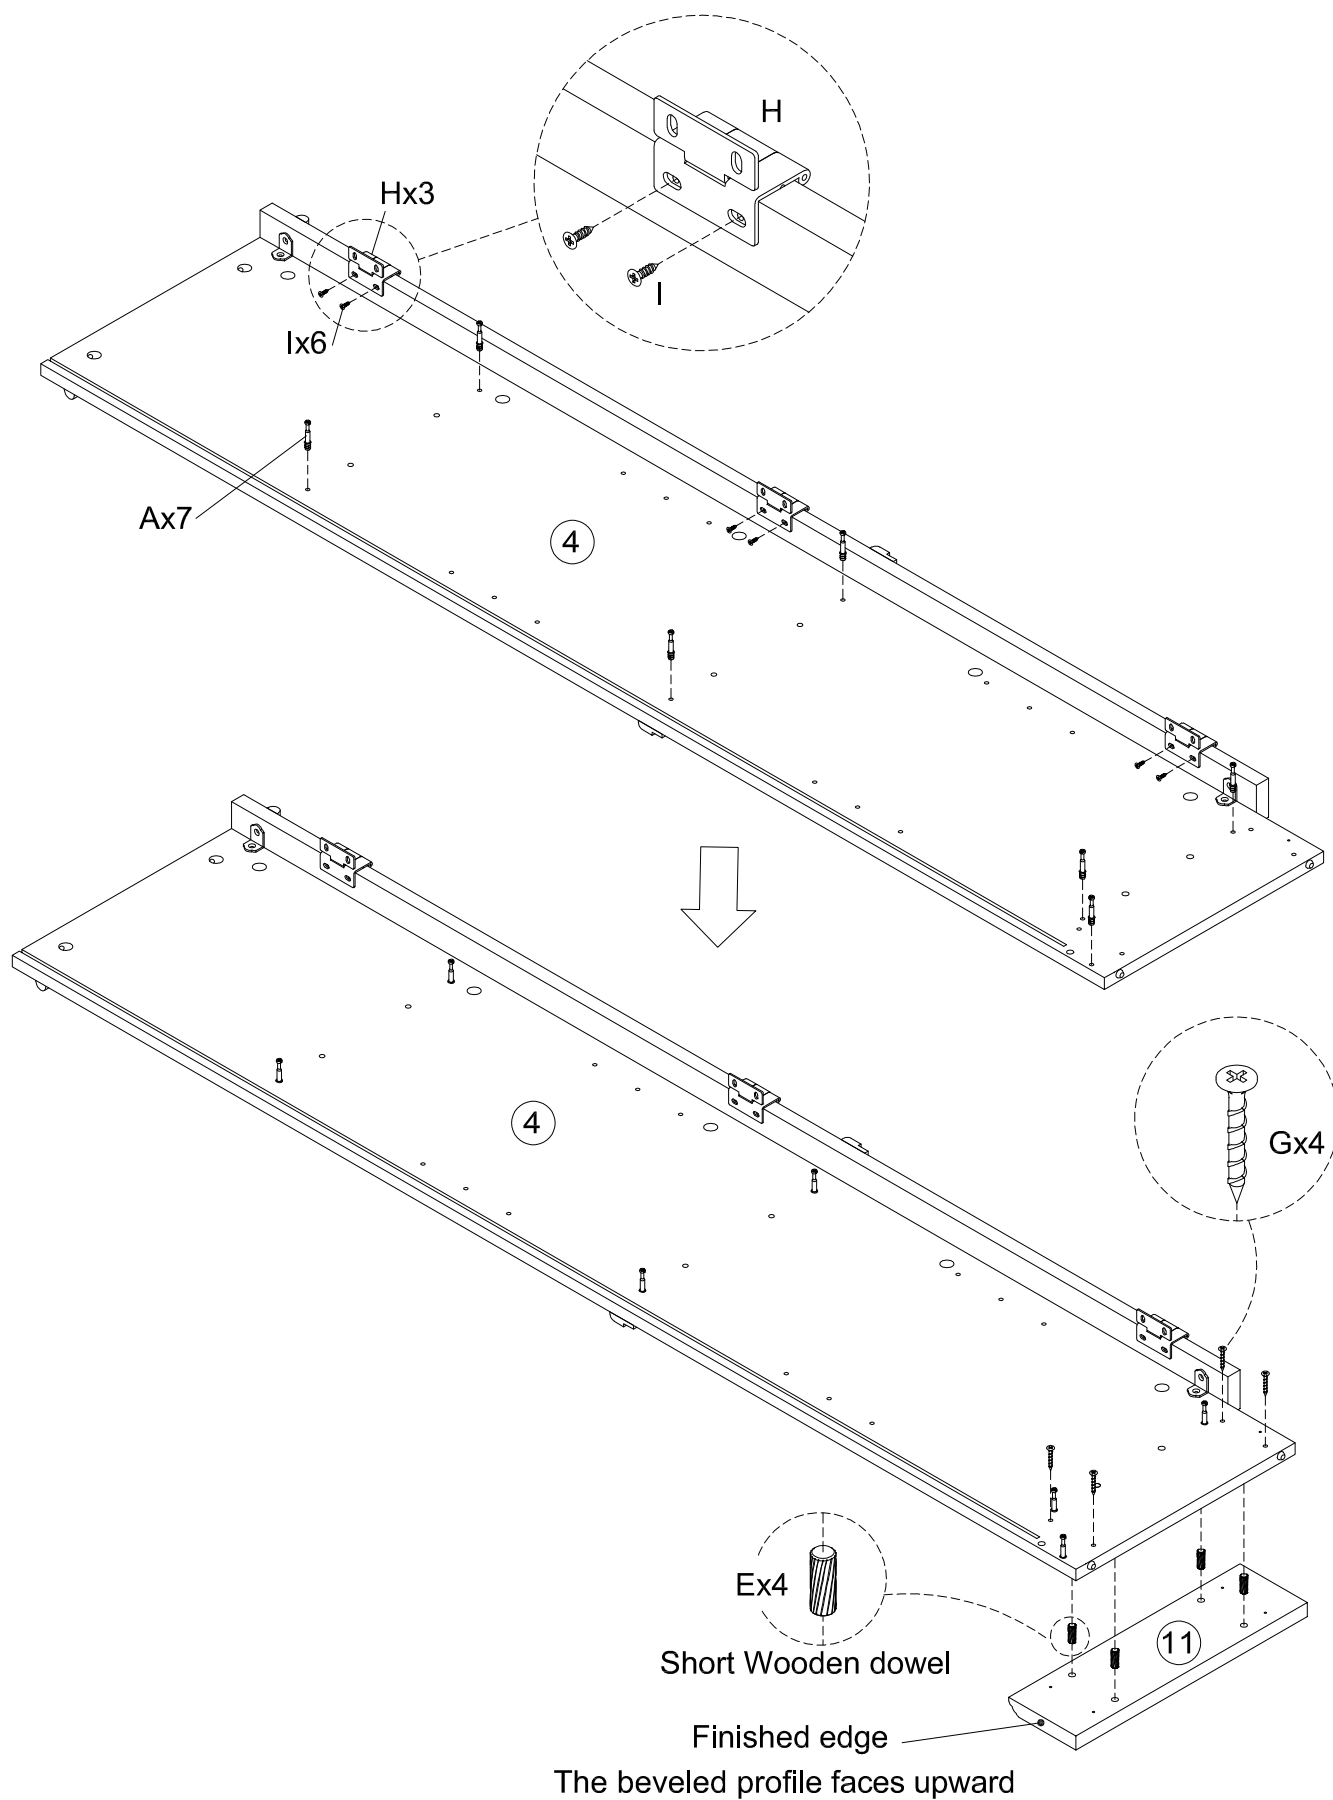

STEP 5

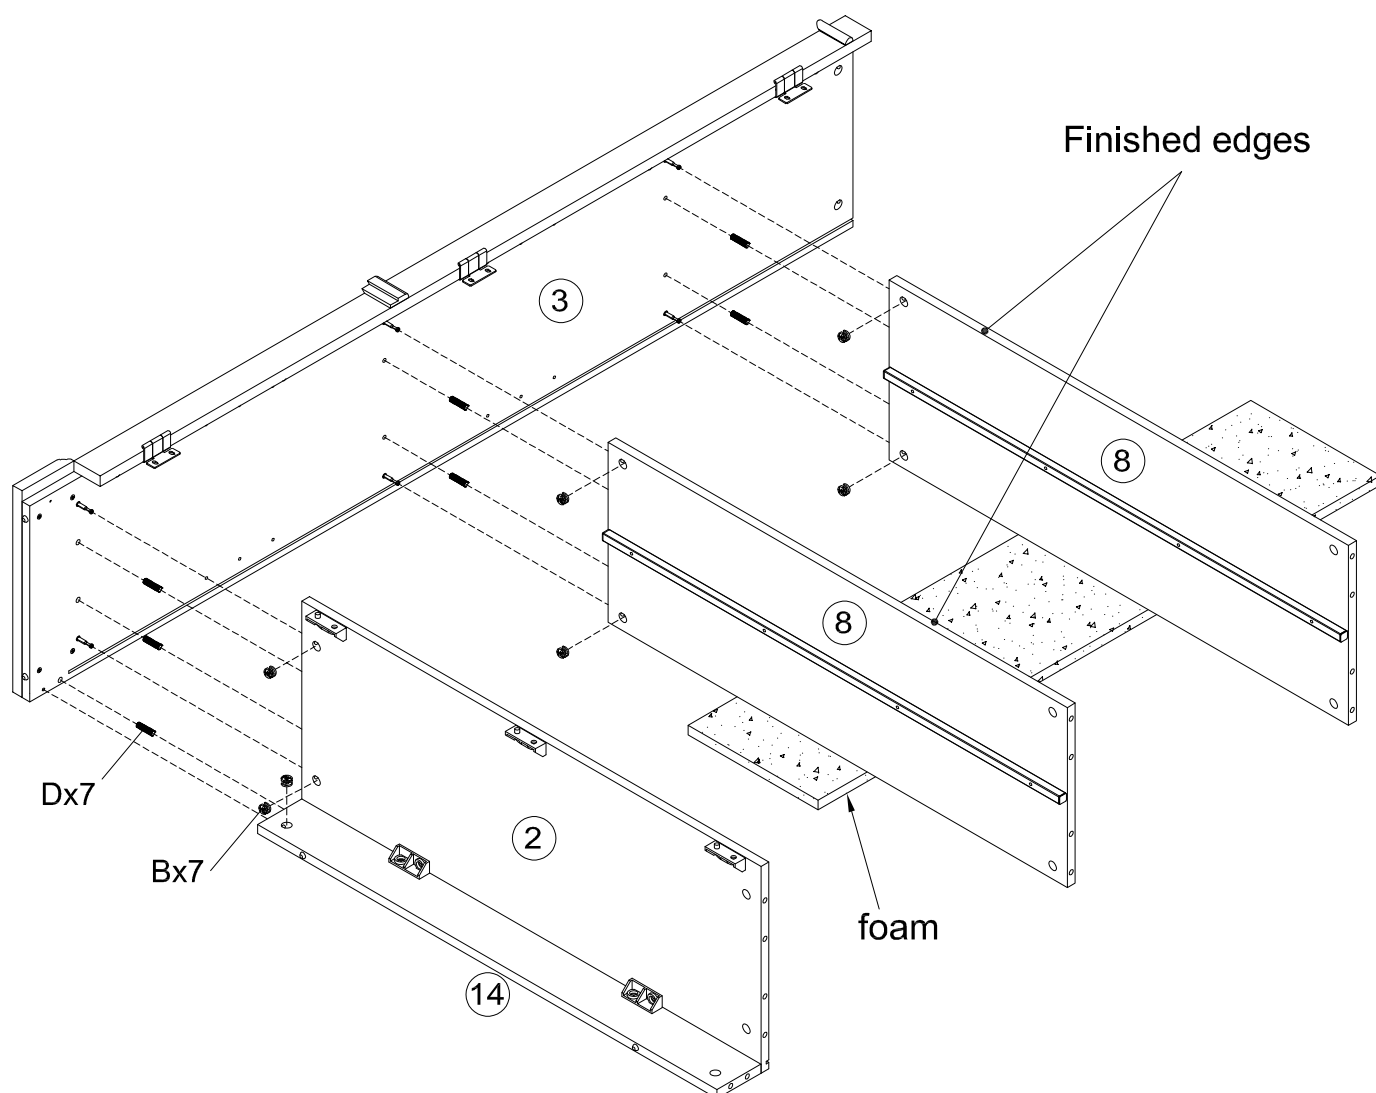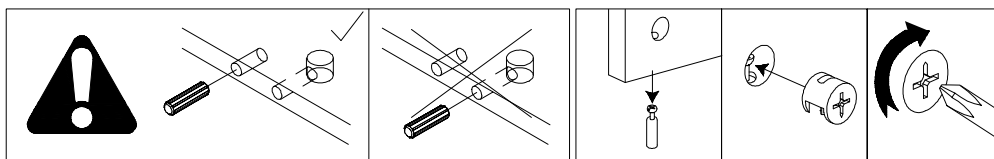



STEP 6



Bx7



Dx7

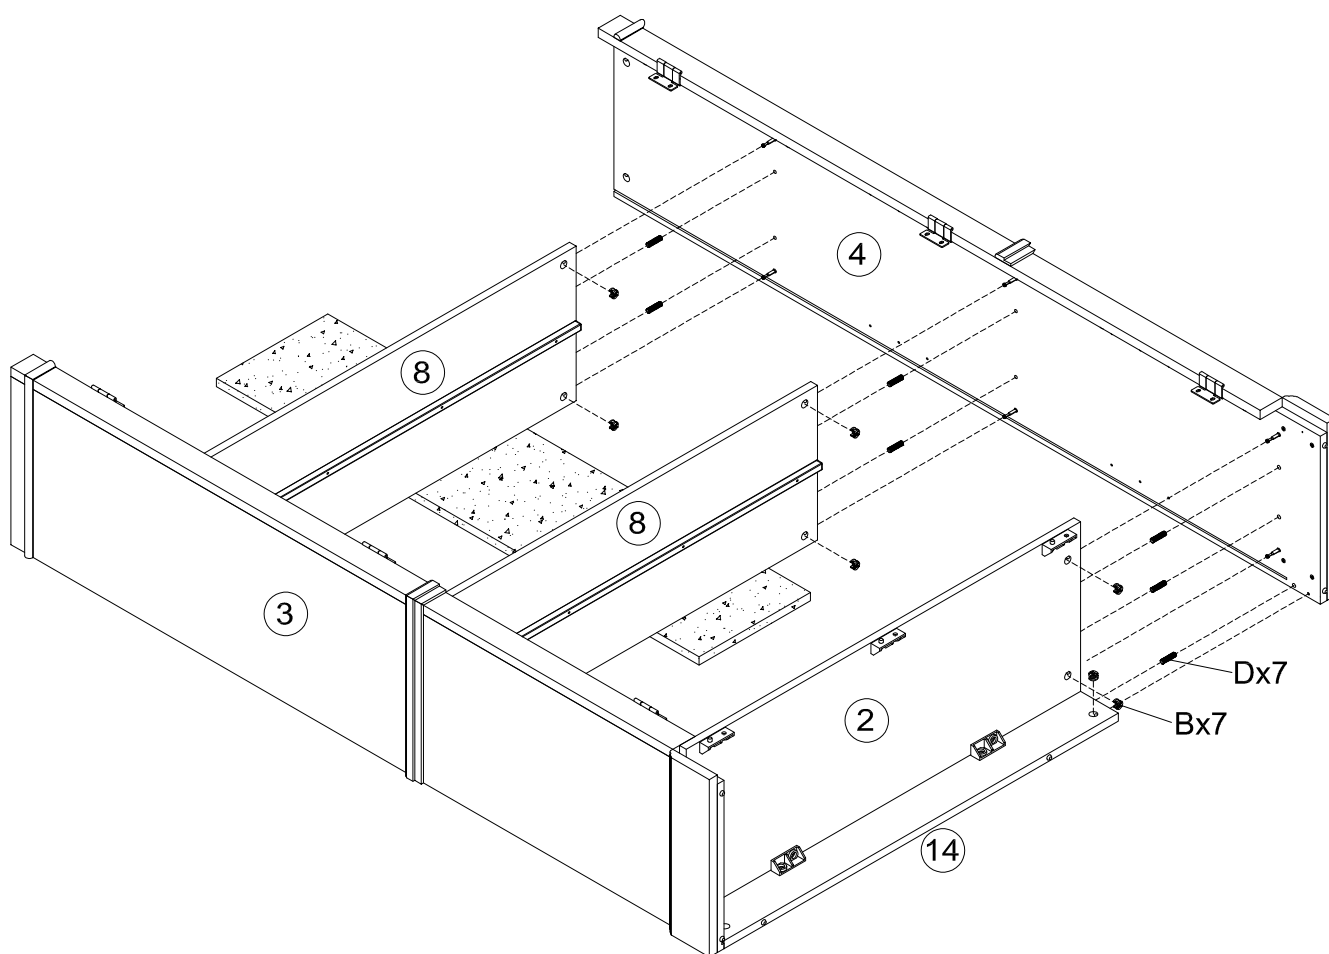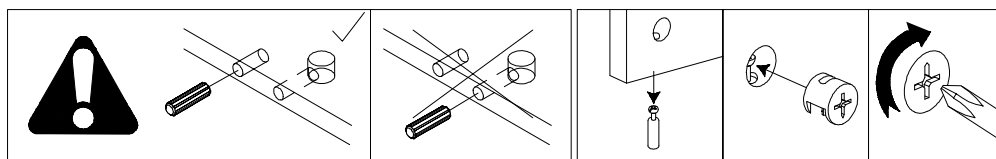

STEP 7





Kx3




Ix4






Tx2

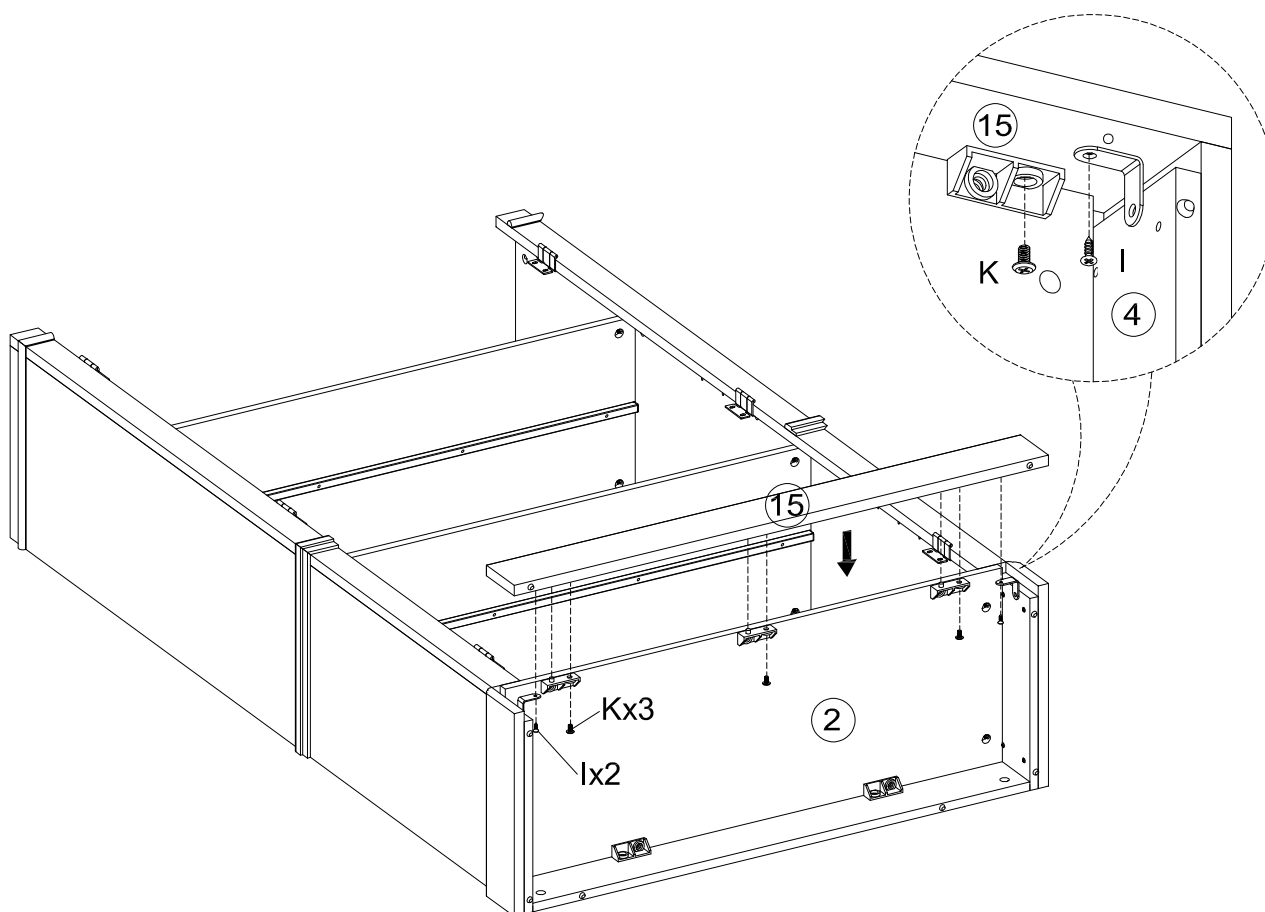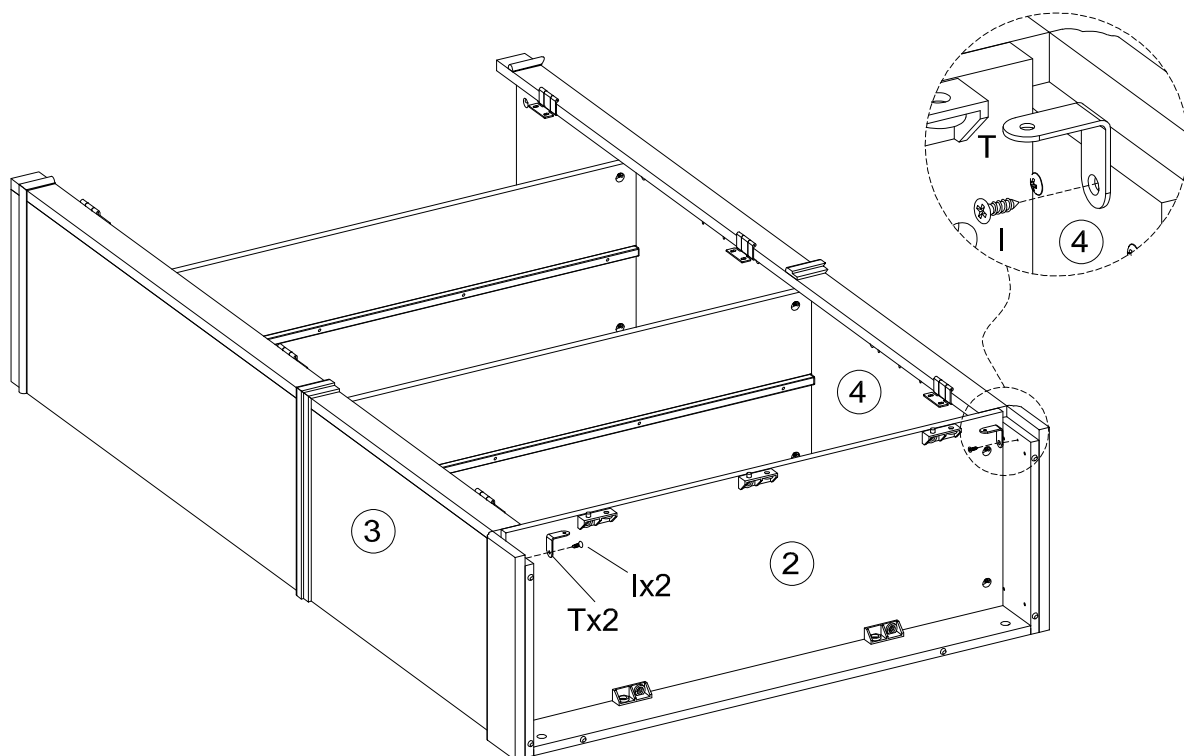


STEP 8

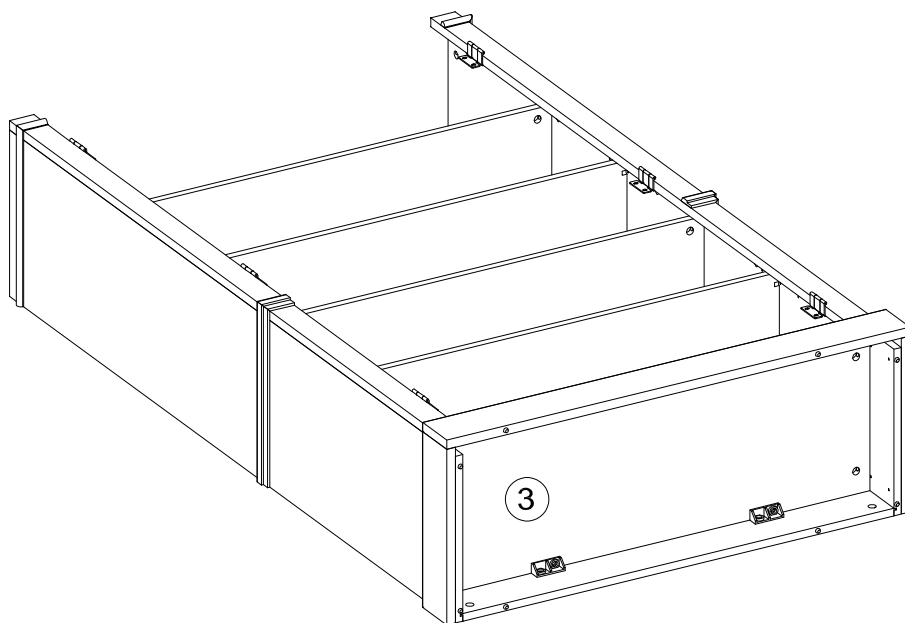



Pay attention to the direction of the holes.

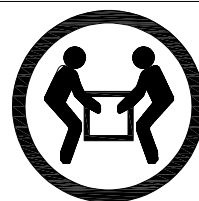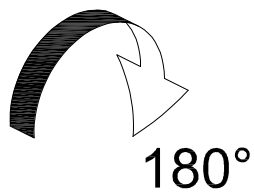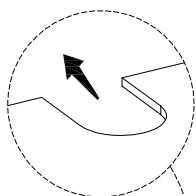


CAUTION: Heavy! You may need assistance with this step.

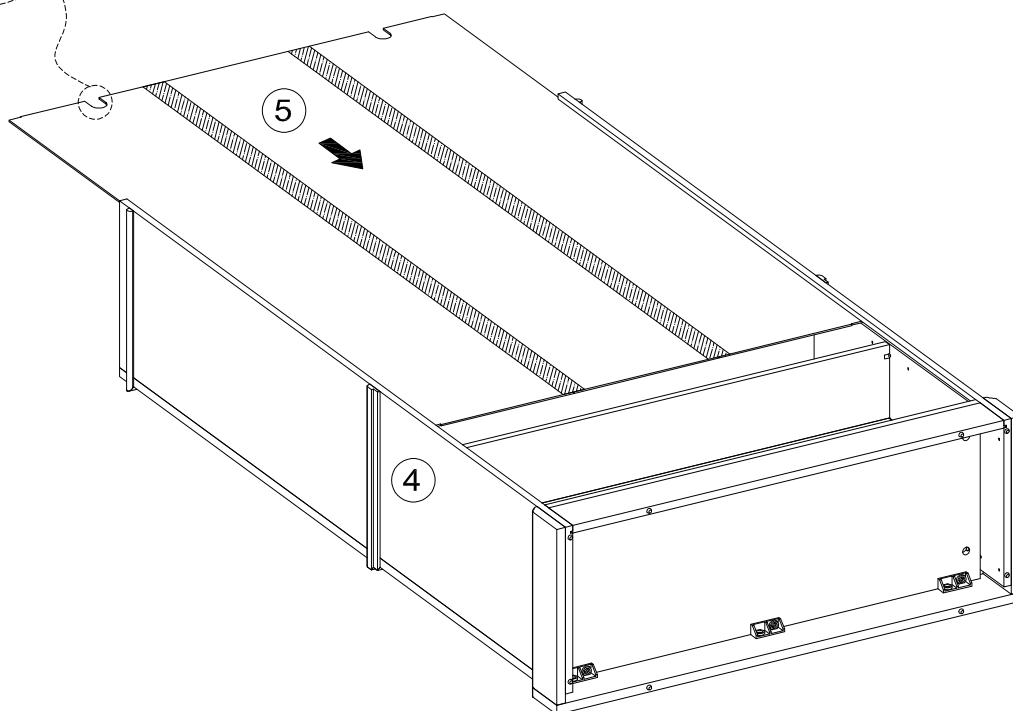


STEP 9

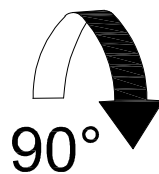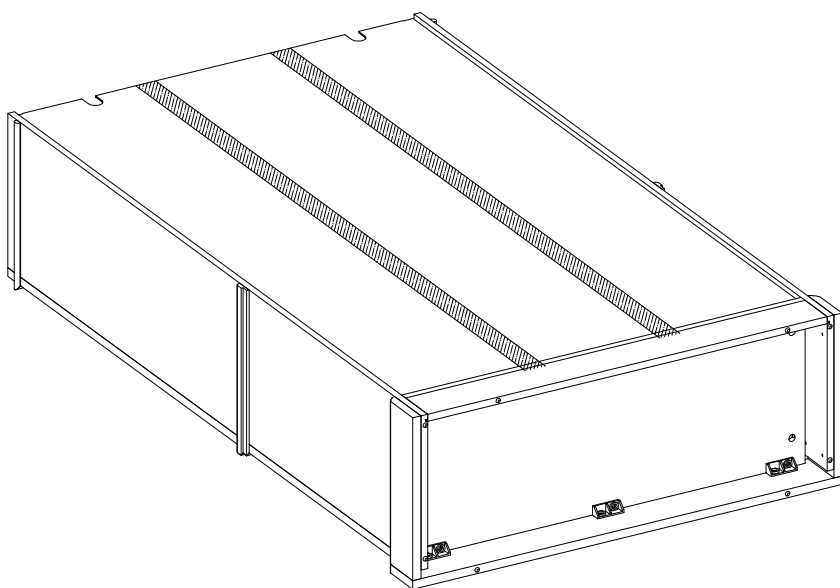


Stand the cabinet upright, then make sure the back panel is fully inserted into the grooves.

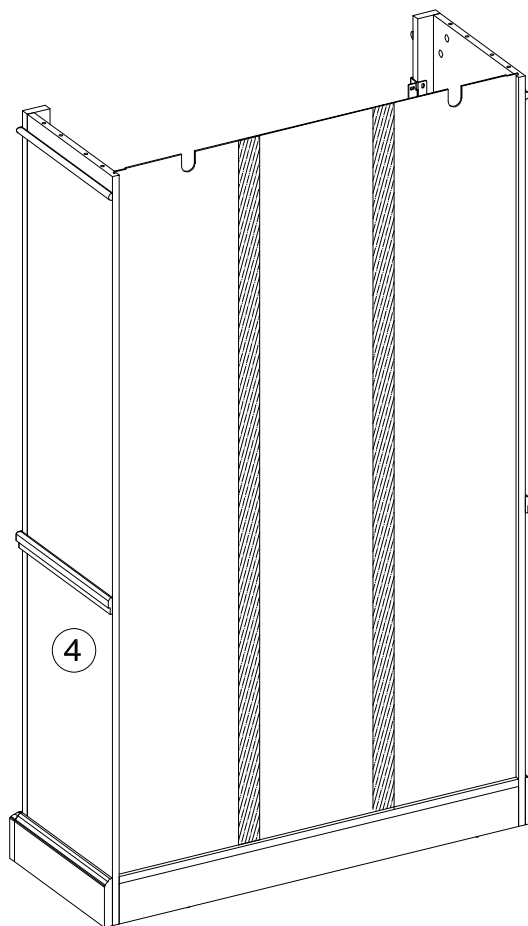

STEP 10





Mx1




Gx2



Vx2

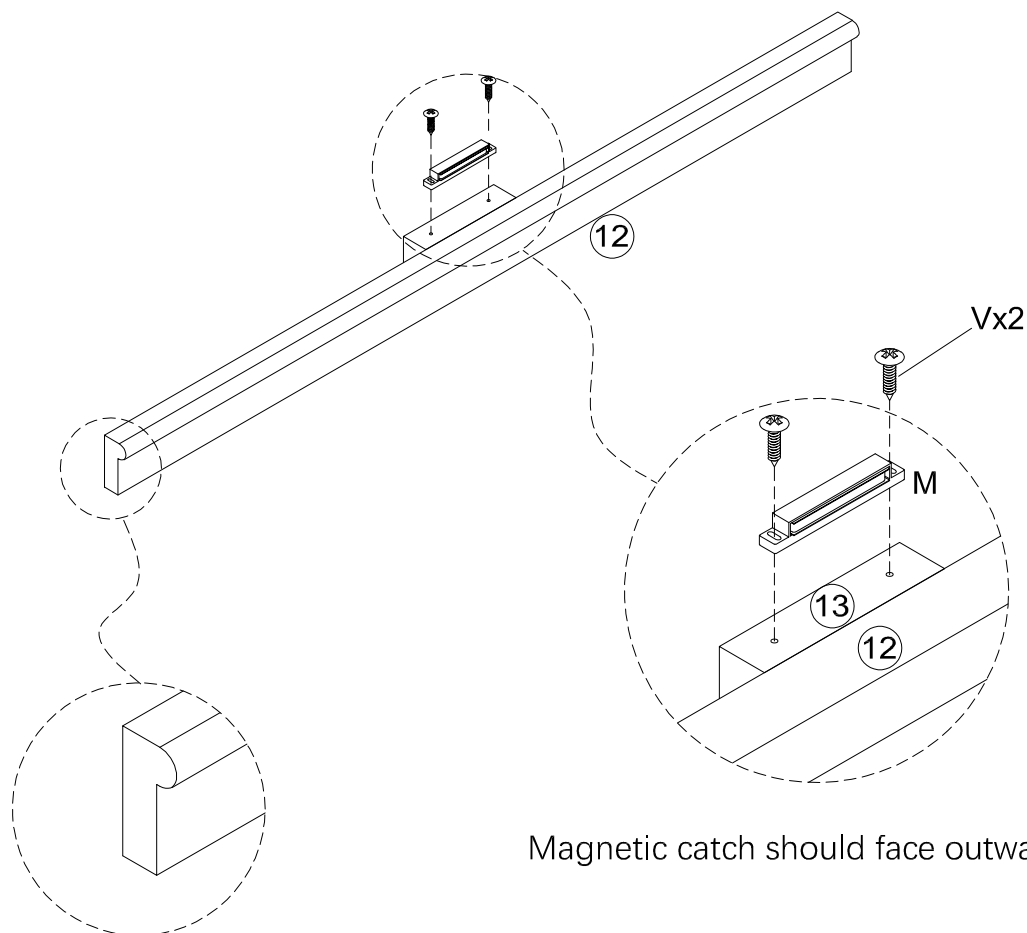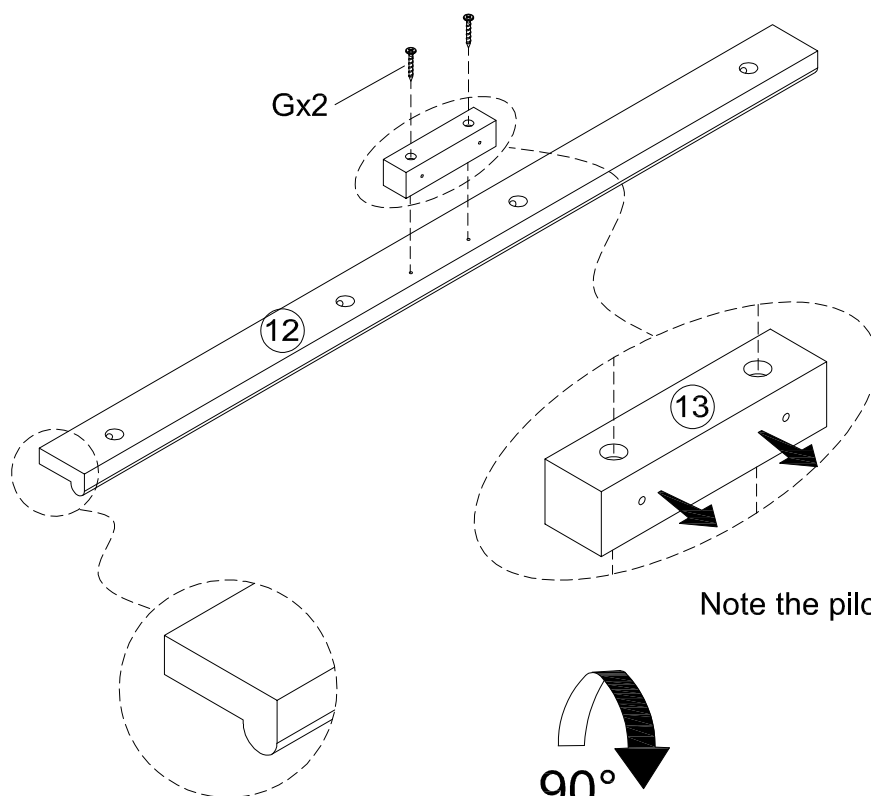

STEP 11




Ax8






Bx4



Dx2



Sx2

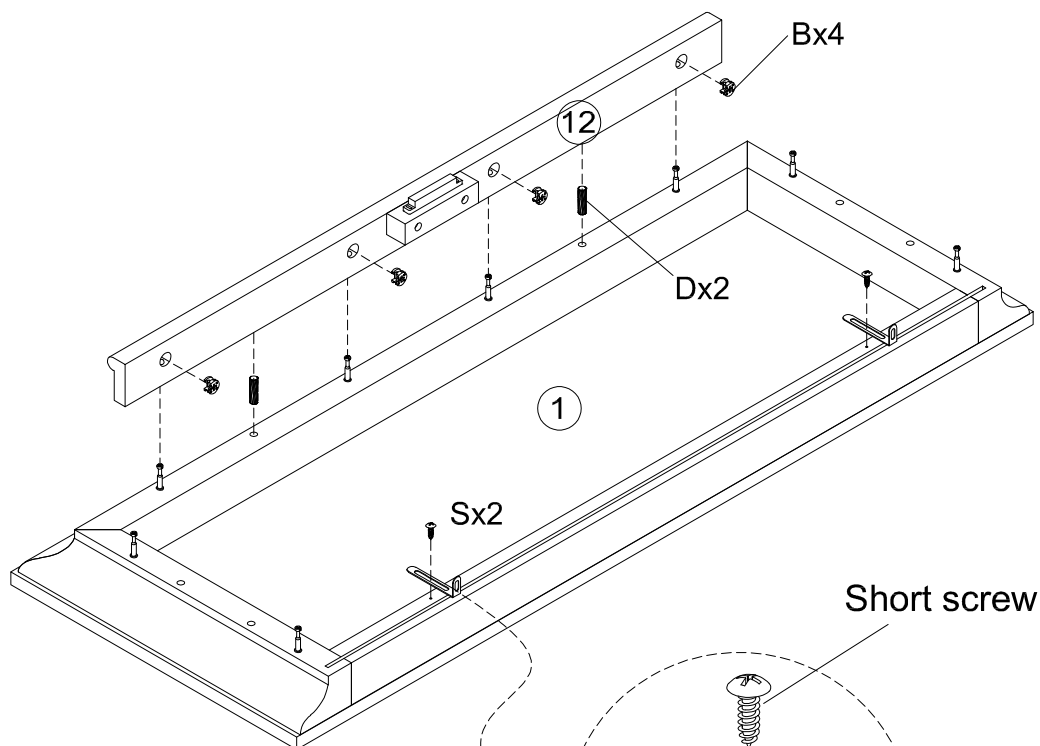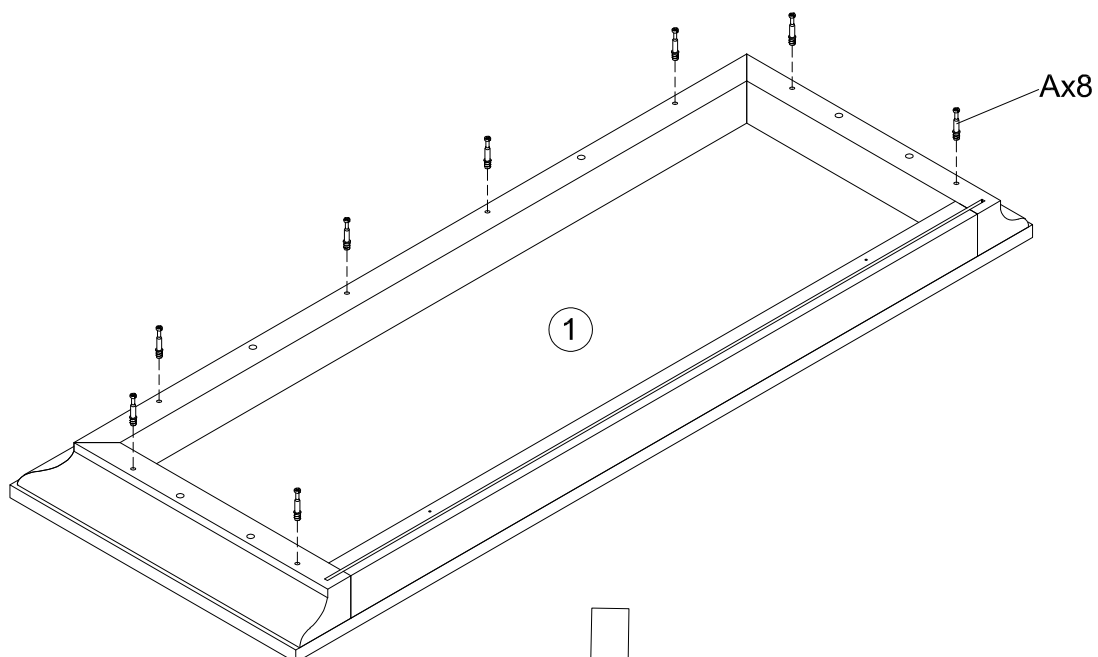

Short screw

Do not tighten

L shape bracket



STEP 12




Bx4



Dx4

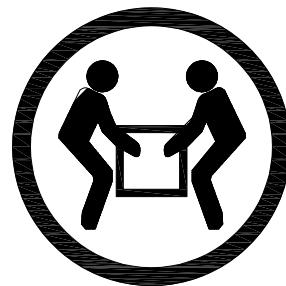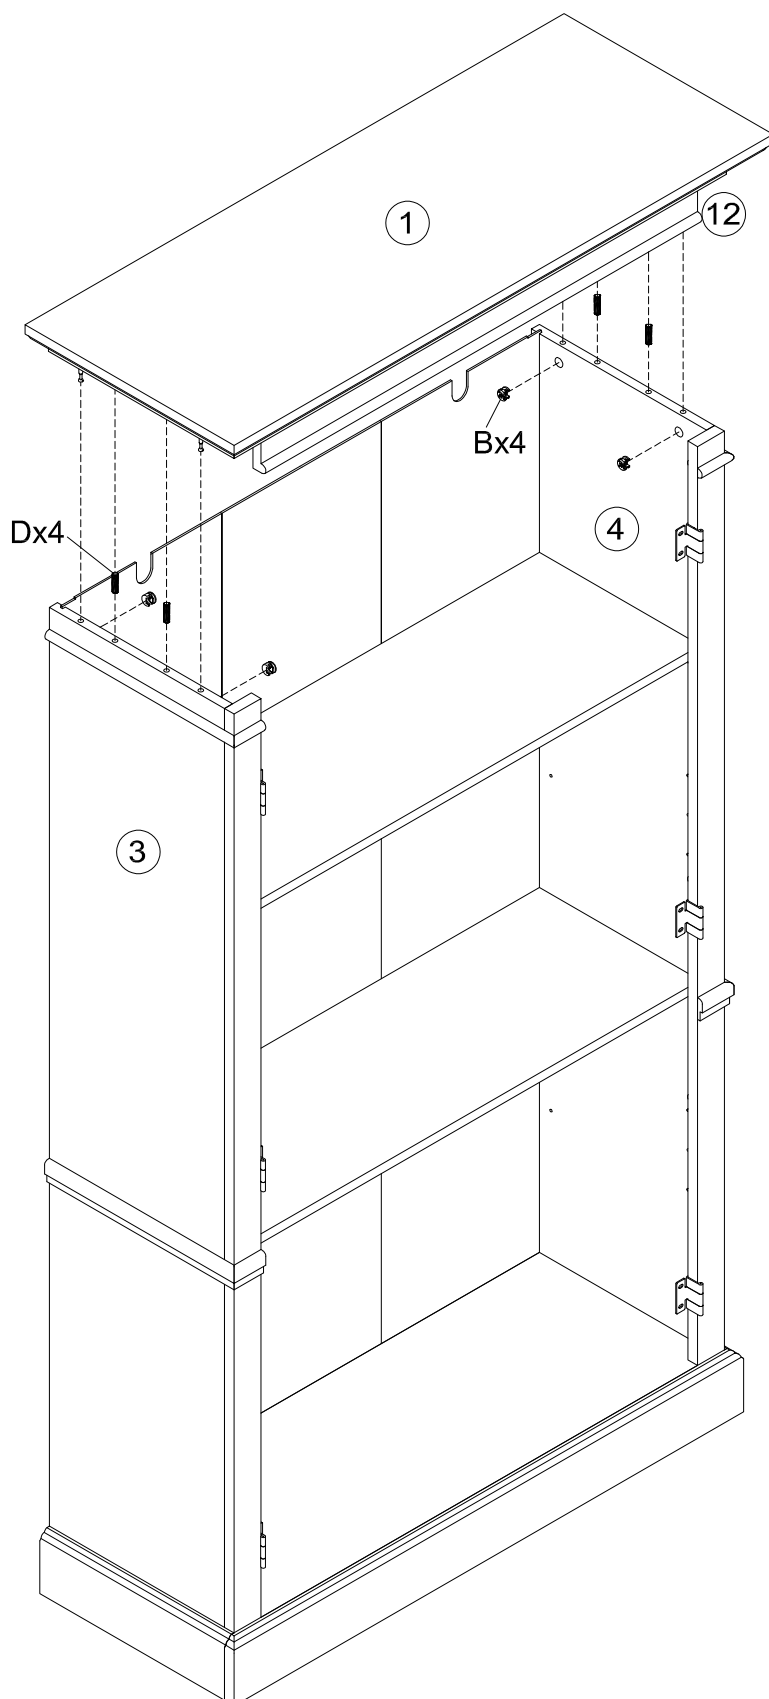

CAUTION: Heavy! You may need assistance with this step.

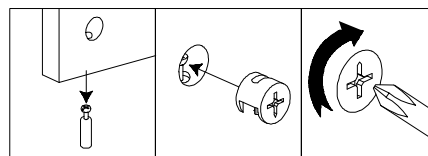


STEP 13


Ox16


Px16


Ux12


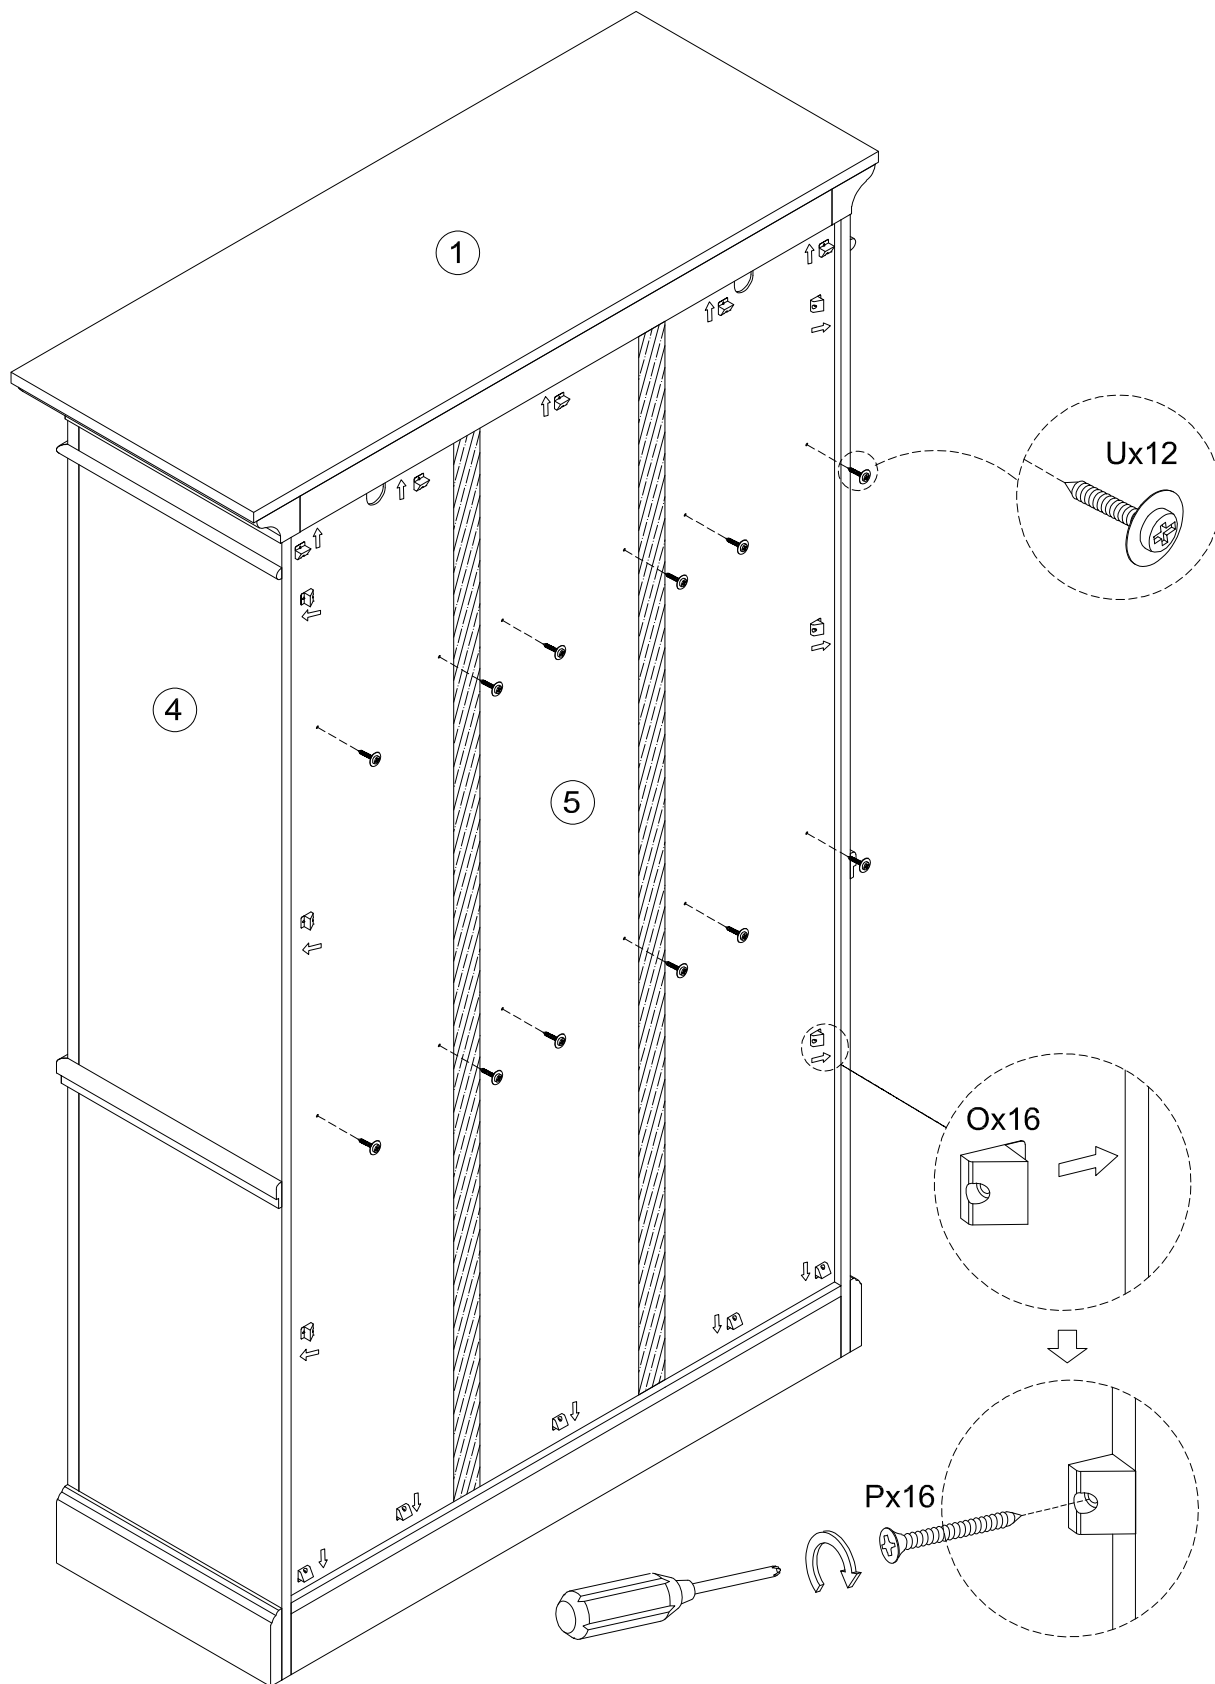


STEP 14

Cx22

Sx2





Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over, we recommend that it is permanently fixed to the wall. Wall anchor and hardware are included with this product. Please make sure hardware is suitable for your walls before installing, as different wall materials may require different types of anchors.

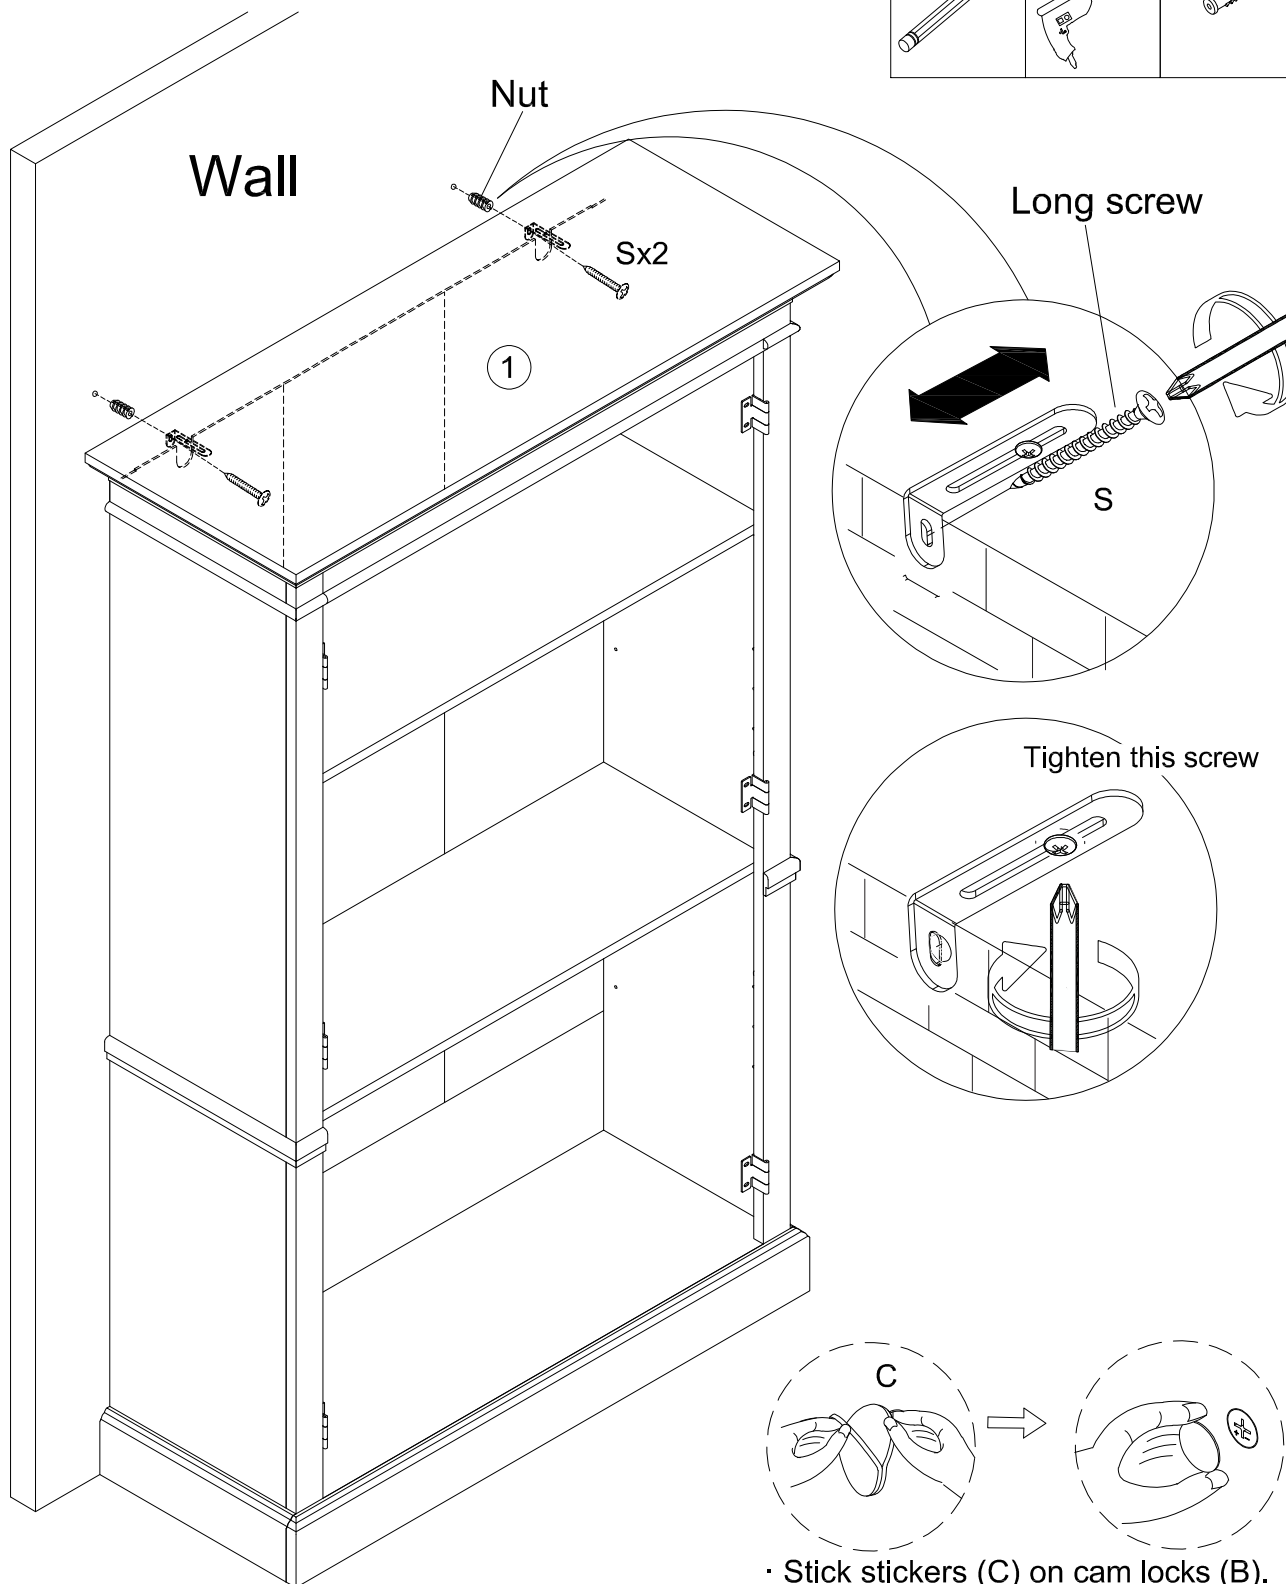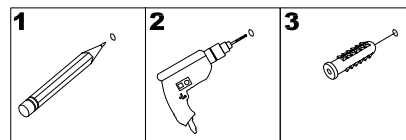

STEP 15



Qx8

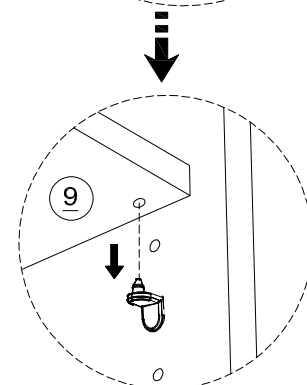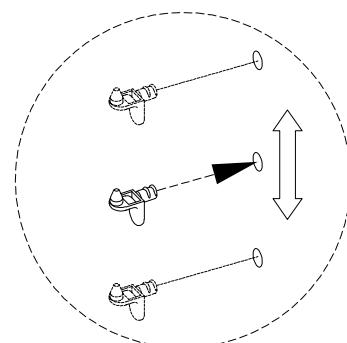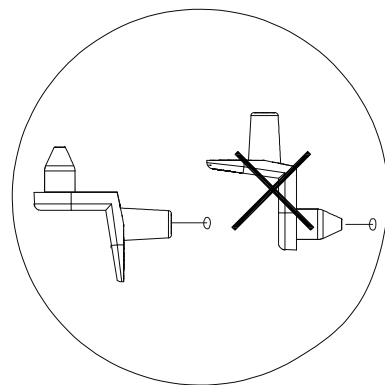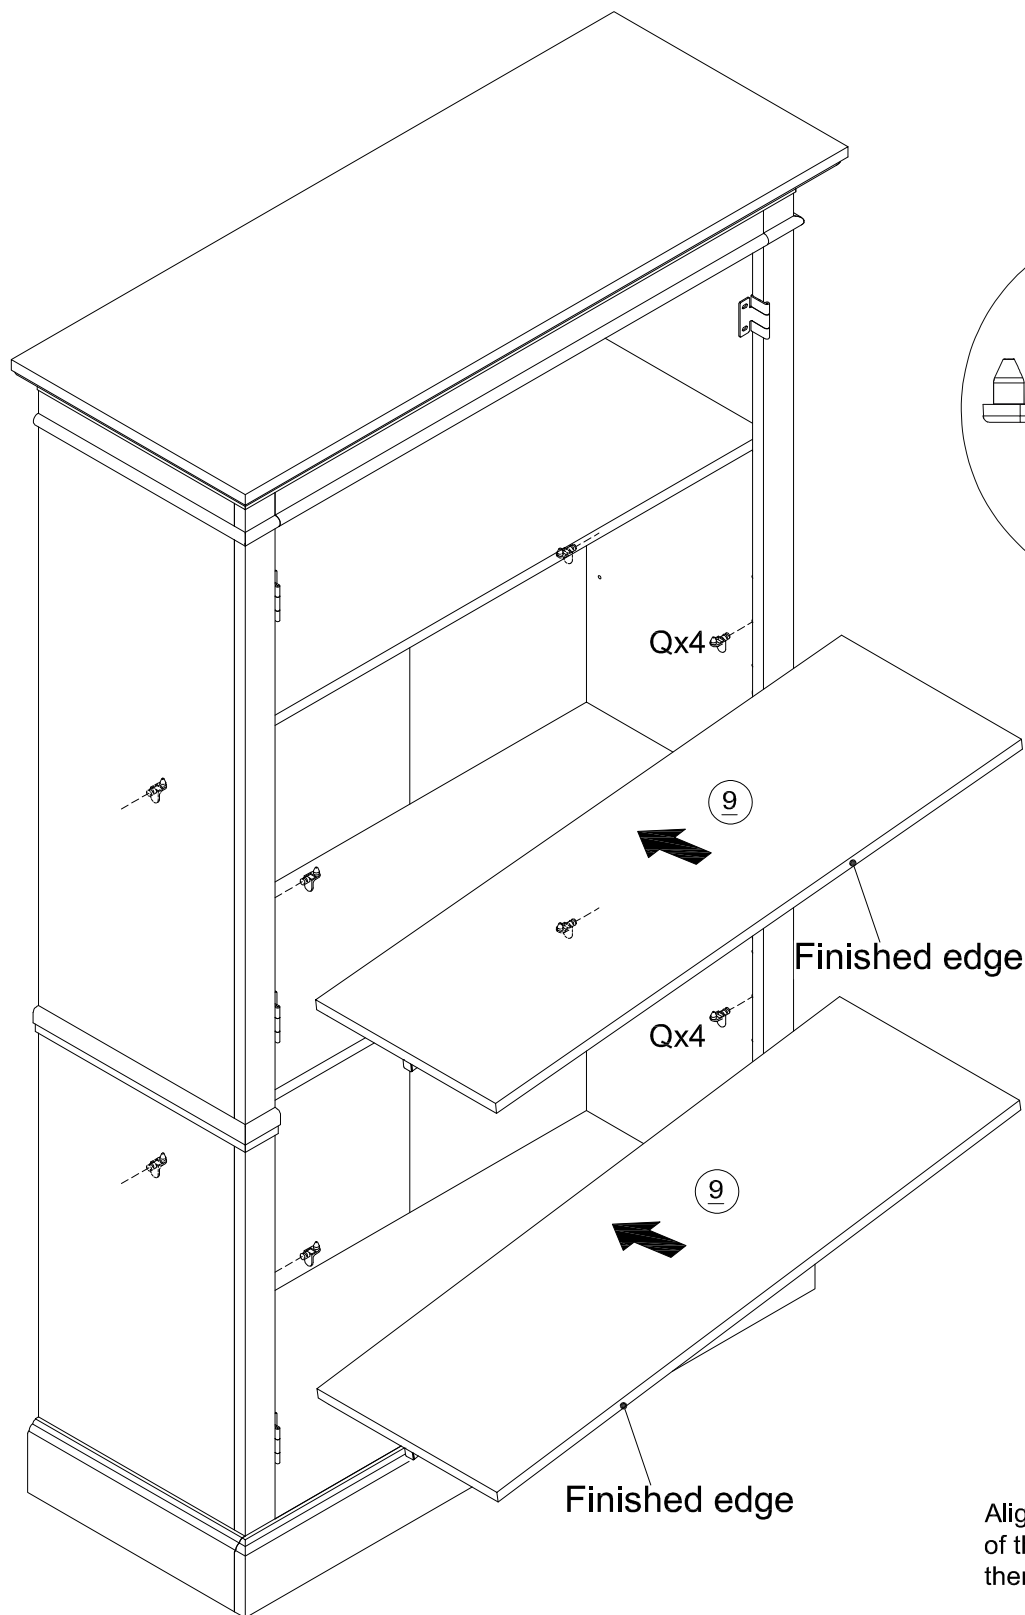

Align the holes at the bottom of the shelf with the shelf pegs, then press down.

STEP 16


Fx4

Jx4

Lx2

Rx2



Vx2

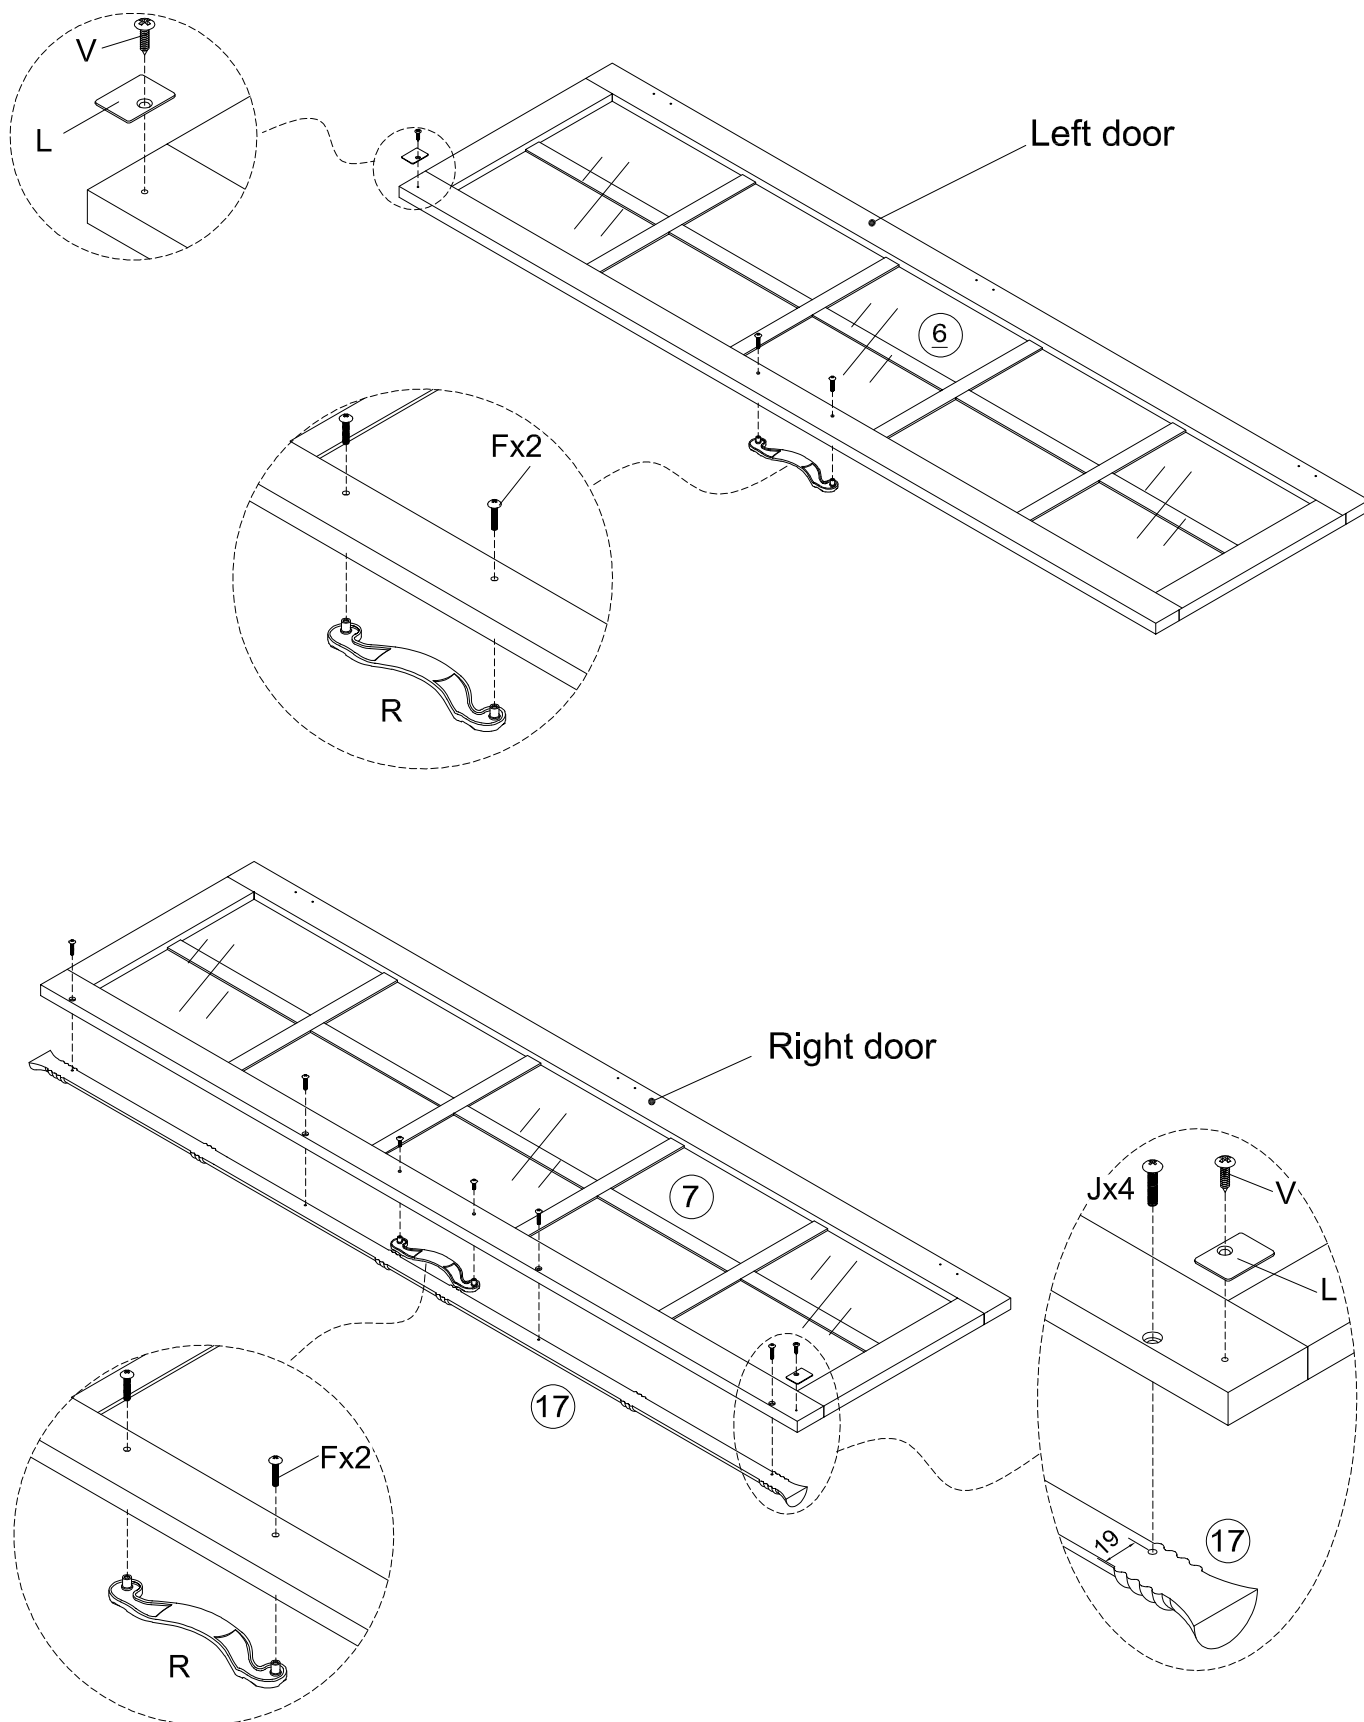

STEP 17




1x12

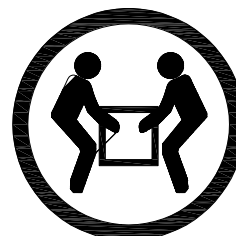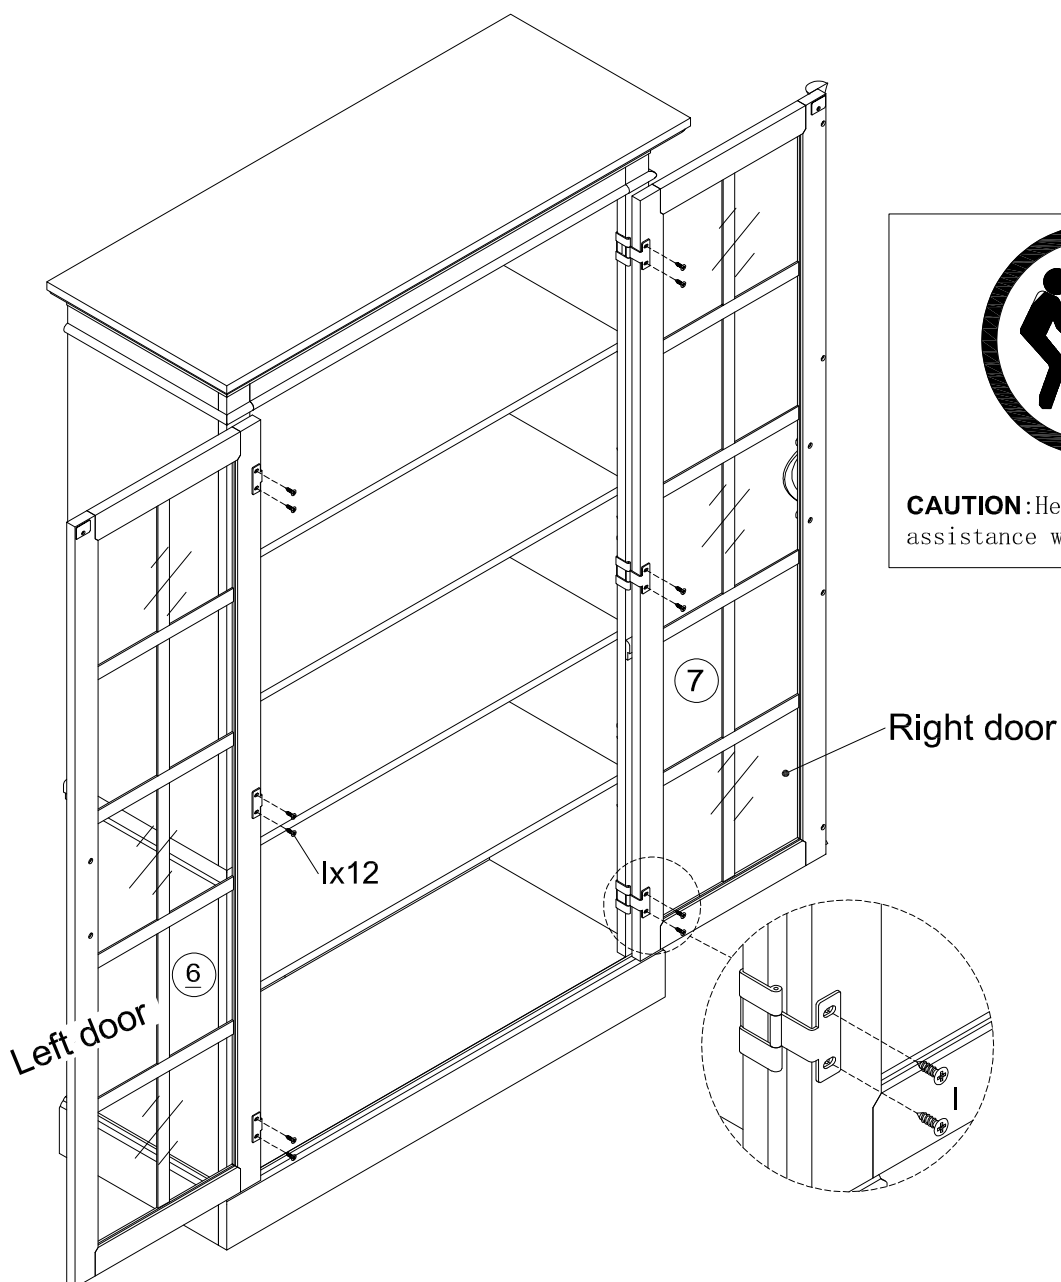


CAUTION: Heavy! You may need assistance with this step.

Adjusting The Cabinet Doors

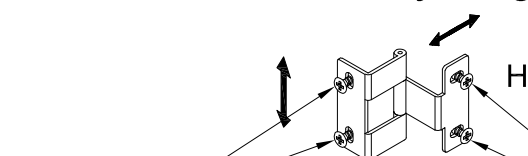

The side screw can adjust the size of the upper and lower gaps of the door.

This side screw can adjust the size of the left and right gaps of the door.

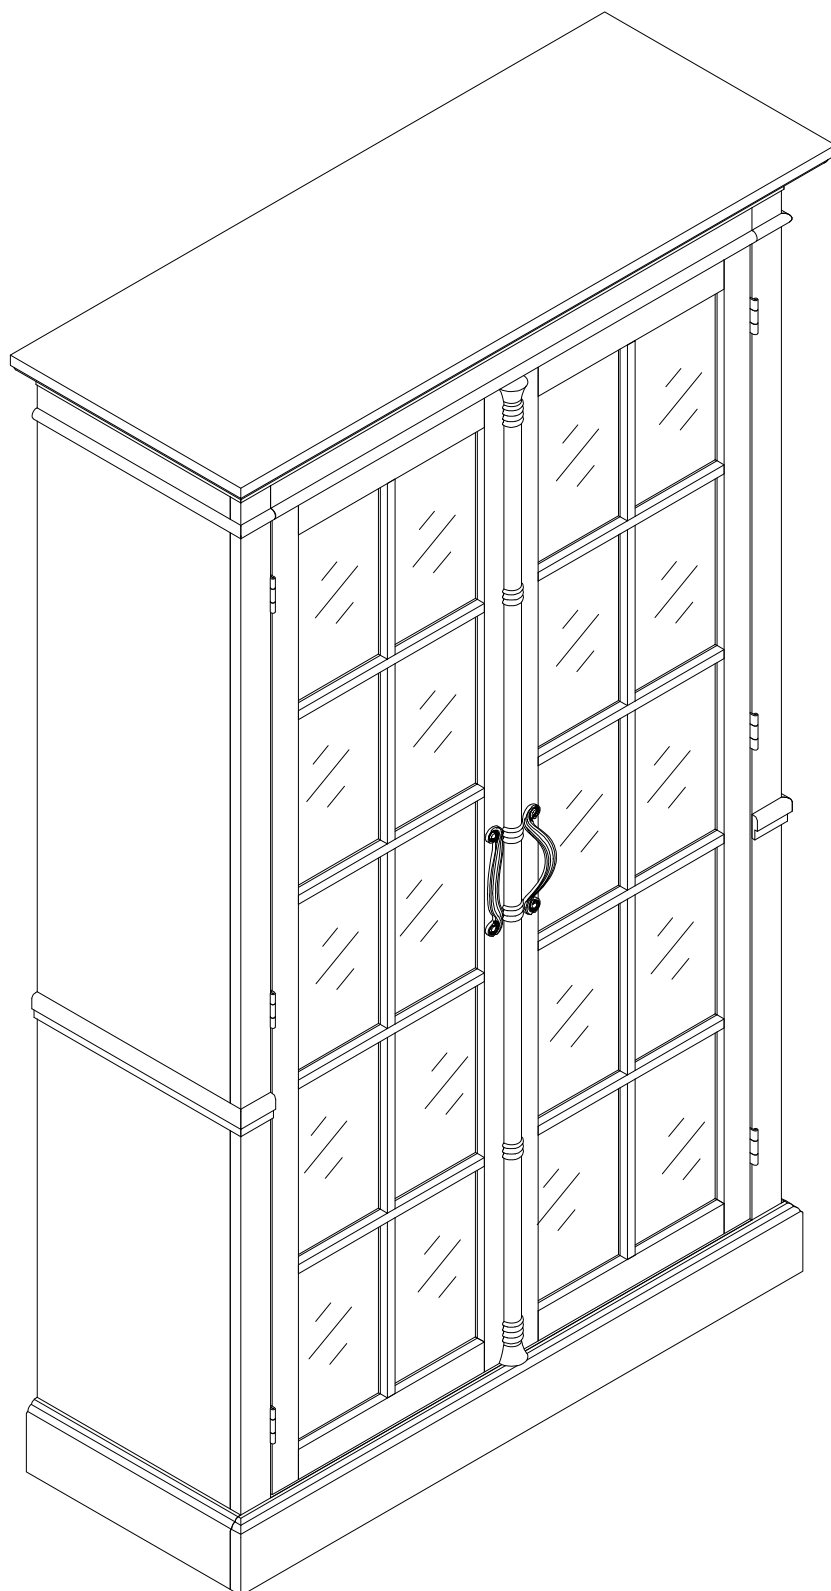

Final Assembly