

Metal Storage Cabinet

Instruction Manual

Your new Metal Storage Cabinet has arrived and it will make your life so much easier. That's why we put so much effort into designing it to perfectly fit your needs.



But first things first, we need to install it!
When we say 'we', we mean we're going to guide you, step by step.





















We created this instructions manual so that you won't feel overwhelmed and We also know that sometimes things just don't seem to fit, so don't hesitate to contact with our Amazon Customer Associate if you have questions or need help!


Missing A PART? DON' T WORRY, WE GOT YOUR BACK!

Compare the sketch on the next page with your package. Are all the pieces there?
However, sometimes error happen, so if anything is missing or damage, just send us an email and we will make sure to fix it!

If you find scratches on the sides of the product after you open the package.
DON' T WORRY, this is the protection of express packages.

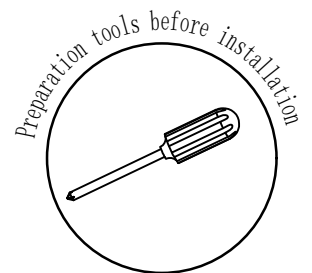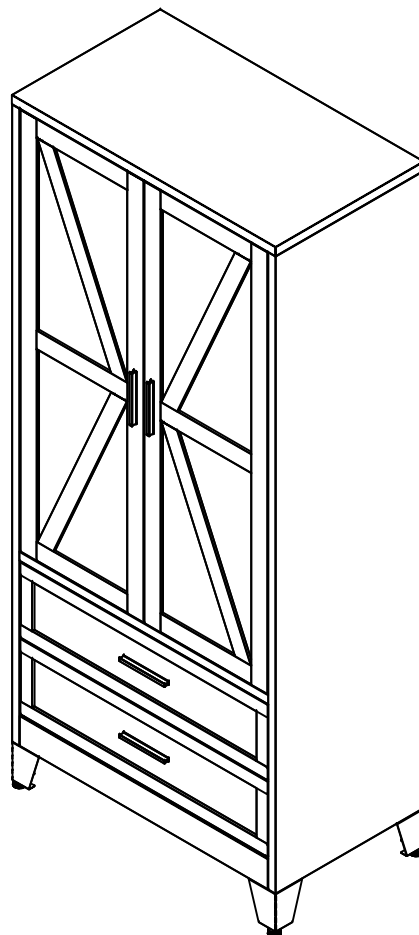

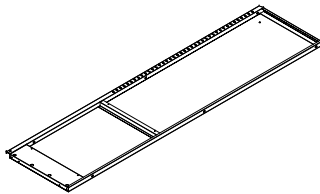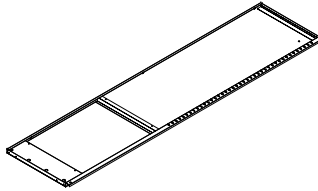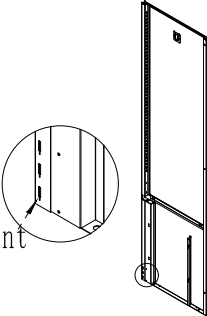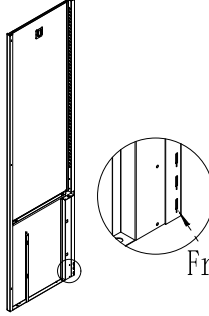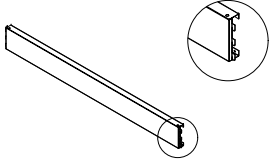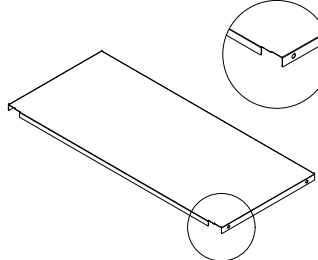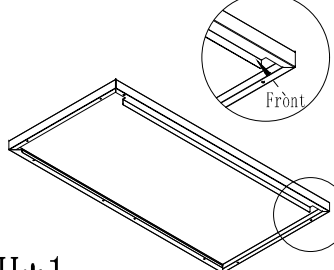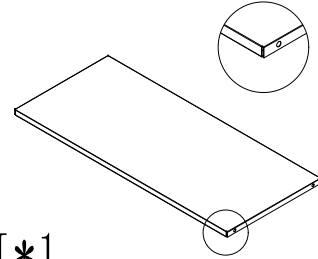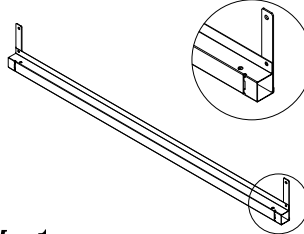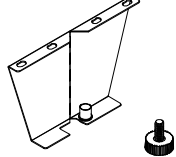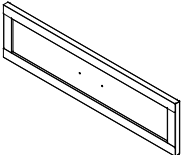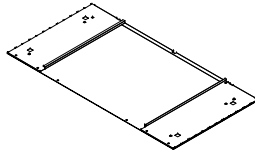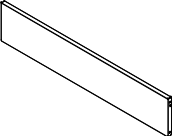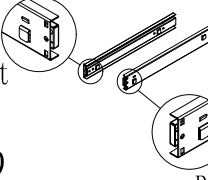 A*1	 B*1	 C*1	 D*1		
 E*1	 F*1	 H*1	 I*1		
 M*1	 G*4	 K*1	 J*1		
 X*2	 Y*2				
 Z*2	 P*2	 CC*1	 L*3		
 EE*2	 N*48	 O*4	 Q*4	 RR*40	
 S*2	 U*4	 UU*4	 V*4	 W*2	 T*4


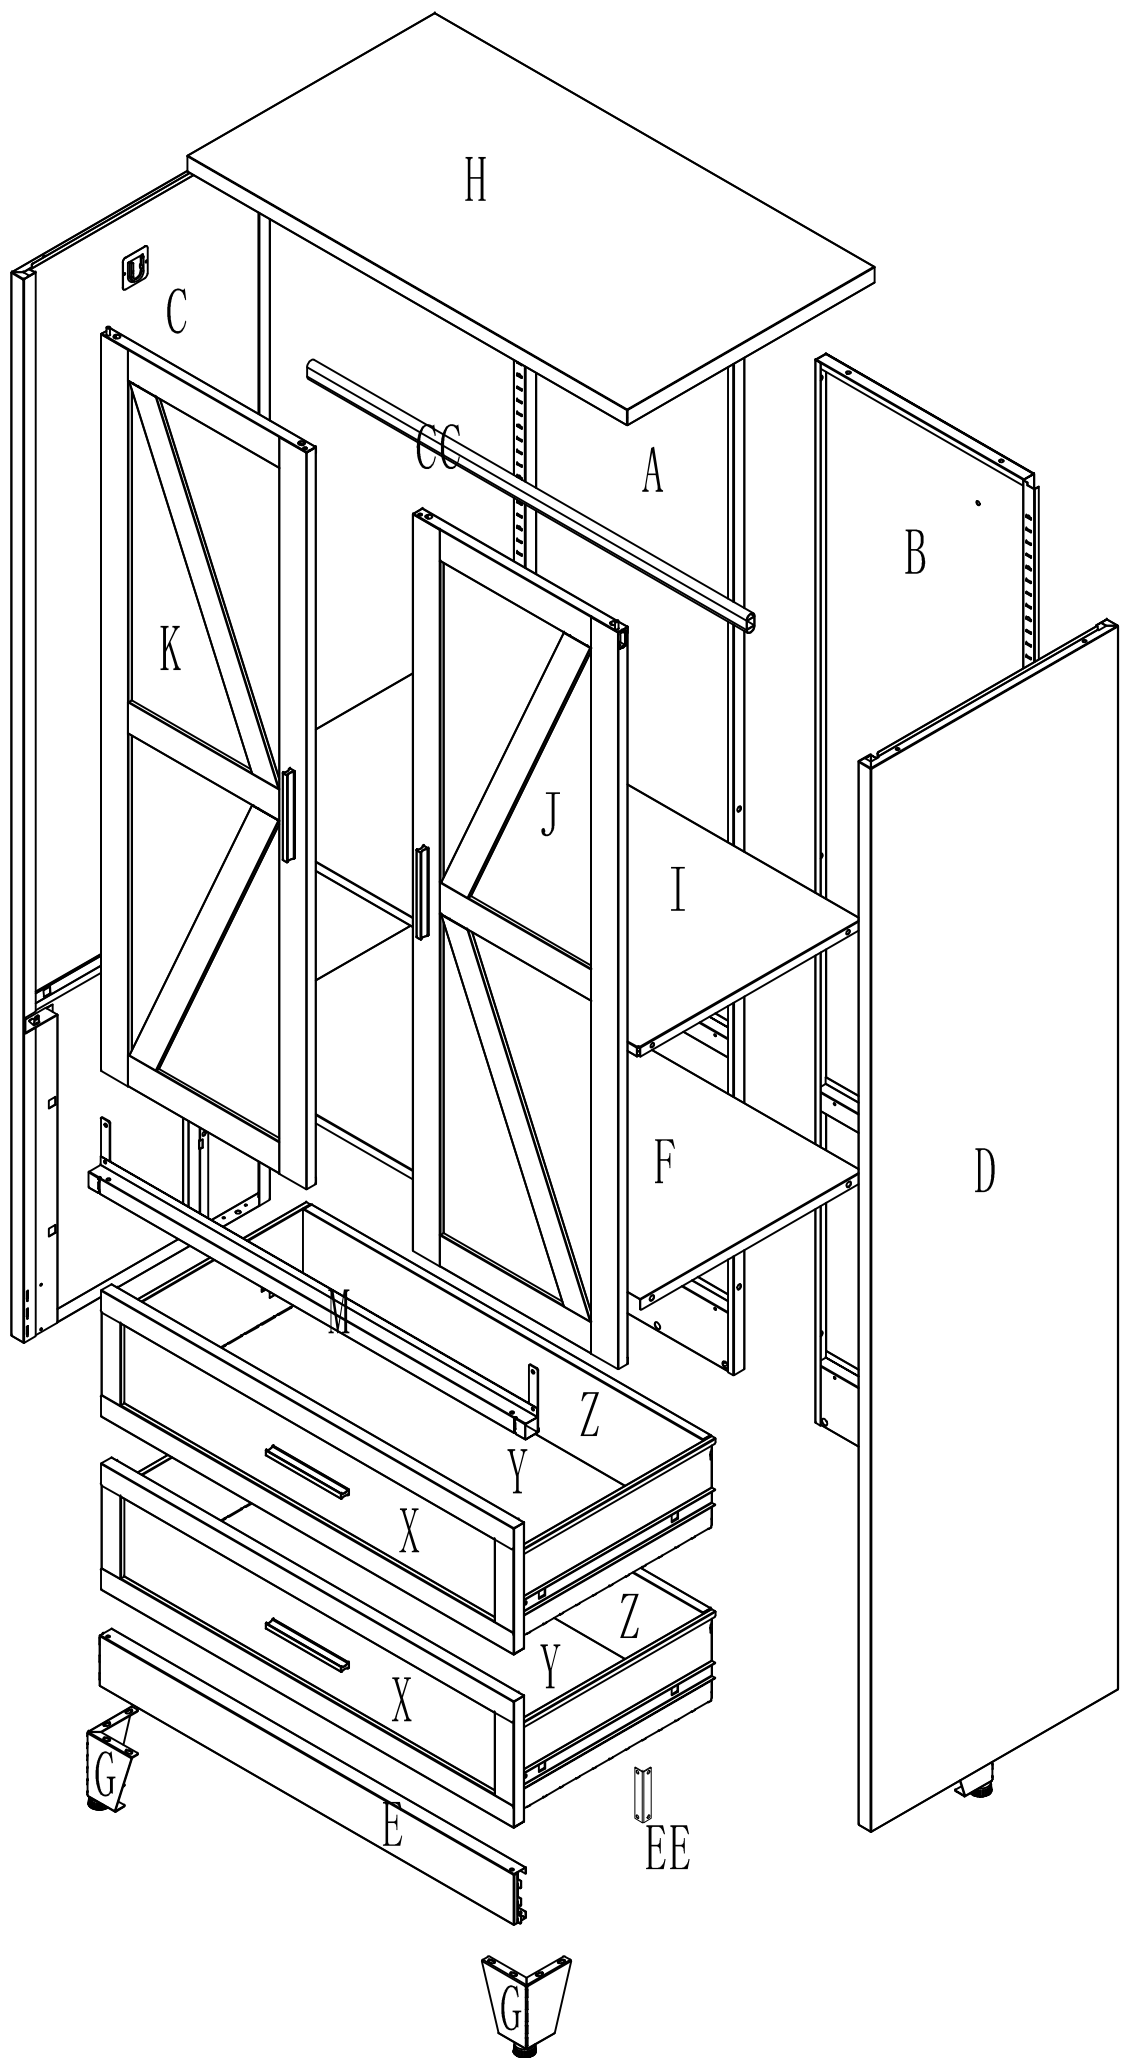


1

L*3






Let's start with the back of the cabinet. Take the back panel pieces A & B. Put the two rear walls together and put three bolts and nuts to hold them in place. (like shown in the picture)

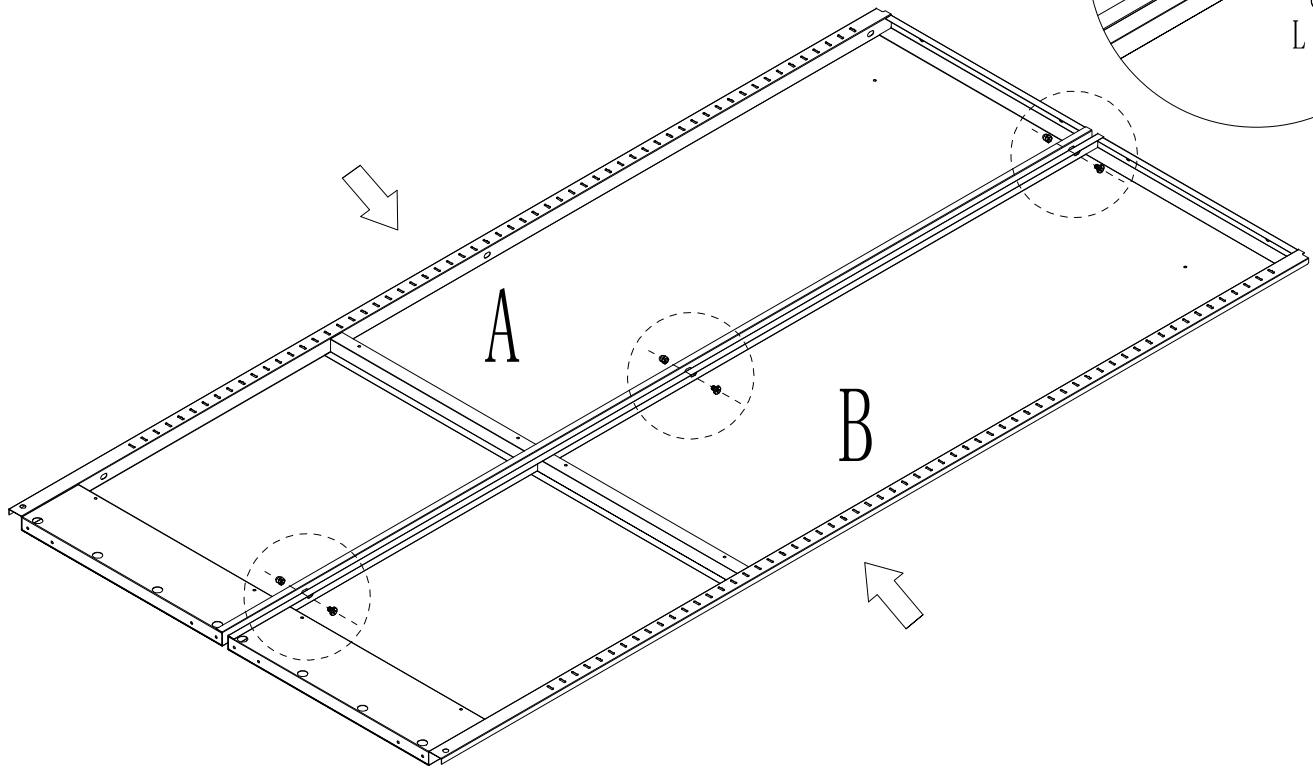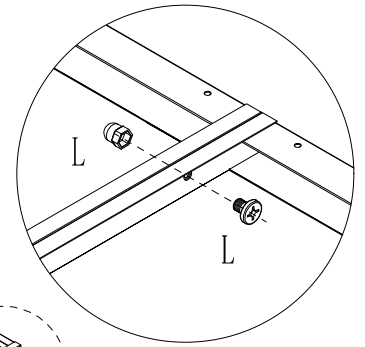

2

N*6

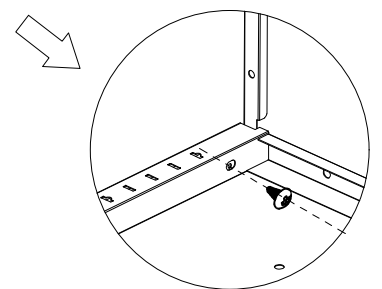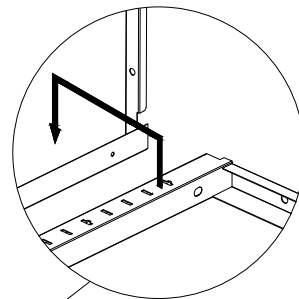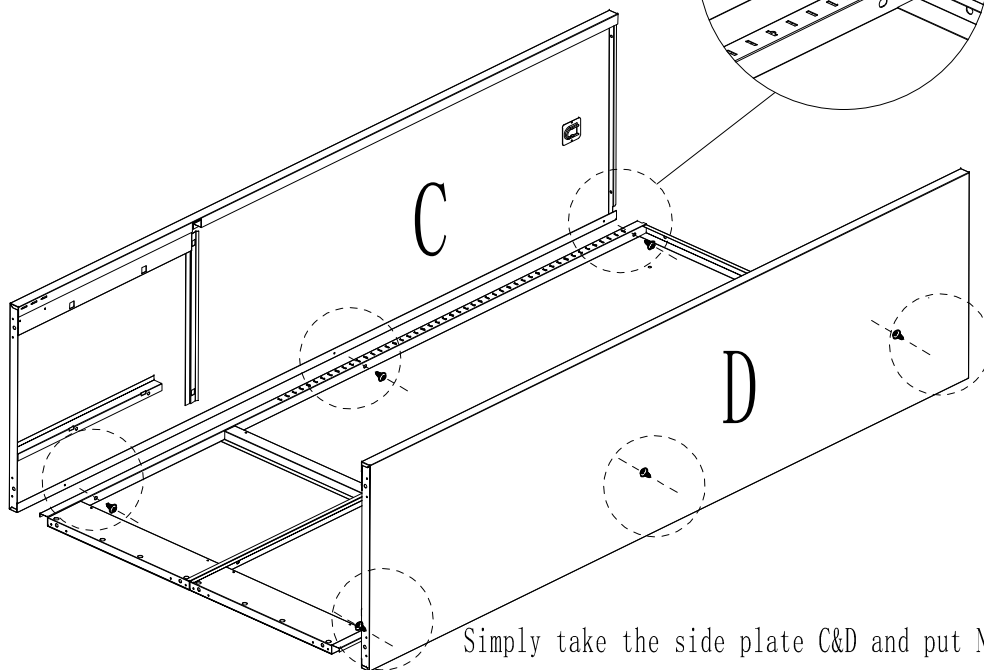


Simply take the side plate C&D and put N*3 screws on each side to hold them in place. Overlap each sidewall in the channel of the rear wall and put three screws on each side to hold them in place. Note that Part C is on the left side and Part D is on the right side. If they are misplaced, it will affect the assembly.

3

N*8 


Snap the three buckles on either side of Part E into the three holes in both side panels and then push it down. Install the E*2 part with N*4 screw as shown in the picture, and this EE is installed on the inside of the E part (Note* The screw is installed from the inside at the time of installation)

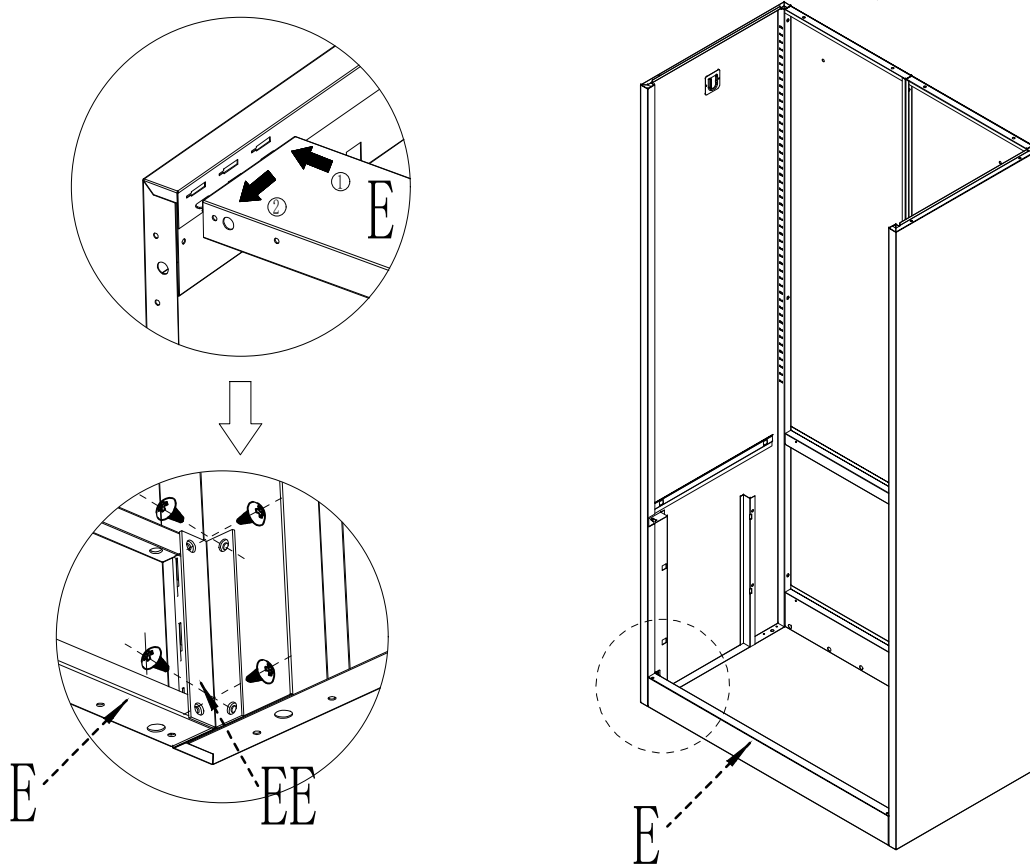

4

N*4 



Install the fixing rod M and fix the N*4 screws on the back of the rod.

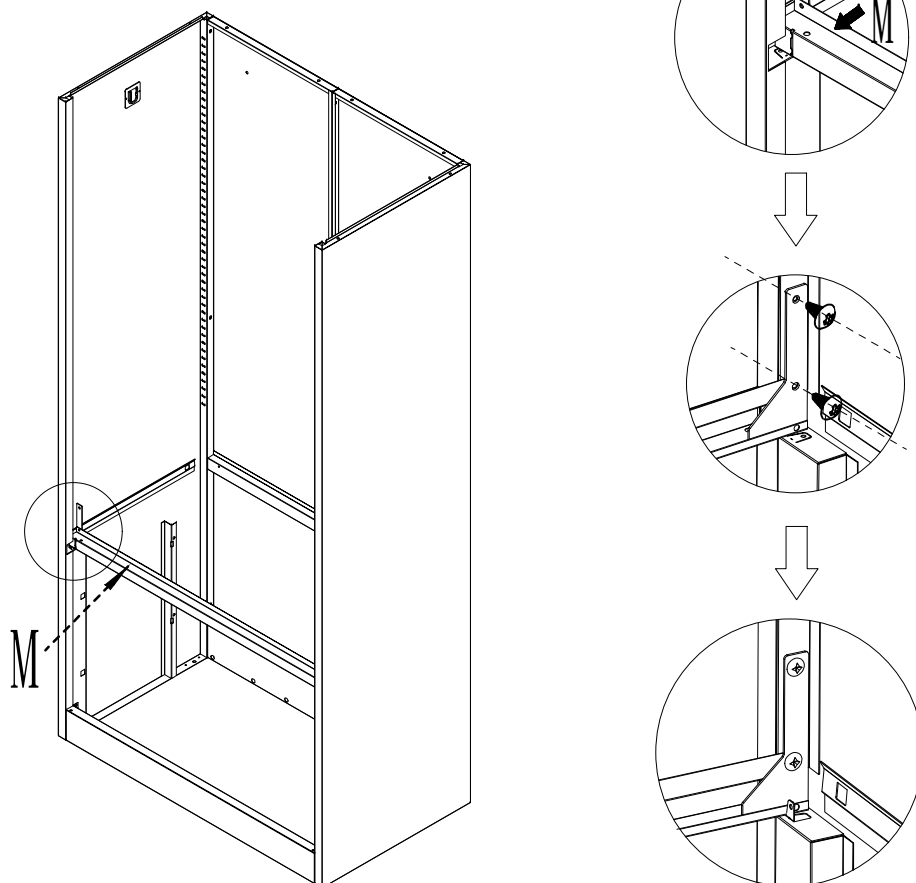

5

RR*8 






Take Top Frame H*1, Fasten in place using RR*8 screws through the holes in each corner. Insert it through cabinet ,Push it until well fixed.

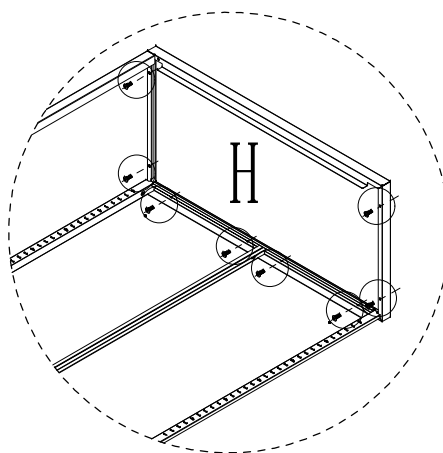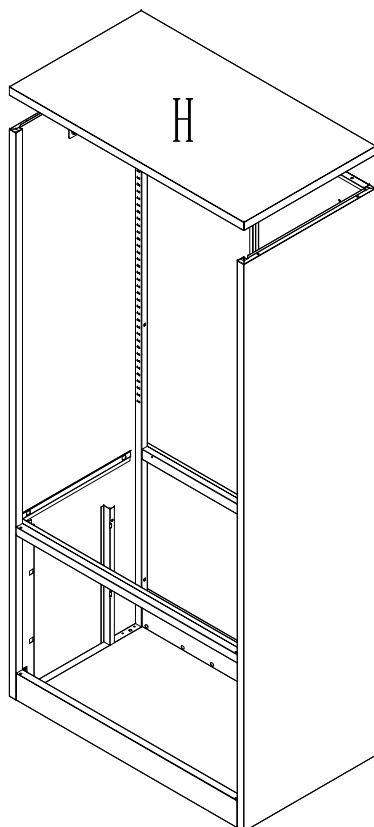

6

N*2 

When placing Part F, place the notched side facing forward.
Install the set screws from middle of the bottom by using N*2.

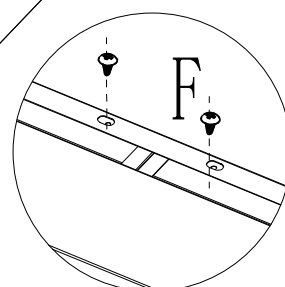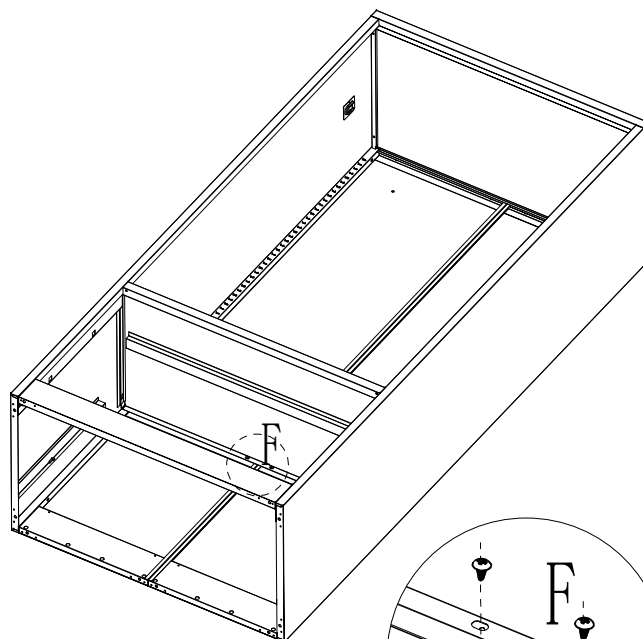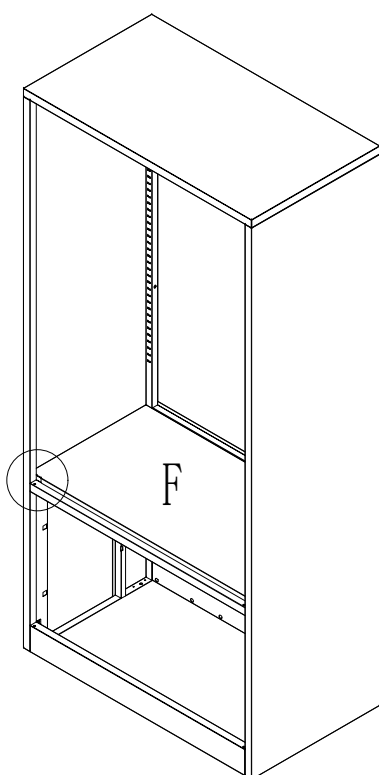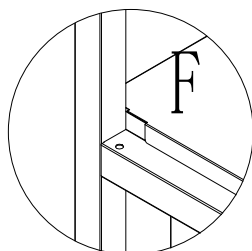
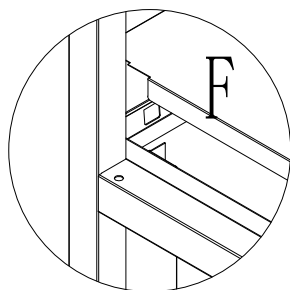


7





N*16



G*4

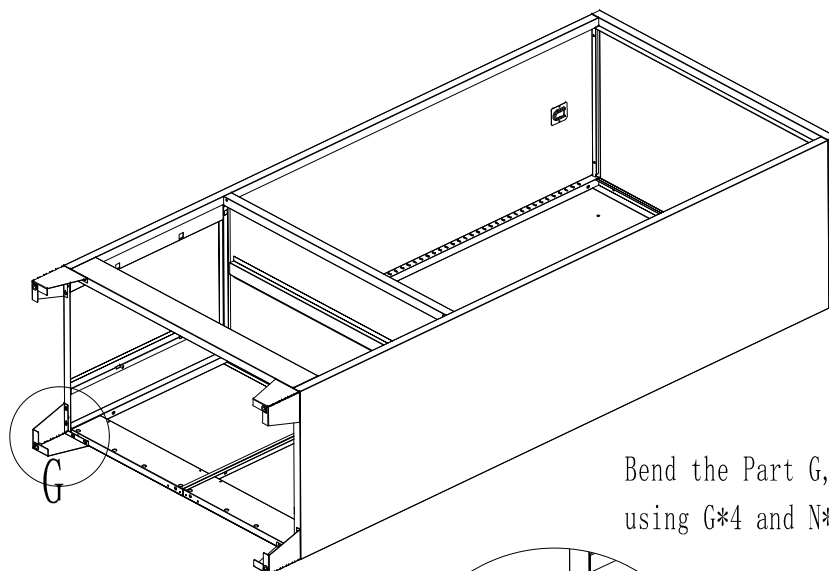

Bend the Part G, install the 4 legs by using G*4 and N*16

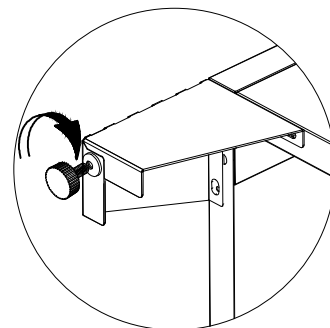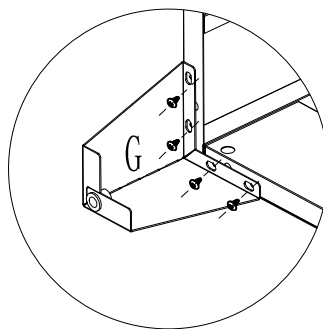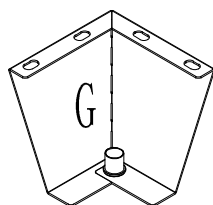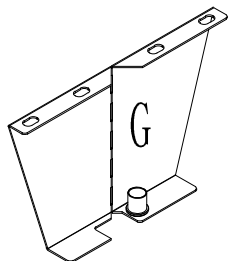

If you think it looks better without the standing corner, you can choose to skip this step (7)

8


O*4





V*4



1

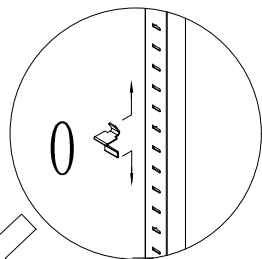


2

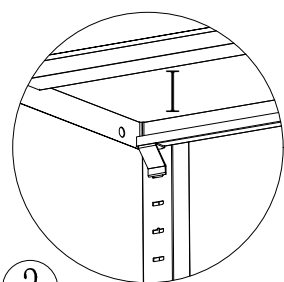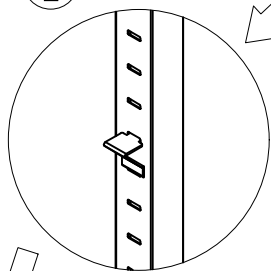


3


5

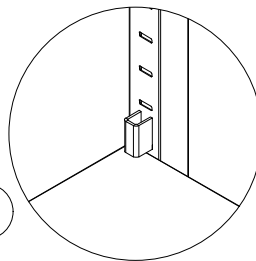

4

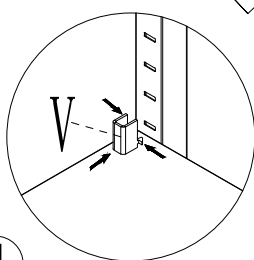

Choose where you want to mount the shelf .
Insert O*4 holders in the frame' s holes, 1 for each corner.
Then simply put the shelf I to where you needed.
Last, install the plastic grid V*4 on the top of the shelf
to make sure shelf securely.

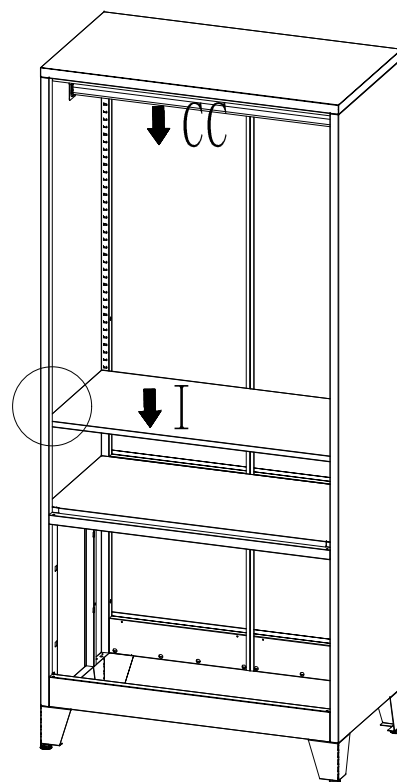

9

S*2 

Take S*2 bolt screws & insert a metal ring on it.

Insert the bolt in the bottom frame's hole (like shown in the picture below).







Take door K1 & J1.

Place the door with the bottom hole in the bolt.

Press the arch at top of the door to fix the door in the upper frame.


Make sure it is securely fastened up and down .

Move the door back & forth to test it .

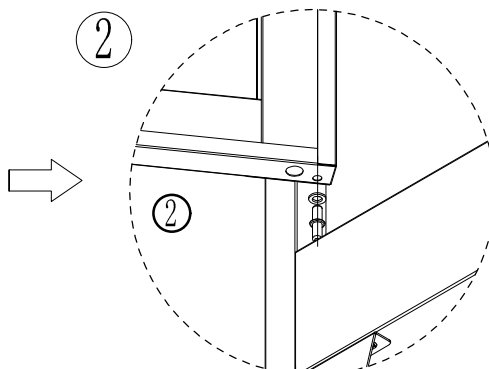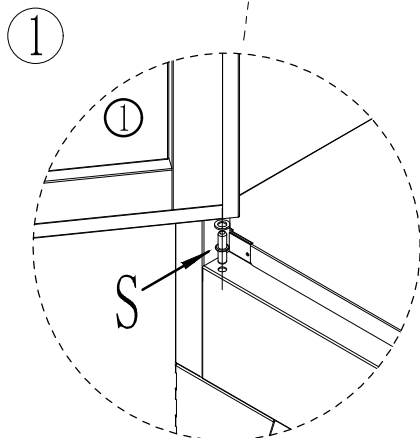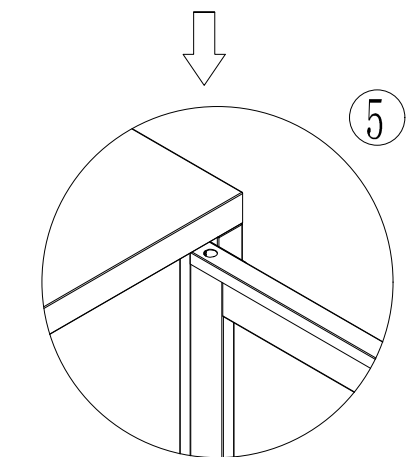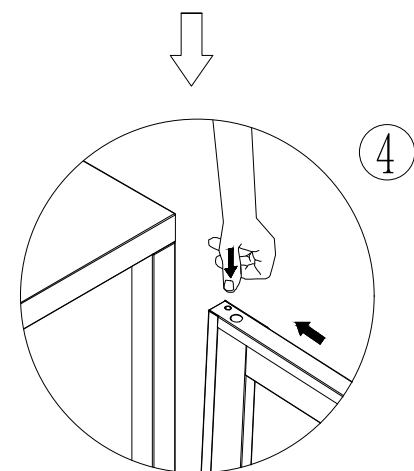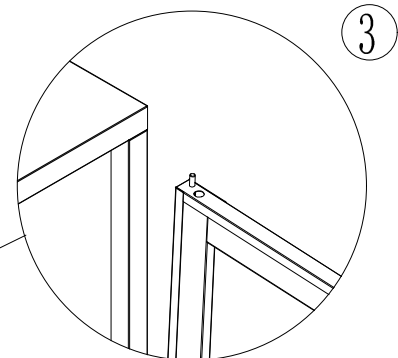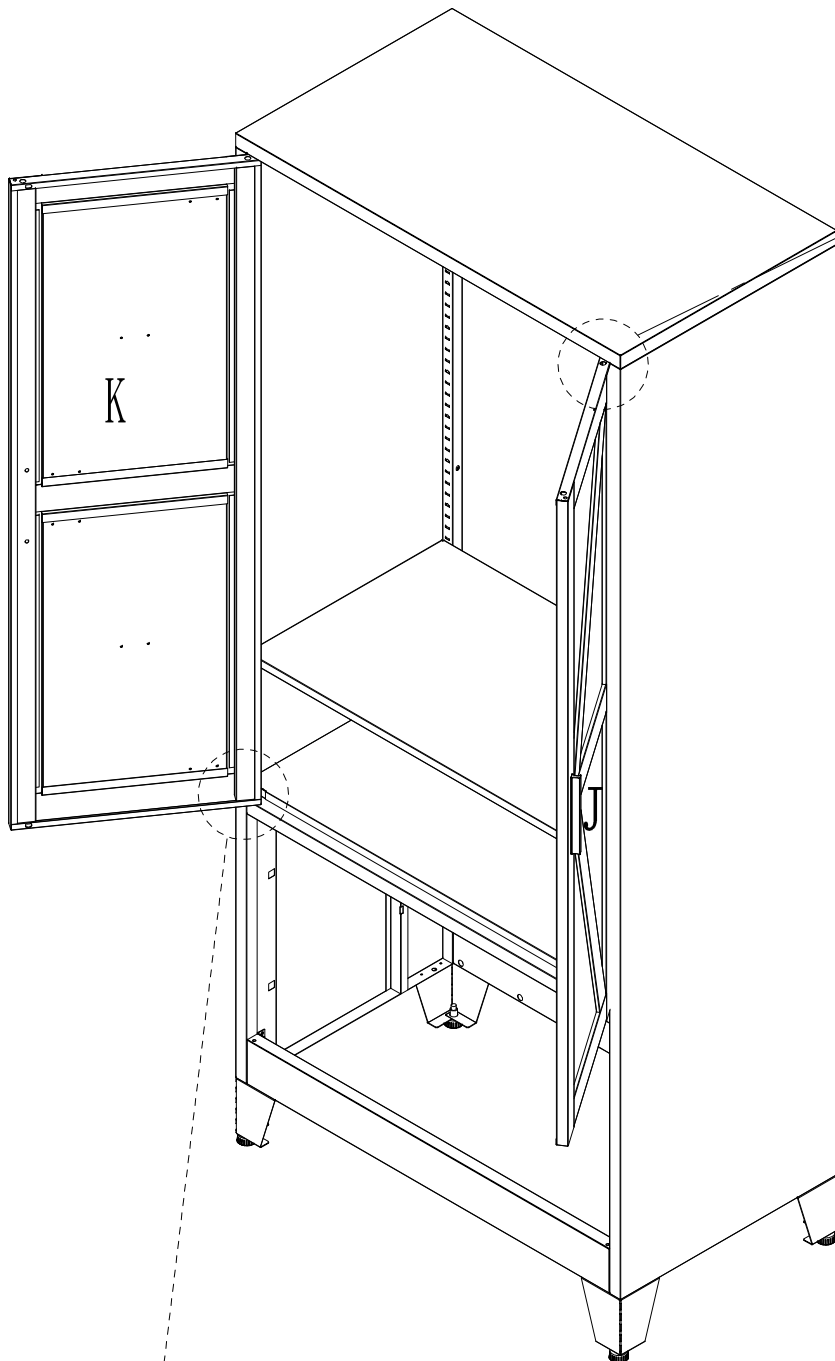


10

Q*4





T*2

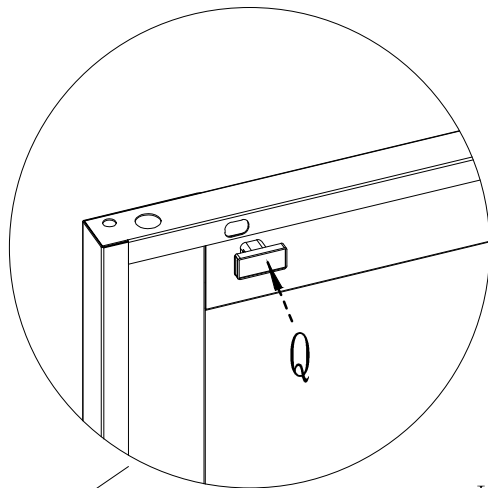




U*4



Install the Q *4 magnetic pieces
Last, Install the door handle T*2 by using
U*4.

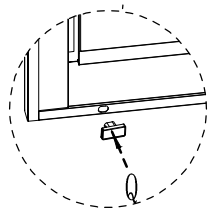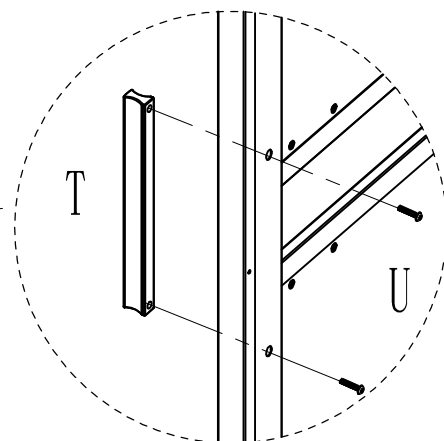

11

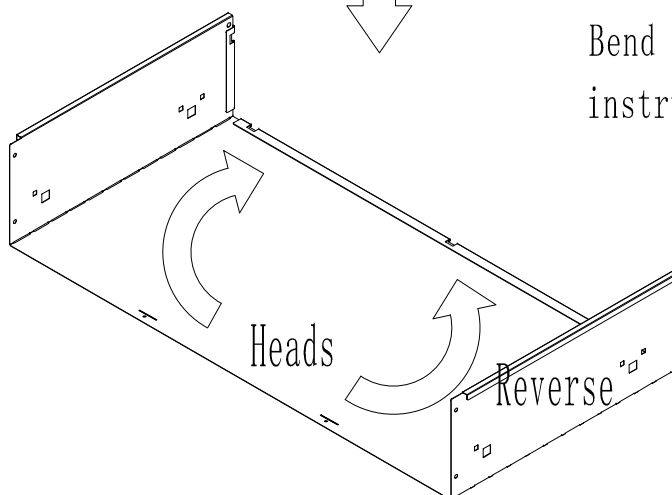

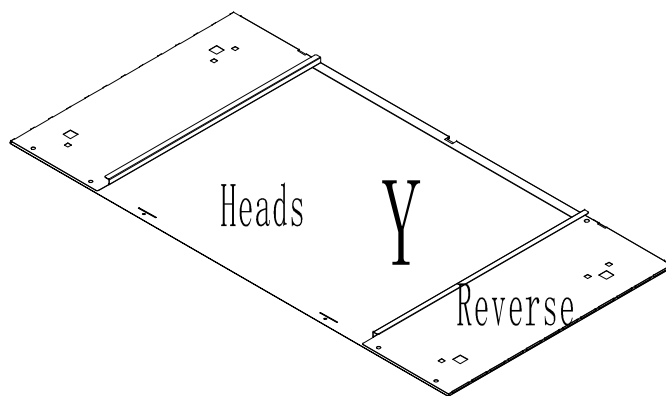


Bend the drawer box Y as the instruction shown.

12

Take parts Z, insert the middle of F and push the back drawer seal to the end.


(*make sure when you install the parts Z, the glazed panel face to you and push it to the end)

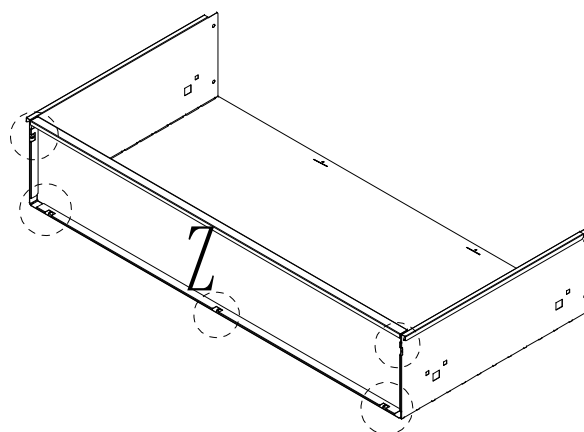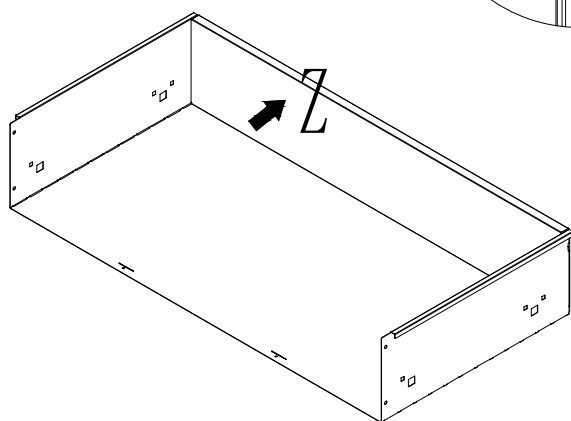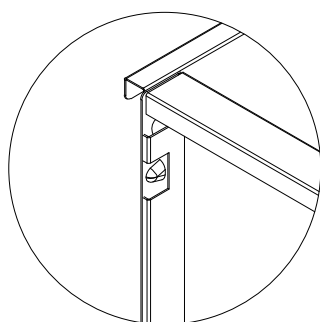

13

N*12 

Install the parts X by using 6*N screws.

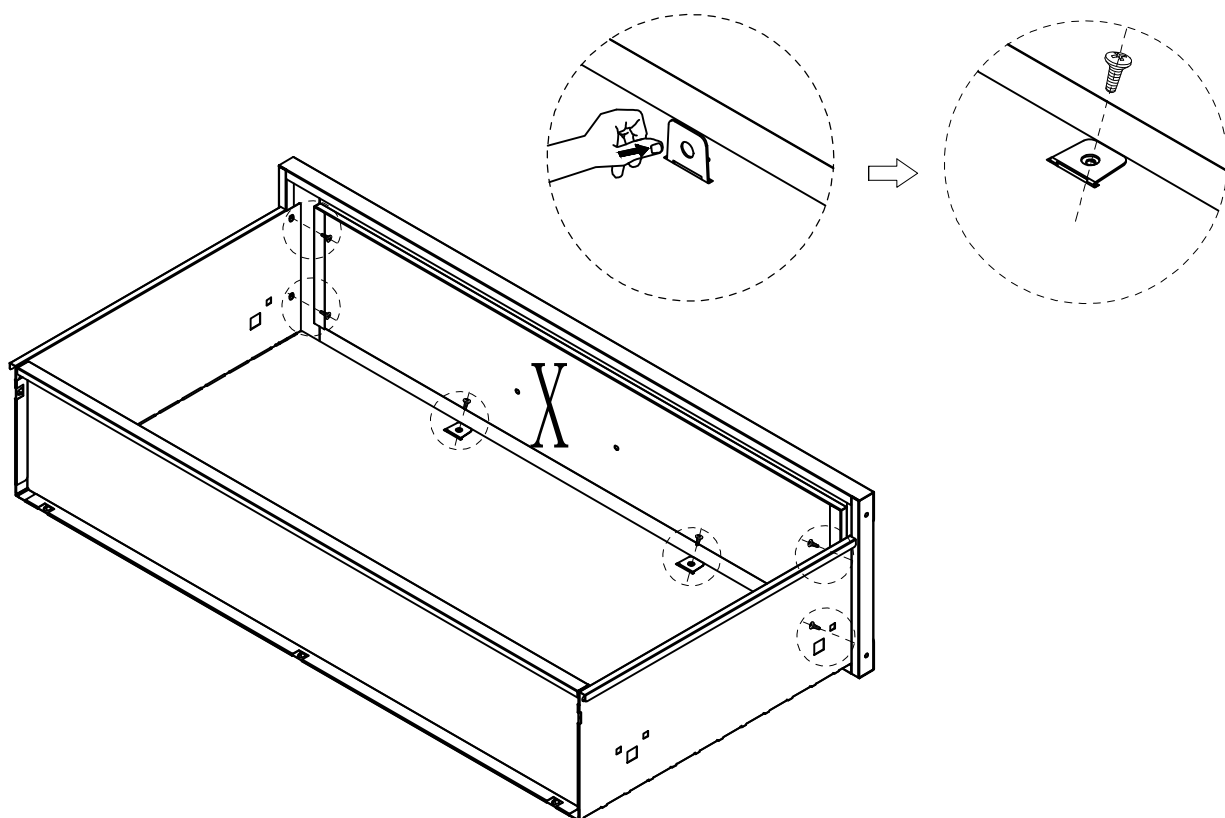


14


UU*4 

Install the drawers handle 1*T by using 2*UU screws.

T*2

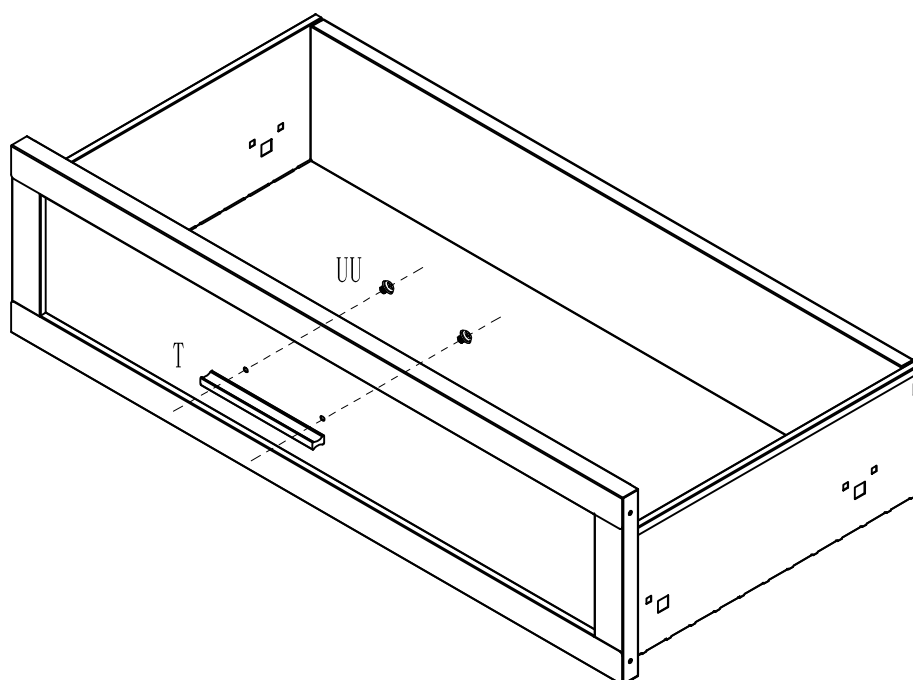


15

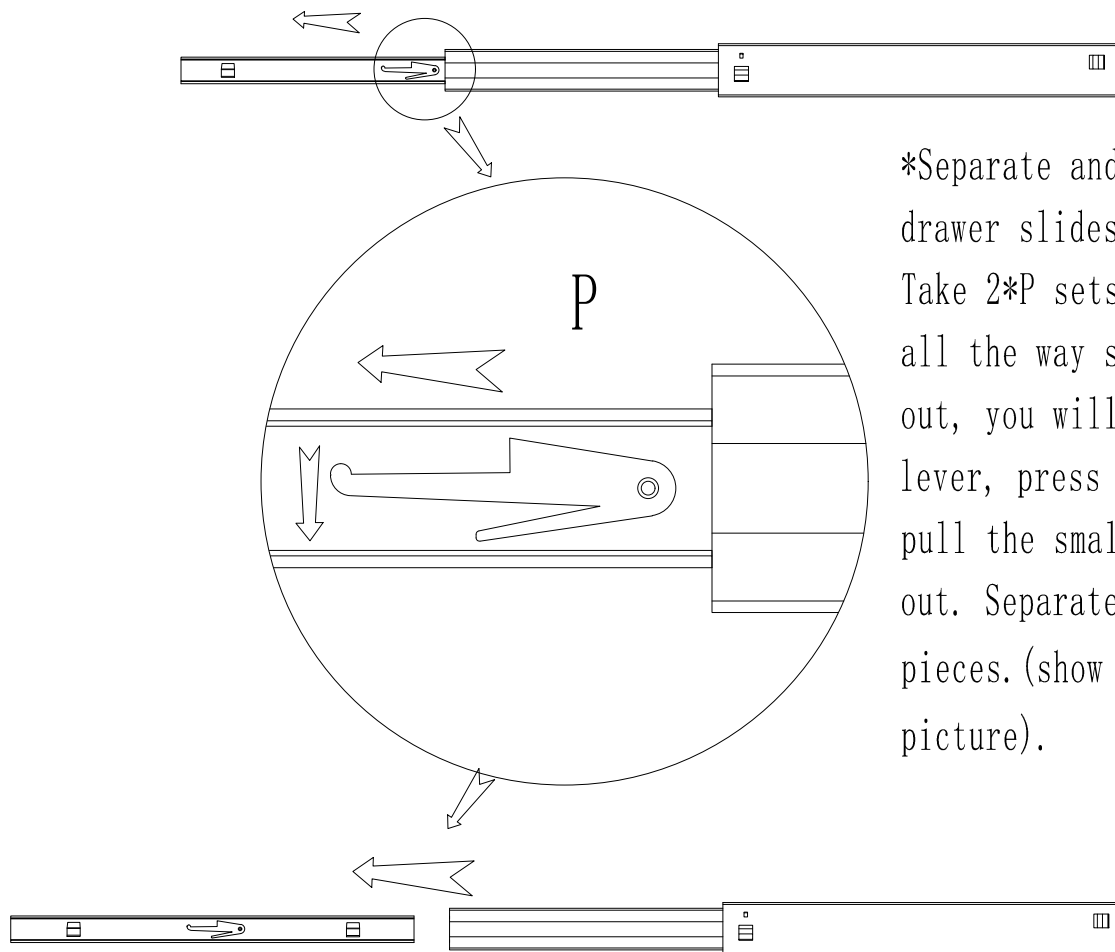

*Separate and install drawer slides
Take 2*P sets of rail, pull all the way slide rail out, you will see the lever, press it down, then pull the small inner rail out. Separate in two pieces. (show in the picture).

16


Install the drawer side of the slide, you will see there is rectangular hole on the said of the drawer, then install drawer side of slide onto both said of the drawer panel.


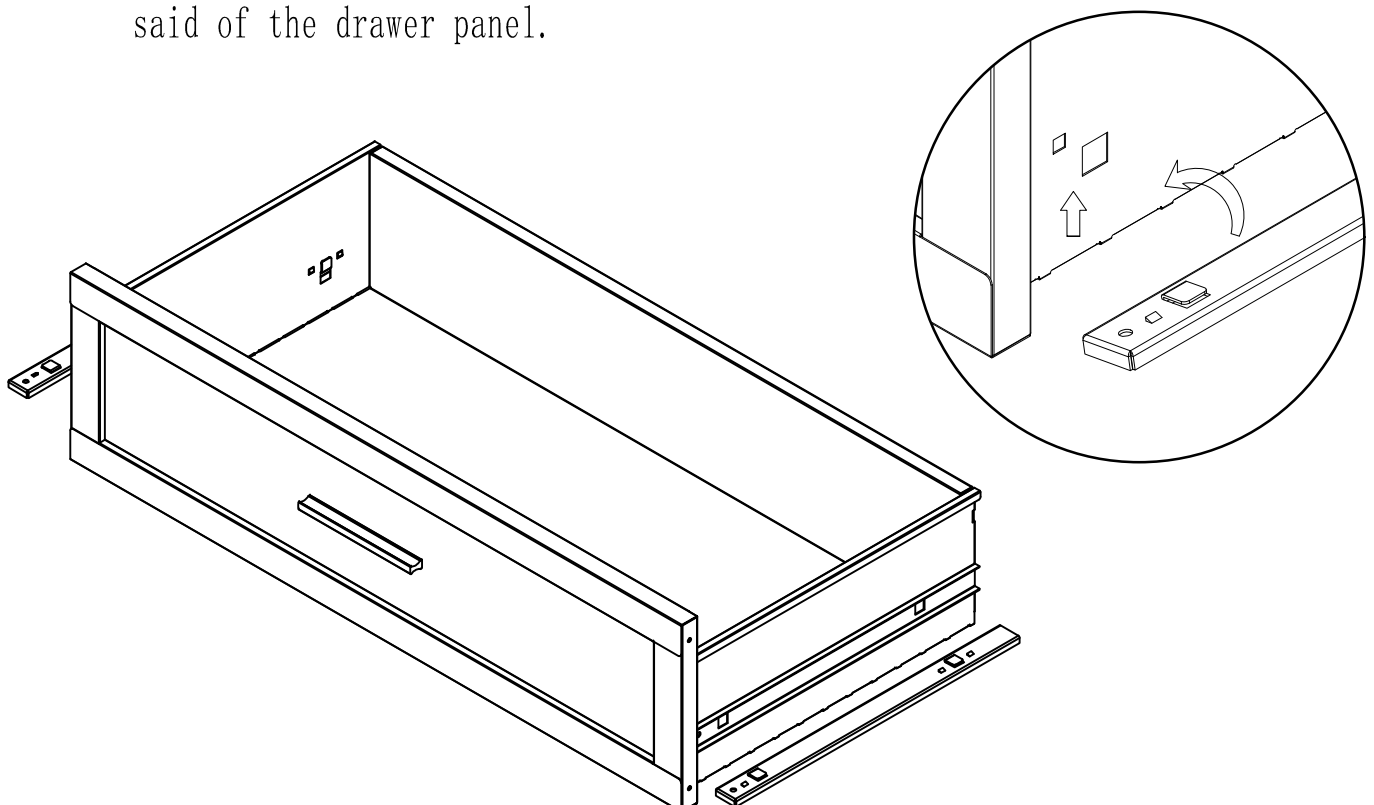


17

Install the cabinet side of the slide, you will see there is rectangular hole on the said of the drawer, then install metal side of slide onto both said of the cabinet.

Same process to finish the 4 left rail and 4 right rail.

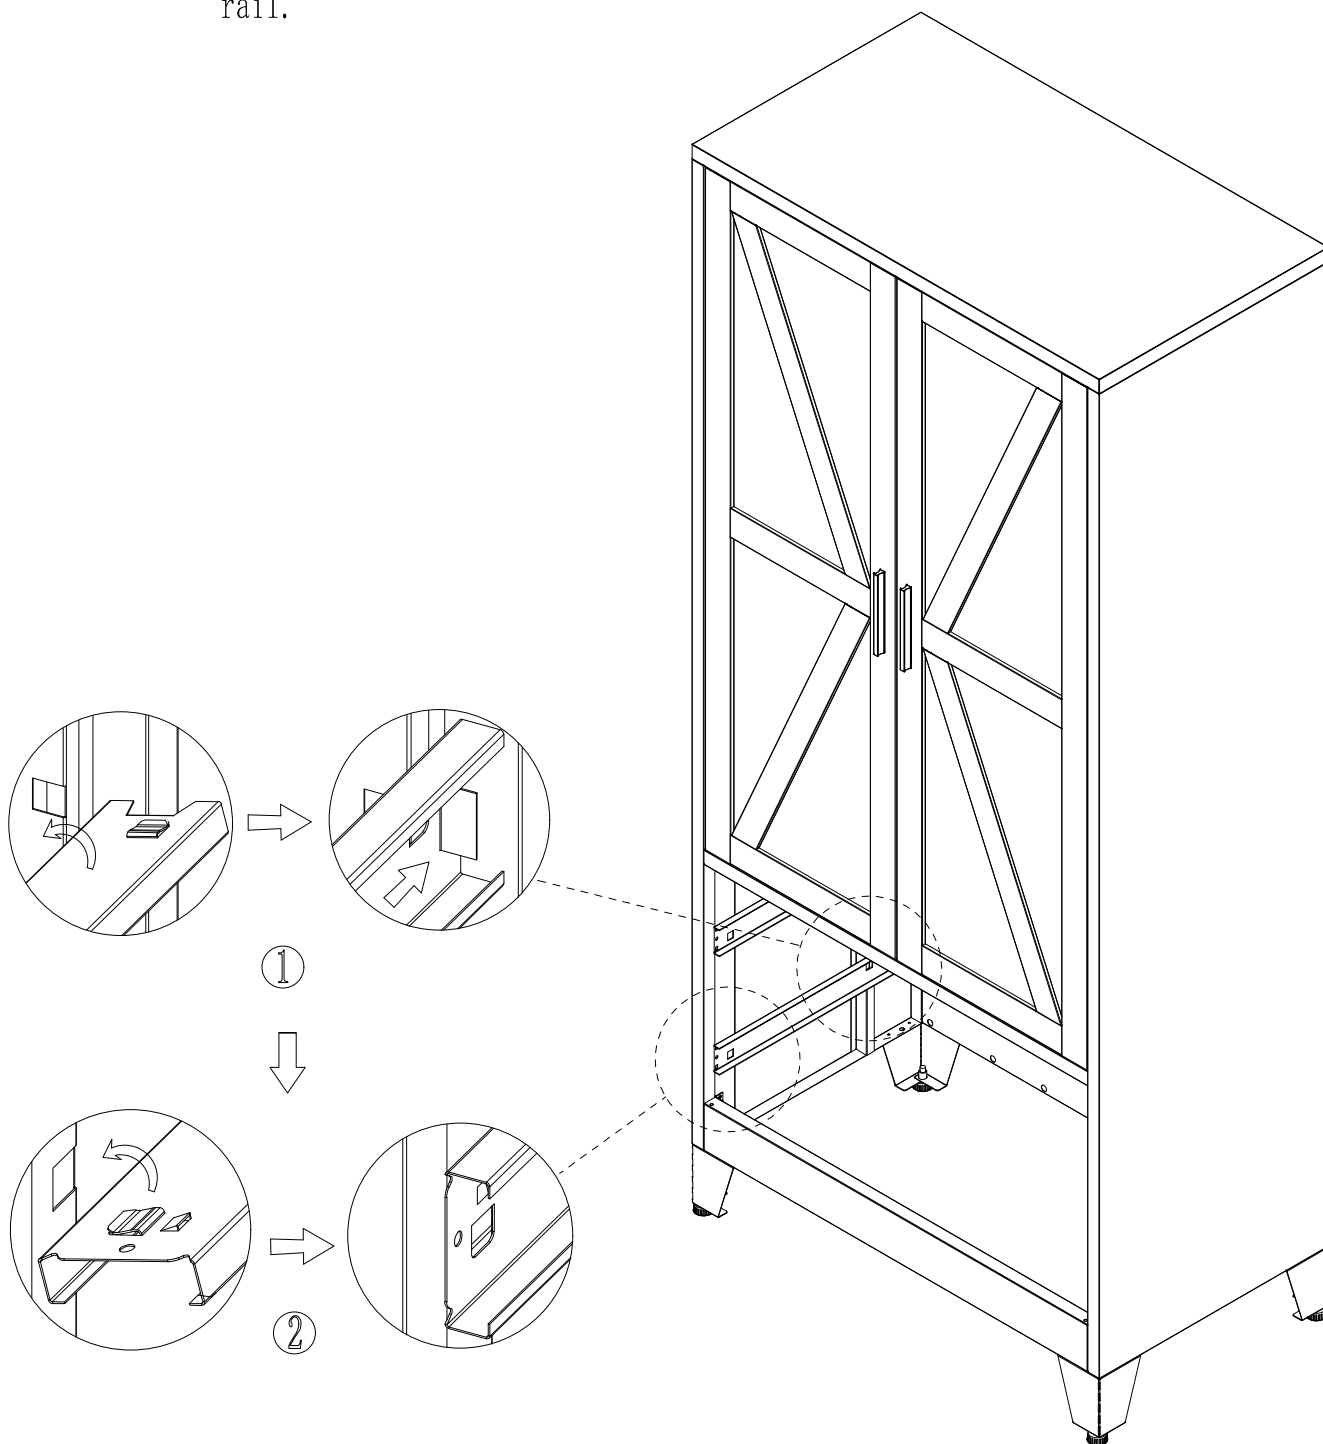


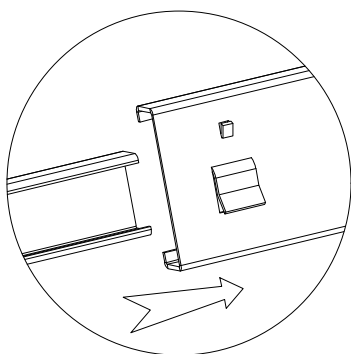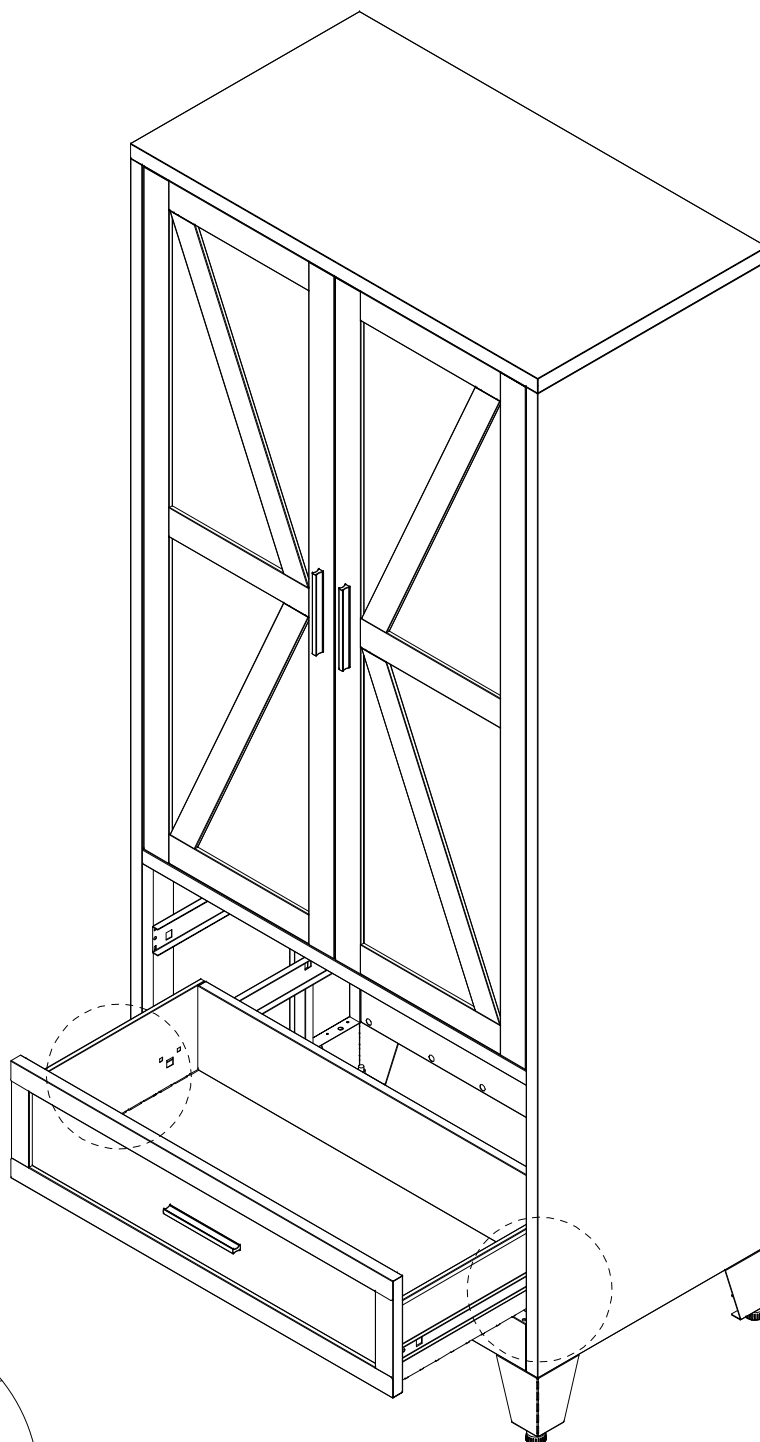

Pull the inner rails out, then insert the rail into glide, push down. (show in the picture).

19


W*2

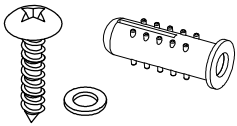

Push the metal cabinet against the wall. Mark the places on the wall there you are going to drill. Take the Percussion Drill. Drill holes in the marked places.

Take wall plugs W*2 insert in the drilled holes using a hammer.

(Serious or fatal crushing injuries can occur from furniture tip-over. To prevent this furniture from tipping over it must be permanently fixed to the wall.)

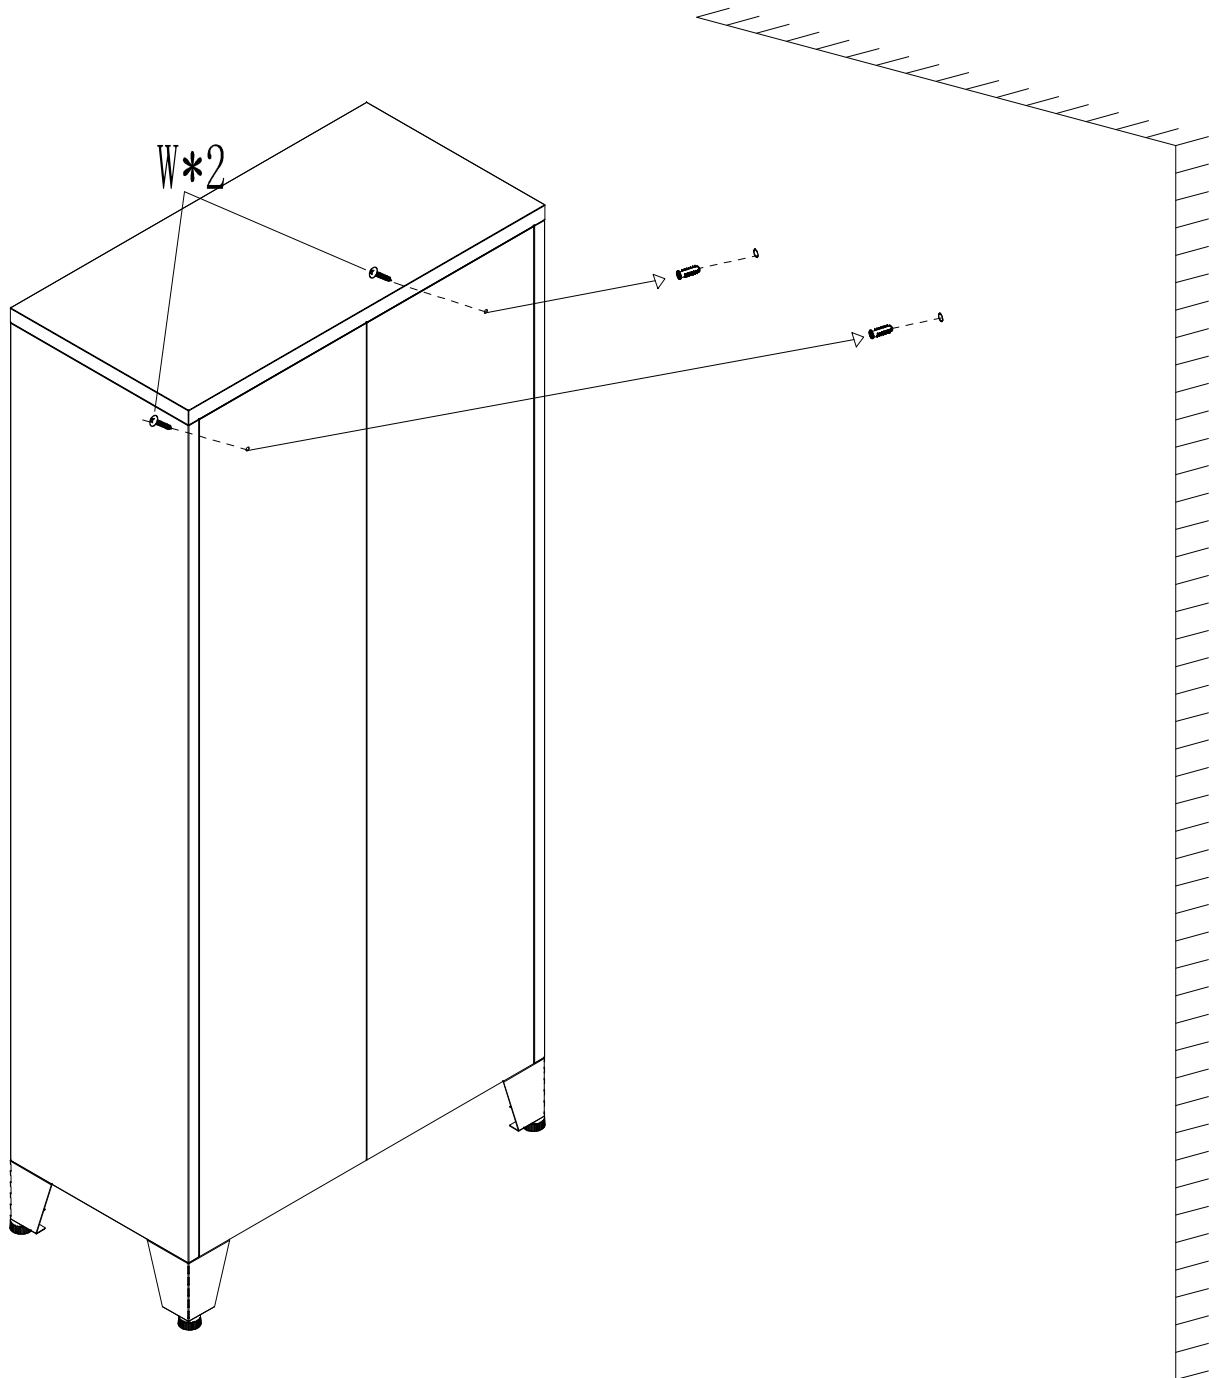

Your metal cabinet is ready to use!

THANK YOU FOR BEING PART OF OUR STORY.

