


ASSEMBLY INSTRUCTIONS


SKU:FORA - BQ

Recommended:Mattress size:Queen(60"x80")
Compatible mattress size:Queen

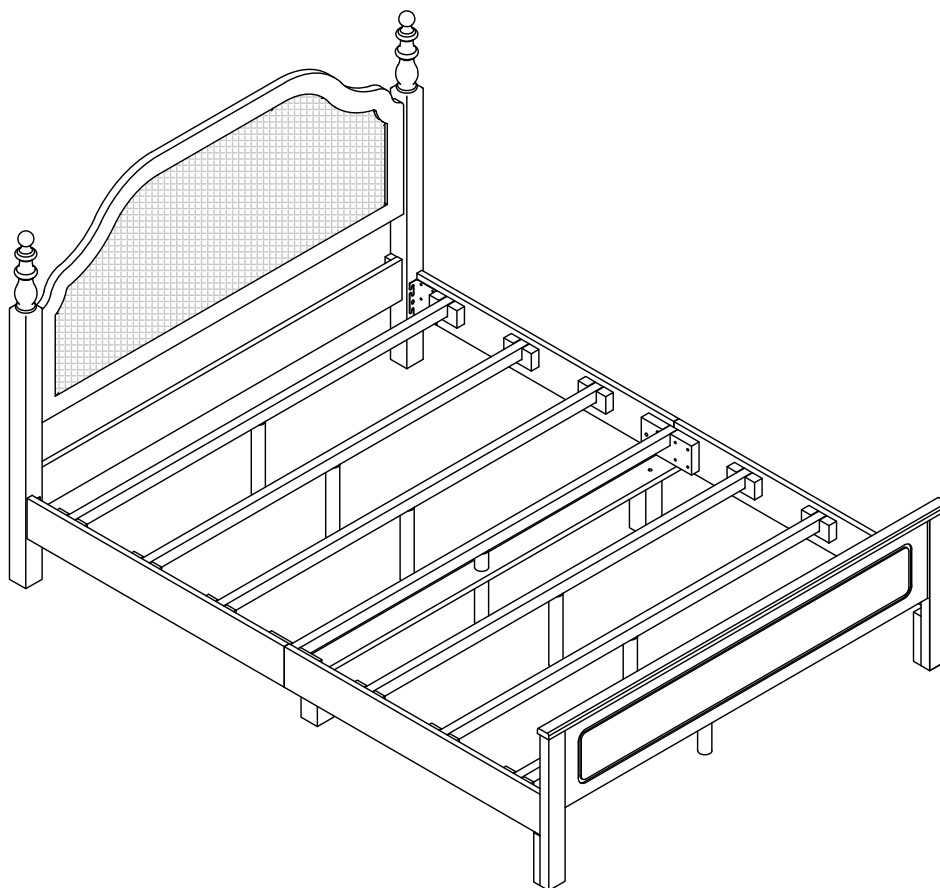


Notice :


1. Follow the installation instructions. Please confirm all accessories are present before installation.
2. Do not fully tighten the screws during initial assembly. Tighten them completely only after all pieces are correctly aligned.
3. If you encounter any issues during installation, please contact our customer service for assistance.
4. Unbox the item from the side labeled "Open" and lay a protective mat or cloth on the floor to avoid scratches.

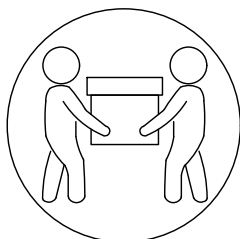

Recommended Assembly:
2 people

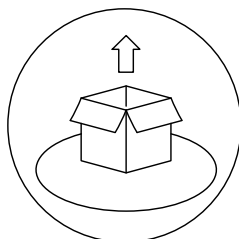


Lay a protective mat or cloth

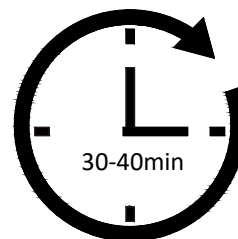

Estimate installation time

Assembly Explosion Diagram


Enlarge the image, the accessories should be in the correct positions

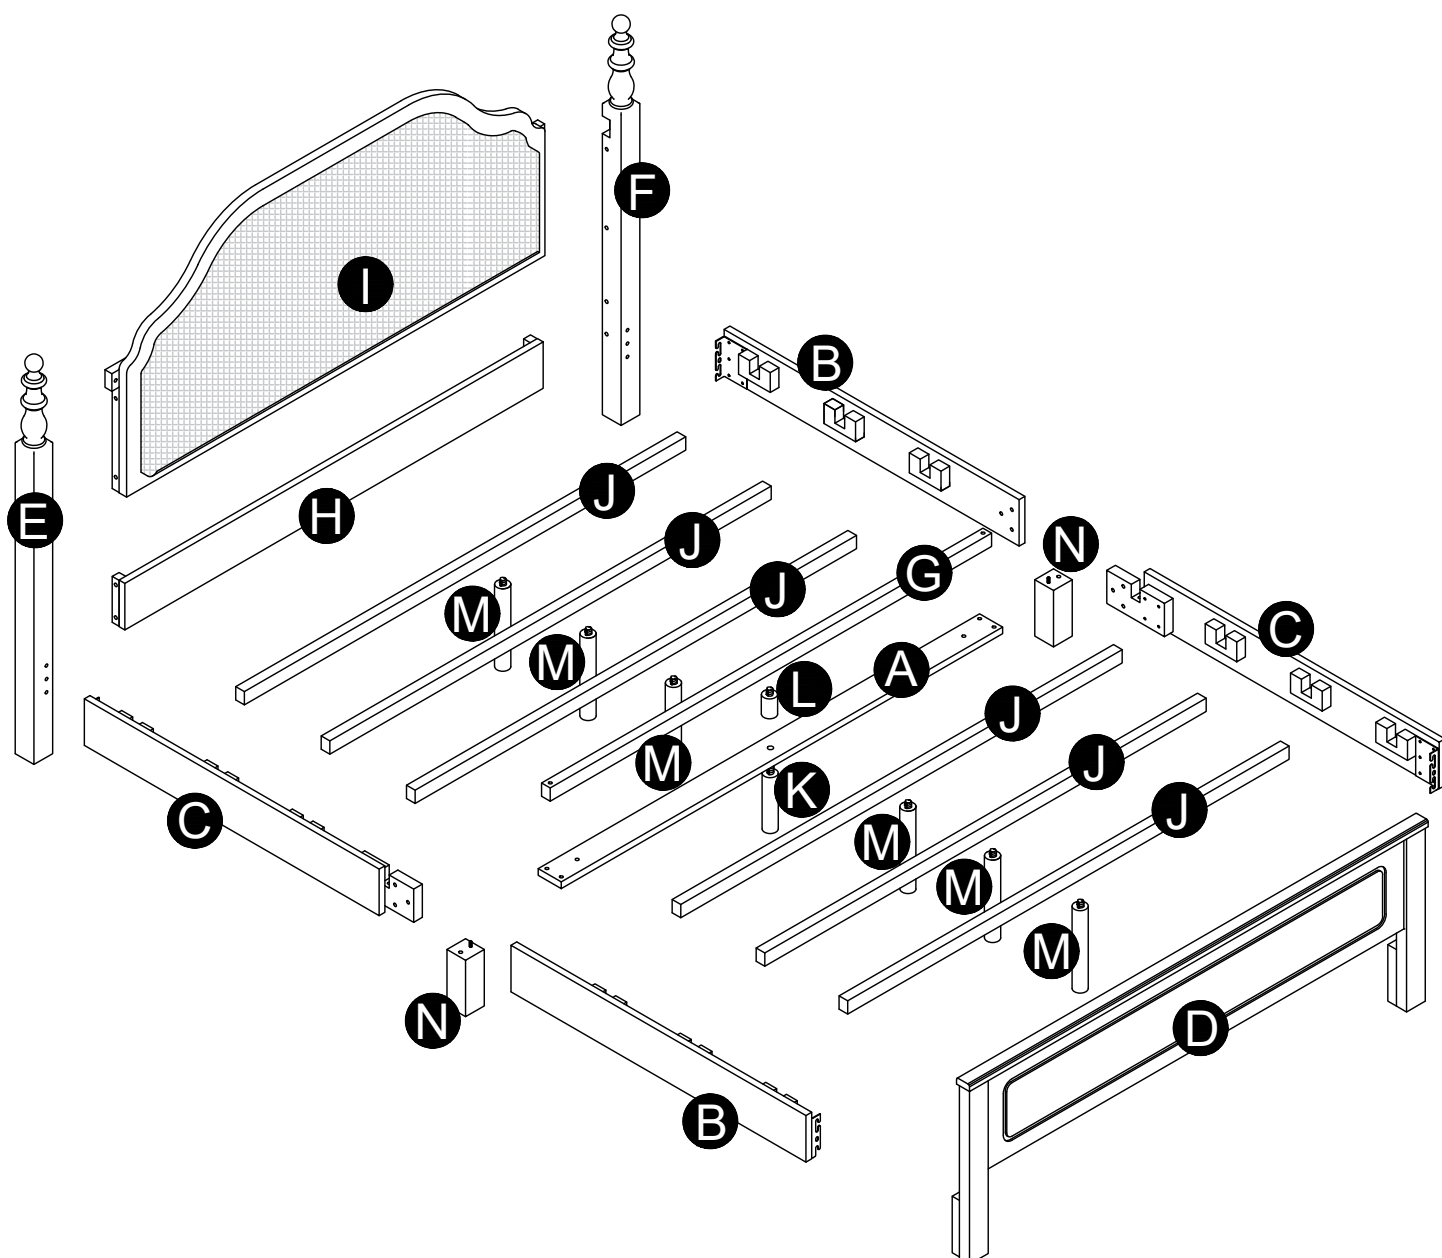


Hardware

1 x 12 PCS  5/16*25 mm Bolt	2 x 24 PCS  5/16*40 mm Bolt	3 x 12 PCS  12*12*1mm Spring washer	4 x 12 PCS  18*18*1 mm Flat washer	5 x 1 PC  59*23*5mm Allen wrench
--	--	--	---	---


Part

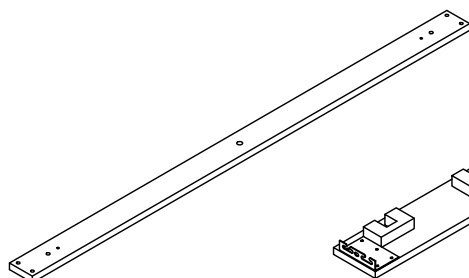


A x 1 PC
Bottom support panel

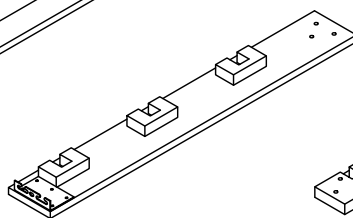


B x 2 PCS
Side panel

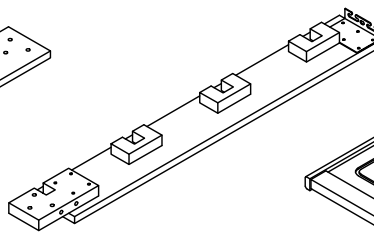


C x 2 PCS
Side panel

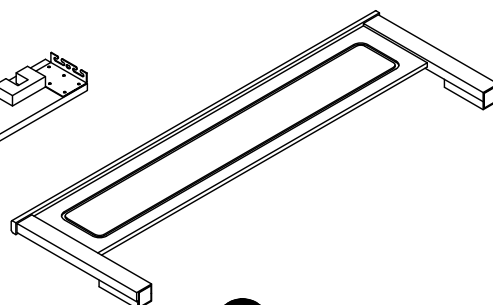


D x 1 PC
Footboard

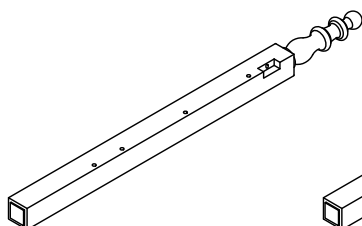


E x 1 PC
Headboard foot

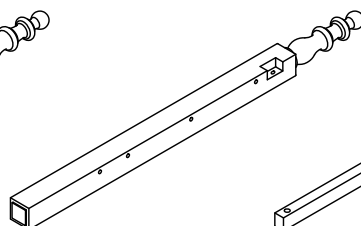


F x 1 PC
Headboard foot

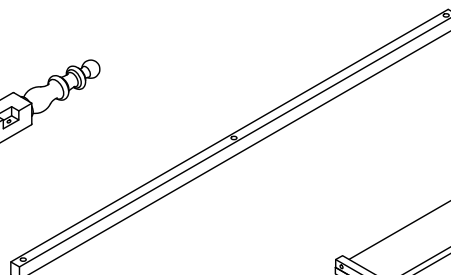


G x 1 PC
Middle support rail

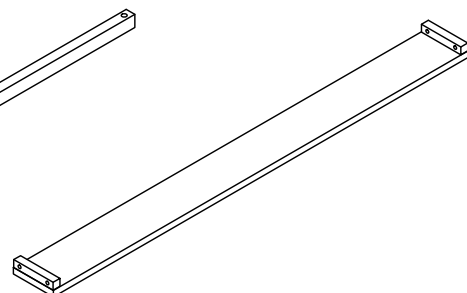


H x 1 PC
Horizontal strip under the headboard

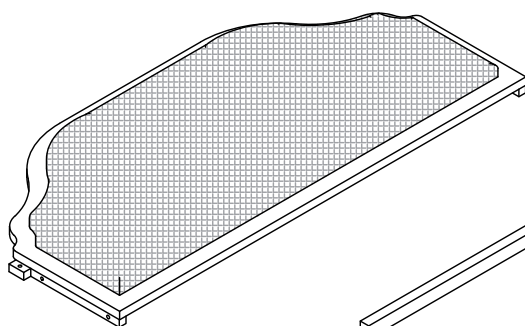

I x 1 PC
Headboard

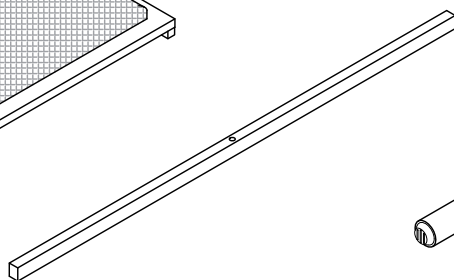


J x 6 PCS
Support rails




K x 1 PC
Middle bottom support foot



L x 1 PC
Middle upper support foot




M x 6 PCS
Support feet



N x 2 PCS
Load feet

1


2x 4 PCS

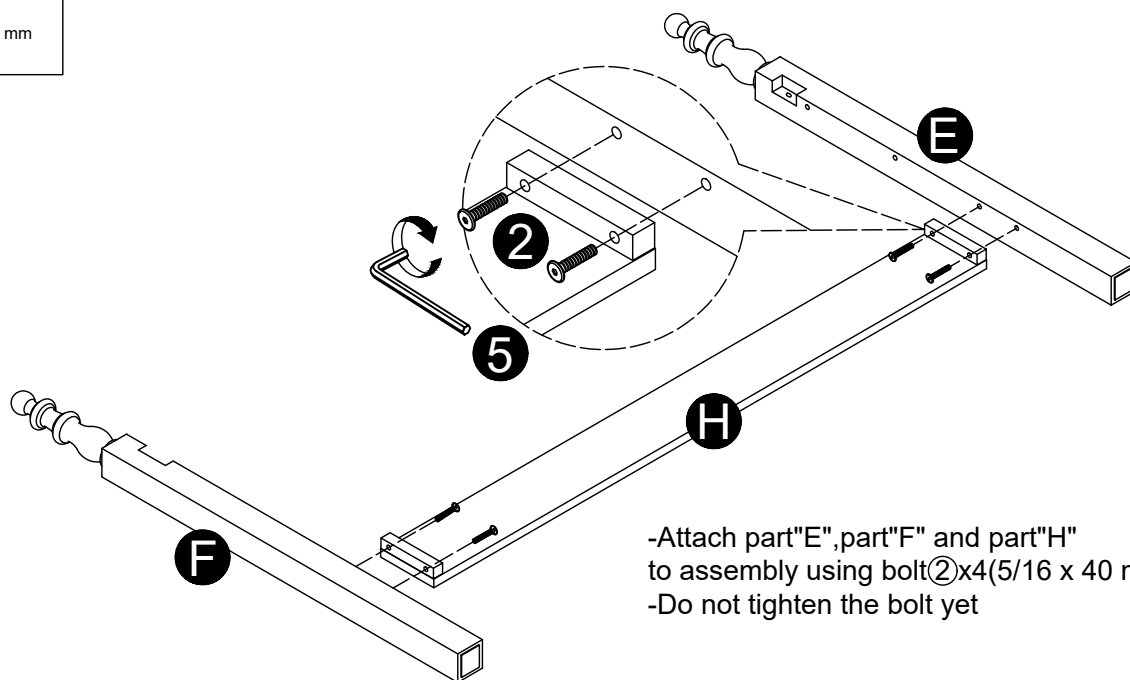5/16"40 mm
Bolt

-Attach part "E", part "F" and part "H"
to assembly using bolt ②x4 (5/16 x 40 mm)
-Do not tighten the bolt yet

2

2x 6 PCS

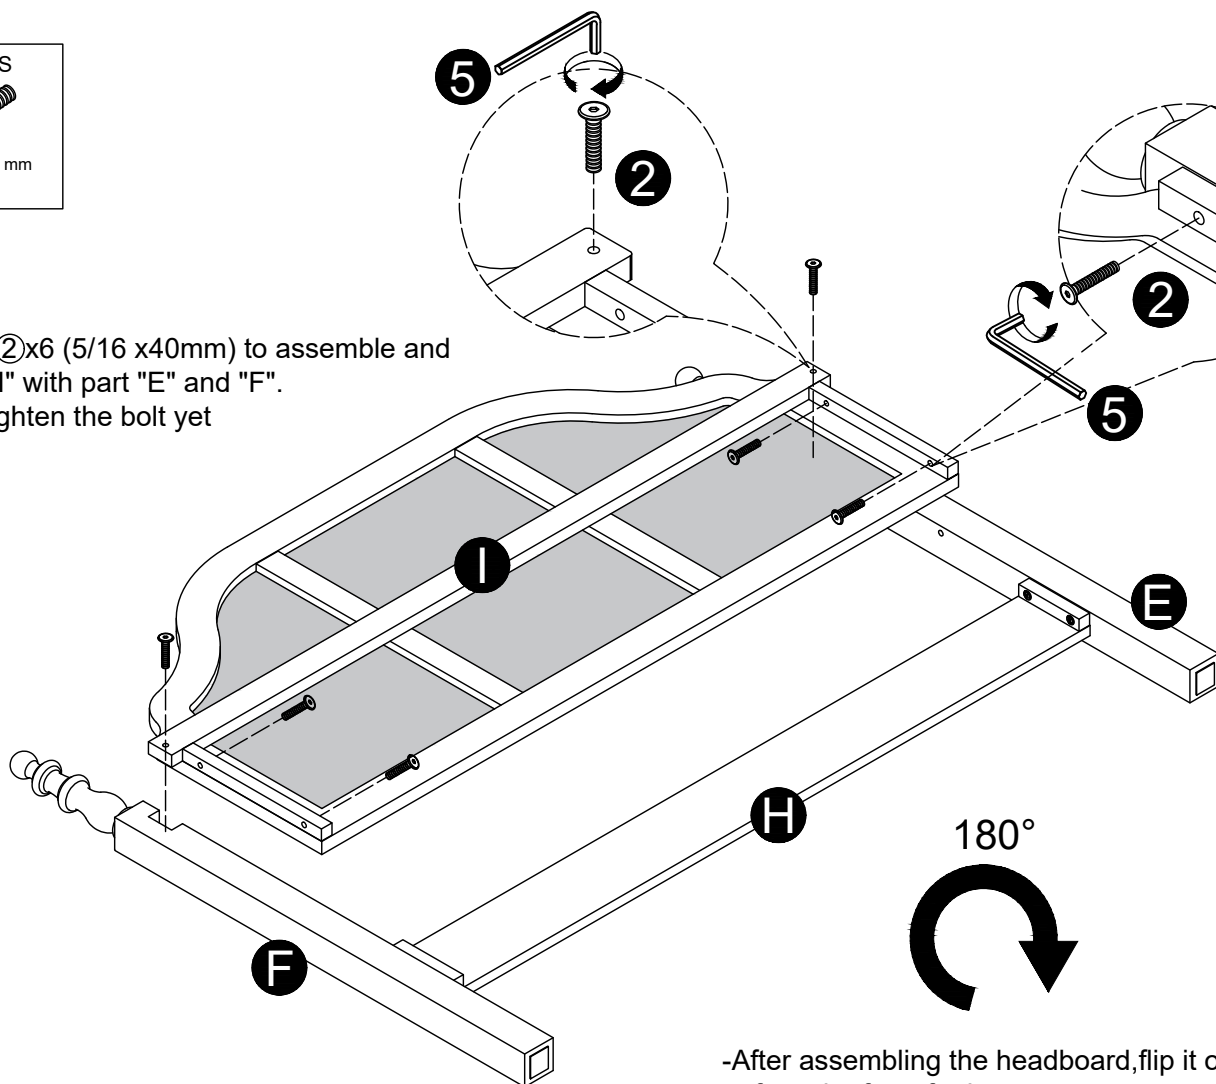5/16"40 mm
Bolt

-Use bolt ②x6 (5/16 x 40mm) to assemble and
connect "I" with part "E" and "F".
-Do not tighten the bolt yet

-After assembling the headboard, flip it over
to face the front for later use

"Do not fully tighten the bolts yet".

3

①x 4 PCS

5/16*25 mm
Bolt

③x 4 PCS



12*12*1mm
Spring washer

④x 4 PCS

18*18*1 mm
Flat washer

Lock 50%

-Use bolt①x4(5/16x25mm) together with sping washer③x4(12x12x1mm) and flat washer④x4(18x18x1mm) into corresponding upper and lower holes of the assembled headboard legs.Tighten the bolt only 50%

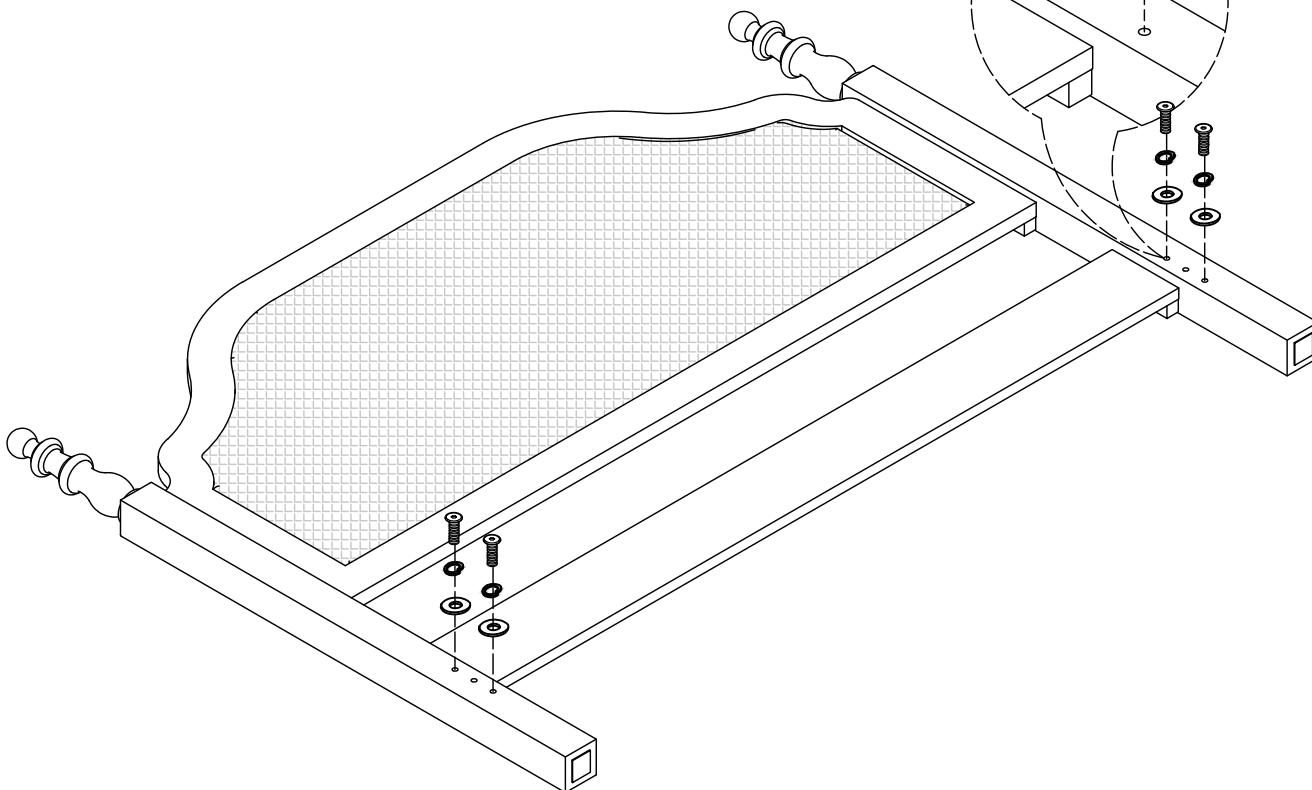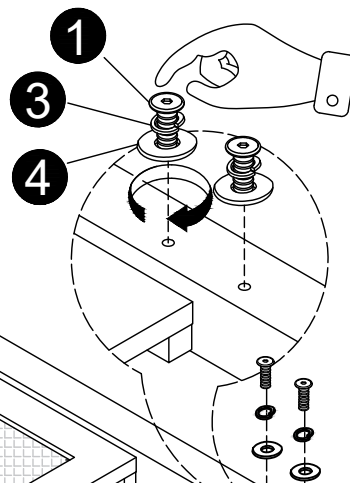

4

①x 4 PCS

5/16*25 mm
Bolt


③x 4 PCS

12*12*1mm
Spring washer

④x 4 PCS

18*18*1 mm
Flat washer


Lock 50%

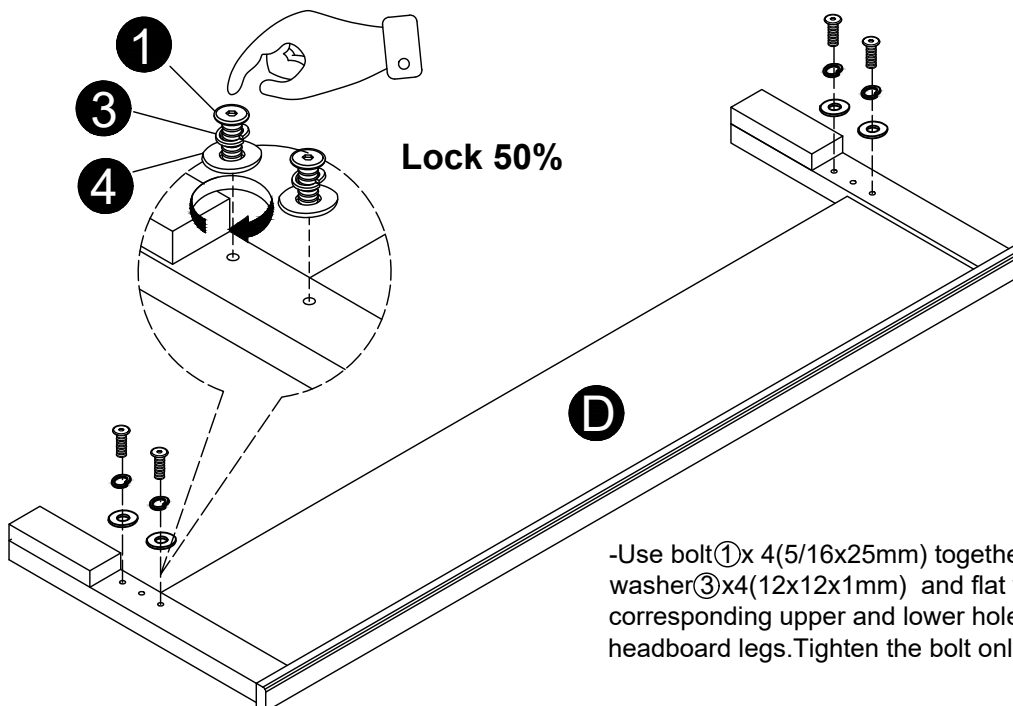


-Use bolt①x 4(5/16x25mm) together with sping washer③x4(12x12x1mm) and flat washer④x4(18x18x1) into corresponding upper and lower holesof the assembled headboard legs.Tighten the bolt only 50%

5

②x 6 PCS

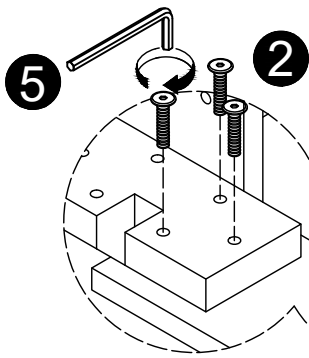5/16*40 mm
Bolt

-Use bolt②x6(5/16x40mm) to assemble and connect part B with C. Do not fully tighten yet.

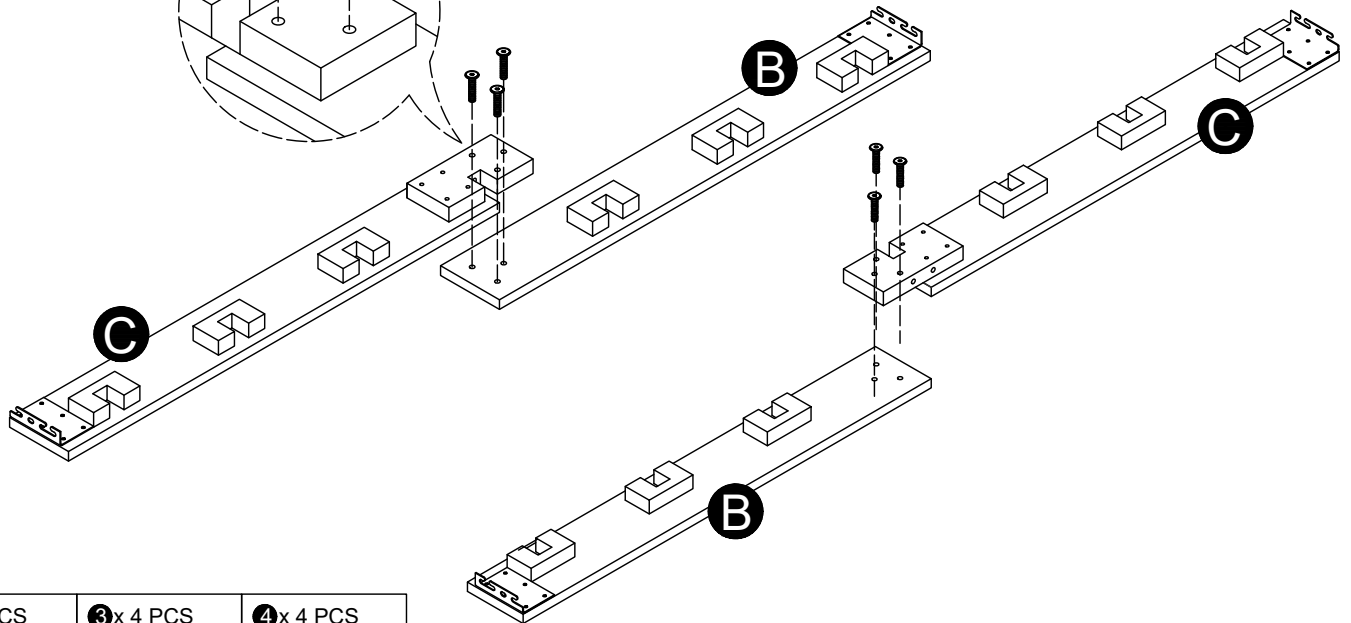

6

①x 4 PCS

5/16*25 mm
Bolt


③x 4 PCS

12*12*1mm
Spring washer

④x 4 PCS


18*18*1 mm
Flat washer

-Hang the assembled iron plates at both ends of the bed side panels(B and C) onto the upper and lower bolts at the headboard and footboard. Then screw in the corresponding middle position①x4(5/16x25mm) bolts; Spring washer③x4(12x12x1mm) and flat washer④x4(18x18x1mm). Tighten these bolts to 50%

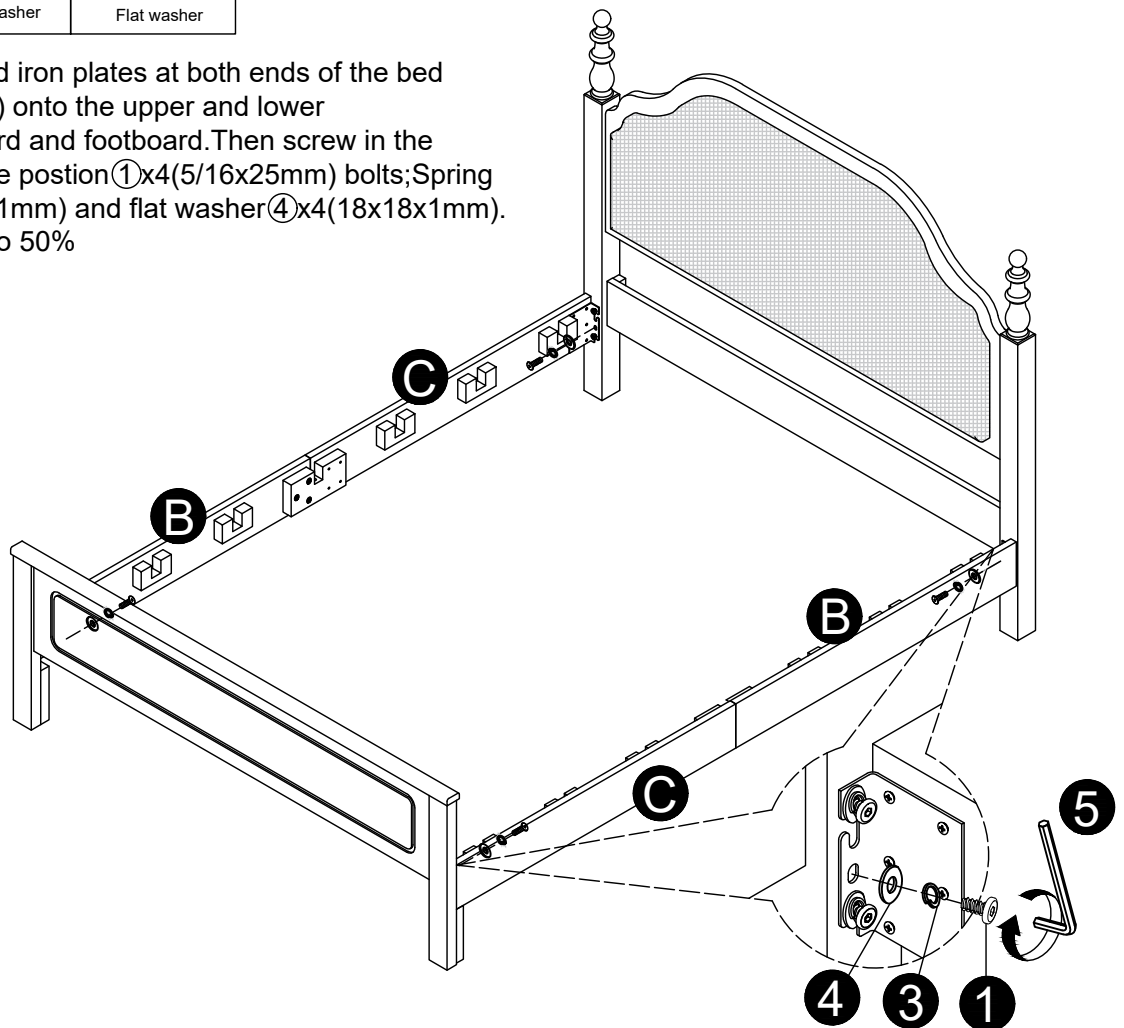

7


2x 2 PCS

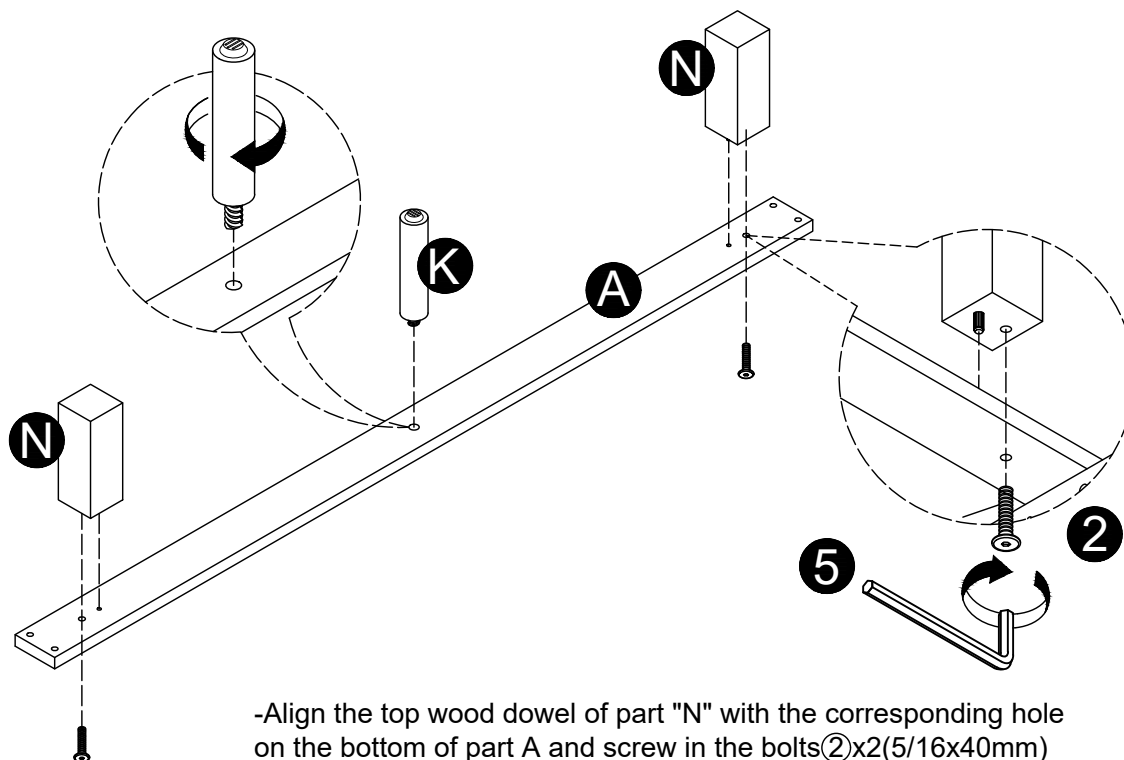5/16"40 mm
Bolt

-Align the top wood dowel of part "N" with the corresponding hole on the bottom of part A and screw in the bolts 2x2 (5/16x40mm) from top on to bottom .Then screw part "K" into the center hole at the bottom of part A

8


2x 4 PCS

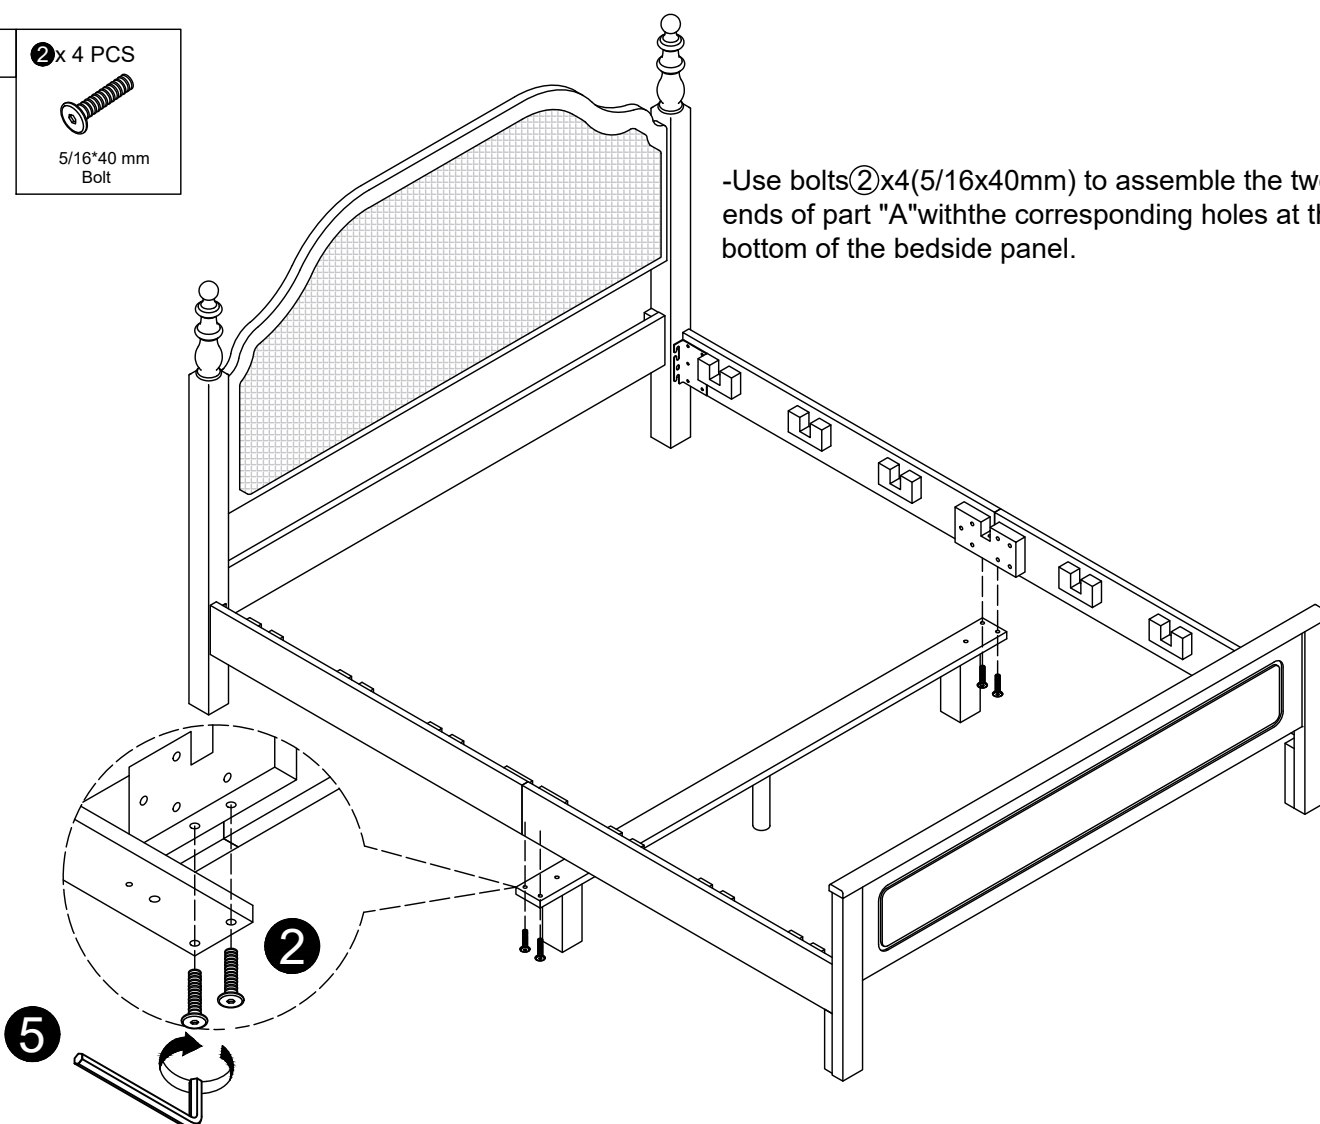5/16"40 mm
Bolt


-Use bolts 2x4 (5/16x40mm) to assemble the two ends of part "A" with the corresponding holes at the bottom of the bedside panel.

9



②x 2 PCS

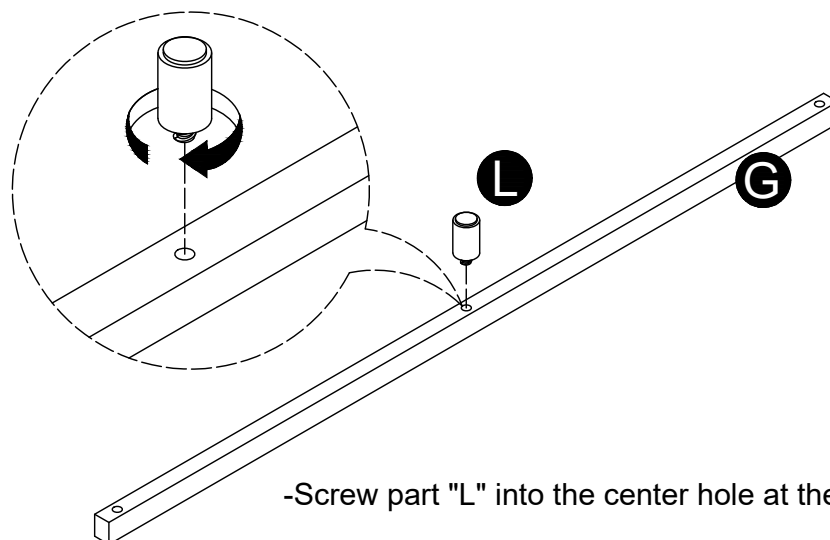5/16*40 mm
Bolt




-Screw part "L" into the center hole at the bottom of part "G"

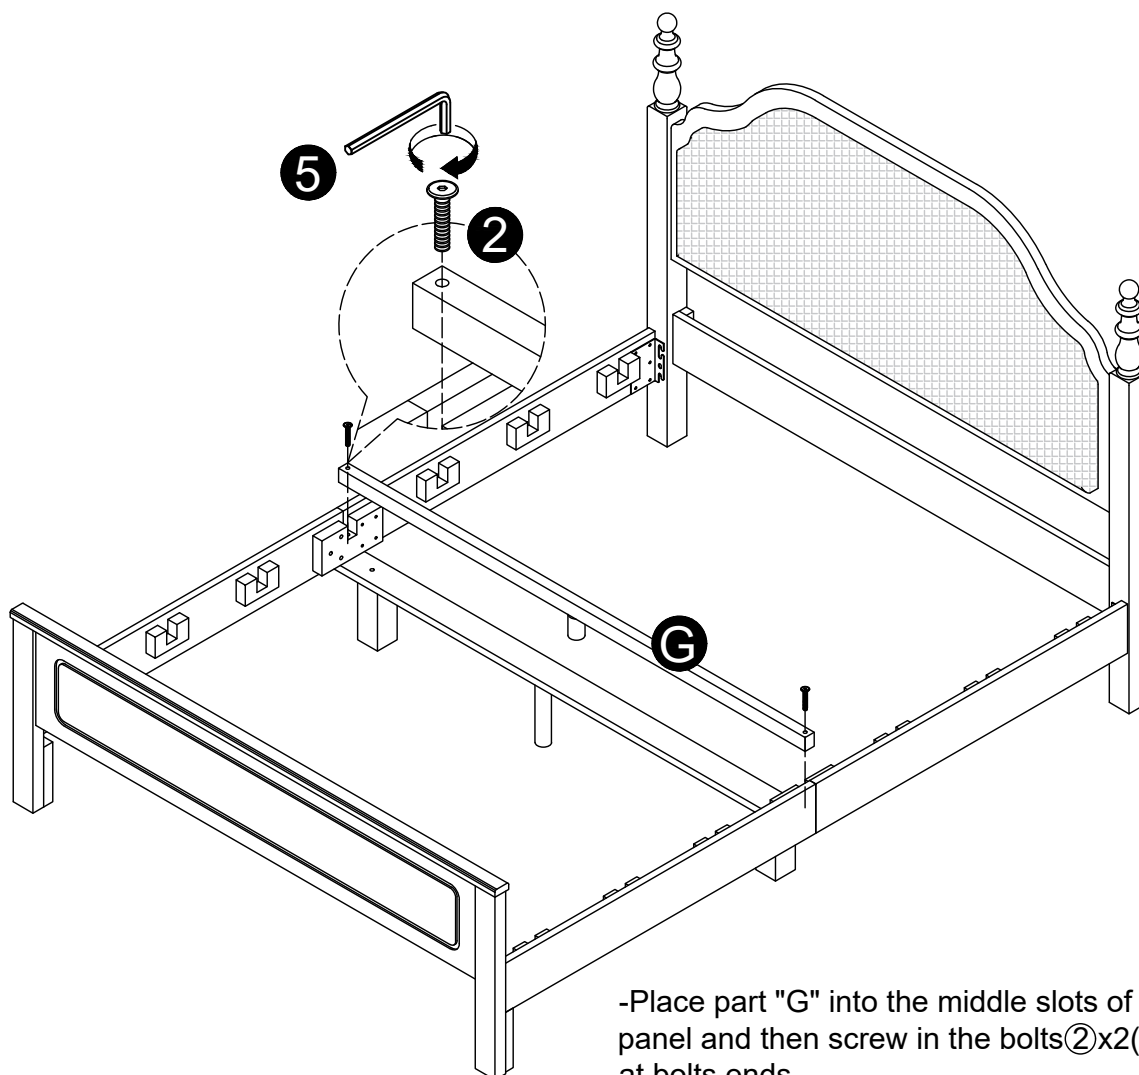


-Place part "G" into the middle slots of the bed side panel and then screw in the bolts②x2(5/16x40mm) at bolts ends

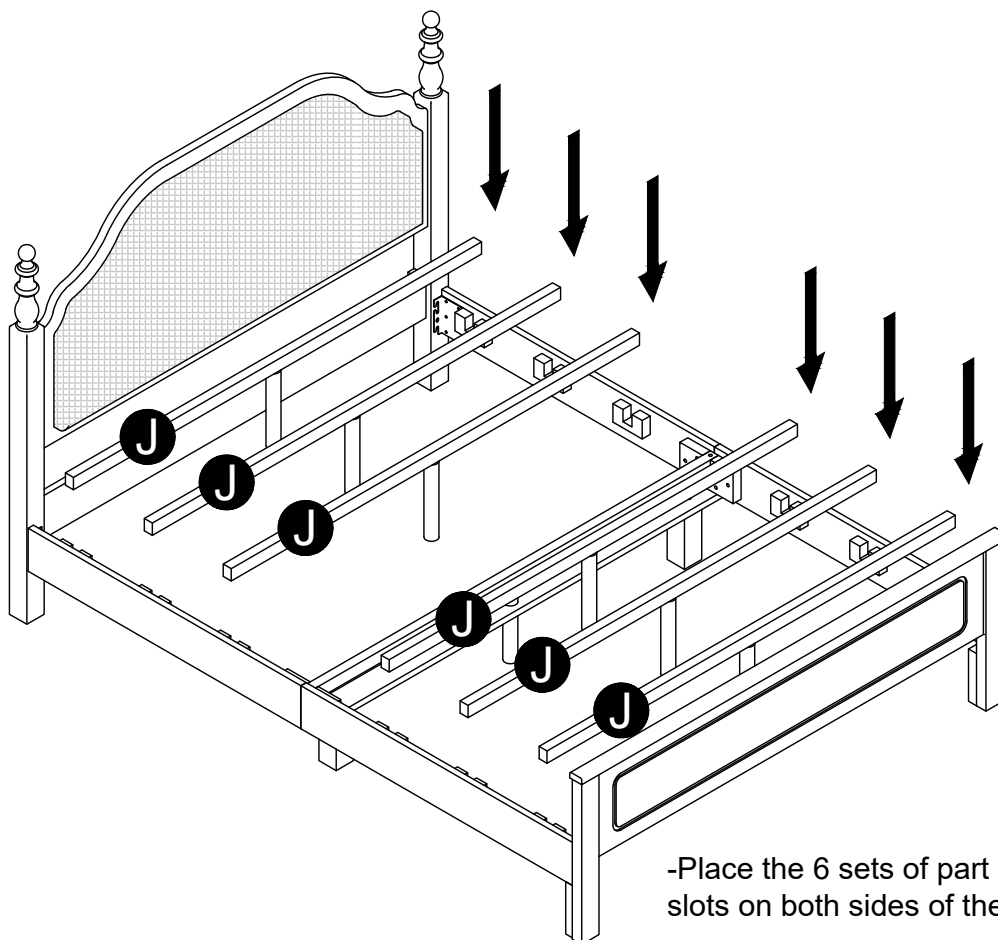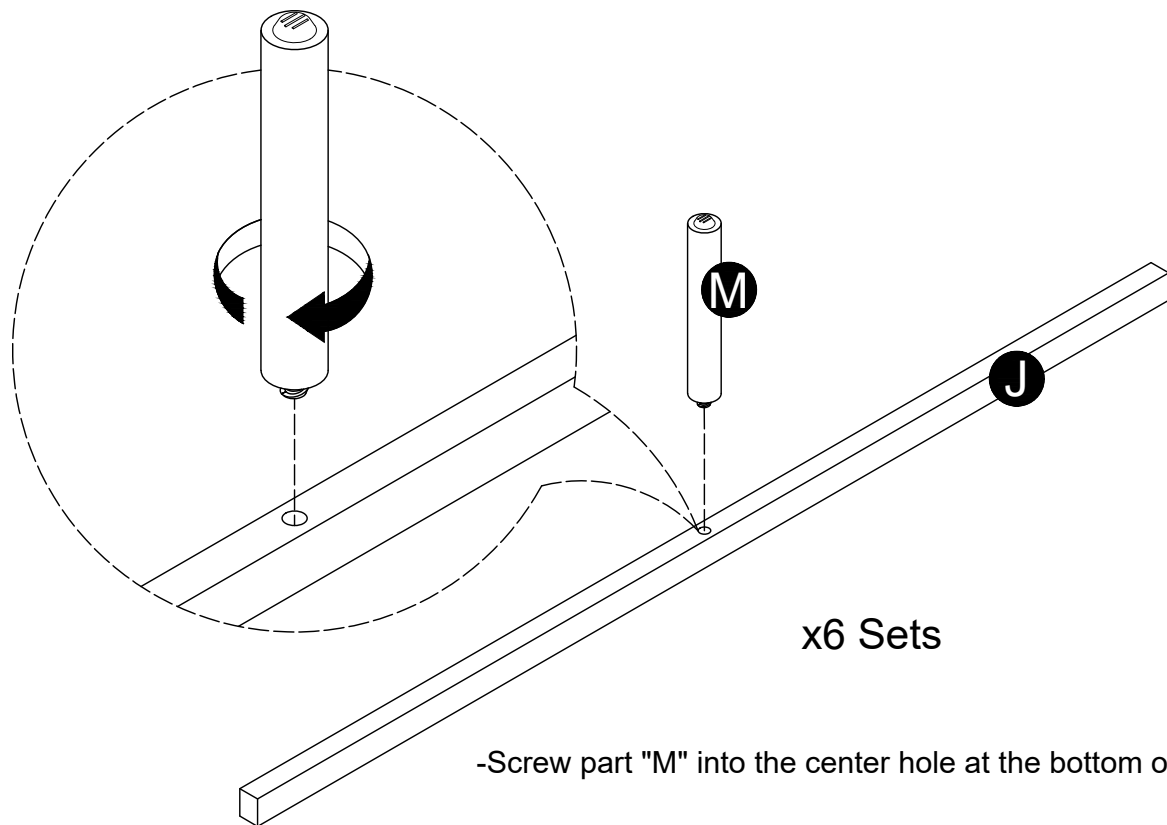

Perform a full inspection, and fully tighten bolts from previous steps.

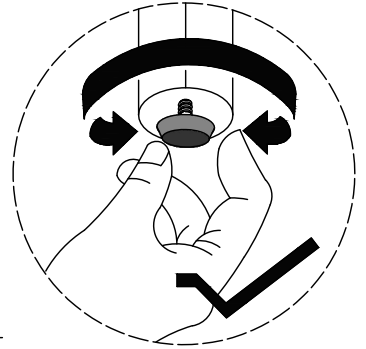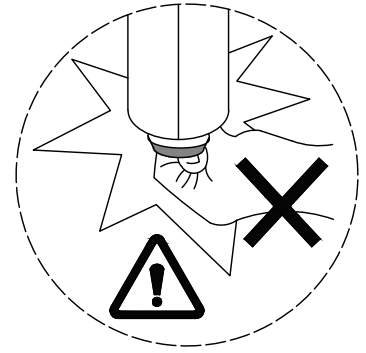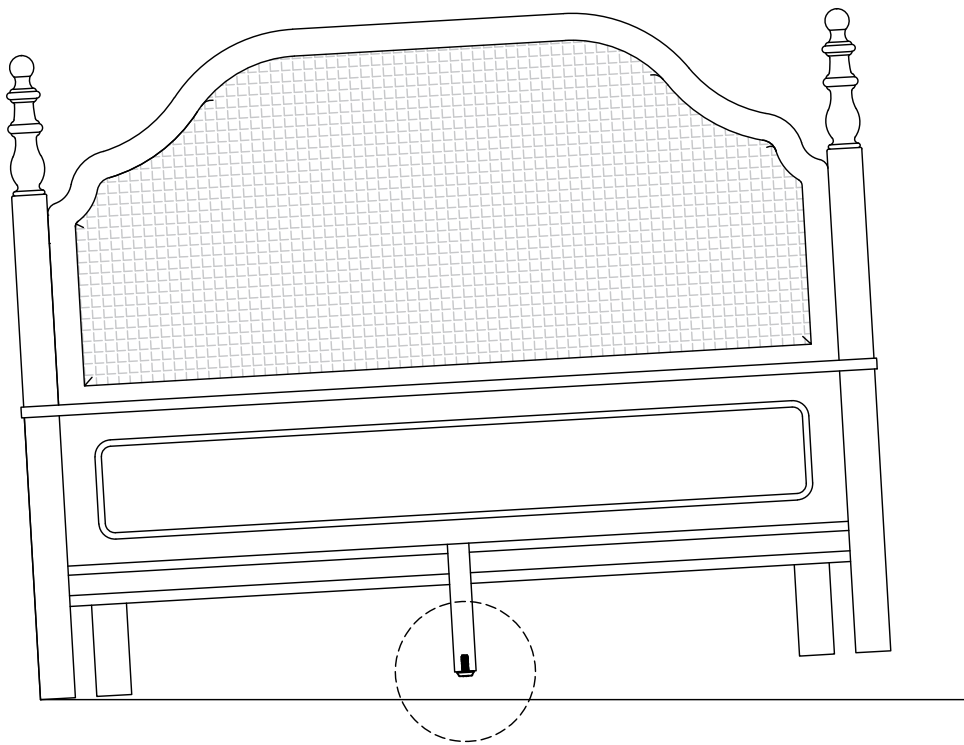

If the bed slats are uneven, you can adjust the foot pads at the bottom

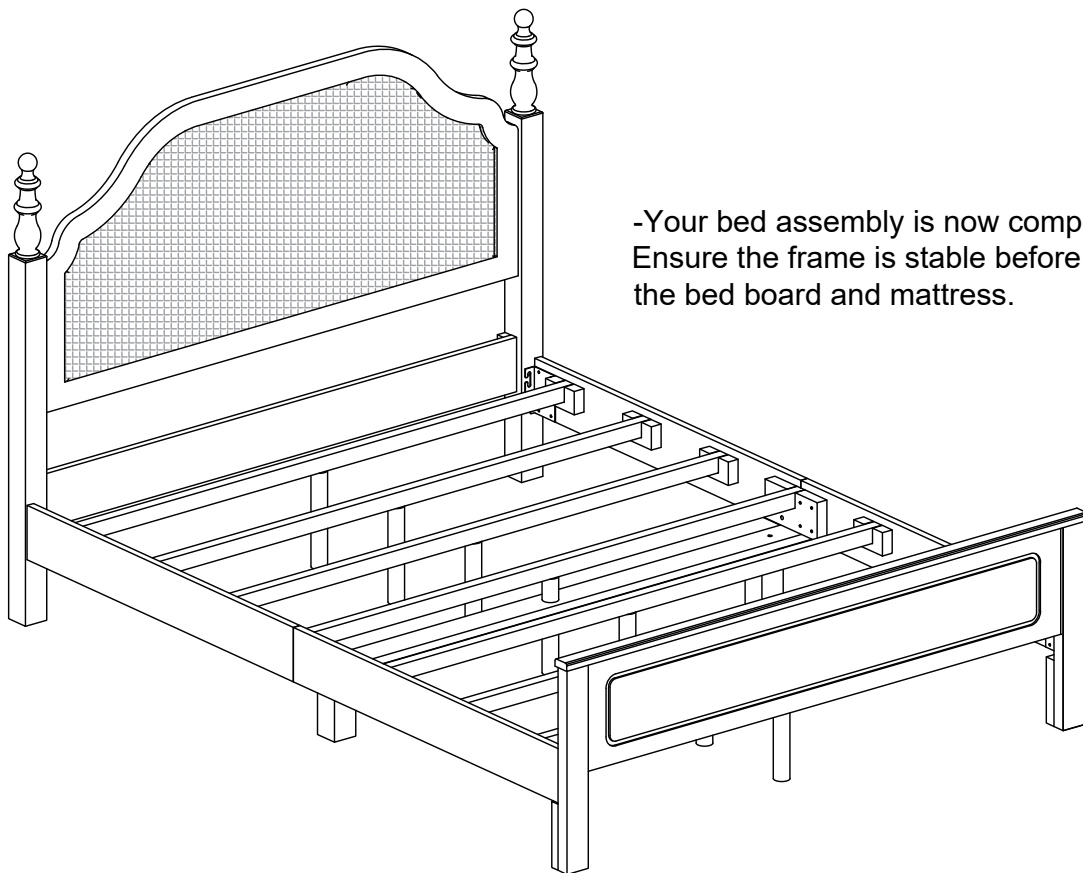

-Your bed assembly is now complete.
Ensure the frame is stable before placing
the bed board and mattress.

**Recommended: Mattress size: Queen(60"x80") Connipatible mattress size: Queen
Completed**