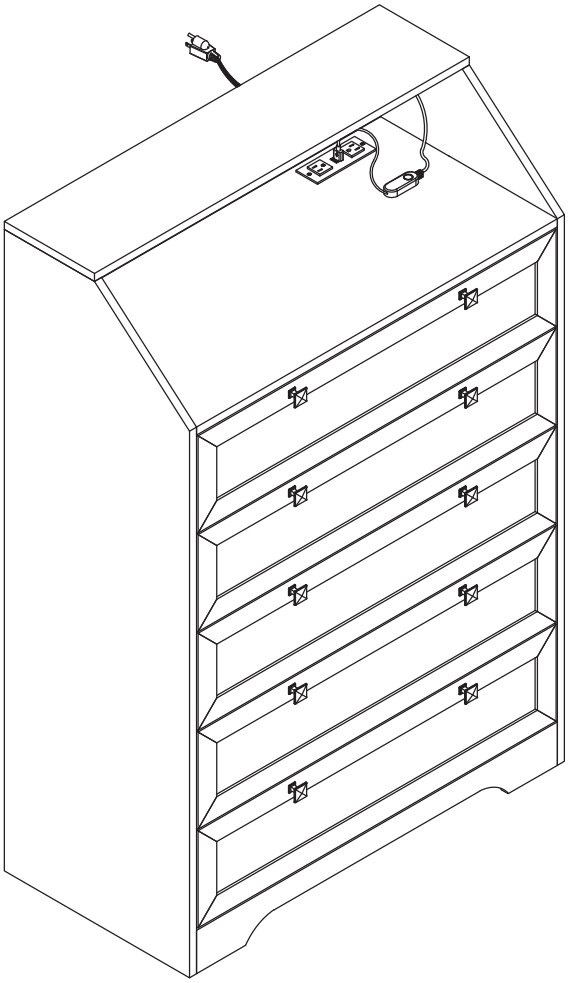
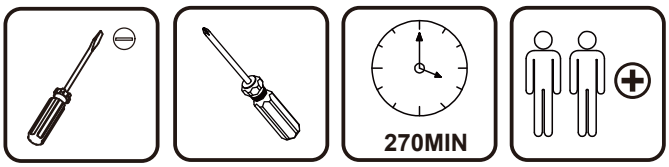
HLG102

Version: 1.0





***EN*_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.**

.THANK YOU FOR PURCHASE! .

FREE REPLACEMENT PARTS AVAILABLE!

---NEED HELP WITH YOUR FURNITURE?---

Scan the QR code to contact us!

If you're experiencing any issues—whether due to shipping, assembly, or any other reason —we're here to help.
For any damaged or missing components, we're happy to provide FREE replacement parts.

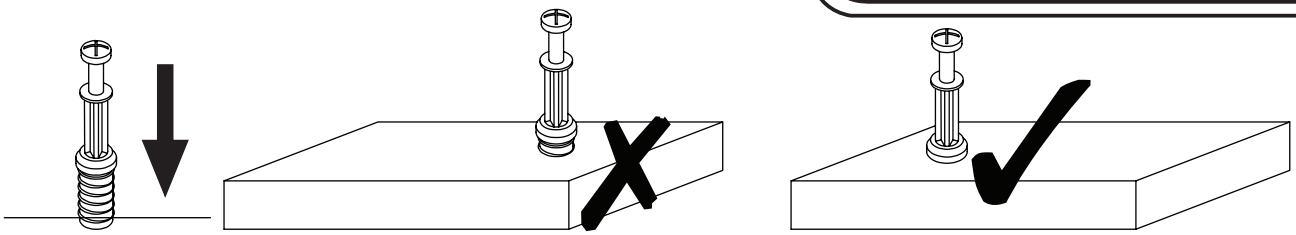
WhatsApp

Email: support@anymaple.com

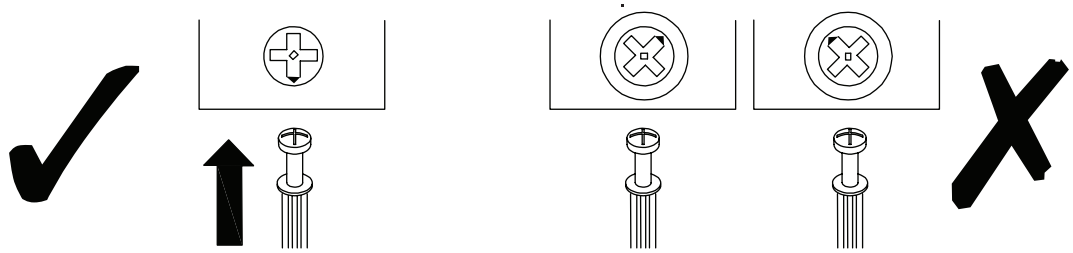
WANT TO CONTACT US THROUGH AMAZON?

- Log in to your Amazon account.
- Go to “Your Orders" and locate your furniture order.
- Click on“Get Help with Order” to send us a message directly.

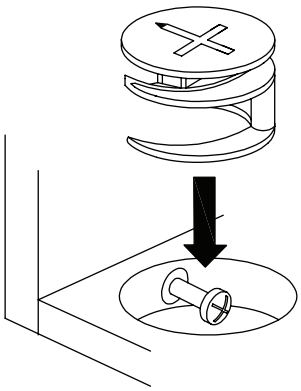
Our customer support team is ready to assist you and we will respond within 12-24 HOURS to resolve your concerns quickly!



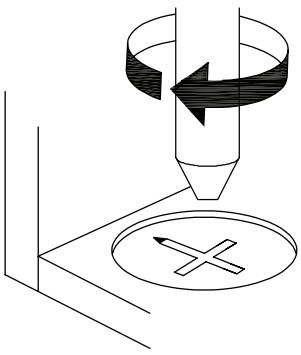
EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel.Do not overtighten or undertighten.



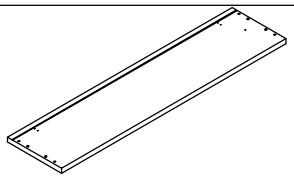
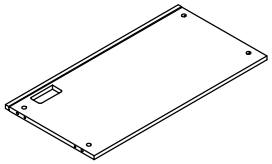


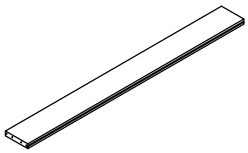
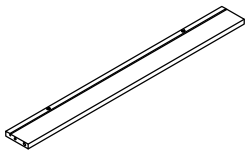
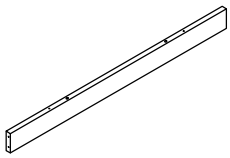
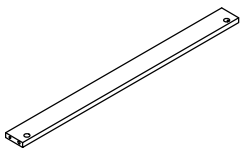
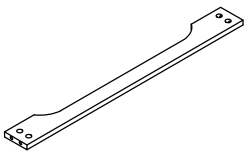
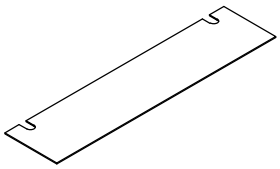
EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

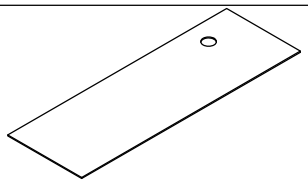
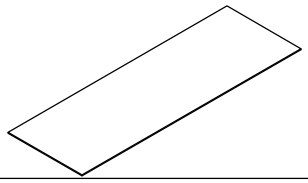
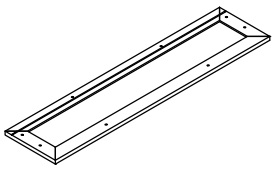


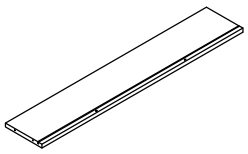
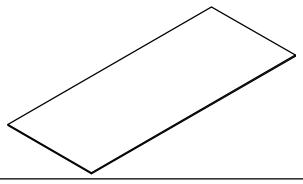

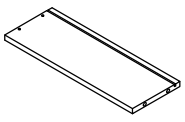




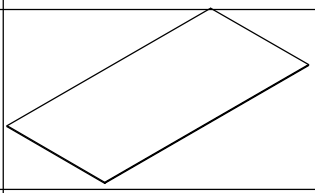
EN_ Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.



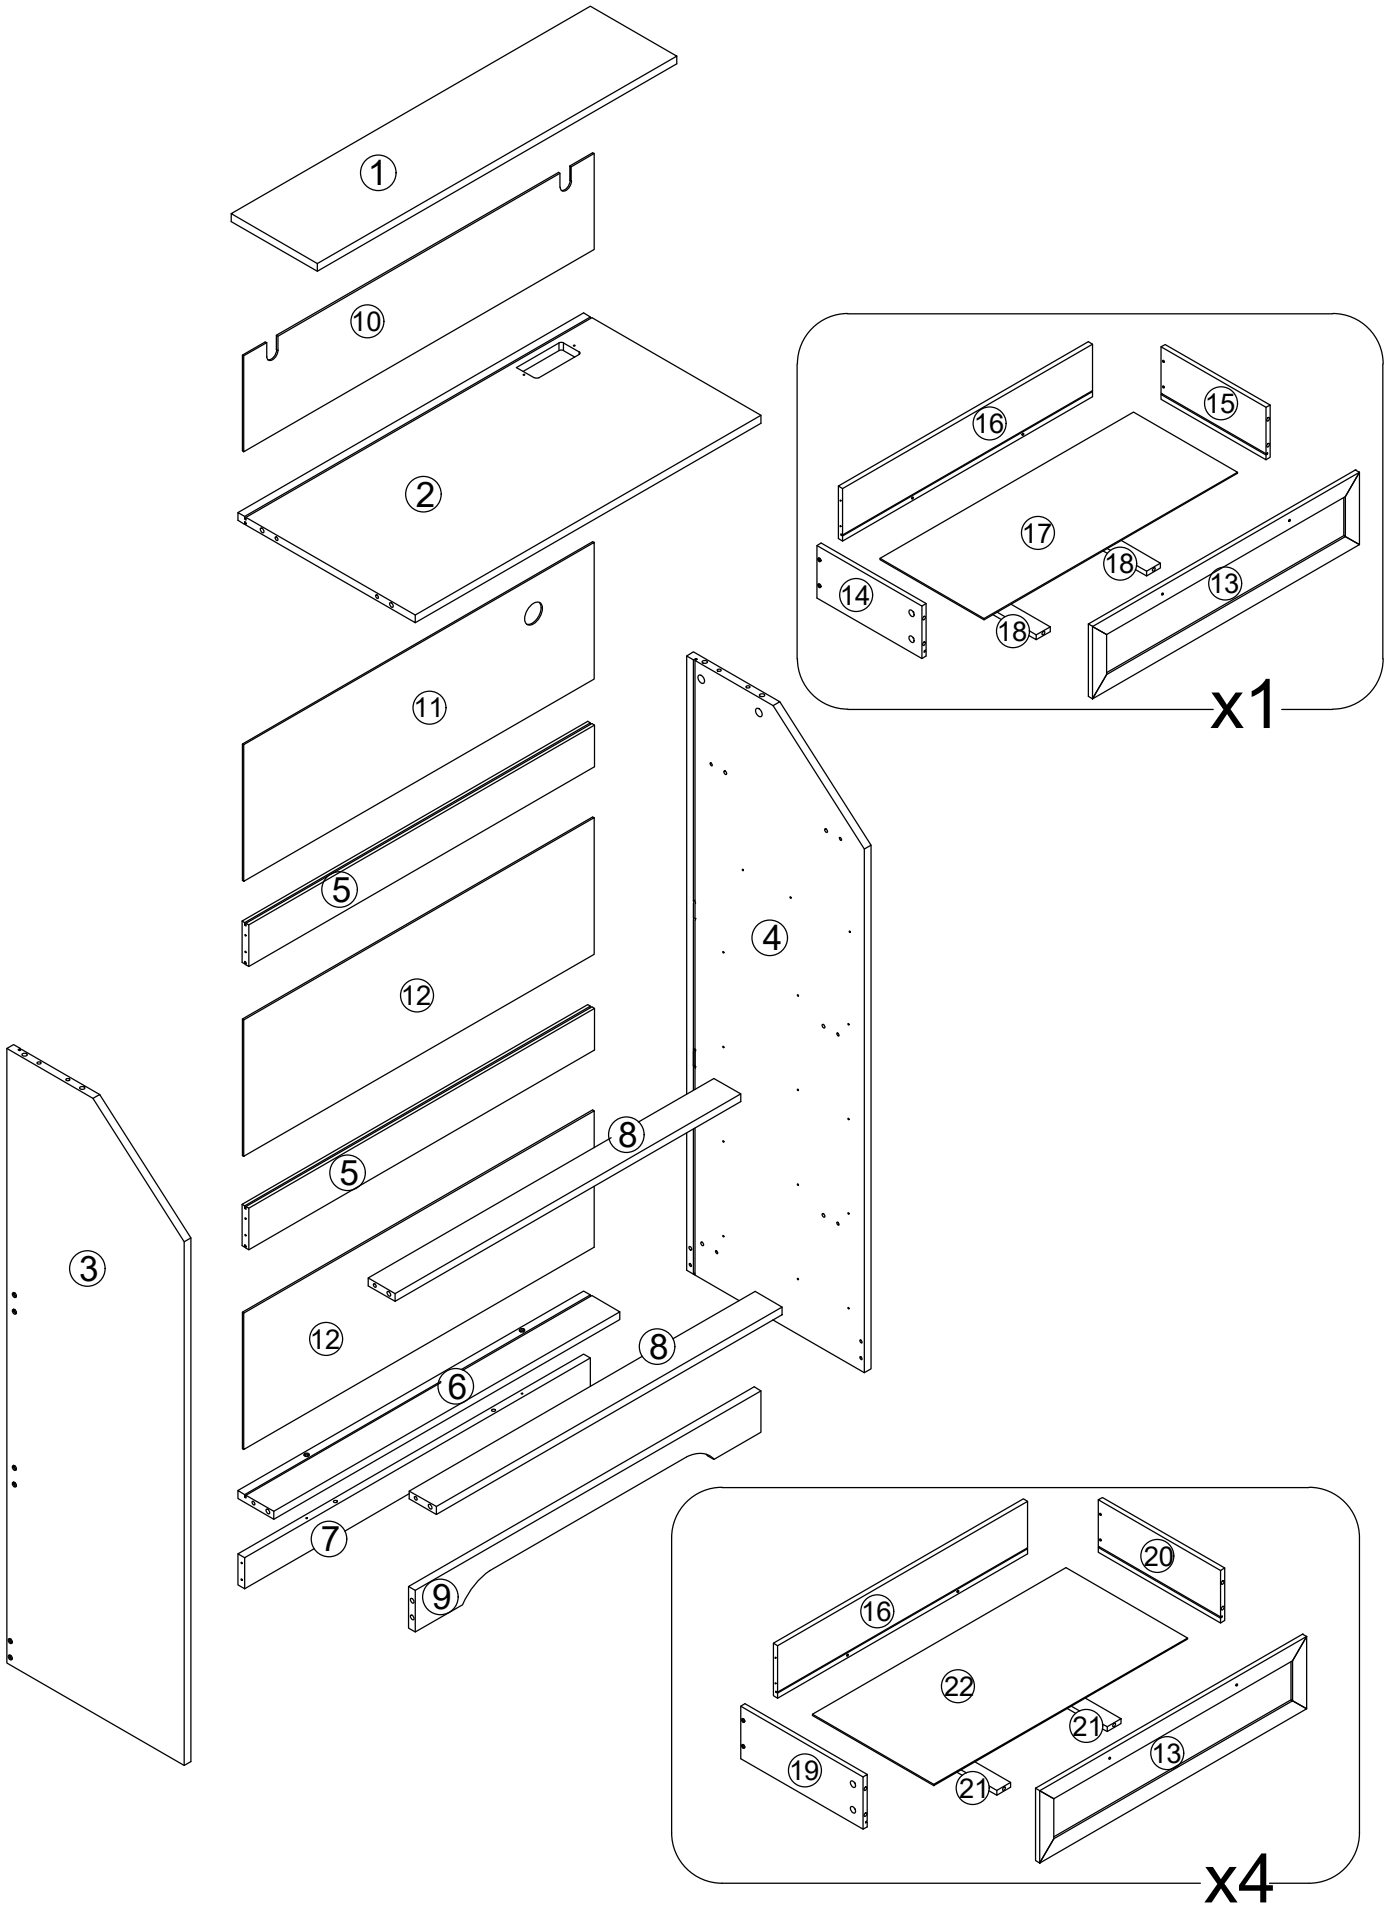
EN_ Turn cam lock clockwise to tighten.

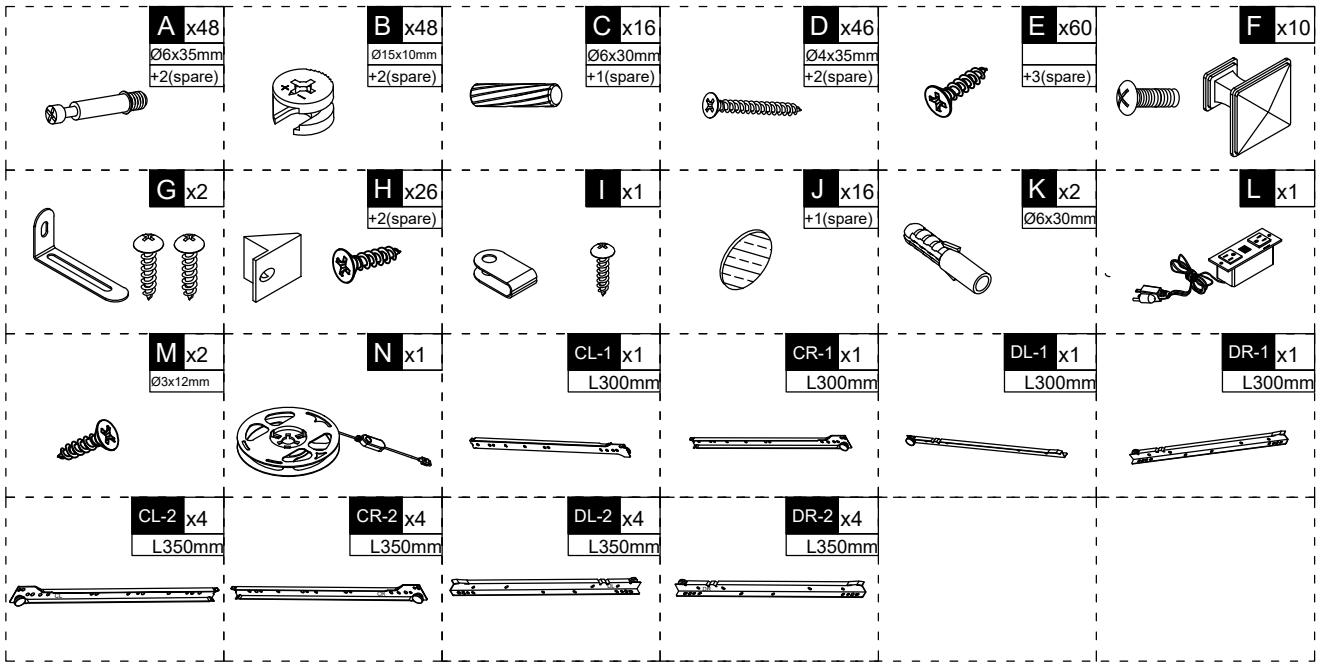
NO.	PARTS	QTY	SPARE
①		x1	
②		x1	
③		x1	
④		x1	
⑤		x2	
⑥		x1	
⑦		x1	
⑧		x2	
⑨		x1	
⑩		x1	

NO.	PARTS	QTY	SPARE
⑪		x1	
⑫		x2	
⑬		x5	
⑭		x1	
⑮		x1	
⑯		x5	
⑰		x1	
⑱		x2	
⑲		x4	
⑳		x4	

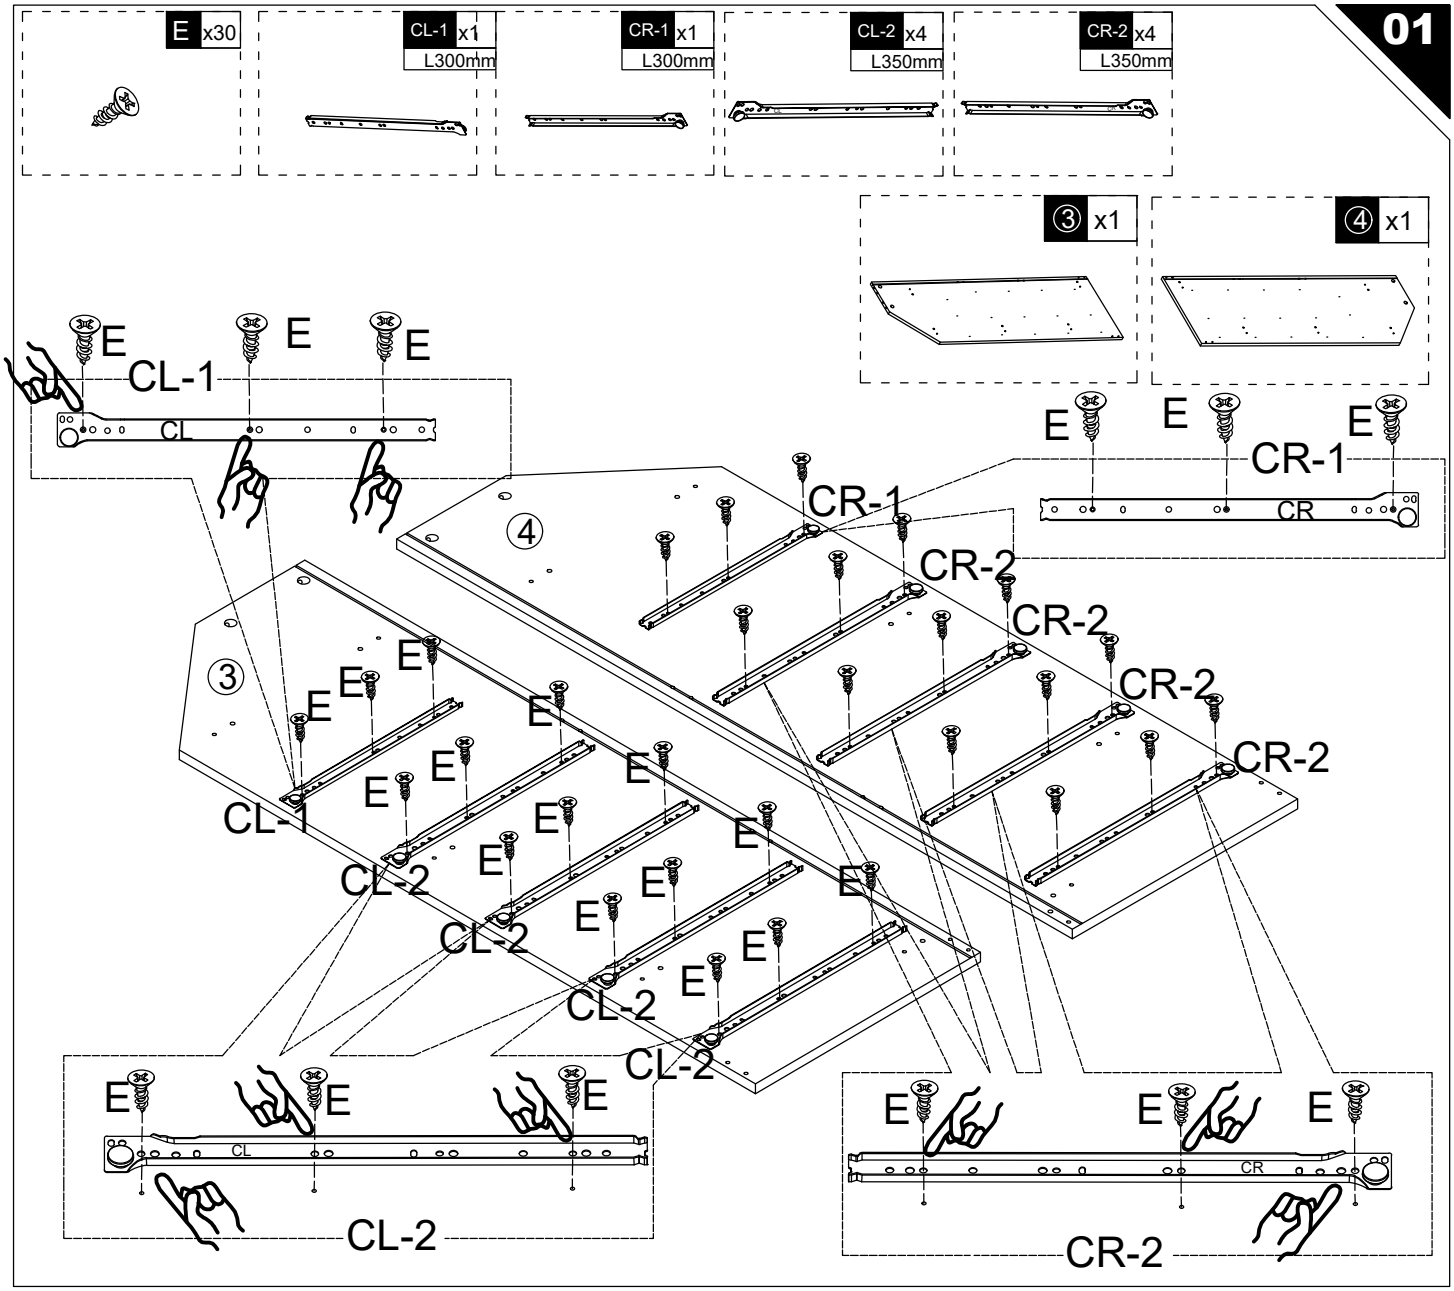
NO.	PARTS	QTY	SPARE
㉑		x8	
㉒		x4	
	 Hardware Kit		

NO.	PARTS	QTY	SPARE

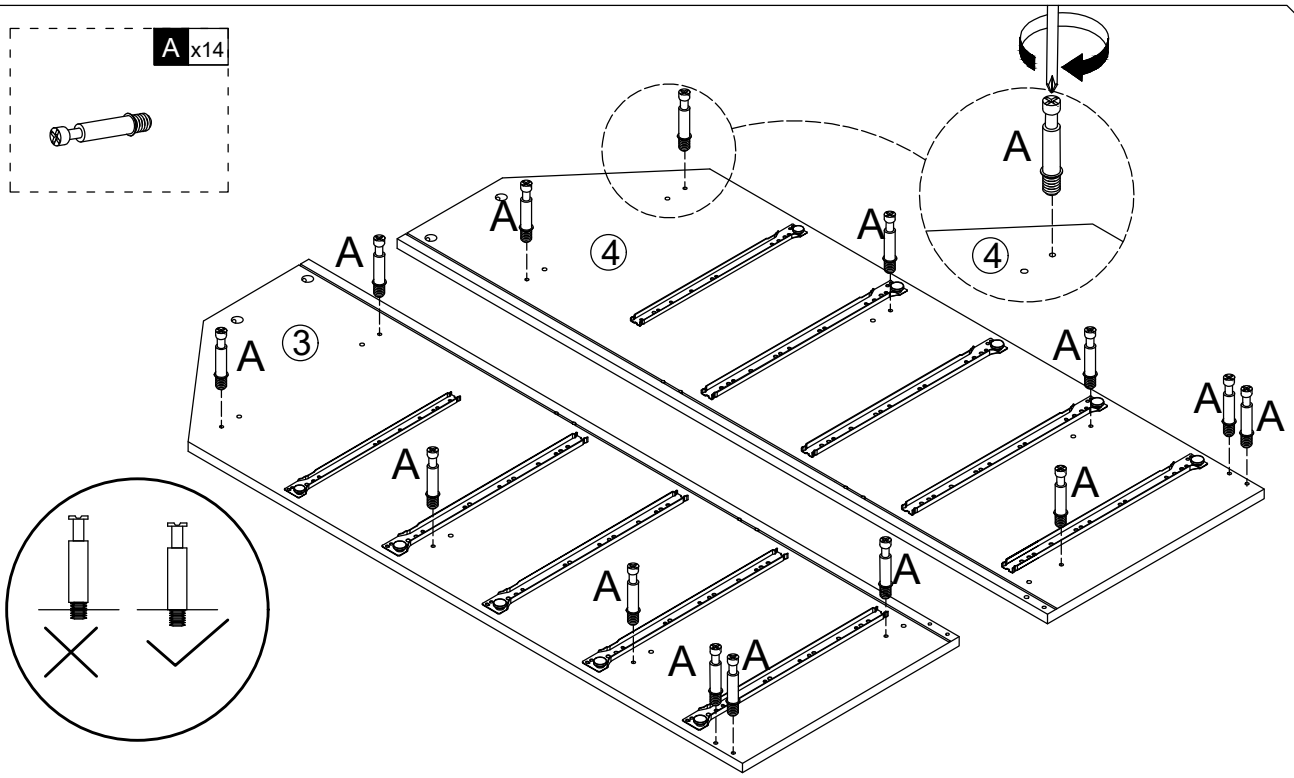

1
10
2
11
5
12
5
3
4
8
12
8
6
7
9
16
15
17
18
14
18
13
x1
16
20
22
21
19
21
13
x4


A x48
Ø6x35mm
+2(spare)
B x48
Ø15x10mm
+2(spare)
C x16
Ø6x30mm
+1(spare)
D x46
Ø4x35mm
+2(spare)
E x60
+3(spare)
F x10
G x2
H x26
+2(spare)
I x1
J x16
+1(spare)
K x2
Ø6x30mm
L x1
M x2
Ø3x12mm
N x1
CL-1 x1
L300mm
CR-1 x1
L300mm
DL-1 x1
L300mm
DR-1 x1
L300mm
CL-2 x4
L350mm
CR-2 x4
L350mm
DL-2 x4
L350mm
DR-2 x4
L350mm

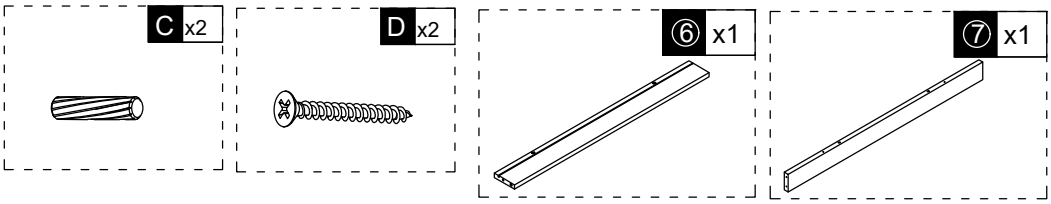
01

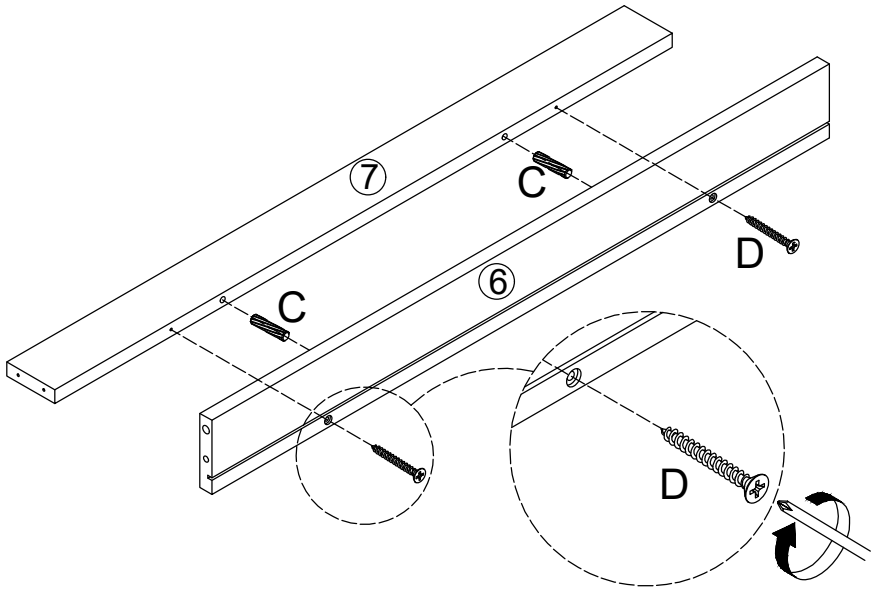

E x30
CL-1 x1
L300mm
CR-1 x1
L300mm
CL-2 x4
L350mm
CR-2 x4
L350mm
③ x1
④ x1
E
CL-1
CL
CR-1
CR
CR-2
CL-2
③
④

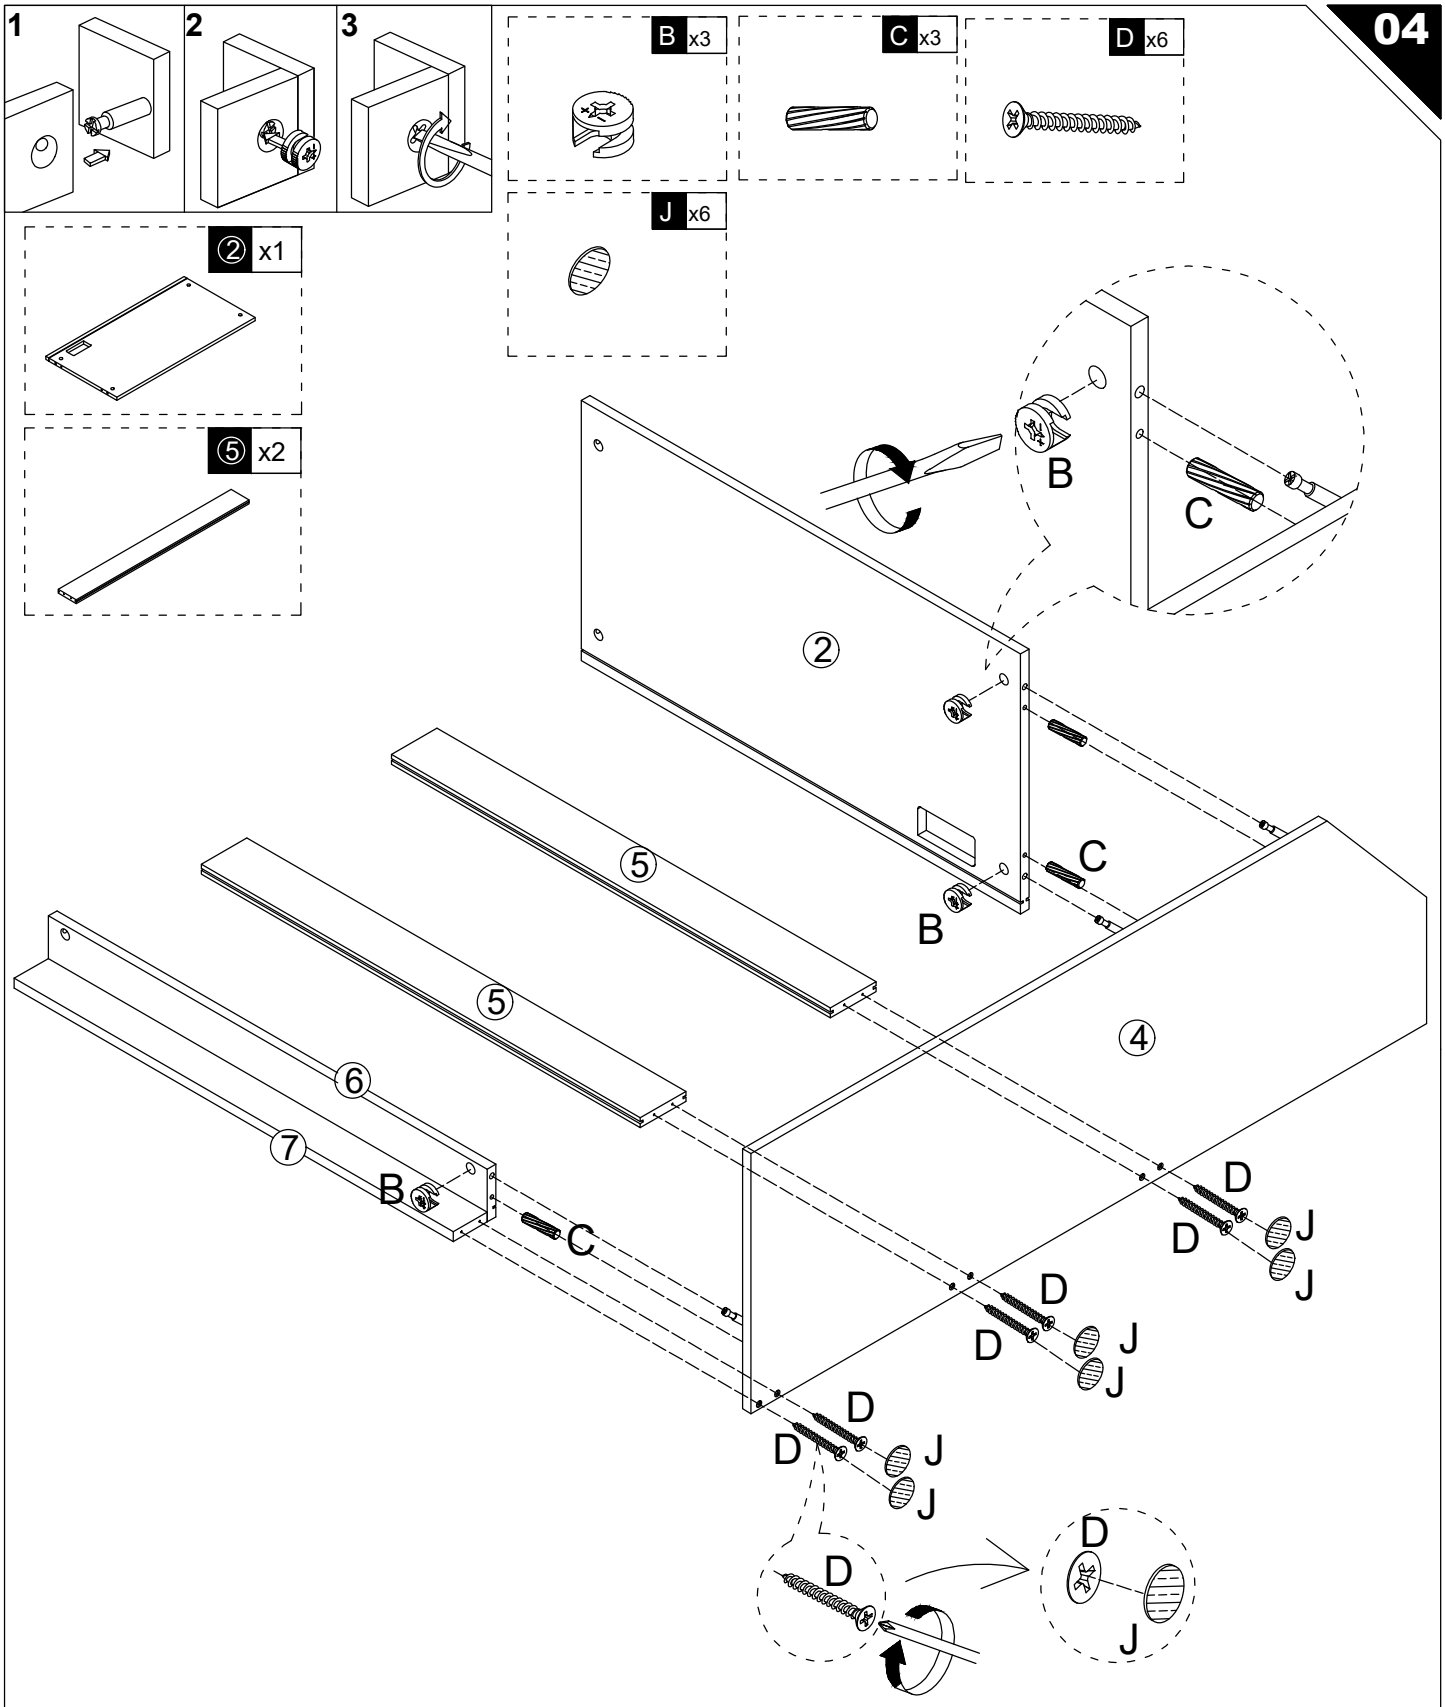
02

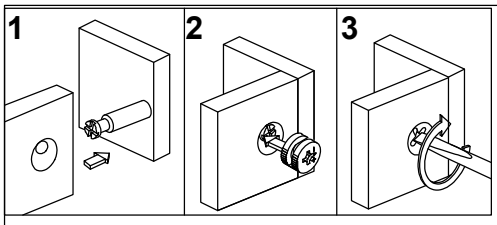


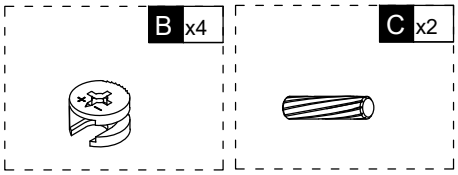
03

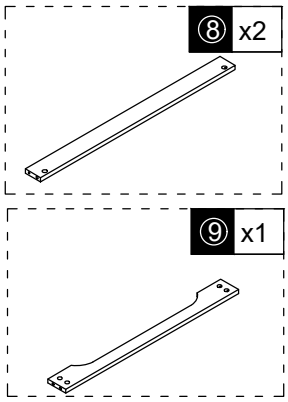


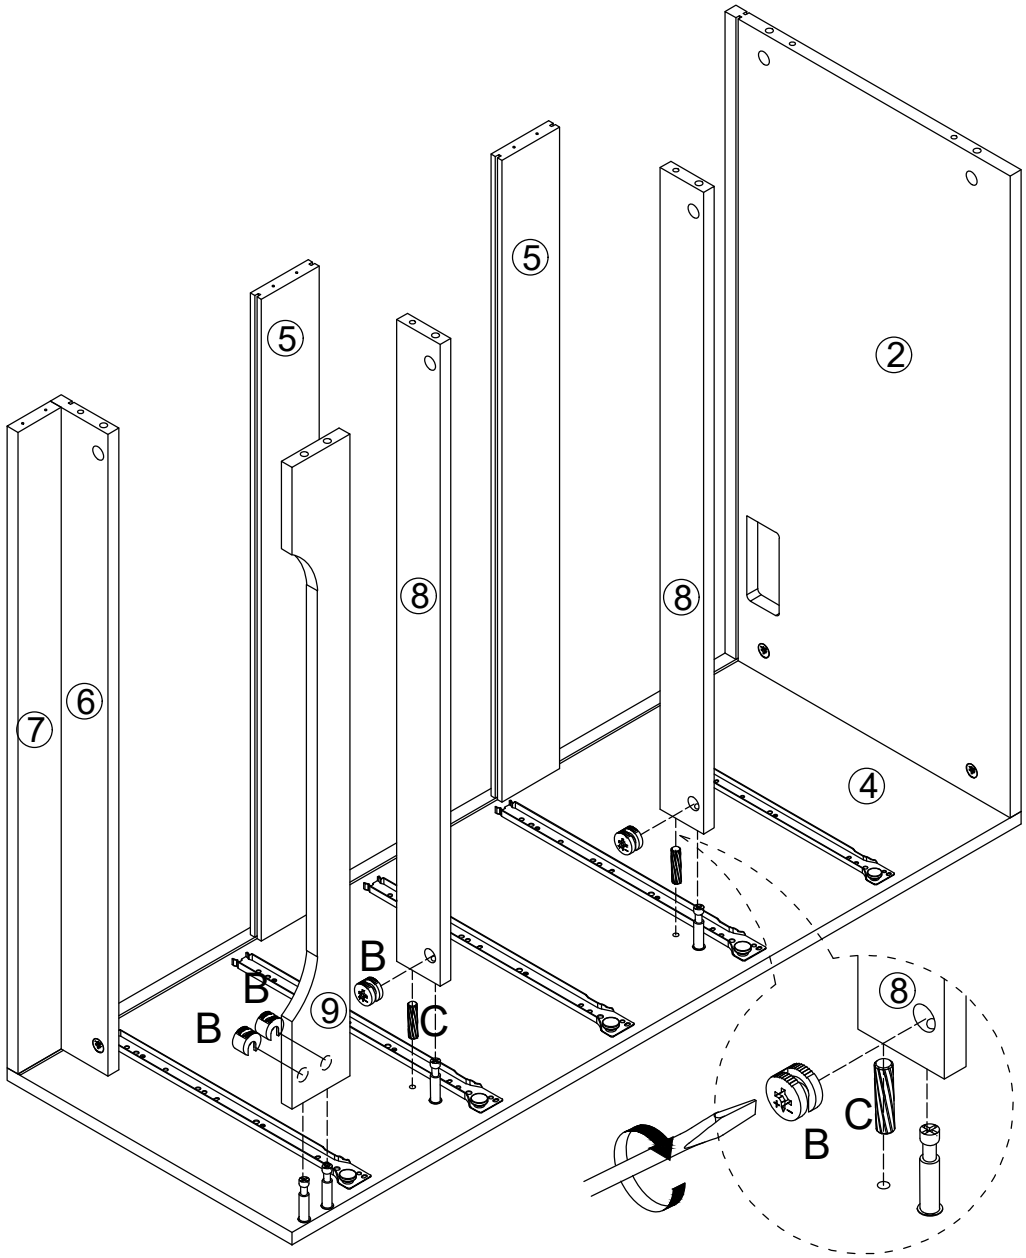


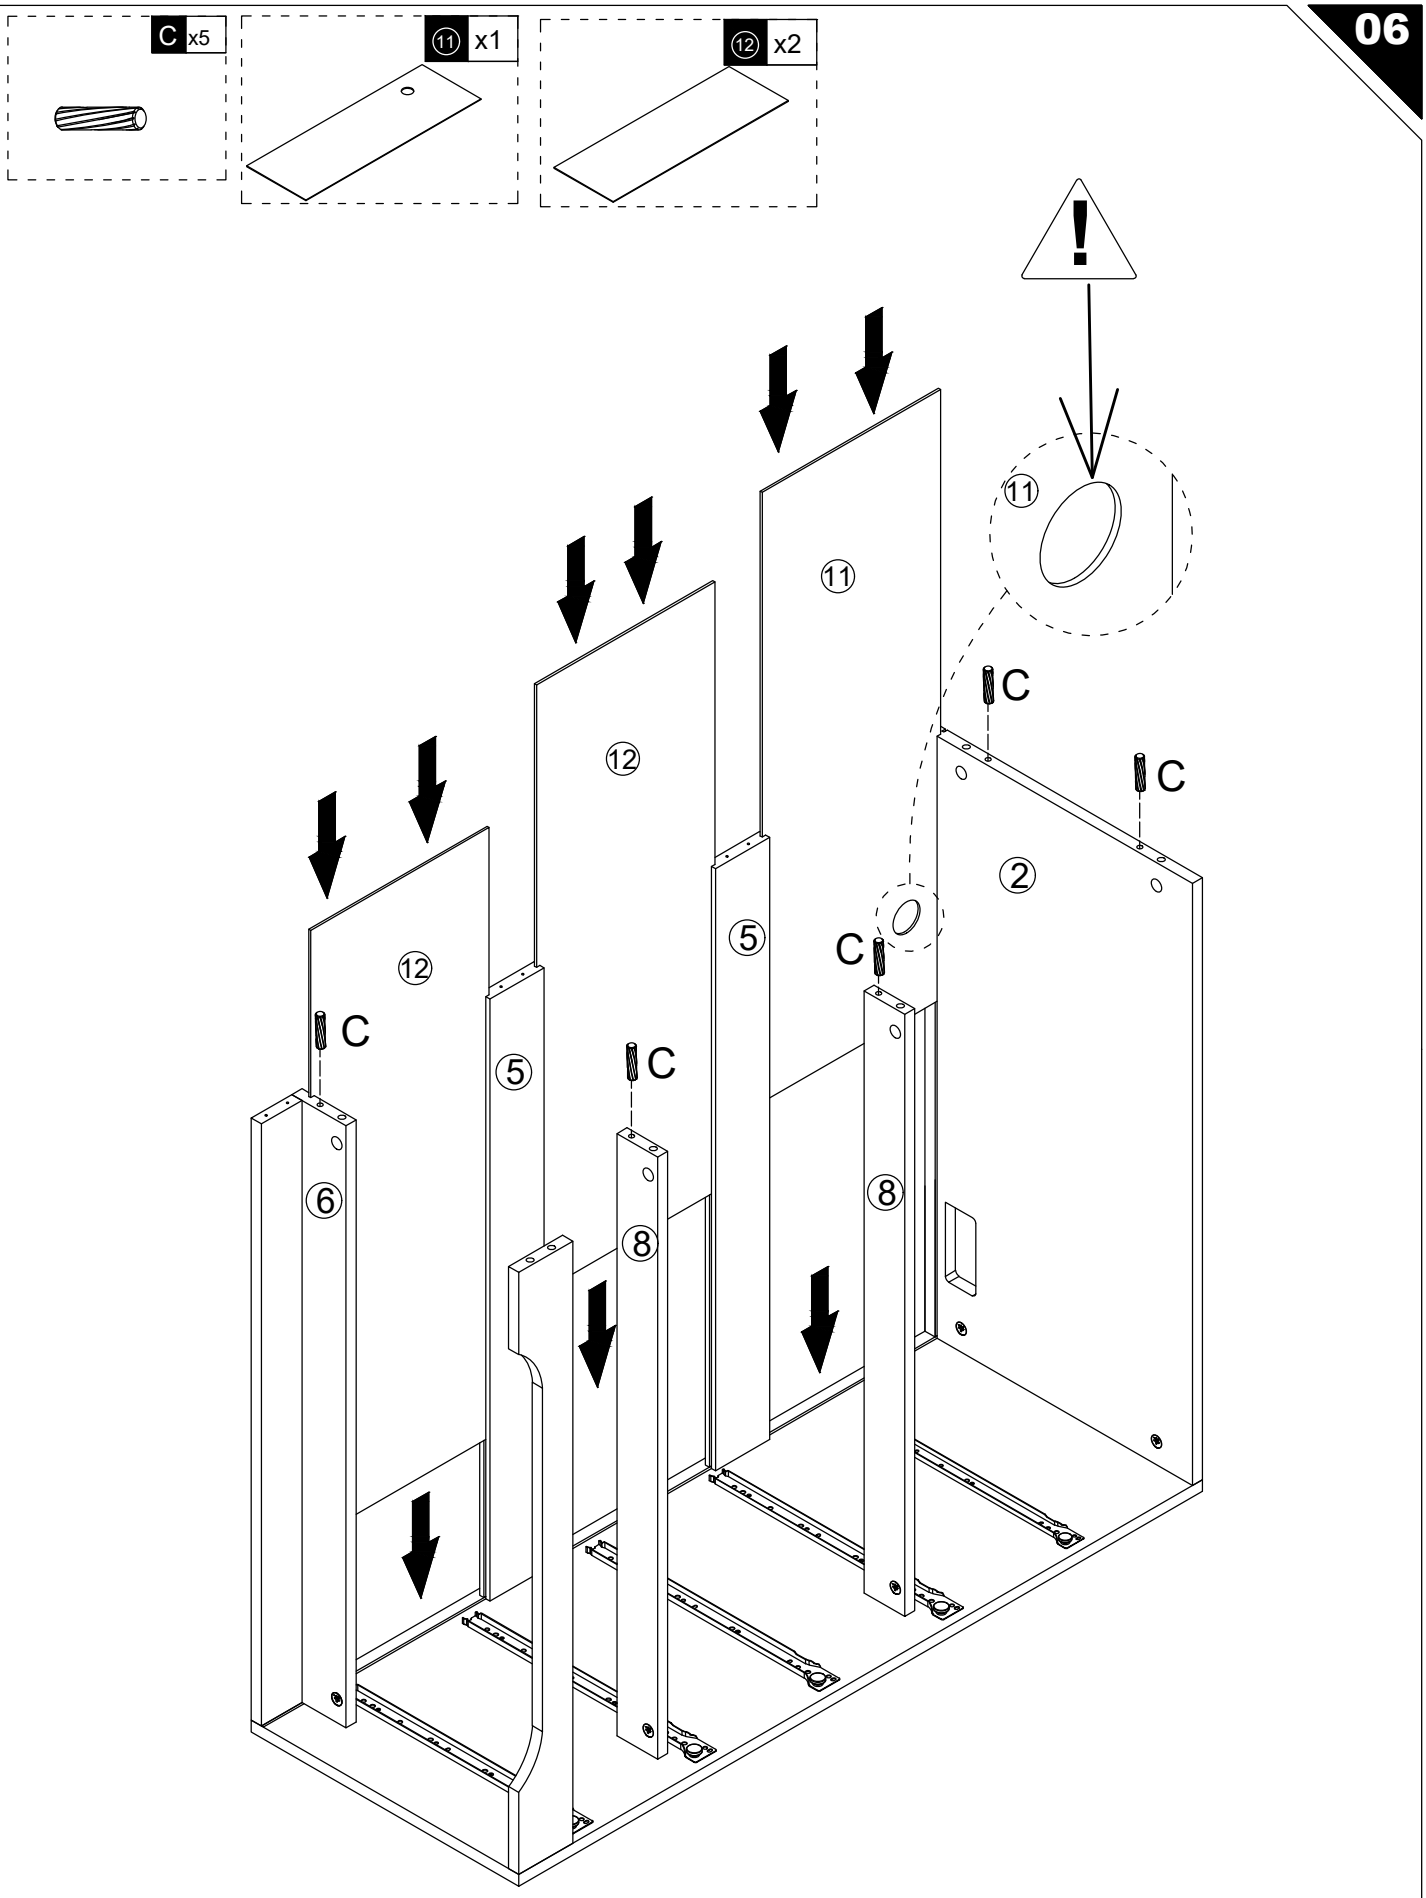

04
1
2
3
B x3
C x3
D x6
J x6
② x1
⑤ x2
B
C
②
⑤
⑤
C
B
④
6
7
B
C
D
D
J
J
D
D
J
J
D
D
J
J
D
D
J

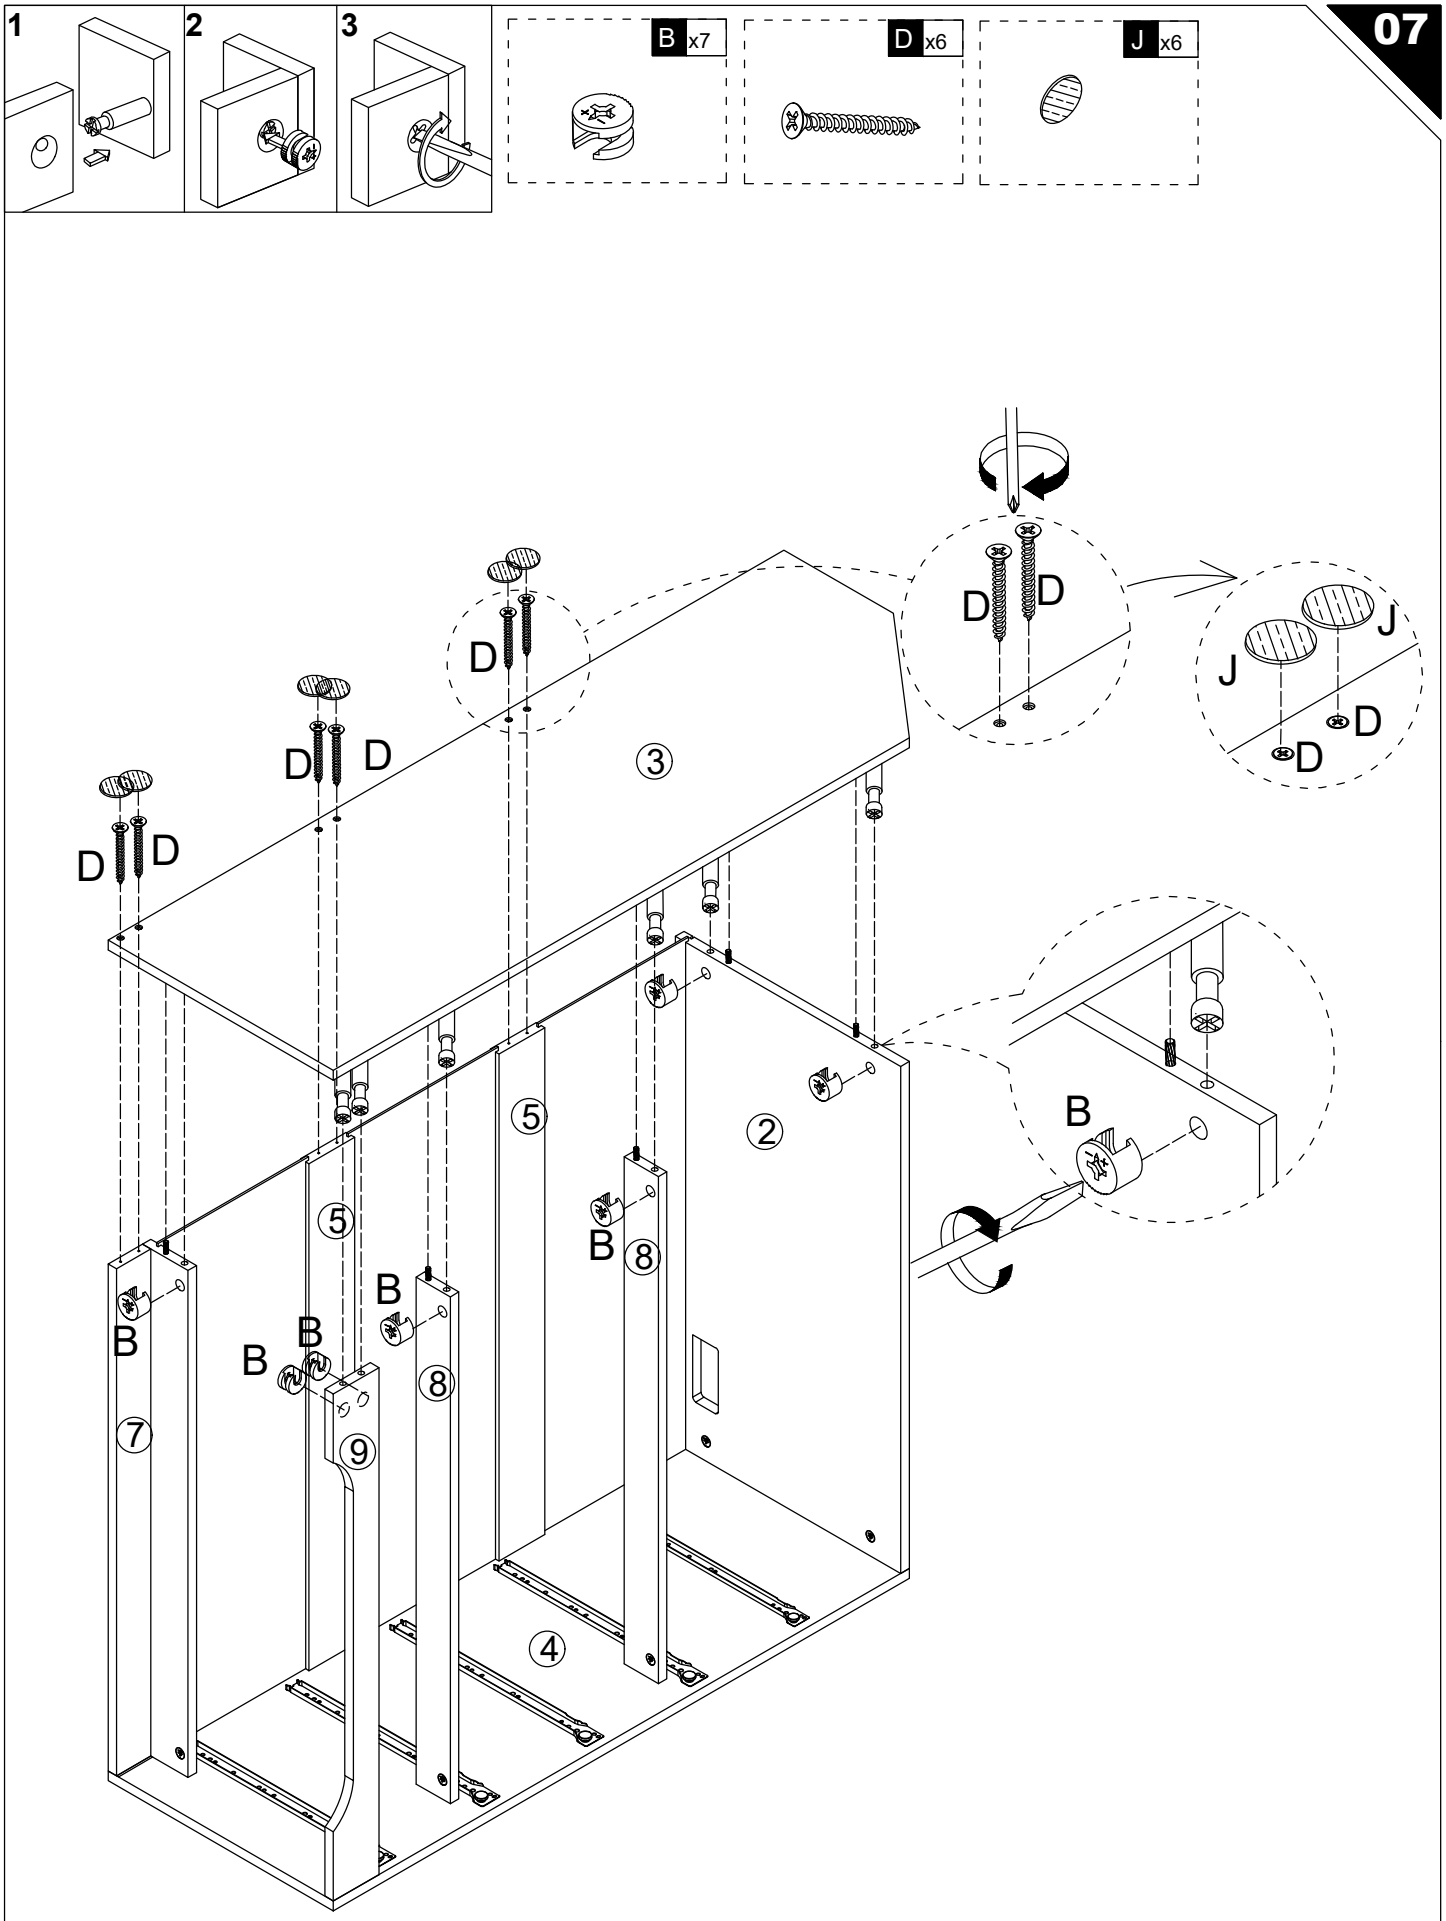

1
2
3

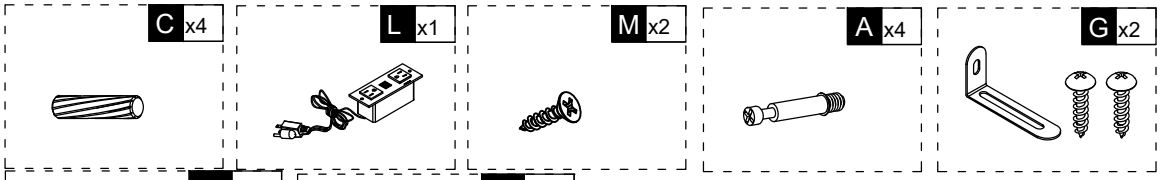

B x4
C x2

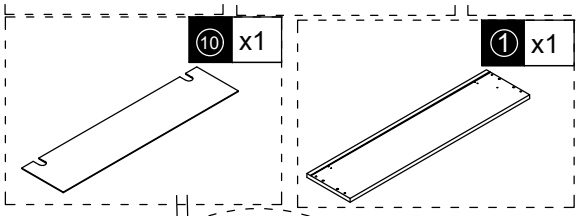

⑧ x2
⑨ x1

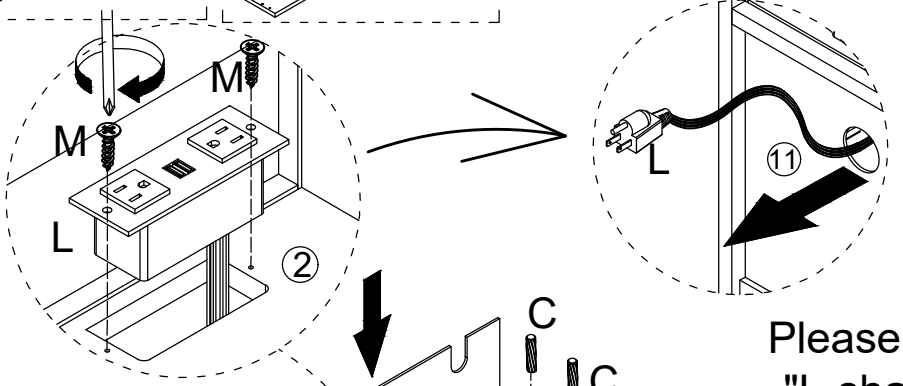

⑤
⑤
⑧
⑧
②
⑦
⑥
④
B
B
B
⑨
C
⑧
B
C

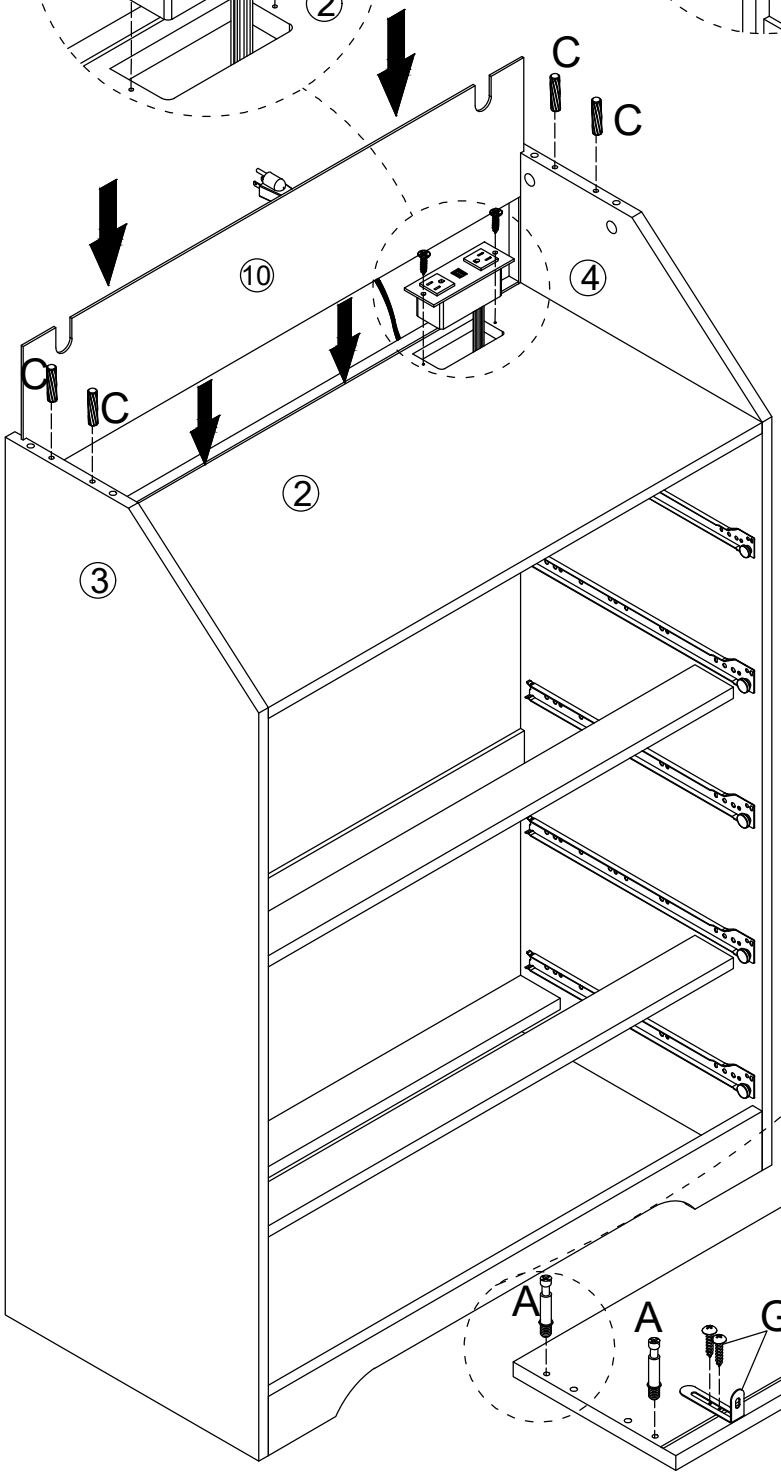

C x5
⑪ x1
⑫ x2
!
⑪
C
C
⑫
⑪
2
C
5
⑫
C
5
C
6
8
8


07
1
2
3
B x7
D x6
J x6
D
D
D
D
D
D
③
J
J
D
D
B
②
⑤
⑤
B
⑧
B
B
B
⑧
⑦
⑨
④

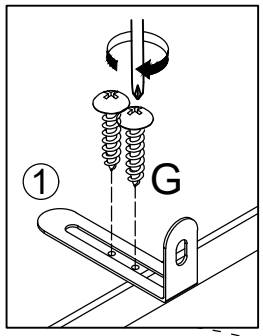


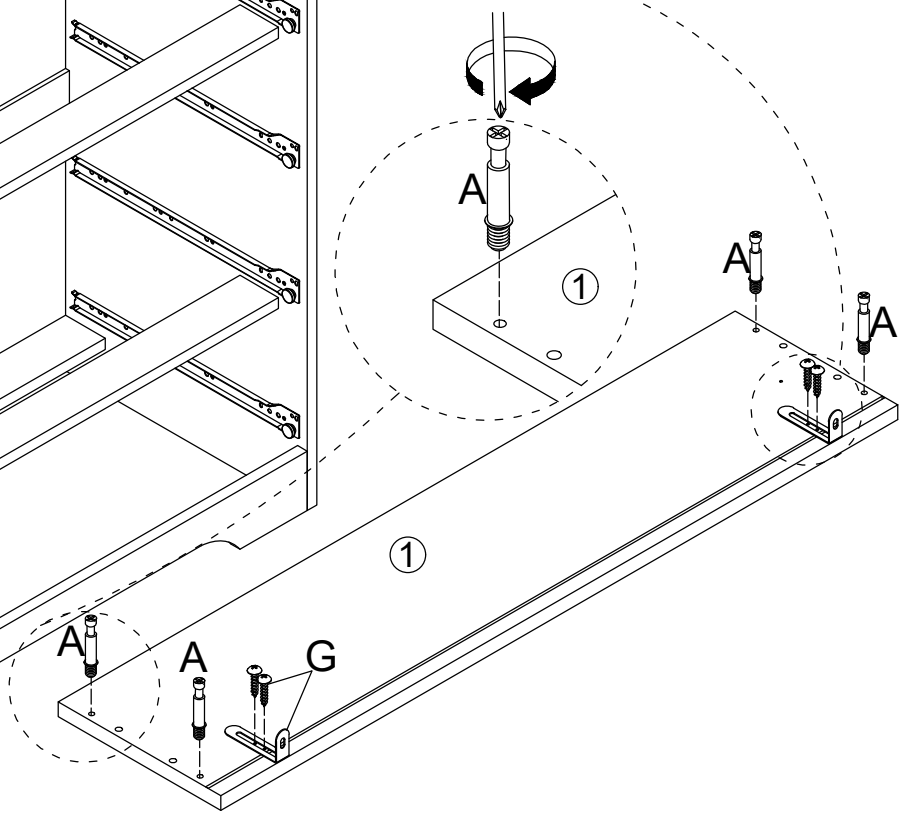


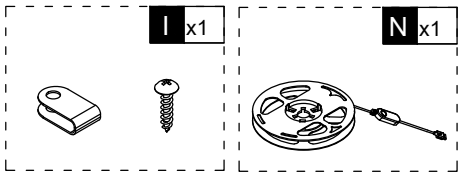




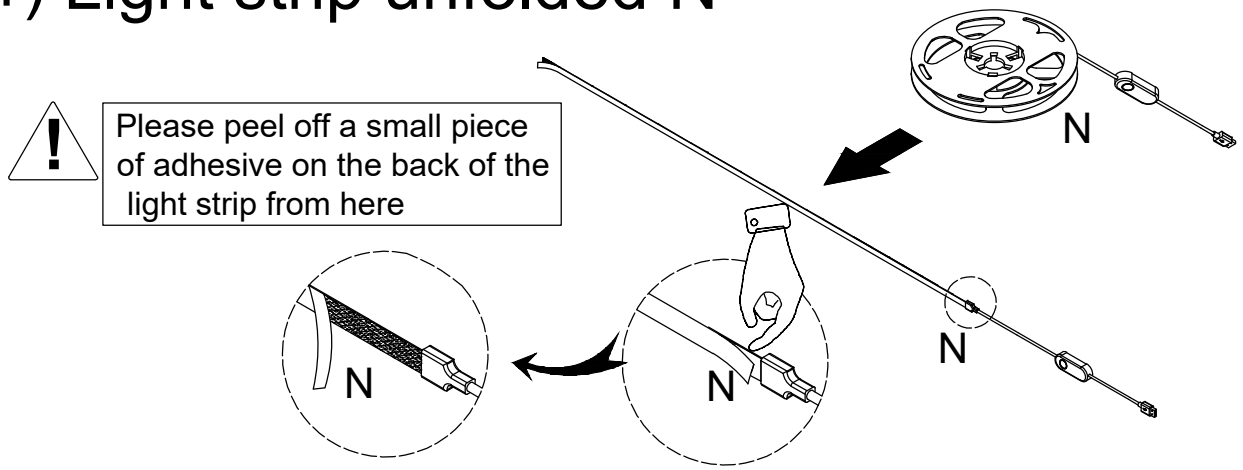
Please please fix the "L-shaped iron sheet" plate to the corresponding reserved hole on the board with screws.



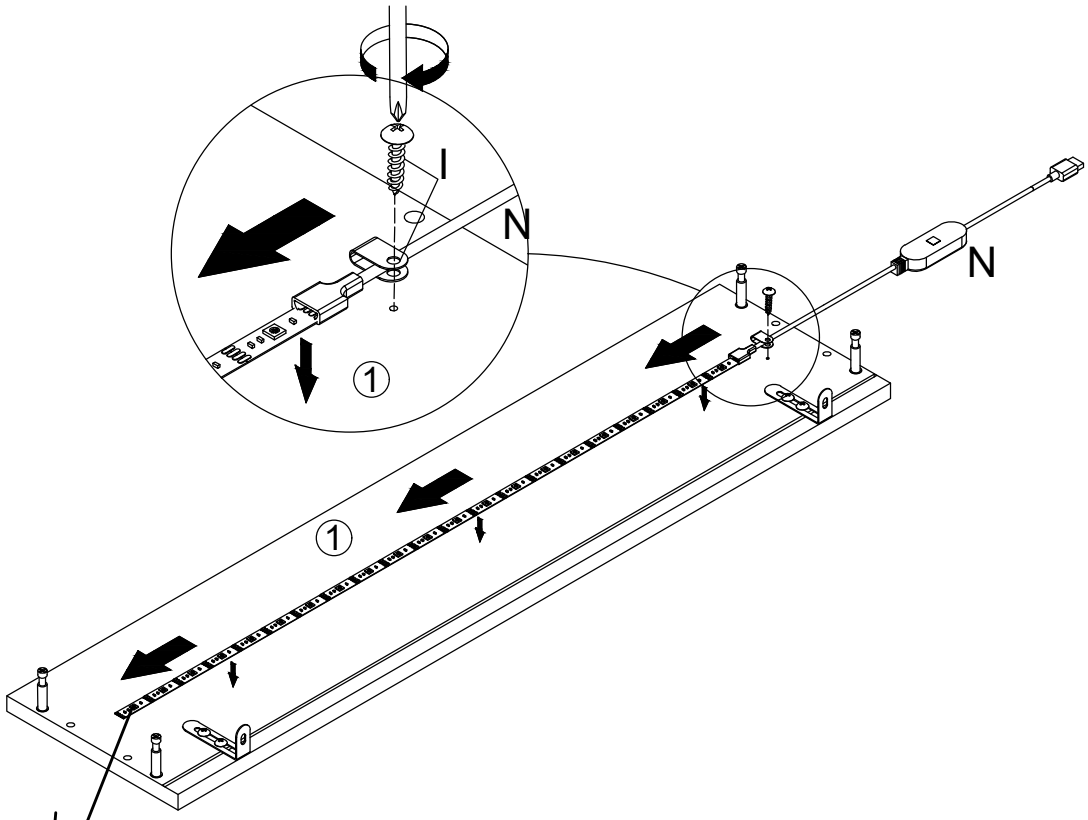


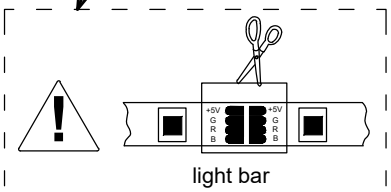


(1) Light strip unfolded N



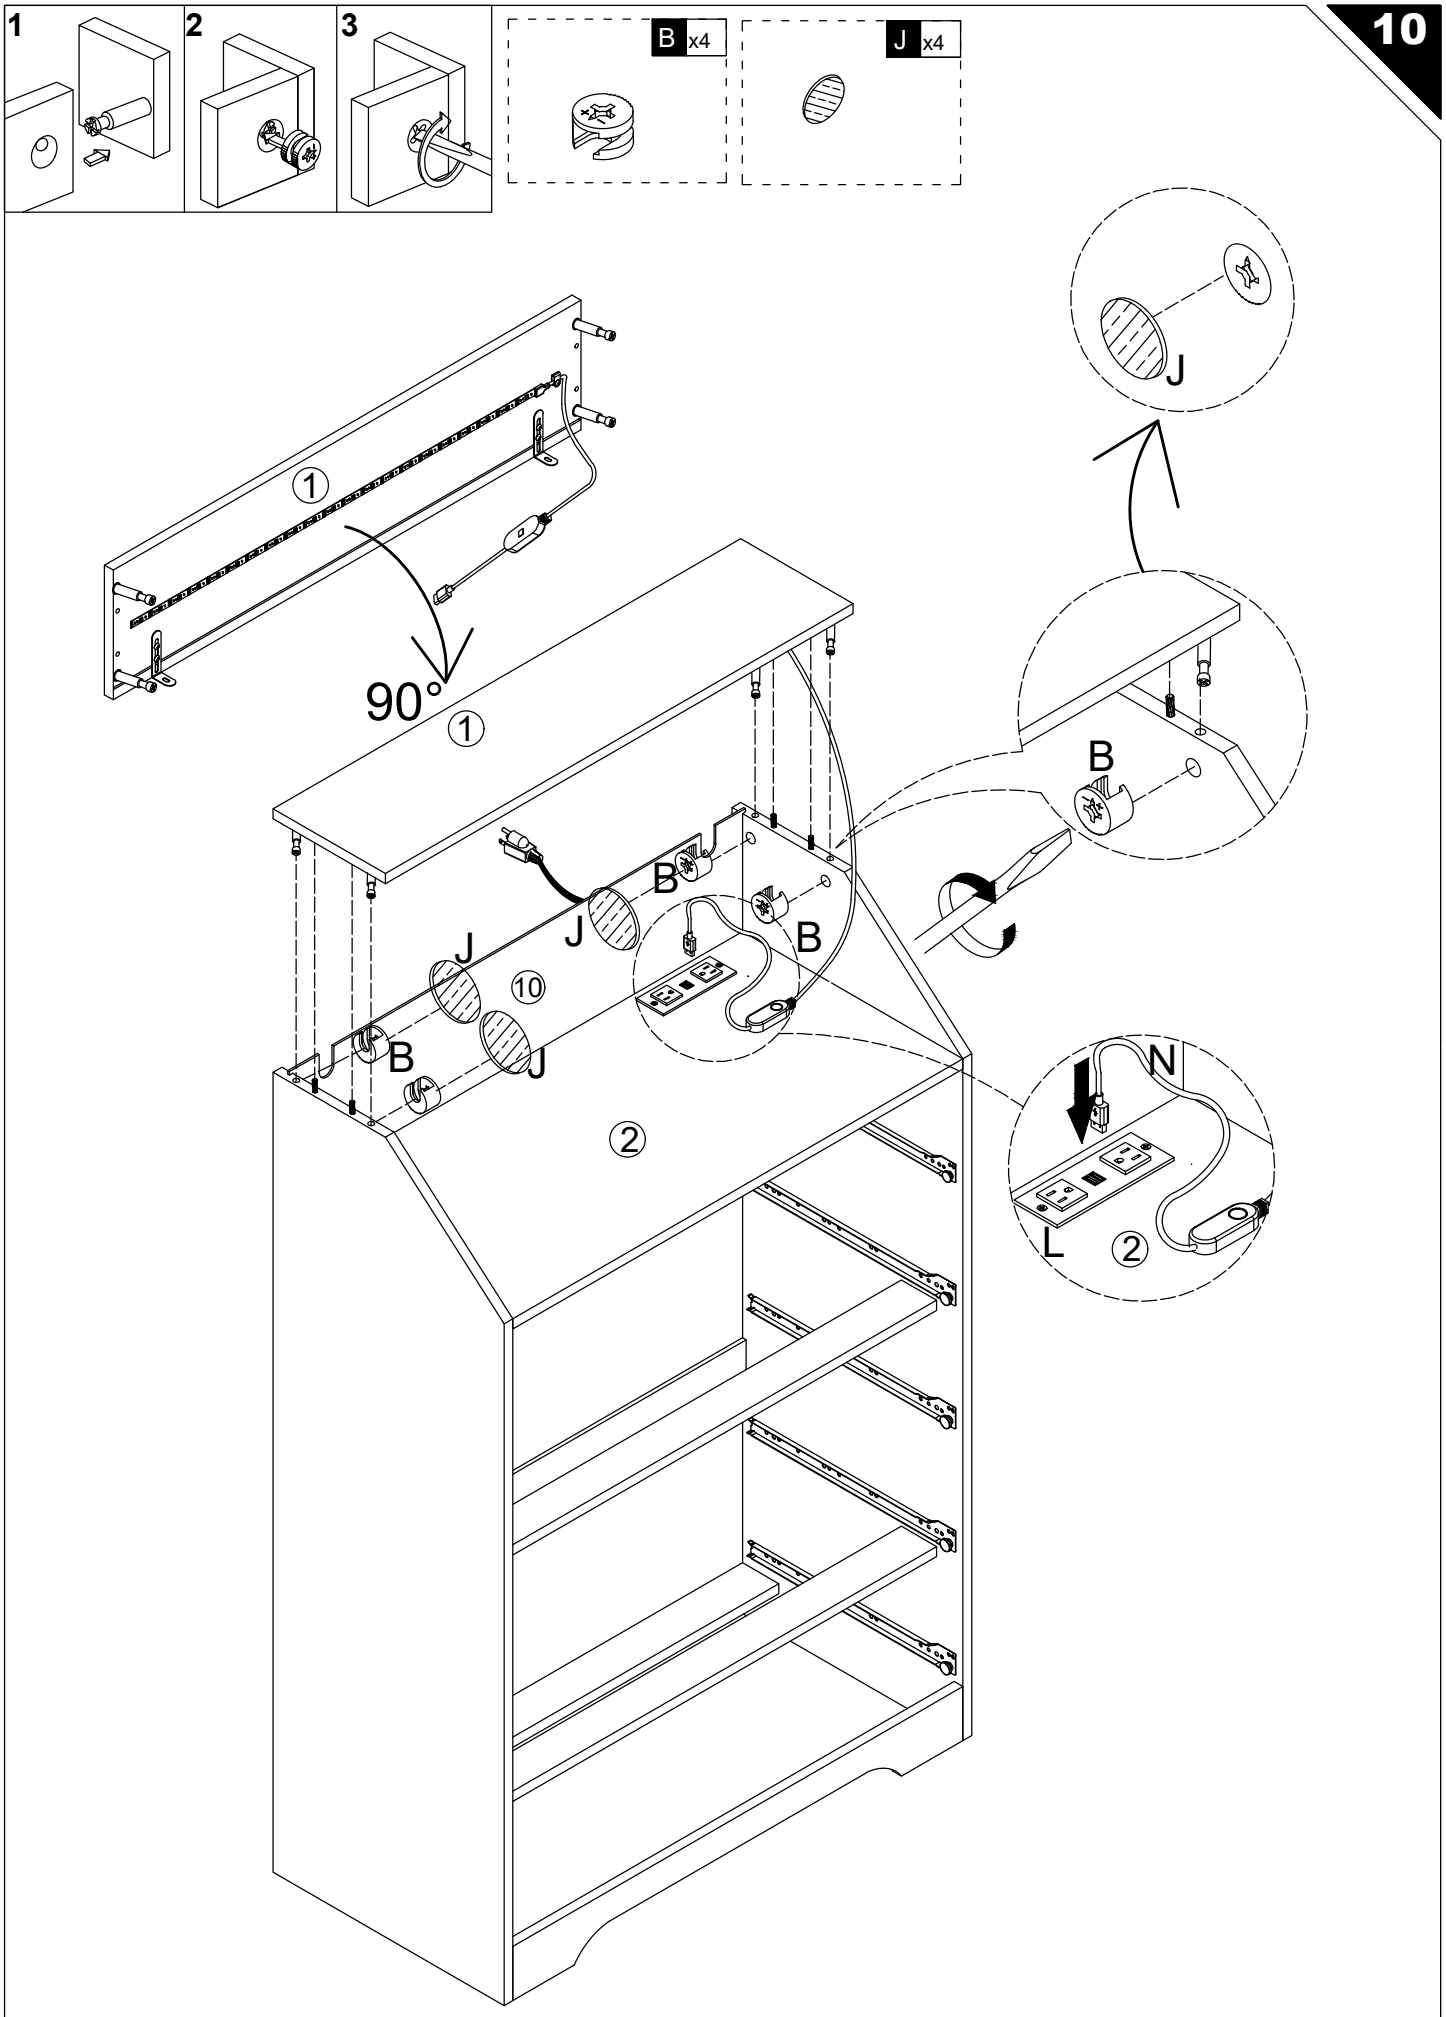
(2)

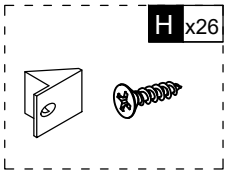


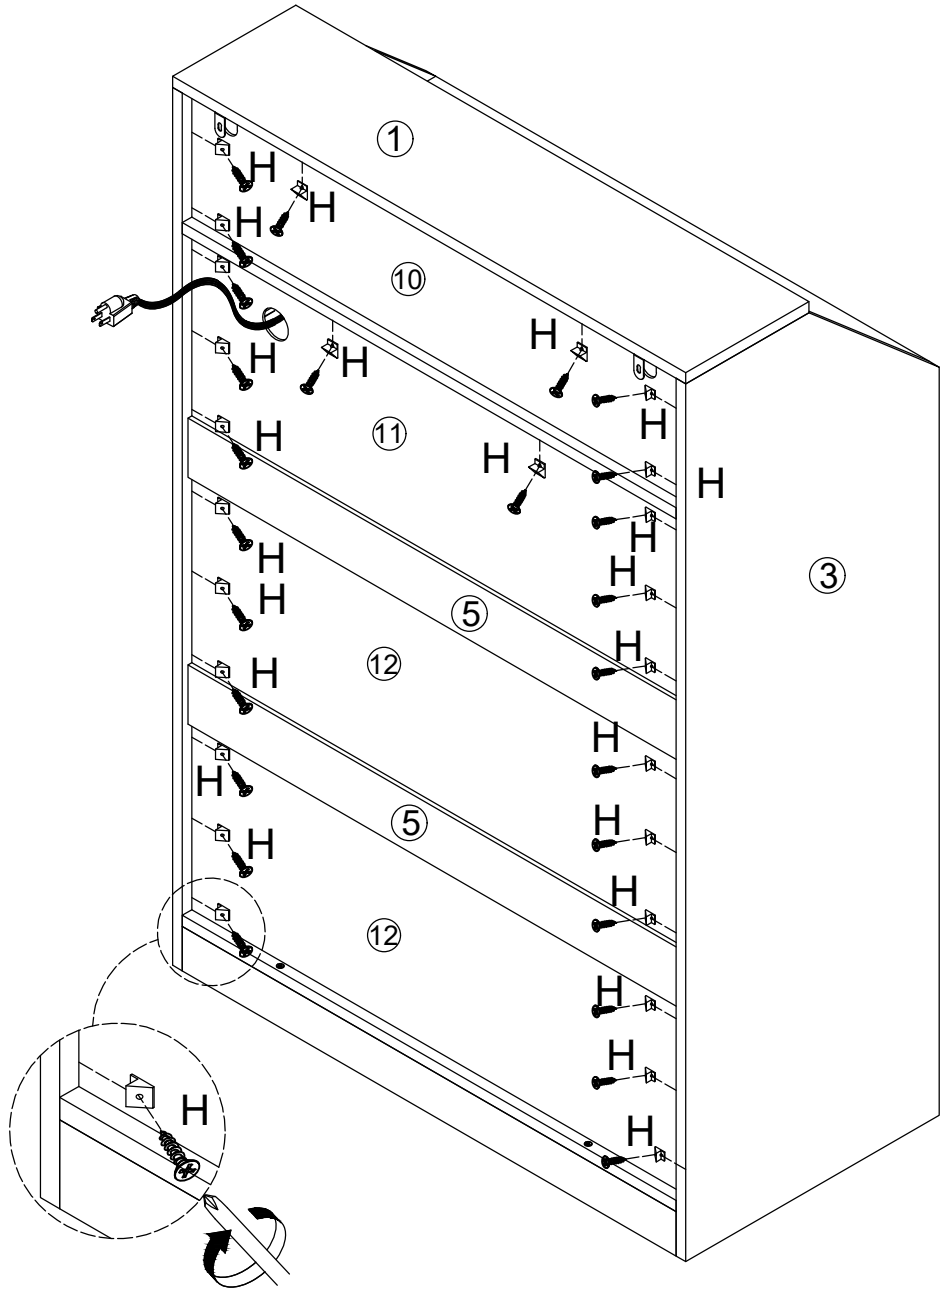


light bar

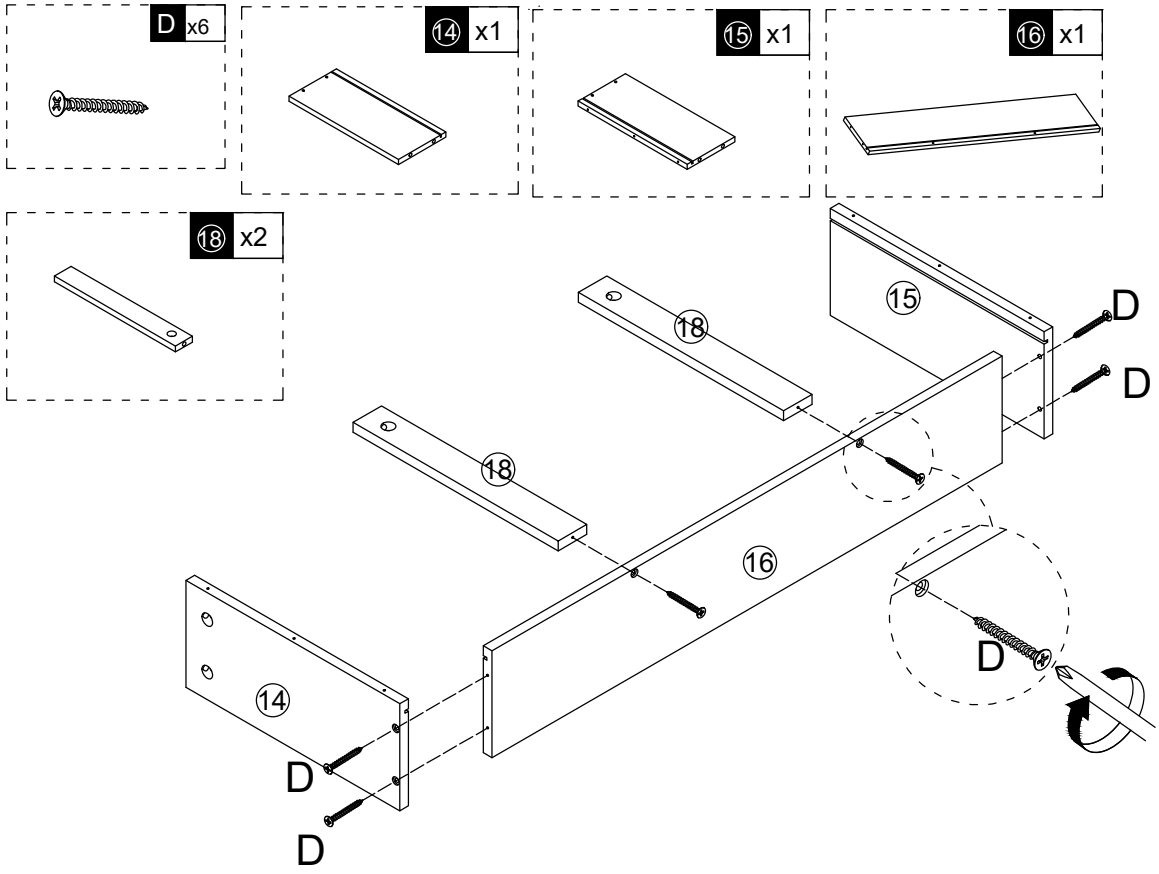
According to the actual length, cut the excess light strip or keep it


1
2
3
B x4
J x4
1
90°
1
J
B
B
J
J
10
B
J
2
N
L
2

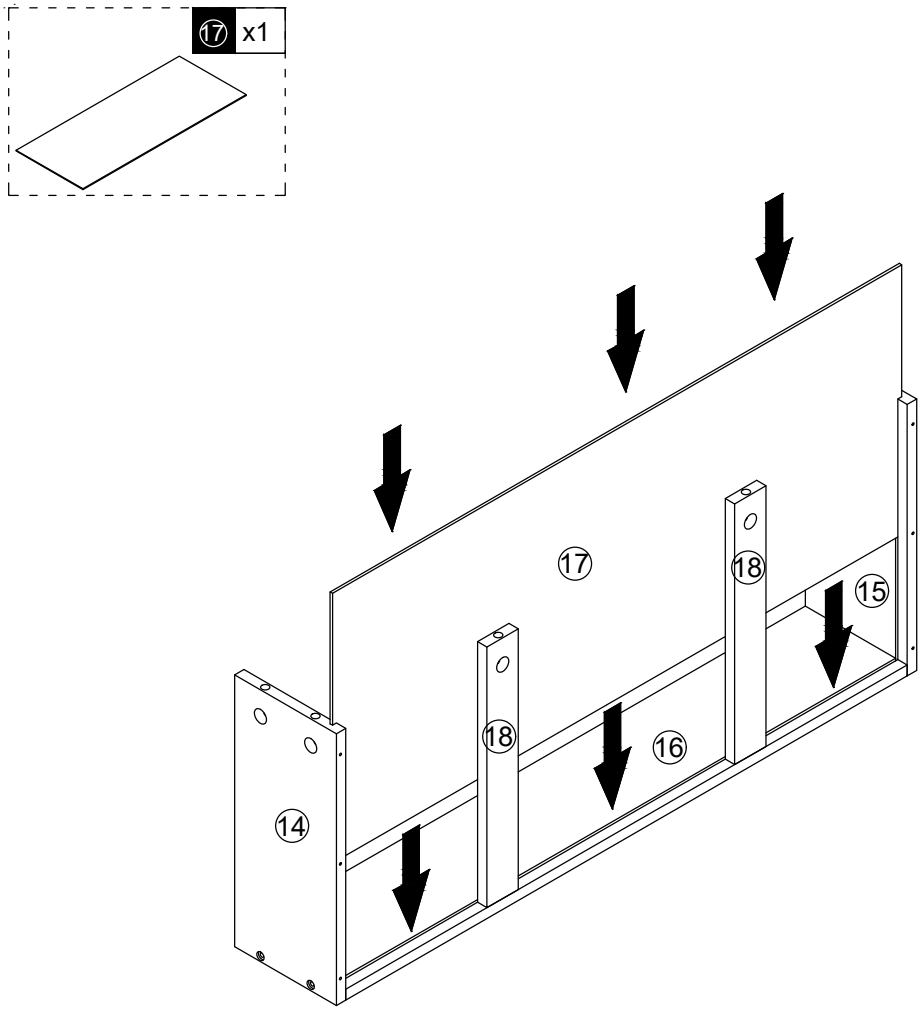

H x26

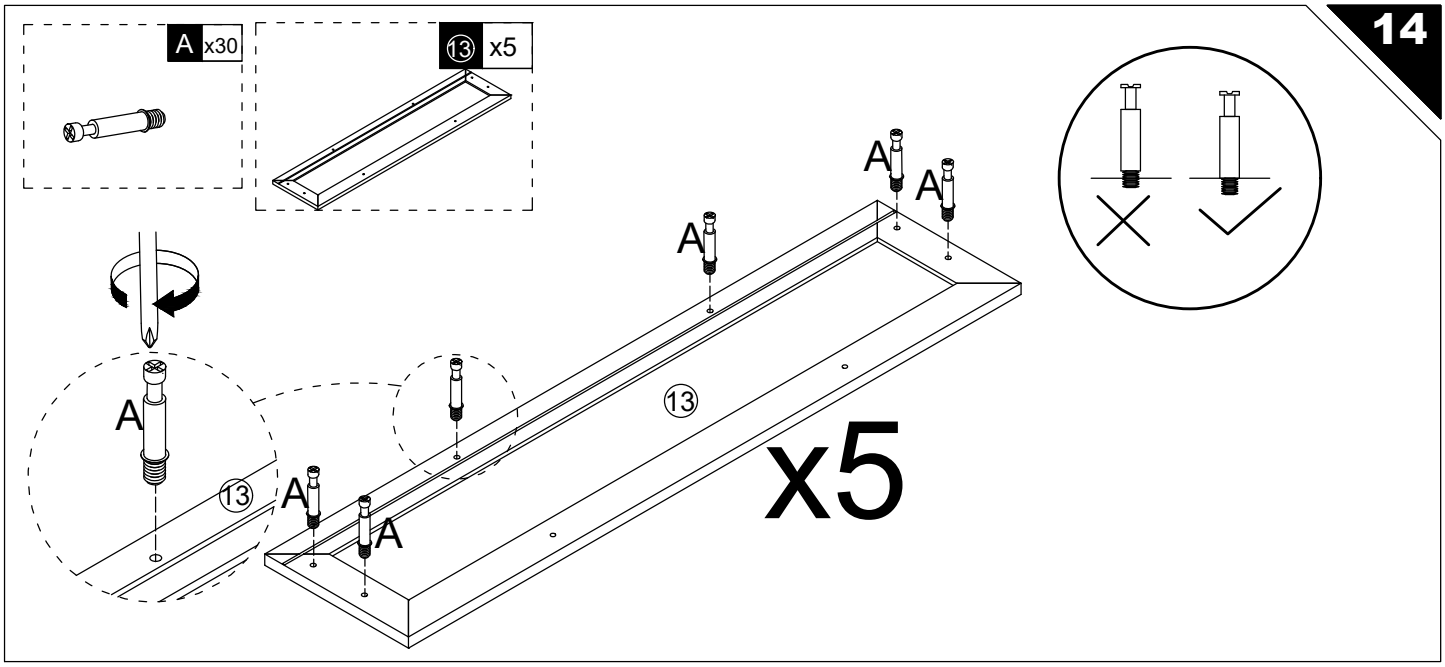

①
⑩
⑪
⑤
⑫
⑤
⑫
③
H

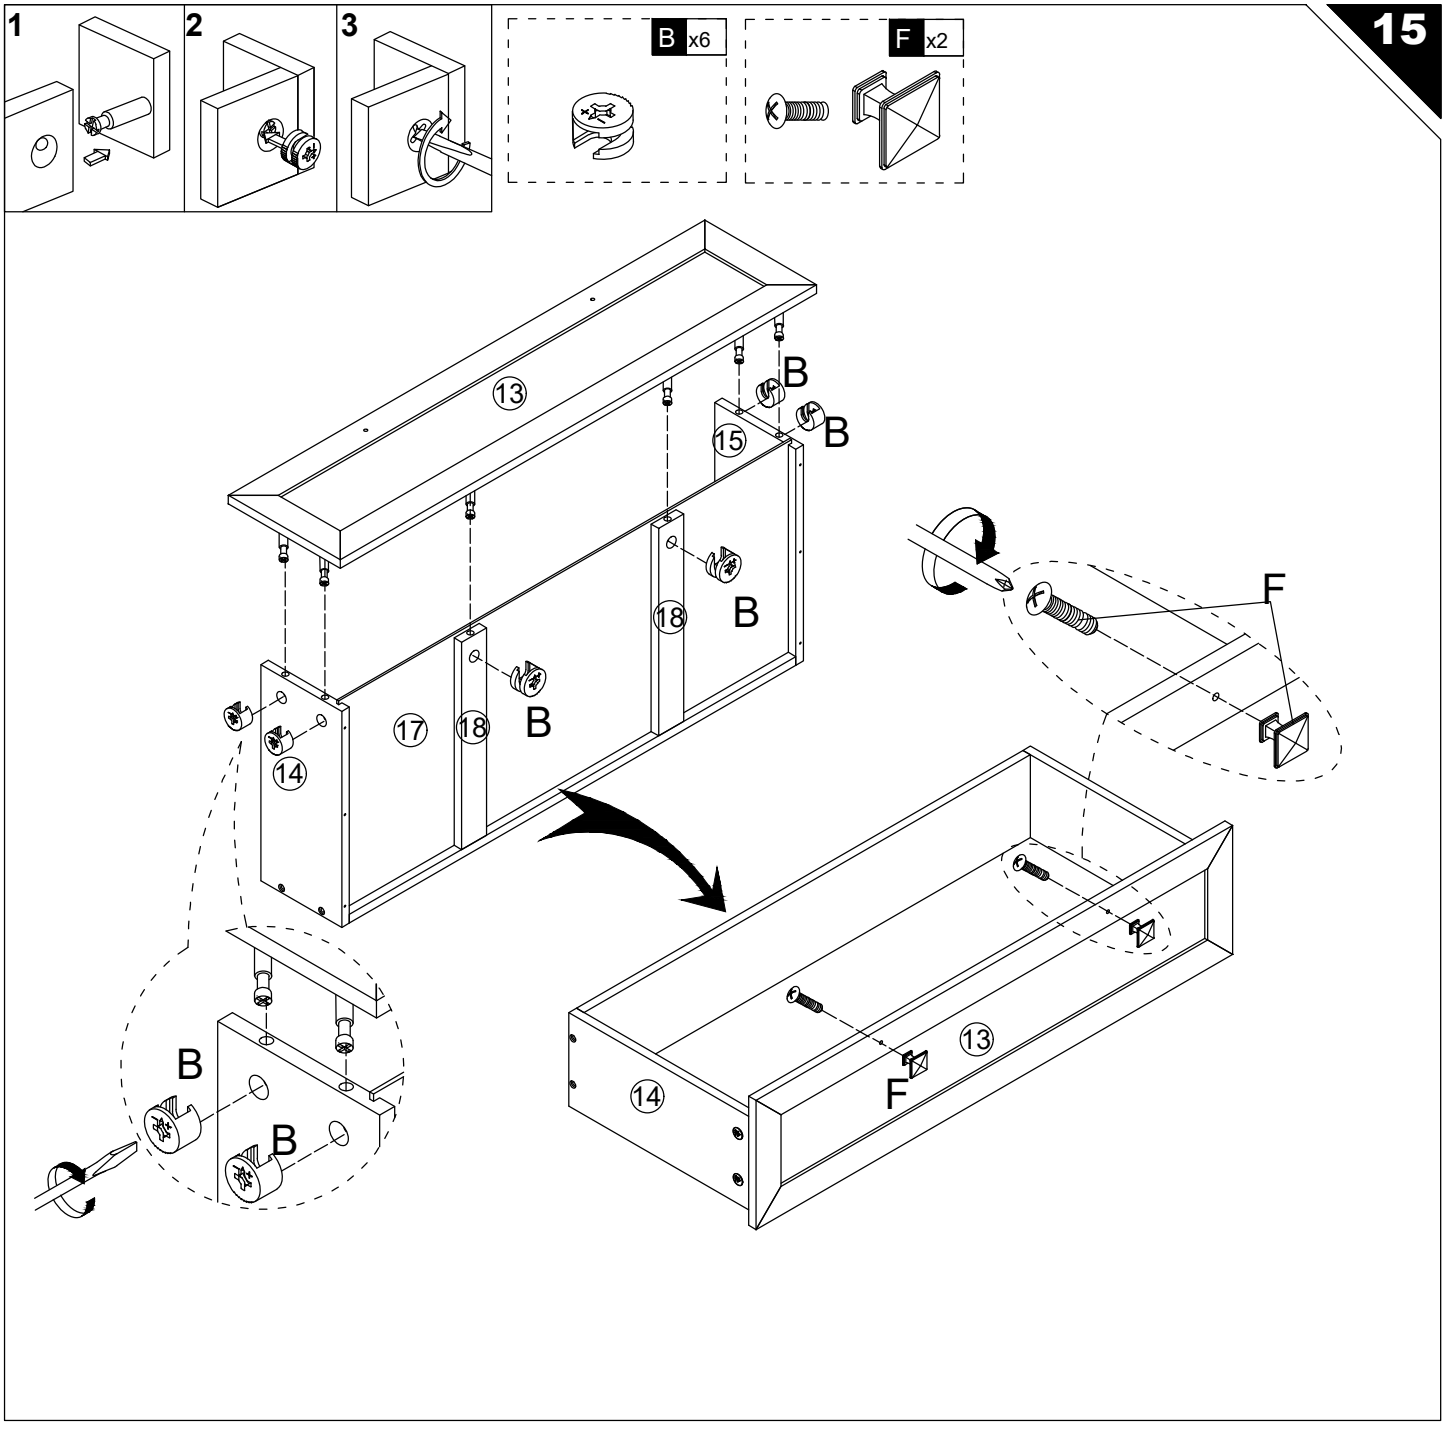
12



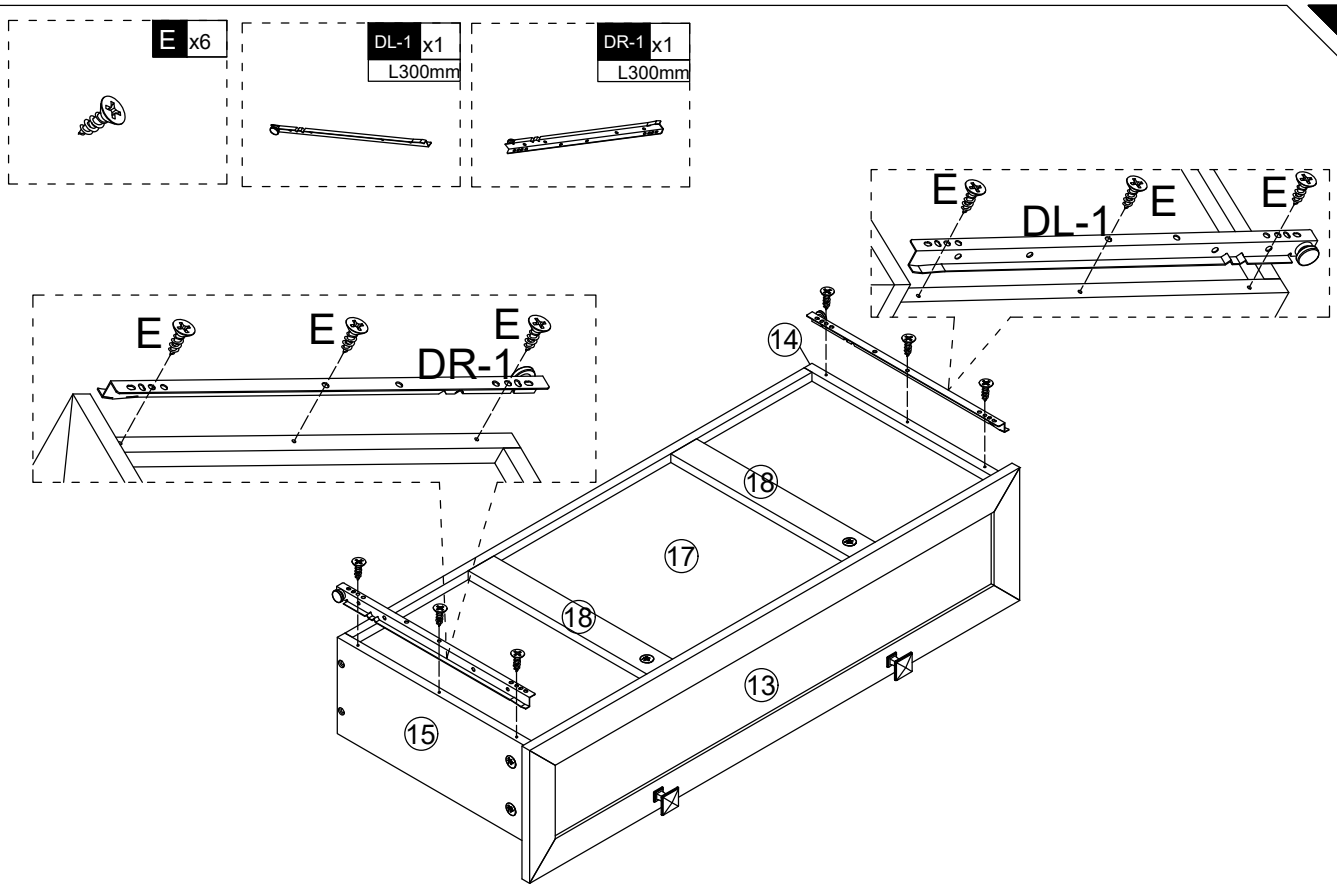
13



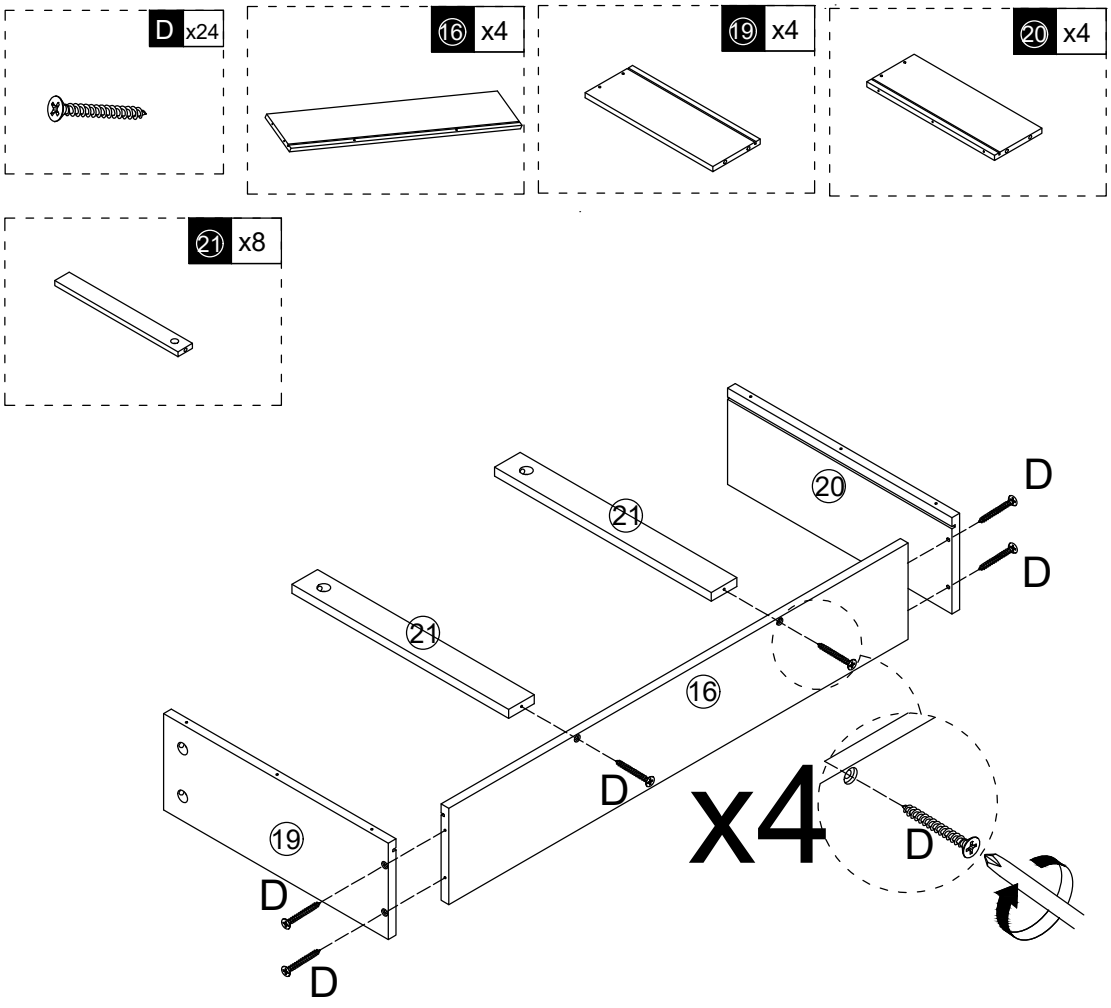

14
A x30
⑬ x5
A
A
A
A
A
A
⑬
⑬
x5


15
1
2
3
B x6
F x2
⑬
B
B
15
18
B
17
18
B
14
F
B
B
⑬
14
F

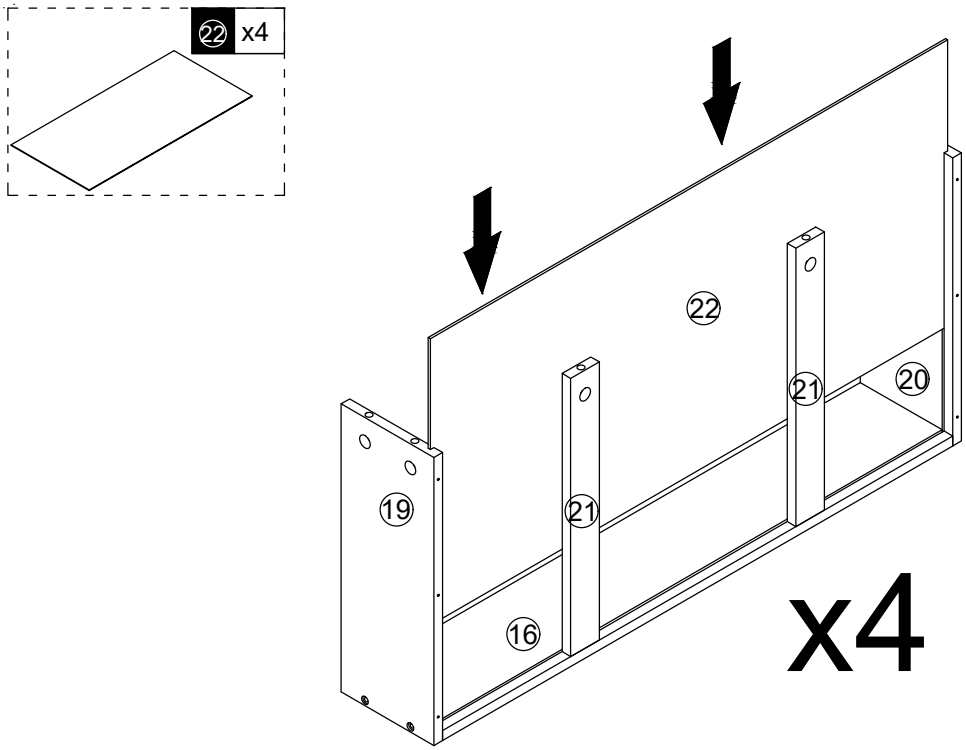
16


E x6
DL-1 x1
L300mm
DR-1 x1
L300mm
E
DL-1
E
E
E
E
E
DR-1
14
18
17
18
13
15

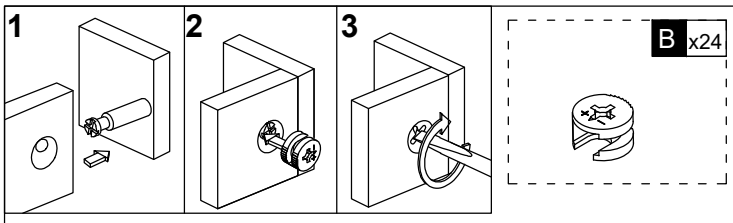
17

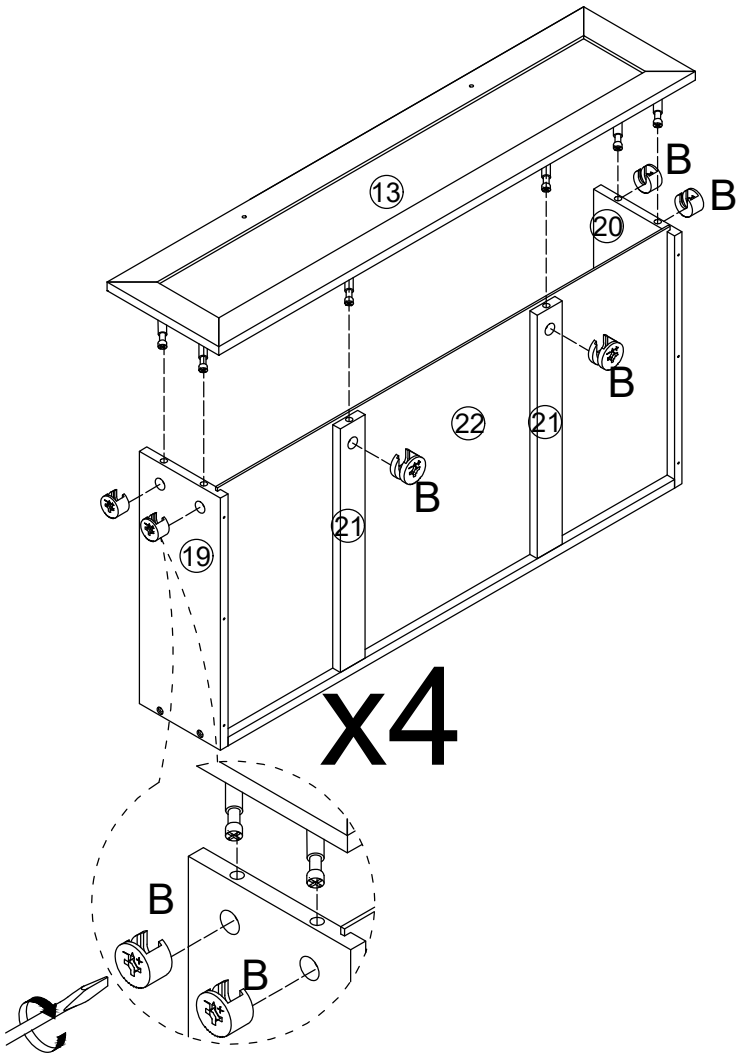

D x24
16 x4
19 x4
20 x4
21 x8
20
D
D
21
21
16
D
x4
D
19
D
D

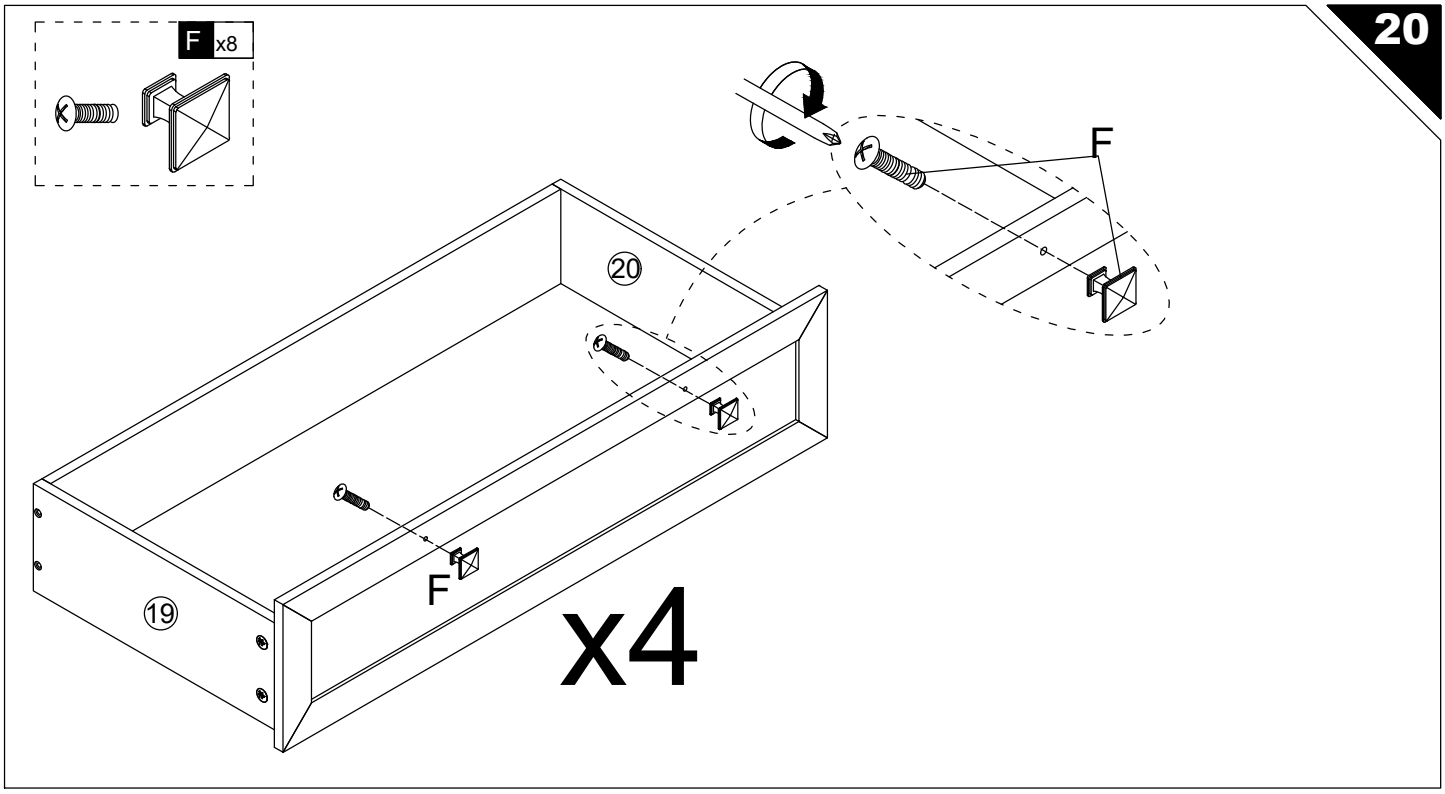
18

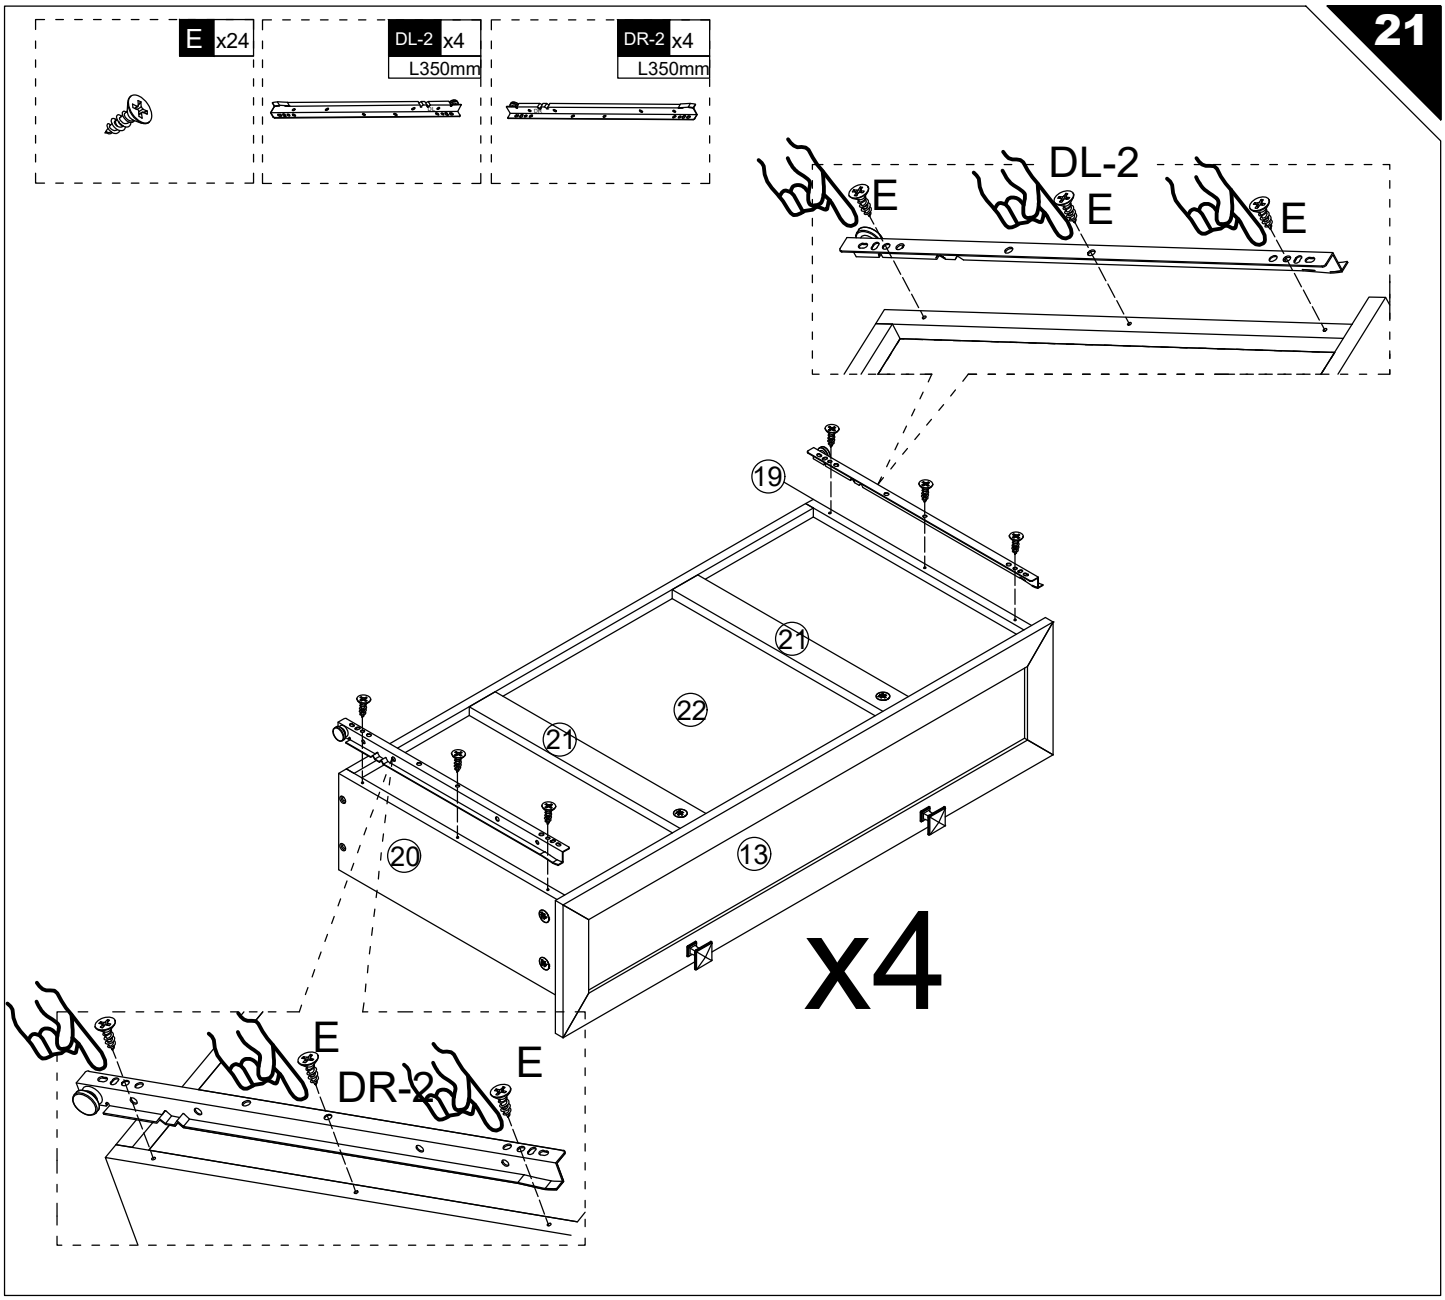


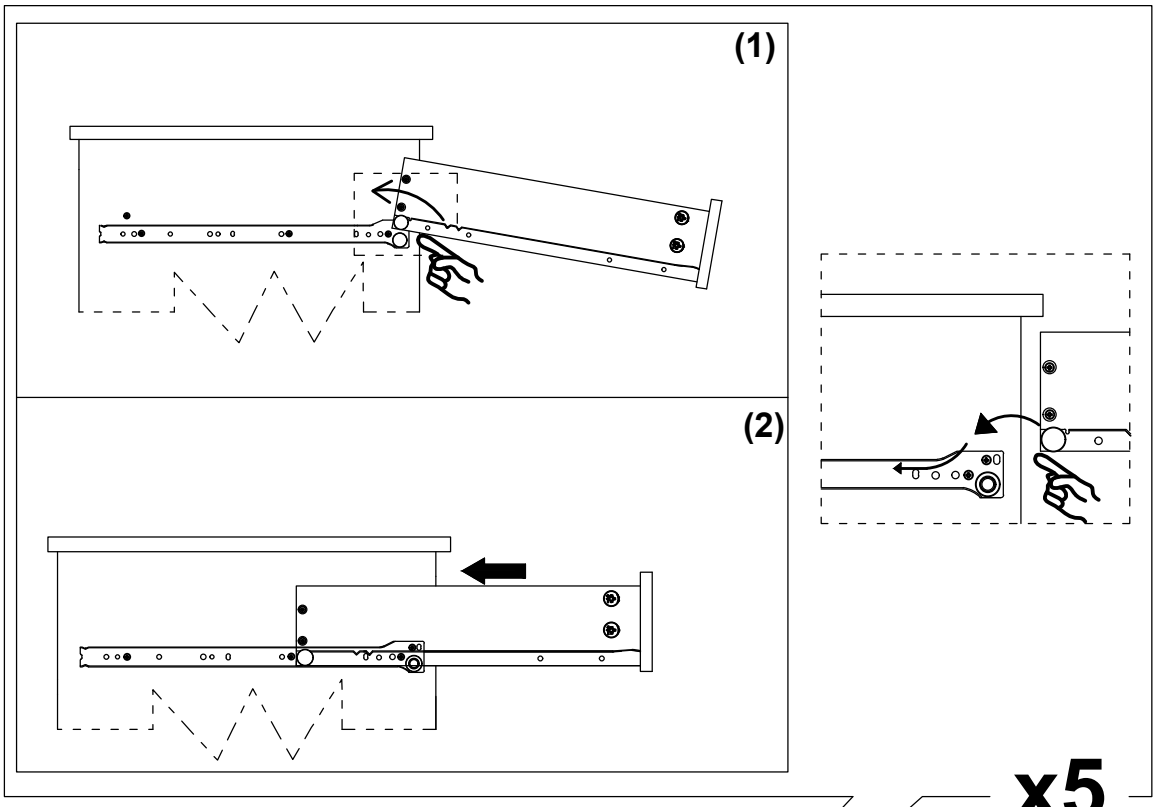
19



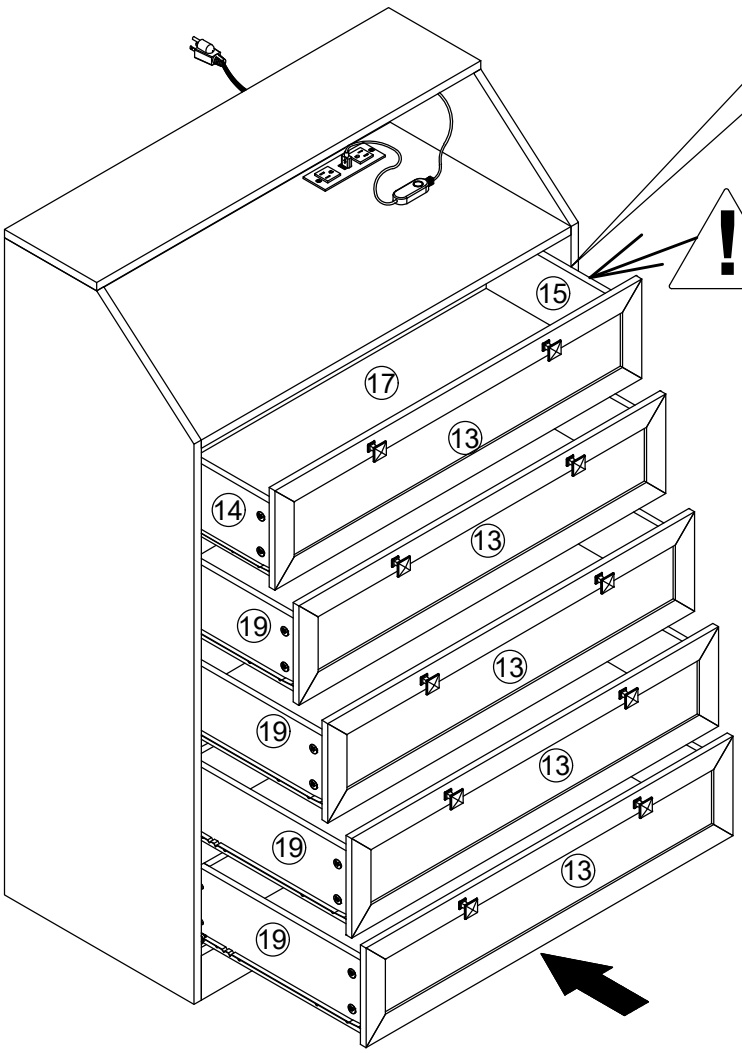



20
F x8
F
20
F
19
x4

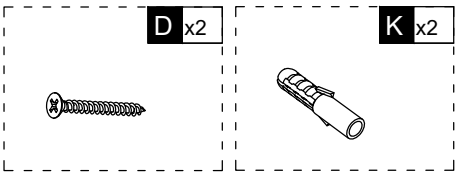

21
E x24
DL-2 x4
L350mm
DR-2 x4
L350mm
E
DL-2
E
E
19
21
22
21
20
13
x4
E
DR-2
E



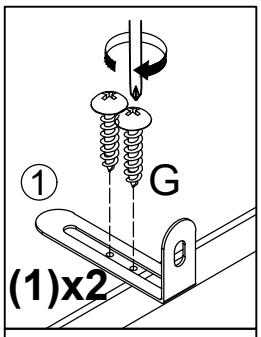
x5



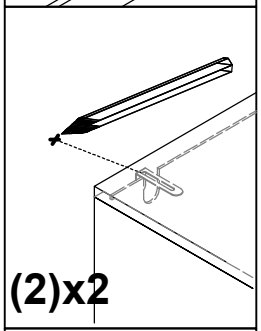
Note that the depth of the first drawer above is 300mm



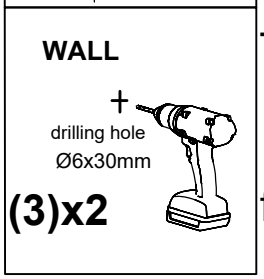
Done



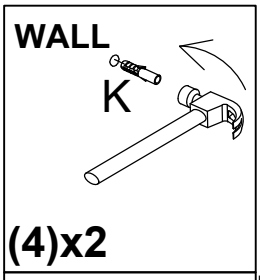
First please fix the "L-shaped iron sheet" plate to the corresponding reserved hole on the board with screws.
(Installed in step 8)



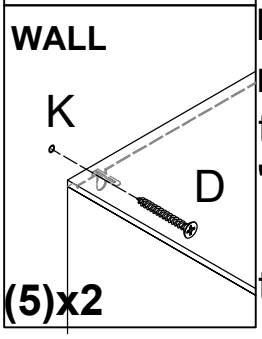
then, use a ruler to measure the approximate height of the product on the wall, and then mark it witha pen.



Then use a tape drill to make holes in the wall that are suitable for the product screws.



Then,put the expansion bolt into the hole



Finally,pass the matching screws throughthe "L-shaped iron sheet" and tighten themto fix them on the wall.

