

DA0767

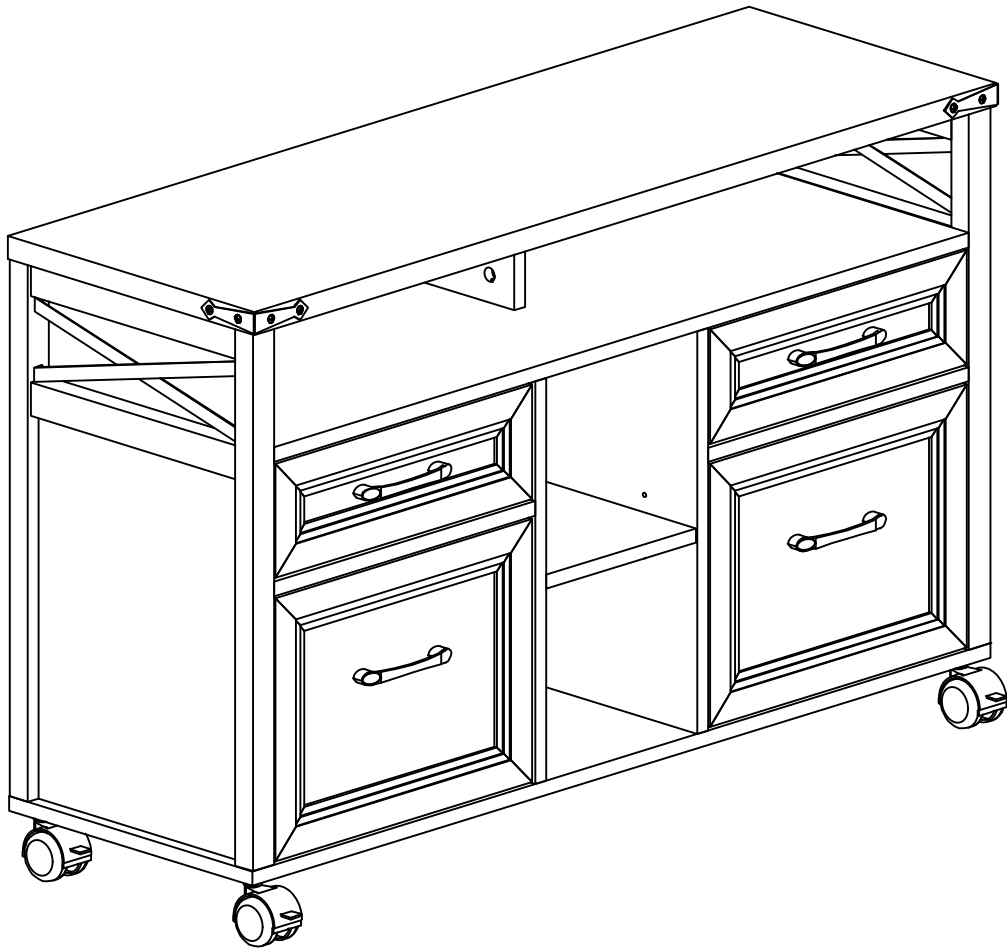


As this item contains many parts, please read the installation instruction carefully before installation . Please use tools properly and carefully. If you have any questions about the product and installation, please contact us.

hosoteservice@gmail.com

Our professional after-sales team will serve you online all day.

Before You Start

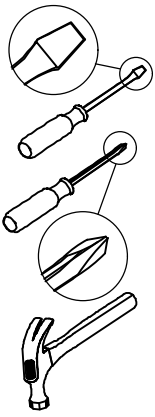


- ✓ Read through each step carefully and follow the proper order
- ✓ Separate and count all your parts and hardware
- ✓ Give yourself enough room for the assembly process
- ✓ Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- ✓ Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. (Assembly speed can be increased by using electric screwdriver)

Helpful Hints
















PEOPLE NEEDED FOR ASSEMBLY: 1-2

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.
- Identify, sort and count the parts before attempting assembly.
- Compression dowels are lightly tapped in with a hammer.
- Slides are labeled with an **R** (right) and **L** (left) for proper placement.
- Make sure to always face the point on the top of the Cam Lock towards the outer edge.
- If there is a back panel in the package, please install it to make sure your unit is complete and sturdy.
- Please fix all the screws provided for the back panel which can enhance product stability. If it is difficult to fix it when tightening, it can be fixed with the help of a hammer and then tightened.
- Do NOT use harsh chemicals or abrasive cleaners on this item.
- Never push, pull, or drag your furniture.

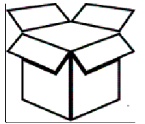
















Board Identification

Not actual size

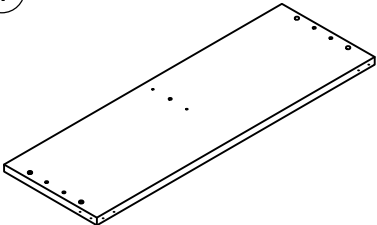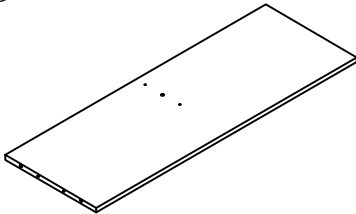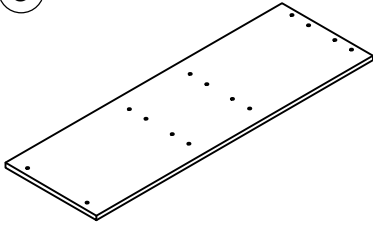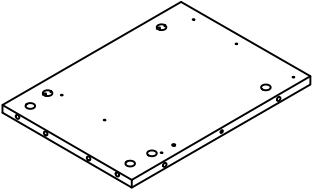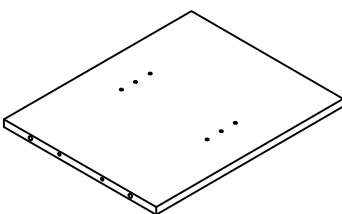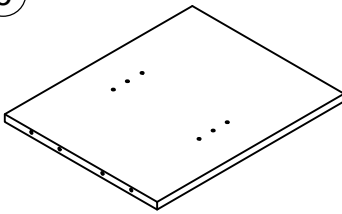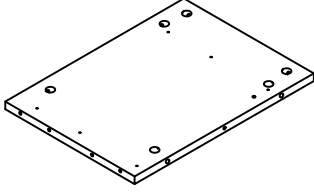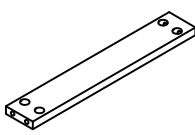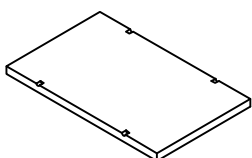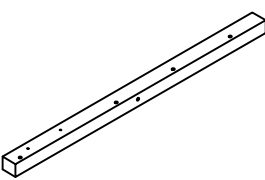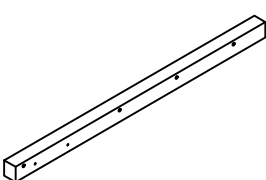
①  Qty:1	②  Qty:1	③  Qty:1
④  Qty:1	⑤  Qty:1	⑥  Qty:1
⑦  Qty:1	⑧  Qty:2	⑨  Qty:2
⑩  Qty:2	⑪  Qty:1	⑫  Qty:2
⑬  Qty:1	⑭  Qty:1	⑮  Qty:1

Board Identification


Not actual size

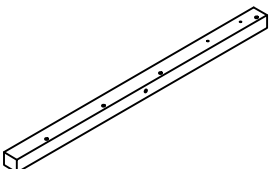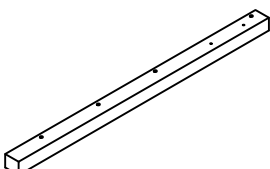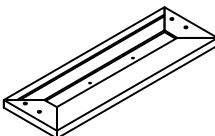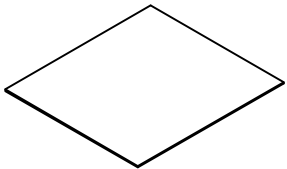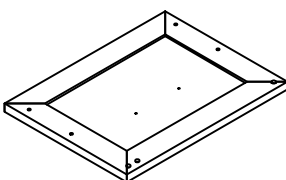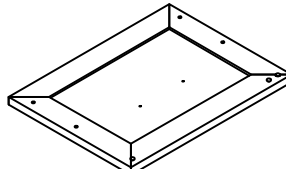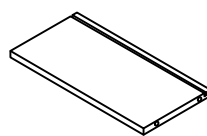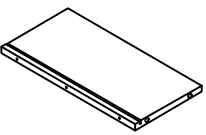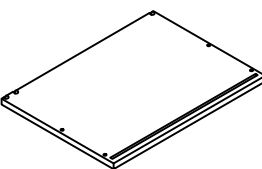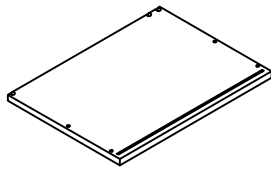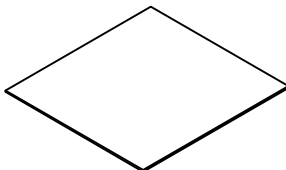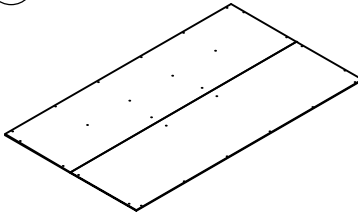①⑥  Qty:1	①⑦  Qty:1	①⑧  Qty:1
①⑨  Qty:2	②⑦  Qty:2	②⑧  Qty:2
②②  Qty:2	②③  Qty:1	②④  Qty:1
②⑤  Qty:2	②⑥  Qty:2	②⑦  Qty:1
②⑧  Qty:1	②⑨  Qty:2	③①  Qty:1


Part List

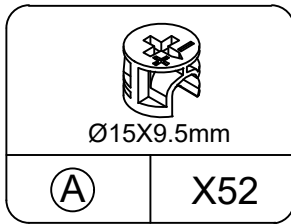


CAM LOCK
spare:3

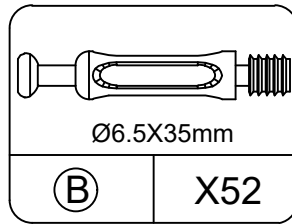


CAM BOLT
spare:3

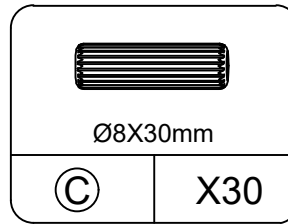


WOOD DOWEL
spare:3

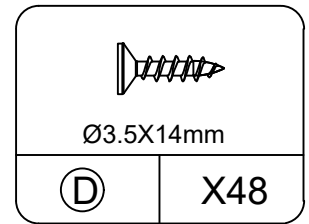


SCREW
spare:3

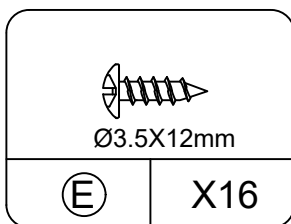


SCREW
spare:2

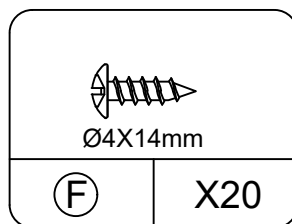


SCREW
spare:2

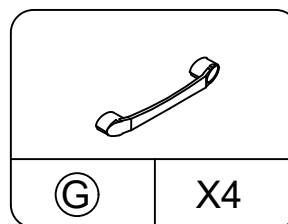


HANDLE

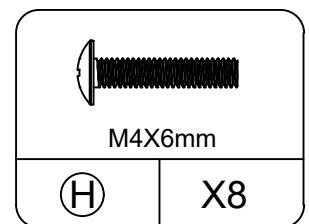


SCREW
spare:1

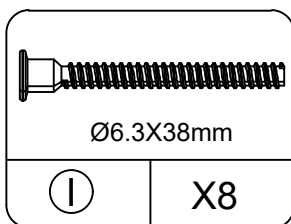


SCREW
spare:1

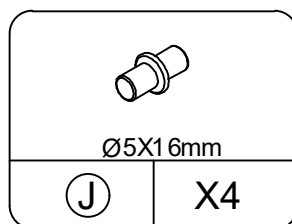


SHELF SUPPORT

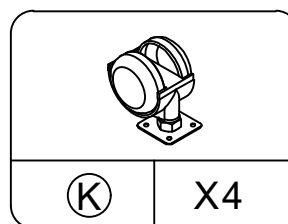


BRAKE PULLEY

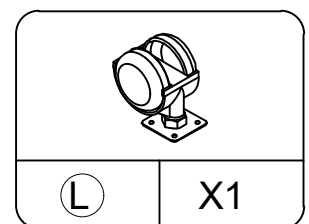


PULLEY

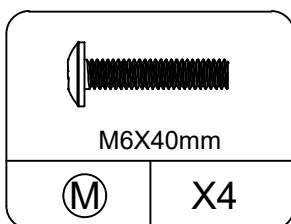



SCREW
spare:1

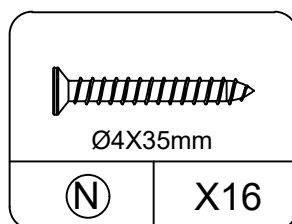


SCREW
spare:2

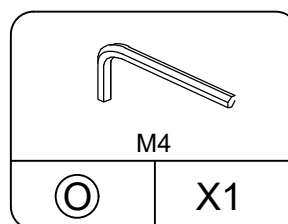

HEX KEY

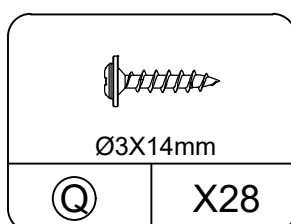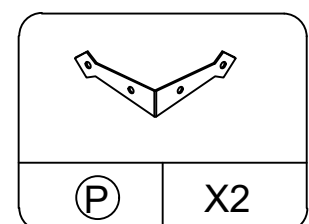


SCREW
spare:2

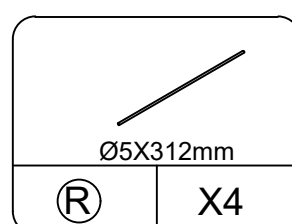


SOLID STEEL BARS


Part List

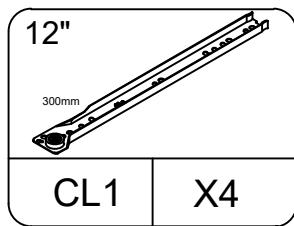


DRAWER SLIDE

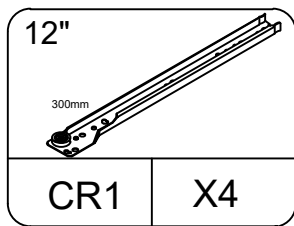

DRAWER SLIDE

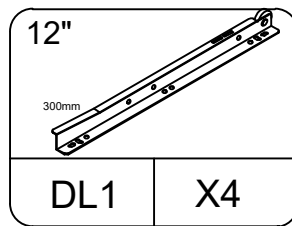


DRAWER SLIDE

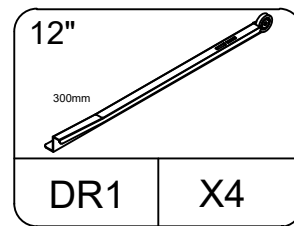

DRAWER SLIDE


Cam Lock Fastening System

Insert the cam bolt into the hole first, then insert the cam lock and lock it.











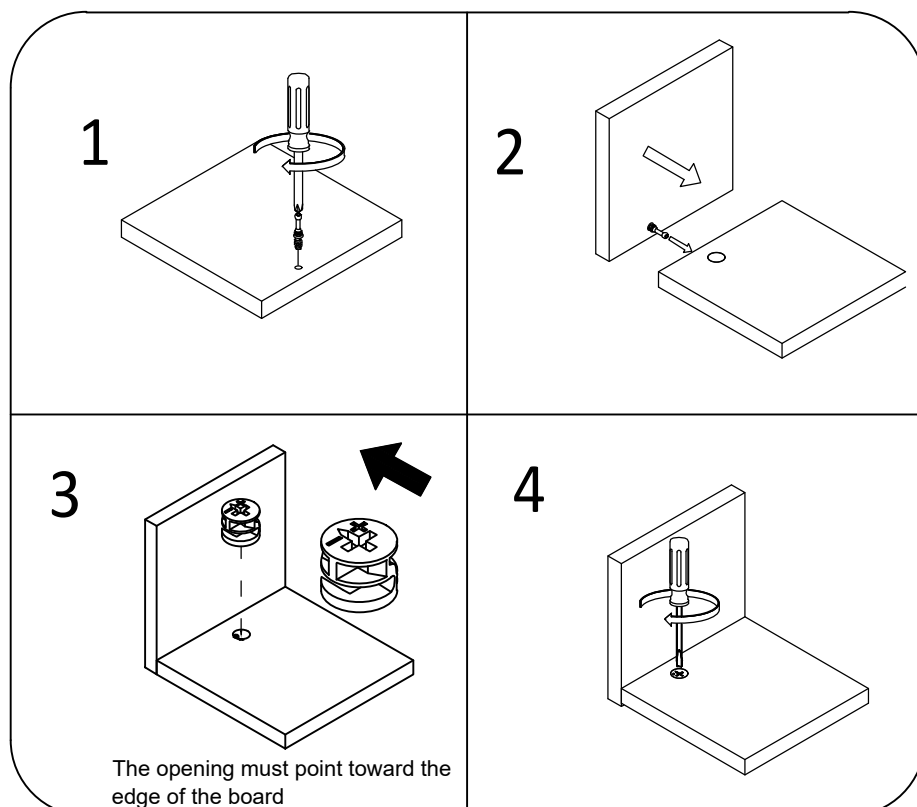


Board Identification









Not actual size

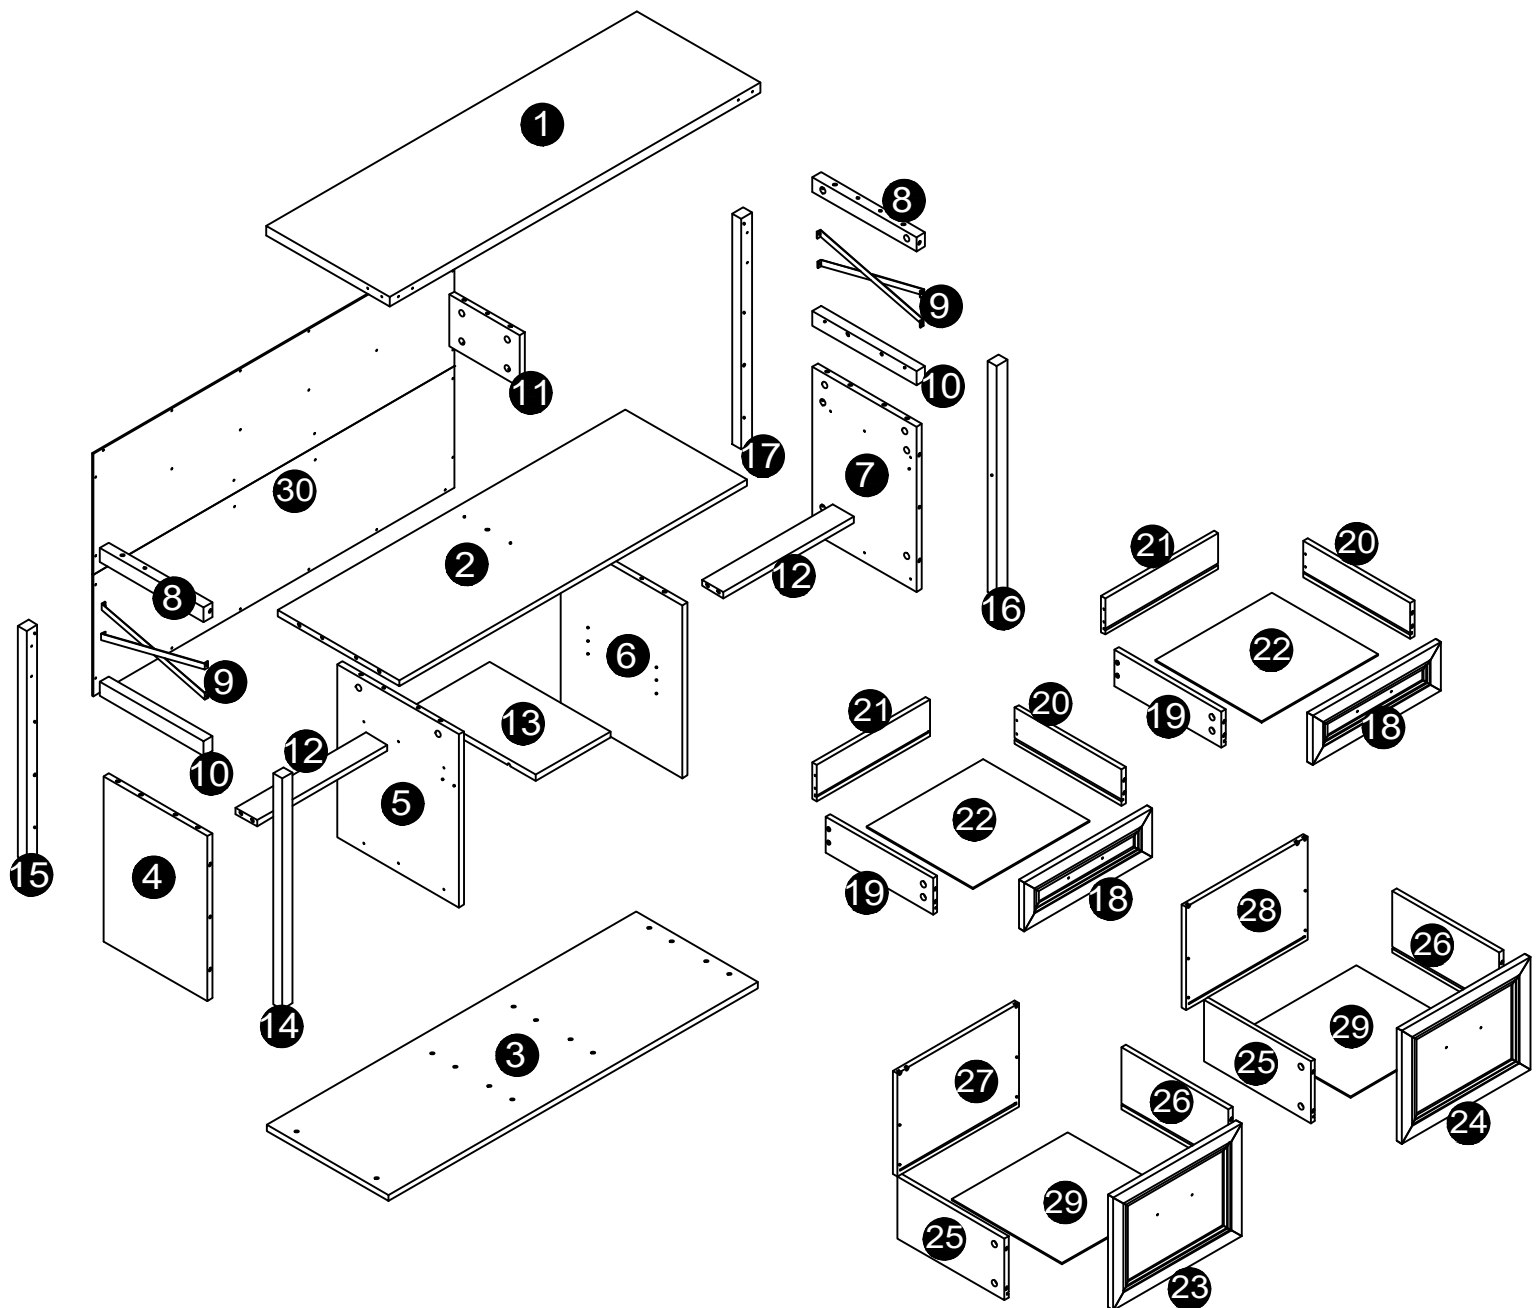

STEP1

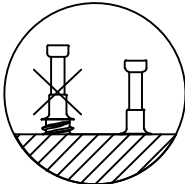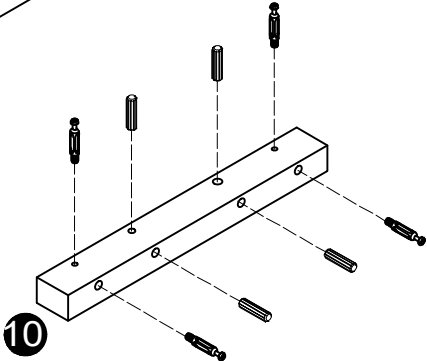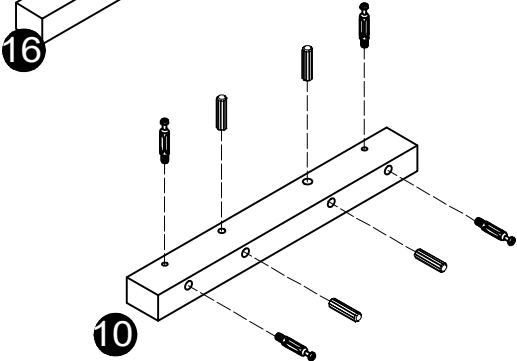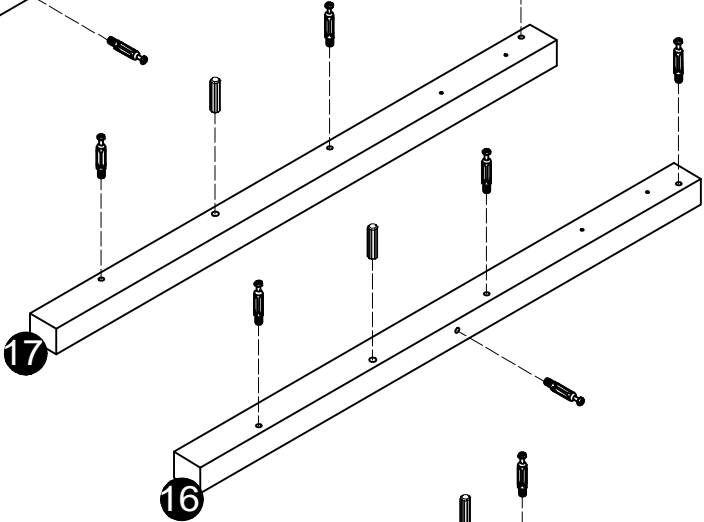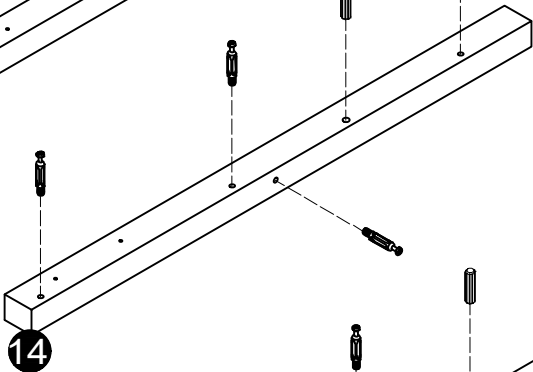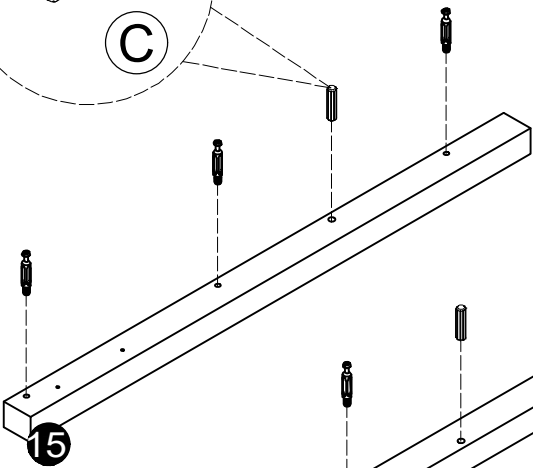
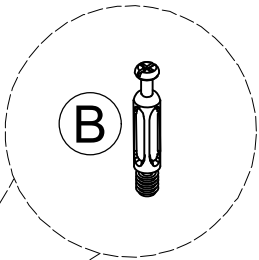
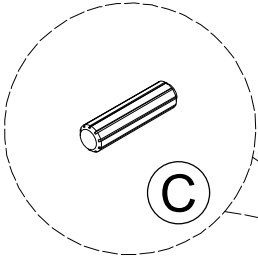
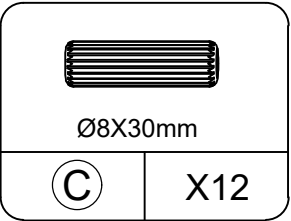
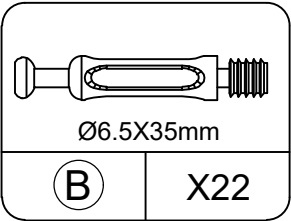
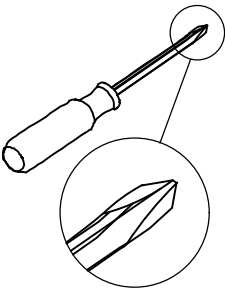


STEP2

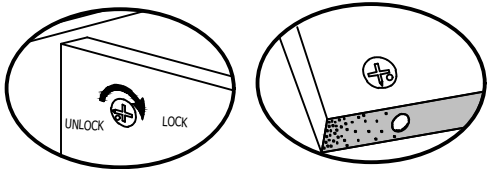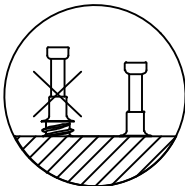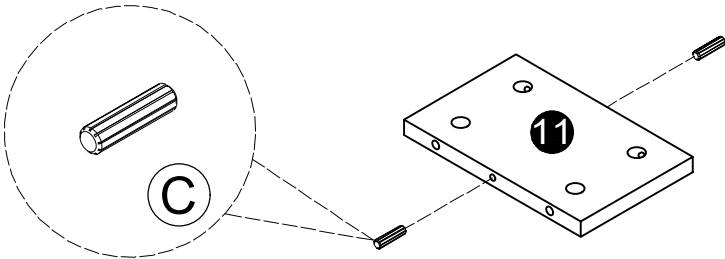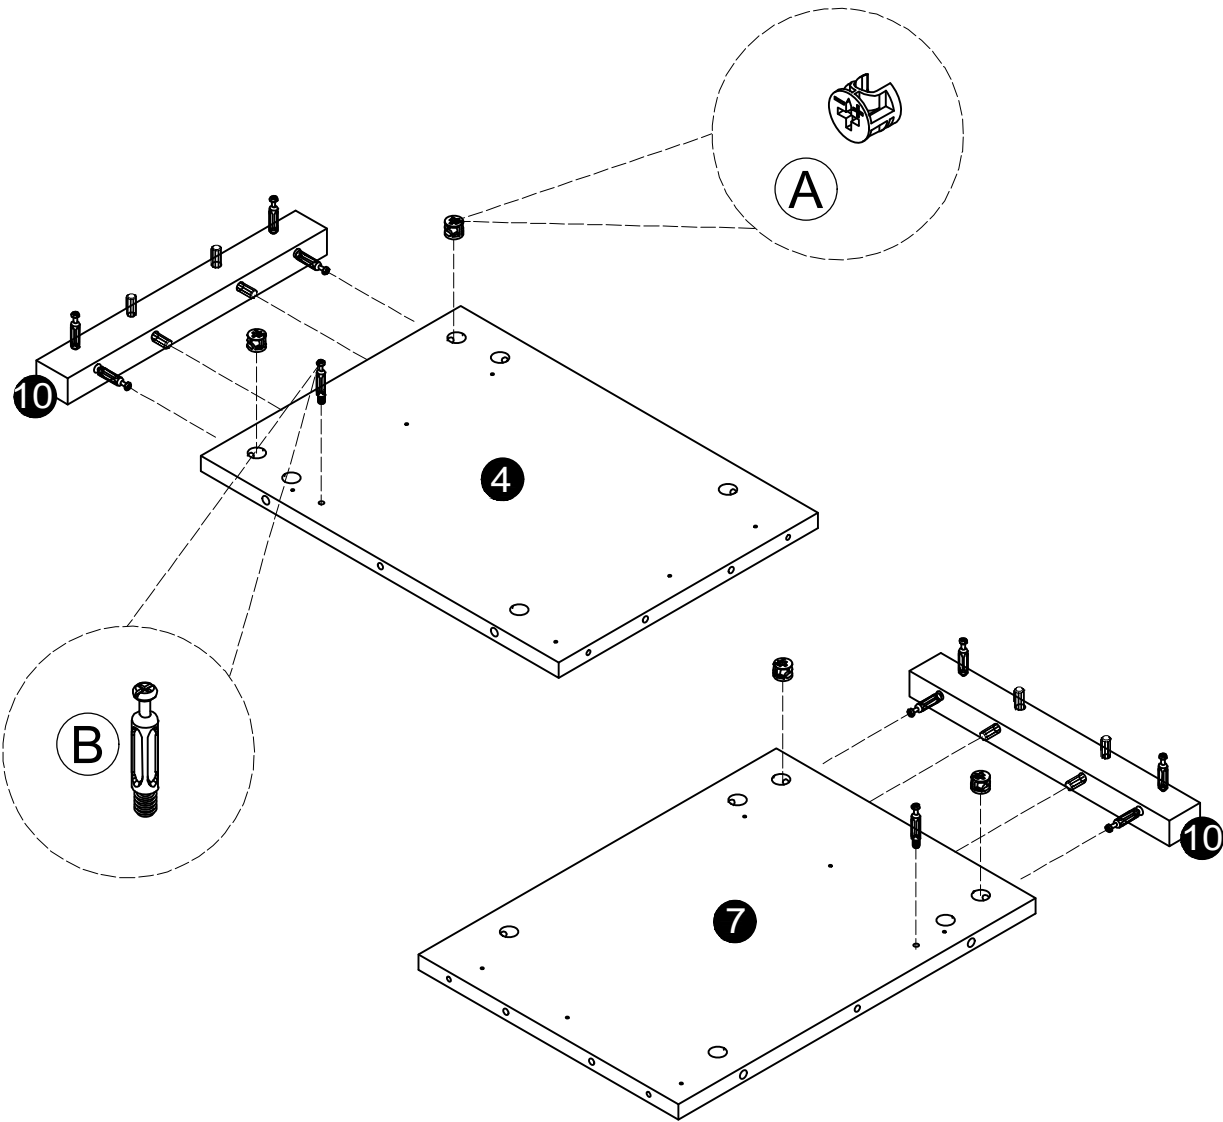
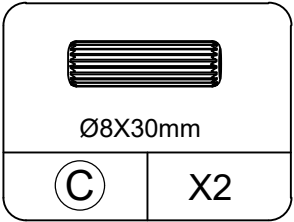
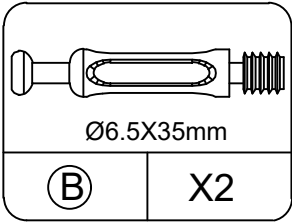
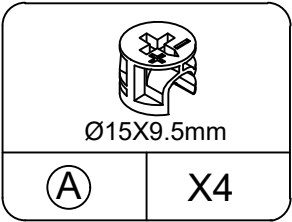
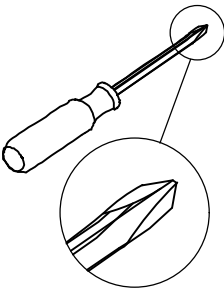


Proper orientation of CAM LOCK


STEP3

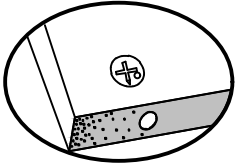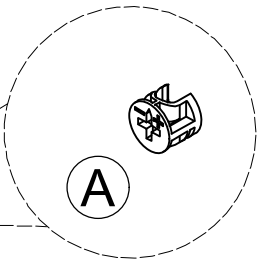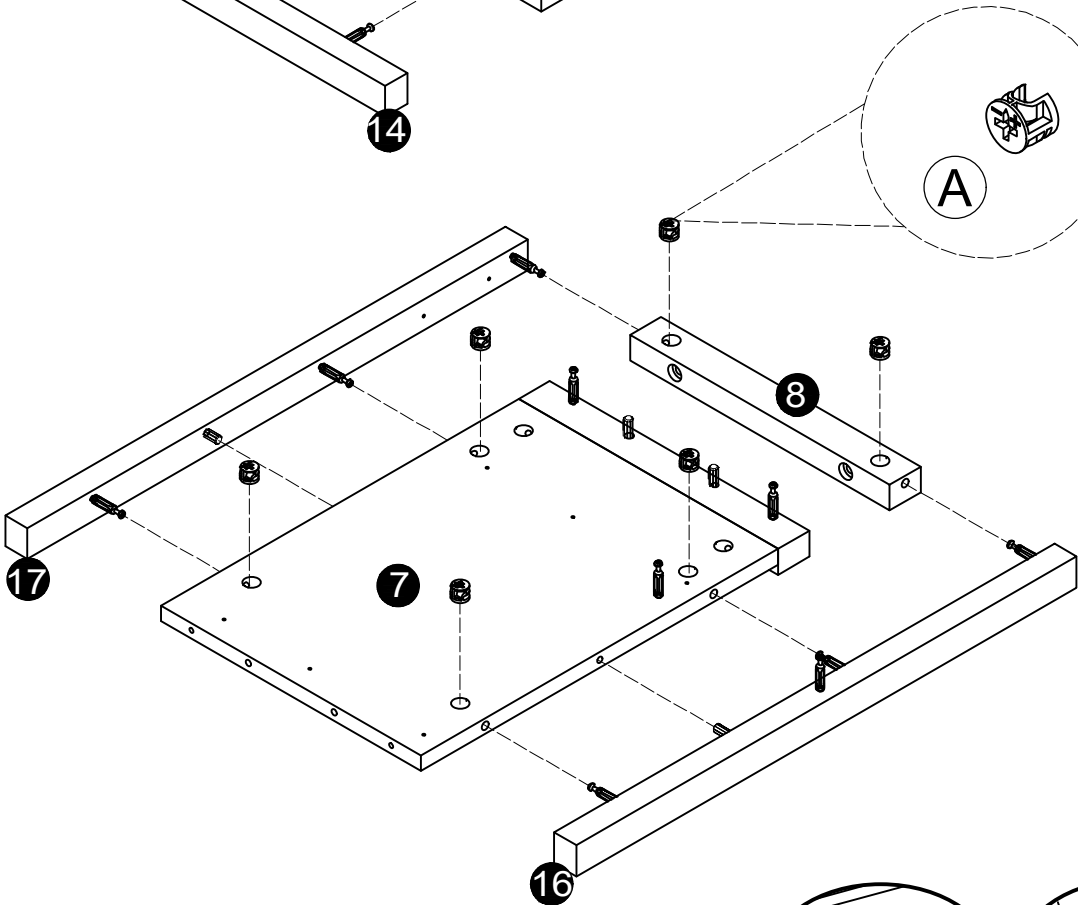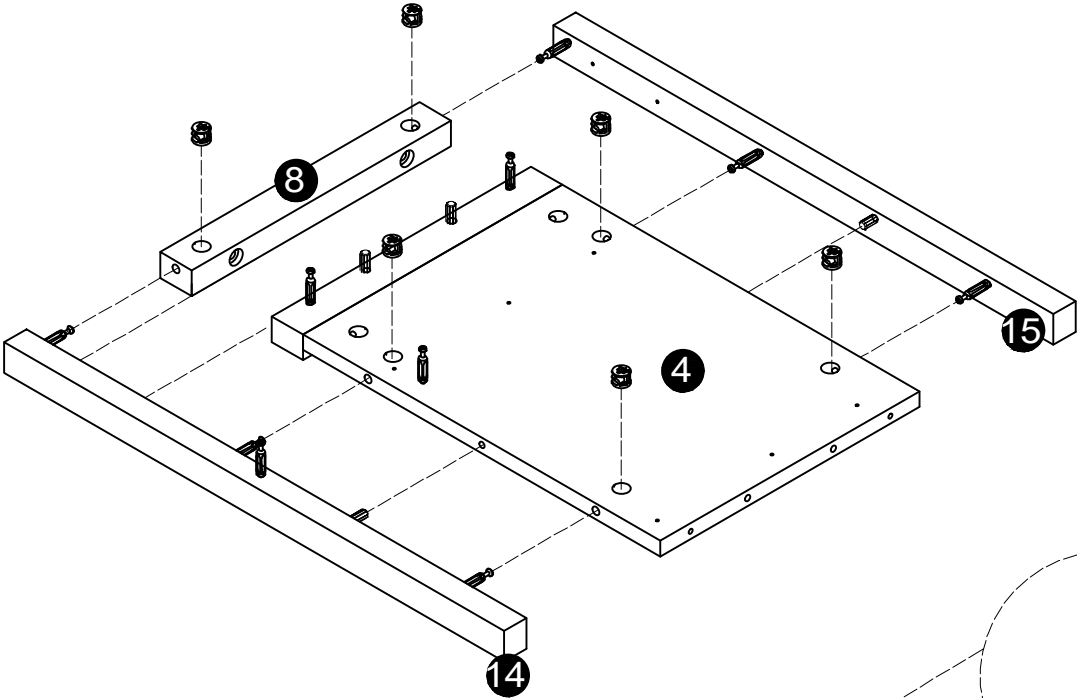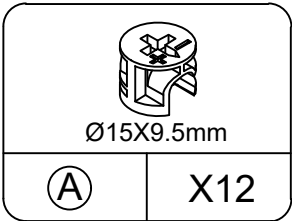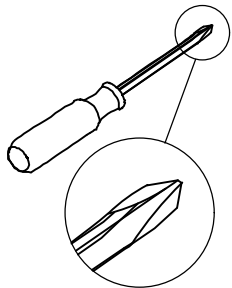






STEP4

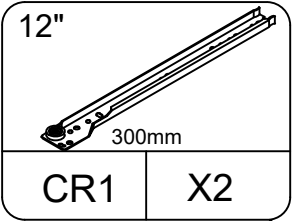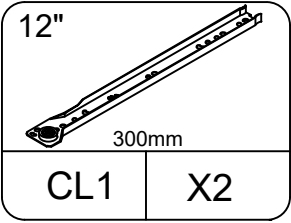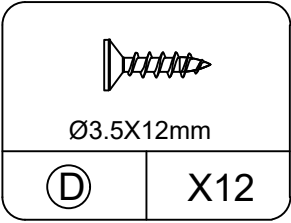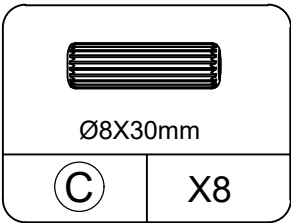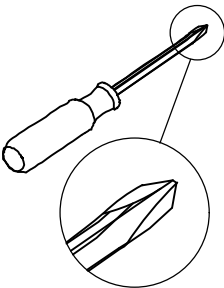






Note the CL or CR stamped label on the track !

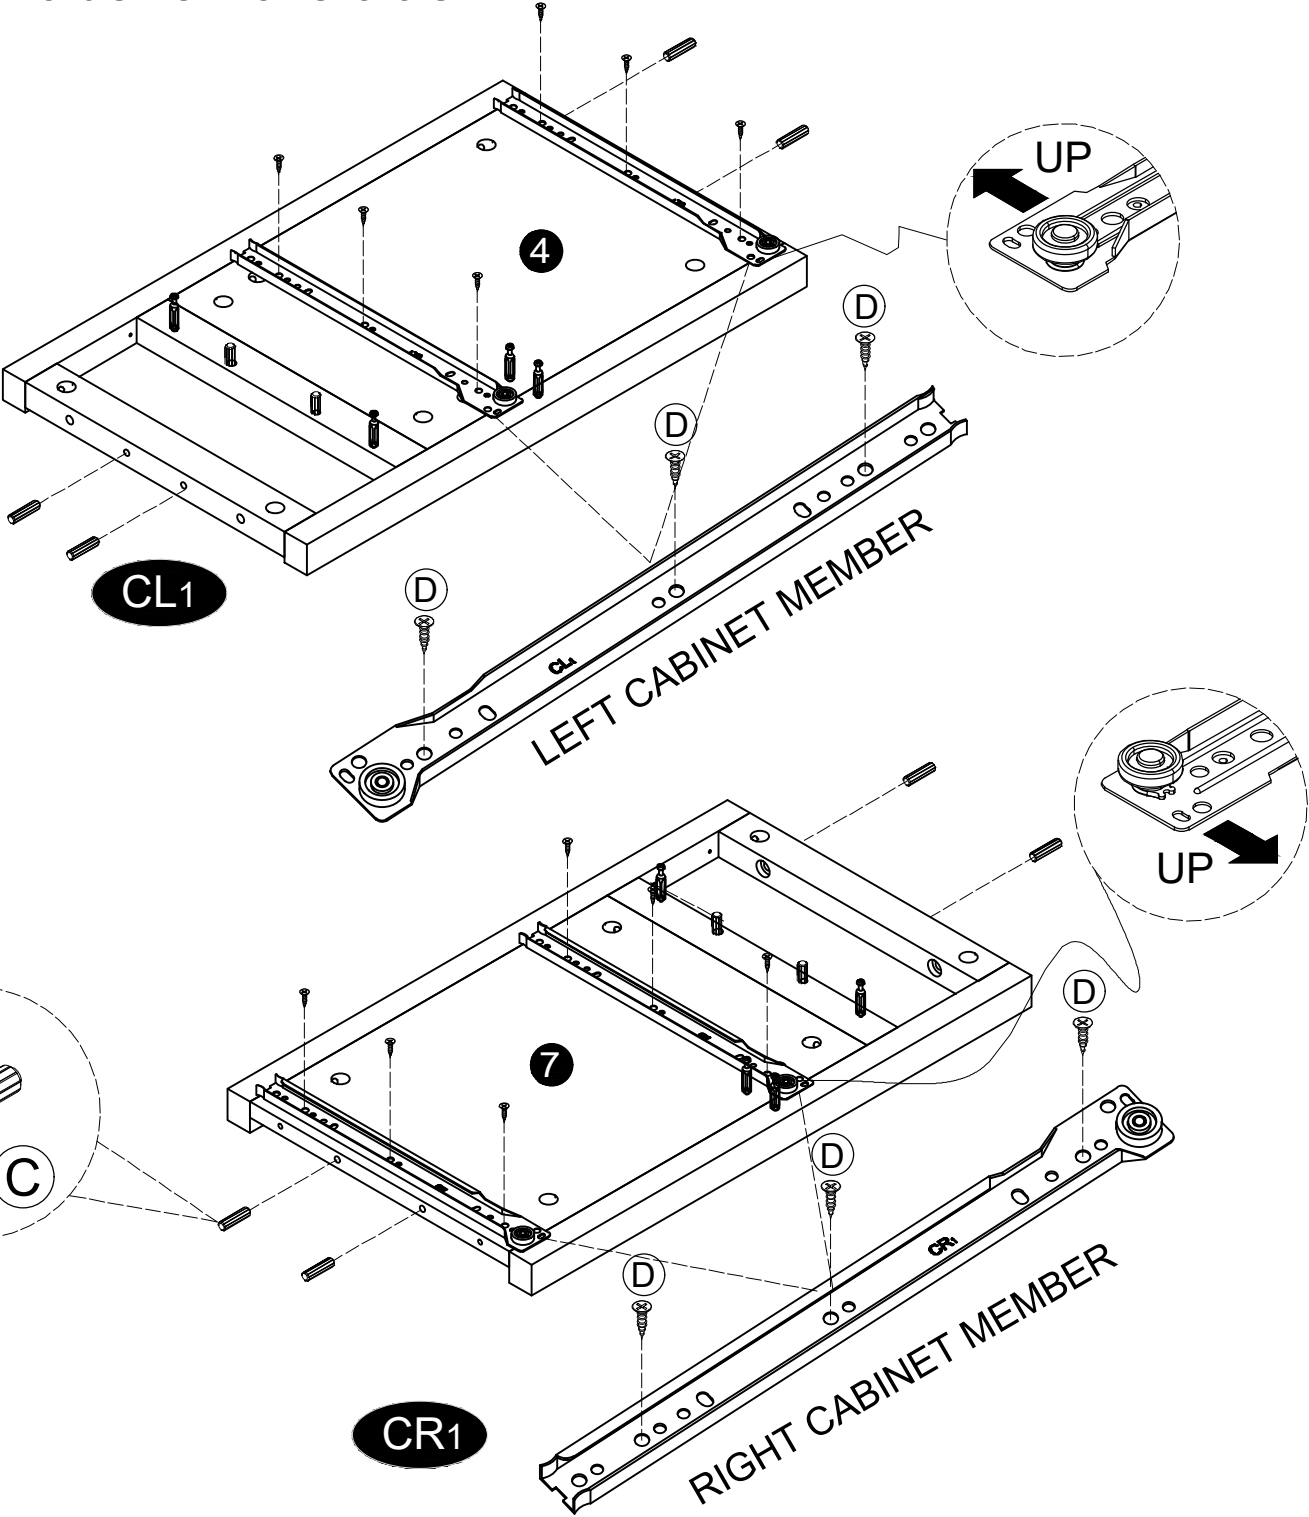








STEP5

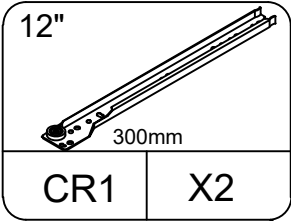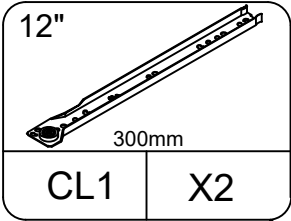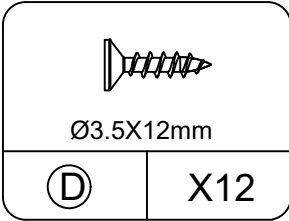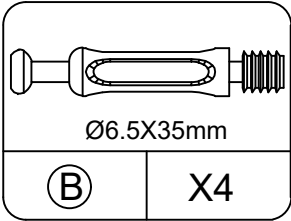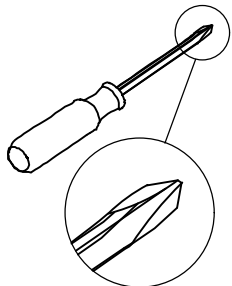






Note the CL or CR stamped label on the track !

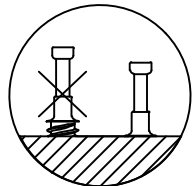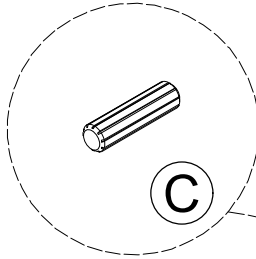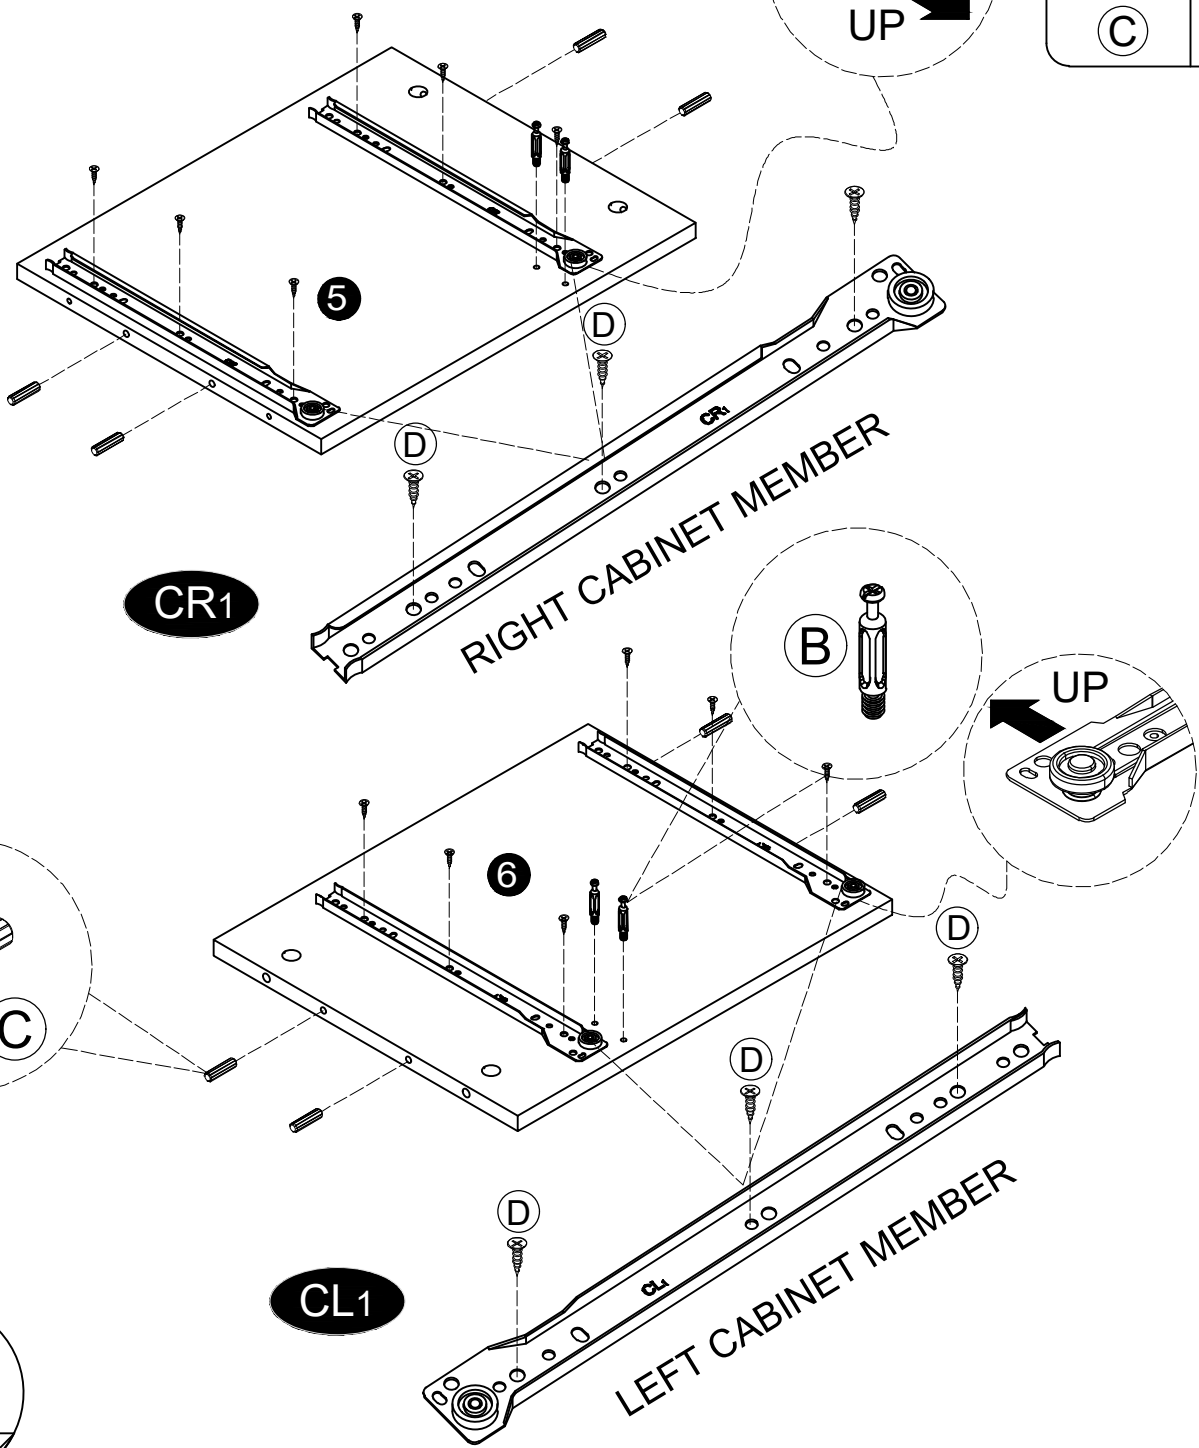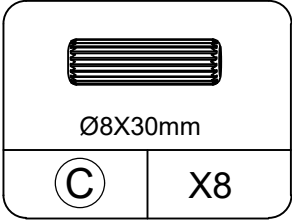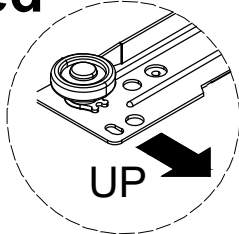

STEP6

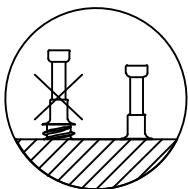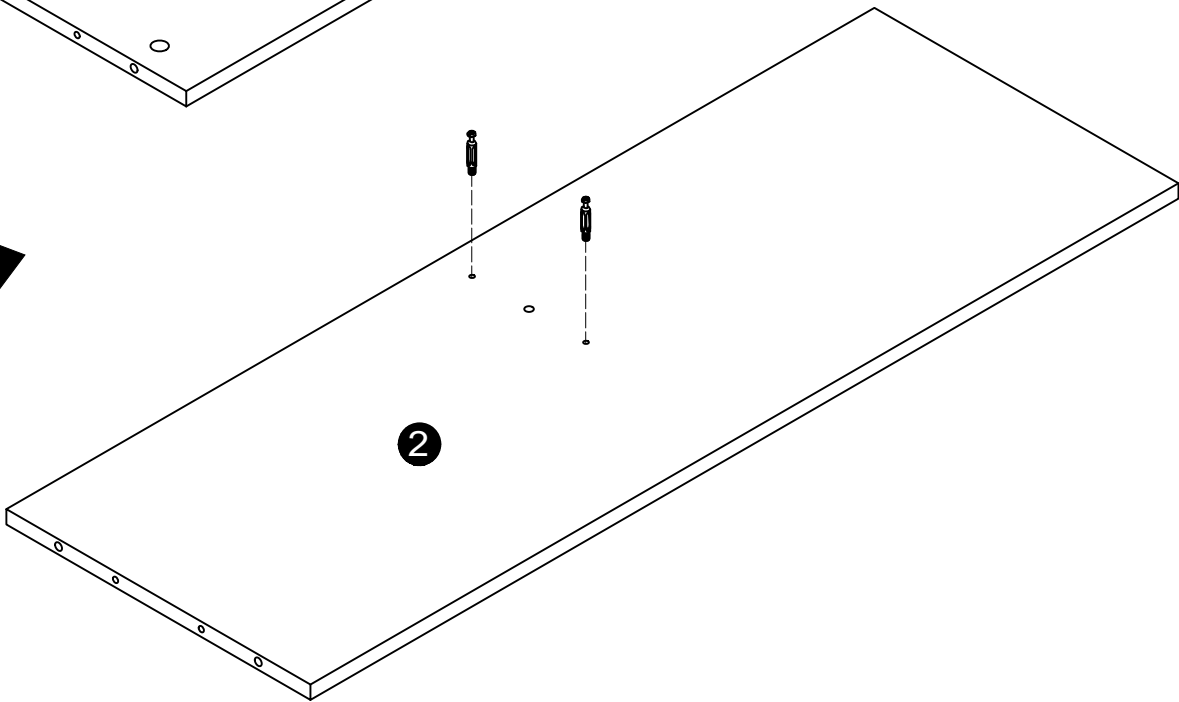
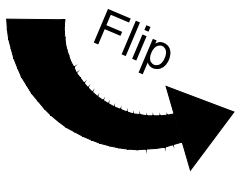
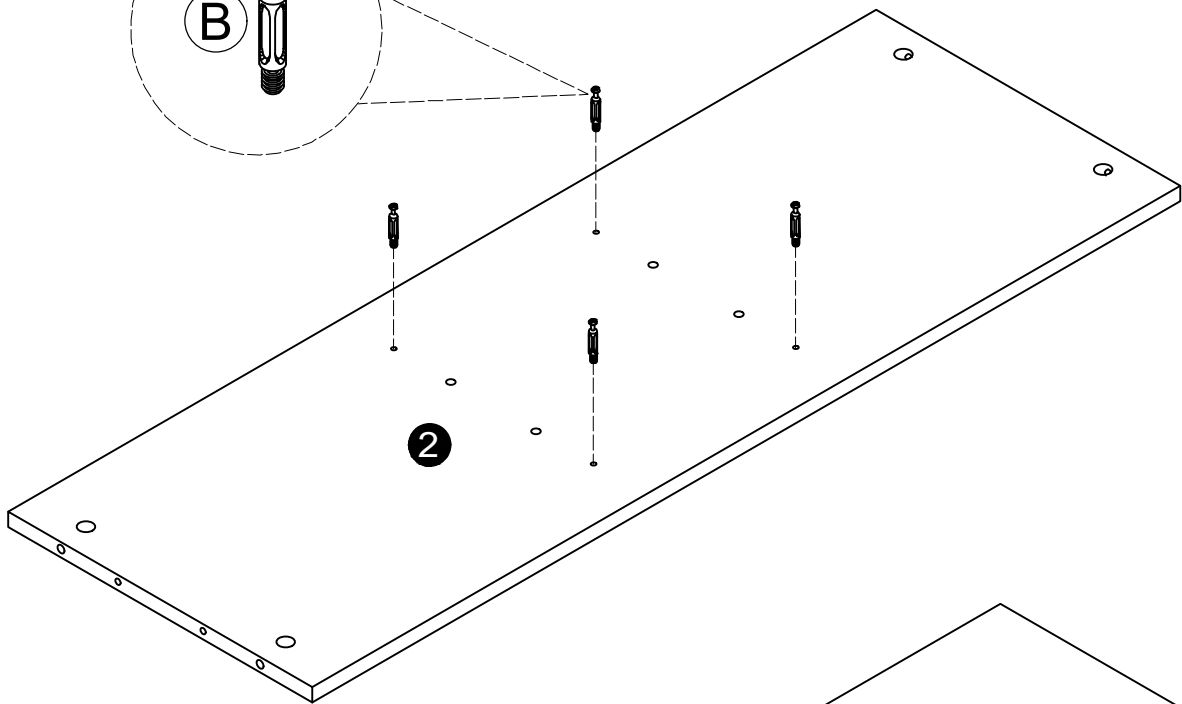
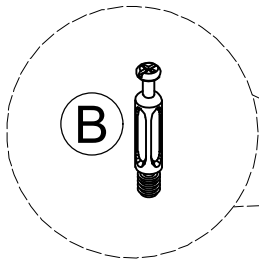
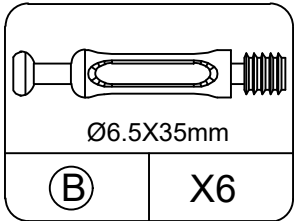
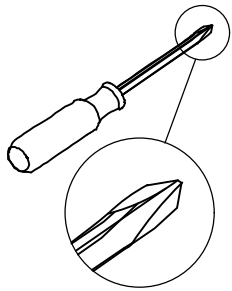


STEP7

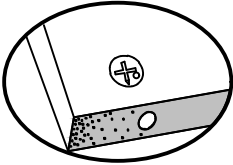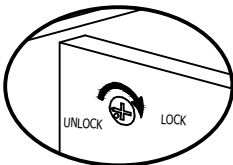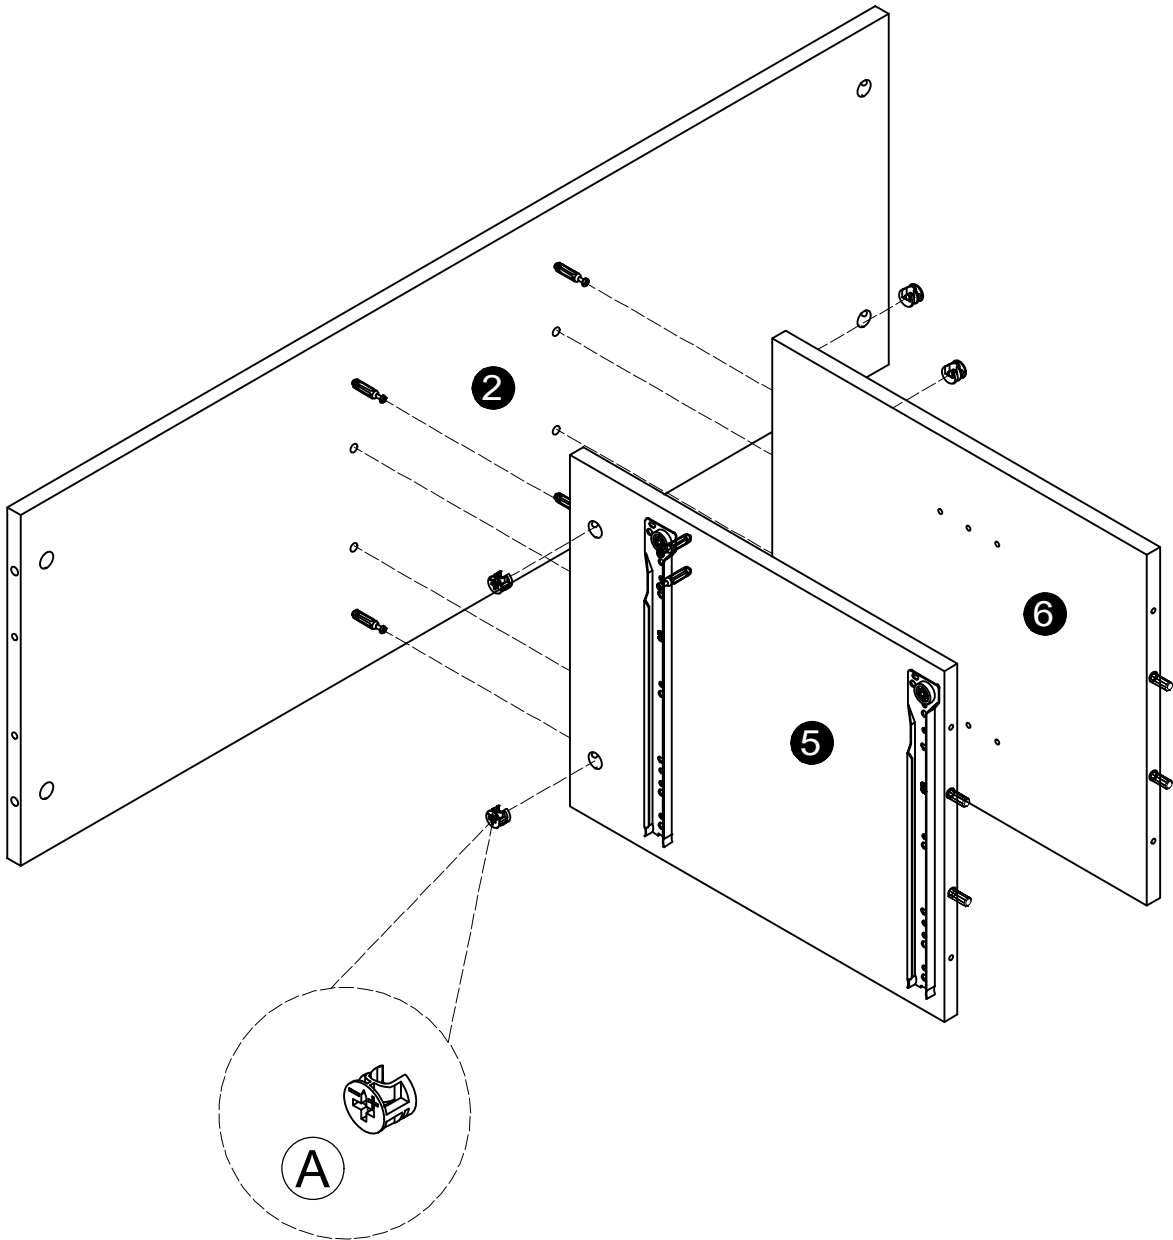
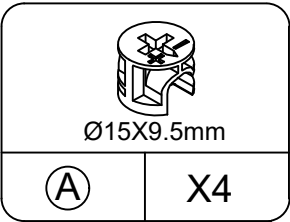
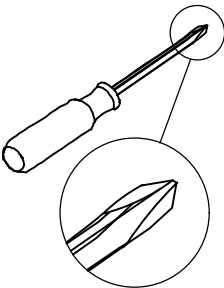


Proper orientation of CAM LOCK



STEP8

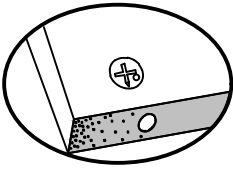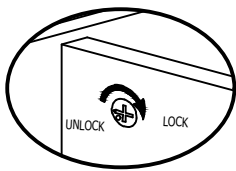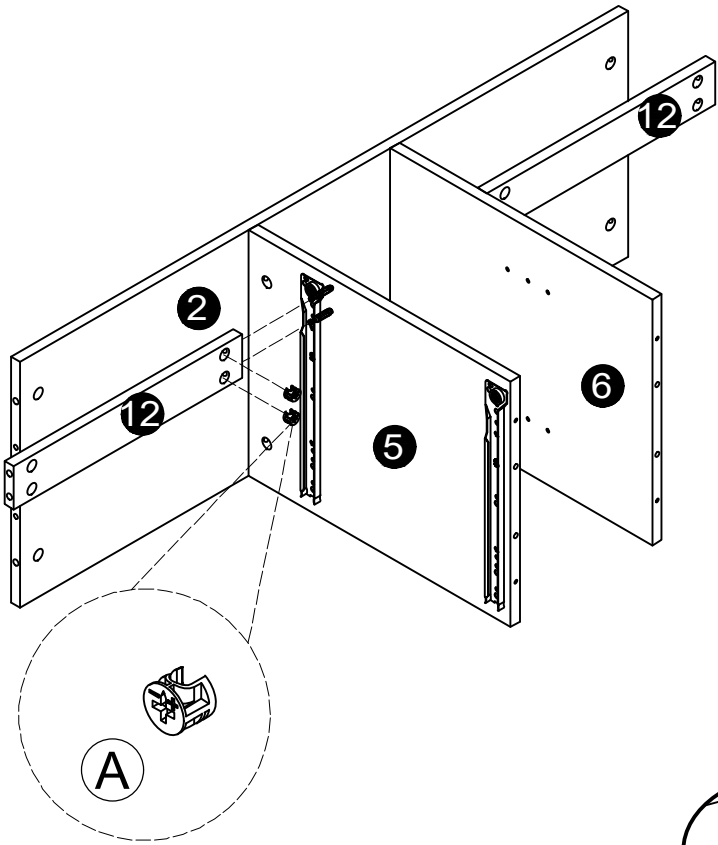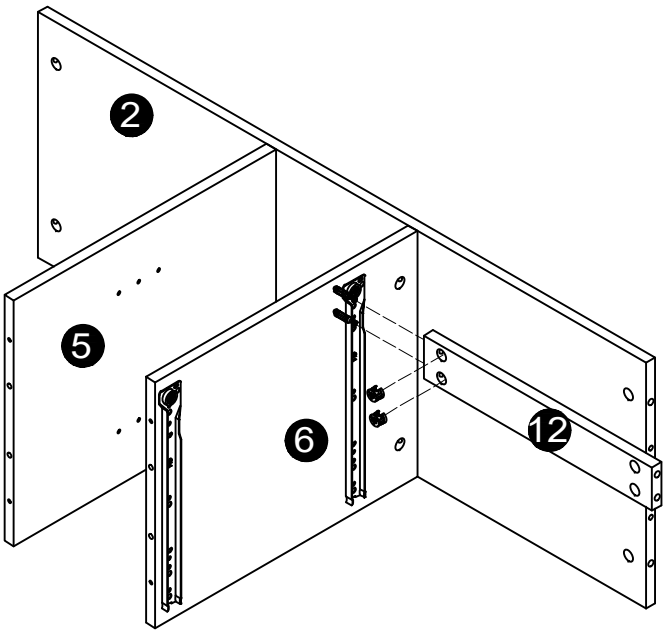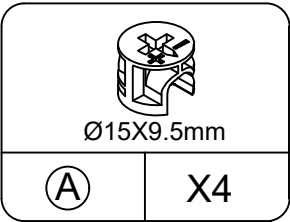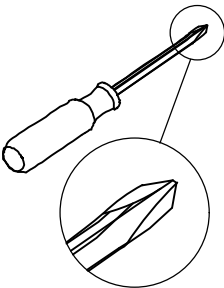

STEP9

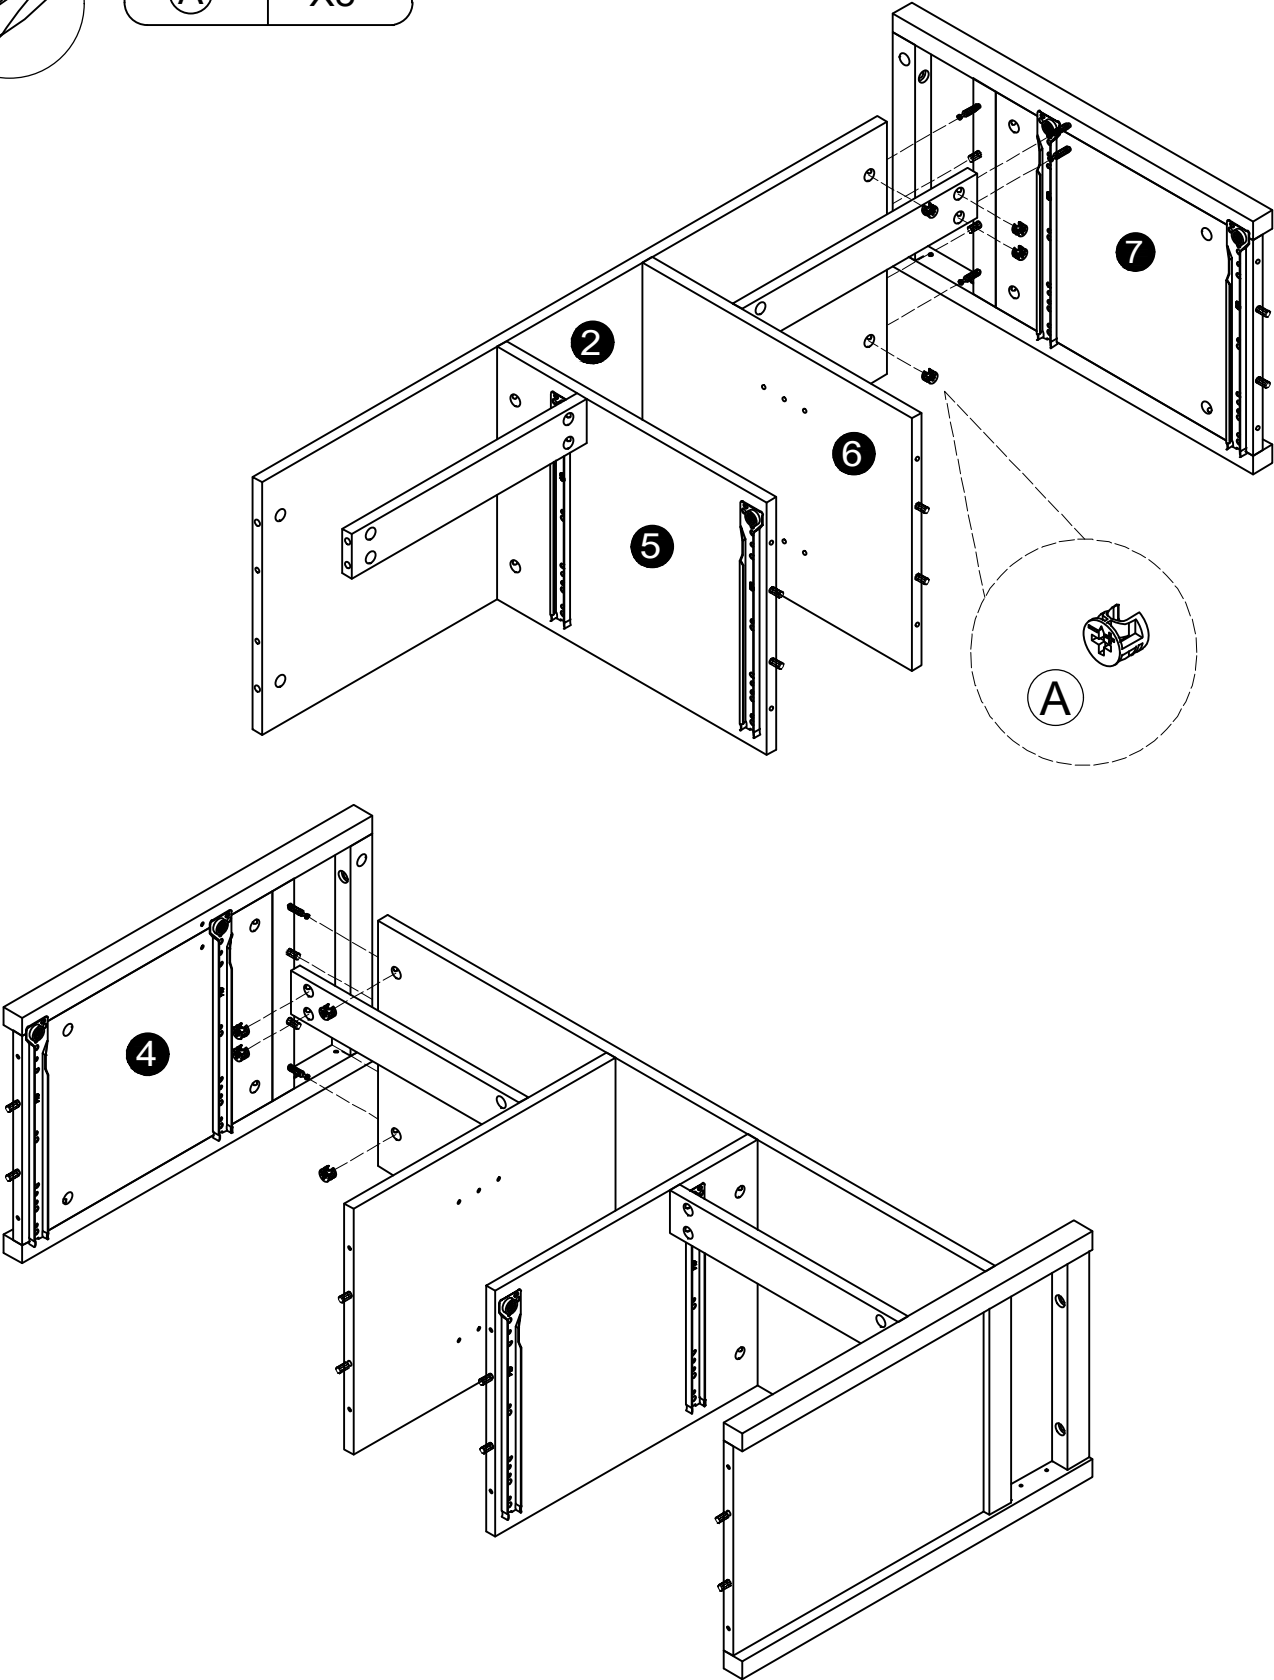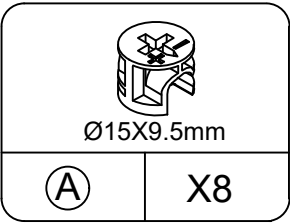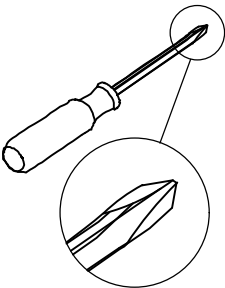


STEP10

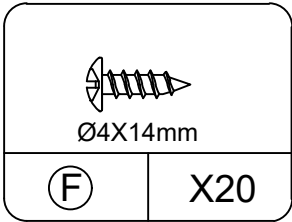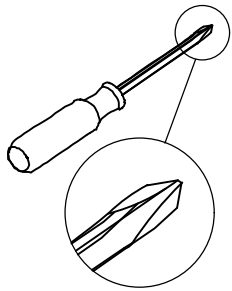


F

X20

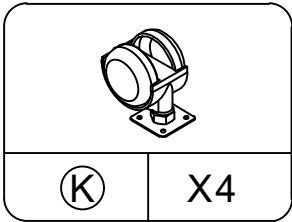


K

X4





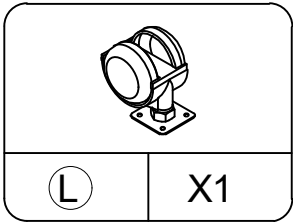


L







X1

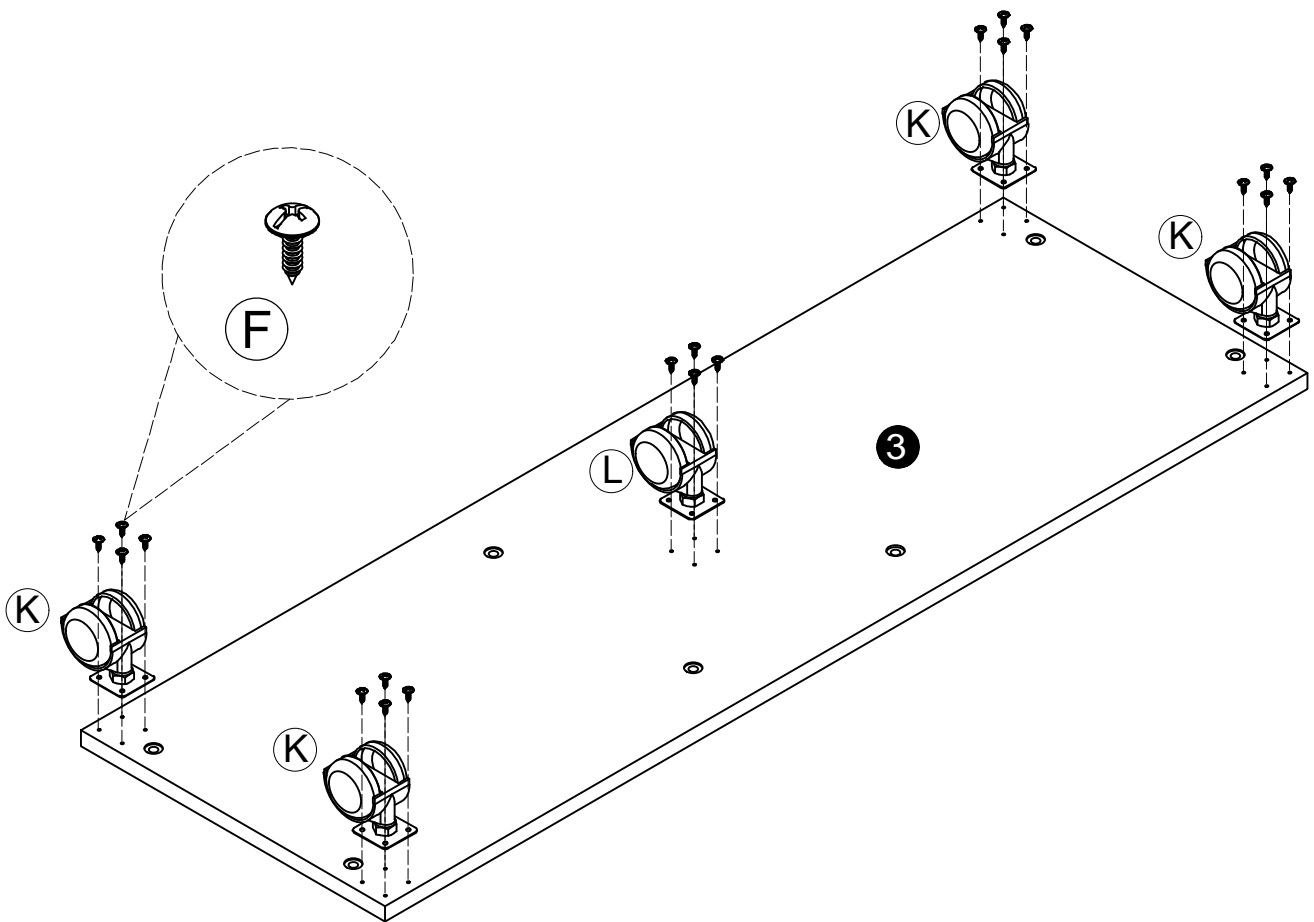



STEP11

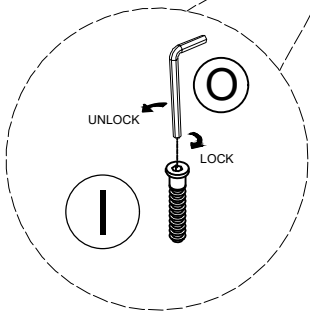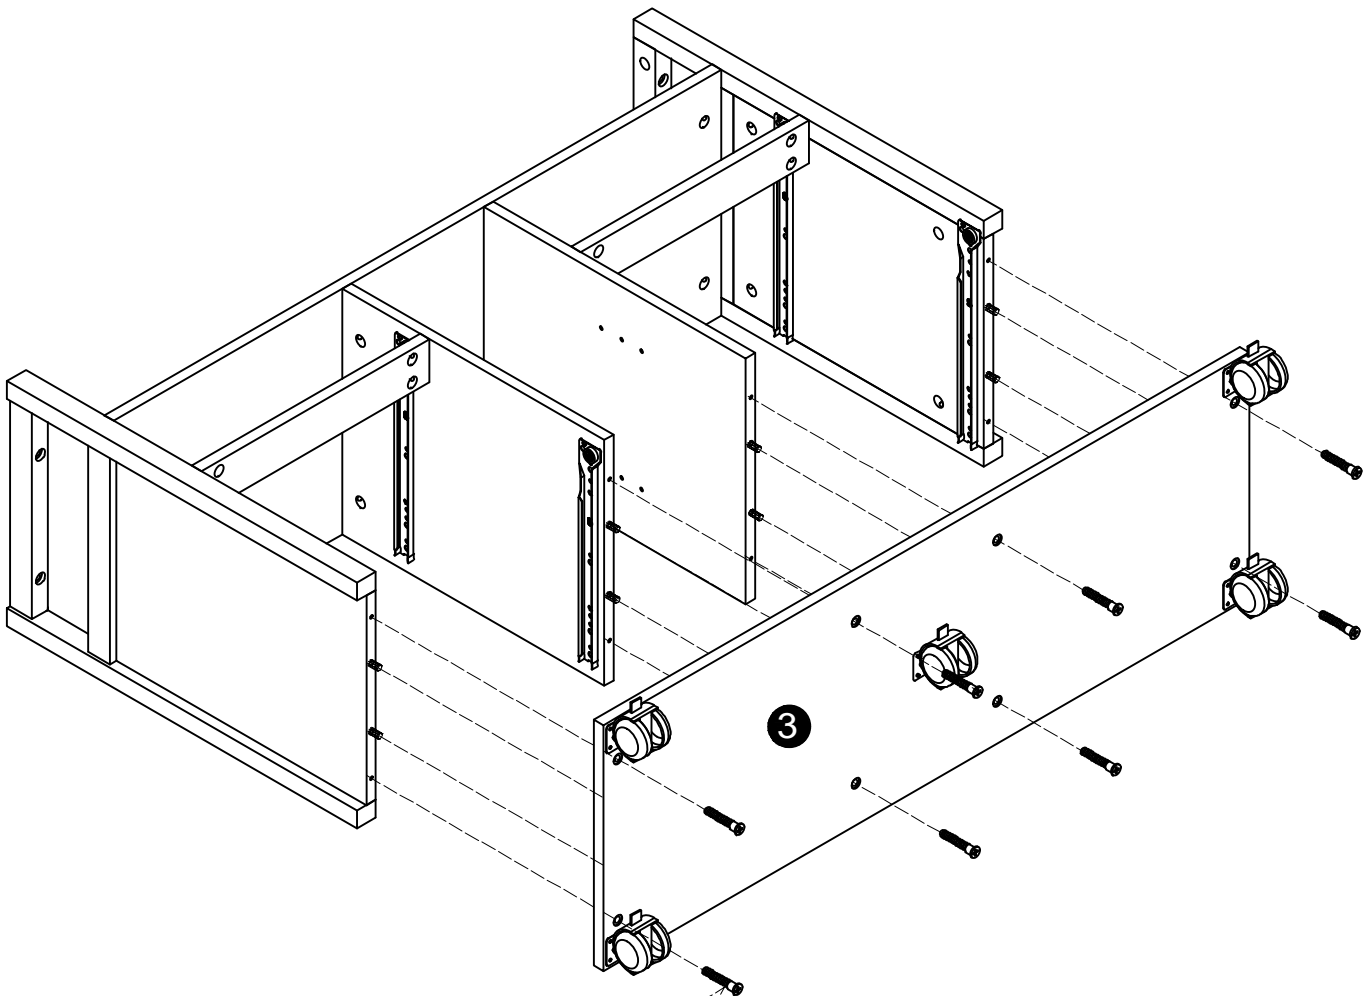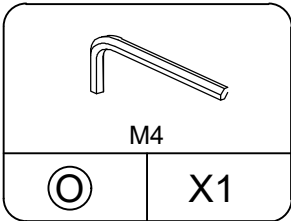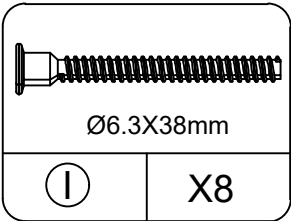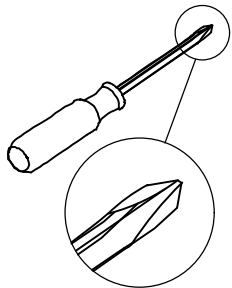

STEP12

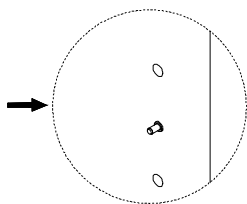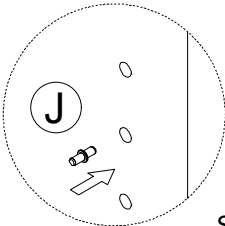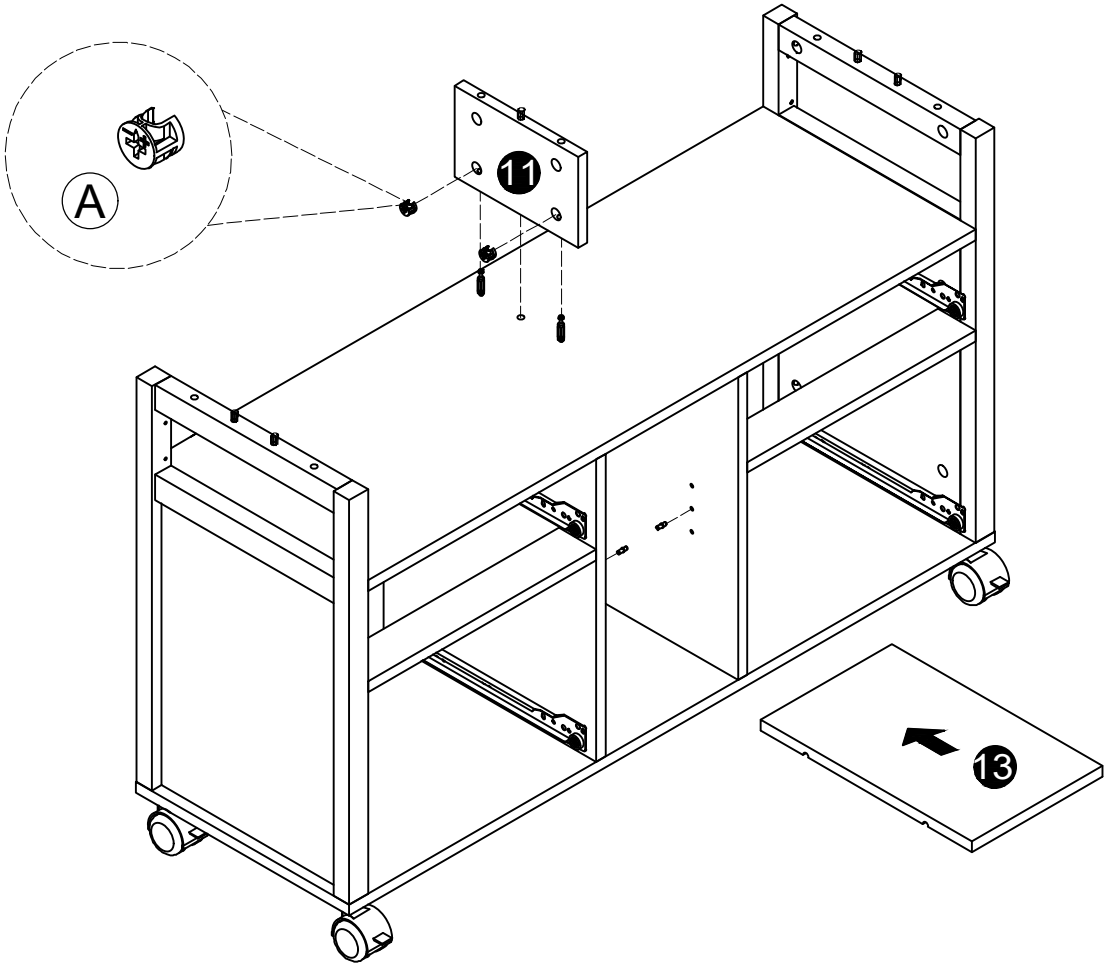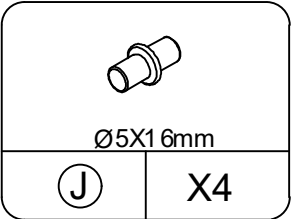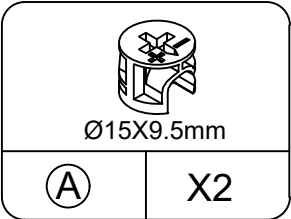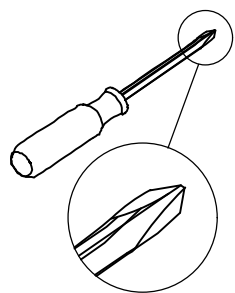


Step 1
Select the desired height
and put it in

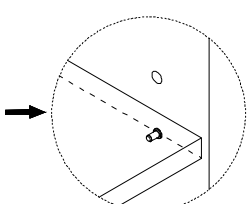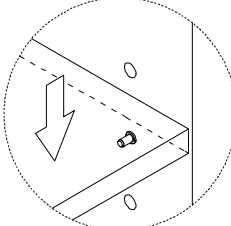

Step 2
Aim the board gaps down

STEP13

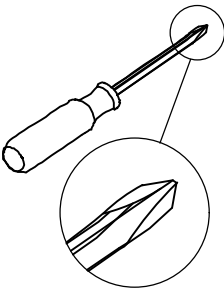



Ø15X9.5mm

(A)

X2



Ø6.5X35mm

(B)

X2



Ø3.5X12mm

(E)

X8



(P)

X2



M6X40mm

(M)





X4









M4

(O)

X1


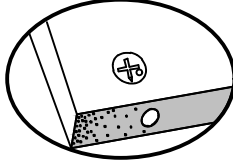
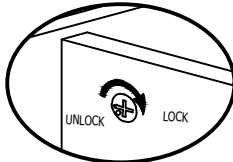
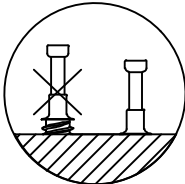
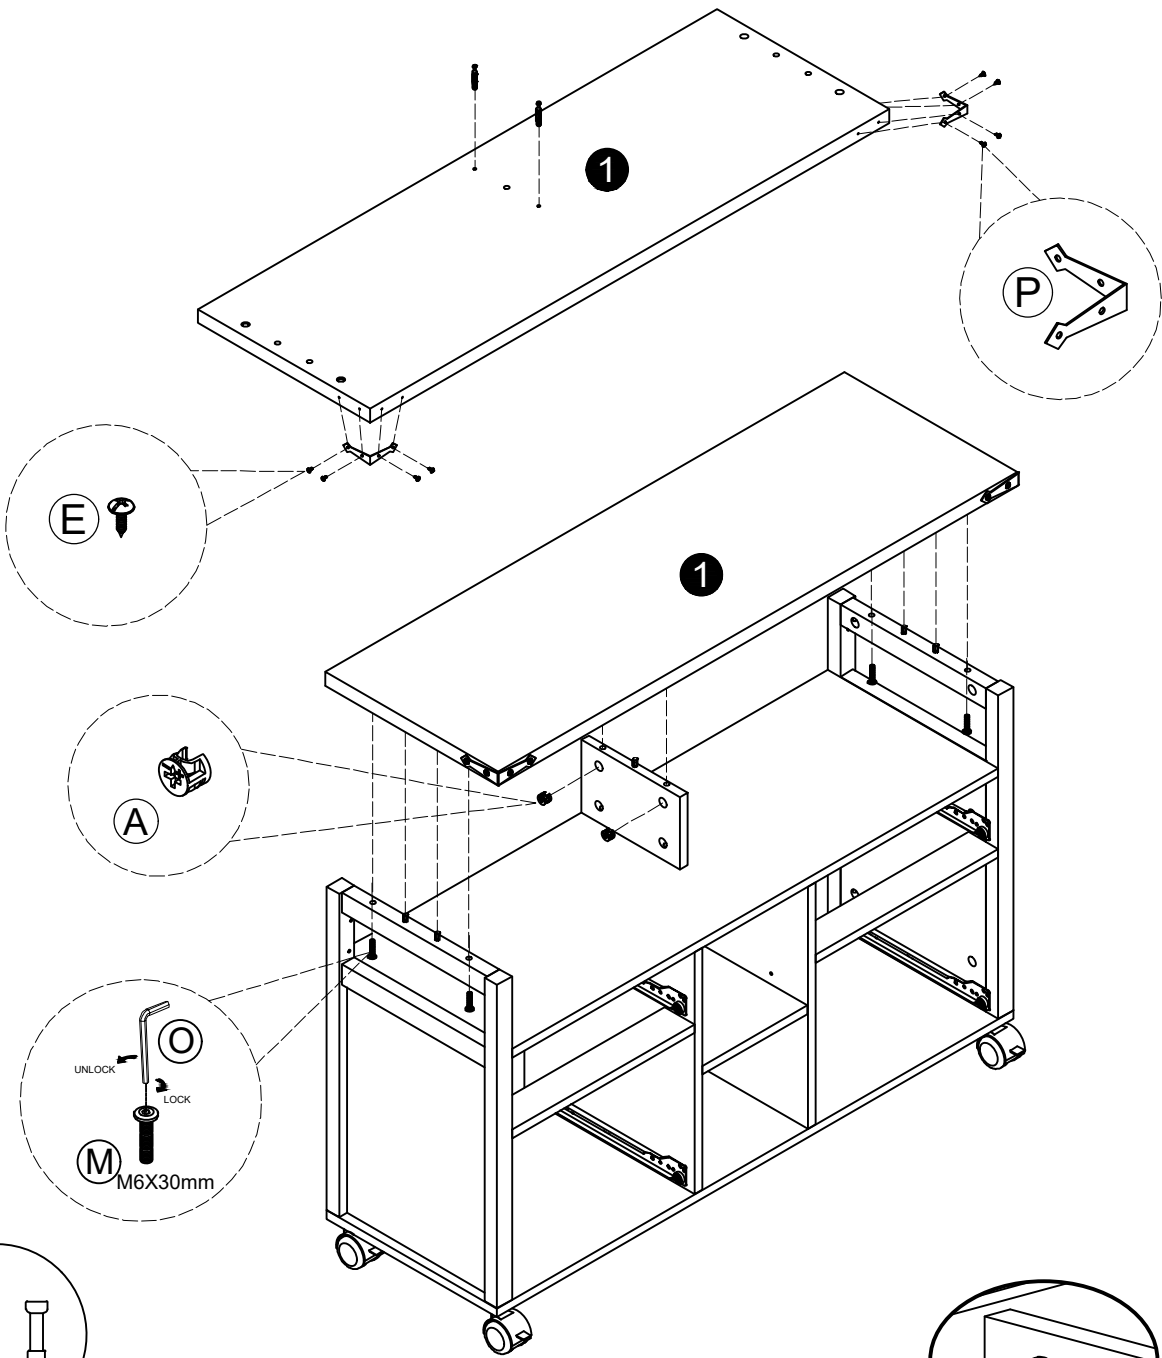


STEP14

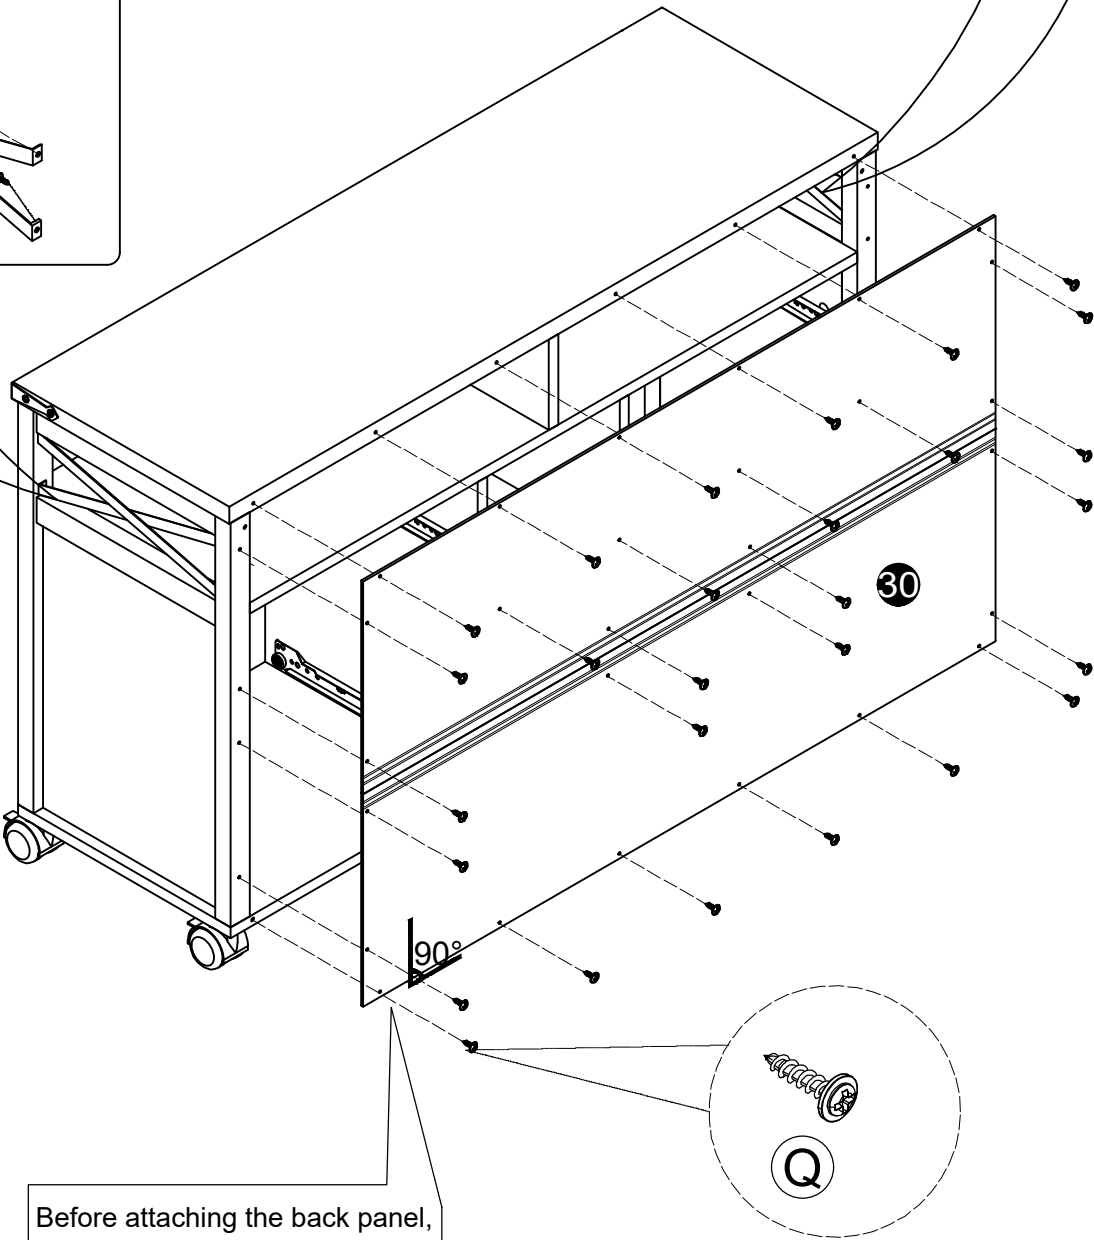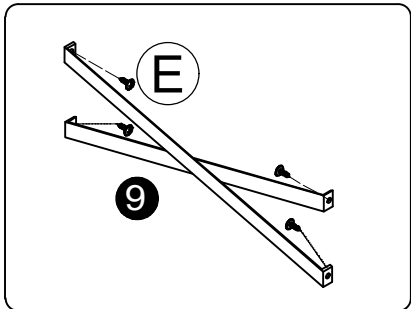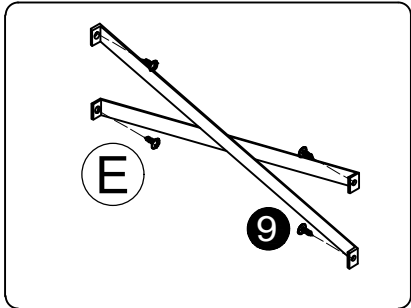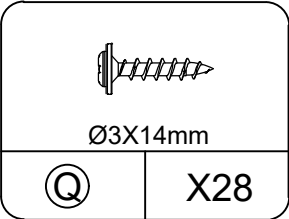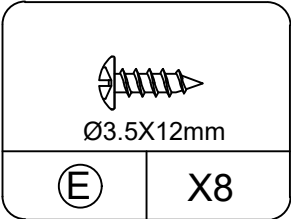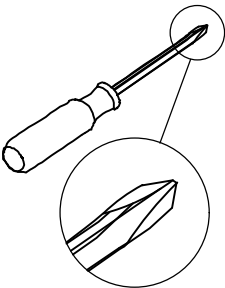


Before attaching the back panel,
be sure that the unit is at 90°.


STEP15

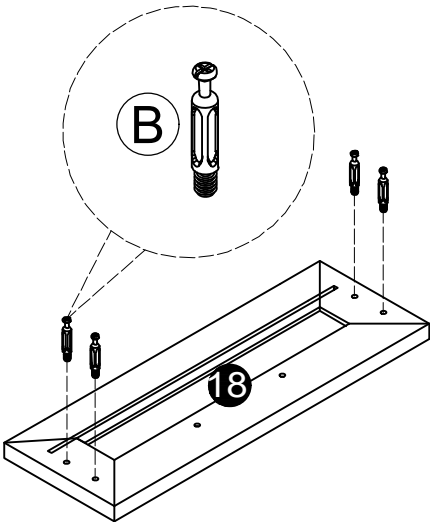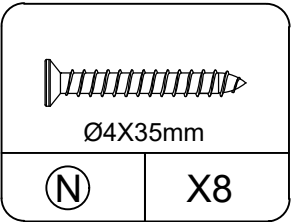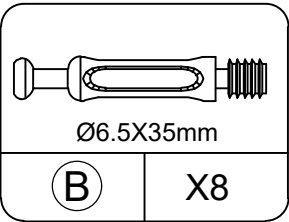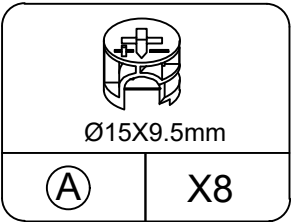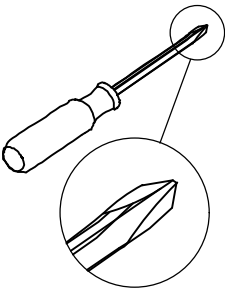


X2

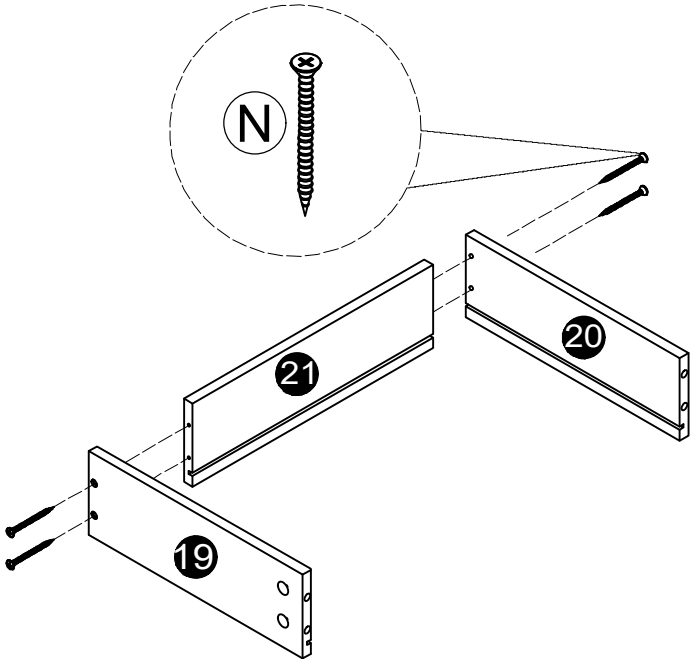




X2

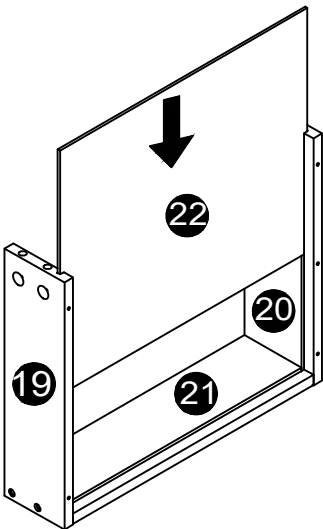










X2

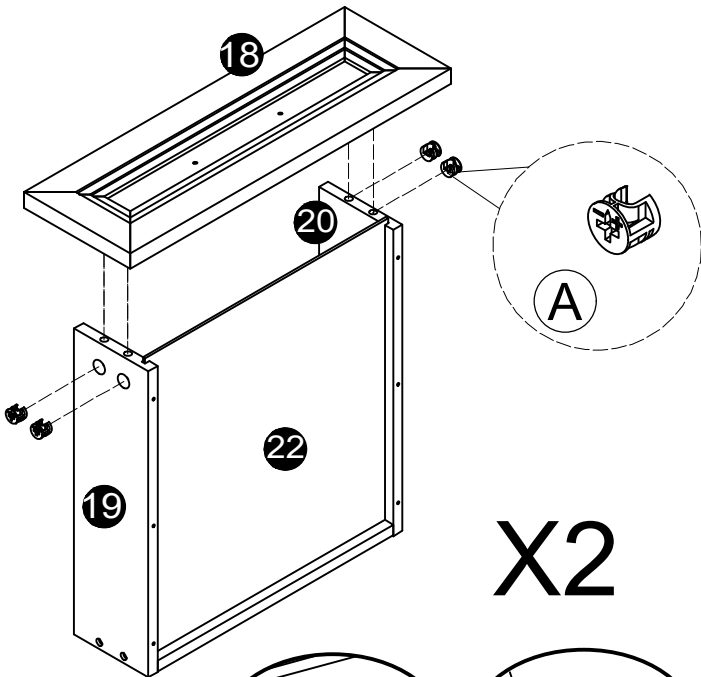















X2

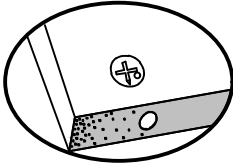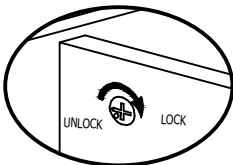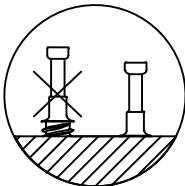


STEP16

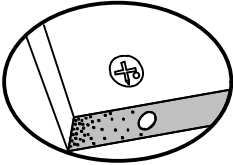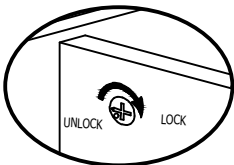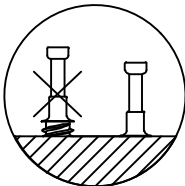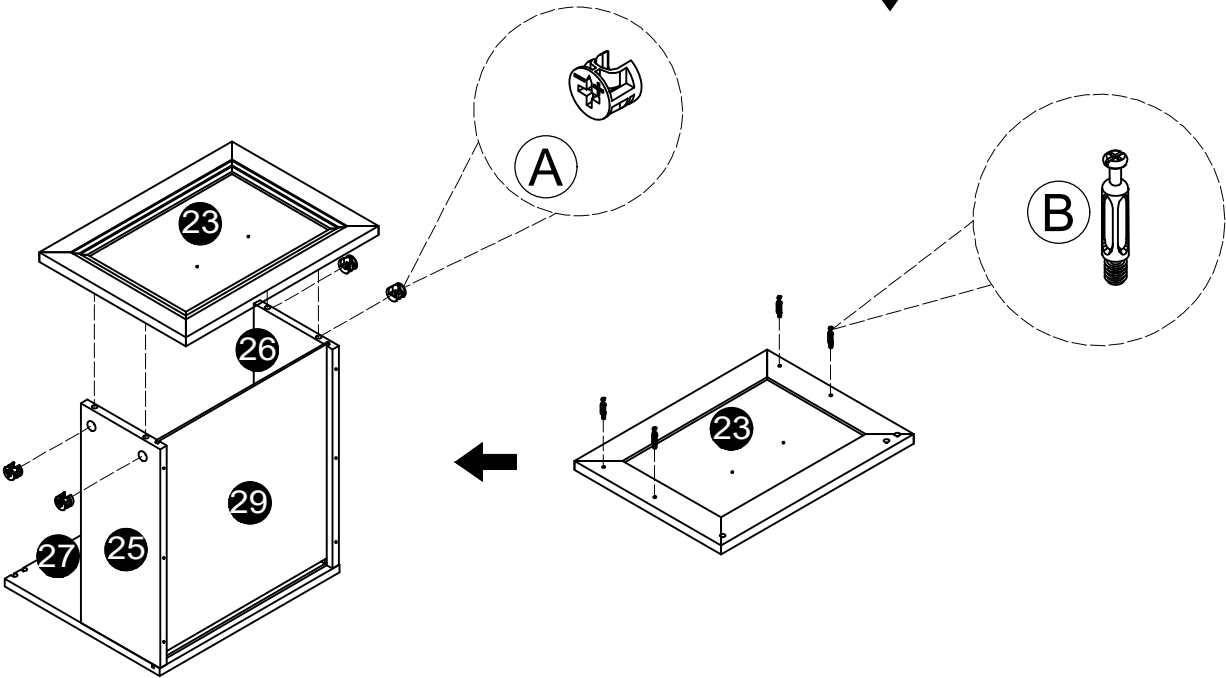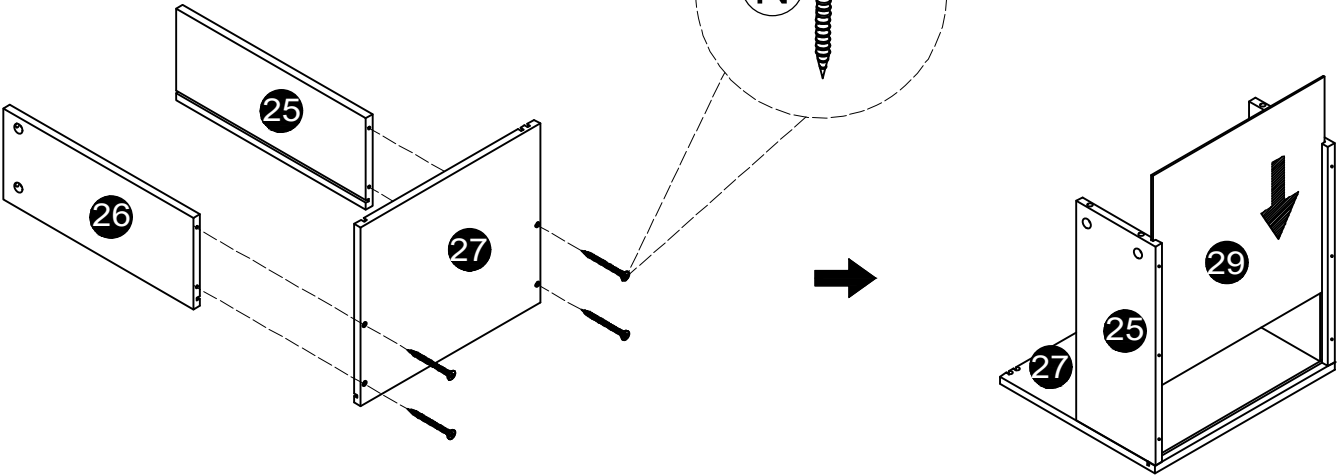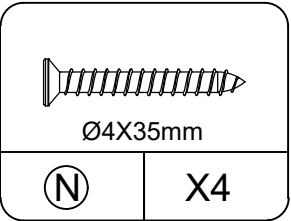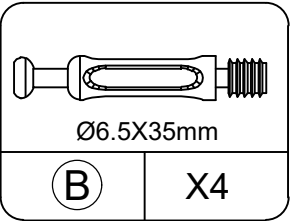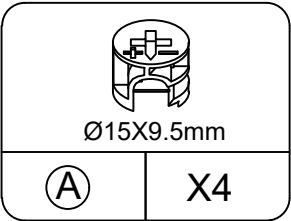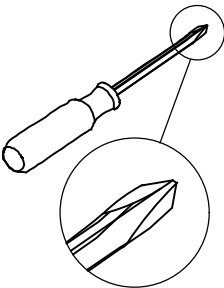

STEP17

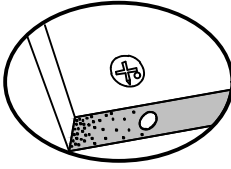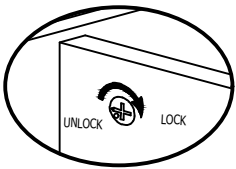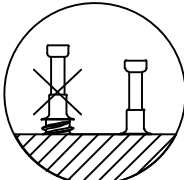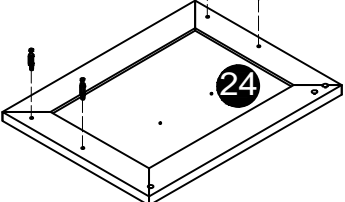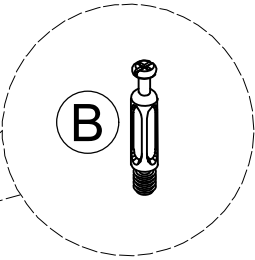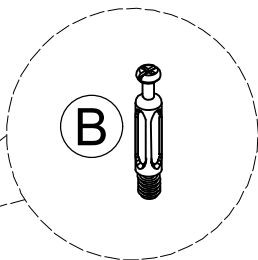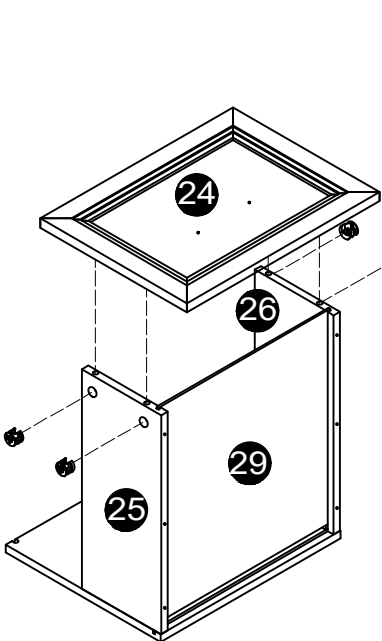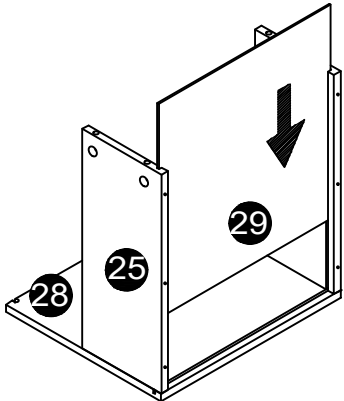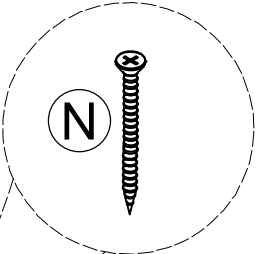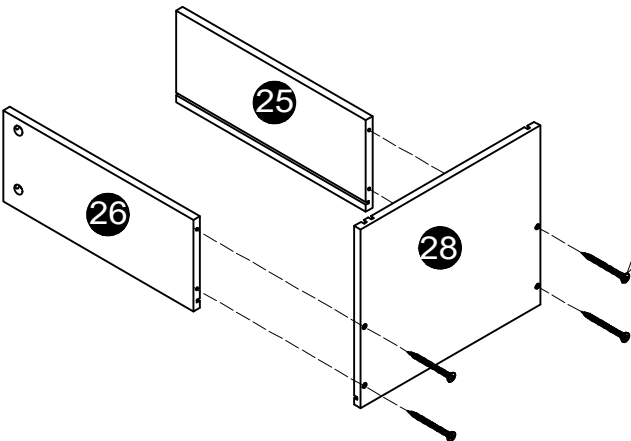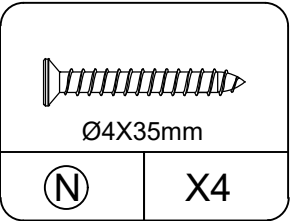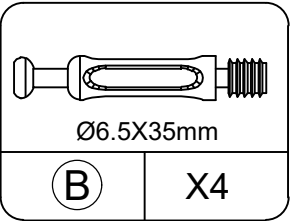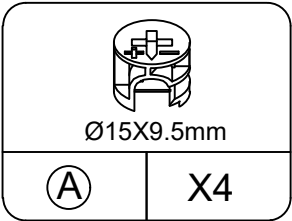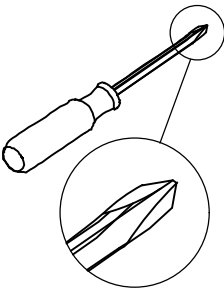



STEP18

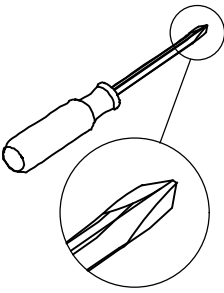


 Ø3.5X14mm	
D	X12


	
G	X2

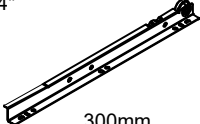14"  300mm	
DL1	X2

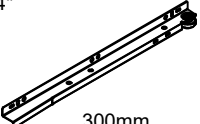
14"  300mm	
DR1	X2

Note the DL or DR stamped label on the track !






 M4X6mm	
H	X4

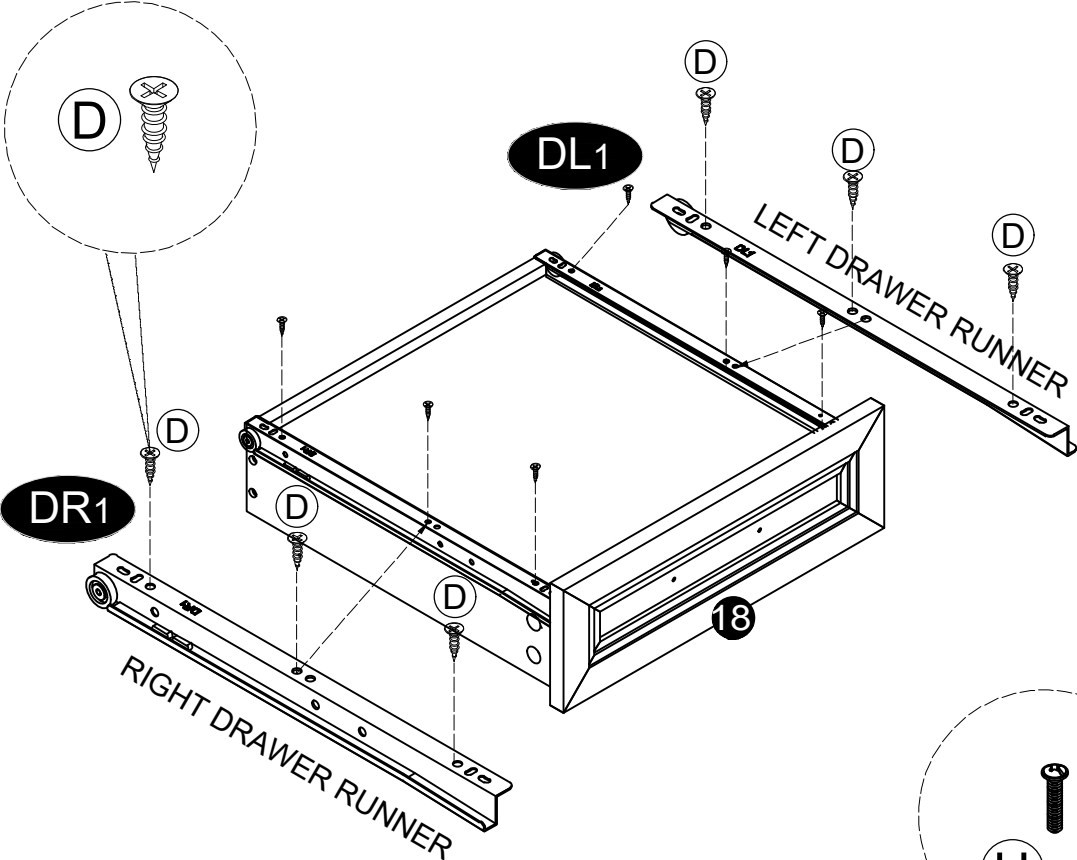






X2

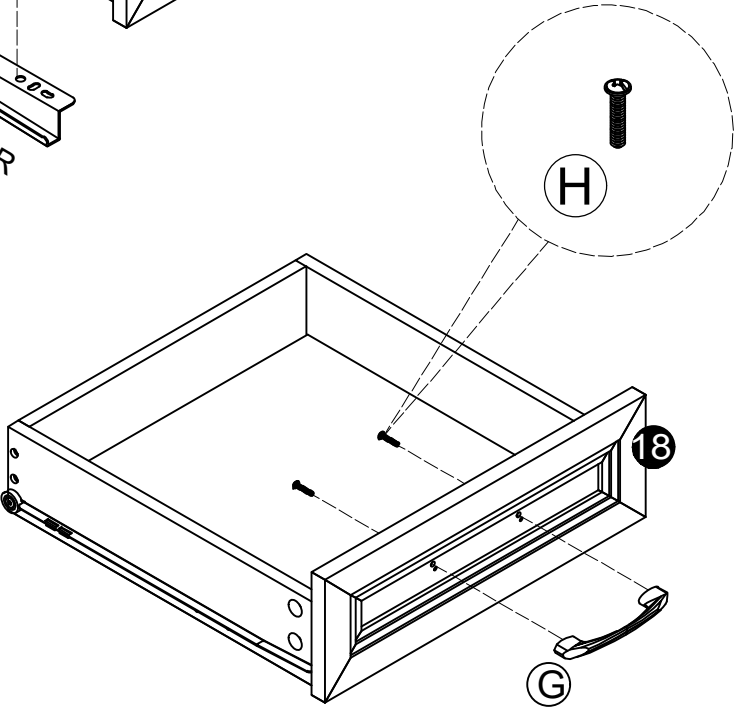

STEP19

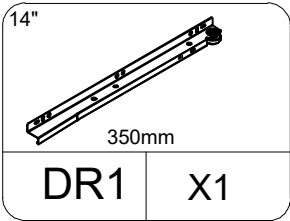
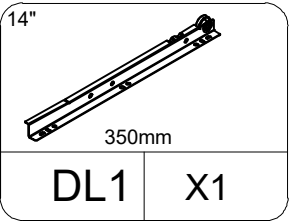
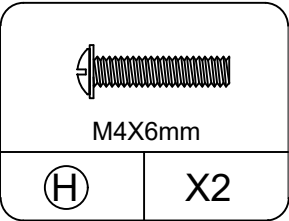
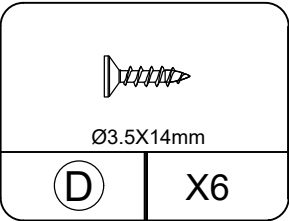
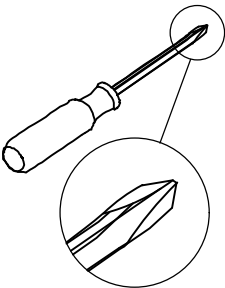


Note the DL or DR stamped label on the track !

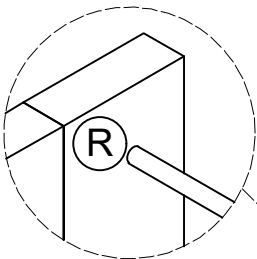
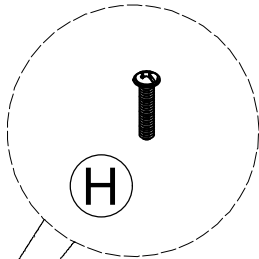
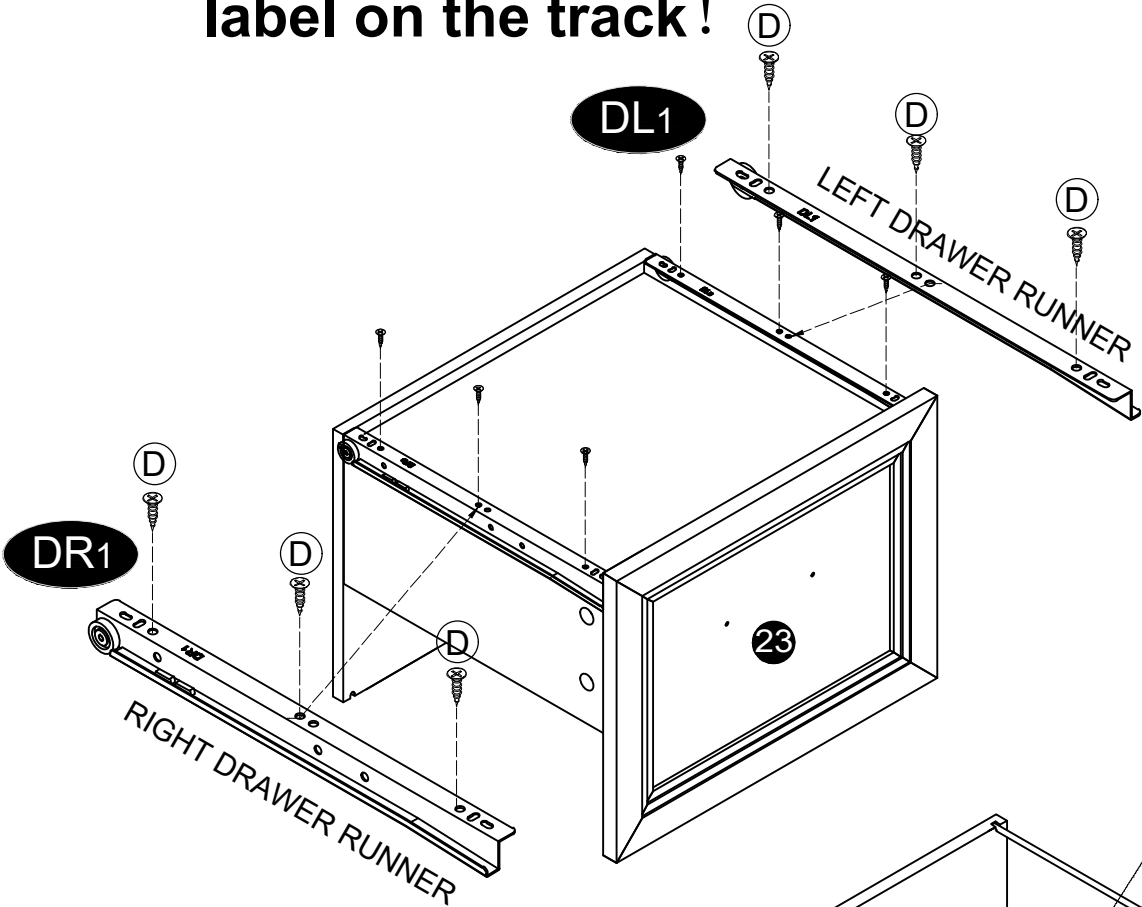
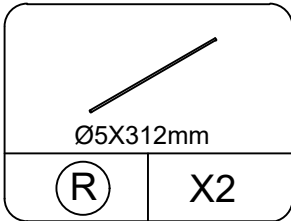
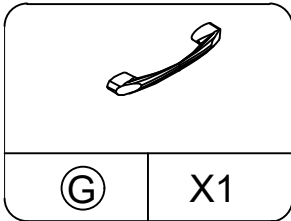


Insert the stainless steel tube into the hole at an angle

STEP20

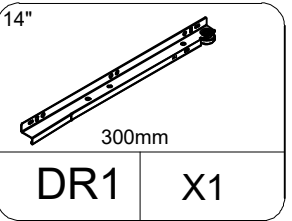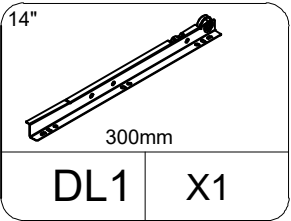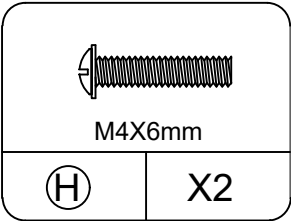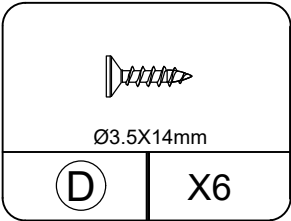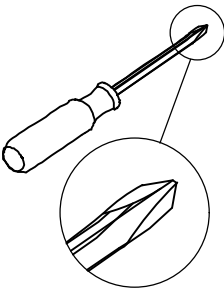

Note the DL or DR stamped label on the track !

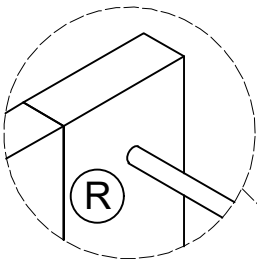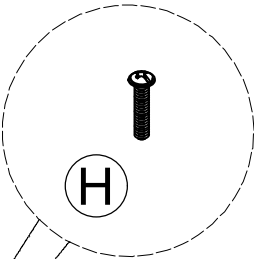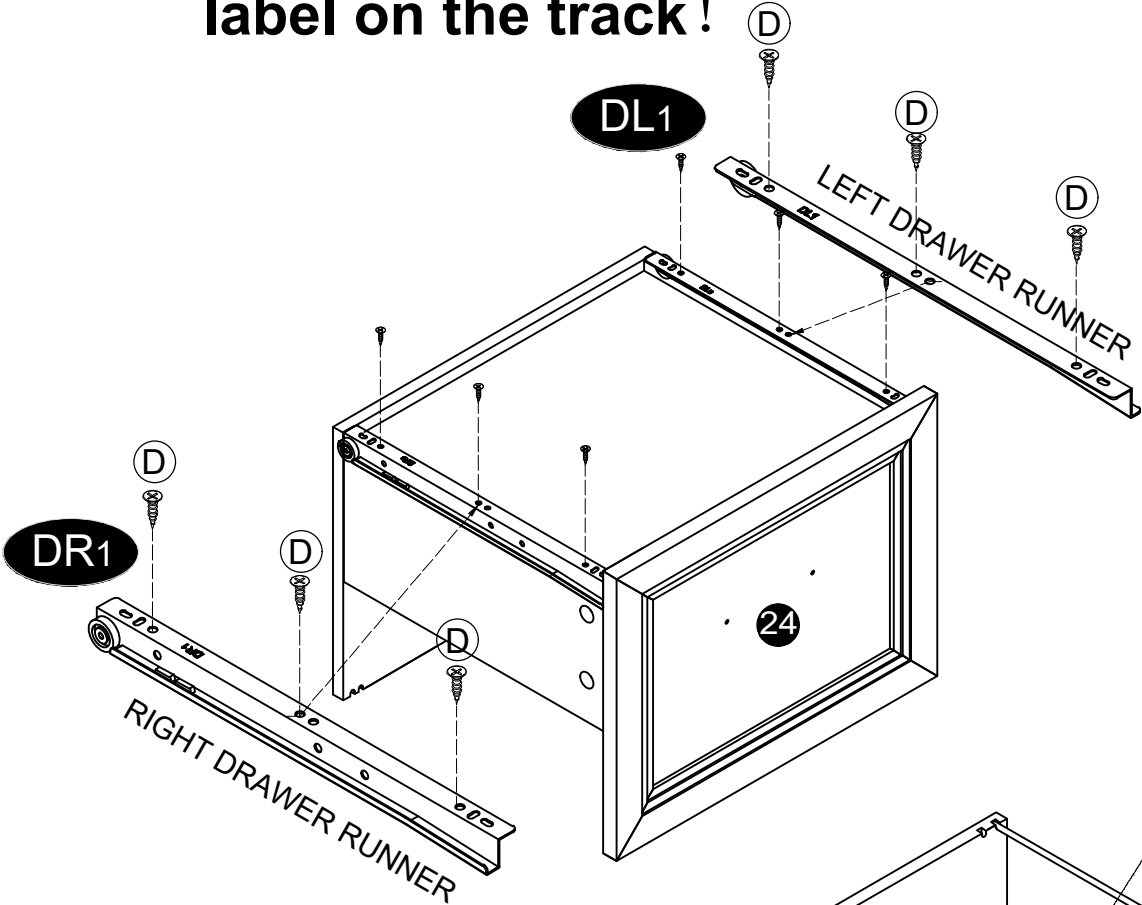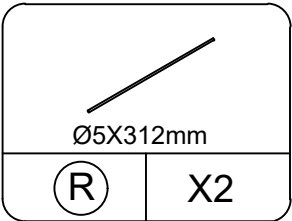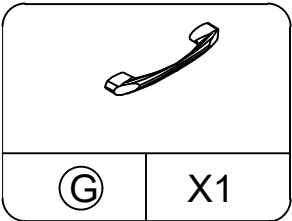

Insert the stainless steel tube into the hole at an angle

STEP21

