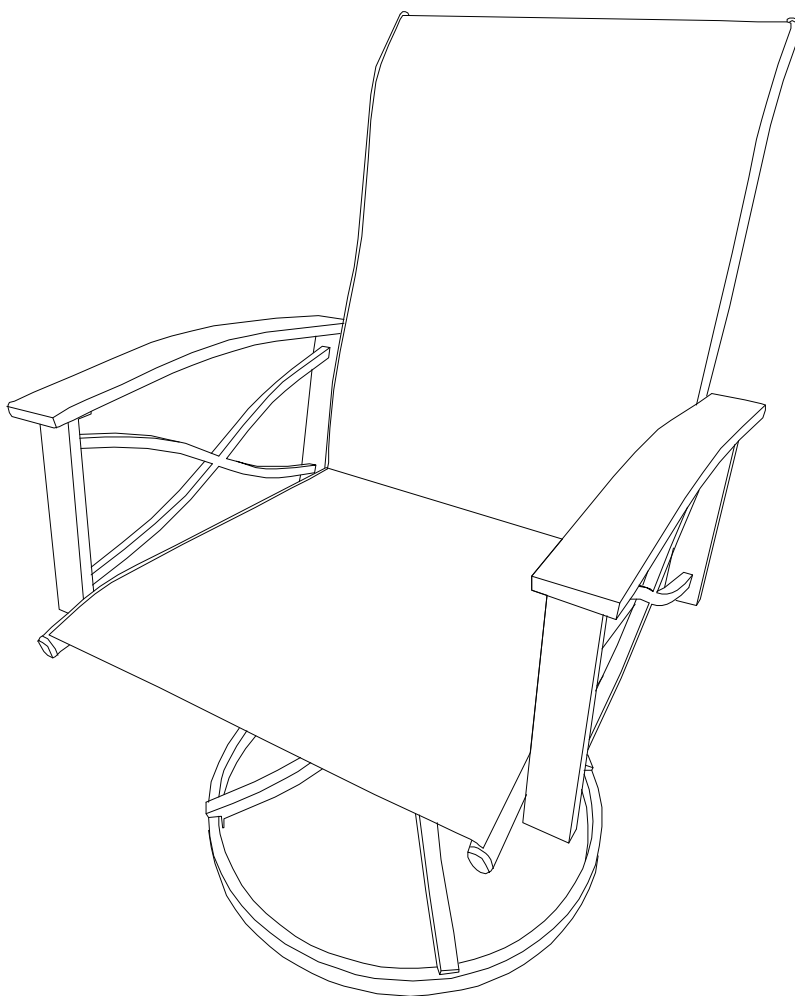


Teslin Teak-Texture Armrest Swivel Chair

If you have any questions about the Teslin Teak-Texture Armrest Swivel Chair, please feel free to contact us.



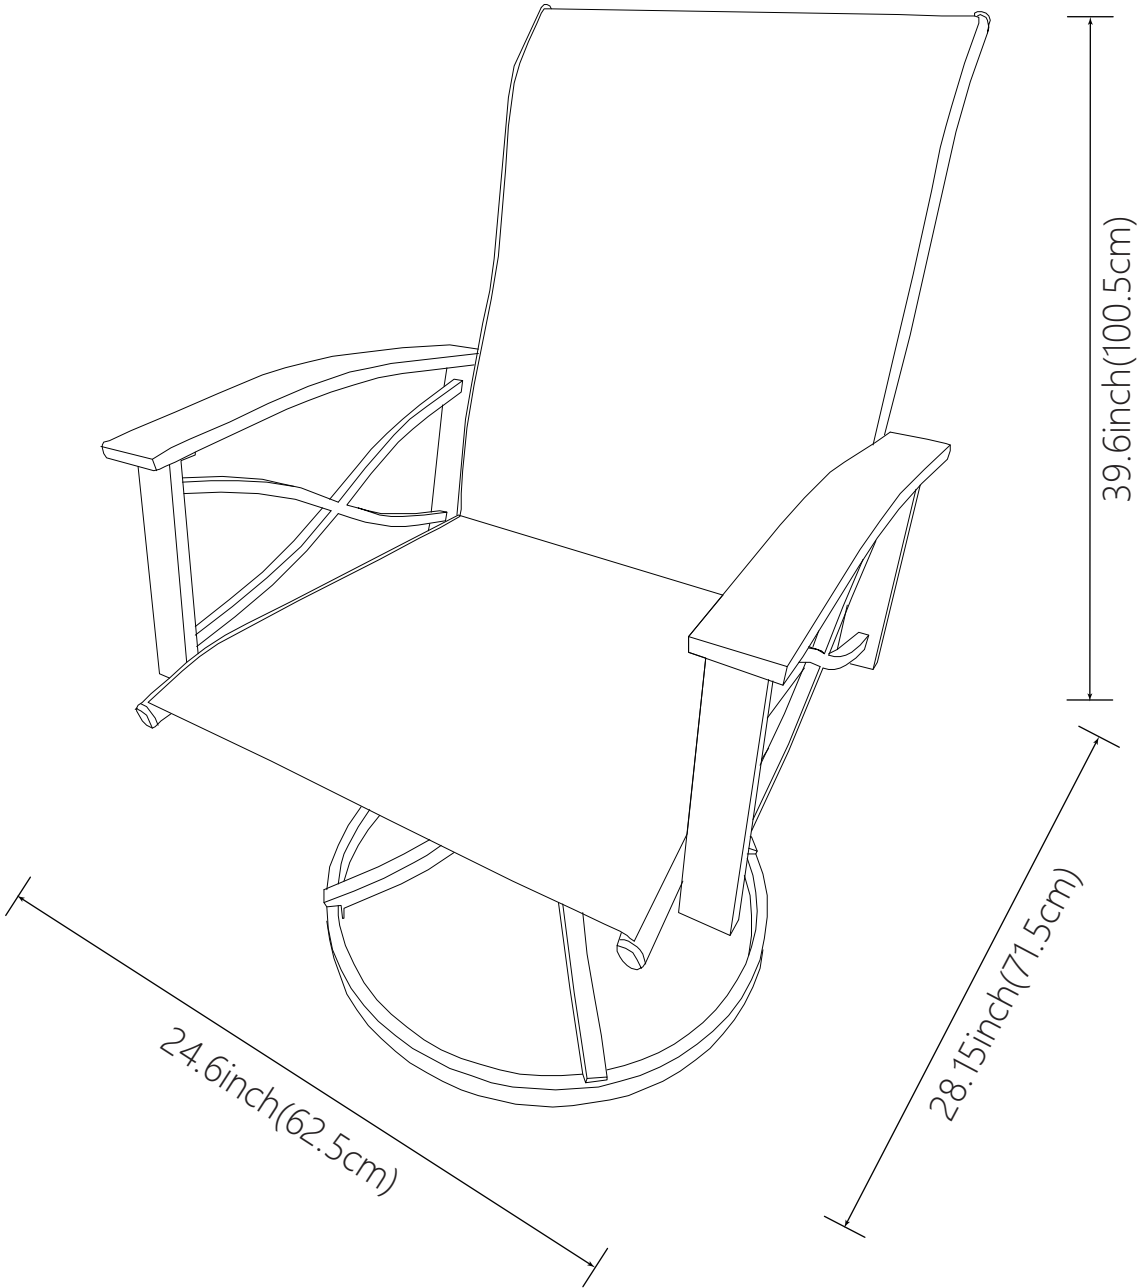
P26006-S1

IMPORTANT

PLEASE READ BEFORE YOU COMMENCE ASSEMBLY

Follow the guidelines in this user guide to ensure correct
assembly and care for this product

SPECIFICATIONS



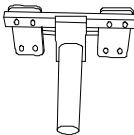
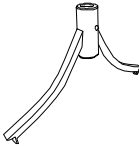
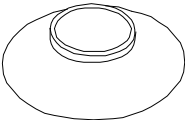

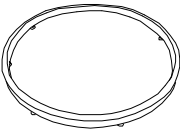


Instructions & Warning






Thank you for ordering this Teslin Teak-Texture Armrest Swivel Chair. Here are some suggestions that may help you:






1. This set of outdoor teslin dining chair comes two per case.
2. If any parts are damaged or lost, please read this instruction carefully (refer to the parts list on page. 4~page 6), please feel free to contact us. We will send you a replacement immediately.
3. We hope you can like our products, if you have any other questions, please contact us.

Catalog	
Specifications	01
Instructions & Warining	02
Packing List	04
Screw Set List	05
Extra	06
How To Assemble Teslin Teak-Texture Armrest Swivel Chair	07

Packing List			
Part	Description	Part Name	Qty
L001		Back Plate Part	2
L002		Seat Plate Part	2
L003		Left Armrest Part	2
L004		Right Armrest Part	2
L005		U-shaped support stand	2
L006		T-shaped Metal Part	2
L007		Bottom Turntable	2
L008		T-shaped Metal Part Lid	2
L009		Sheet Metal	4
L010		Chassis Support Strut	4
L011		Chassis	2

Screw Set List

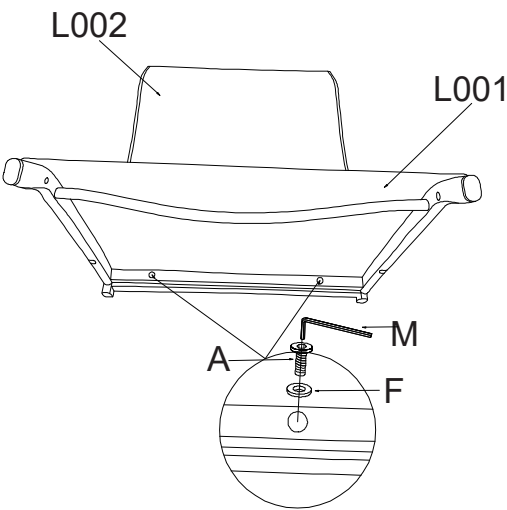
Part	Description	Part Name	Qty
A		Bolt M6*15	24
B		Bolt M6*30	12
C		Bolt M6*35	2
D		Bolt M8*30	8
E		Jam Nuts M8	8
F		M6 Gasket*1	36
G		M8 Gasket	12
H		M6 Large Gasket*2	2
I		M6 Bolt Cap	38
J		M8 Bolt Cap	8
K		M8 Nut Cap	8
L		Wrench	1
M		Allen wrench M6	1
N		Allen wrench M8	1

Extra			
Part	Description	Part Name	Qty
A		Bolt M6*15	3
B		Bolt M6*30	1
C		Bolt M6*35	1
D		Bolt M8*30	1
E		Jam Nuts M8	1
F		M6 Gasket*1	4
G		M8 Gasket	2
H		M6 Large Gasket*2	1
I		M6 Bolt Cap	4
J		M8 Bolt Cap	1
K		M8 Nut Cap	1

WARNING: Failure to locate parts in accordance with these diagrams, or failure to use special parts provided with this equipment, may result in property damage or personal injury.

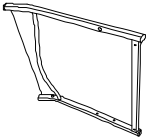


How To Assemble Teslin Teak-Texture Armrest Swivel Chair

Step 1:Attach the chair Back Plate Part(L001) and Seat Plate Part(L002) with screws(A).
Note: Do not tighten the Bolt.

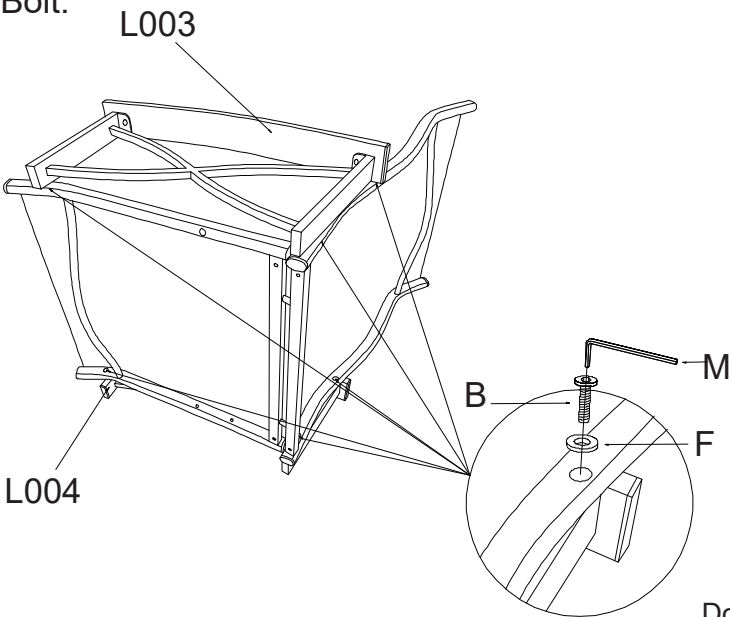


100%
Do Not Fully Tighten






L001		x1	L002		x1	A		x2	F		x2
									M		x1

Step 2:Attach the chair left and right Armrest Part(L003 and L004) and Seat Plate Part(L002) with screws(A).
Note: Do not tighten the Bolt.



100%
Do Not Fully Tighten

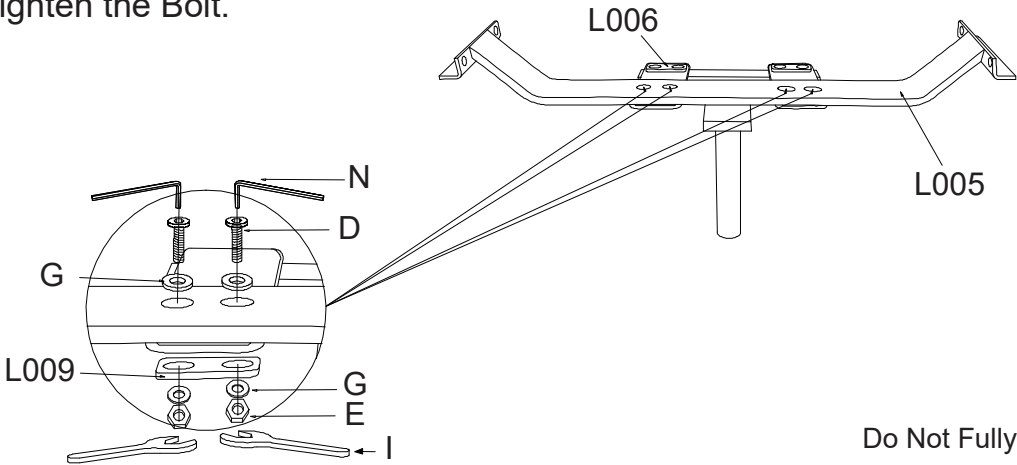






L003		x1	L004		x1	B		x6	F		x6
									M		x1

How To Assemble Teslin Teak-Texture Armrest Swivel Chair

Step 3: Assemble the U-shaped support stand and the T-shaped metal part, aligning the holes. Fit the sheet metal(L009), bolt(D) and M8 gasket(G), then secure the nuts(E) and tighten them in the order specified above. Finally, use a Wrench(I) and an Allen wrench(K) to tighten the bolts and nuts.

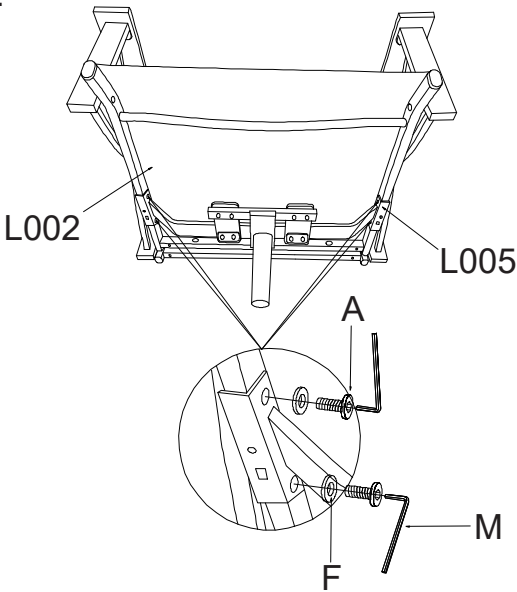
Note: Do not tighten the Bolt.




L005		x1	L009		x1	G		x8	E		x4
L006		x1	D		x4	N		x1	L		x1

Step 4: Attach the assembled U-Shaped Support Stand (L005) to the underside of the Seat Plate (L002).

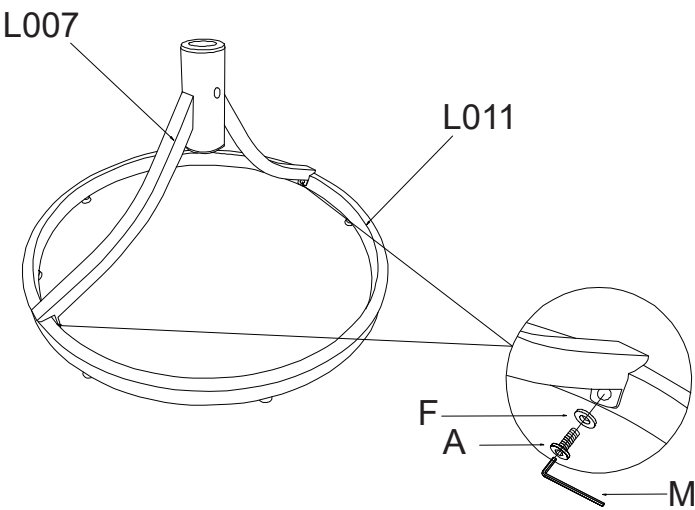
Note: Do not tighten the Bolt.



L002		x1	L005		x1	A		x4	F		x4
									M		x1

How To Assemble Teslin Teak-Texture Armrest Swivel Chair

Step 5:Attach the Bottom Turntable(L007) and Chassis(L011) with screws(A).
Note: Do not tighten the Bolt.

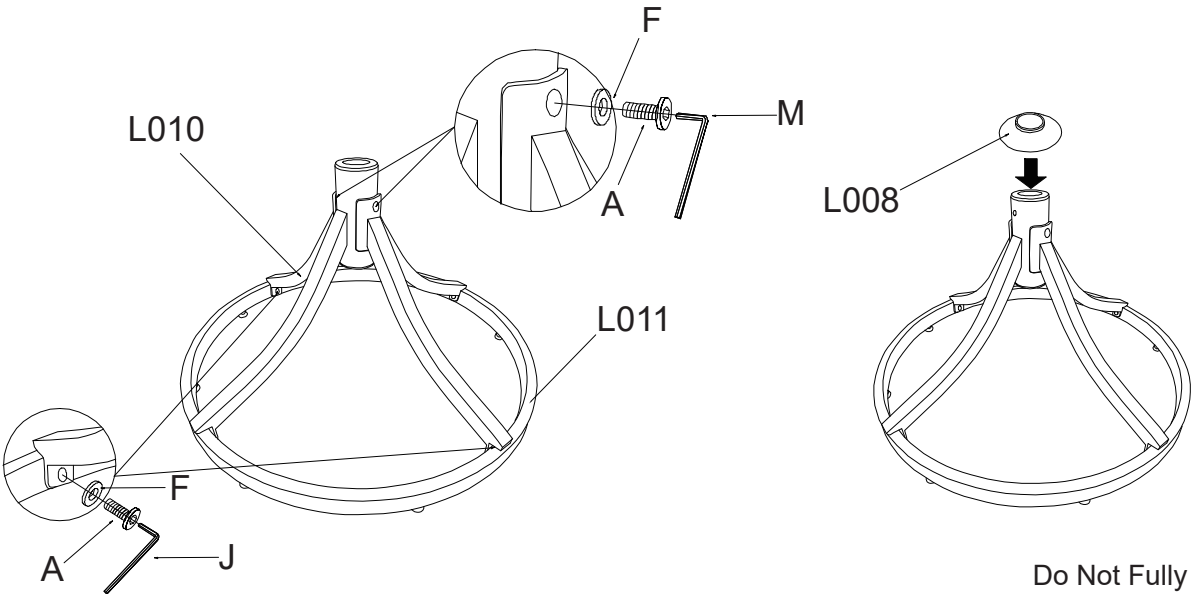


100%
Do Not Fully Tighten



L007		x1	L011		x1	A		x2	F		x2
									M		x1

Step 6:Attach the Bottom Turntable (L007) and Chassis Support Struts (L011) with screws (A); once assembled, fit the T-shaped Metal Part Lid (L008) in place.
Note: Do not tighten the Bolt.



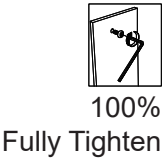
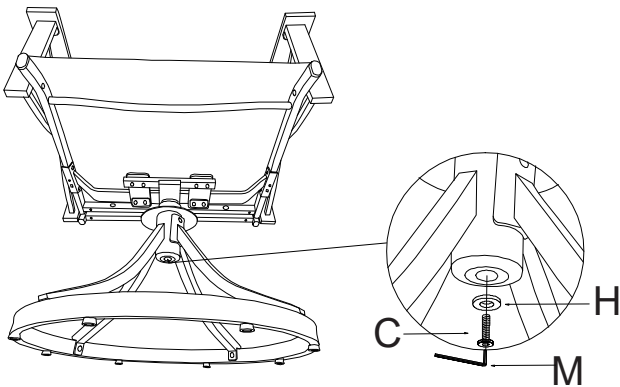
100%
Do Not Fully Tighten




L010		x1	L011		x1	A		x4	F		x4
			L008		x1				M		x1

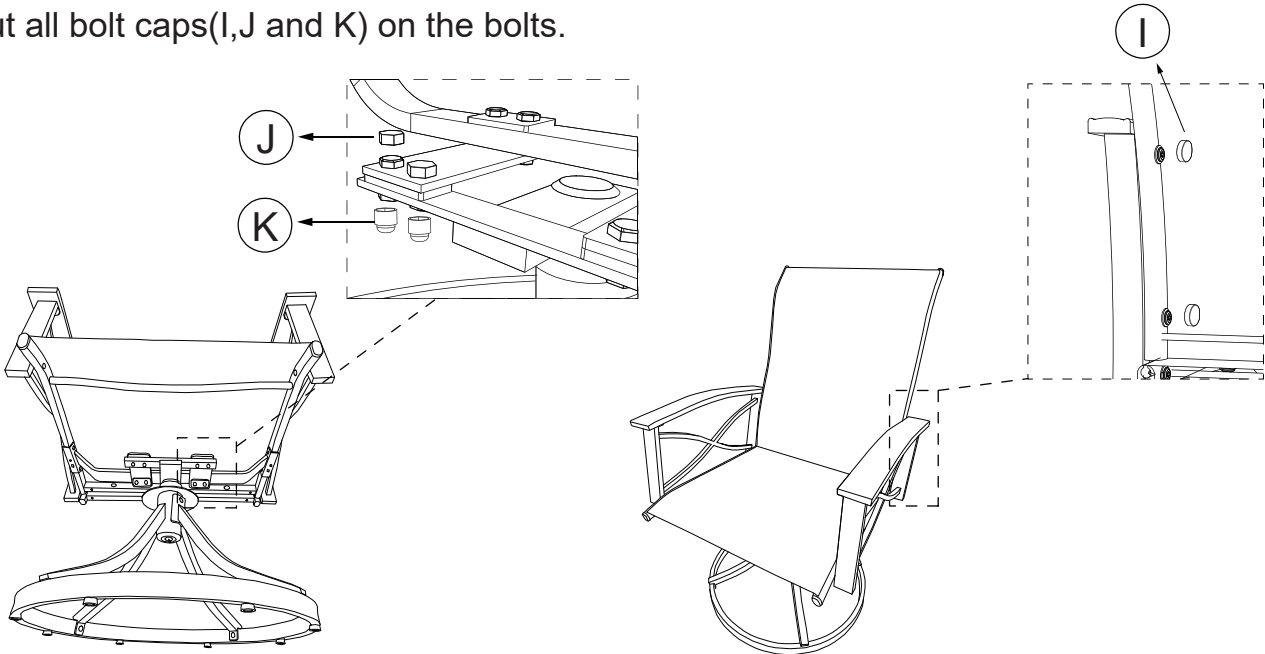
How To Assemble Teslin Teak-Texture Armrest Swivel Chair

Step 7:Insert the T-shaped metal part (L006) into the turntable on the bottom turntable (L007), and tighten bolt (C) using the M6 large gasket (H), as shown in the illustration.



C		x1	H		x1	M		x1
---	--	----	---	--	----	---	---	----

Step 8:Put all bolt caps(I,J and K) on the bolts.



I		x19	J		x4	K		x4
---	---	-----	---	---	----	---	---	----