
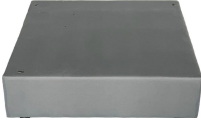




# Installation 147-1

To avoid scratches and swallowing parts, please do not install by children!


| Hardware List                                                                                                      |                                                                                                                        |                                                                                                                         |
|--------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------|
| <br><b>Seat</b><br>Qty: 1         | <br><b>Backrest</b><br>Qty: 1         | <br><b>Armrest</b><br>Qty: 1         |
| <br><b>Seat cushion</b><br>Qty: 1 | <br><b>Back cushion</b><br>Qty: 1     | <br><b>Sofa cover</b><br>Qty: 1      |
| <br><b>Sofa lining</b><br>Qty: 2  | <br><b>Cover plate</b><br>Qty: 1      | <br><b>Back cover</b><br>Qty: 1      |
| <br><b>Inserted rod</b><br>Qty: 4 | <br><b>Connector Latch</b><br>Qty: 1 | <br><b>Screws(8x20mm)</b><br>Qty: 2 |
| <br><b>Legs</b><br>Qty: 4       |                                                                                                                        |                                                                                                                         |

**1** Seal the bottom with the back cover. And then screw the sofa Legs into the reserving holes on the sofa base.

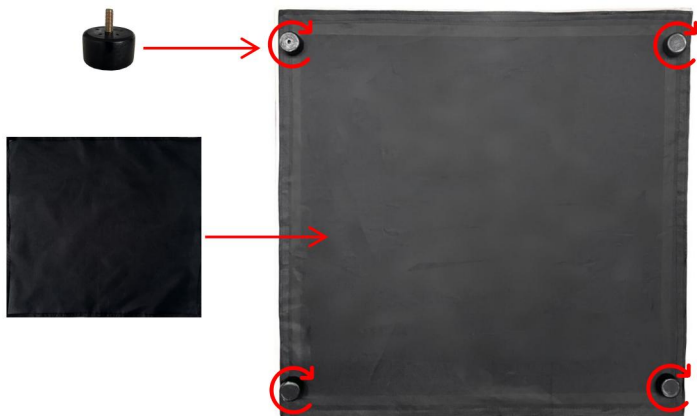


Attach EVA silent anti-slip foot pads to the sofa legs.


**2** Install the cover plate over the hole.

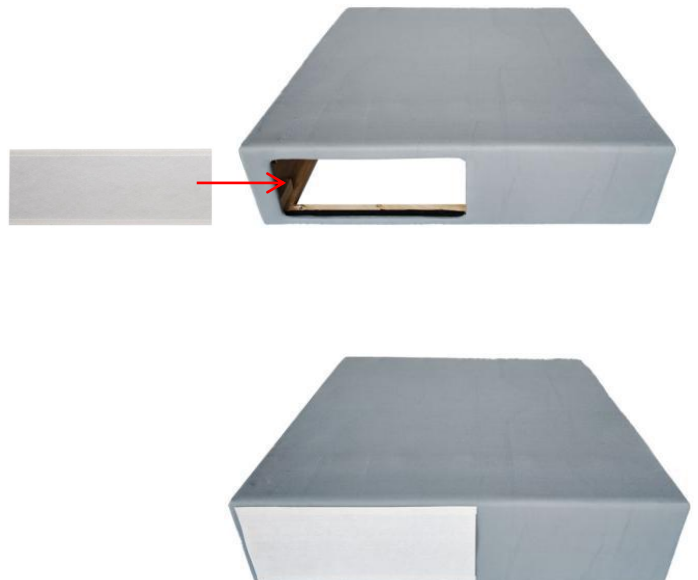


**3** Install the Inserted rod beneath the armrest and backrest.

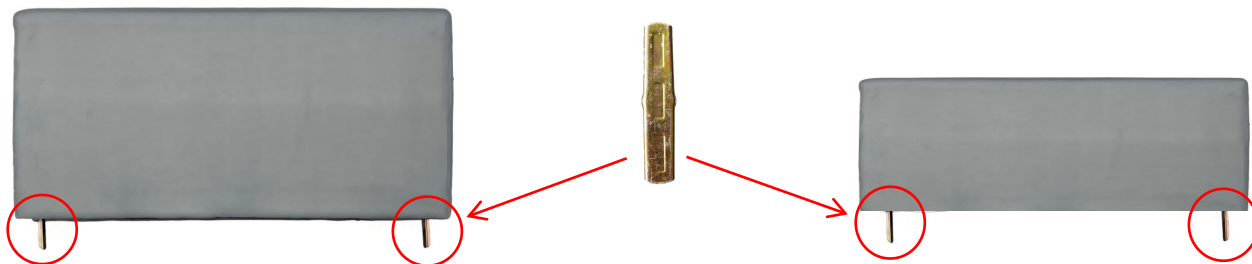


**4** Insert the backrest and armrest into the seat. Note the front and back: the flat side goes at the back and should sit flush with the sofa frame once installed.

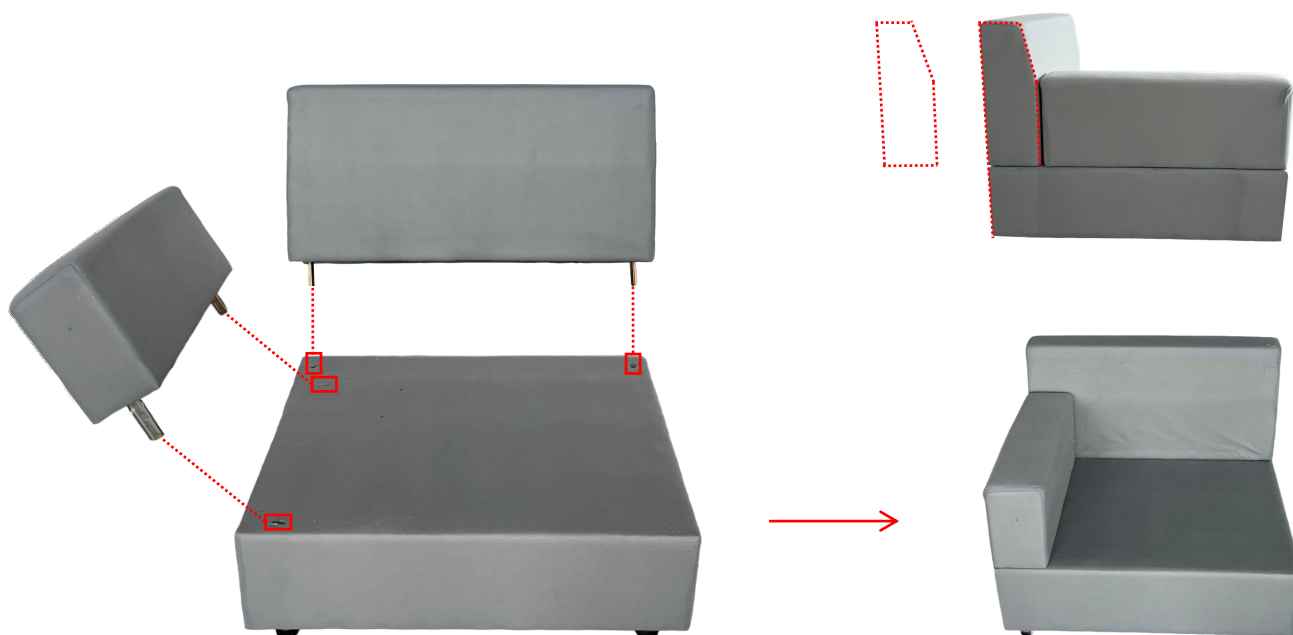


**5** As shown in the illustration, attach the sofa lining to both sides of the frame bottom on the armrest side.

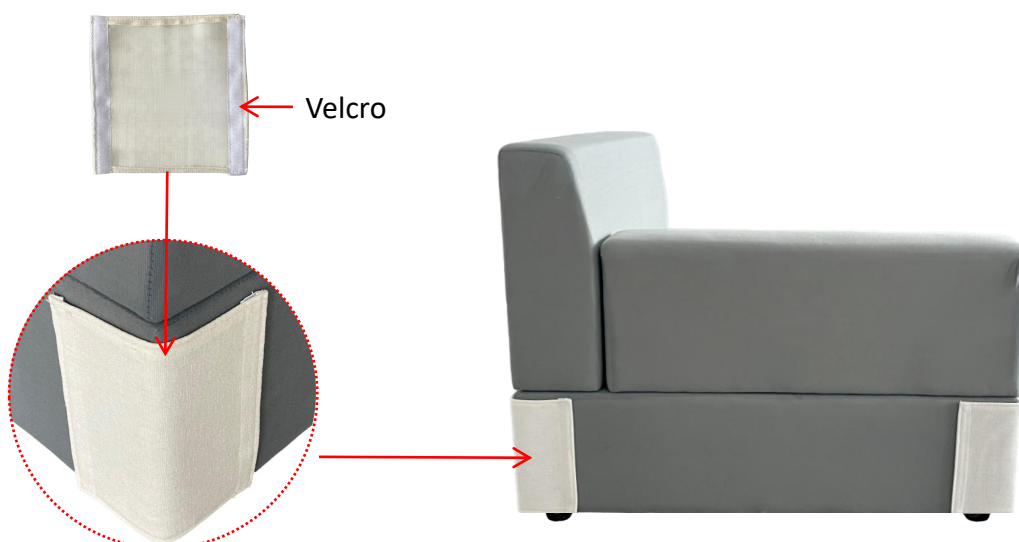

**6** Put on the sofa cover. Suggestion: you'd better not remove the protective strip before finish putting the cover on.

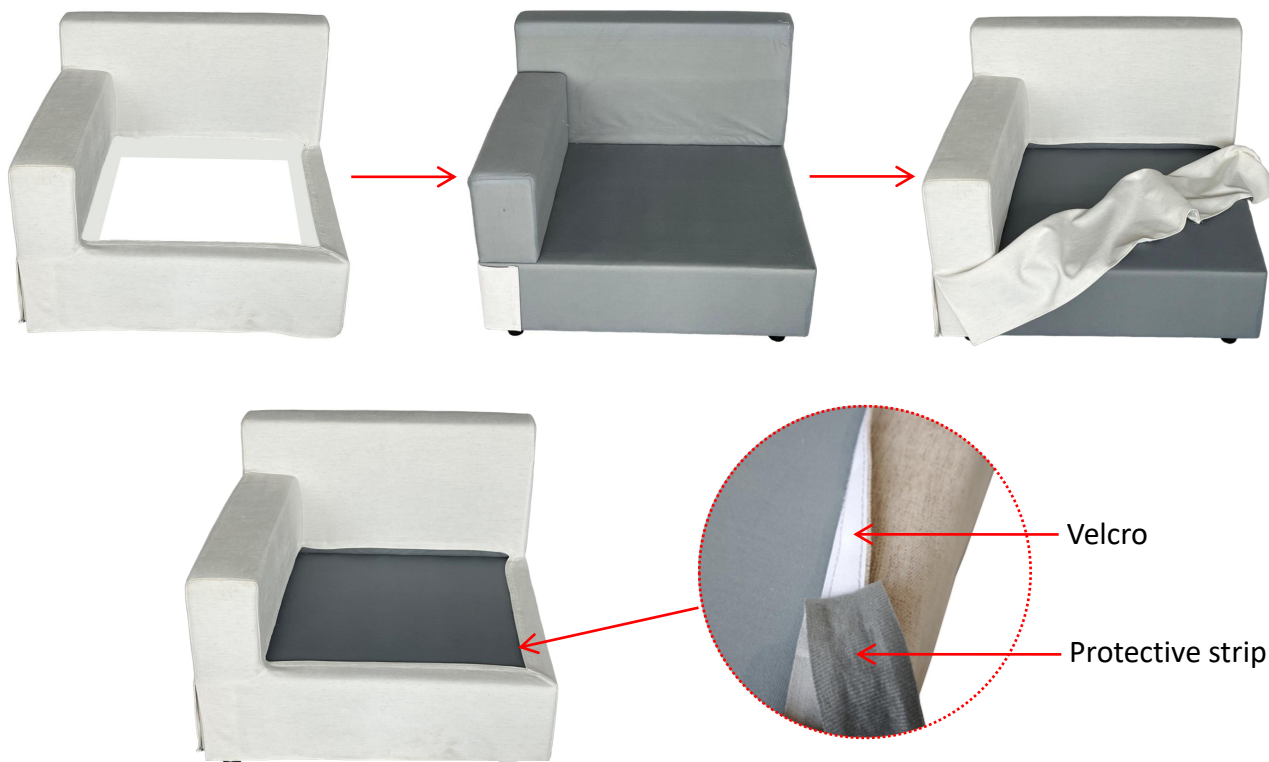

**7** Place the seat cushion and back cushion. Note: Place the side with the zipper facing backward.

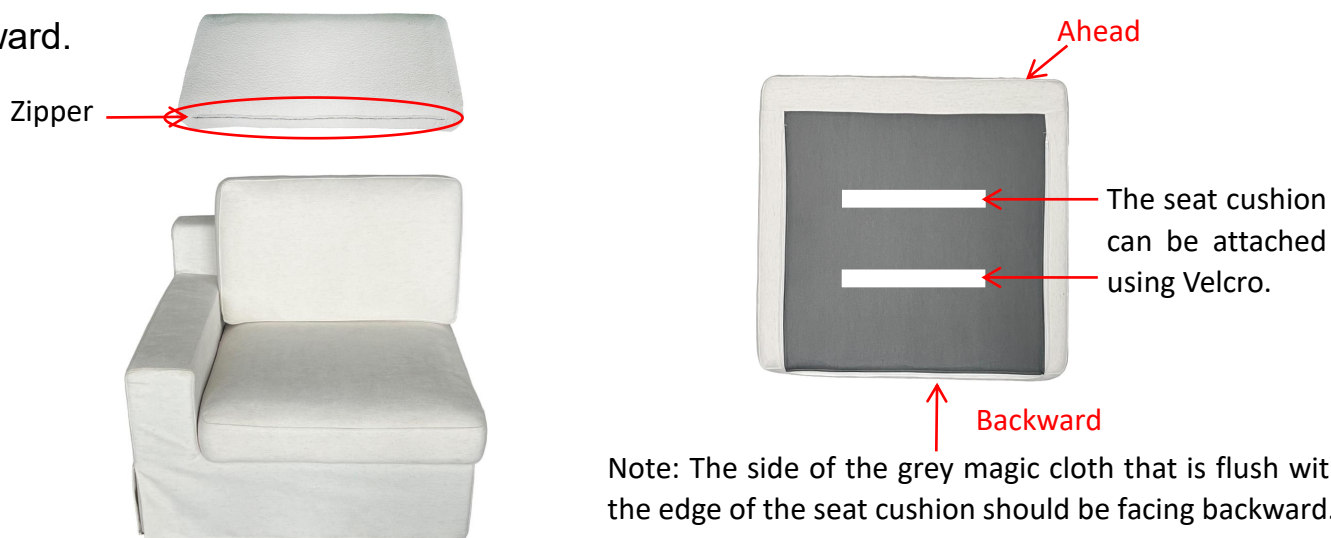

**8** Apply the connector latch to connect the seats together(or not, it's totally up to users).

