

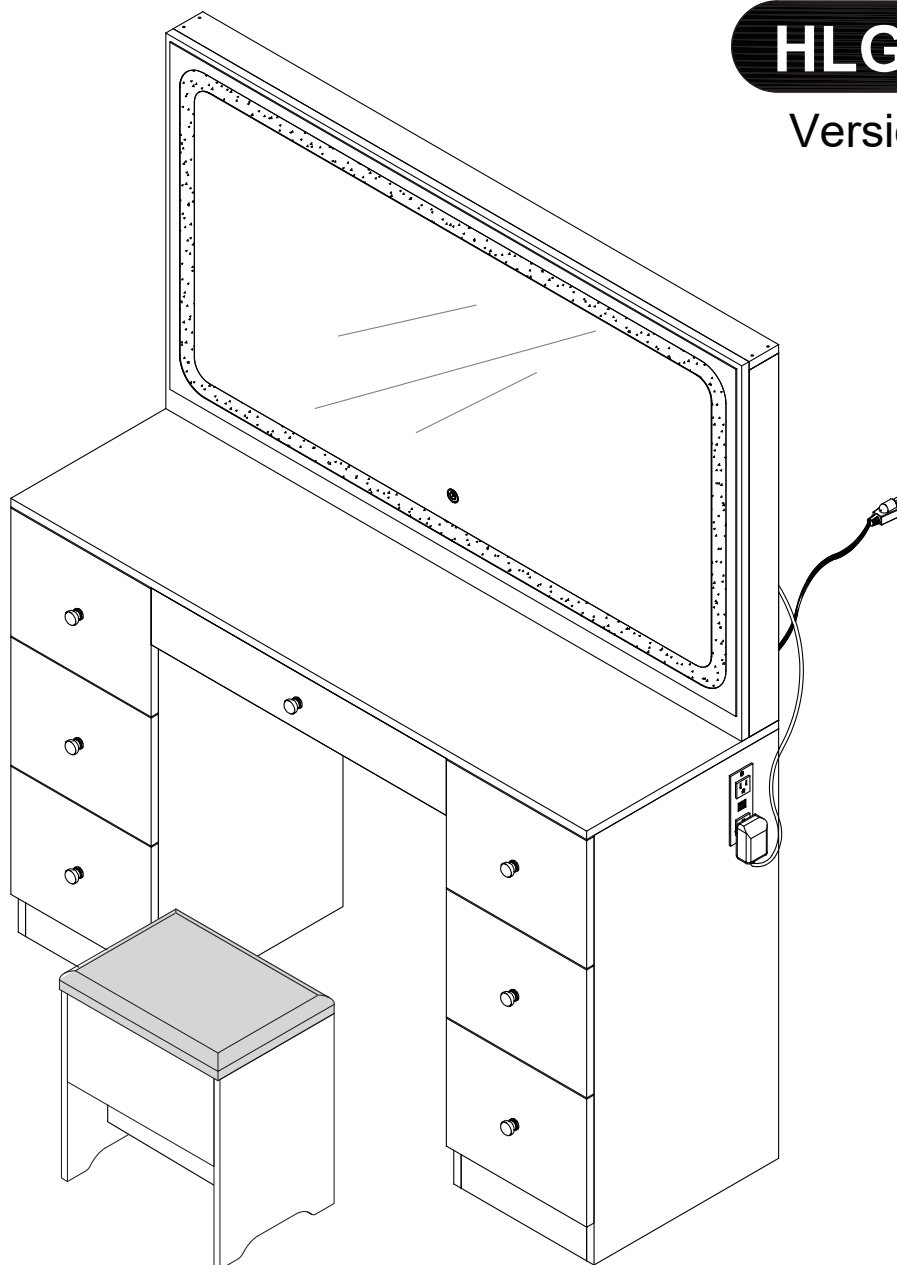
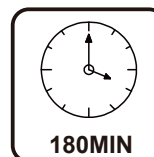


HLG162


Version:1.0

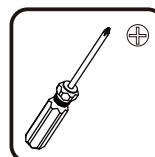


IT IS RECOMMENDED
TO USE POWER TOOLS

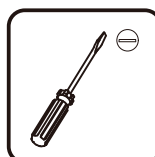


180MIN

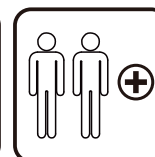


EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

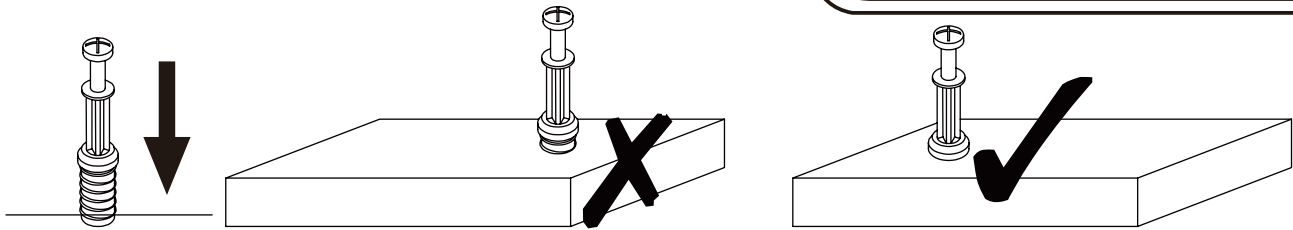


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

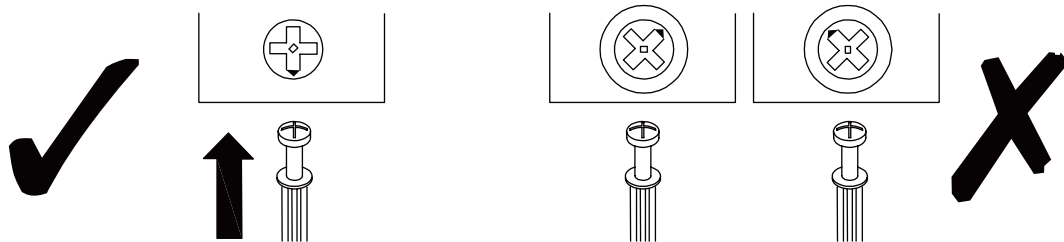







EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.









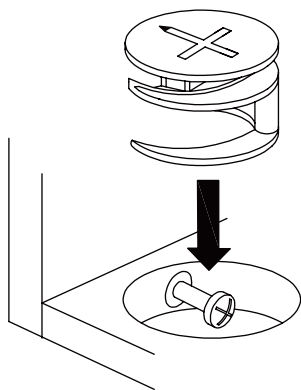












EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.


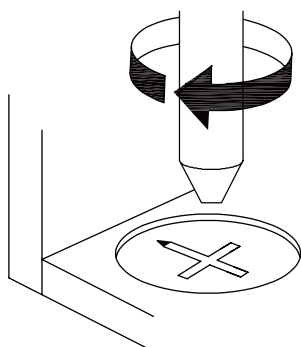



EN_Turn cam lock clockwise to tighten.

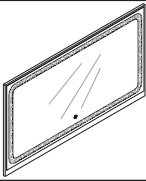

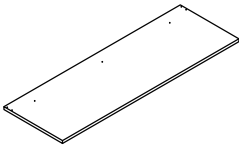
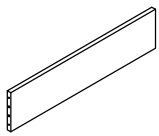
NO.	PARTS	QTY	SPARE
1		x1	
2		x1	
3		x1	
4		x1	
5		x1	
6		x1	
7		x1	
8		x1	
9		x1	
10		x1	

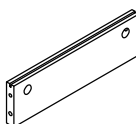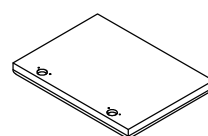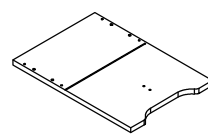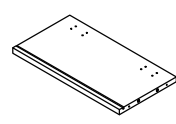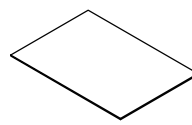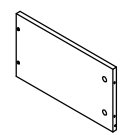
NO.	PARTS	QTY	SPARE
11		x4	
12		x2	
13		x1	
14		x1	
15		x1	
16		x2	
17		x1	
18		x1	
19		x1	
20		x6	

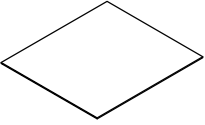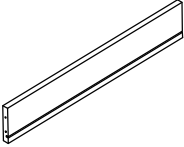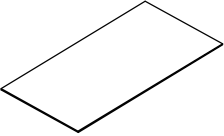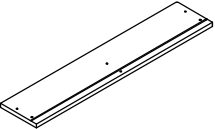NO.	PARTS	QTY	SPARE
21		x6	
22		x6	
23		x6	
24		x6	
25		x1	
26		x1	
27		x1	
28		x1	
29		x1	
30		x1	

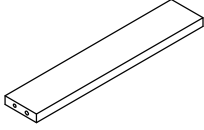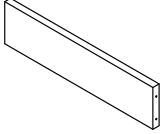
NO.	PARTS	QTY	SPARE
31		x1	
32		x1	
	 Hardware Kit	x1	


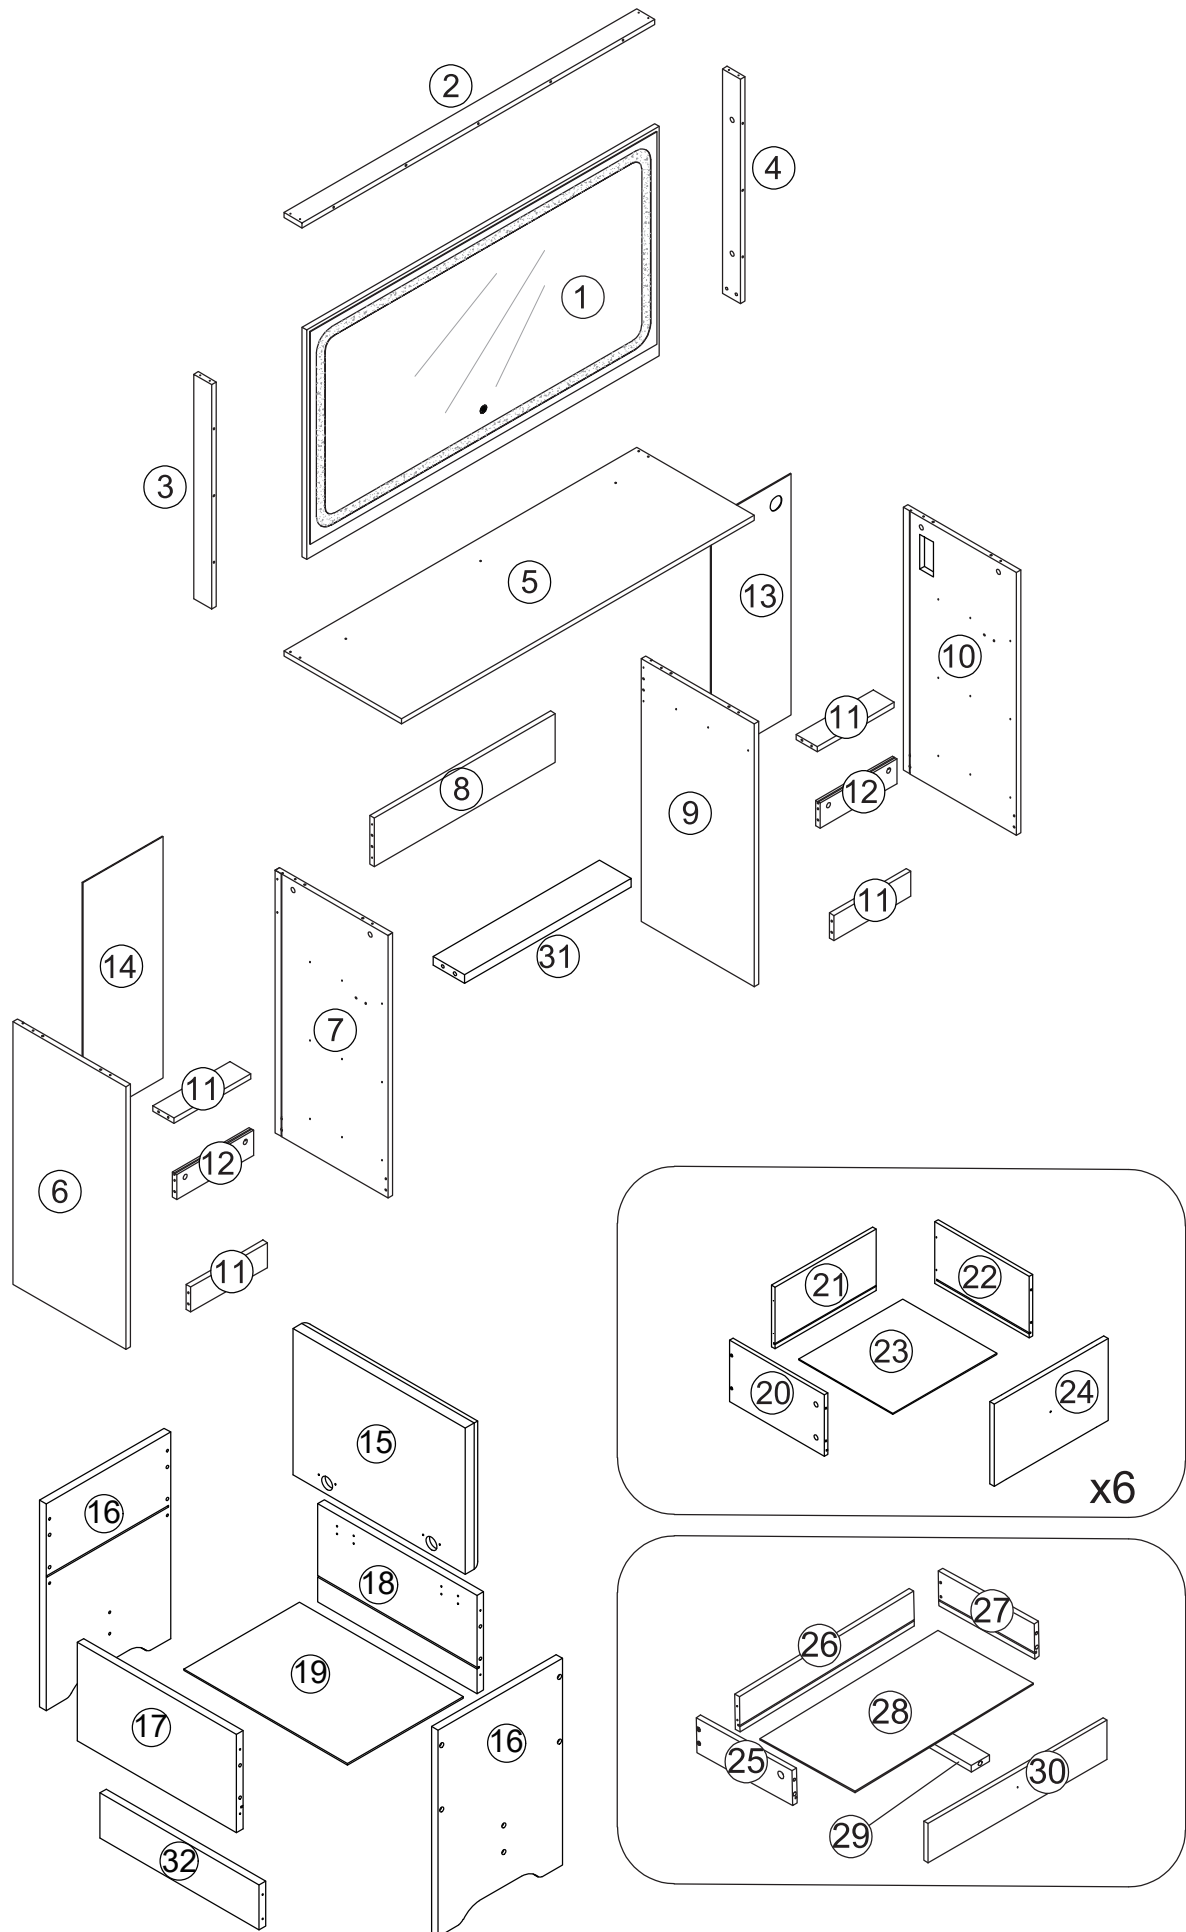




A	x56 +2(spares)	B	x56 +2(spares)	C	x38 +2(spares)	D	x55 +2(spares)	E	x84 +2(spares)	F	x7
											
6x35mm		15x10mm		6x30mm		4x35mm		3x12mm		6x50mm	
G	x7	H	x7	I	x2	J	x2	K	x8	L	x1
								 K-1	 K-2		
						4x14mm		3x16mm			
M	x1	N	x2	O	x2	P	x12	Q	x2	R	x7
											
		6x30mm						3.5x12mm			
S	x1	T	x1	U	x12	CL	x6	CR	x6	DL	x6
											
				15mm		L300mm		L300mm		L300mm	
DR	x6	CL	x1	CR	x1	DL	x1	DR	x1		
											
L300mm		L350mm		L350mm		L350mm		L350mm			



A	x7	S	x1
			



01


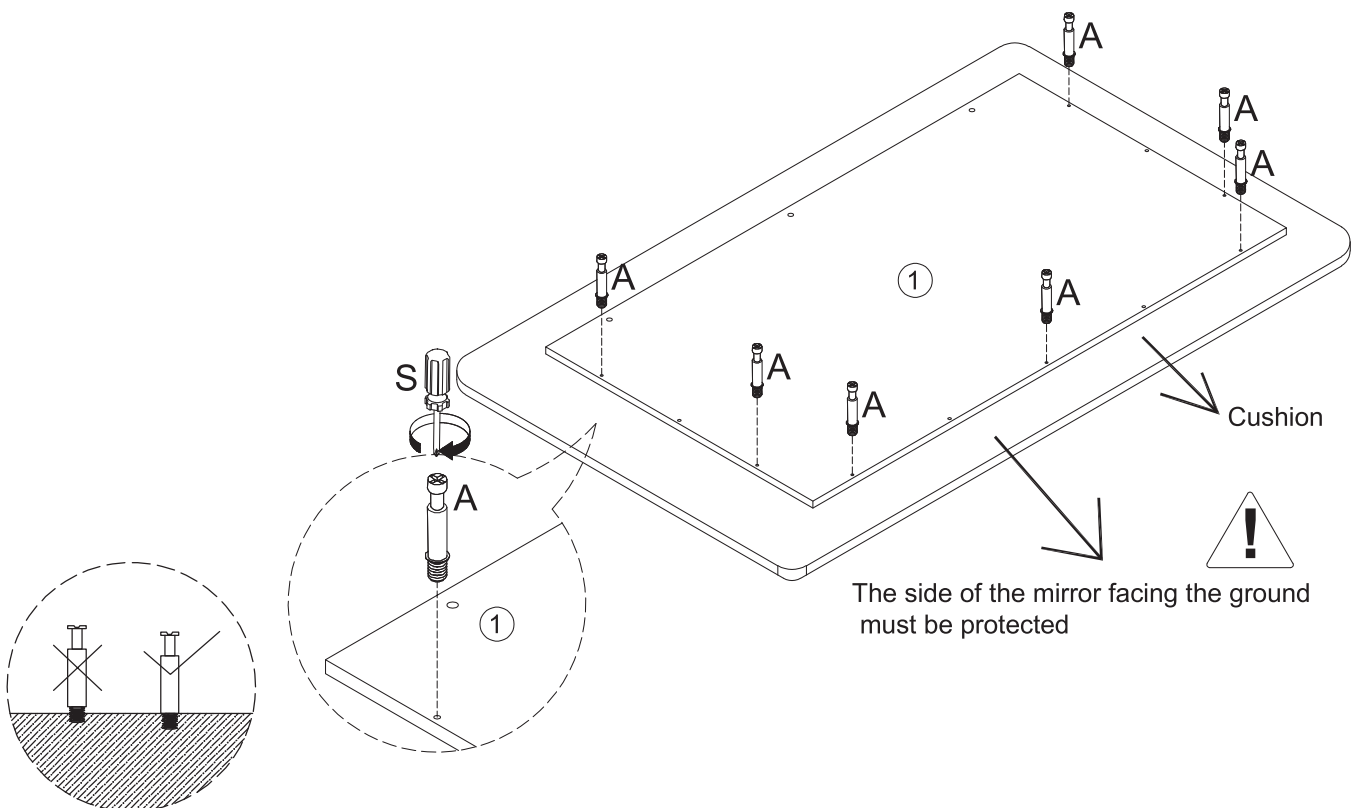


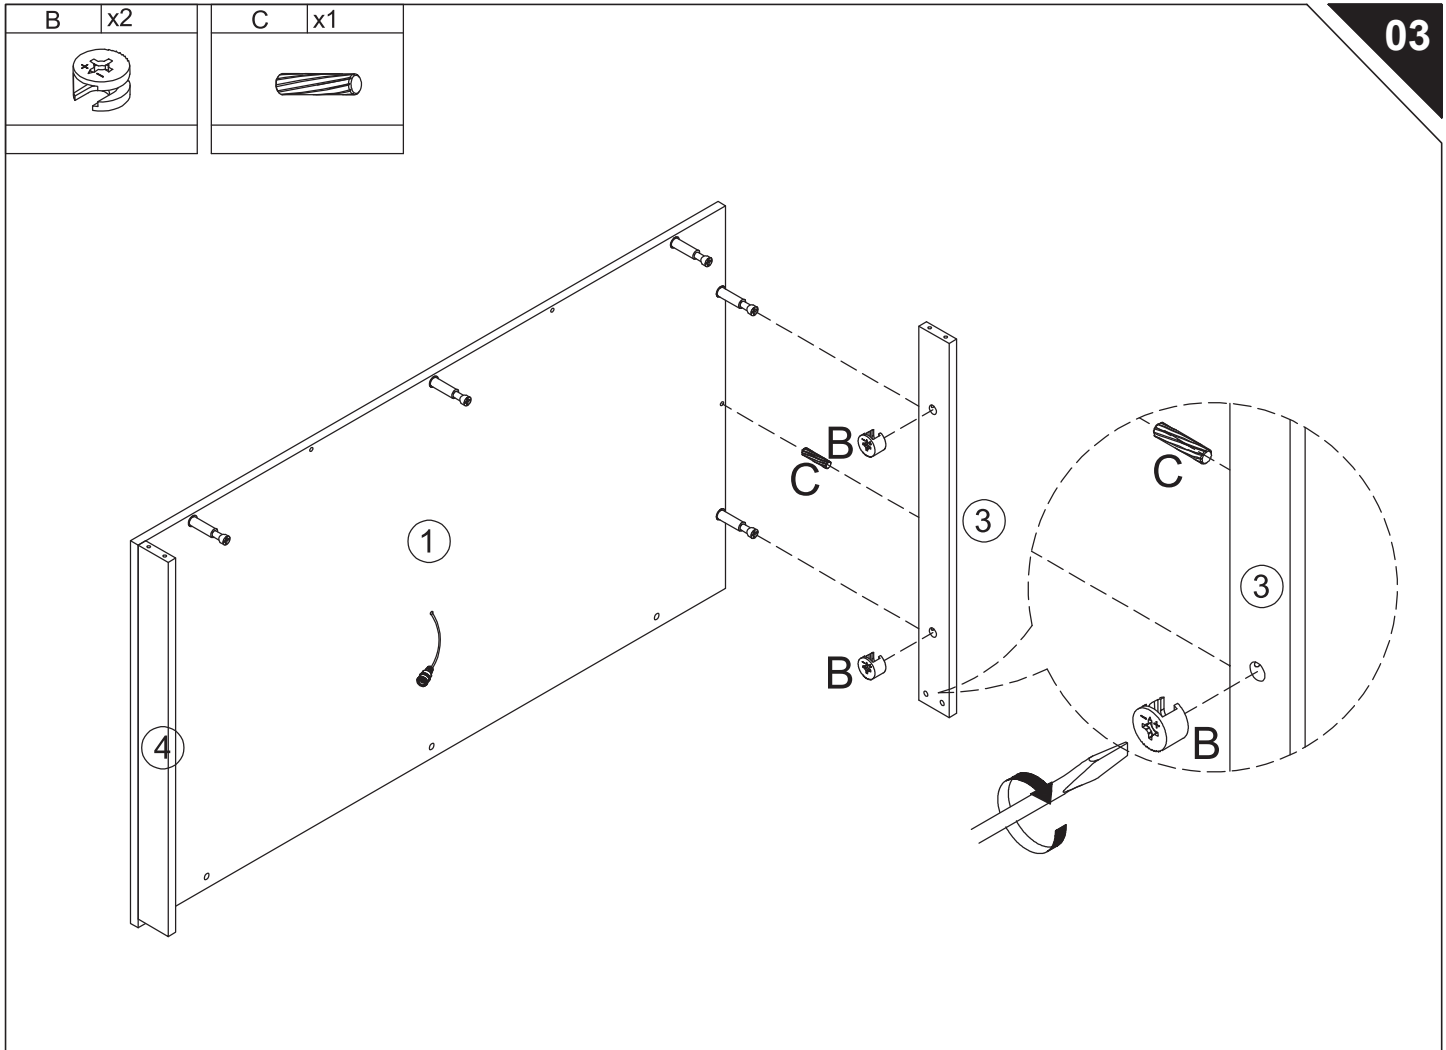
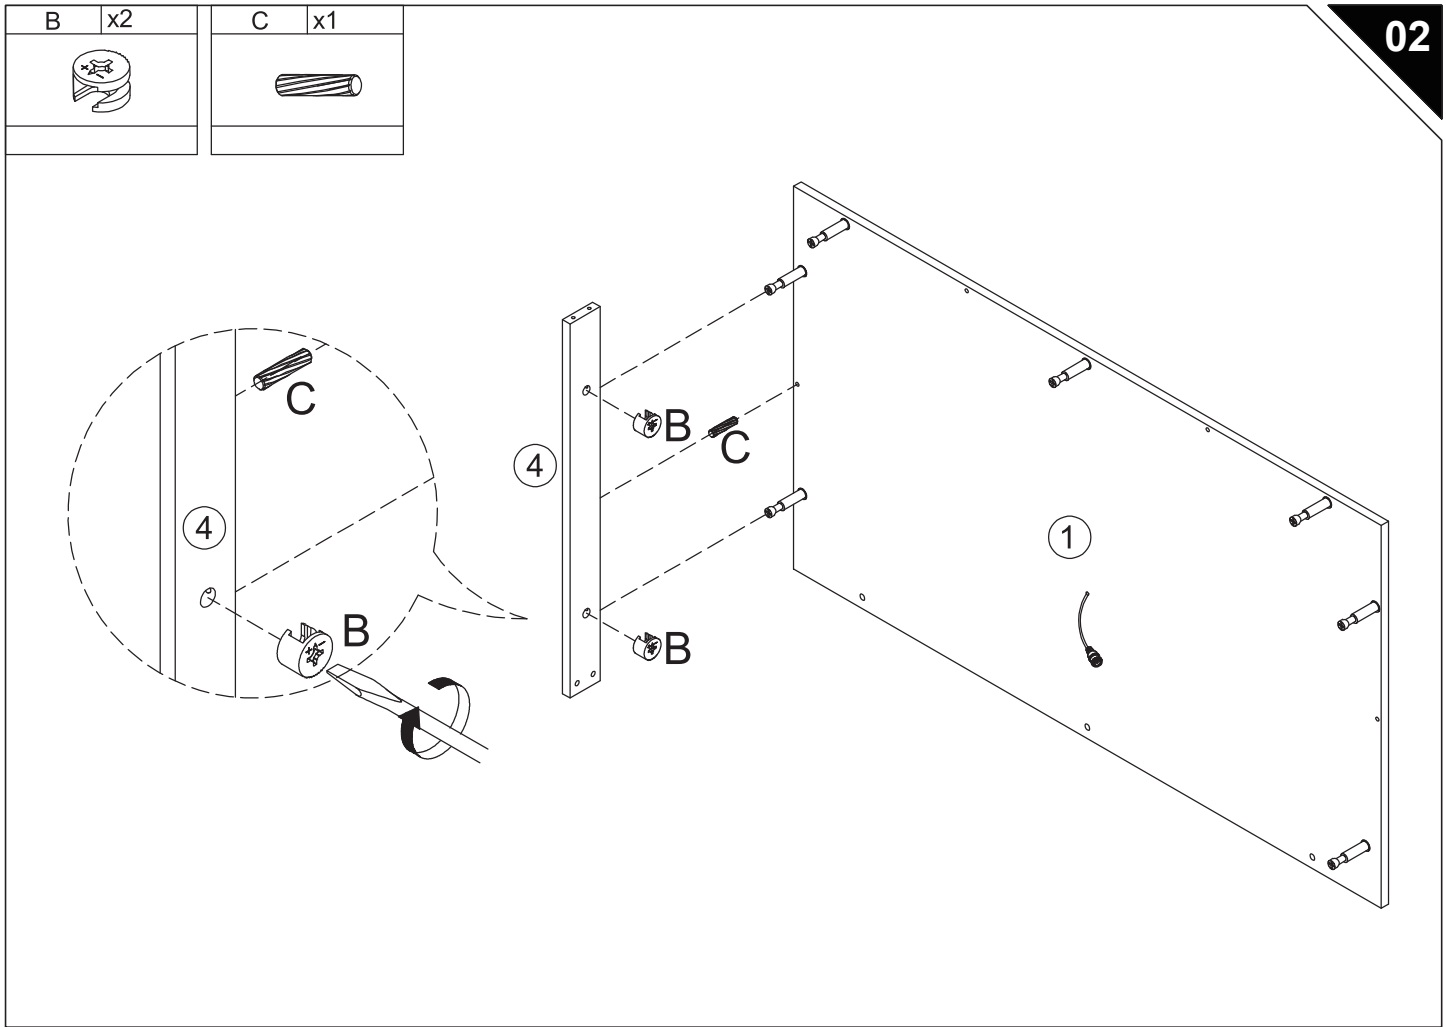


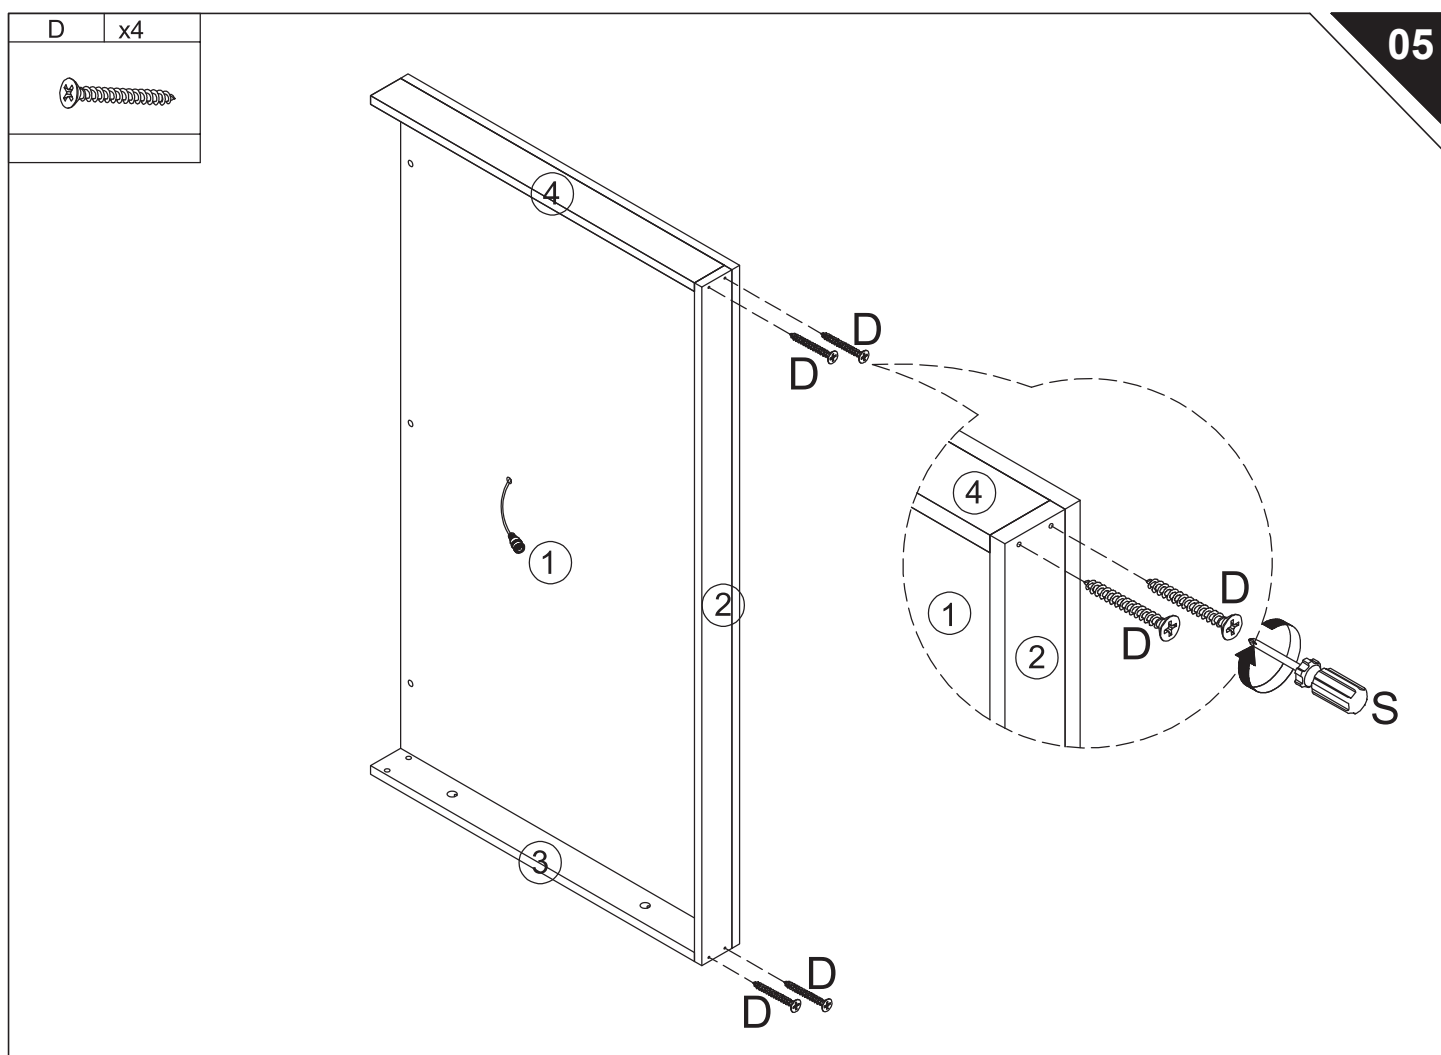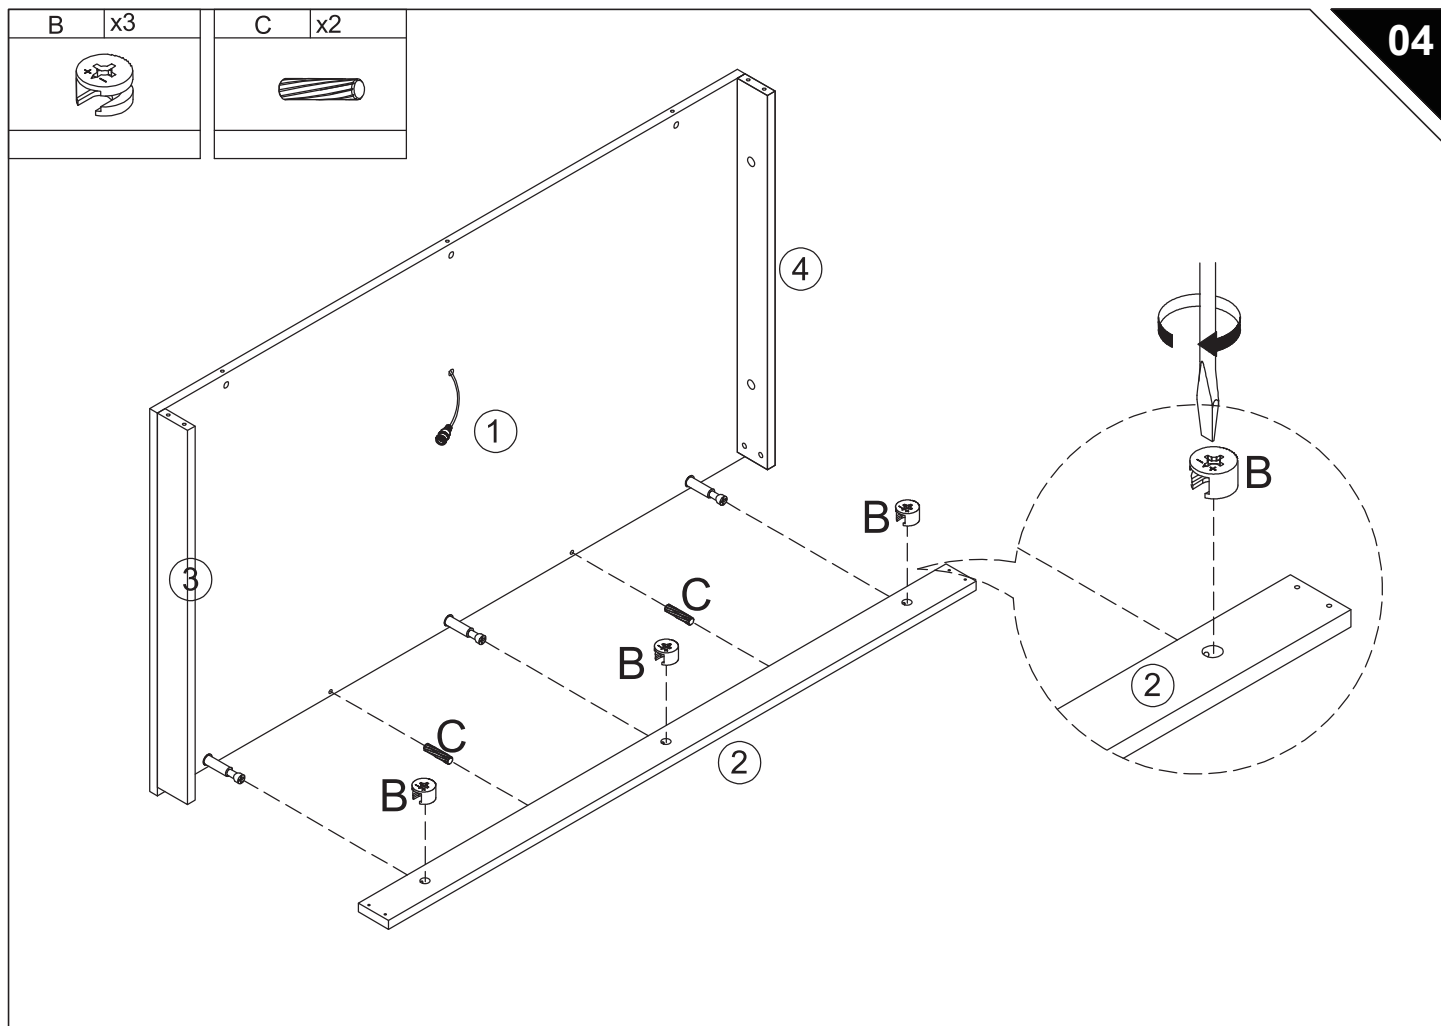


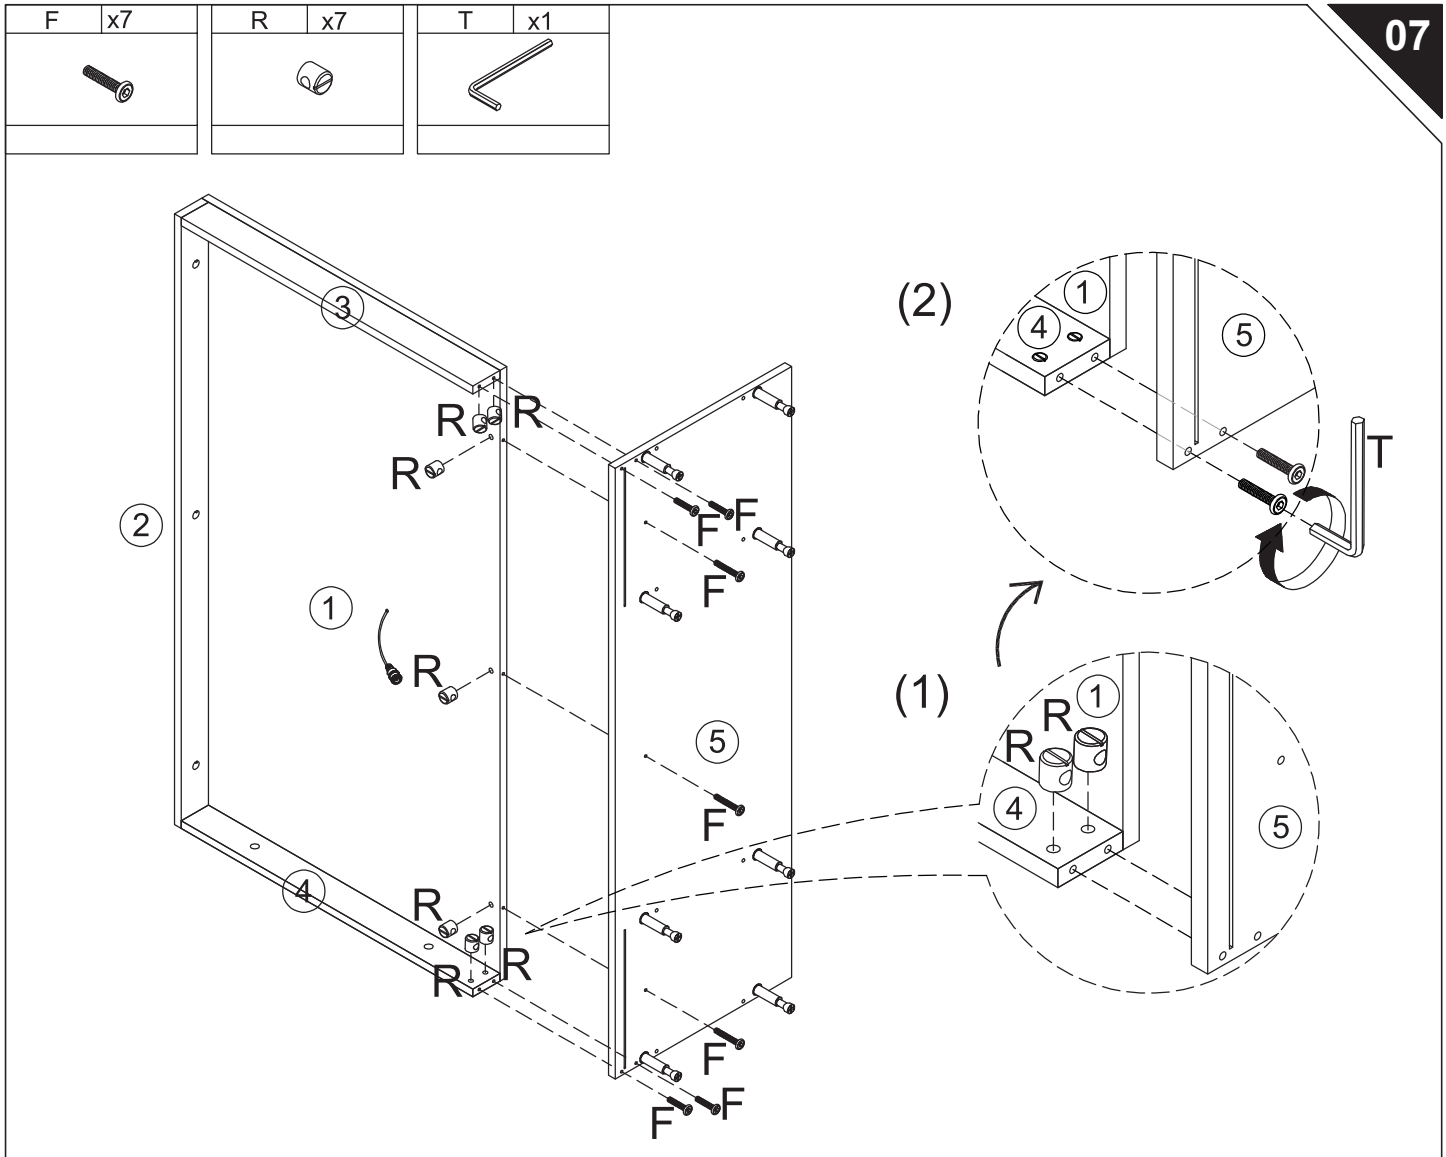
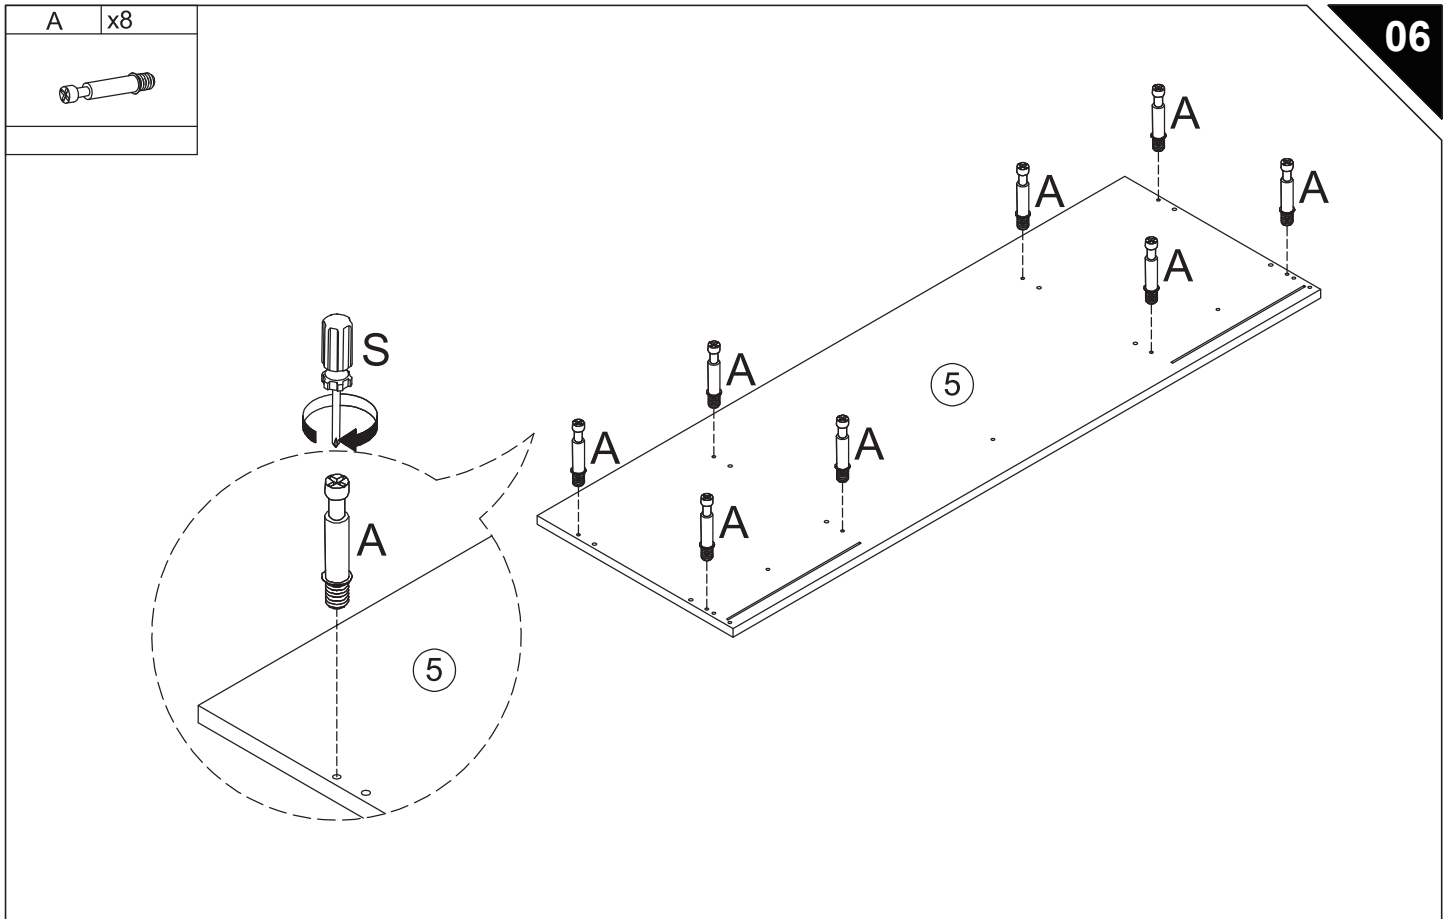


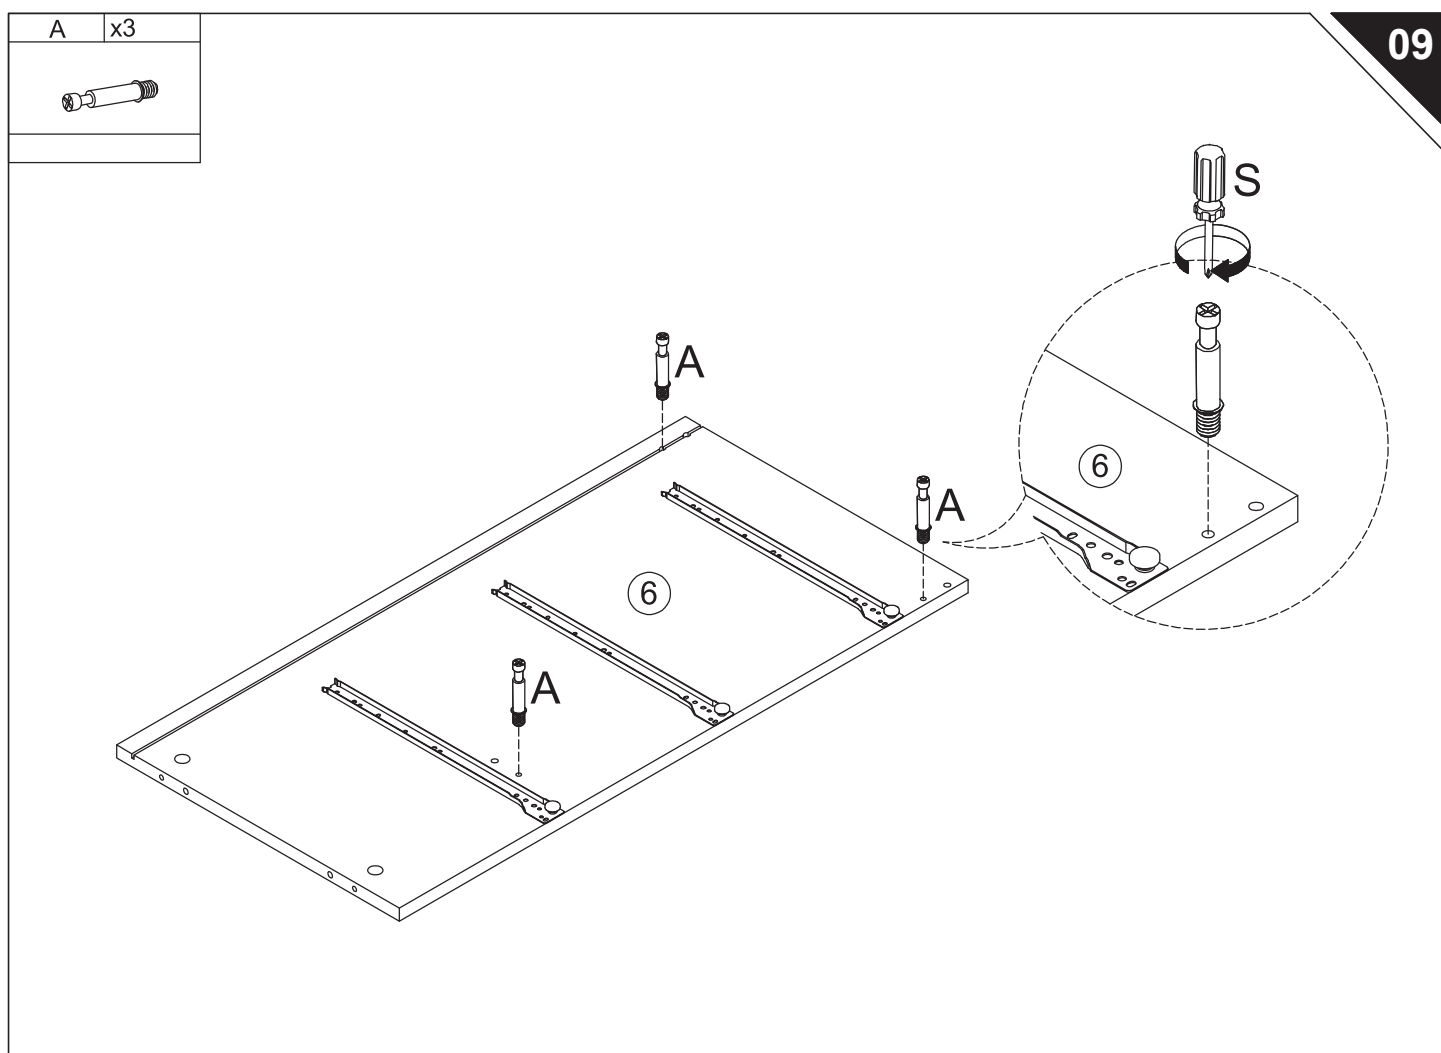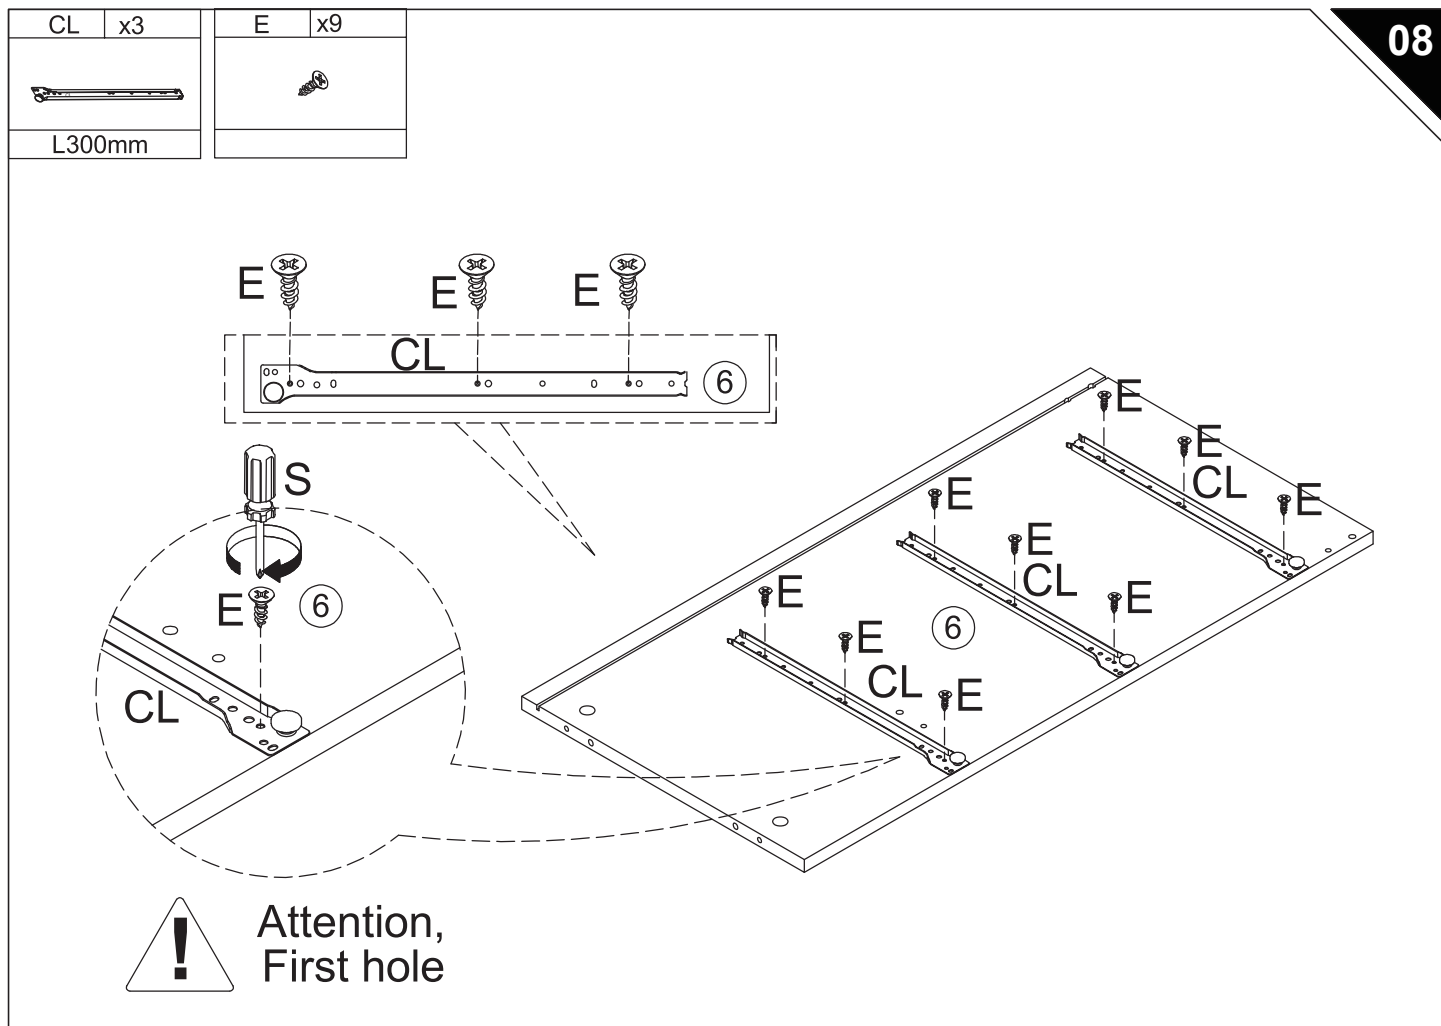

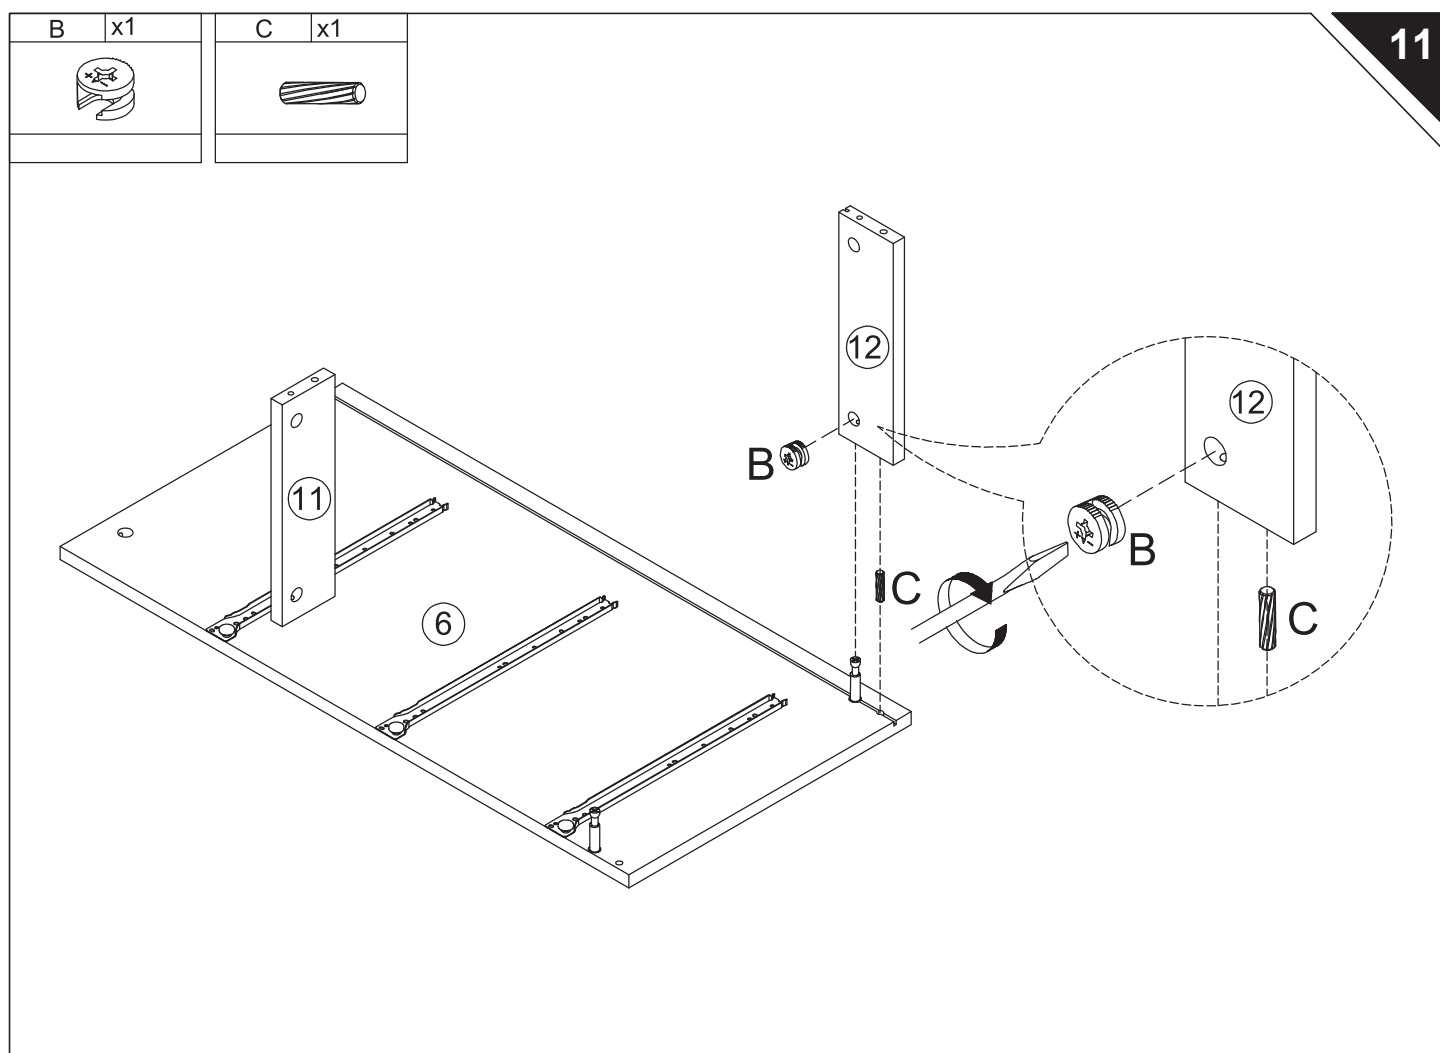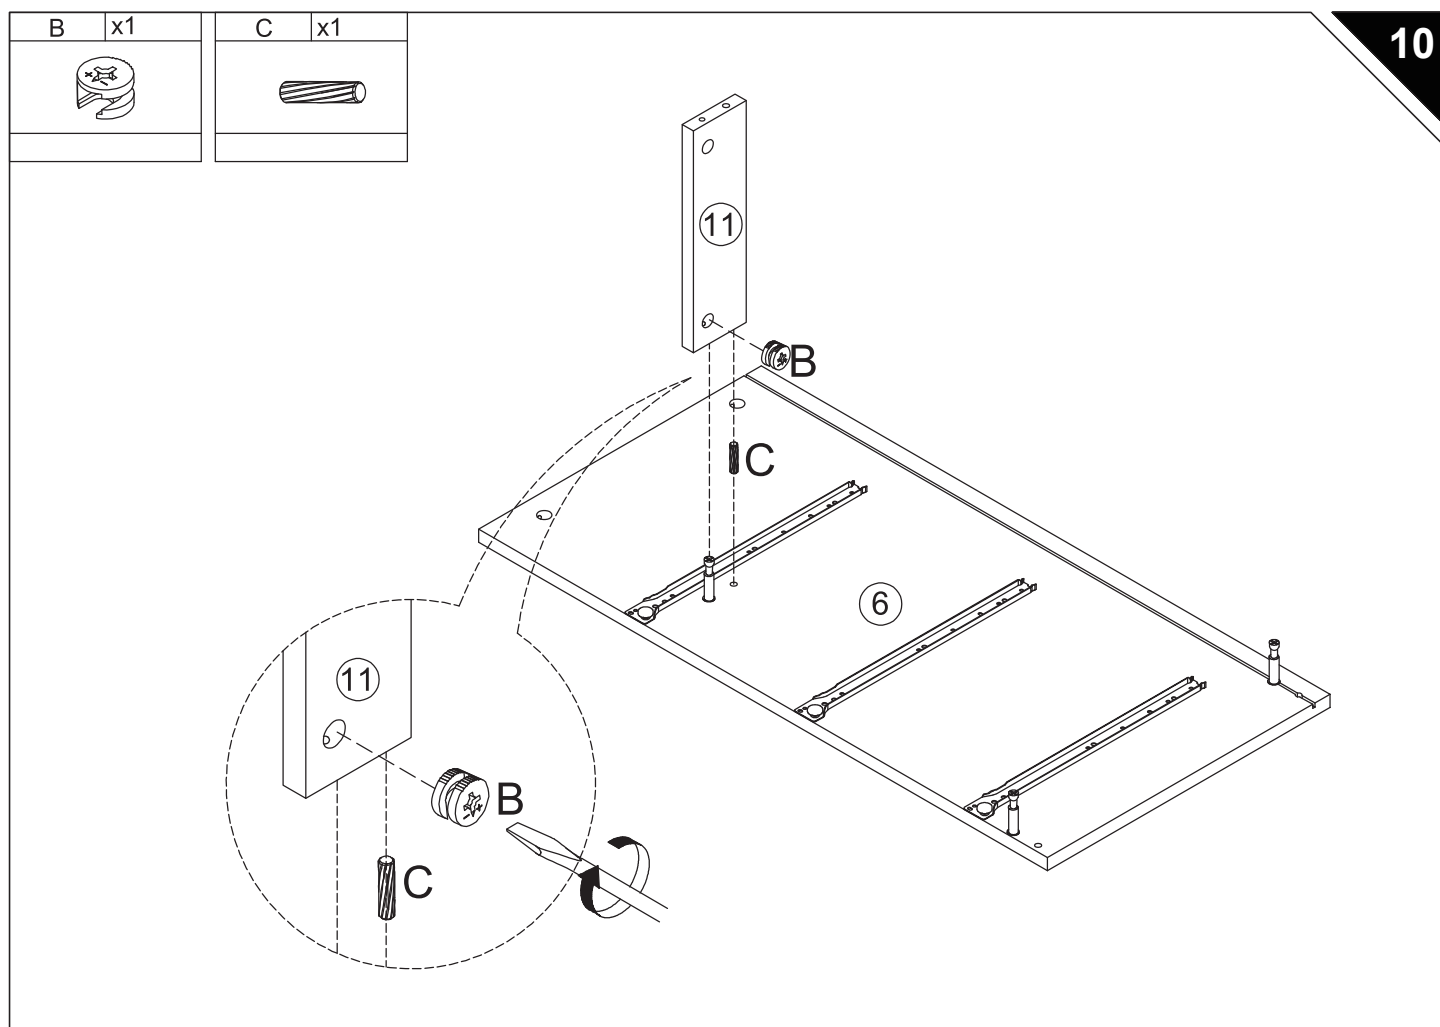


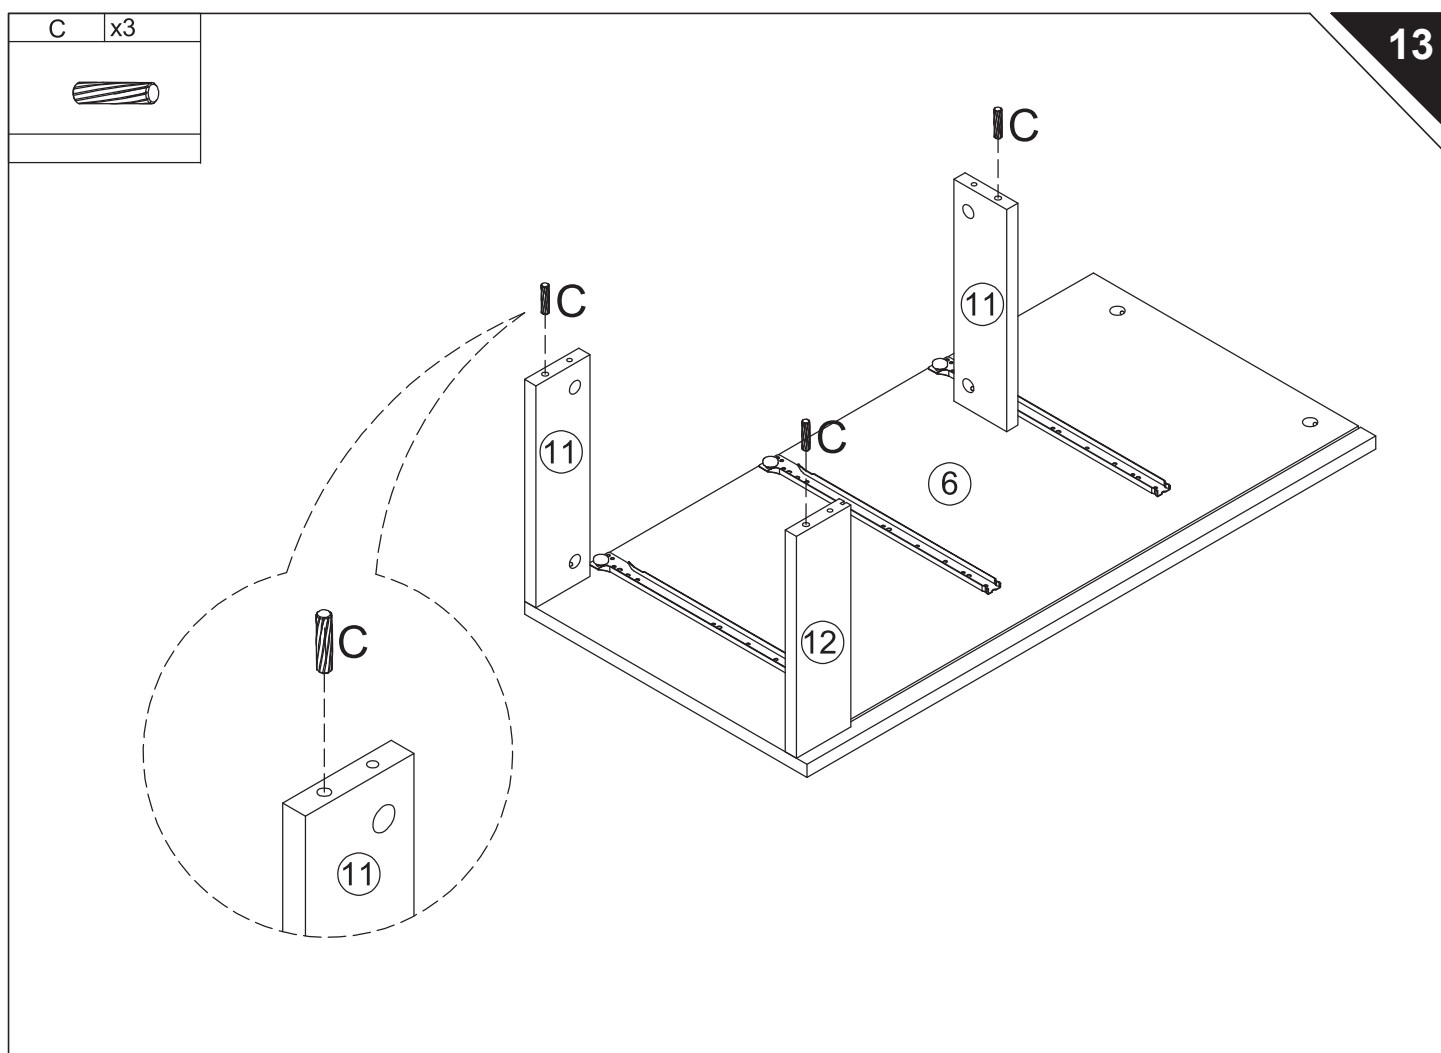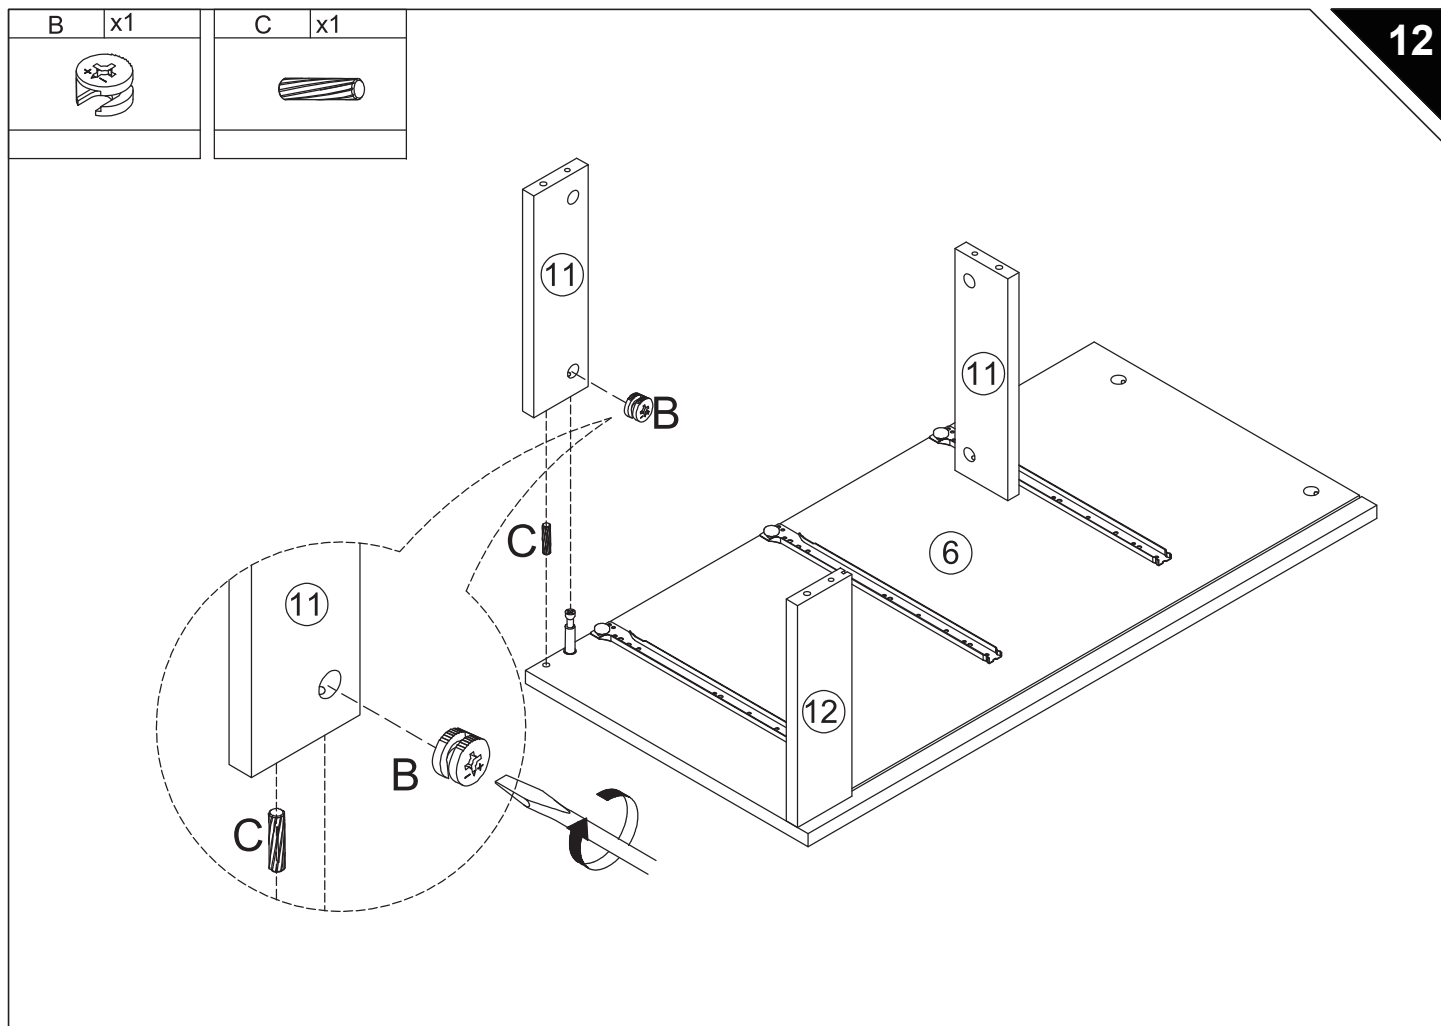


CL	x1	CR	x3	E	x12
					
L350mm		L300mm			

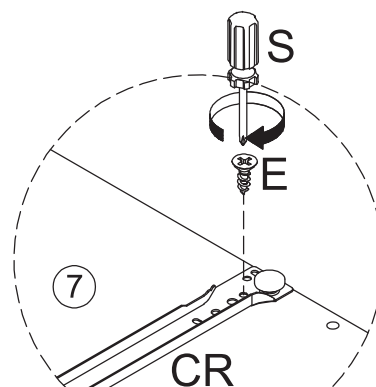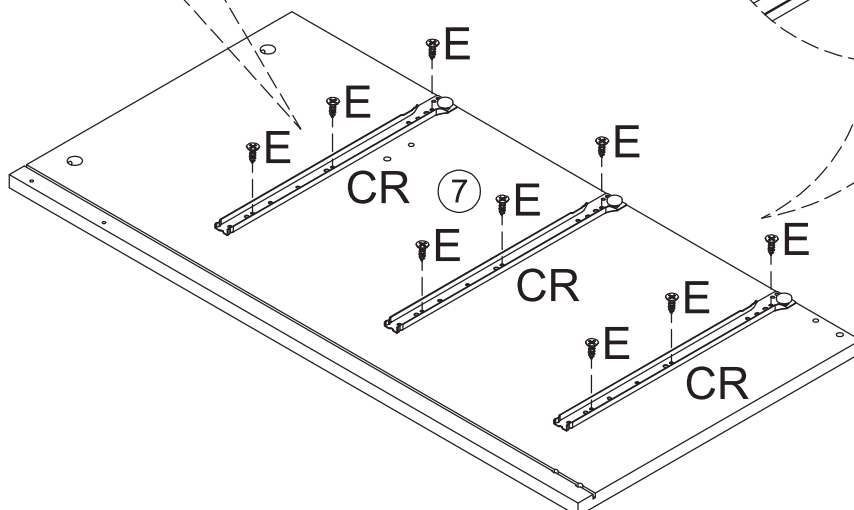
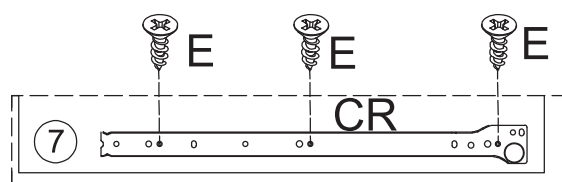




Panel 7 flipped to the other side


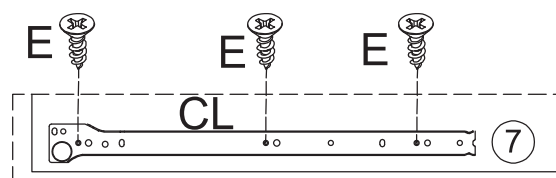




Attention,
First hole


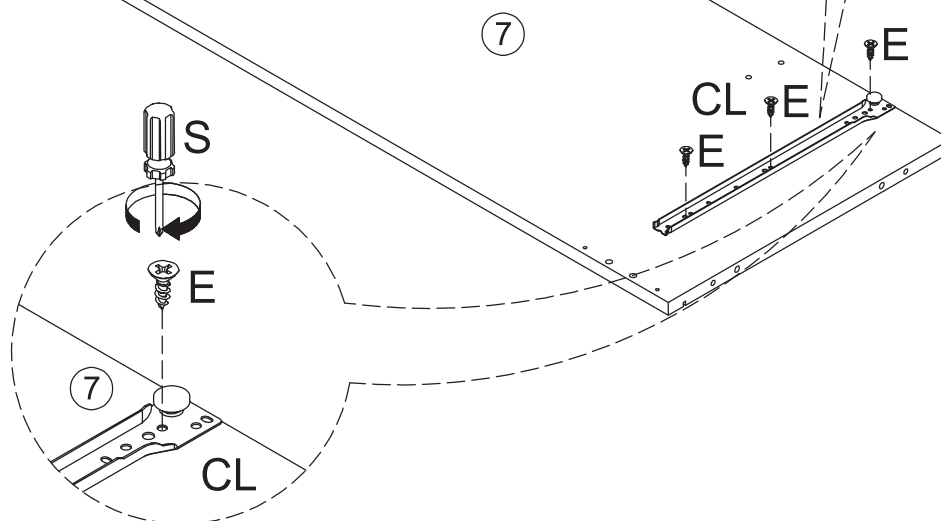


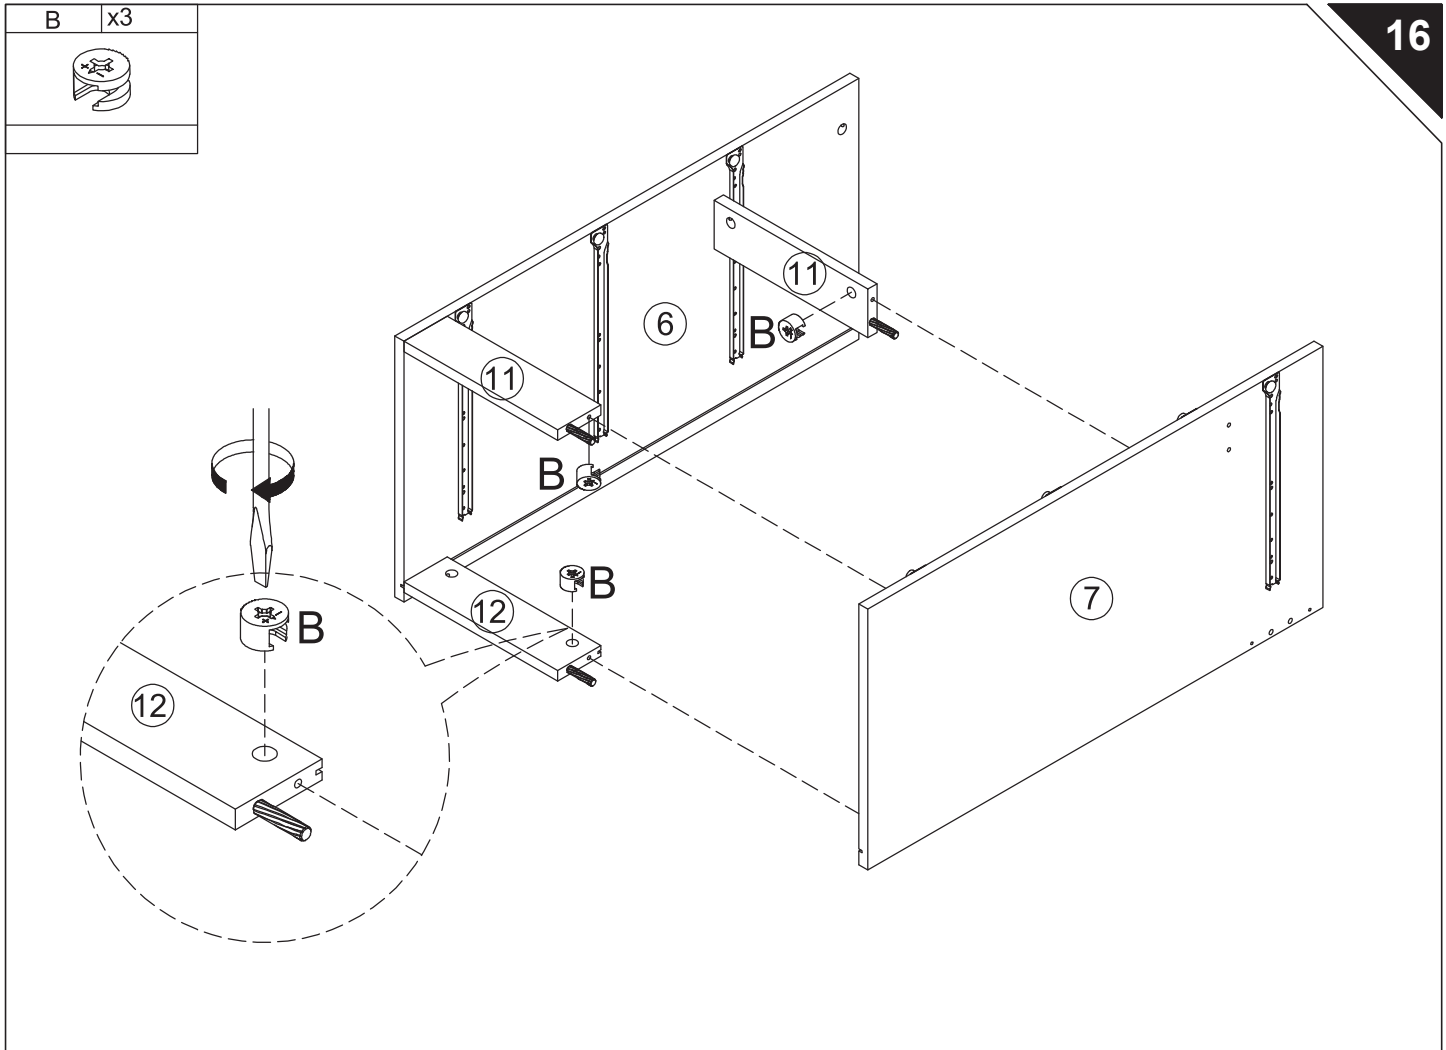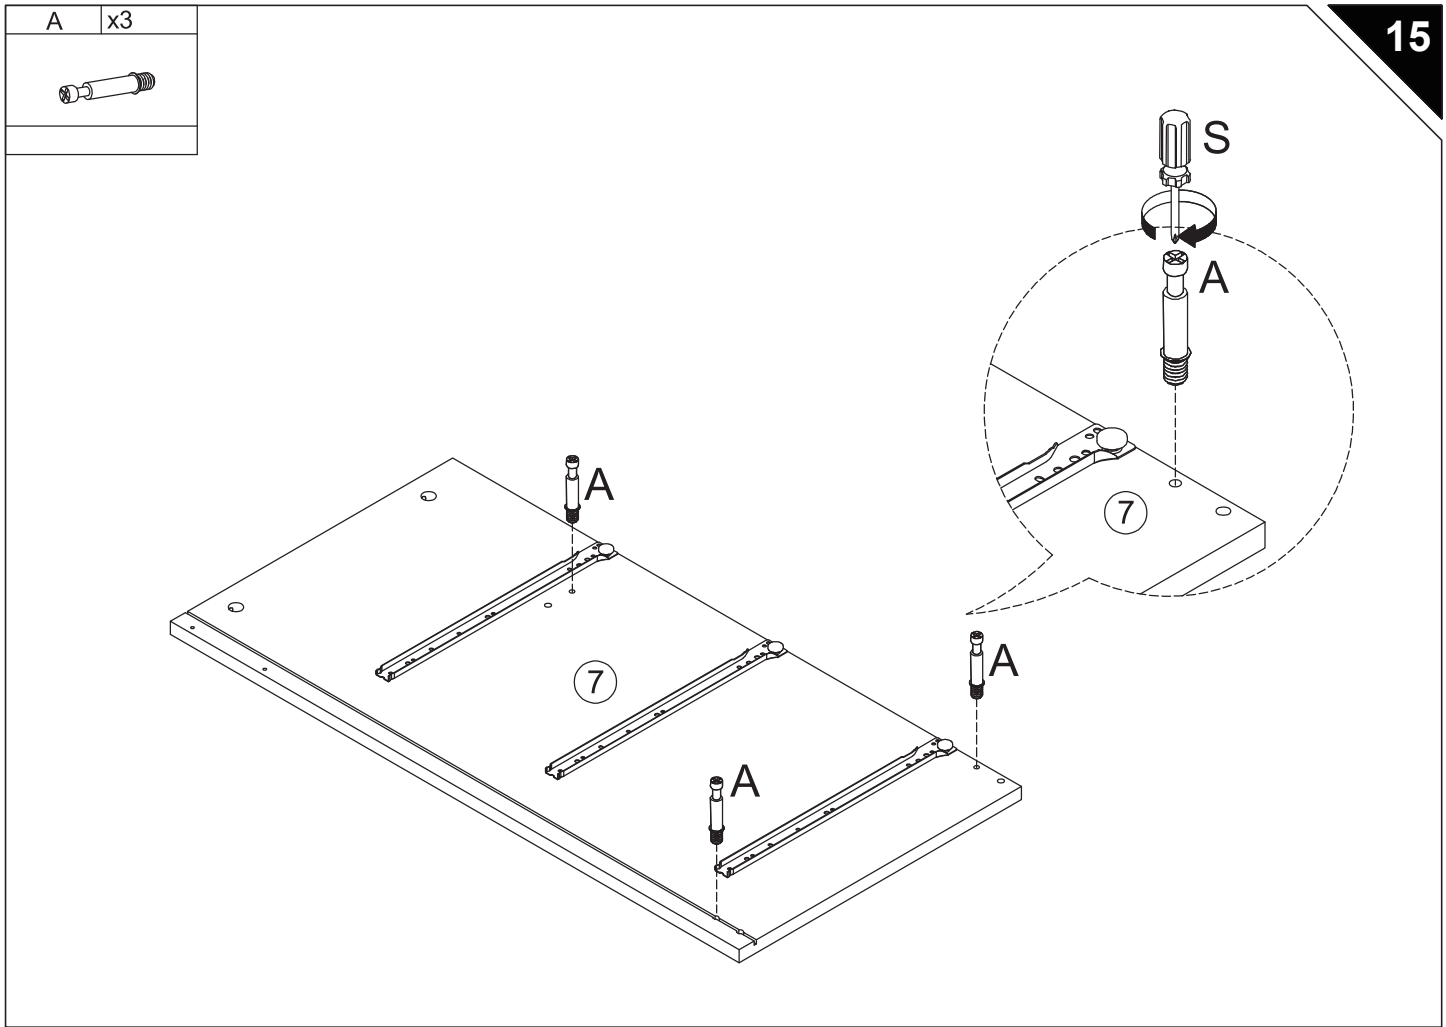

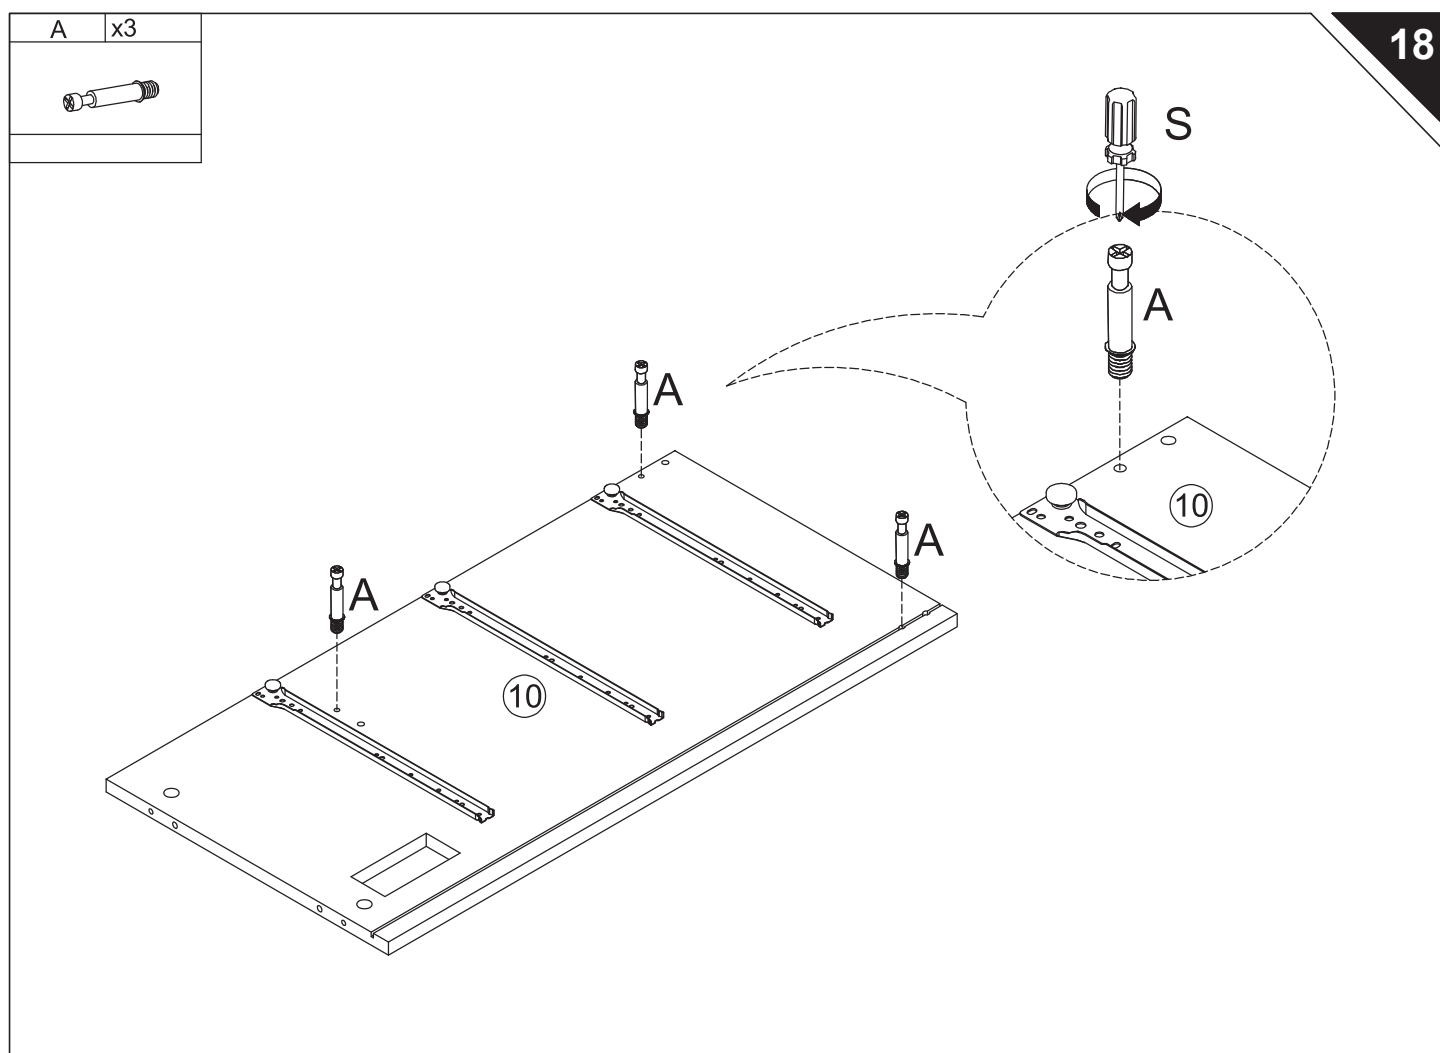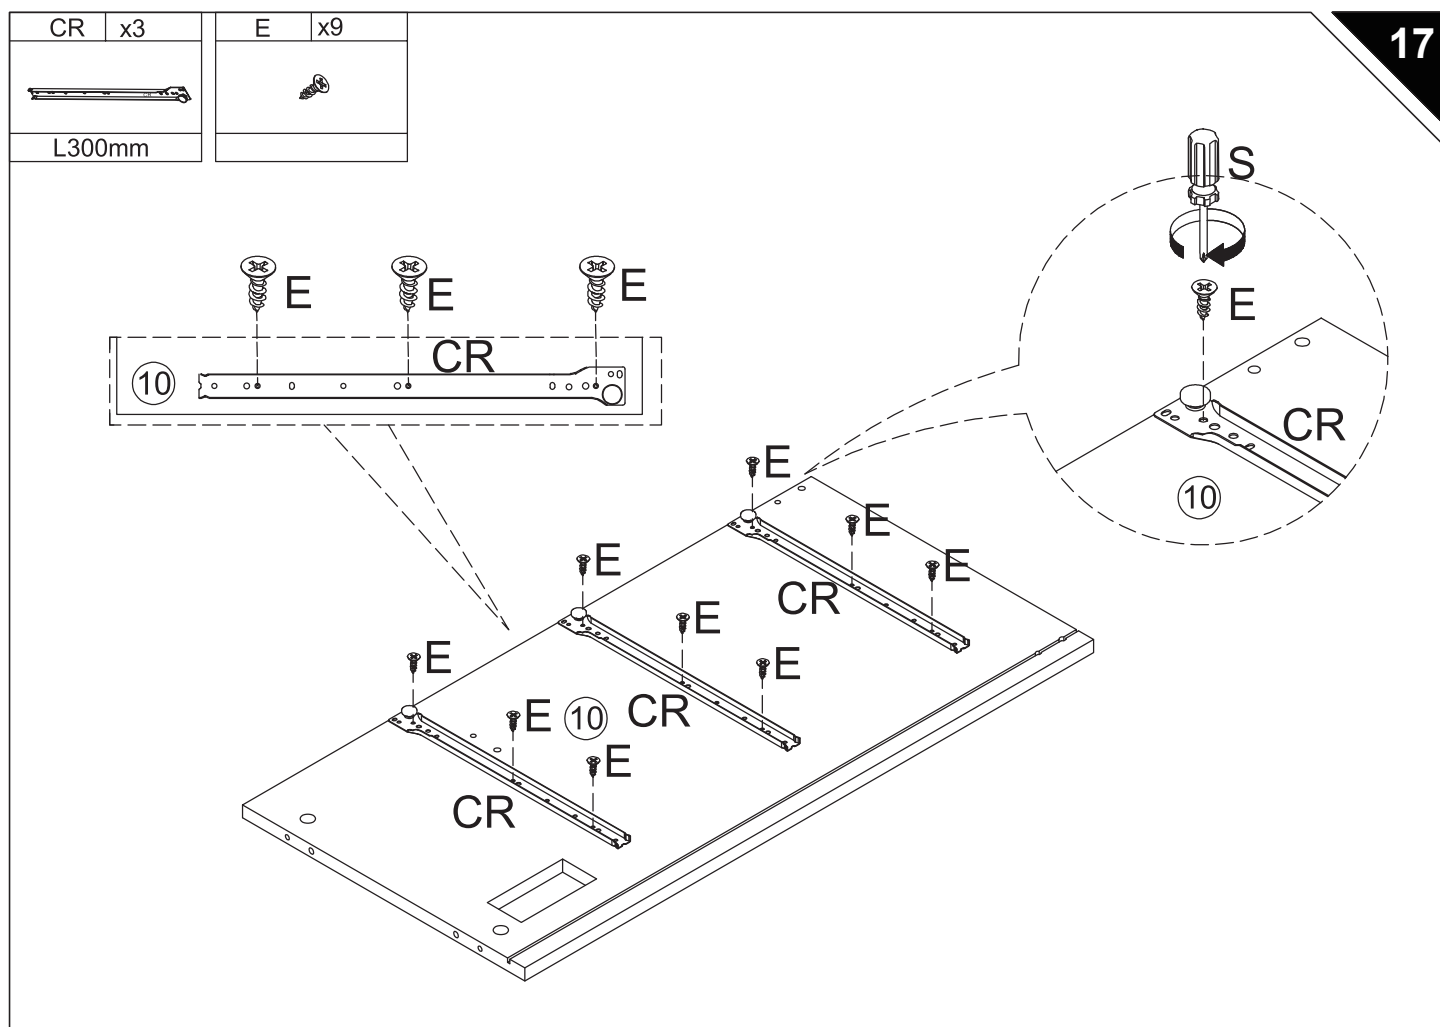


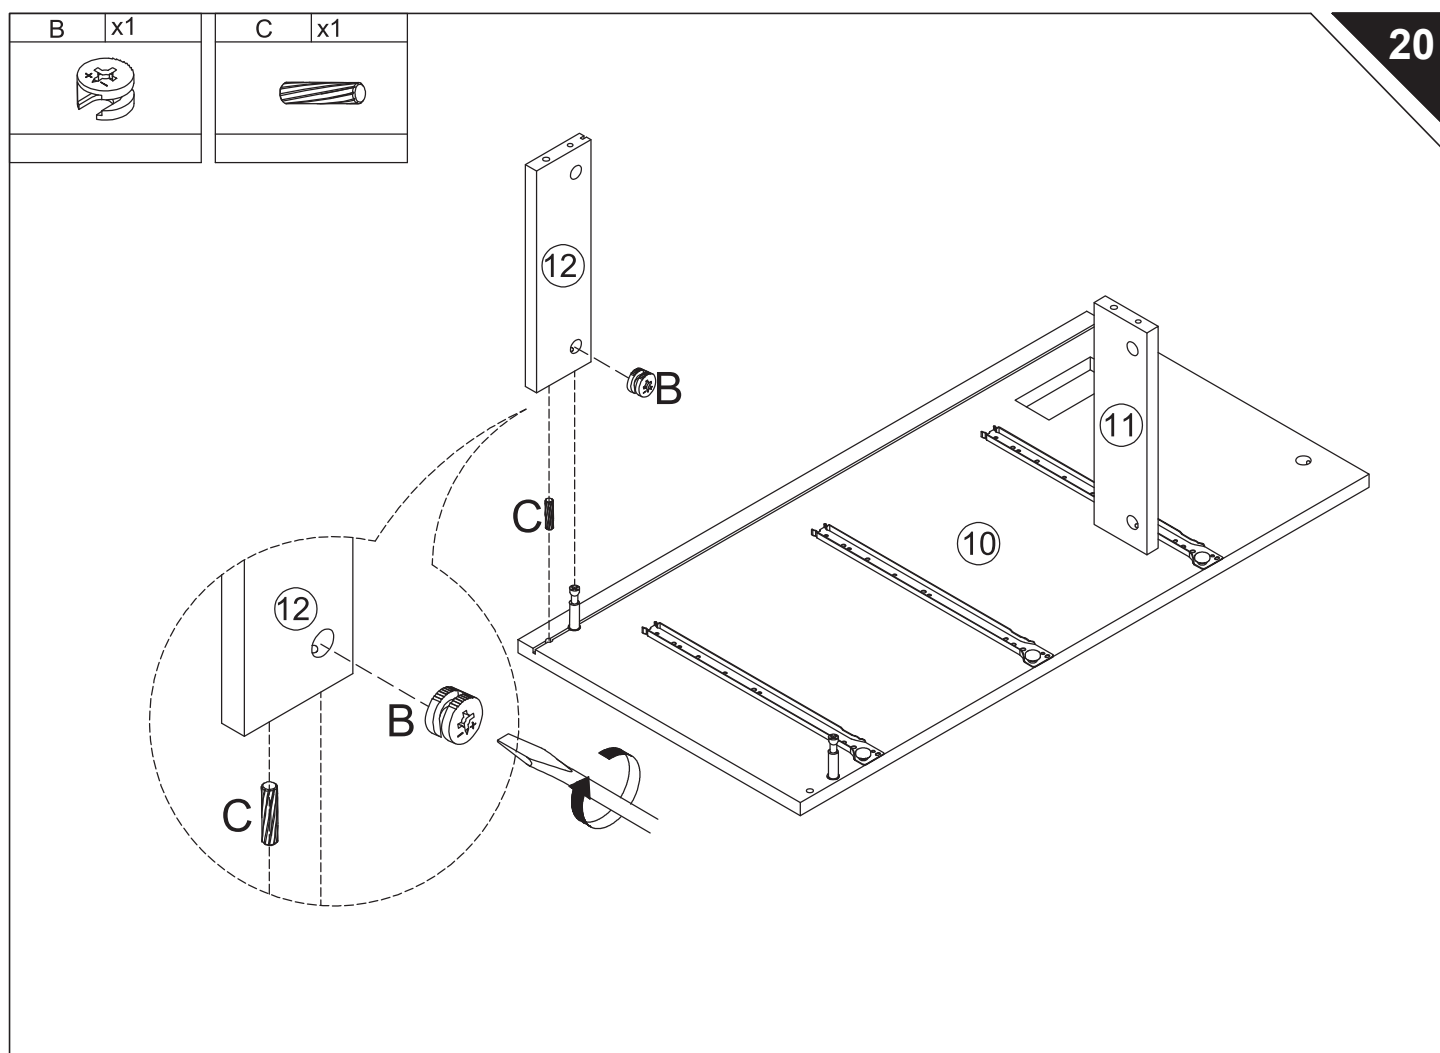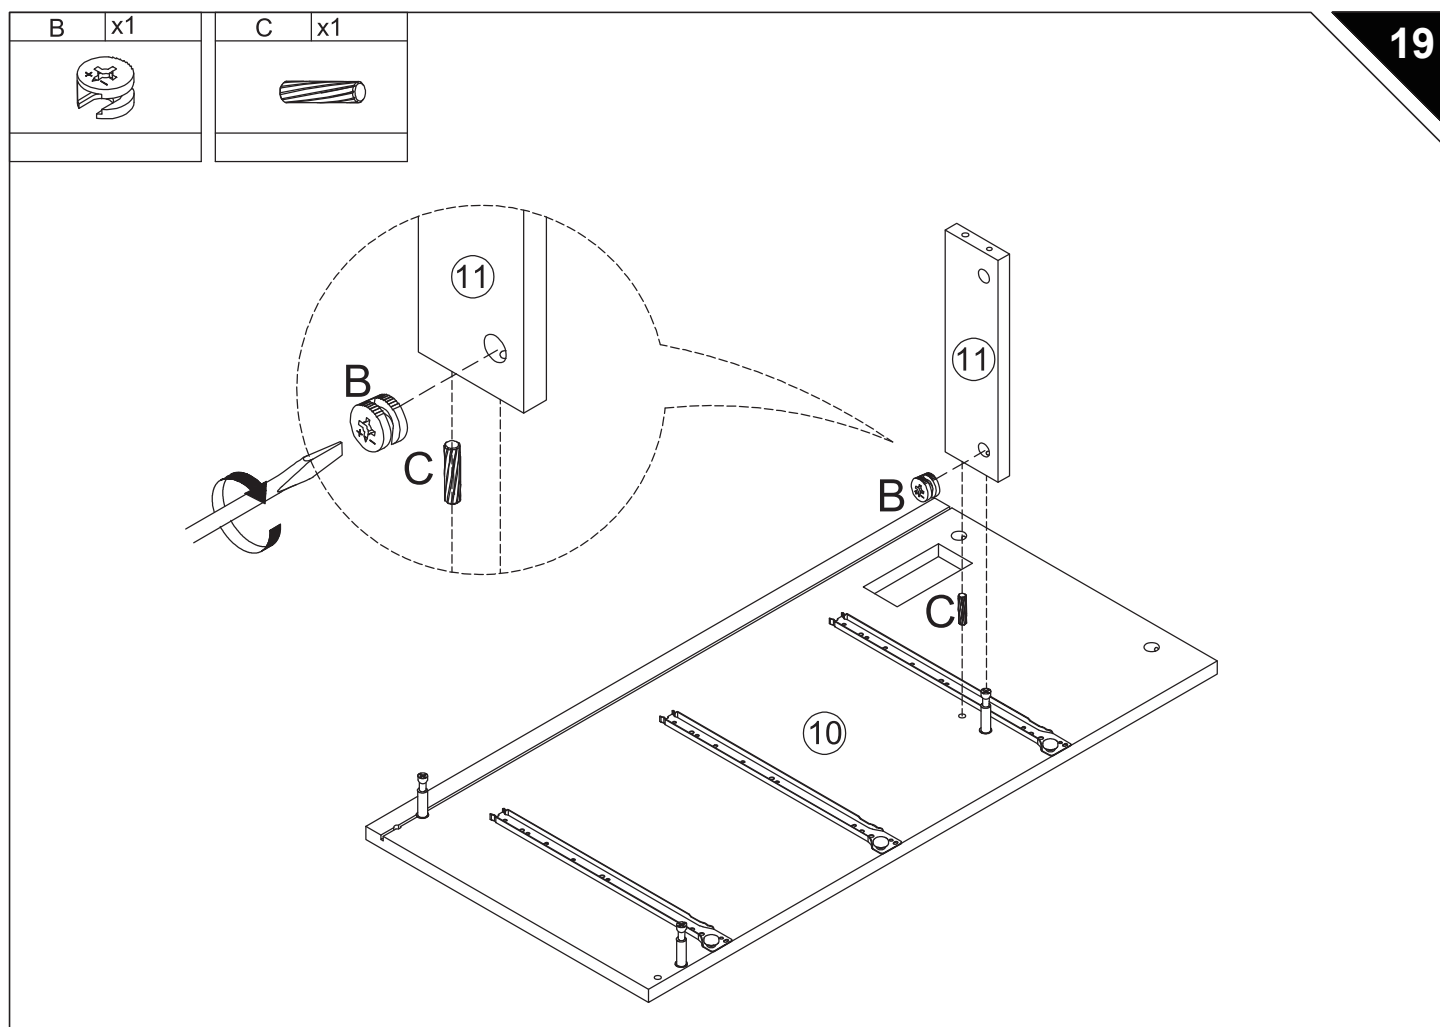

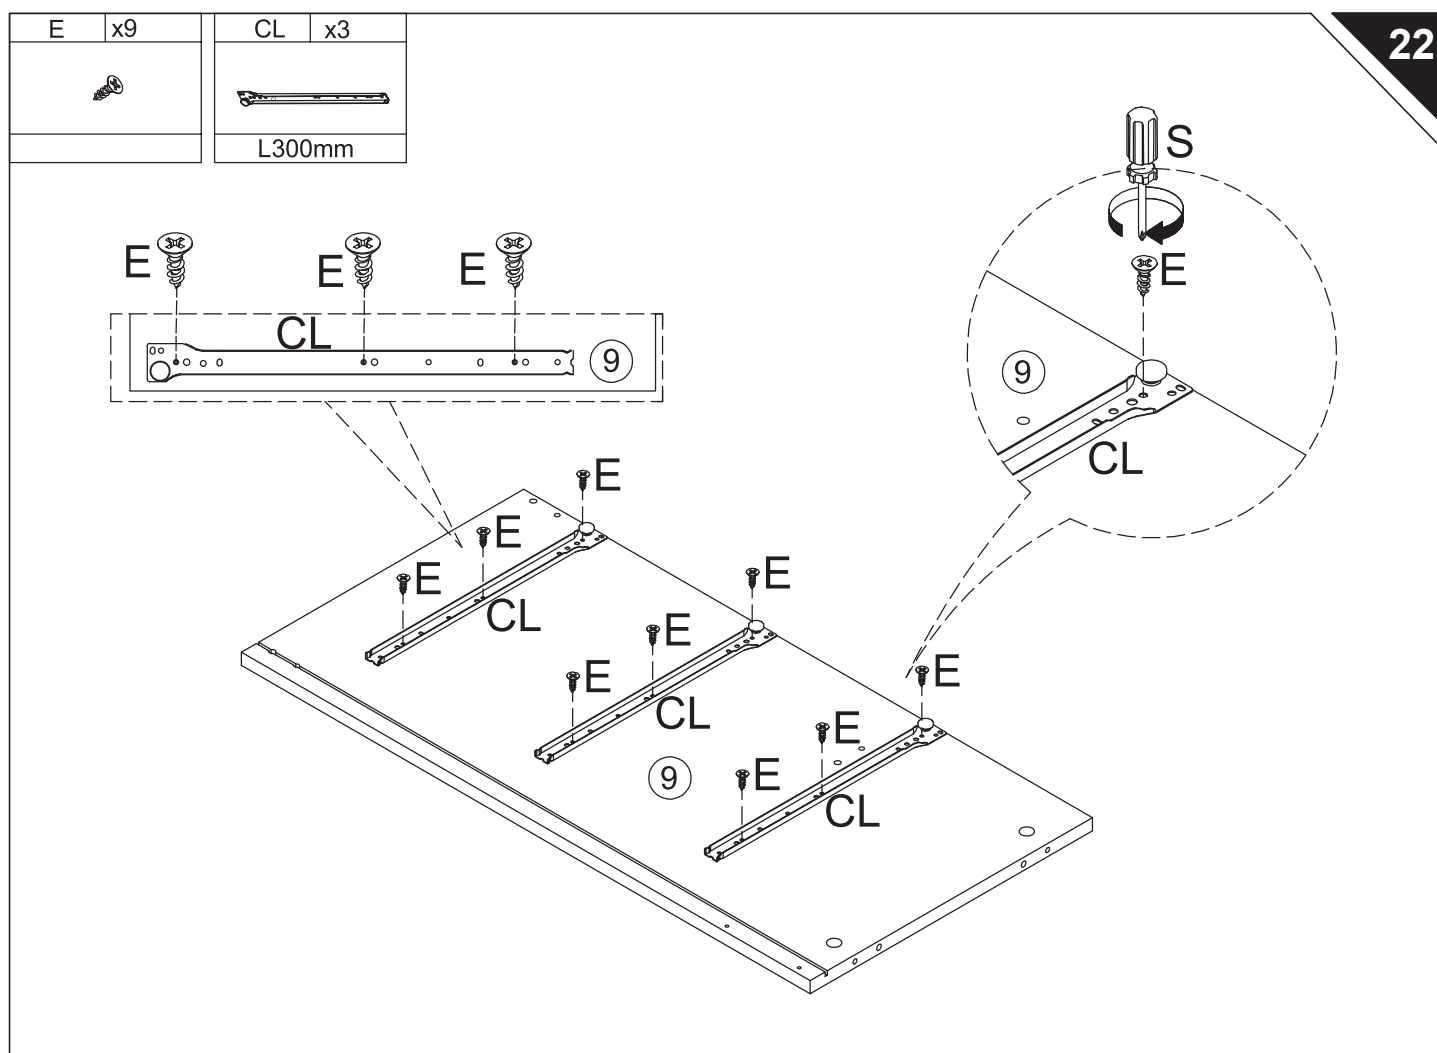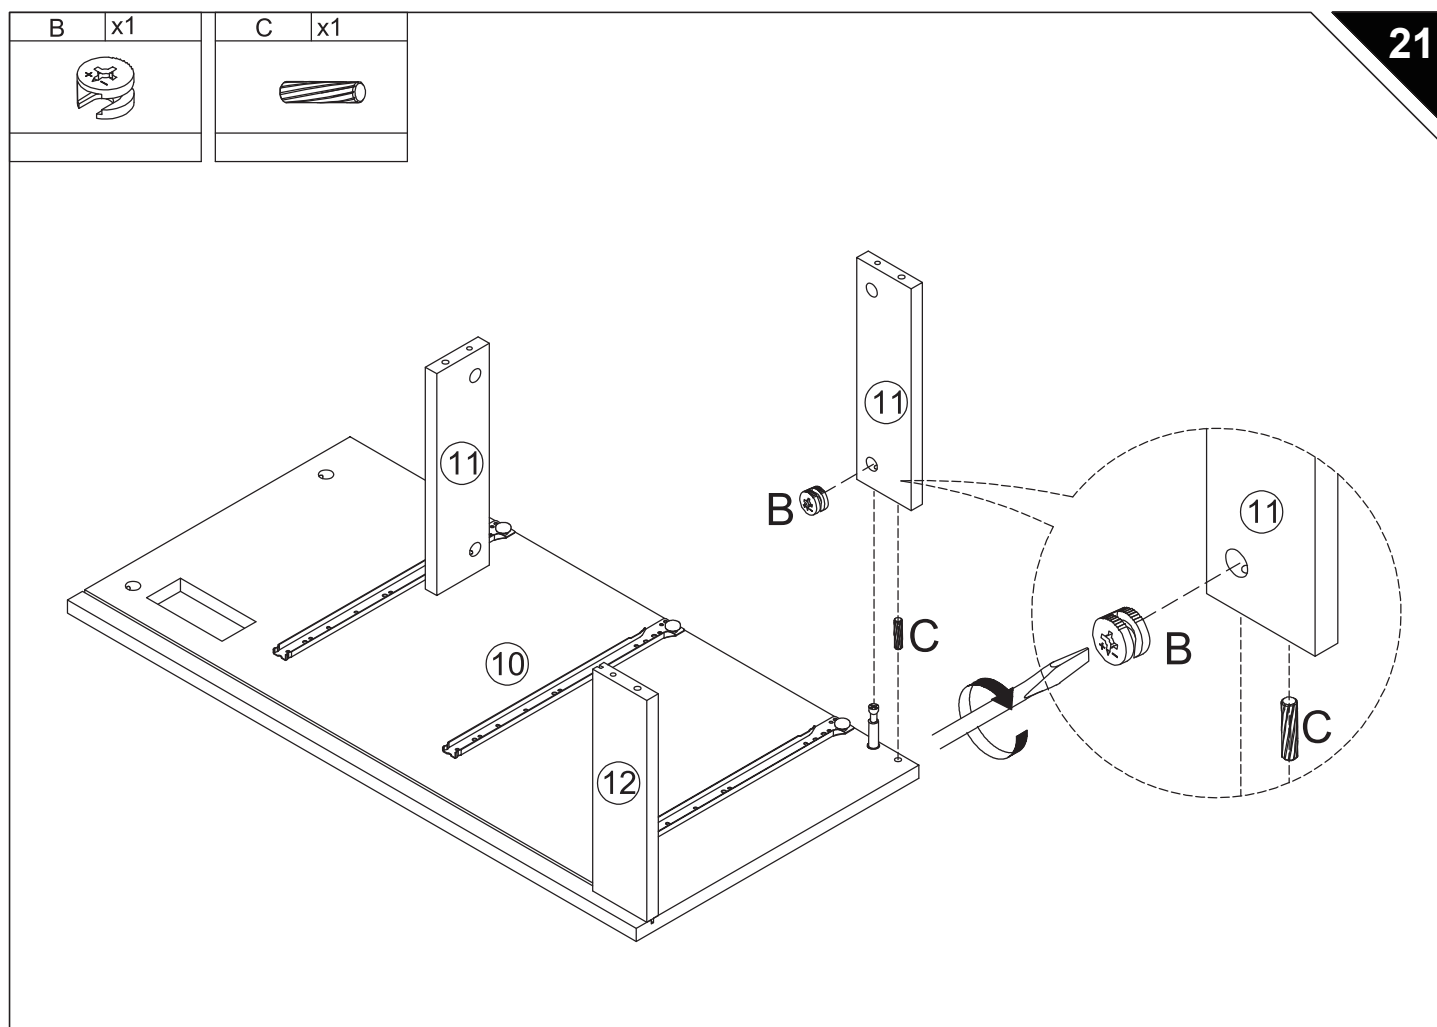


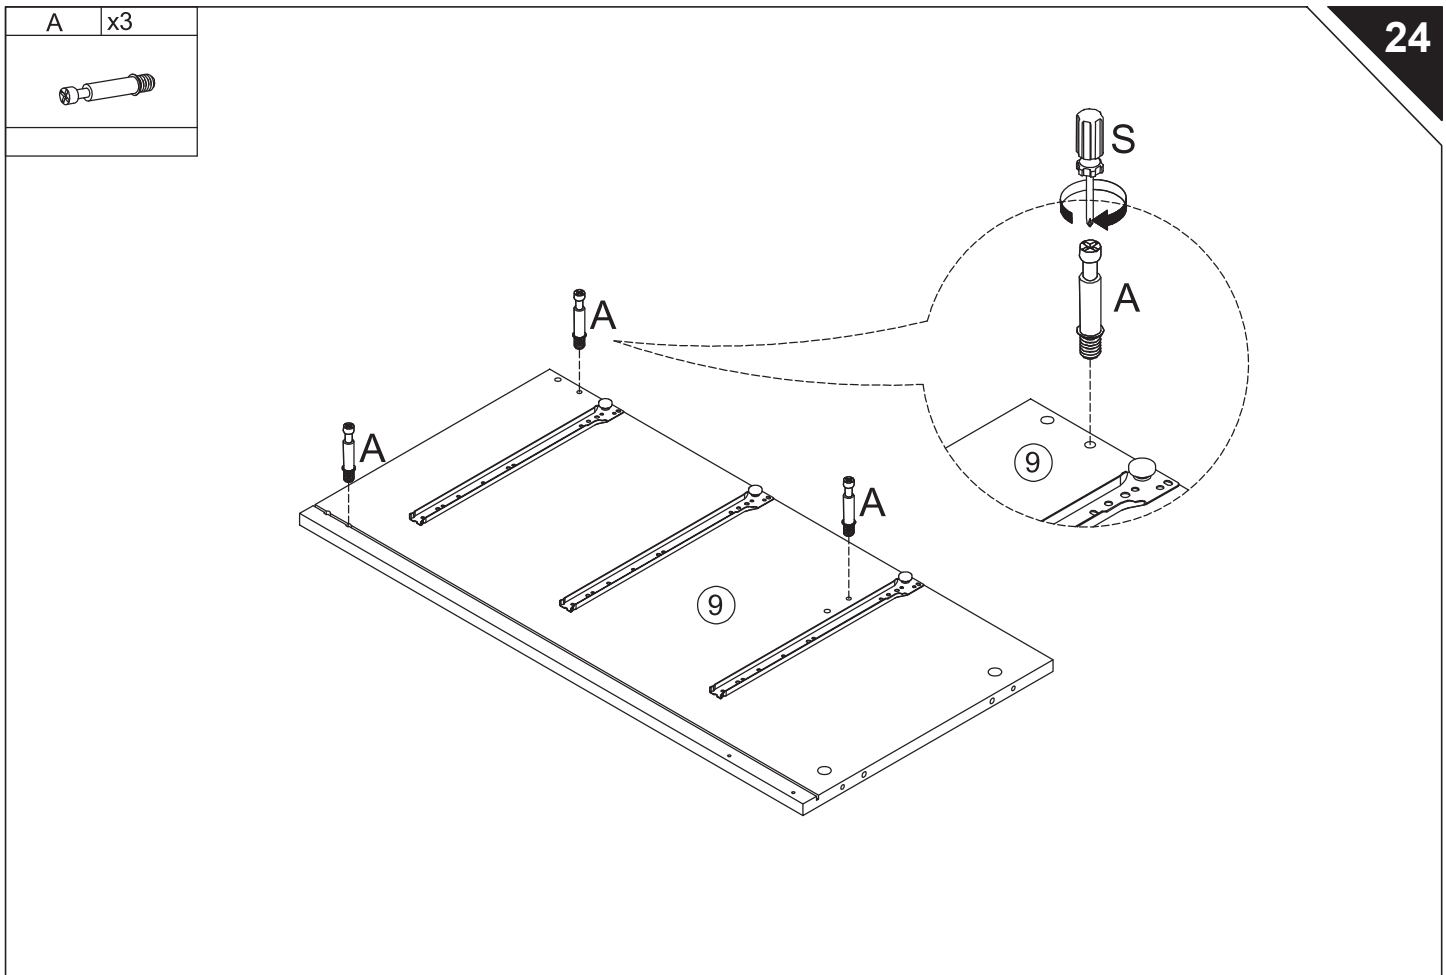
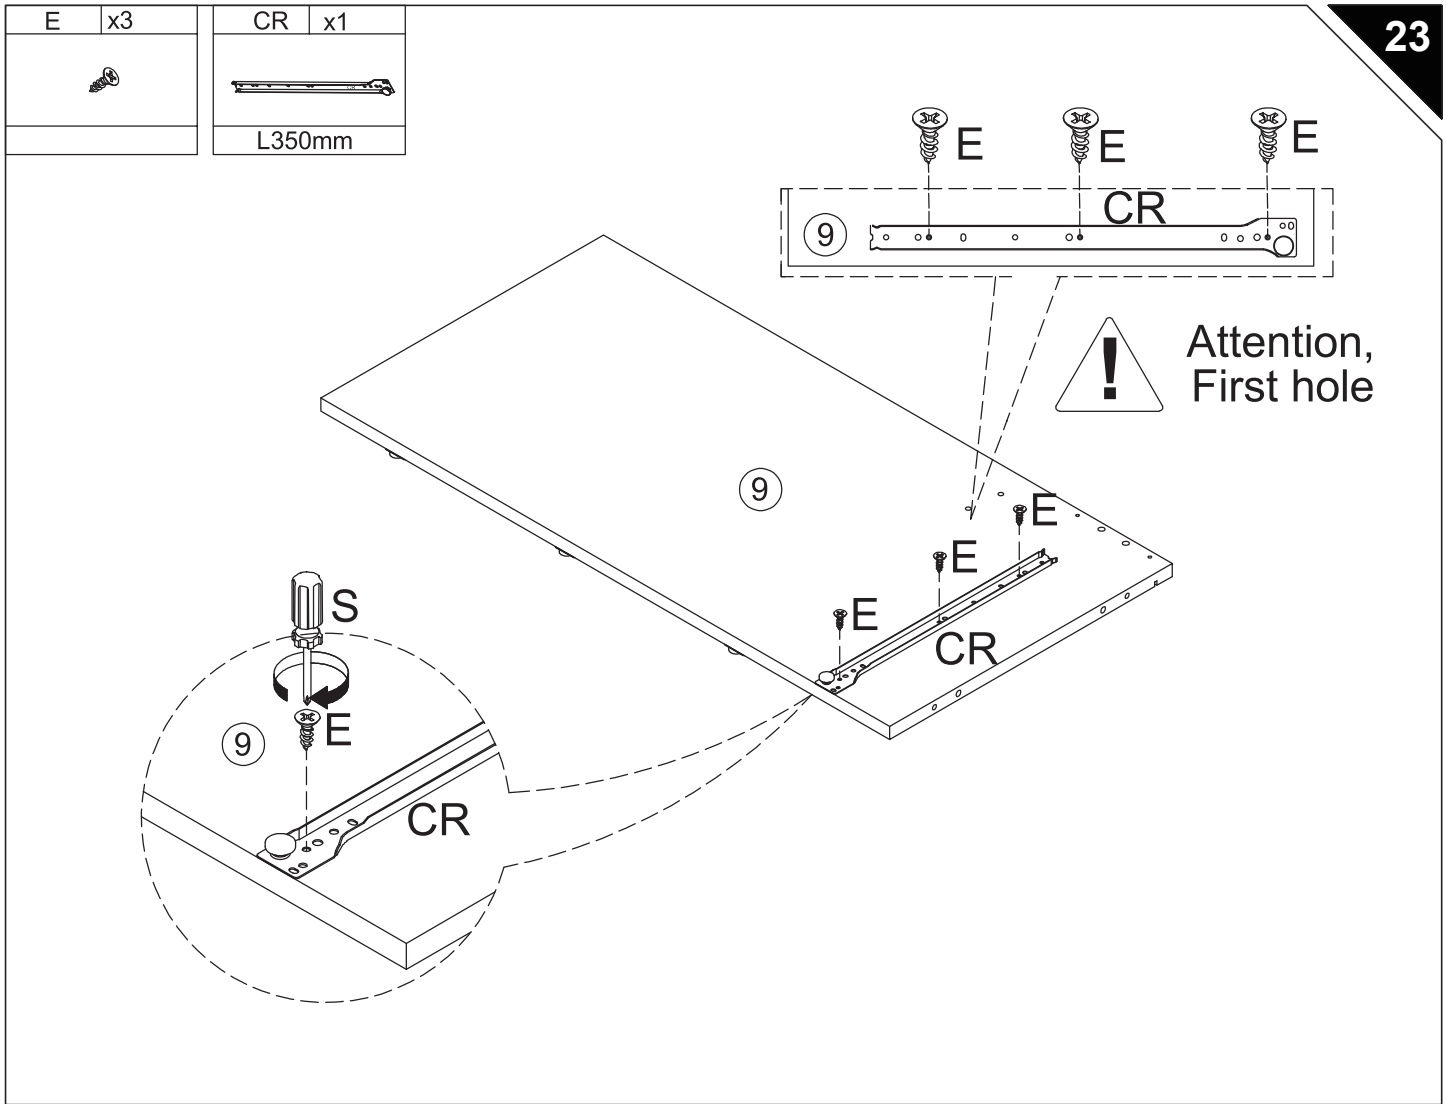



C	x3
	

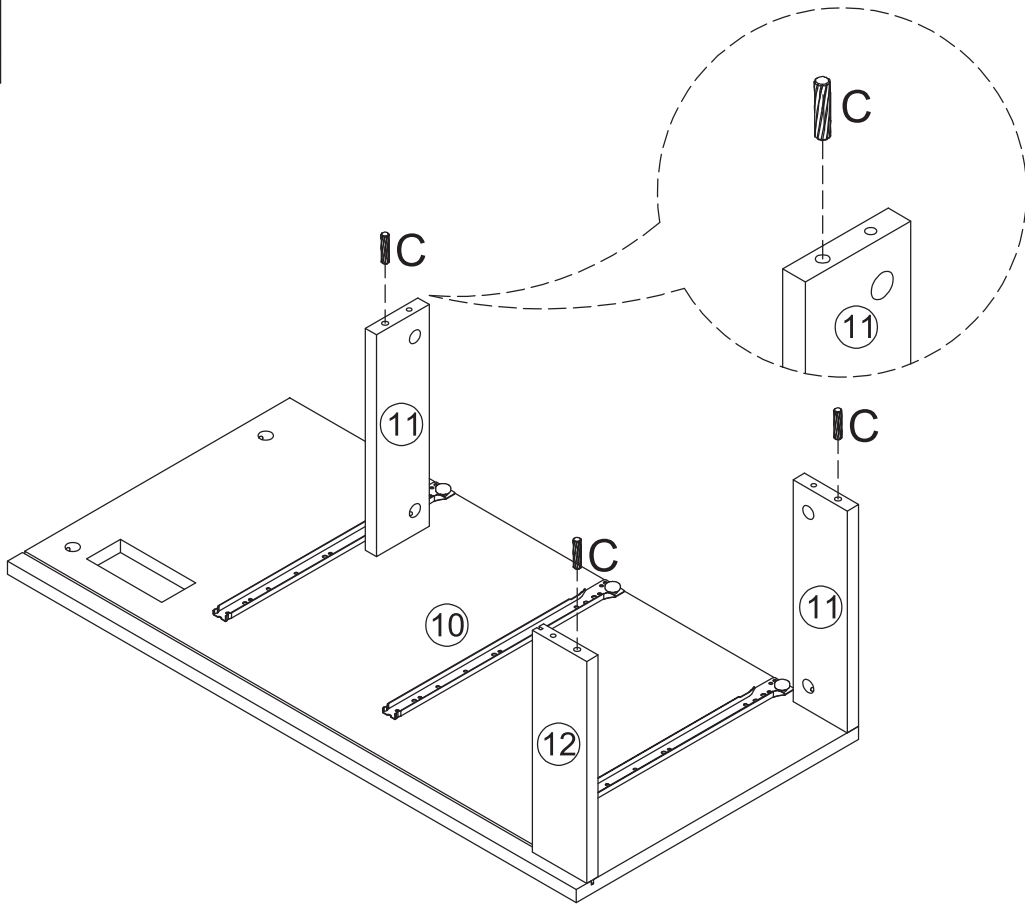


B	x3
	

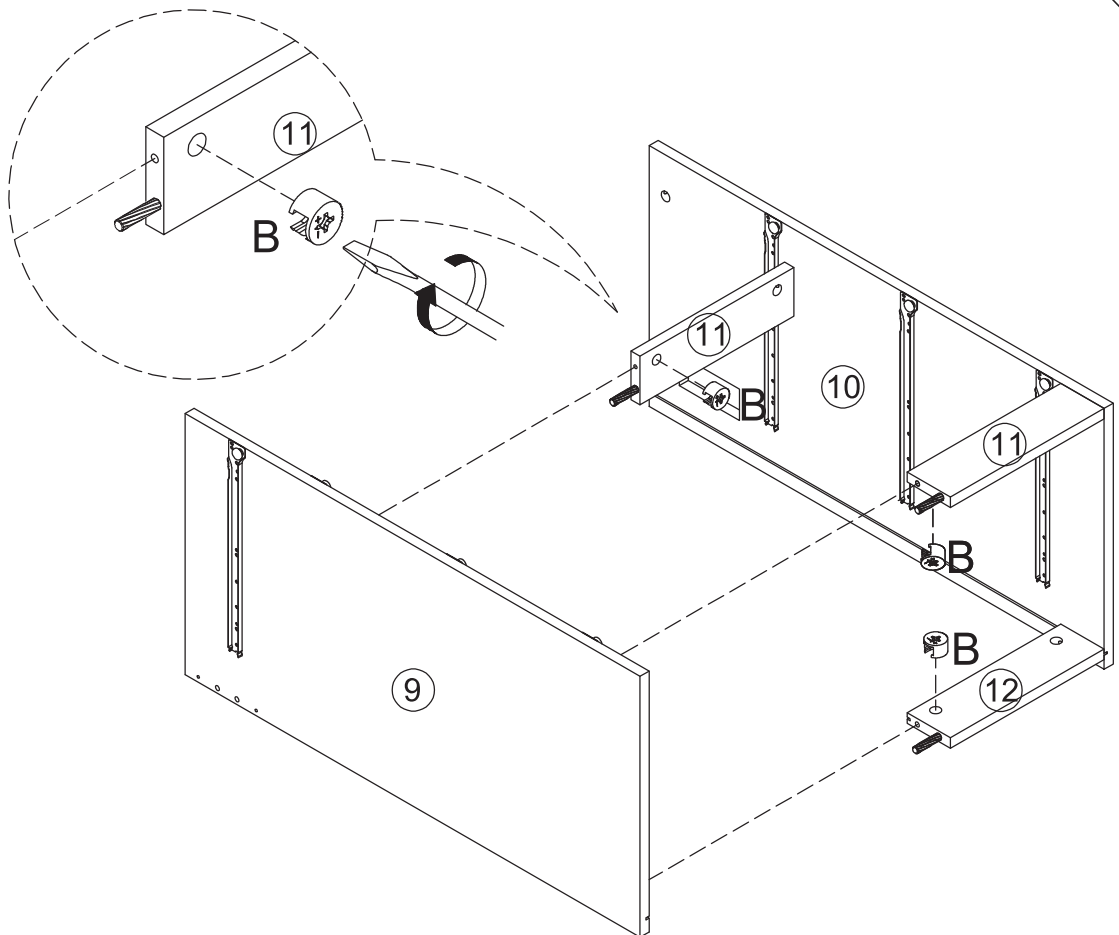


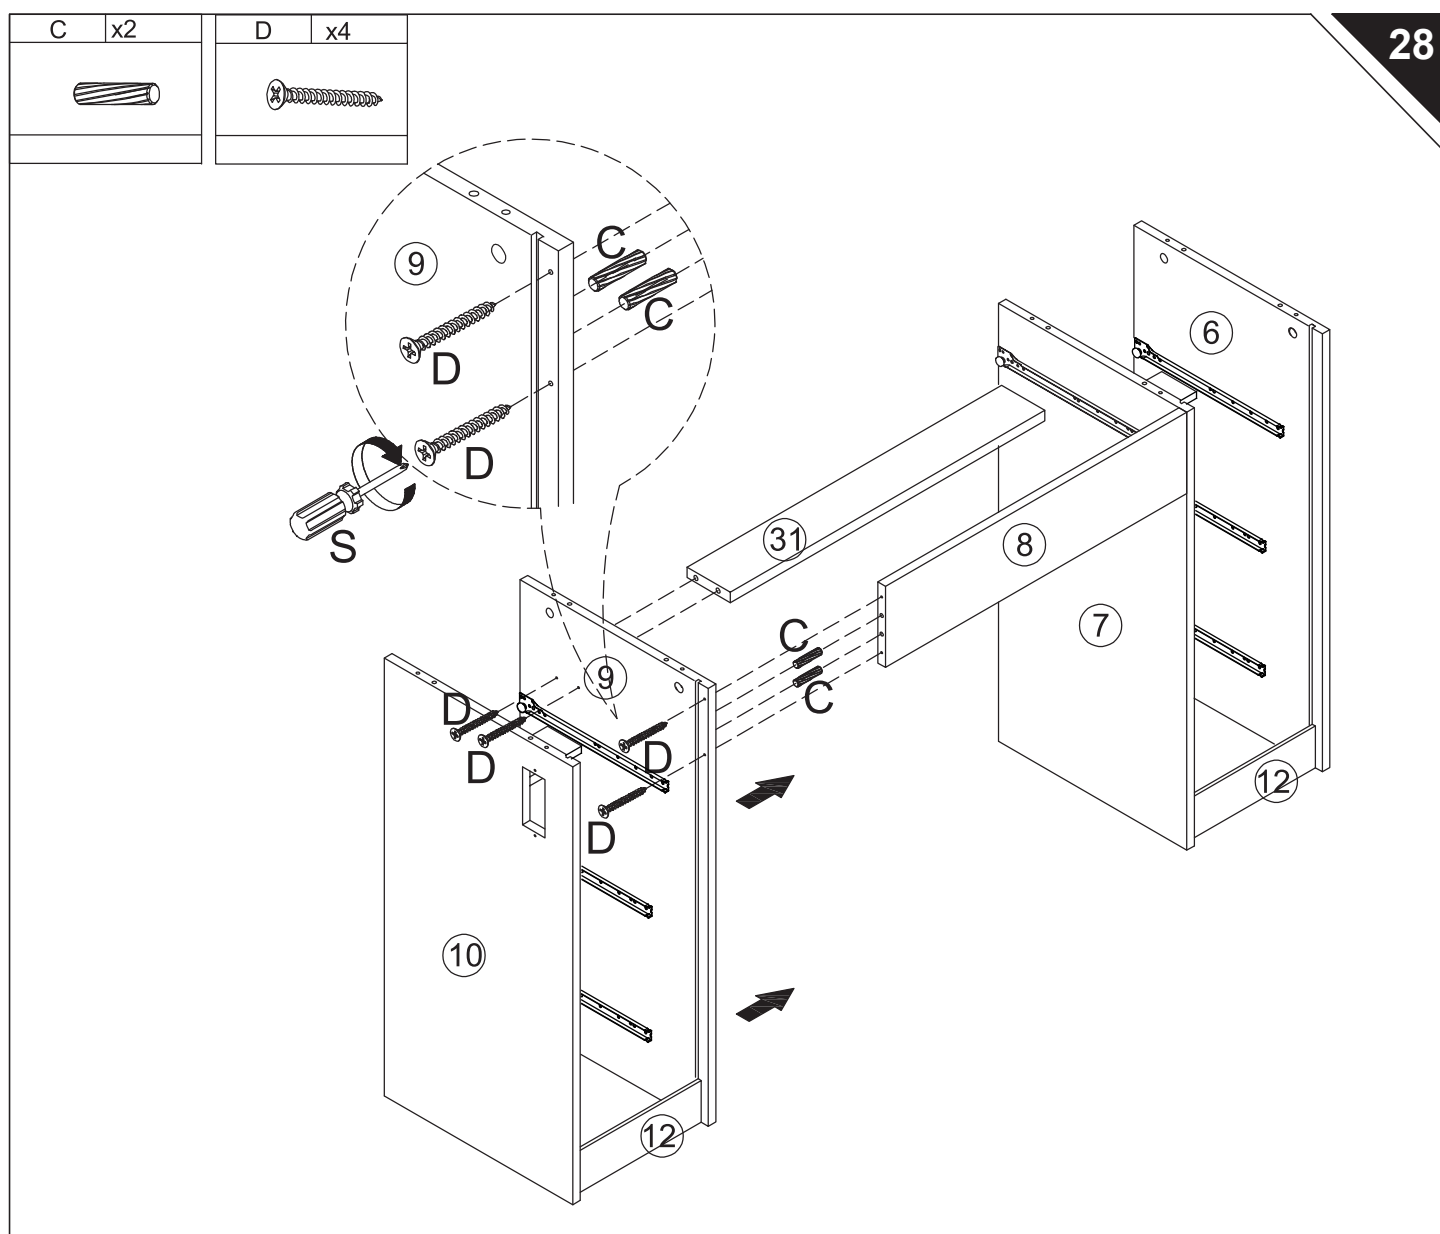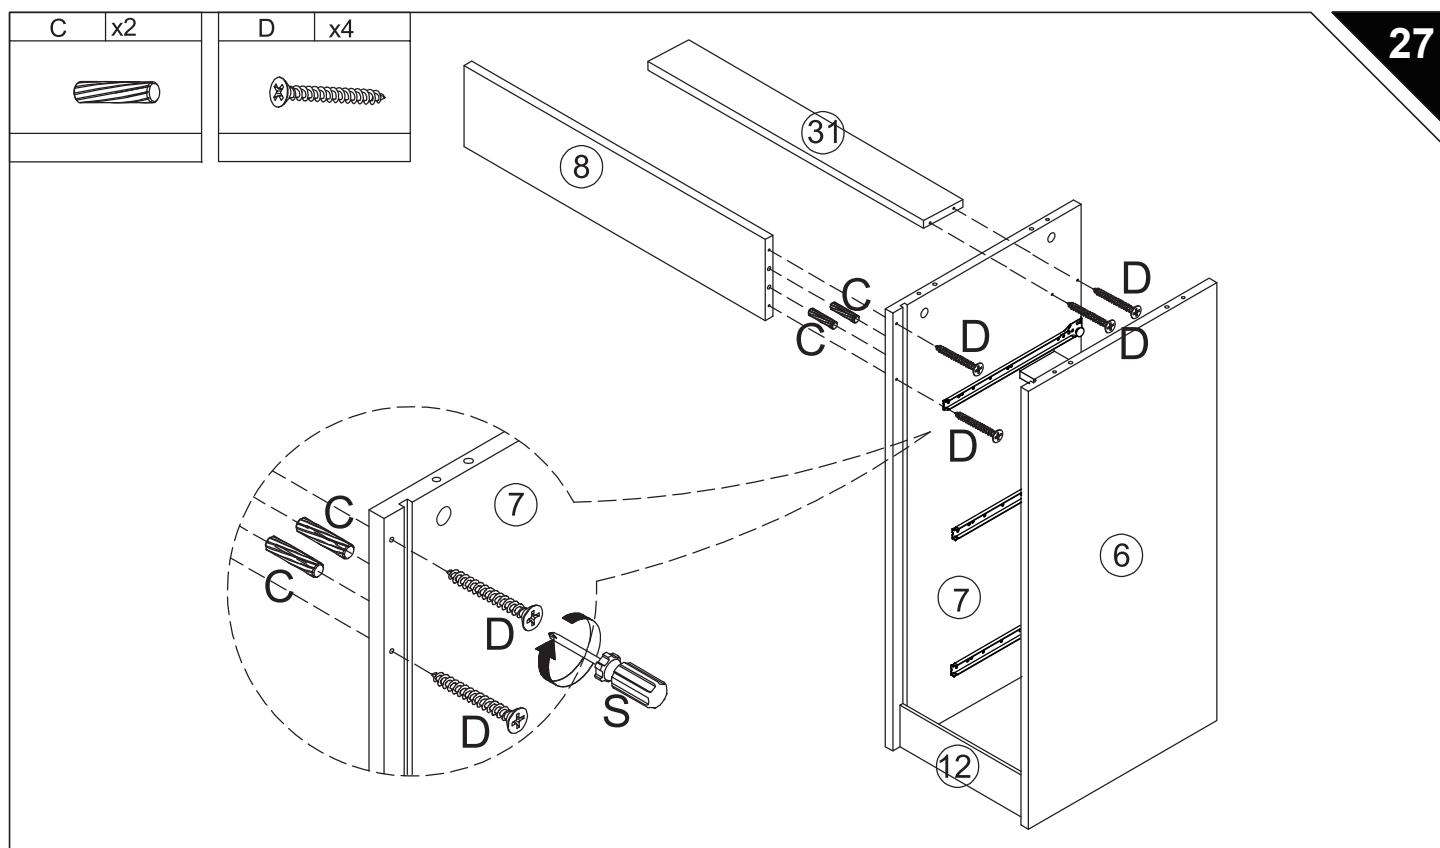

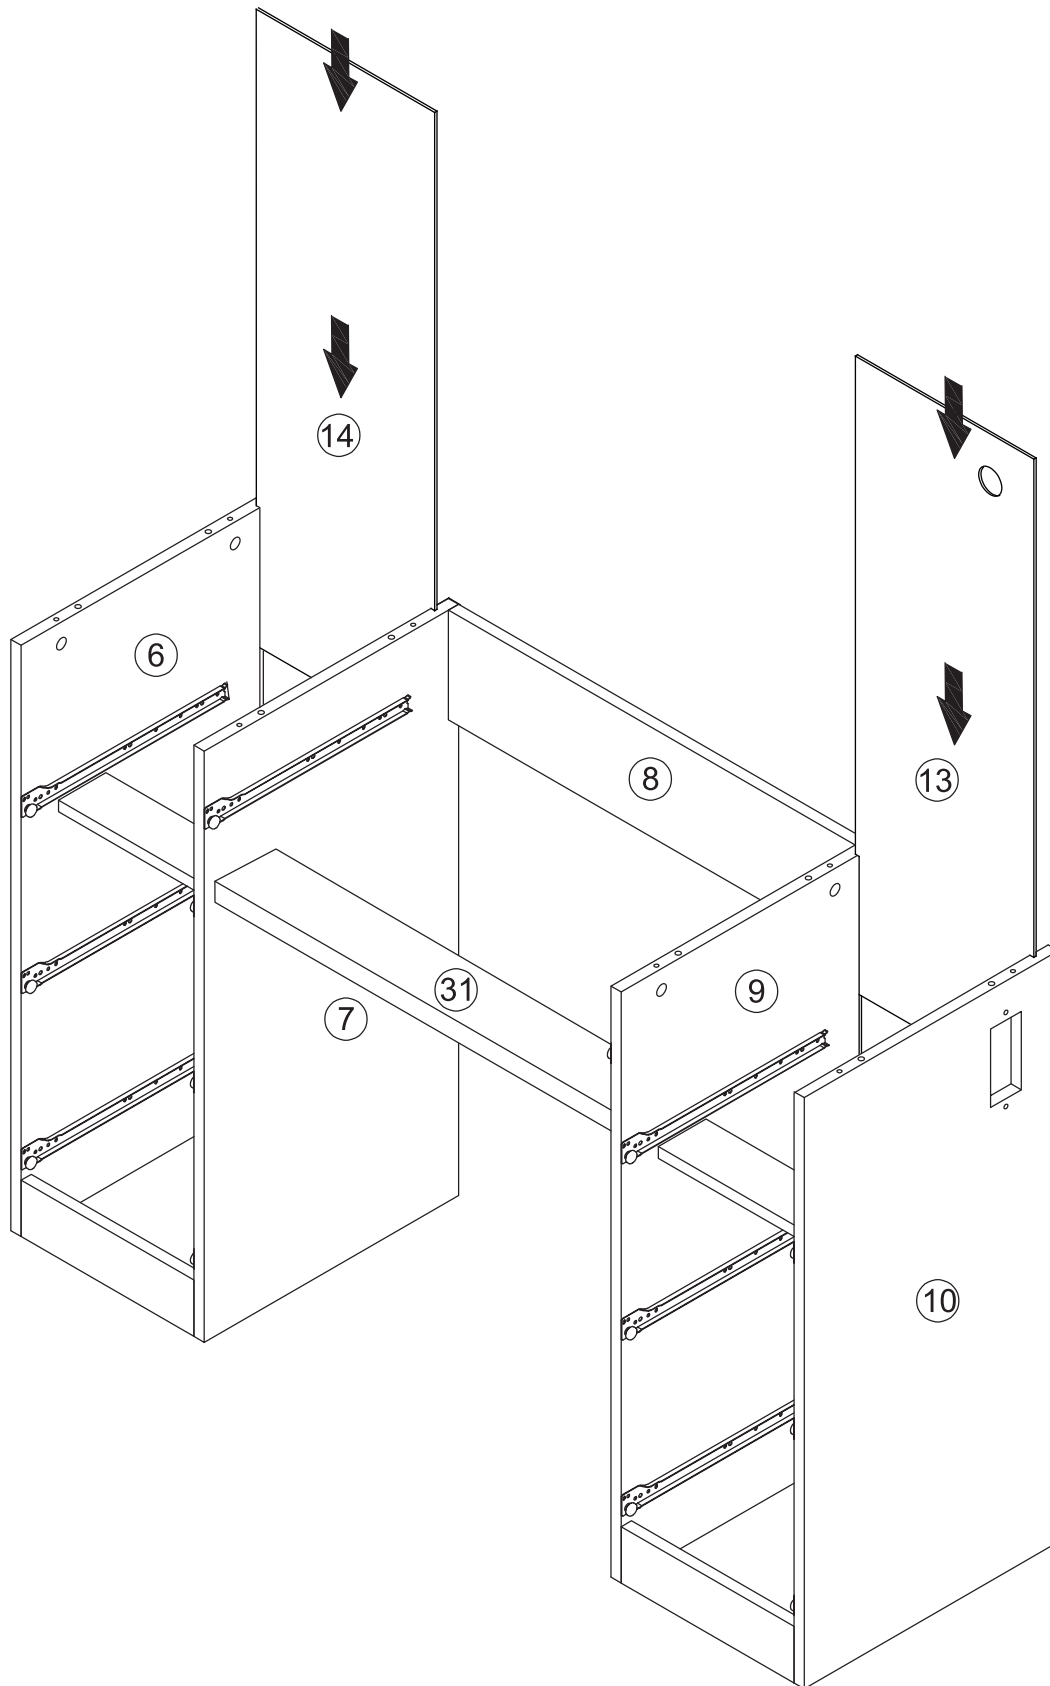


C	x8	L	x1	Q	x2
					

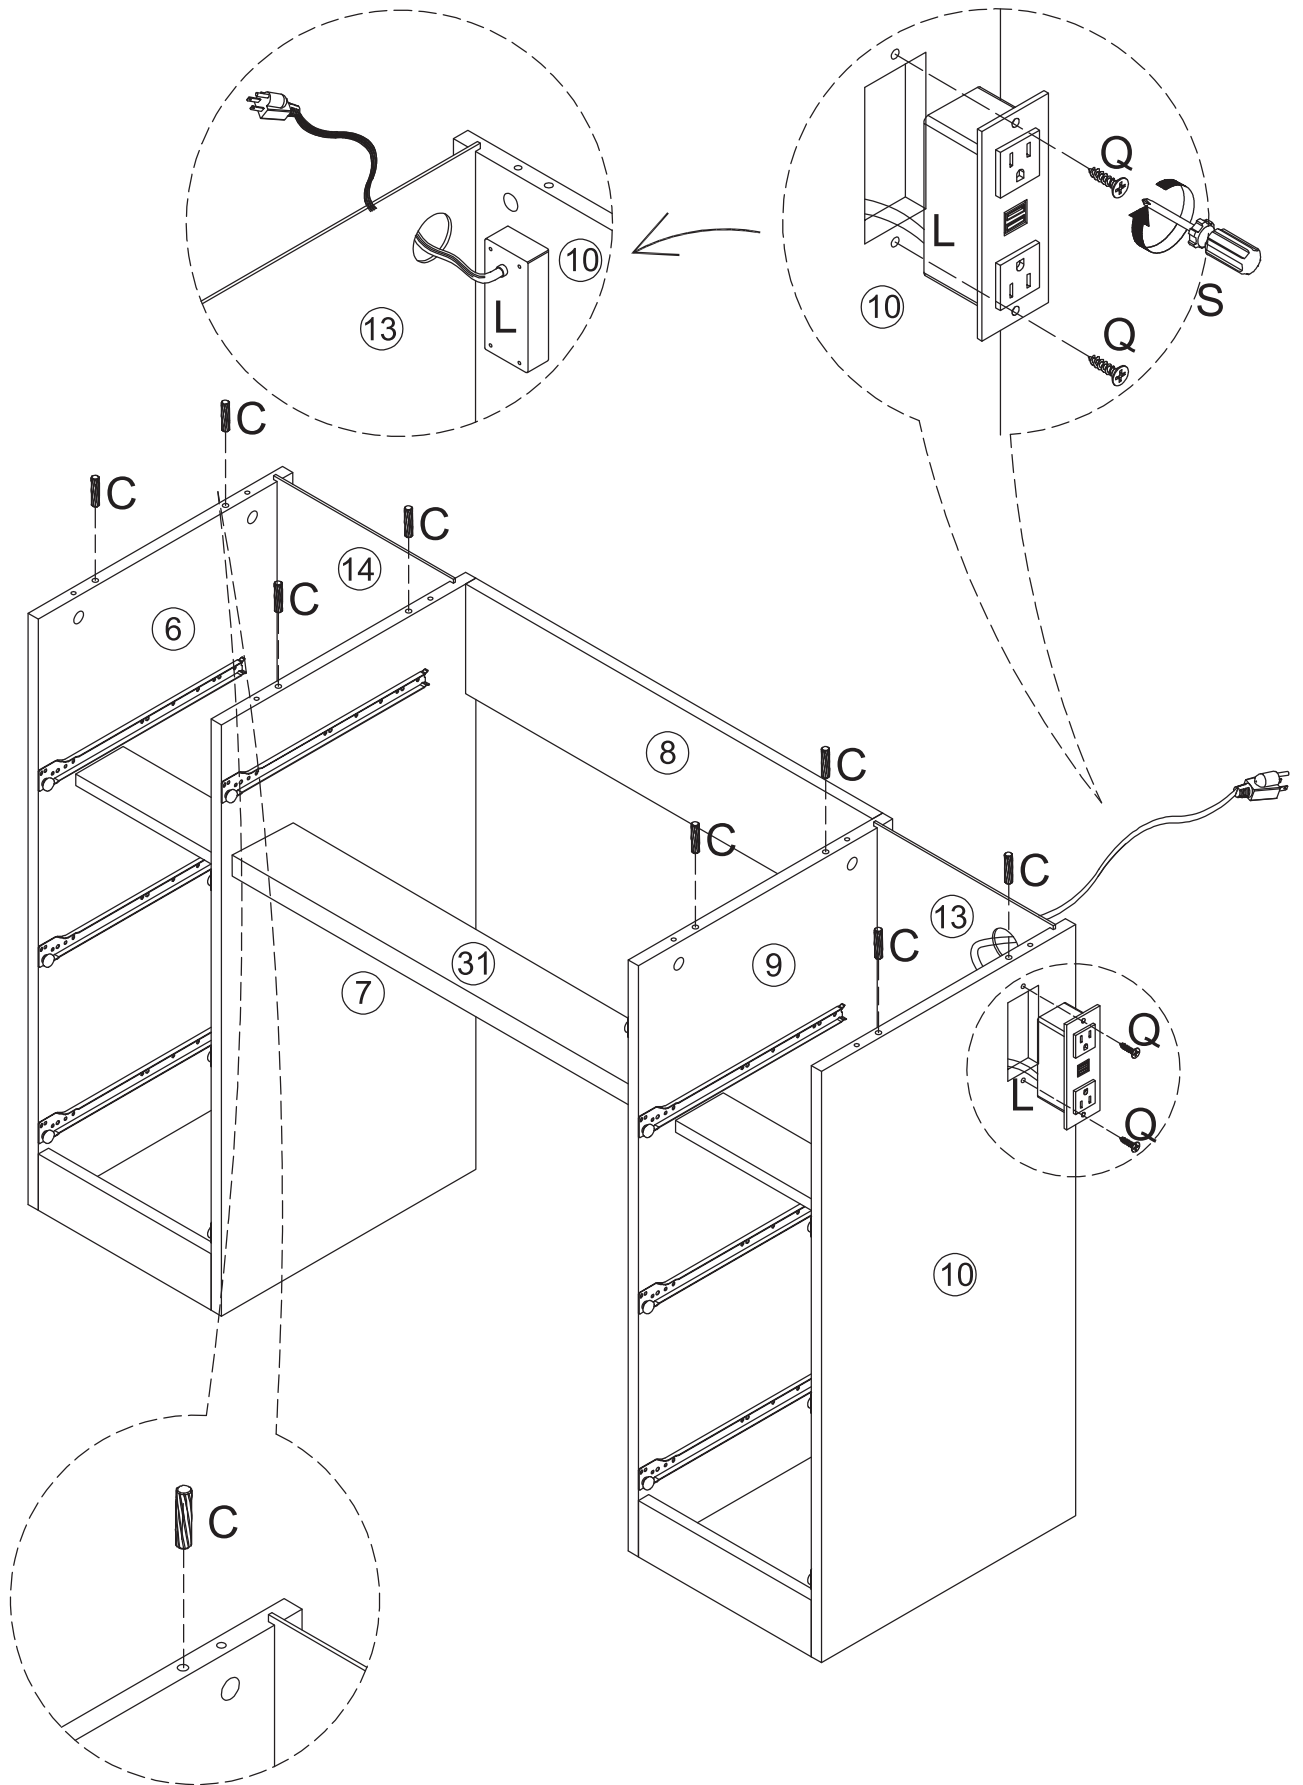


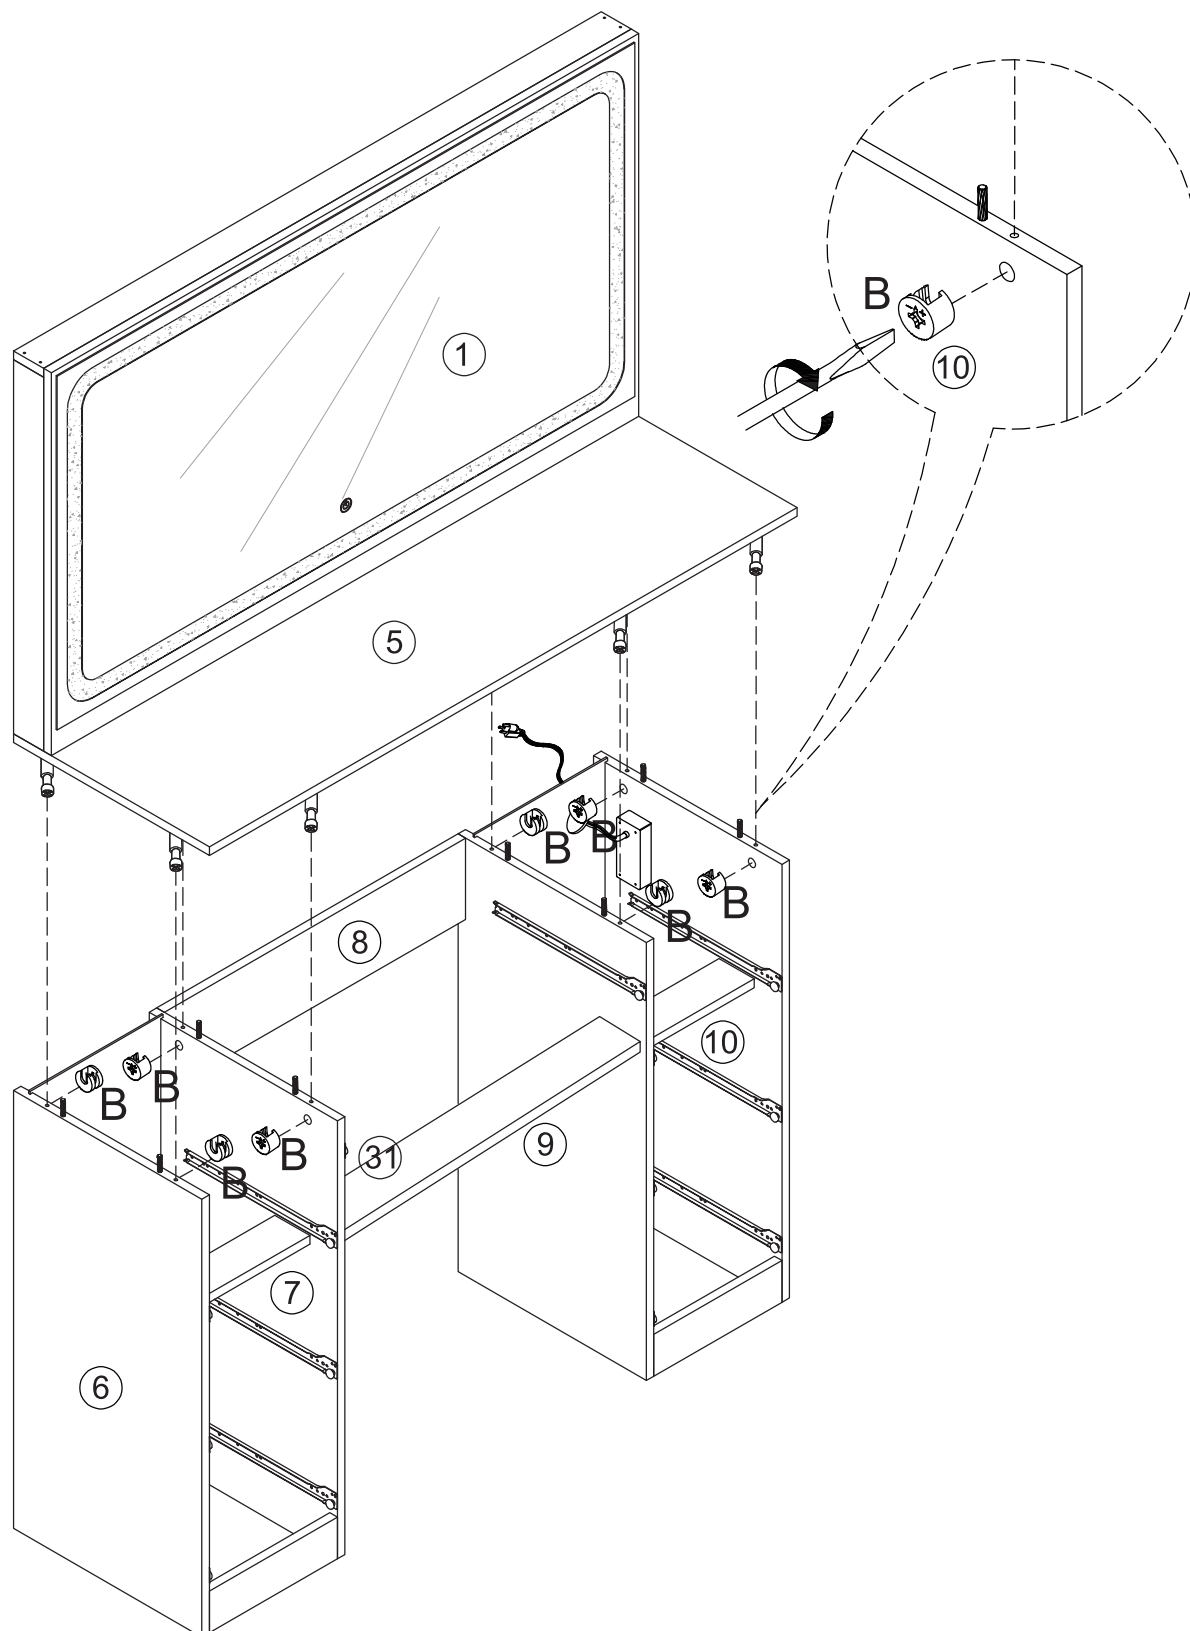

K	x8
K-1	K-2

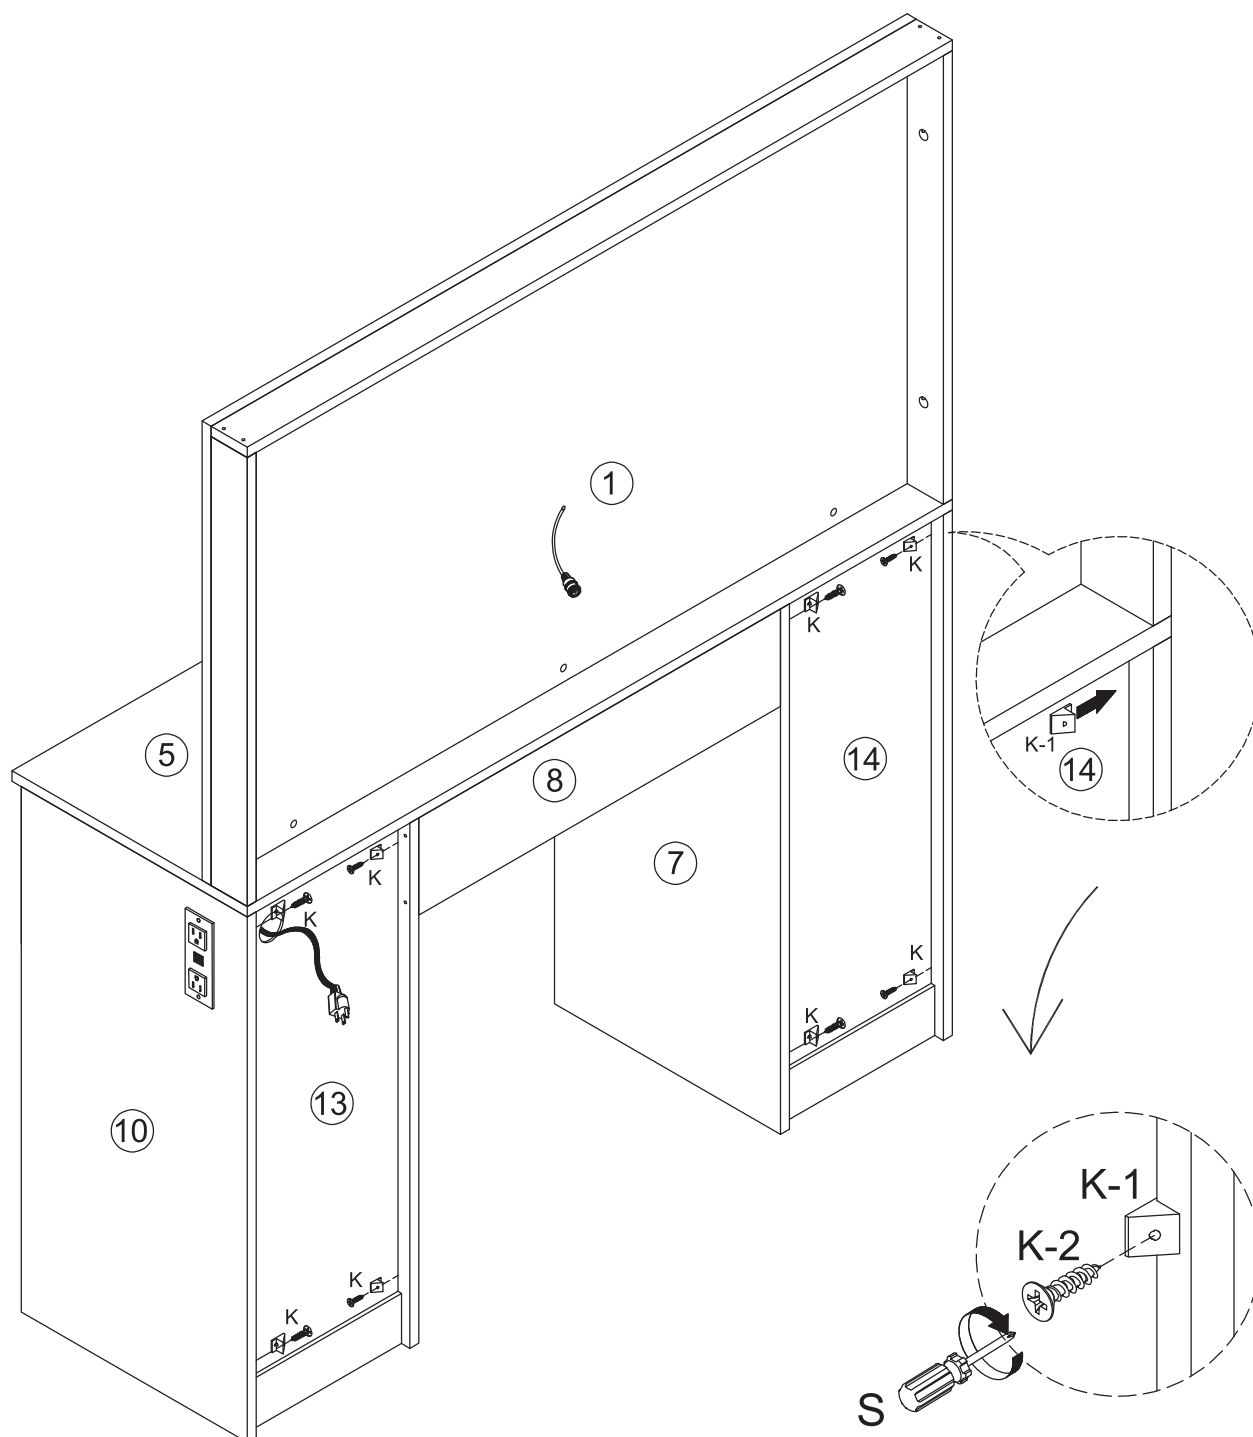


D x24


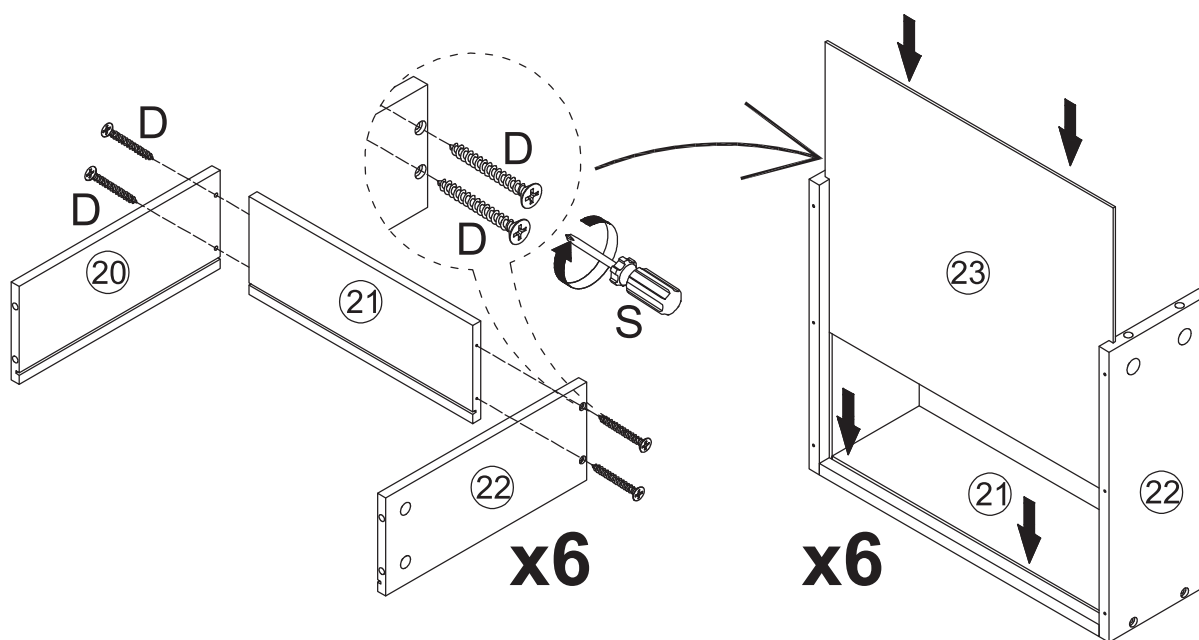




A x24






B x24

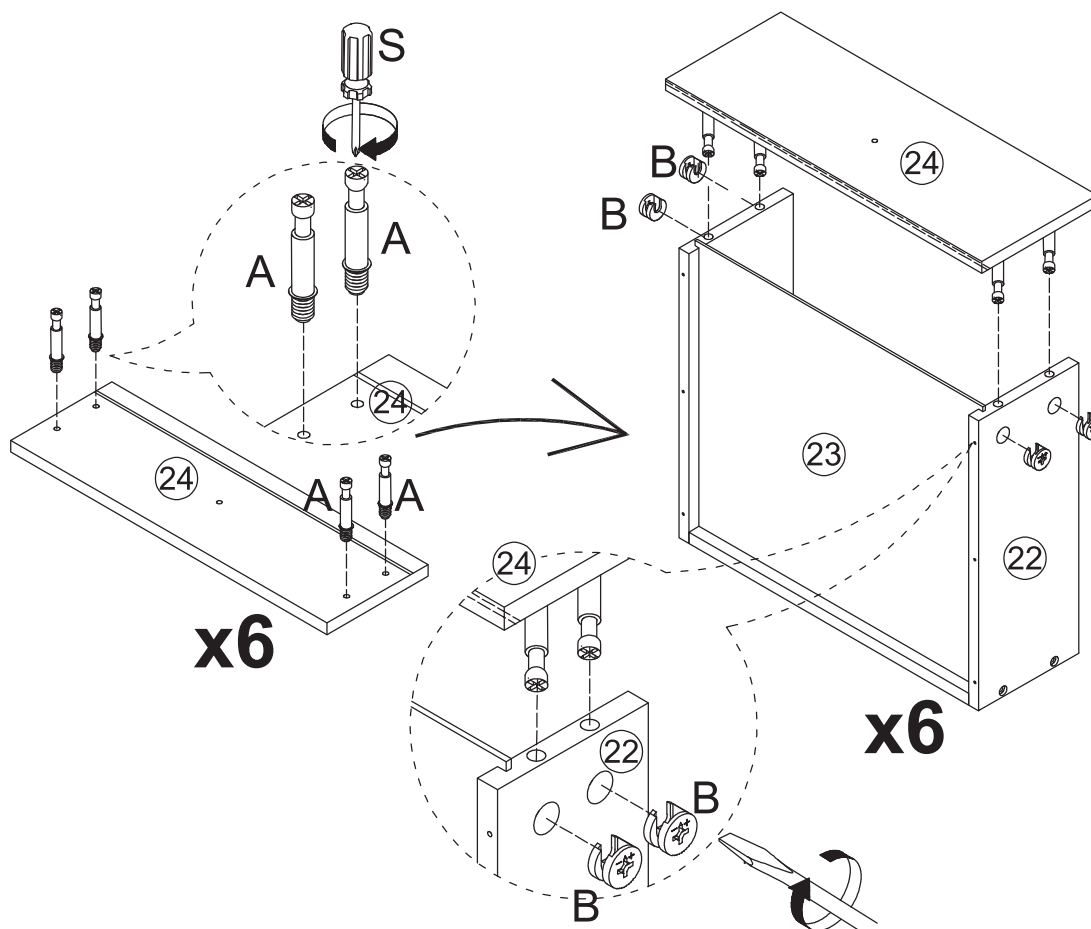


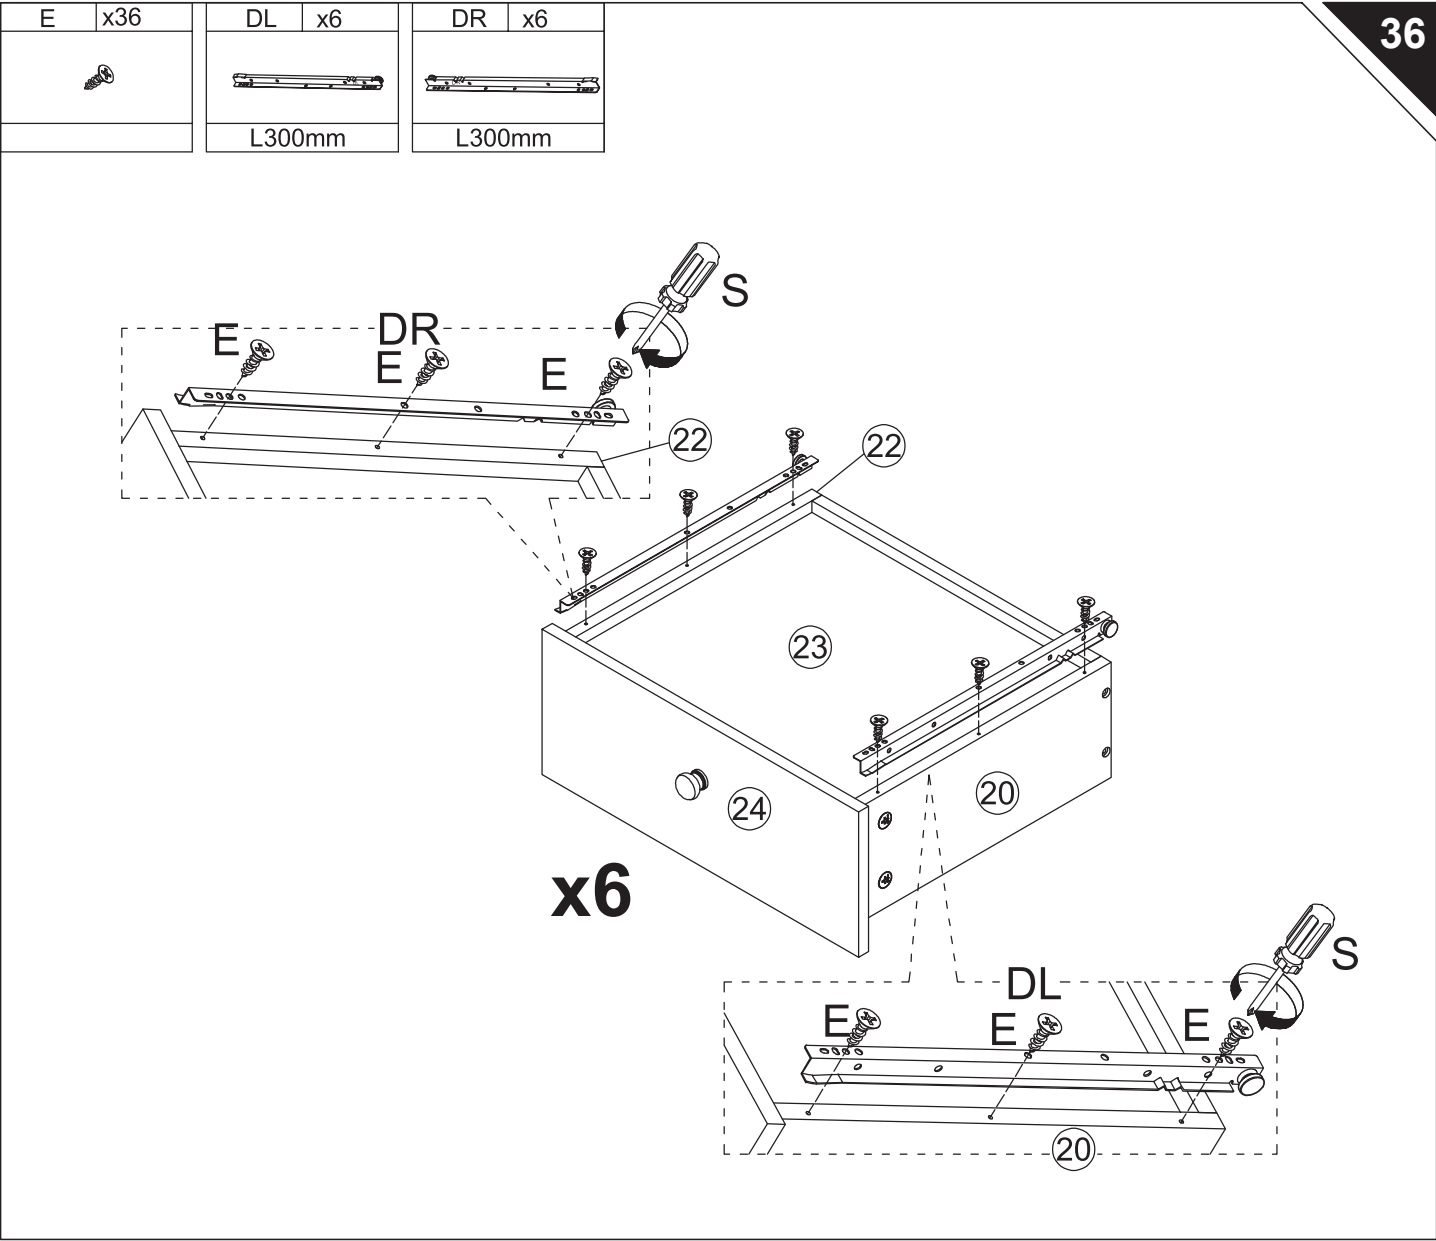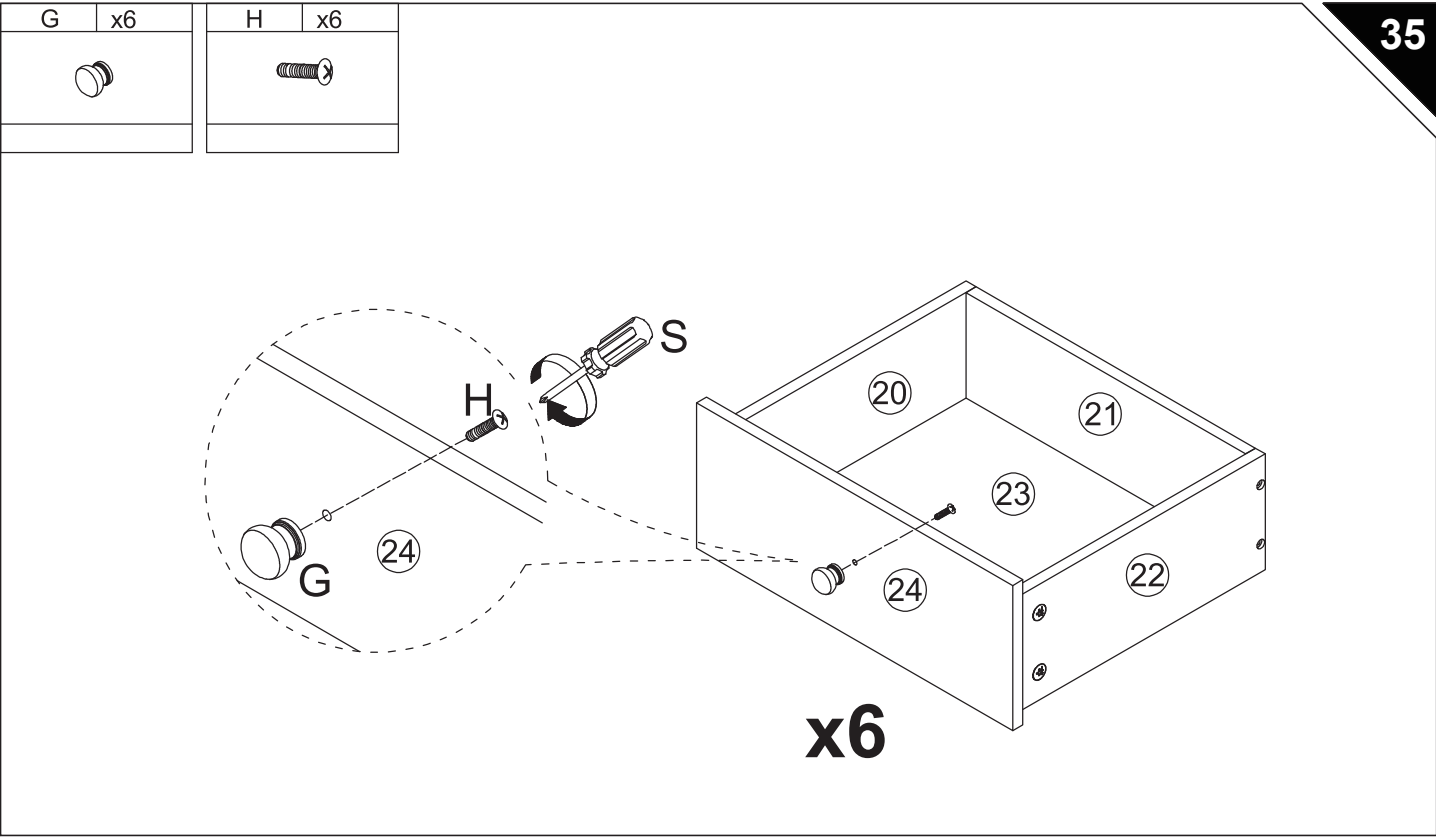


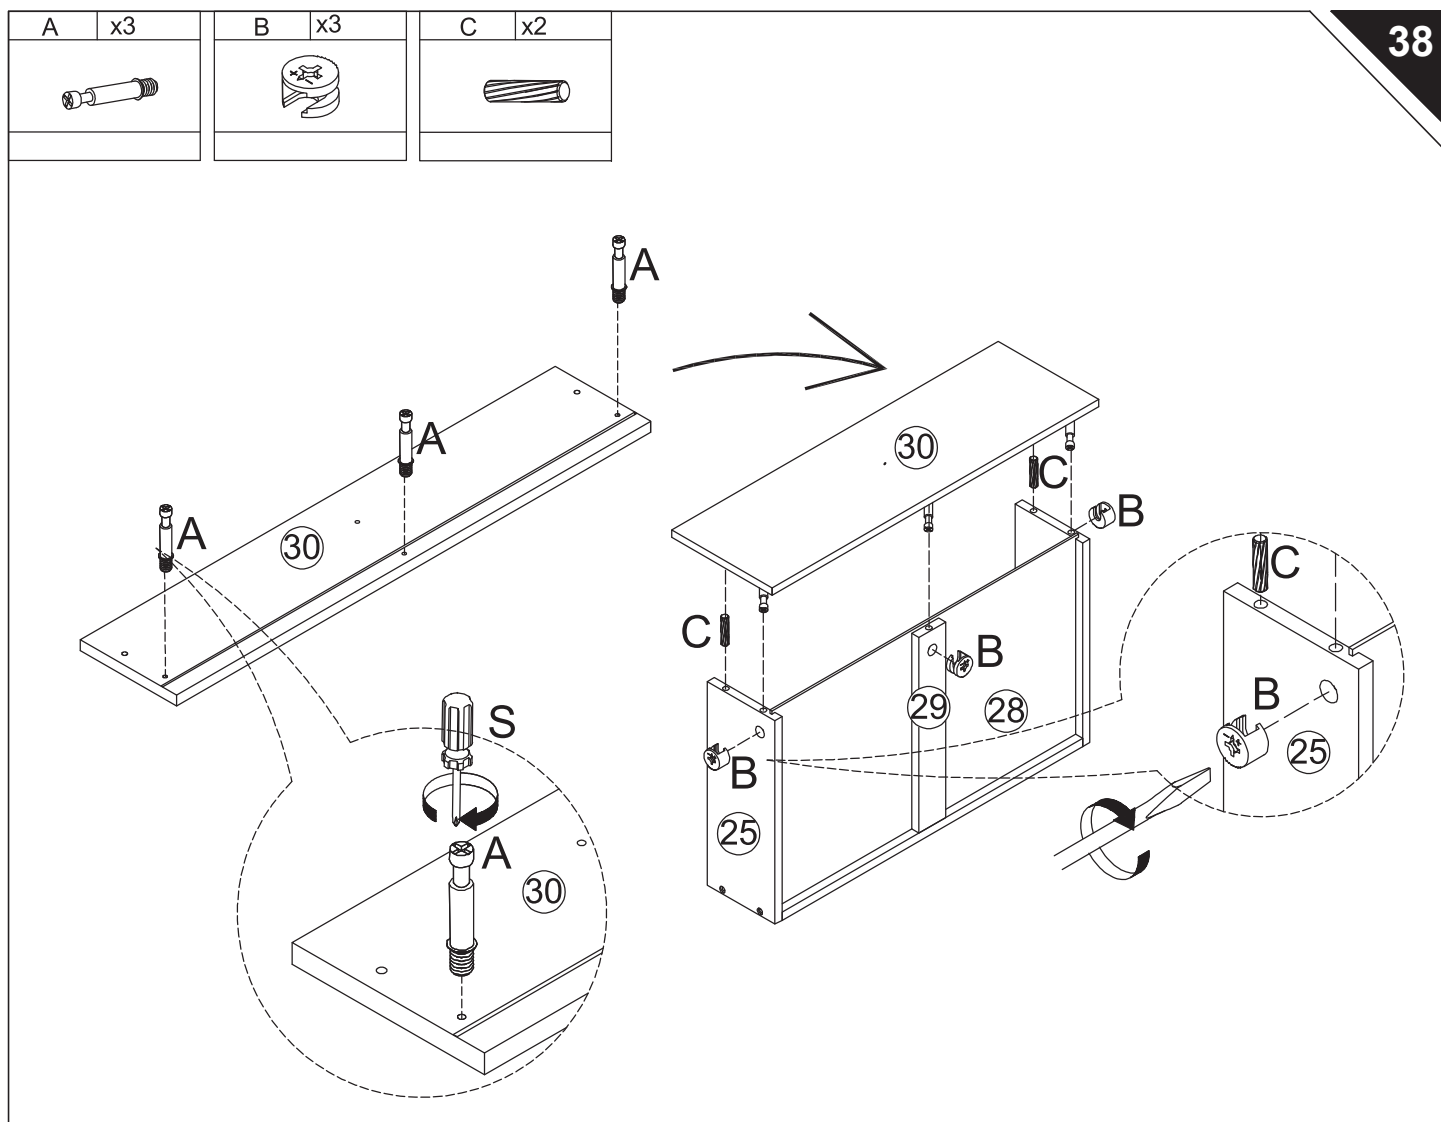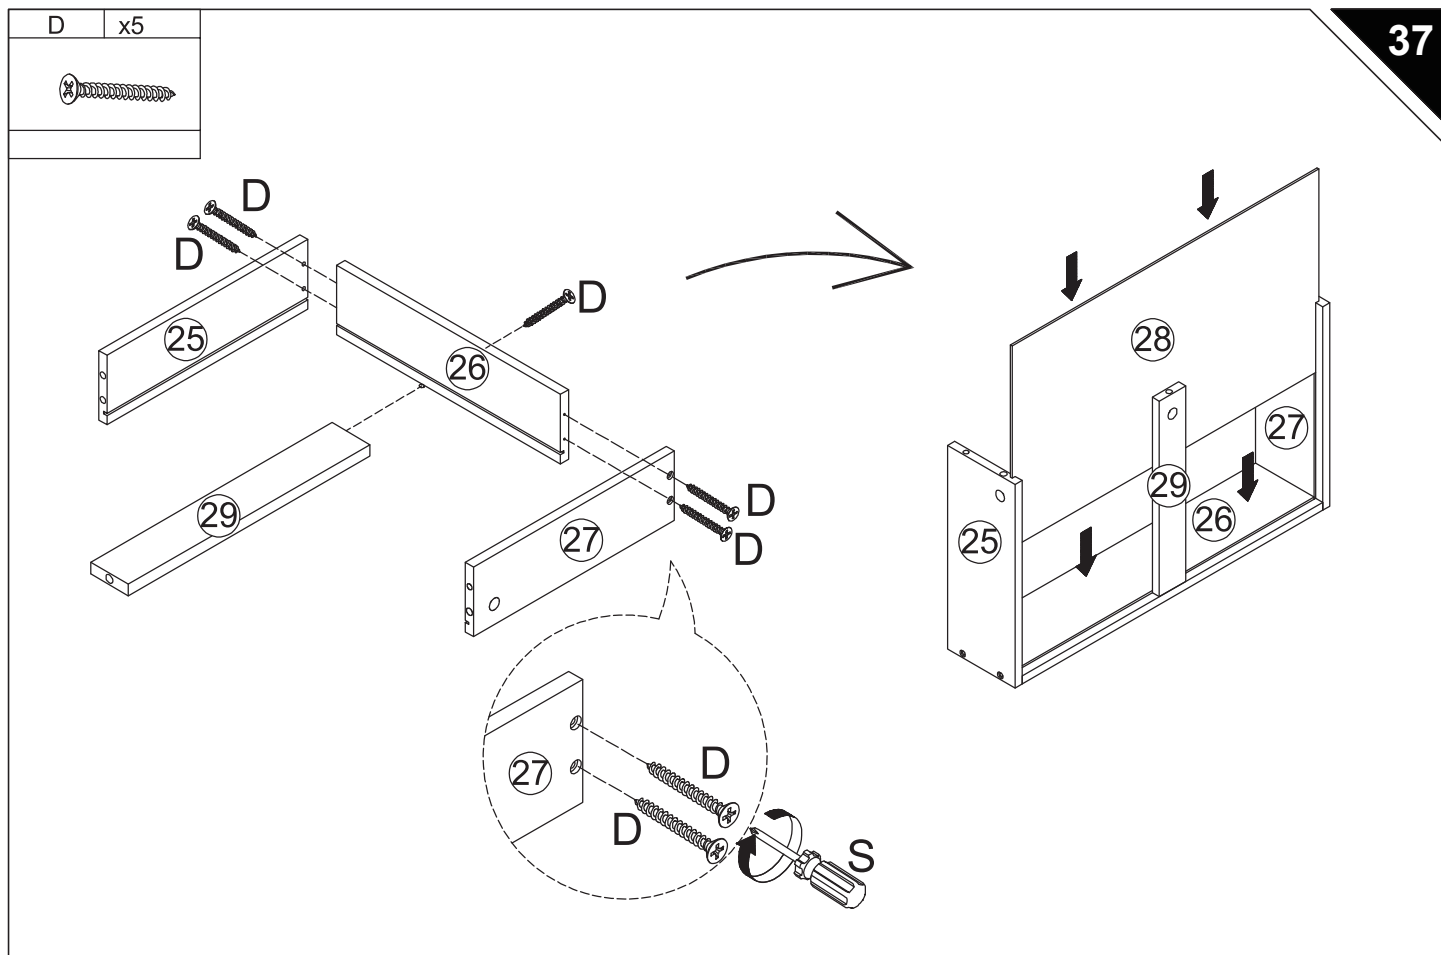


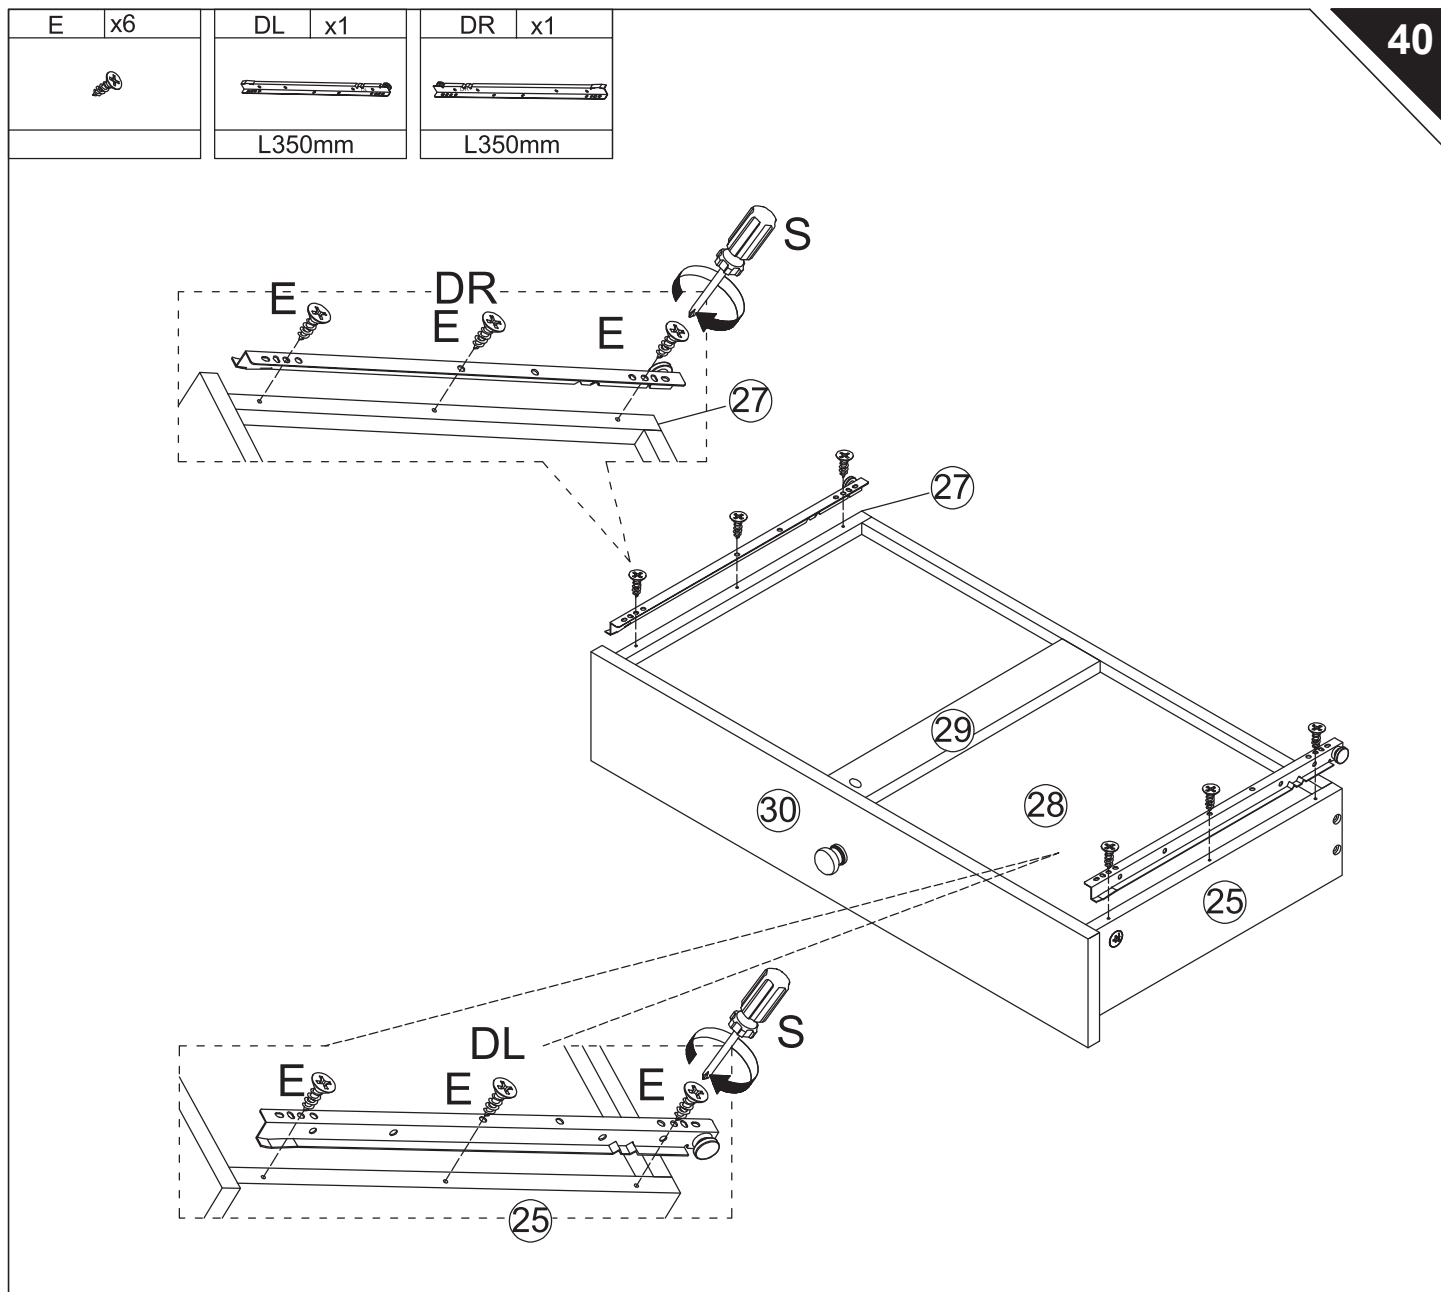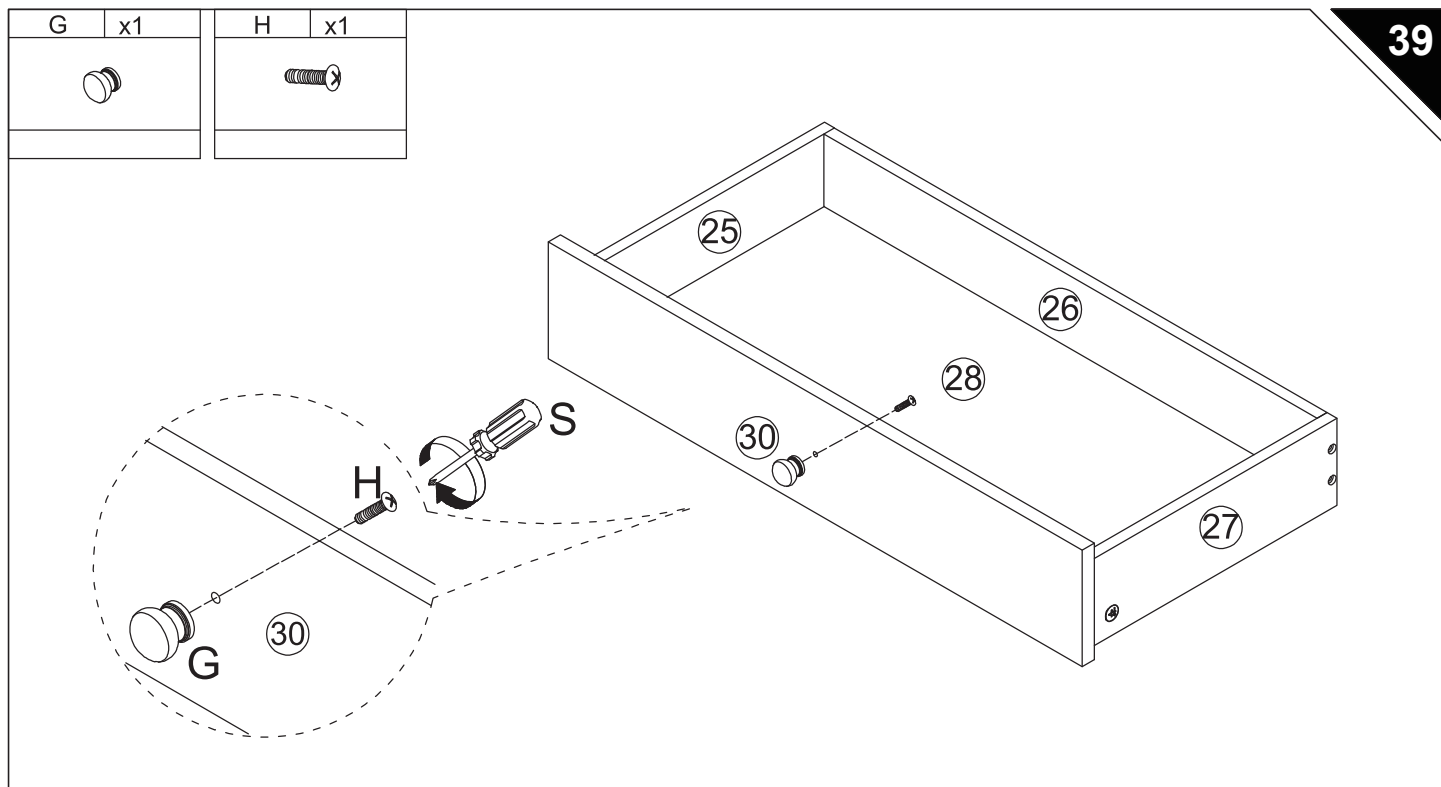


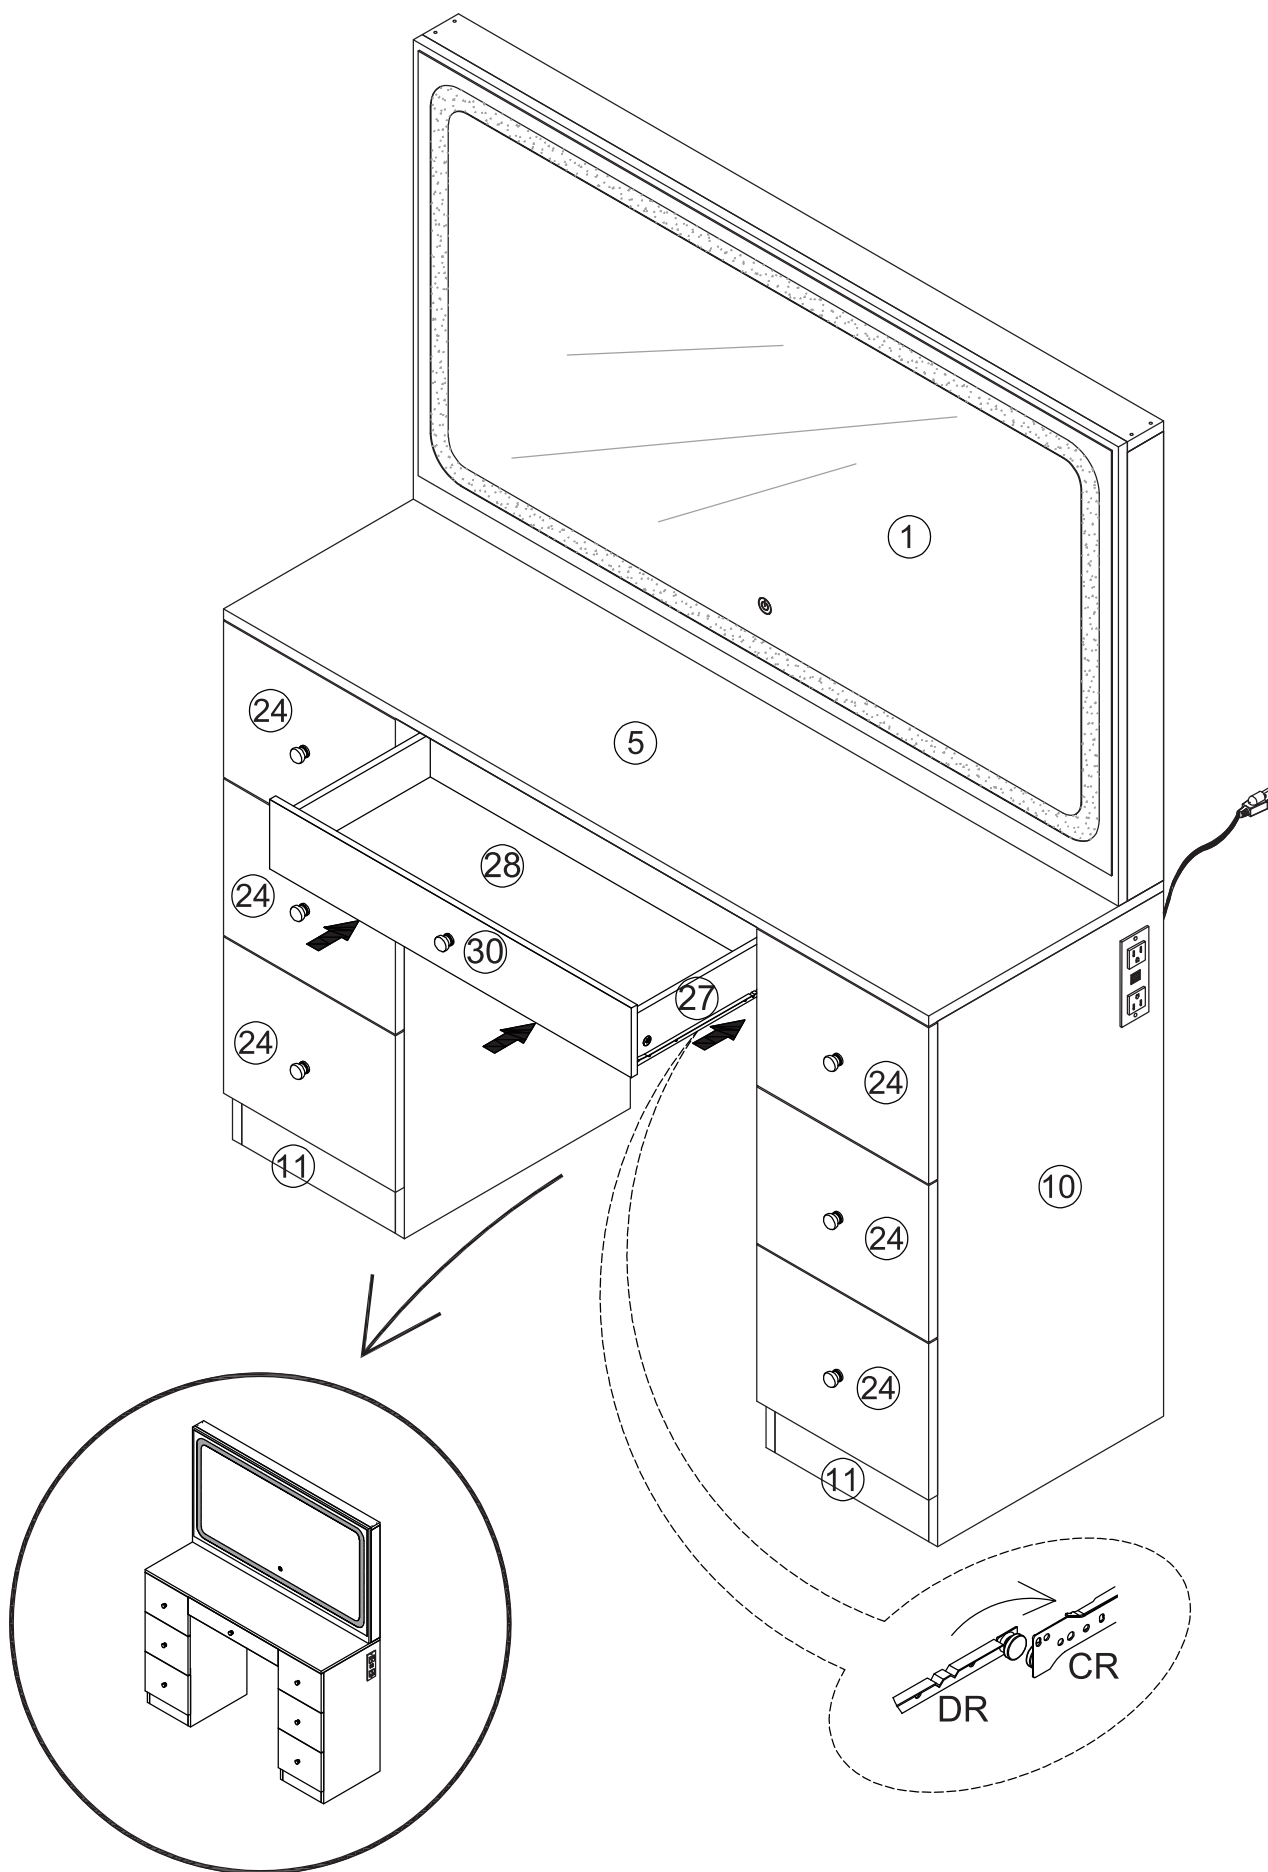



I	x2	J	x2	M	x1
					

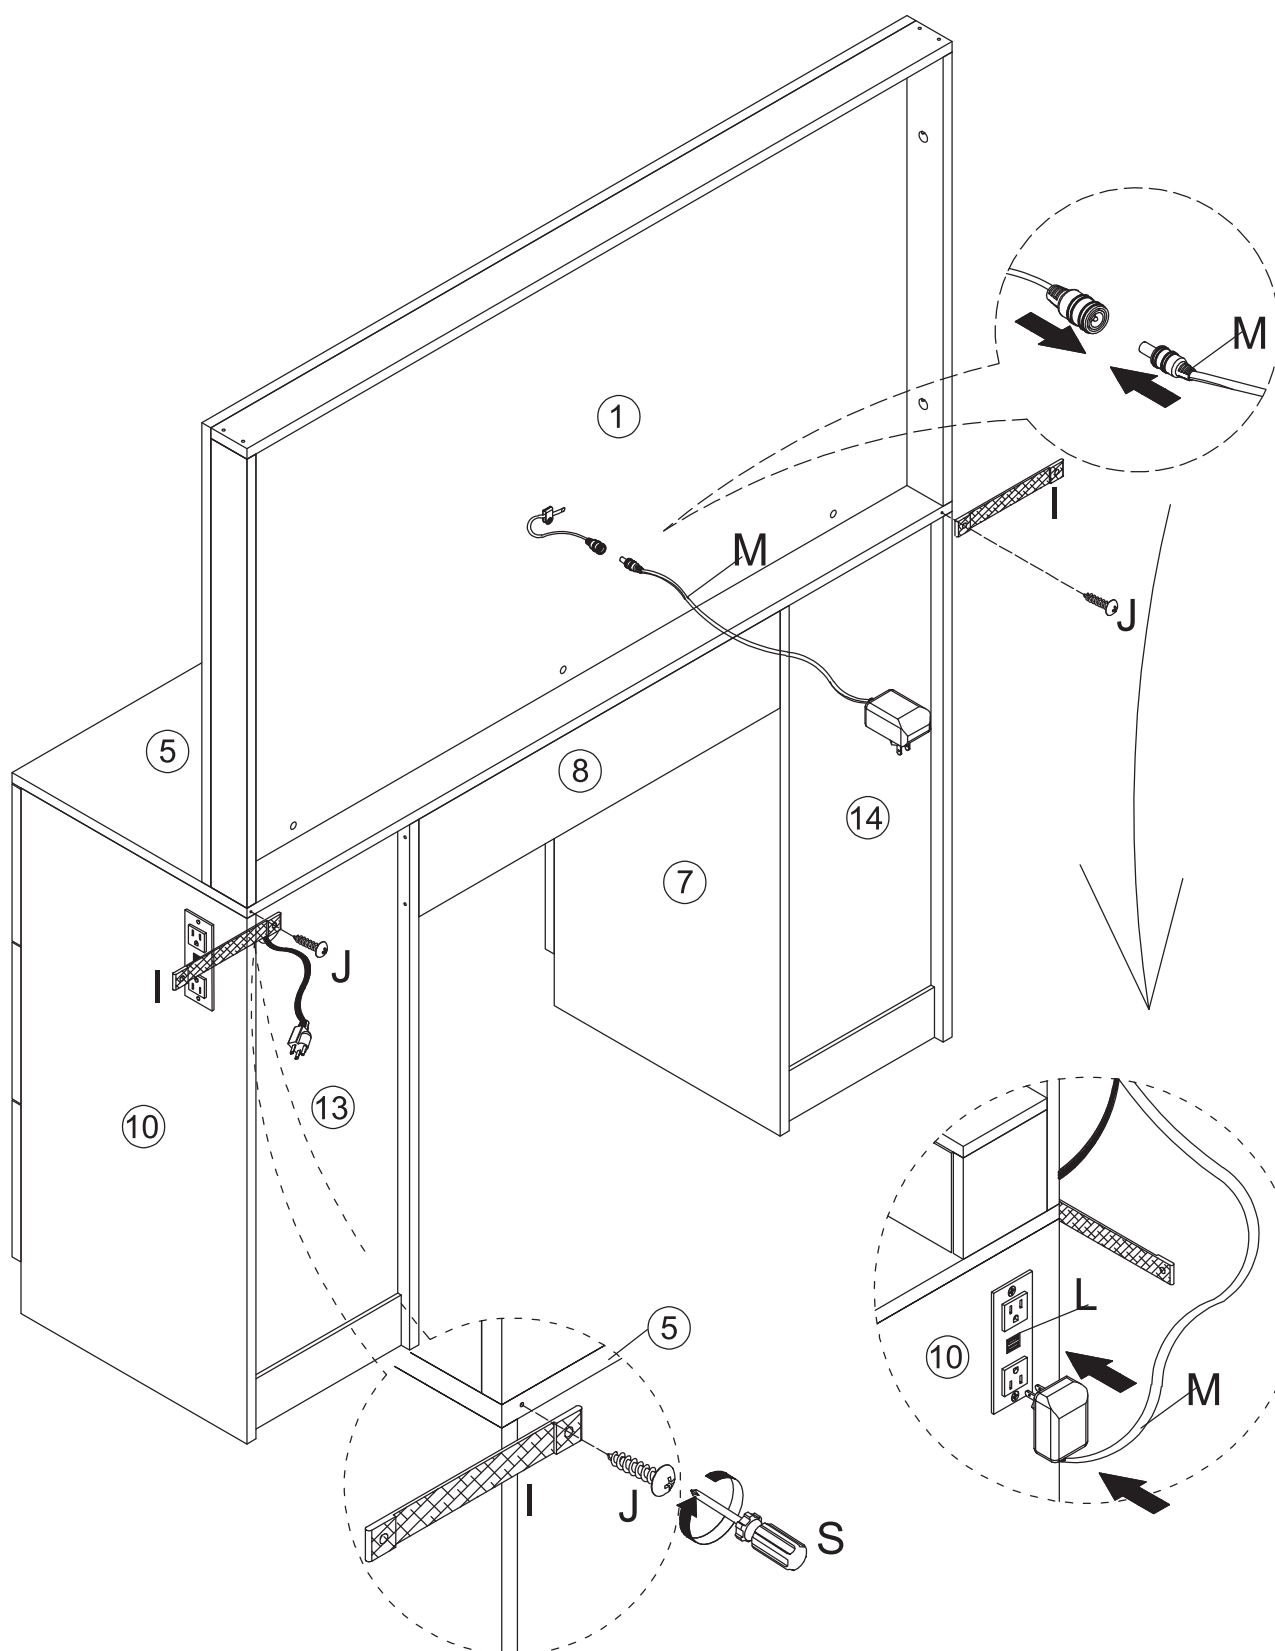


N	x2	D	x2
			

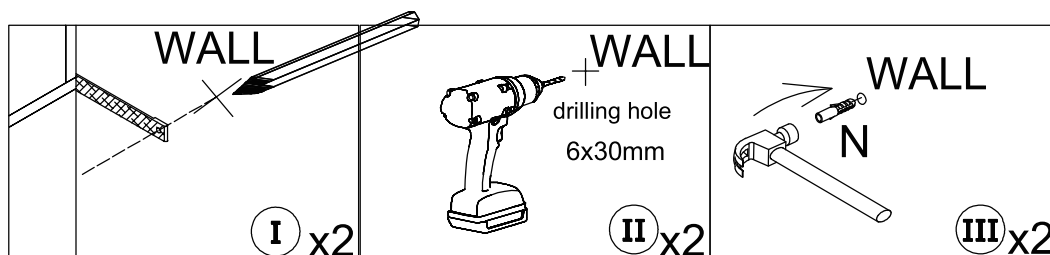



Lamp touch switch

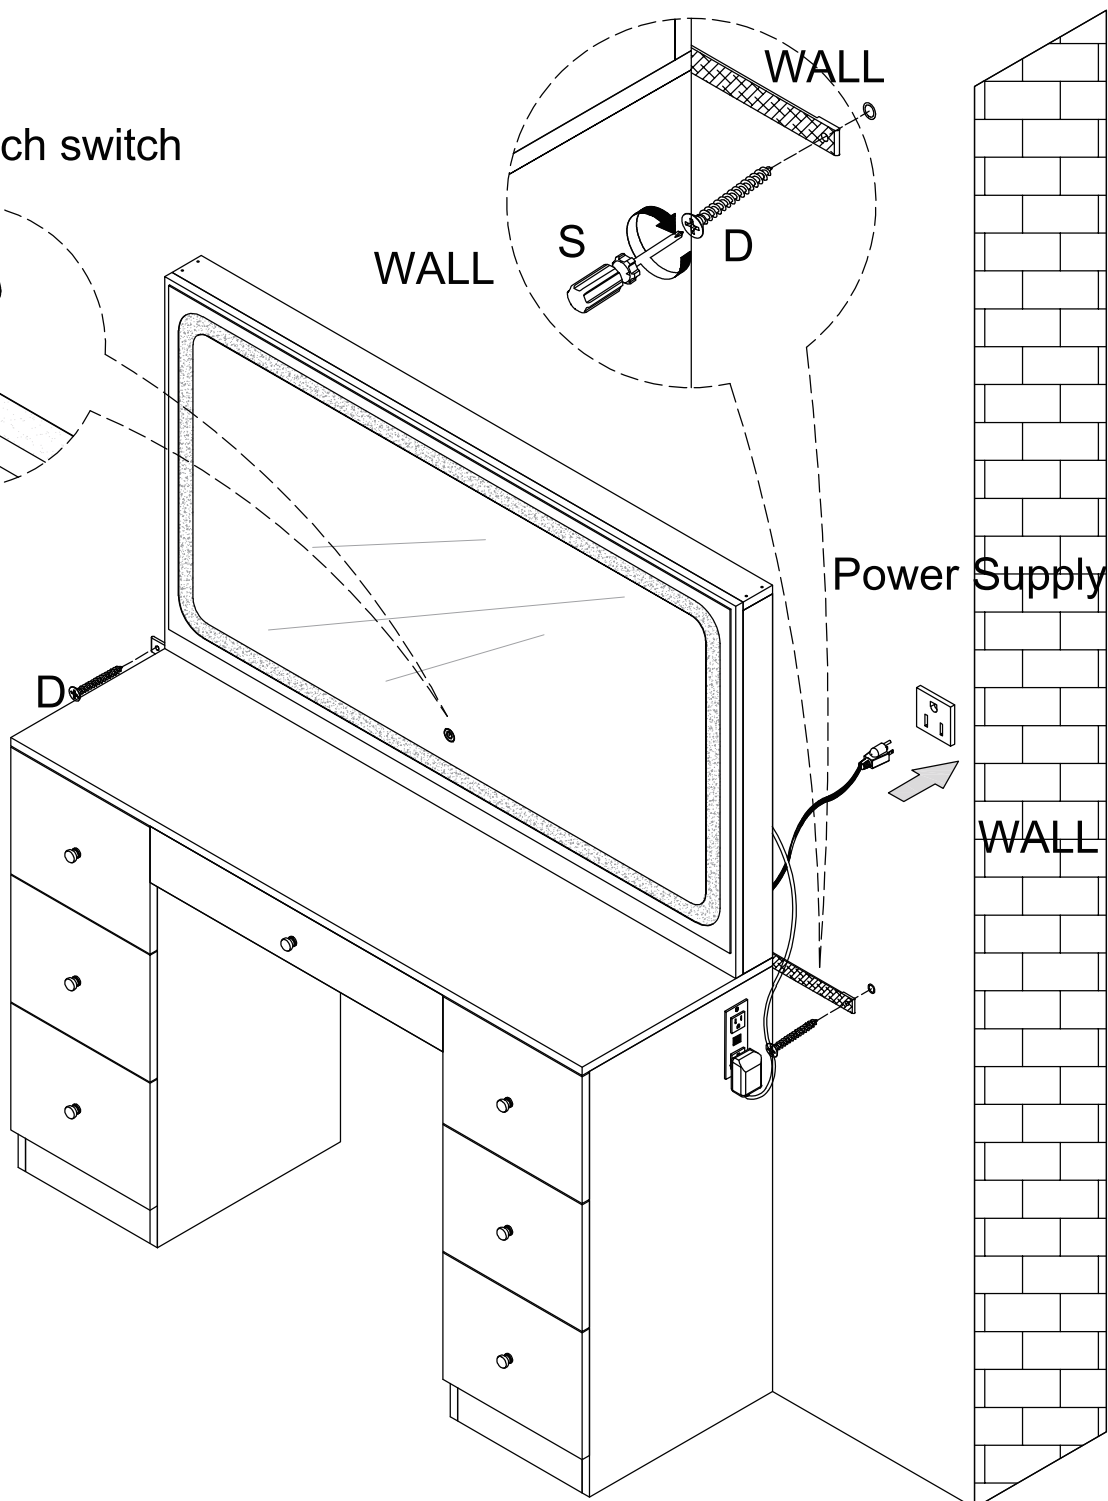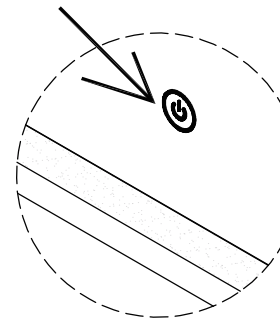

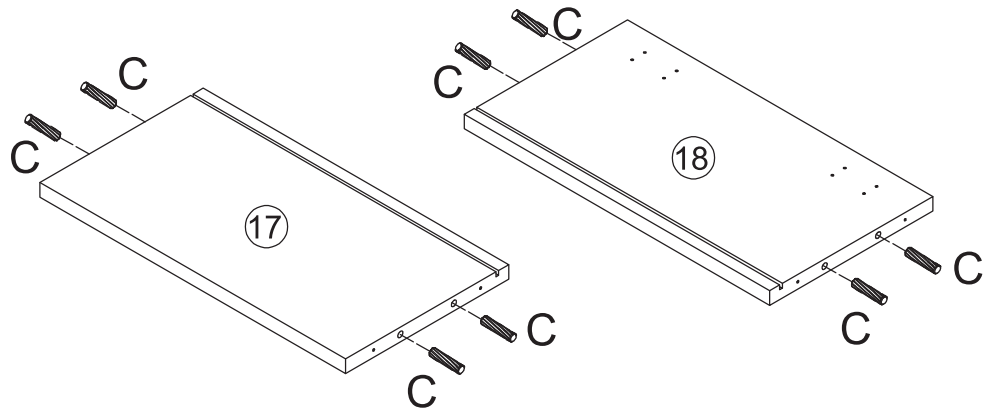

D	x4	U	x6
			

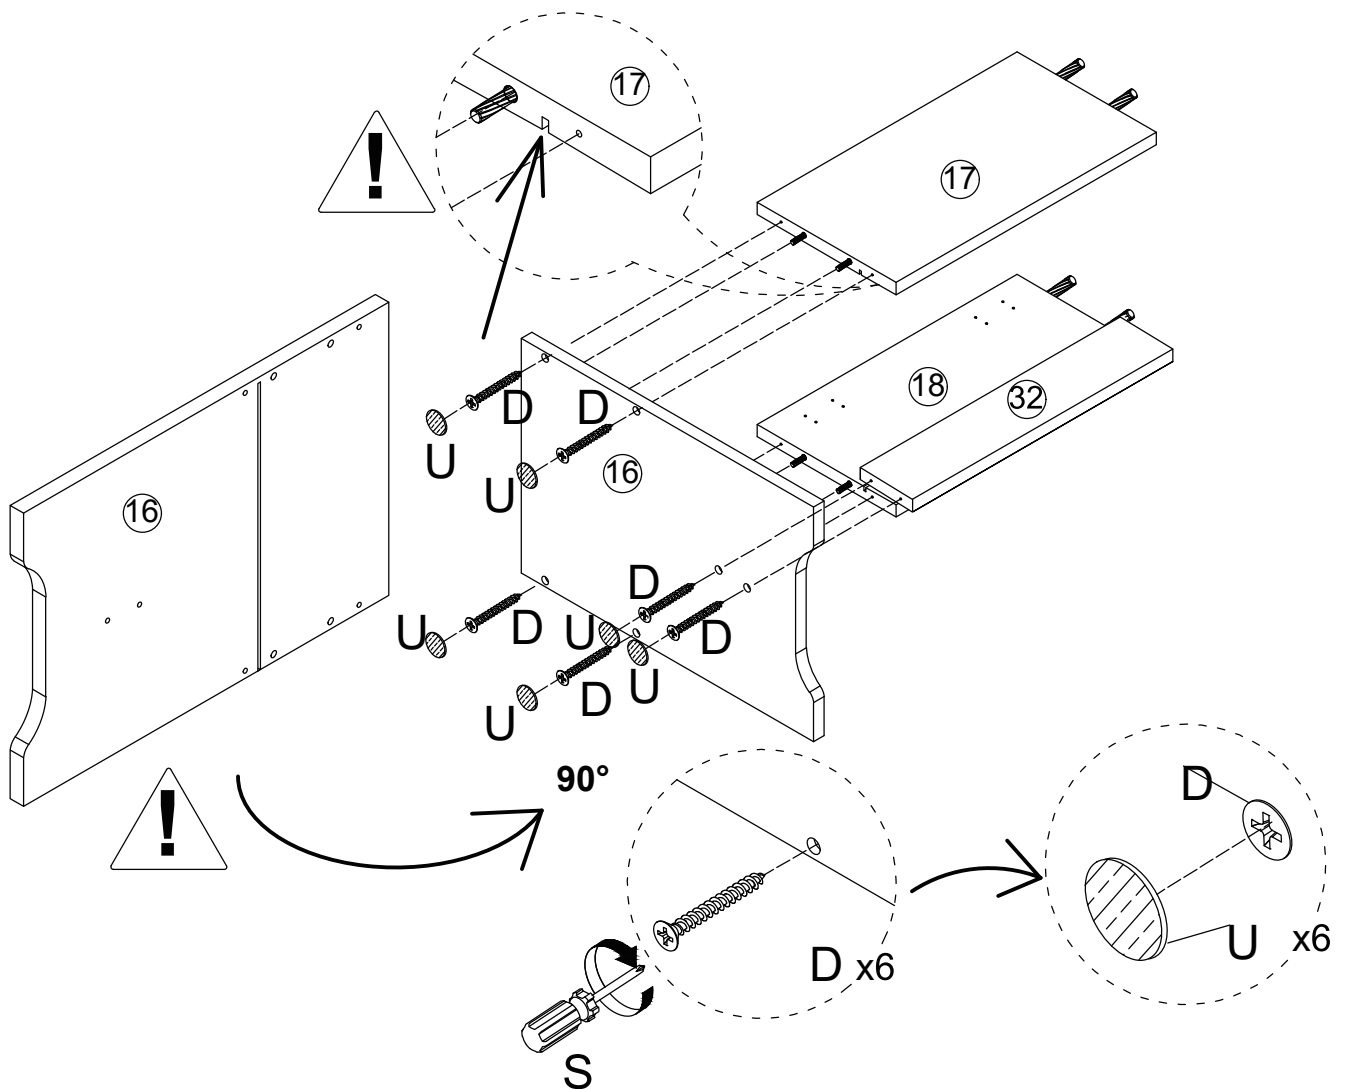

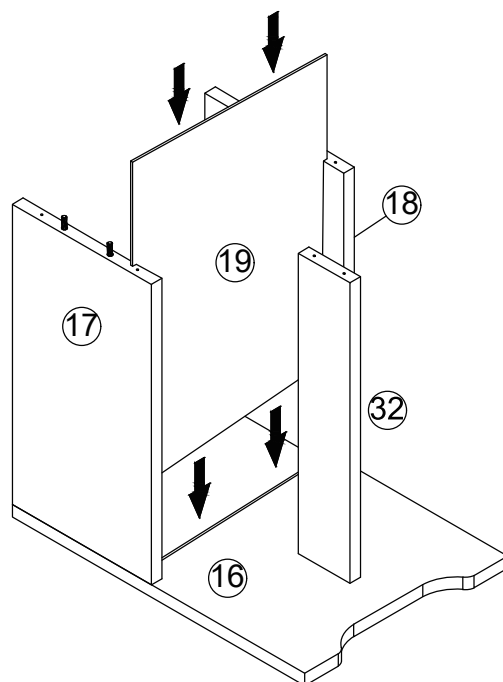

D	x4
	
U	x6
	

