


ASSEMBLY INSTRUCTIONS

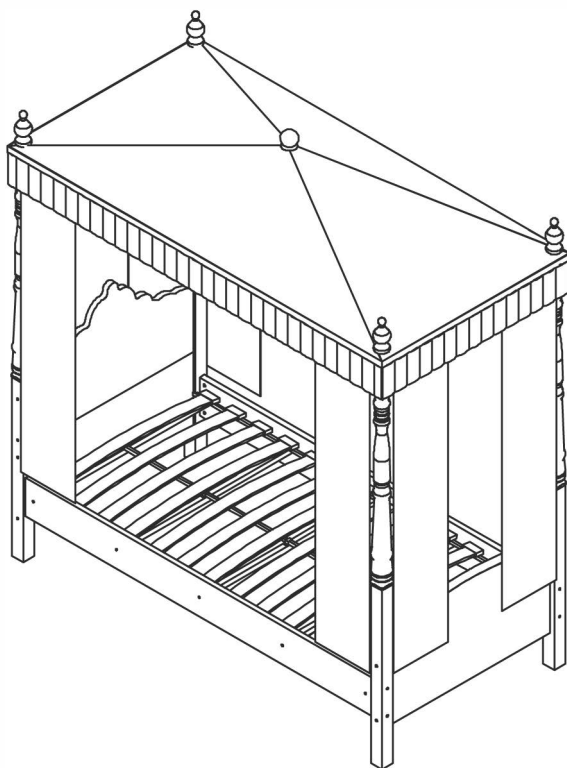

TOOLS REQUIRED



**Allen Wrench
(Included)**



**Phillips Screwdriver
(Not Included)**



Hammer (Not Included)



**2 - Persons
Recommended**

ASSEMBLY RATING



EASY —————> **DIFFICULT**

The Assembly Rating is a 5-point system showing the level of effort needed to assemble a specific product.



CHECK BEFORE STARTING



Are you missing anything?

Double-check all parts, hardware and accessories listed on Page 6 are accounted for.



Check out our Quick Tips!

We recommend reviewing the pre-assembly handouts. Even experts need a refresher now and then!



Should we send any replacements?

Are there any irregularities or flaws in the parts? We can send replacements!




Prep Time!

Please review the assembly instructions and all diagrams prior to assembling. Arrange parts as recommended on Page 7 and group identical hardware together to make assembling easier.


PRE ASSEMBLY INTRODUCTION

We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.

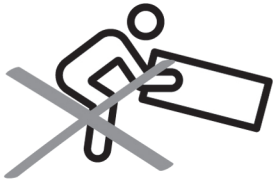

Teamwork

ALWAYS have at least two people to help with transporting and assembling the product to avoid potential injury and/or damage.

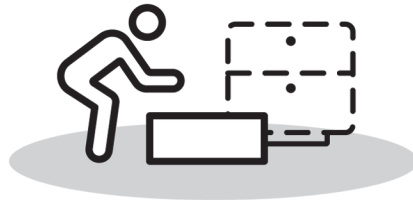

Suitable Location

Assembling near the area of the intended location is highly recommended.




Sufficient Space

Make sure you have enough space to move around during the assembly.



Avoid Scratches

Use cardboard, blankets or a carpeted area while assembling furniture to prevent scratches.

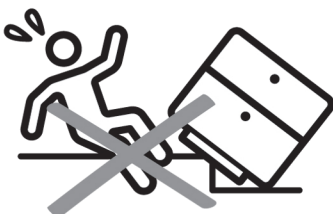

Flat Surface

Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.


ASSEMBLY AND CARE ADVICE



**FAILURE TO FOLLOW THE GUIDELINES BELOW MAY
RESULT IN INJURY AND/OR PROPERTY DAMAGE.**



Position each part correctly
and insert screws or bolts into
their respective holes.

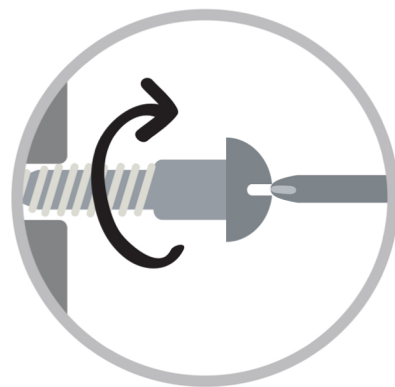


Turn clockwise to tighten and
only tighten when step is
completed or when instructed
to do so.



Save the instructions and store
any supplied tools for later
maintenance.

Use the appropriate hand tools
or power tools for assembly.
Select steps, such as tightening
screws and/or bolts, may require
hand tools to avoid causing
damage during assembly.

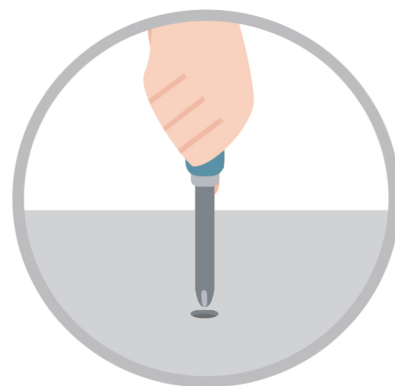


After two weeks, check and
tighten any loose hardware and
repeat again every six months
thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

BED




- Please keep instructions for future reference.
- Check the quantity and irregularity of parts and hardware before you start.

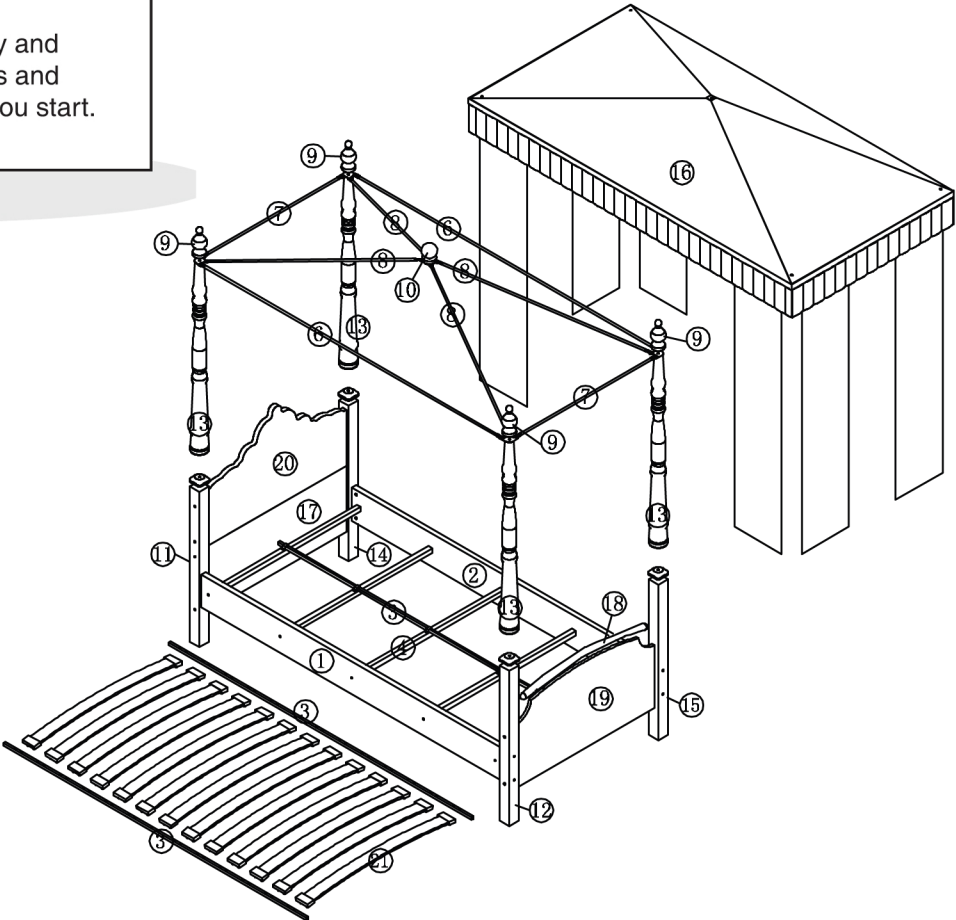

HARDWARE

SCALE 1:1

B	C	D	E	F	G	I	S
ø8*30 QTY:8	M8*50 QTY:4	M6*100 QTY:20	QTY:20		M6*12 QTY:16	M6*50 QTY:10	QTY:10
J	K	L	M	N	Q	R	T
M8*35 QTY:1	M8*130 QTY:4	QTY:4	QTY:1	QTY:16	QTY:5	QTY:26	QTY:4

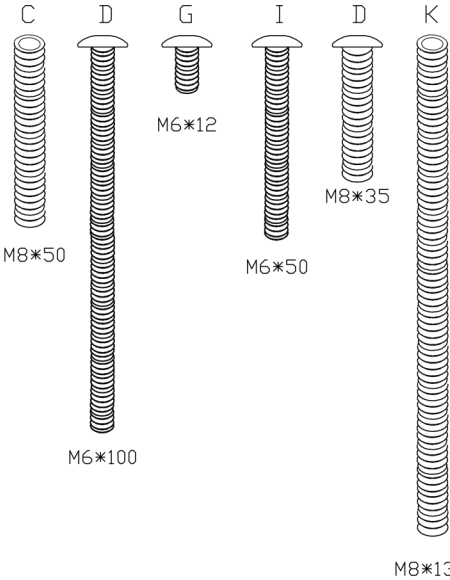




- Please keep instructions for future reference.
- Check the quantity and irregularity of parts and hardware before you start.

PARTS

DESCRIPTION OF COMPONENT						
ITEM NO	WORK PIECE DESCRIPTION	MEASUREMENT	QTY	COLOUR	SHAPE	PACK IN BOX
(1)	SIDE PANEL(L)	1885*180*25	1	PINK		1/4
(2)	SIDE PANEL(R)	1885*180*25	1	PINK		1/4
(3)	U SHAPED IRON	1875*15*15	3	SILVER		1/4
(4)	SUPPORT POLE	1000*25*25	5	WHITE		1/4
(5)	HARDWARE	406*19*114	1	-		1/4
(6)	STAINLESS STEEL PIPE-1	1900* ϕ 12	2	SILVER		1/4
(7)	STAINLESS STEEL PIPE-2	980* ϕ 12	2	SILVER		1/4
(8)	STAINLESS STEEL PIPE-3	1080* ϕ 12	4	SILVER		1/4
(9)	STYLE TERMINAL	110*50*50	4	PINK		1/4
(10)	HANG POLE	55*55*65	1	PINK		1/4
(11)	HIGH SUPPORT POLE(L)	845*60*60	1	PINK		2/4
(12)	SHORT SUPPORT POLE(L)	845*60*60	1	PINK		2/4
(13)	SCULPTURE POLE	855*70*70	4	PINK		2/4
(14)	HIGH SUPPORT POLE(R)	845*60*60	1	PINK		2/4
(15)	SHORT SUPPORT POLE(R)	845*60*60	1	PINK		2/4
(16)	PINK CURTAIN	2020*1325*1355	1	PINK		2/4
(17)	BACK LOWER PANEL	955*360*15	1	PINK		3/4
(18)	SIDE RAIL	780* ϕ 32	1	PINK		3/4
(19)	FRONT PANEL	955*470*15	1	PINK		3/4
(20)	BACK UPPER PANEL	955*540*15	1	PINK		3/4
(21)	PLYWOOD SLAT	995*62*12	13	WHITE		4/4


ASSEMBLY INSTRUCTIONS

1

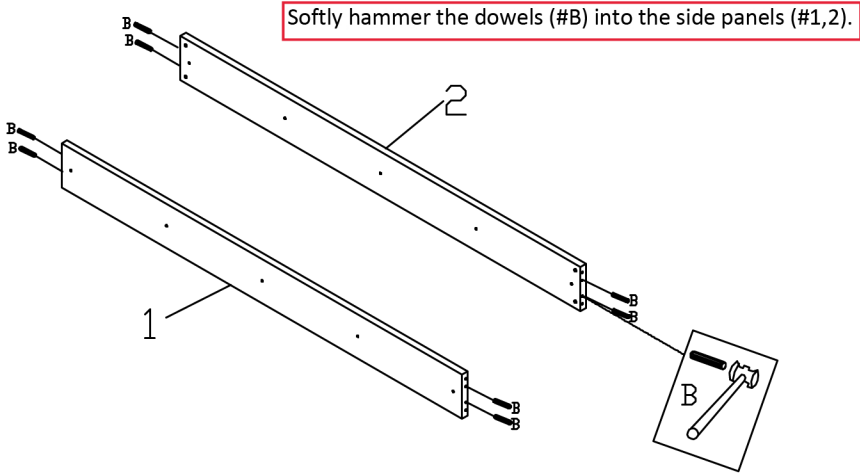

B  d8*30
QTY:8

3

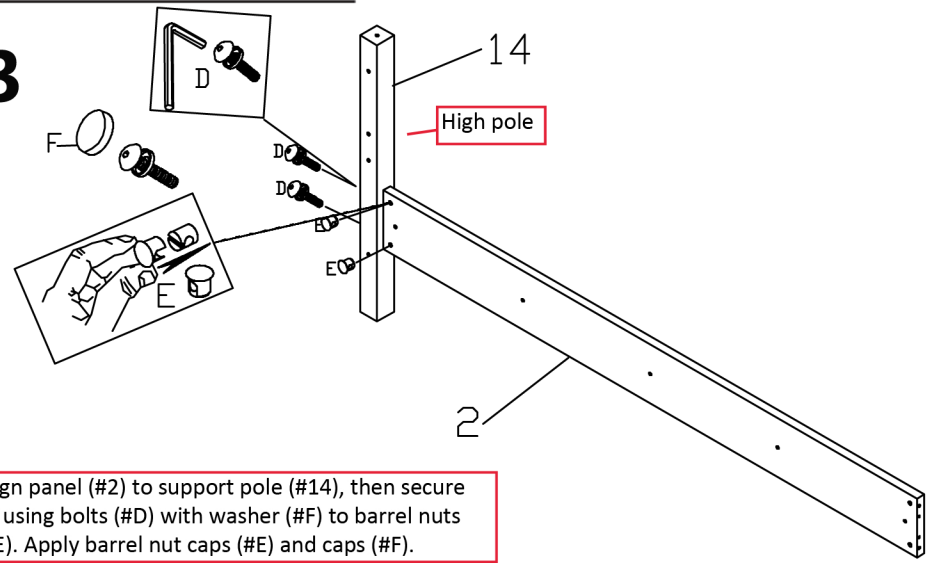


D  M6*100
QTY:2

E   QTY:2

F   QTY:2

2

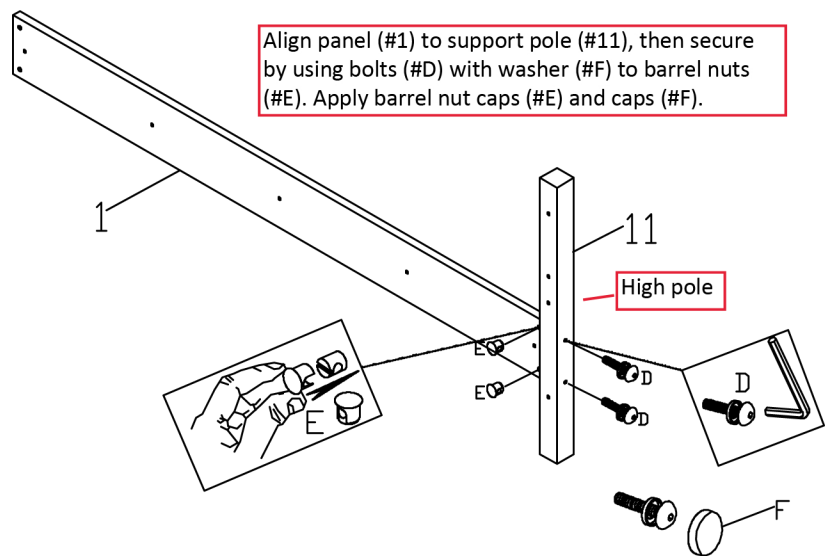


D  M6*100
QTY:2

E   QTY:2

F   QTY:2

4

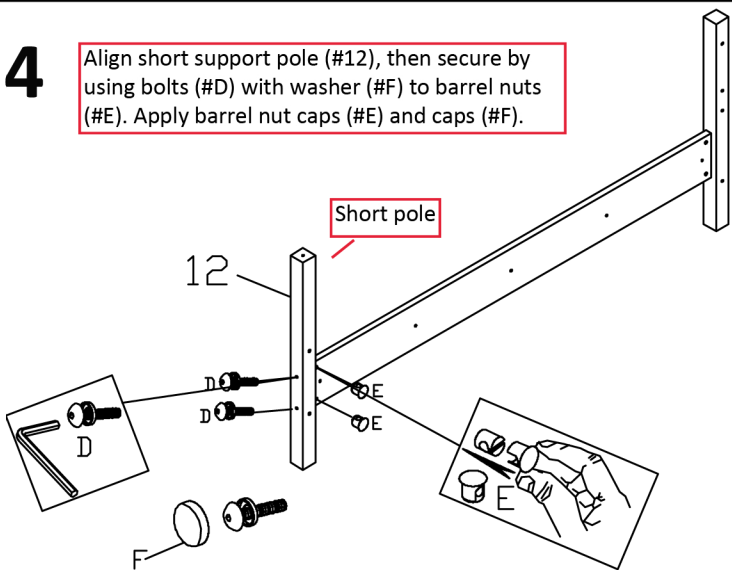

D  M6*100
QTY:2


E   QTY:2

F   QTY:2

ASSEMBLY INSTRUCTIONS

5


Align short support pole (#15), then secure by using bolts (#D) with washer (#F) to barrel nuts (#E). Apply barrel nut caps (#E) and caps (#F).

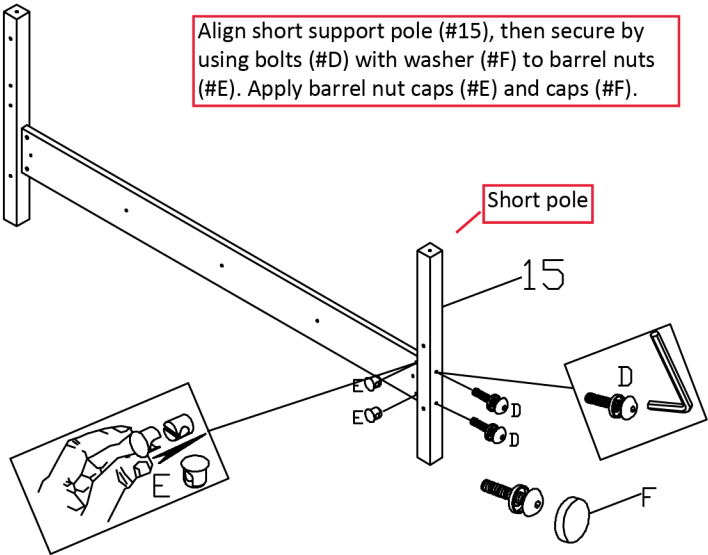

D		M6*100 QTY:2	E		QTY:2	F		QTY:2
---	--	-----------------	---	--	-------	---	--	-------

7


Align the upper back panel (#20) to the tall poles (#11,14), then secure by using bolts (#D) with washer (#F) to barrel nuts (#E). Apply barrel nut caps (#E) and caps (#F).

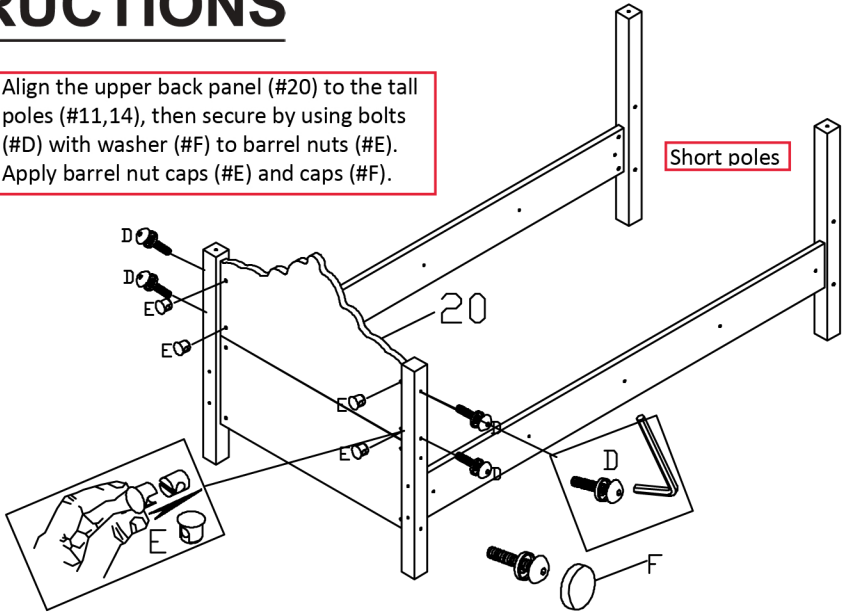

D		M6*100 QTY:4	E		QTY:4	F		QTY:4
---	--	-----------------	---	--	-------	---	--	-------

6


Align the lower back panel (#17) to the tall poles (#11,14), then secure by using bolts (#D) with washer (#F) to barrel nuts (#E). Apply barrel nut caps (#E) and caps (#F).

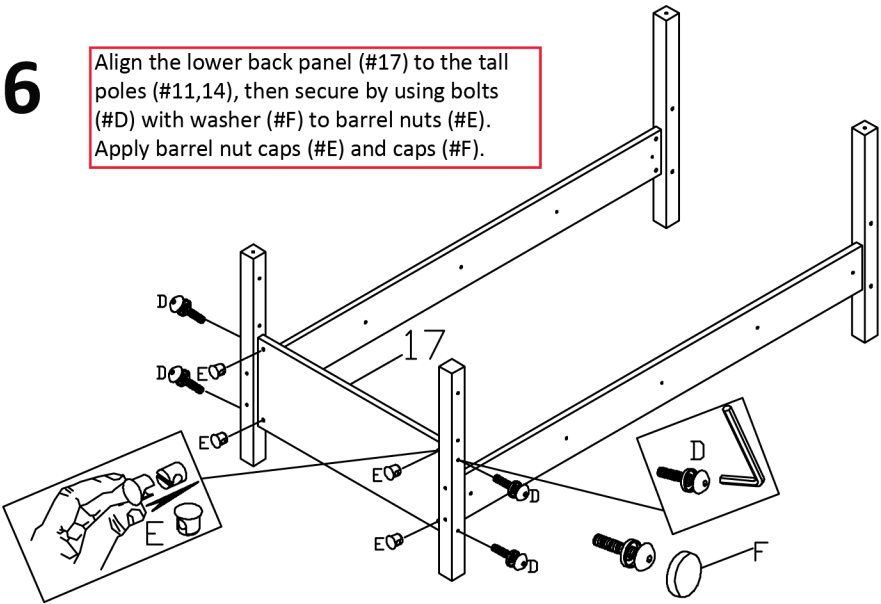

D		M6*100 QTY:4	E		QTY:4	F		QTY:4
---	--	-----------------	---	--	-------	---	--	-------

8


Align the front panel (#19) to the short poles (#12,15), then secure by using bolts (#D) with washer (#F) to barrel nuts (#E). Apply barrel nut caps (#E) and caps (#F).

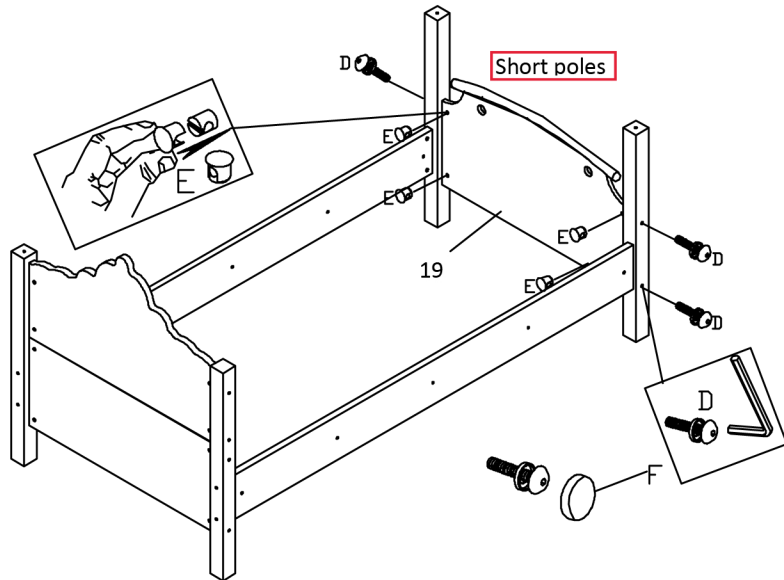

D		M6*100 QTY:4	E		QTY:4	F		QTY:4
---	--	-----------------	---	--	-------	---	--	-------

ASSEMBLY INSTRUCTIONS

9

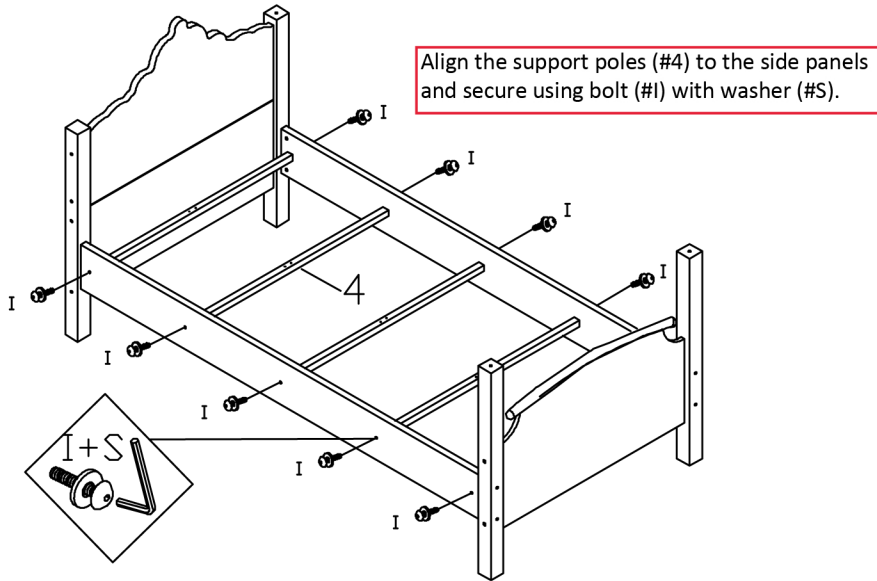

I




M6*50
QTY:10

S



QTY:10

11

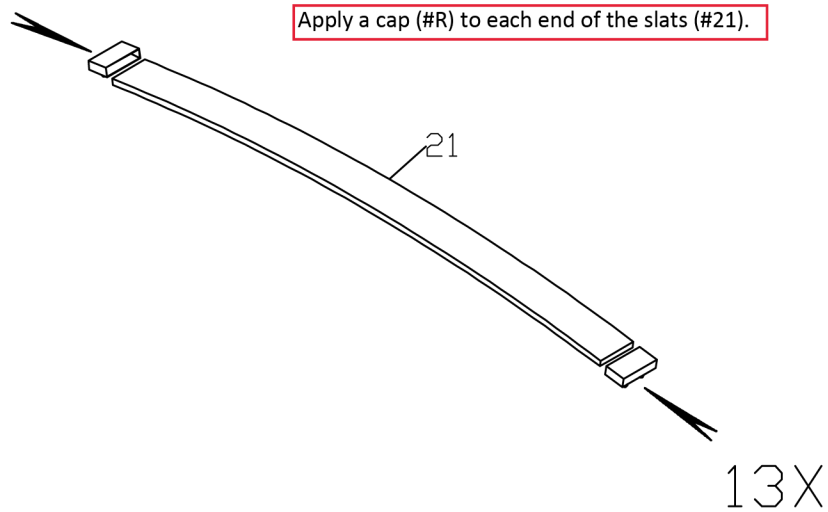


R



QTY:26

10

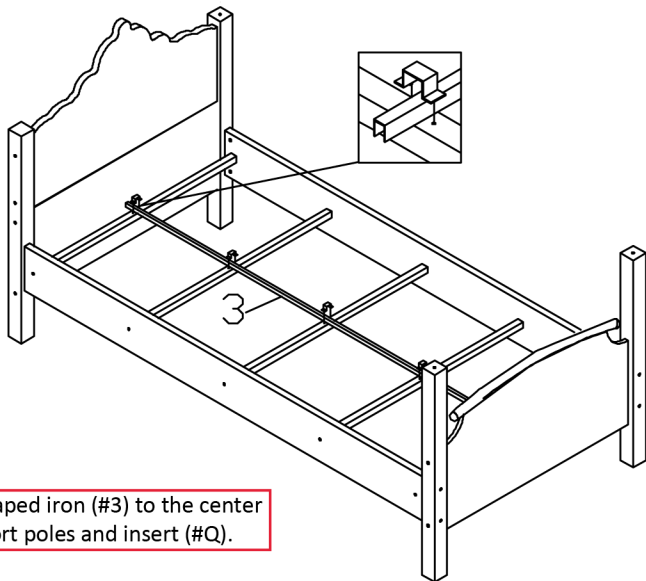


Align a U shaped iron (#3) to the center of the support poles and insert (#Q).

Q



QTY:5

12

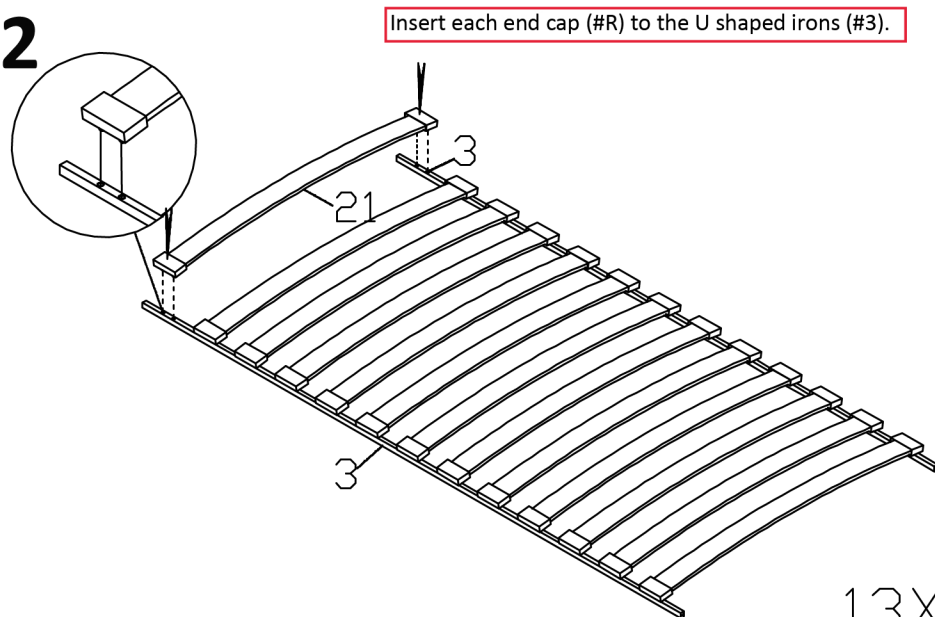


13X

ASSEMBLY INSTRUCTIONS


13

Place the slats onto the support poles.

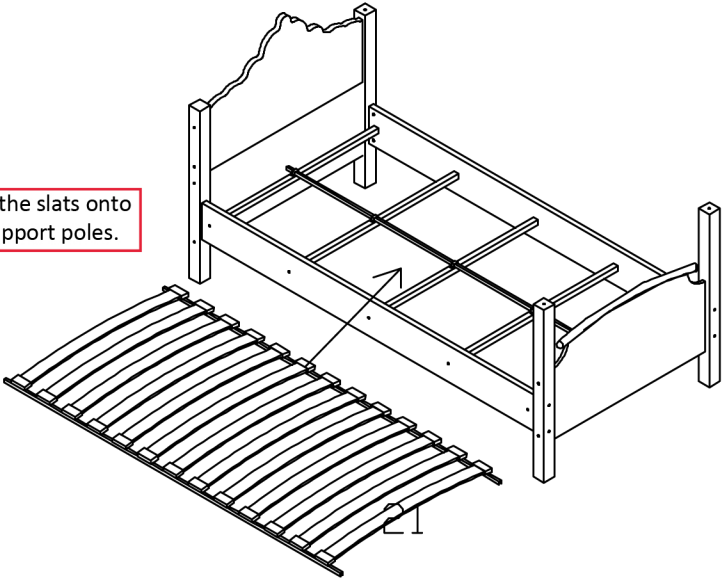


15

Secure a long threaded bolt (#K) into the sculpture poles (#13).

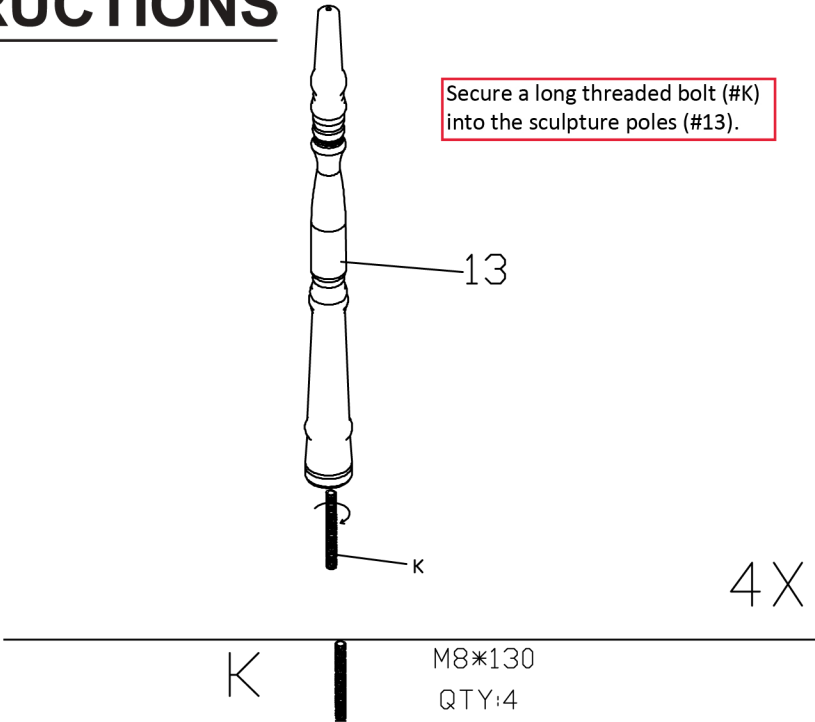


14

Place (#T) along the top of the tall and short poles.

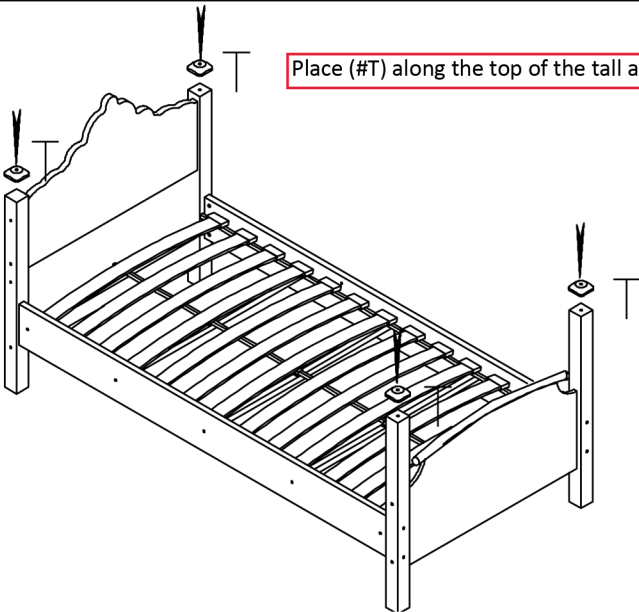


16

Secure the other ends of the long threaded bolts (#K) into (#T) and the support poles.

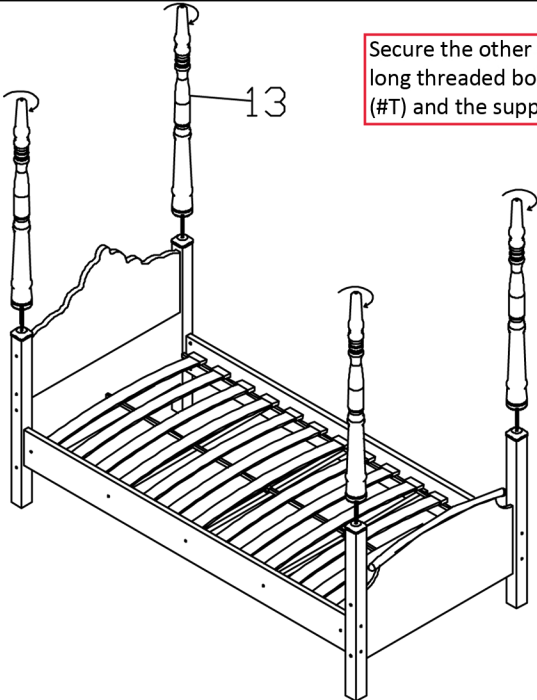


ASSEMBLY INSTRUCTIONS

17

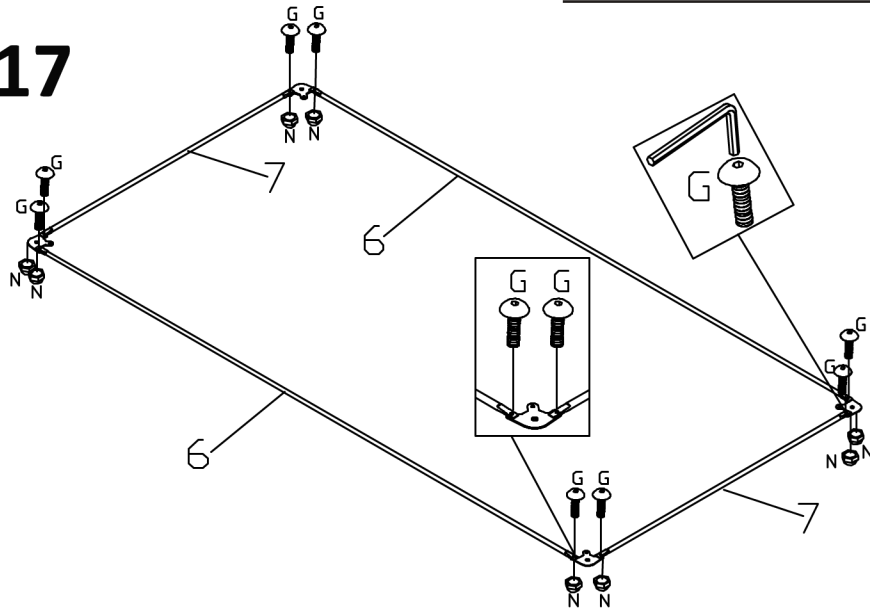


G		M6*12 QTY:8	L		QTY:4	N		QTY:8
---	--	----------------	---	--	-------	---	--	-------

19

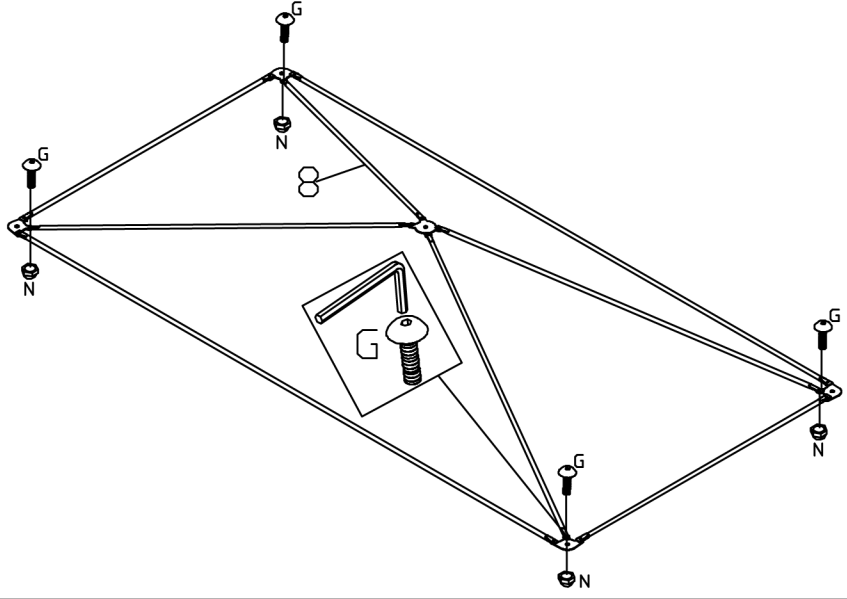


G		M6*12 QTY:4	N		QTY:4
---	--	----------------	---	--	-------

18

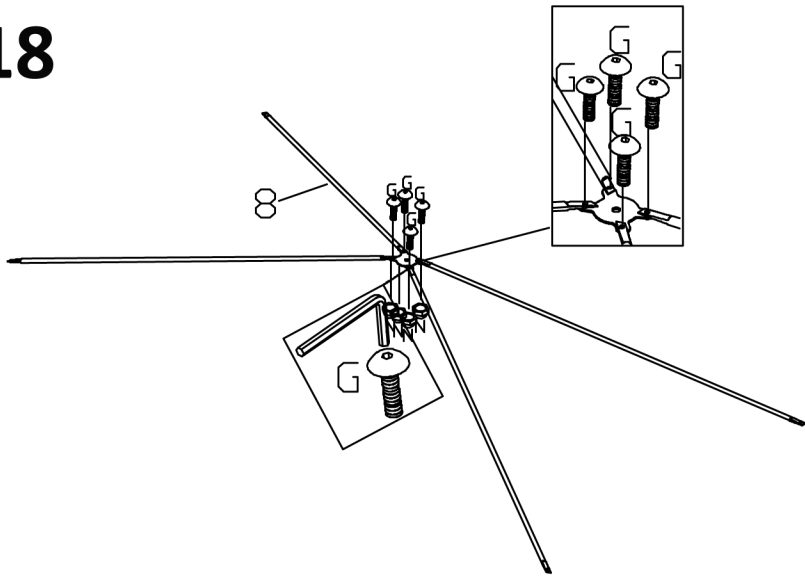

G		M6*12 QTY:4	M		QTY:1	N		QTY:4
---	--	----------------	---	--	-------	---	--	-------

20

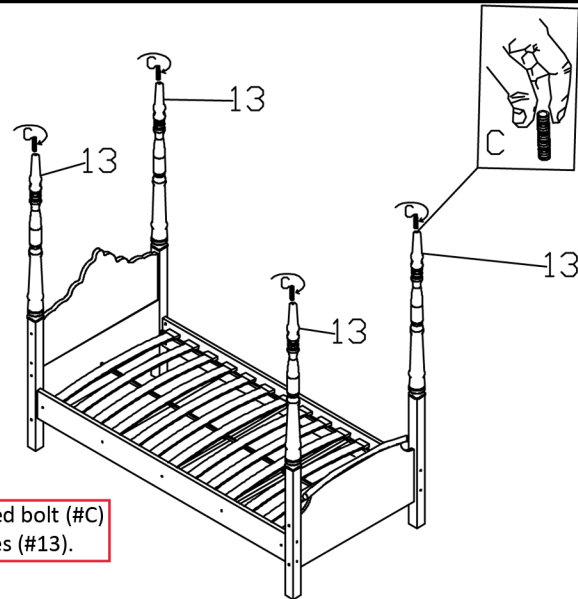


Secure a short threaded bolt (#C) into the sculpture poles (#13).

C		M8*50 QTY:4
---	--	----------------


ASSEMBLY INSTRUCTIONS

21

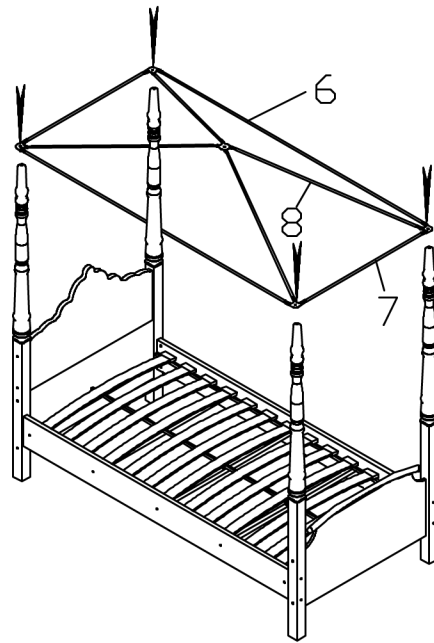


Place the pipe fram onto the top of poles (#13).

23

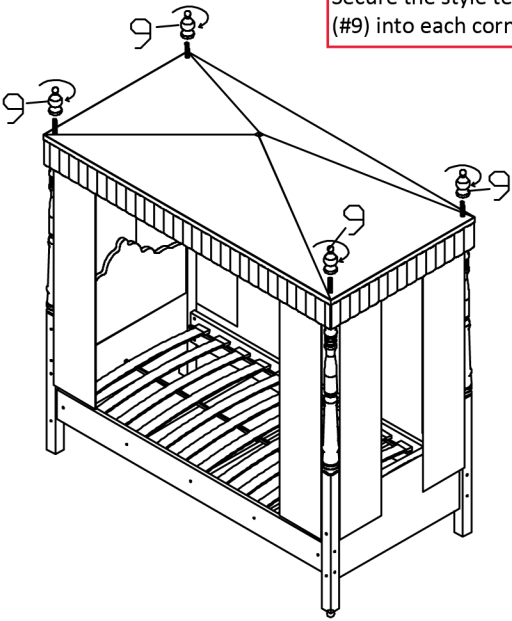


Secure the style terminals (#9) into each corner.

22

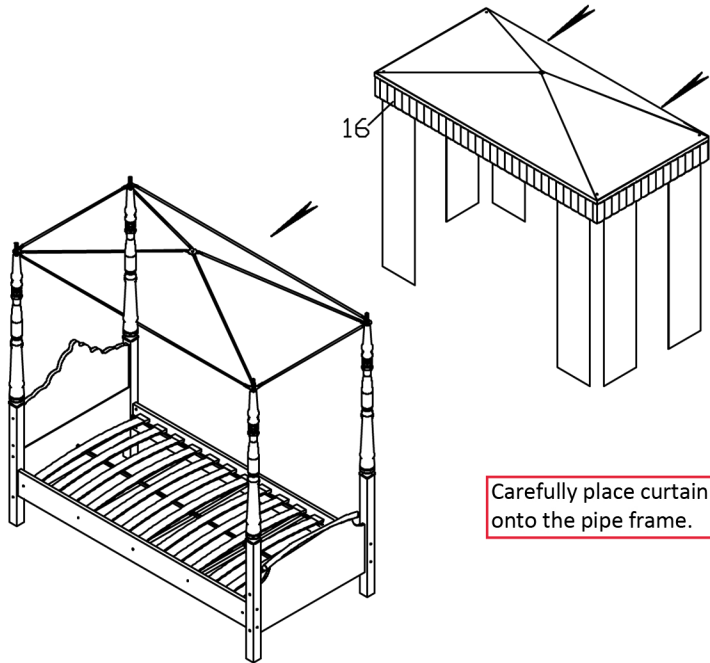


Carefully place curtain onto the pipe frame.

24

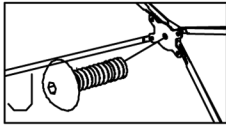


Secure bolt (#11) into the inner center of the pipe frame.

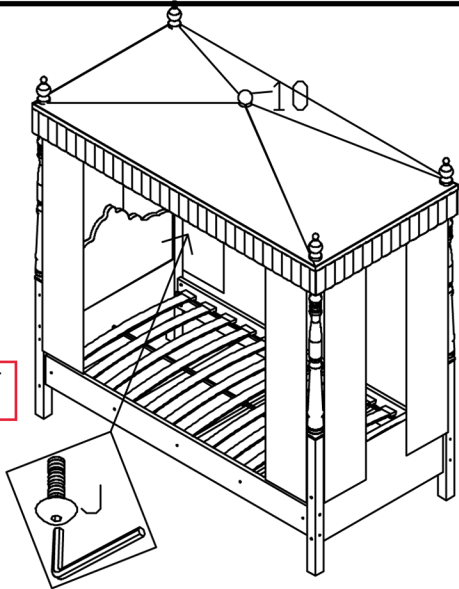

M8*35

QTY:1

25

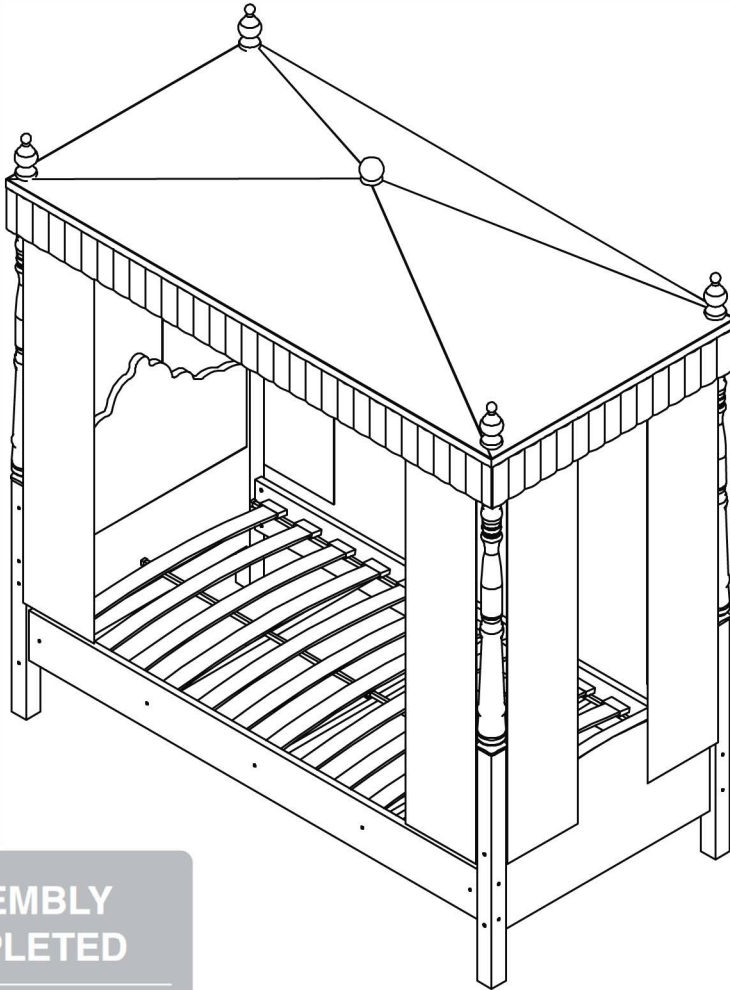

ASSEMBLY COMPLETED



Please ensure the furniture rests on an even and flat surface. If the product wobbles or feels loose, double-check all bolts and/or screws are properly tightened and secured.



Keep this handy!

Please retain this instruction manual and any order-related information for future reference.

IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY

- Information regarding maintenance
Use dry, clean & soft cloth rub on the surface regularly; must not use any wet cloth, hardware or any hard material (such as keys, knife, sand-paper) rub on the surface. Keep away from water and any chemical substances.
- Conditions for use of the product domestic
- Installation only to be carried out by a competent person
- Article consists swallowable small parts, children ≤ 3 years should not be without parental guidance (surveillance or monitoring)
- Screw lock must be inserted before joining
- For the safety reason all of the hardware must be screwed tidely.
- This Product must be assembled by adult
- To avoid surface damage, tight all serew must not use over 5Nm power.